


Contents

Chapter	Page
1 General	
Installation survey, general view	1.1/1
2 Removal and installation, replacement of heating unit	2.1/1
3 Removal and installation, replacement of heat exchanger	3.1/1
4 Checking heat exchanger for leaks	4.1/1
5 Replacing blower motor	5.1/1

Installation Survey

Chassis Model		Sales designation	Driver's cab Cab Model	Manufacturer	Installation
435.110		U 1700	425.8	SOFICA France	Series
.111		U 1700 L			
.113		U 1700 L/38			
.115		U 1300 L			
.117		U 1300 L/37			


Overall View

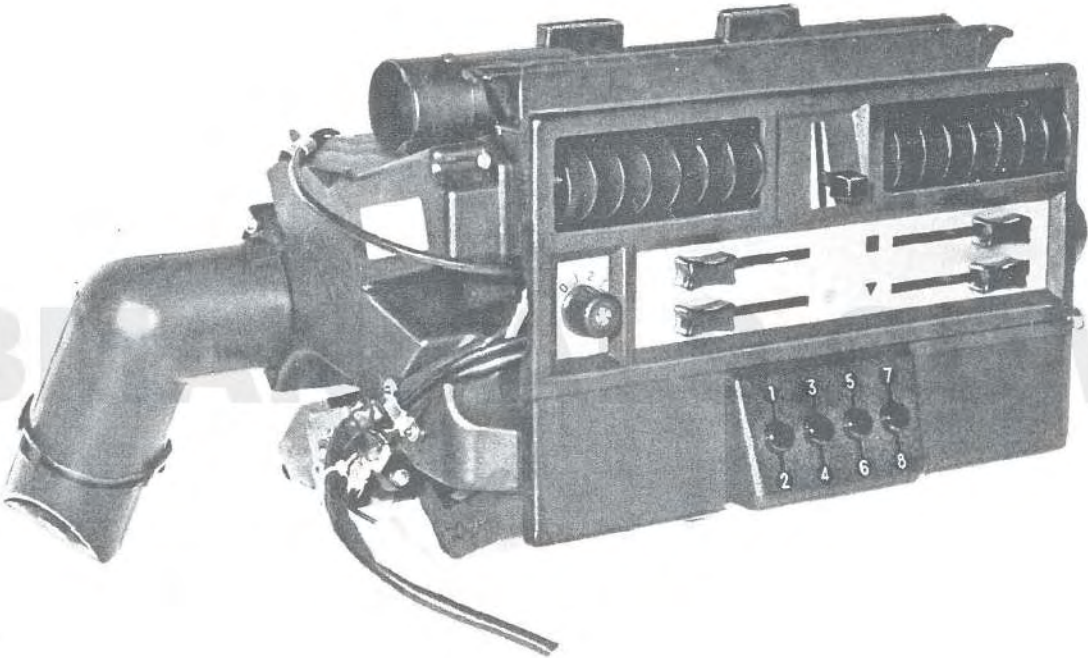


UR83-0281

Removal and installation, replacement of heating unit


- 1 Remove cover plate from fuse box.

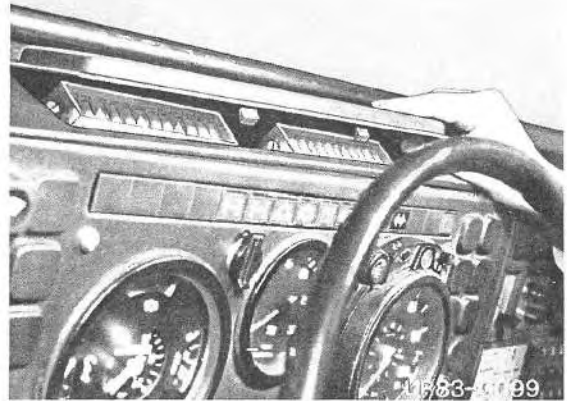


- 2 Loosen instrument panel and tilt toward steering wheel.

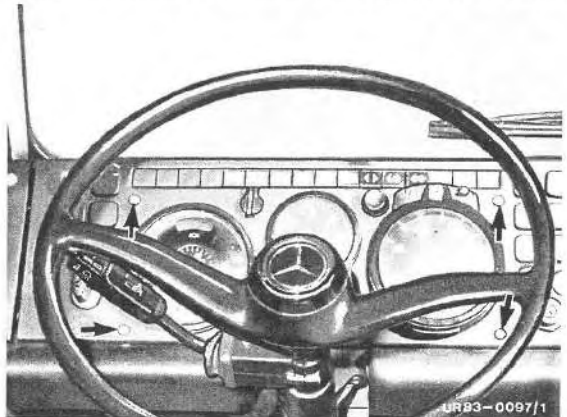

- 3 Loosen and remove upper cover plate between windscreen and instrument panel.

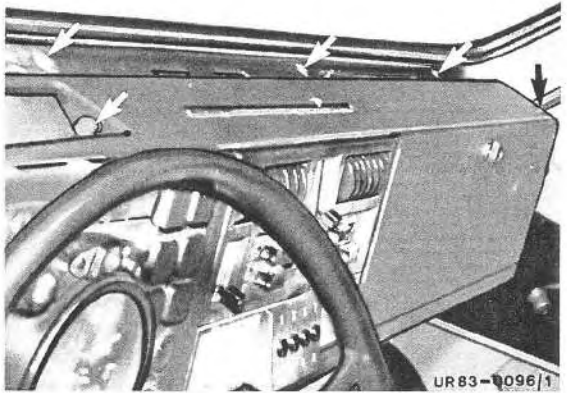


- 4 Loosen fastening bolts of glove box and fold glove box down.

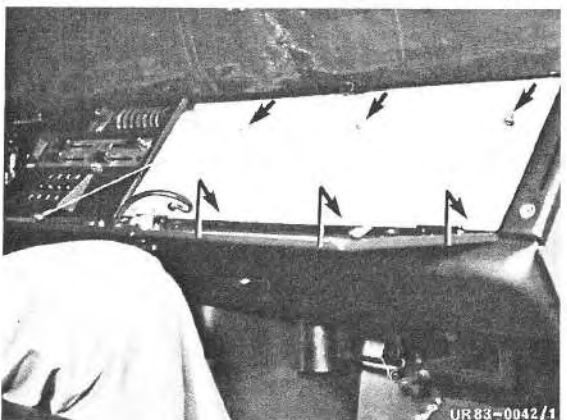



- 5 Remove upper heating connection hoses on right and left.

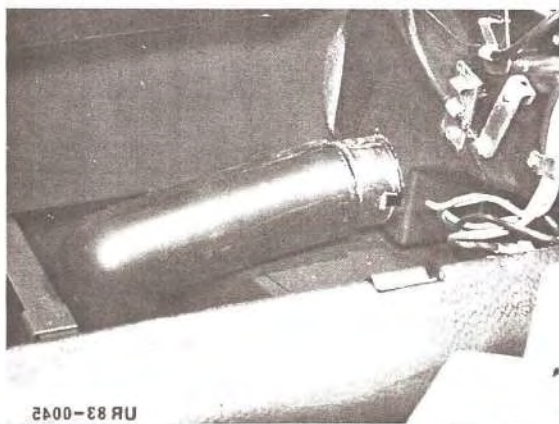

- 6 Remove heating tube for leg room heating on right.


Note: Exchange heating tube on left with heat exchanger complete.

Important ! When removing plastic parts, ensure that guide and fastening lugs are not damaged.



- 7 Remove cover plate of engine compartment.

- 8 Disconnect heating hoses for supply and return. Mark installation position.

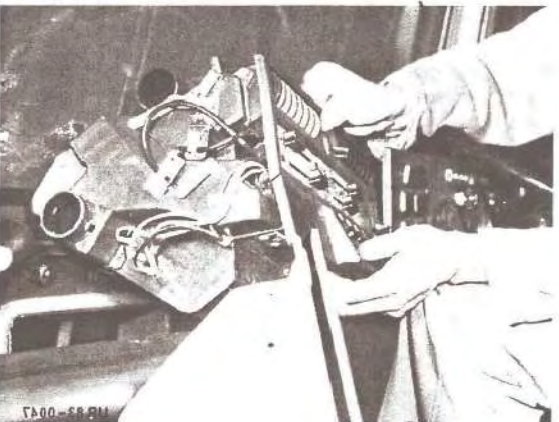

- 9 Remove heating unit tilted towards front right.


Note: Pay attention to heating tube of leg room heating left.

- 10 Disconnect both cable connectors.


- 11 Installation takes in the reverse sequence.

Removal and installation, replacement of heat exchanger


- 1 Remove heating unit, see 2.1/1
- 2 Remove heating tube leg room heating left.
- 3 Remove Bowden cable for hot/cold control at valve lever and disconnect.

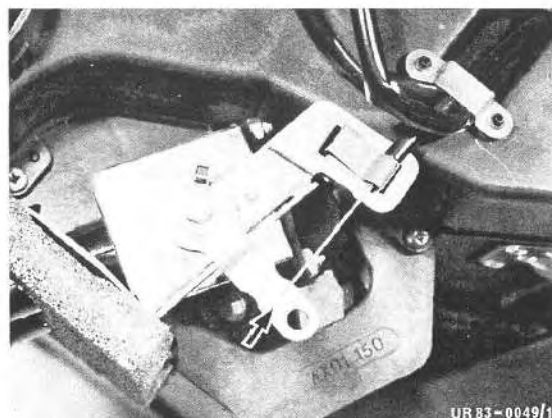


- 4 Disconnect Bowden cable from bracket.

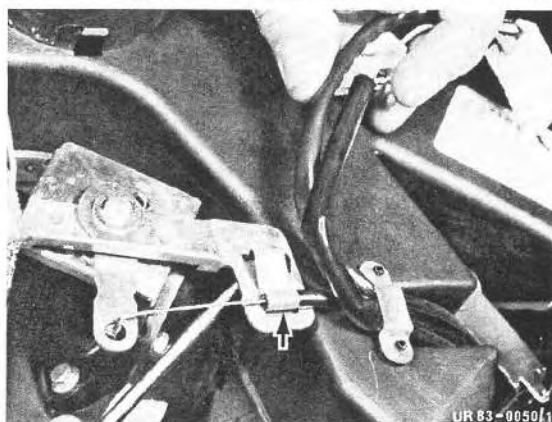


- 5 Remove cable bracket.

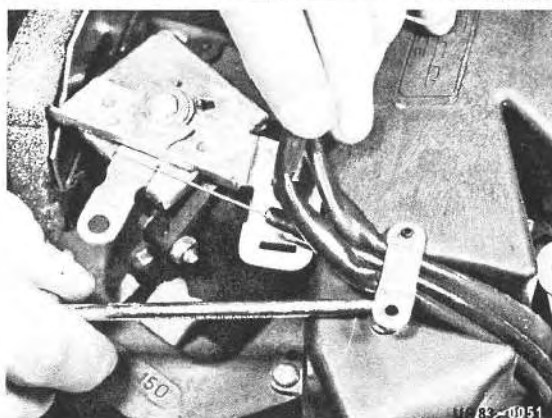


- 6 Unscrew fastening bolt for bracket of air control.

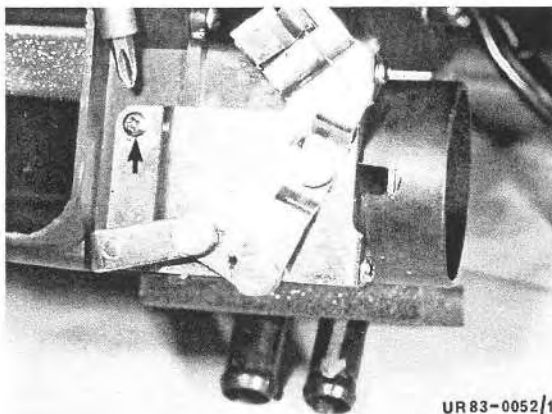


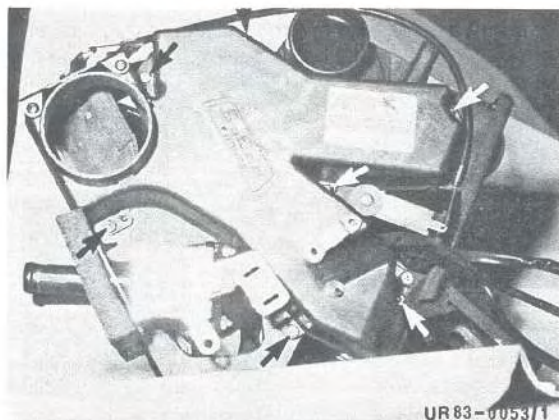


7 Slacken bolts, open leg room vent flap and remove side part on left.

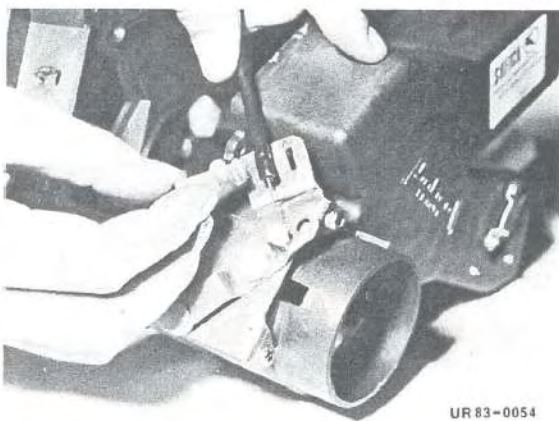

8 Disconnect Bowden cable for air control at side part and remove.

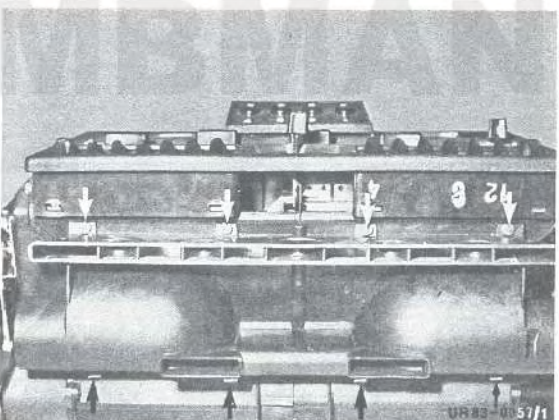


9 Lift off air distribution box. To do so, slacken bolts and lift box out of retaining lugs at the top of the front.

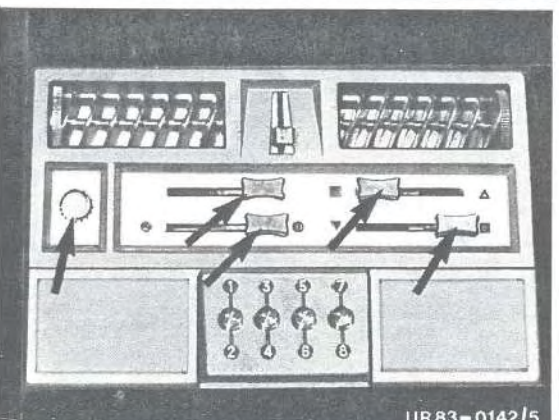


10 Take off control knobs on front panel of heater unit.

- 11 Slacken one fastening each on bottom left and right of front panel.

Note: Pay attention to ventilation worm!

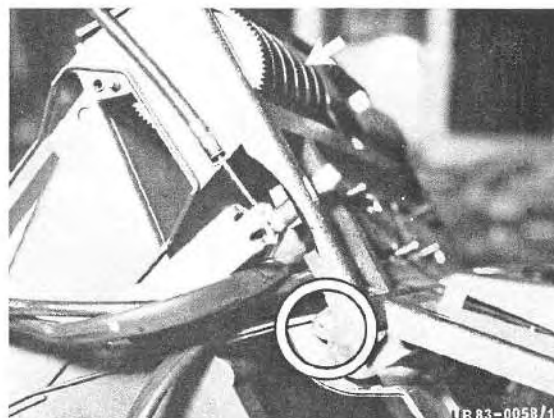


- 12 Disconnect front panel from plastic lock.

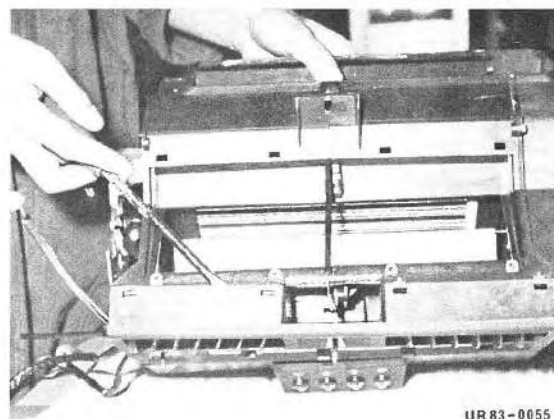


- 13 Separate halves of main housing.

- 14 Remove lefthand half of housing with heat exchanger.

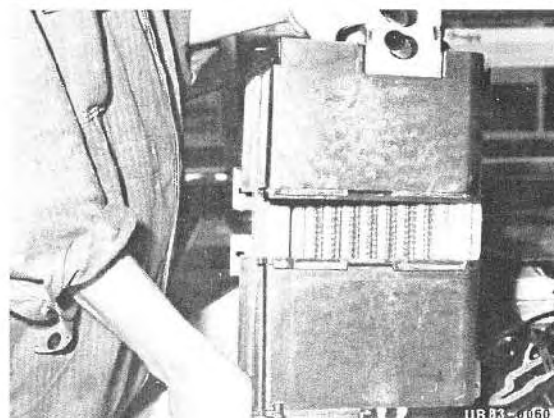


- 15 Press bracket for retaining plate off supply and return lines.



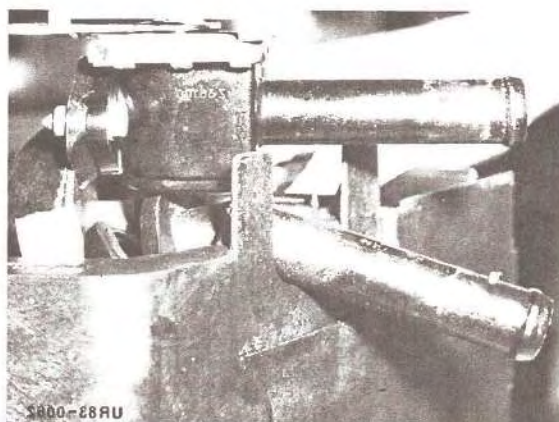

16 Remove retaining plate at front upward.

17 Unscrew heater connection unions (supply and return lines).

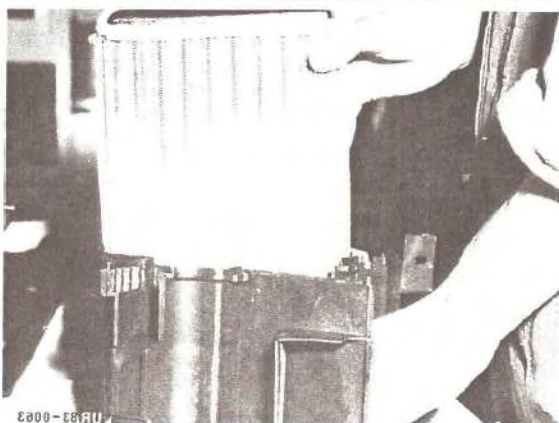

18 Pull housing half off heat exchanger.

Note: Do not damage foam rubber strips.

19 Replace heat exchanger.


20 Installation takes place in the reverse sequence.

Note: Use new sealing rings. Correct coolant level.

MBMANUALS.COM


Checking heat exchanger for leaks

- 1 Secure supply and return lines to removed heat exchanger.

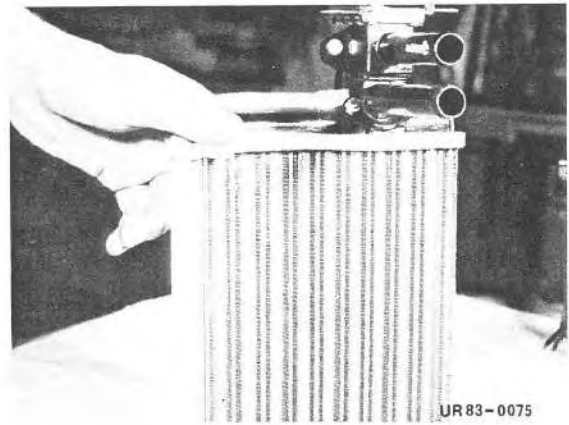


UR 83-0075

- 2 Plug supply connection piece.

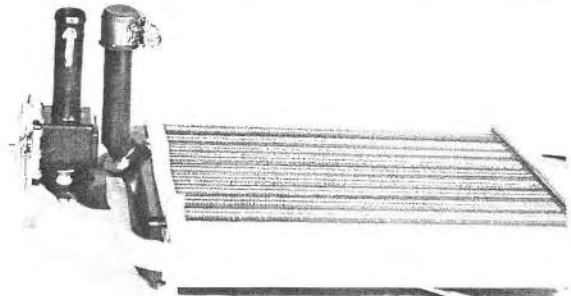

UR 83-0076


- 3 Connect return union and radiator test pump using suitable hose piece and clips.

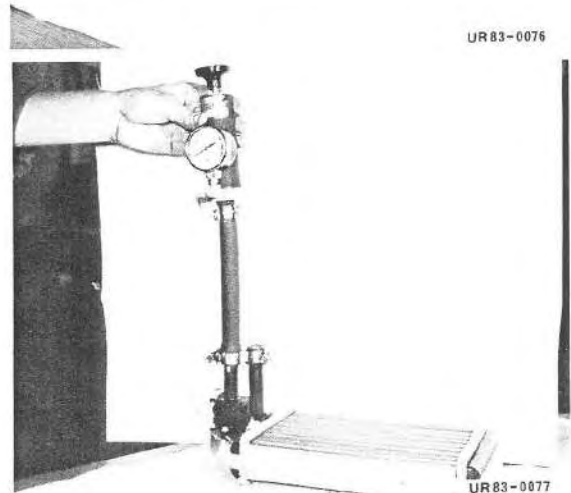

UR 83-0077

- 4 Perform leak-test of heat exchanger with tester in suitable vessel.


Note: Valve for feed in "Open" position, test pressure approx. 0.7 bar.

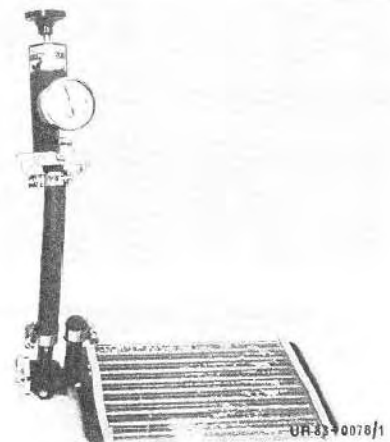

UR 83-0078/1


Replacing blower motor

- 1 Remove hood.
- 2 Unscrew clutch expansion tank and move to the side.

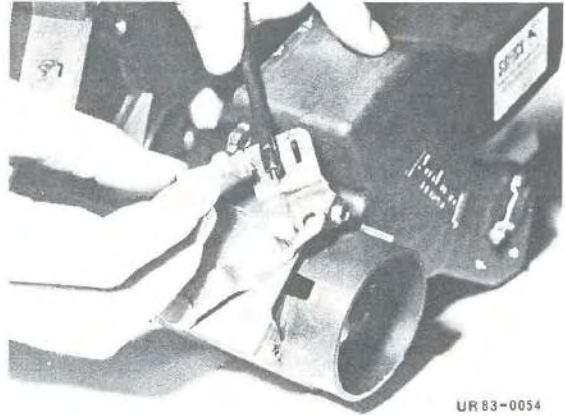


UR83-0054

- 3 Unscrew bracket for clutch expansion tank and remove protective cap for electric isolation point.

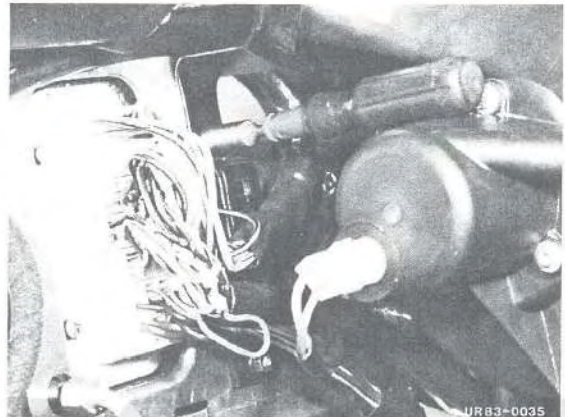


UR83-0035

- 4 Unscrew bracket for air duct.

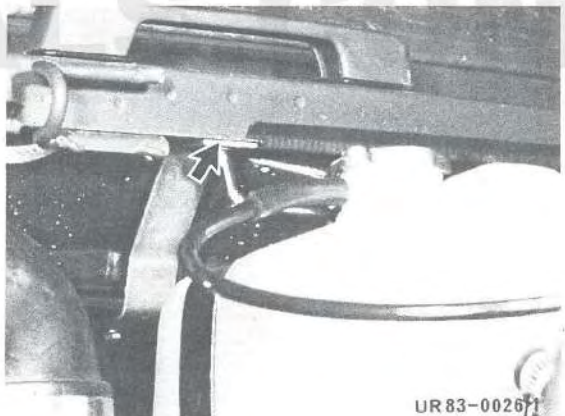

UR83-0026/1

- 5 Unscrew air duct.

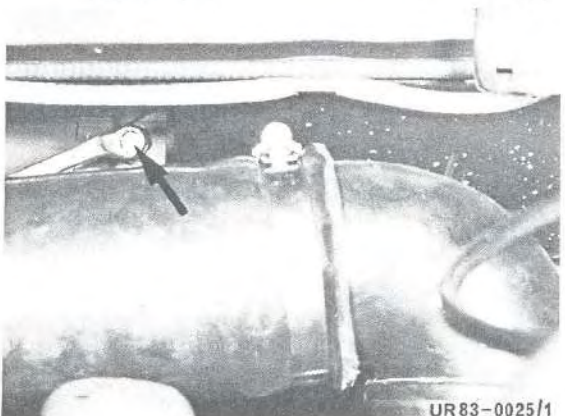


UR83-0025/1




6 Shift air duct to the left to enable the blower housing to be removed.



7 Disconnect cable plug and unscrew fan housing from side part of cab.

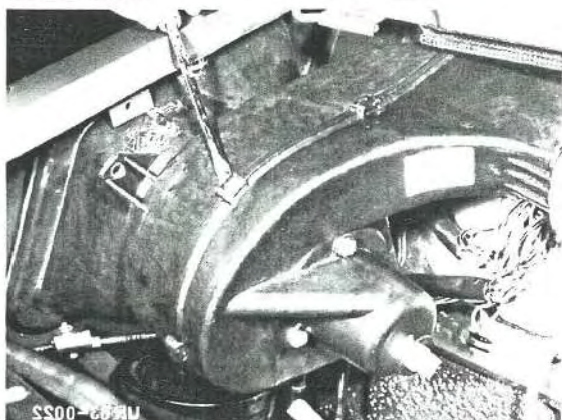

8 Loosen clips, remove housing half together with motor and fan wheel.

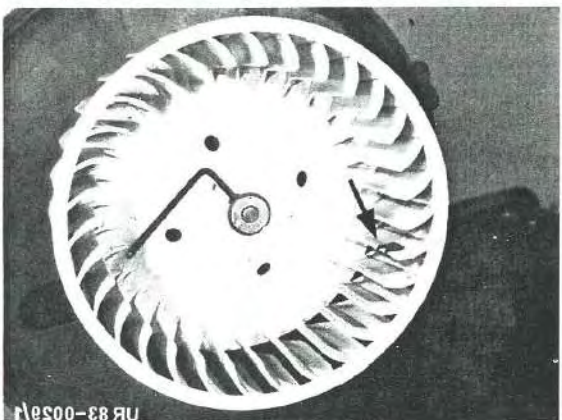


9 Slacken hexagon socket bolt and remove fan wheel from motor shaft.

Note: When installing, ensure that the hexagon socket bolt rests on the milled surface of the motor shaft when tightened.

Moreover, balance weights on the fan blades (arrow) must not be removed otherwise the wheel will not run smoothly due to imbalance.


10 Slacken bolts between motor and housing and remove motor.

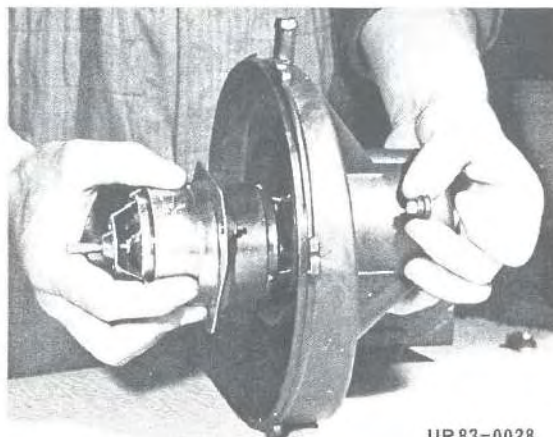

UR 83-0028

11 Replace motor and install re-assemble entire ventilation system.

Perform the various steps in the reverse sequence to disassembly.

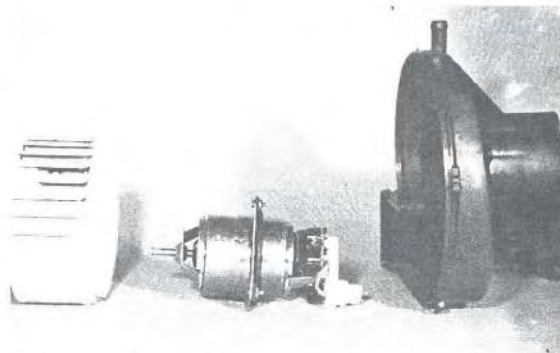

UR 83-0027

12 Attach hood and lock.



UR 83-0030/3