

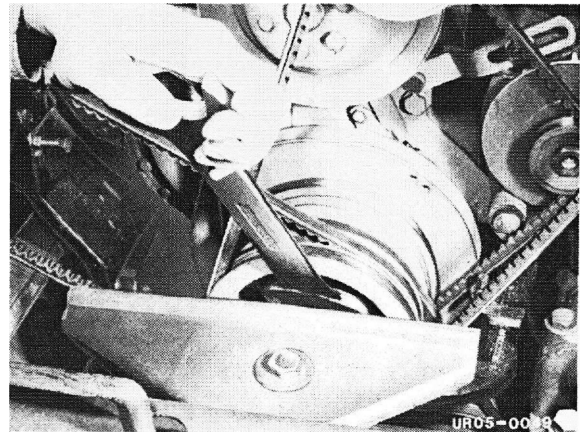


Setting data	mm	
Valve clearance	Inlet	0.20
	Outlet	0.30

- Unscrew the cylinder head cover, See group 01-1
- Turn the crankshaft to the 1st cylinder on compression OT stands. Recognizable when the rocker arms of the 6th cylinder overlap.
- Check play of intake valves 2, 3, 7 and exhaust valves 1, 5, 9, adjust if necessary,
- Then turn the crankshaft until the 6th cylinder is at compression TDC. Recognizable when the rocker arms of the 1st cylinder overlap.
- Game of the intake valves 6, 10, 11 and exhaust valves 4, 8, 12, adjust if necessary.
- Install the cylinder head cover.

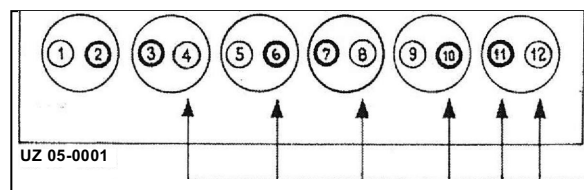


1st cylinder in compression TDC




6. Cylinder in compression TDC

0 ----- exhaust valve 0 = inlet valve

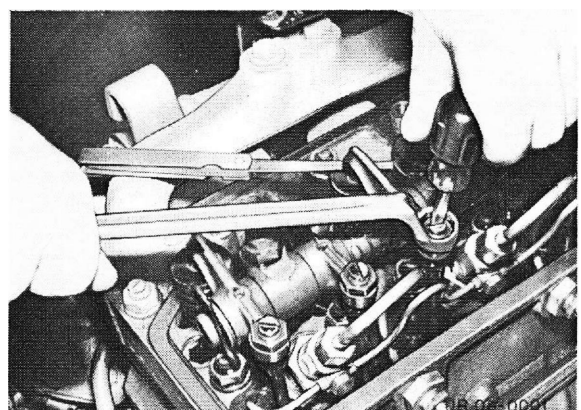


Tightening torques	Nm	(kpm)
Rocker arm brackets on cylinder head	100-110	10-11
Special tool		
Pliers	312 589 01 37 00	


- Remove cylinder head cover, see group 01-1
- Unscrew and remove rocker arms.

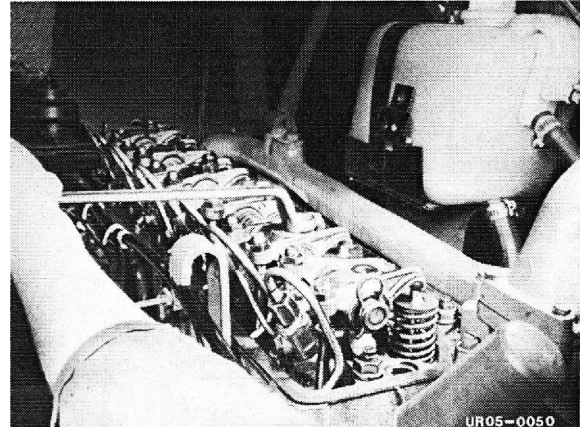


- Insert rocker arm shafts so that rocker arm the bracket with the oil pocket base and the oil hole in the cylinder head.

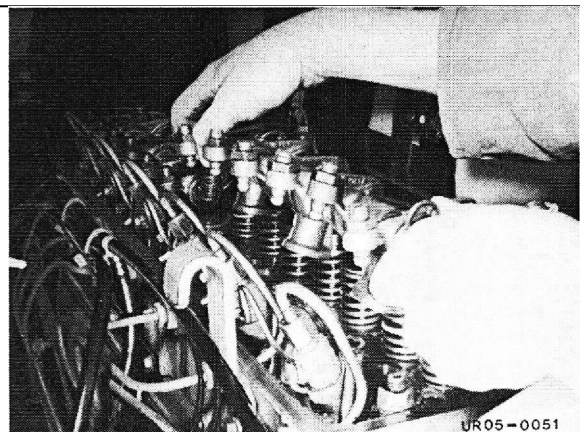


- Turn the valve adjustment screws back and tilt-tighten the jacks. Note the tightening torque.

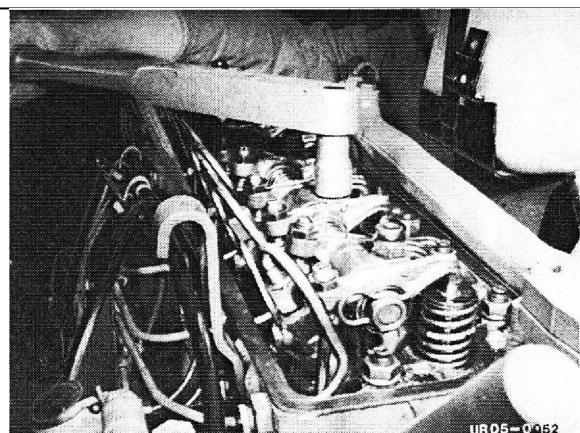

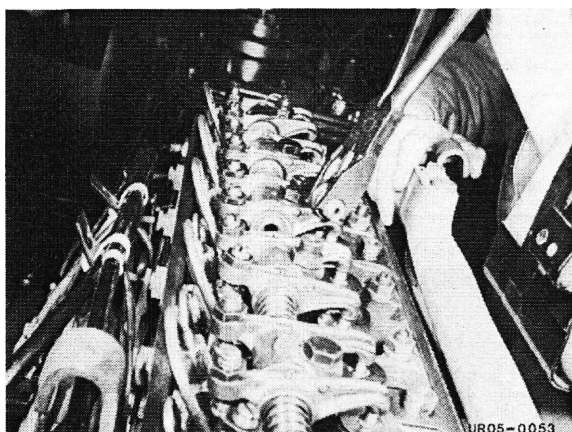

- Connection nipple and spring with special movement install stuff

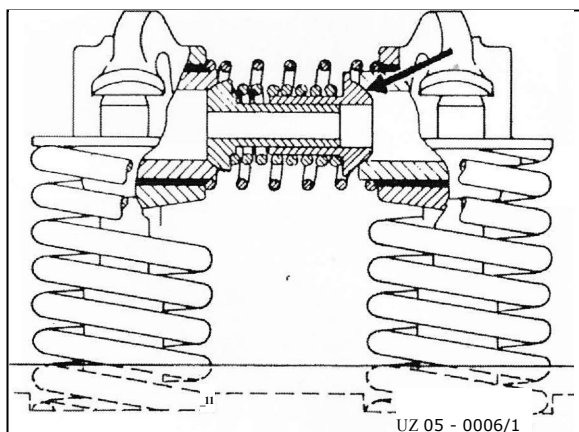**Note:**

Install the connecting nipple with a large inner diameter against the direction of travel. Pay attention to correct seating.

- Check valve clearance, adjust if necessary, see group 05-1


Further installation takes place in reverse rows-episode.

Tightening torque	Nm	(kpm)
Cylinder head nuts	100-110	10-11

Note:

Motor temperature +50 'to + 80 ° C

- Remove cylinder head cover, see size 01-1
- Remove rocker arm brackets, see size 05-2
- Tighten the cylinder head nuts according to the diagram, therefor each cylinder head nut before tightening to solve.
Note the tightening torque.
- Installation takes place in reverse order.

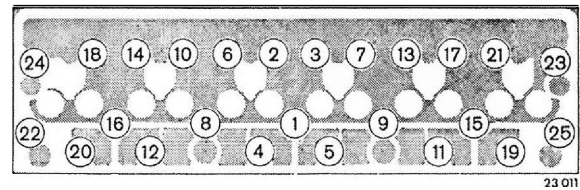

23 011