



Tightening torque	Nm	(kpm)
Engine support arm at the rear left of the flywheel	110 + 20	11 + 2
housing Engine bracket at the front of the crankcase	170 ± 20	17 th ± 2
Engine mounting on the front of the frame	140 ± 20	14 ± 2
Engine mounting on the rear of the frame	140 ± 20	14 ± 2


- Raise the cab, see group 60
- Check the left rear engine carrier for tightness.

Version: without PTO gear.

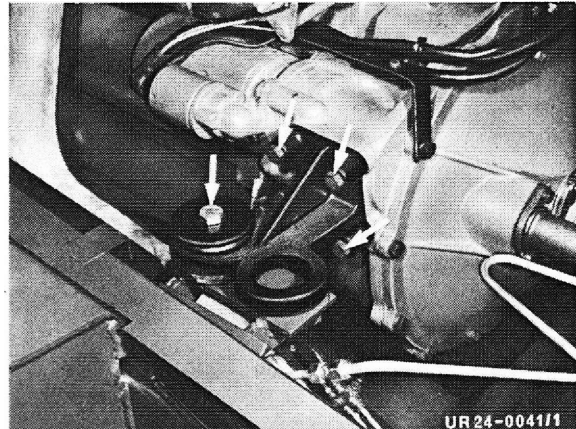


Version: with PTO gear. Note
tightening torques.

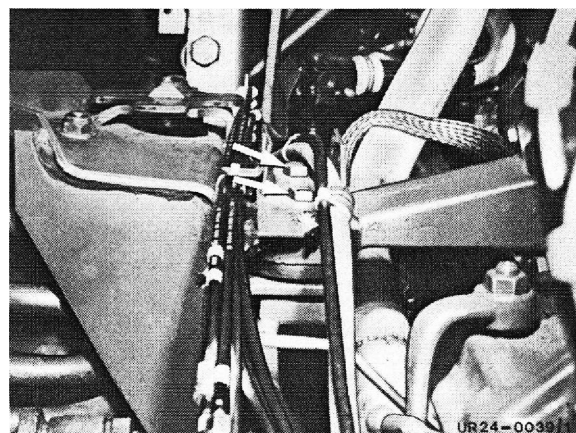

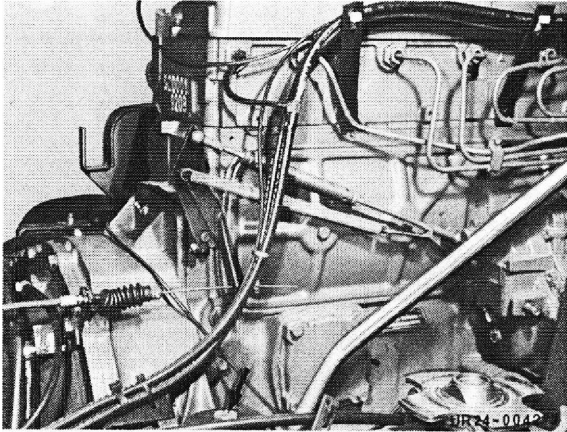


- Check the right rear engine carrier for tightness.

Version: without PTO gear.

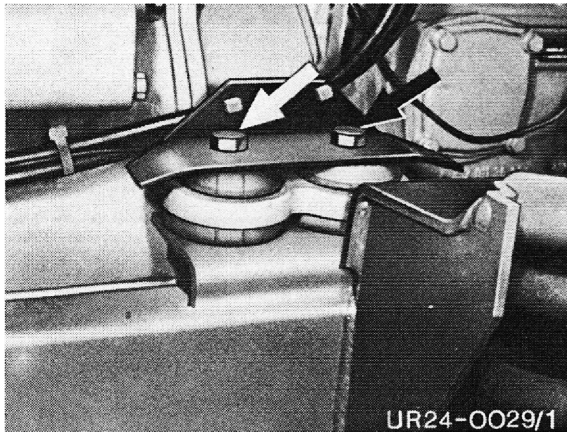


Version: with PTO gearbox.

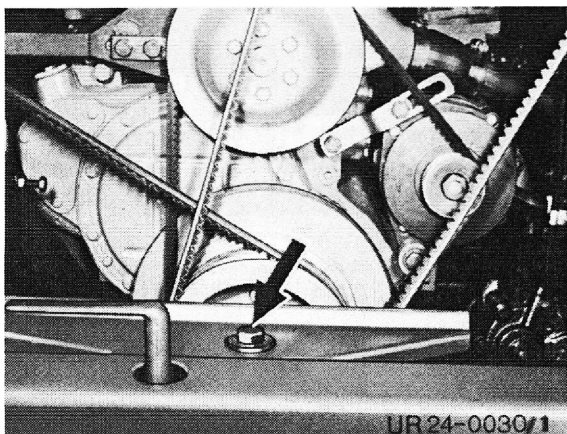

- Open the engine carrier at the front of the frame cross member Check tight fit.

Note tightening torques.

- Check that front left engine carrier is tight.

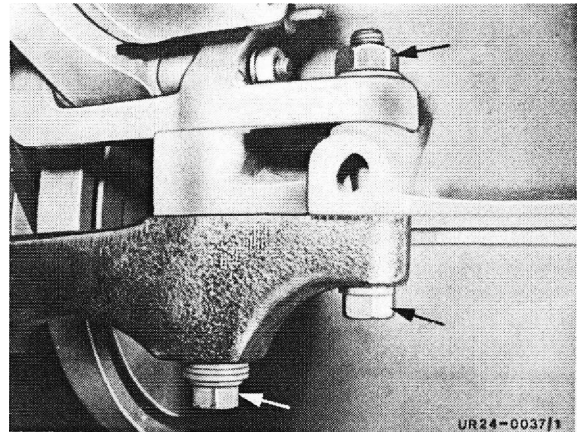

- Check the right front engine carrier for tightness. Note the tightening torque.
- Reset cab, see group 60

