



Check that the four-wheel drive and differential lock are functioning 40

- Start the engine and supply pressure above 7.0 bar bring.
- Raise one wheel on the front and one wheel on the rear axle.

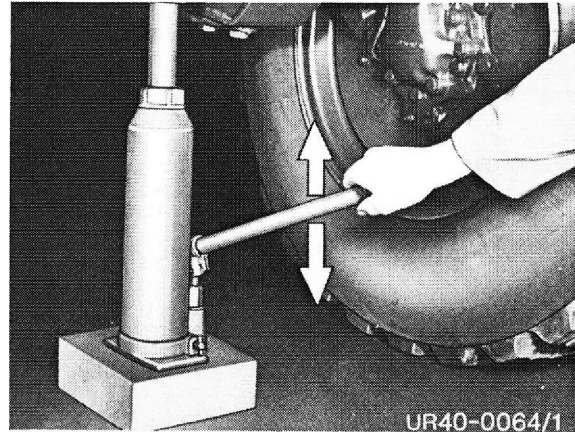

- Switch on four-wheel drive.

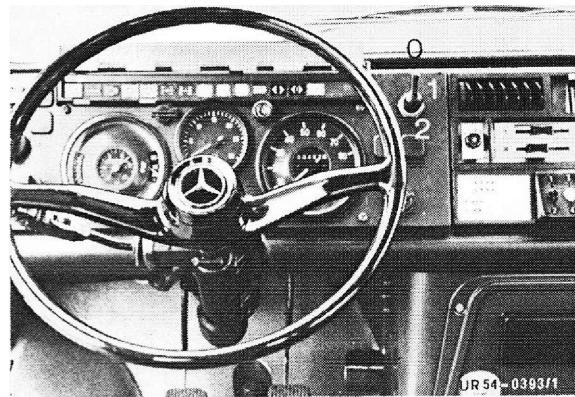

- Turn the raised wheel of the rear axle thereat the raised wheel of the front axle must also turn. If this is not the case, the four-wheel drive on the distributor housing is not switched onswitches. Determine and remedy the cause.

- Switch on differential lock.

- Raised wheel on the front and rear axles try to turn. If it turns, it is offsame gear lock not switched on.

Determine and remedy the cause.

- Lower the vehicle.




Tightening torque	Nm
Wheel mounting nuts	400
Spare wheel on the	30th

- Check wheel fastening nuts for tightness, tighten if necessary.

Note the tightening torque.

Caution

After changing a wheel, tighten the wheel nuts after 25 to 50 km of travel.

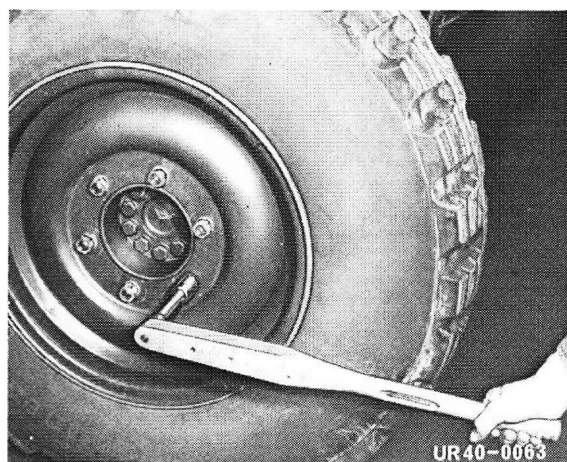


- Fixing screws on the spare wheel on fixedcheck fit, tighten if necessary.




Dismantle


- Unscrew the fastening screws.

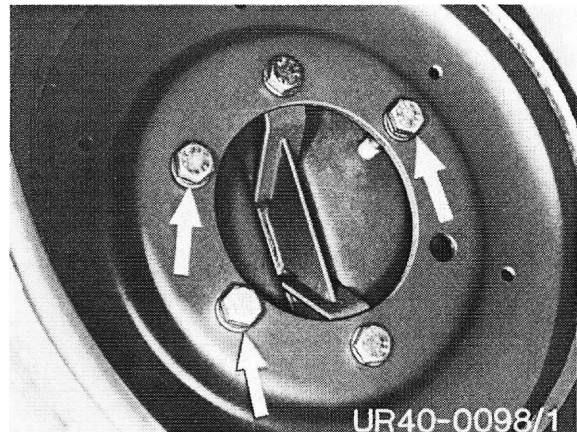


- Lift the spare wheel and out until it stopspull.
- Lower the spare wheel.

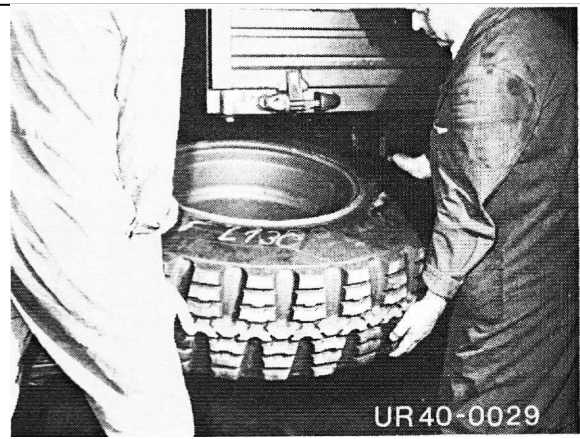

- Unscrew the guide bracket on the spare wheel and rebuild.

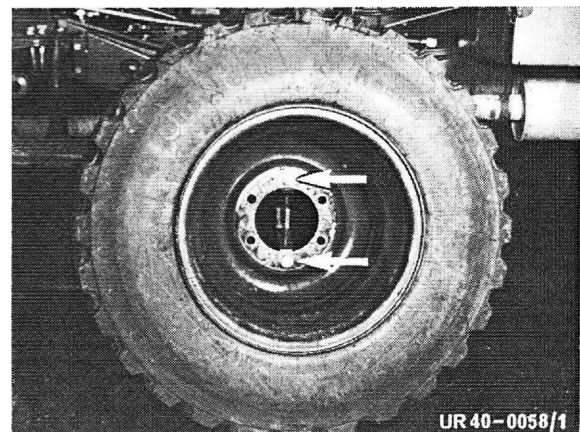

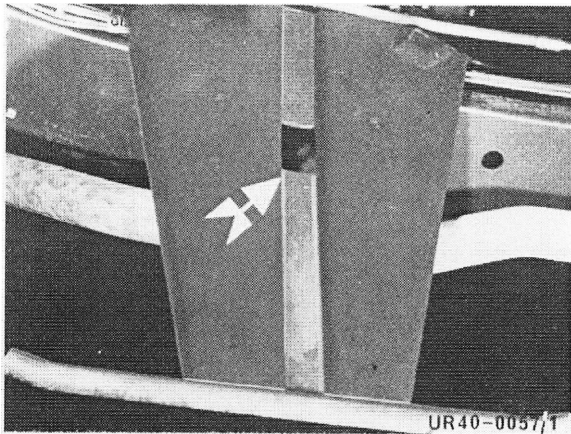

Plant

○ Screw the guide bracket to the spare wheel.

- Place the spare wheel with the guide bracket on the spare wheel holder and push it in until it clicks into place.

- Screw in the fastening screws and tightenpull.

Note:

Do not get fastening screwsscrew, remove the spare wheel again and turn it 180 degrees.

- Clean lubrication points.
- Lubrication points on the front and rear Ge-
Lubricate the steering until grease emerges from the
bearings.

