

- Open the bonnet.

- Check coolant level.


The expansion tank should be up to ^{2nd}/ 3 be filled.

Only clean, low-lime cooling when refilling use medium. Do not add cold coolant when the engine is hot. Wait for the engine to shut down cooled.


Also anti-corrosion agents all year round and for temperatures below 0° C antifreeze to fill.

Check the anti-freeze level beforehand.


- Close the bonnet.

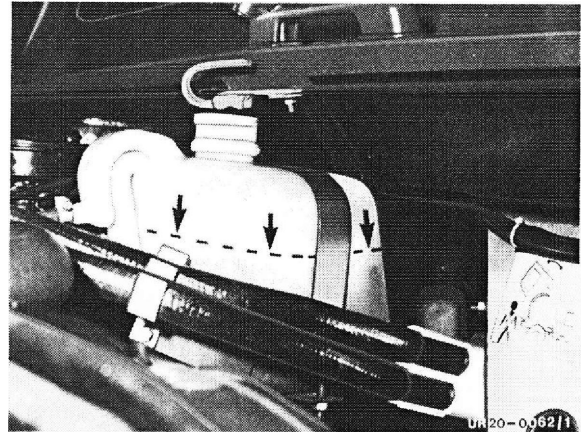


- Remove bonnets and front panels.
- Supply line to coolant pump on tight seat check, tighten if necessary.

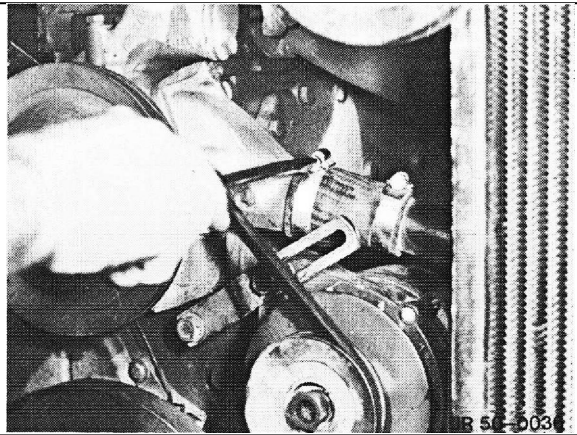


- Check supply line on cooler for tightness, if necessary tighten.

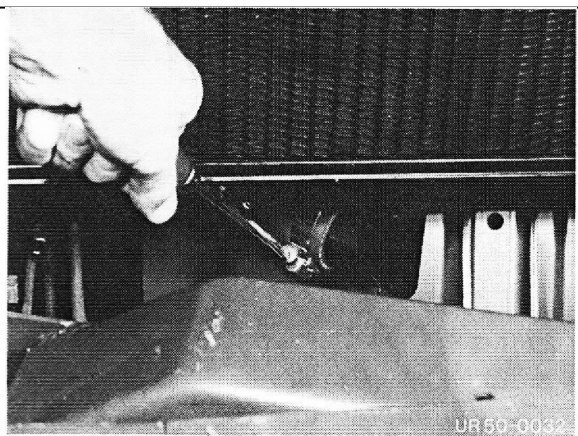


- Check return line on top for tightness, if necessary tighten.

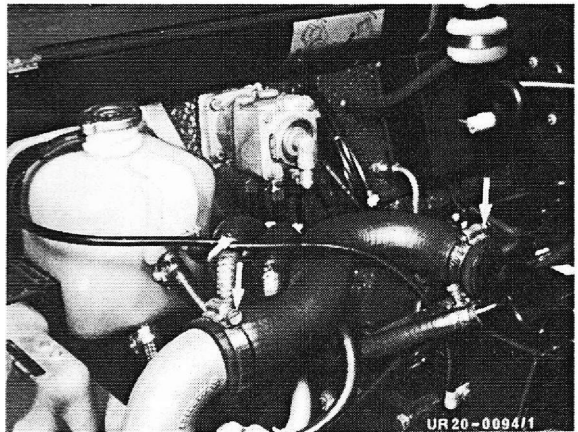


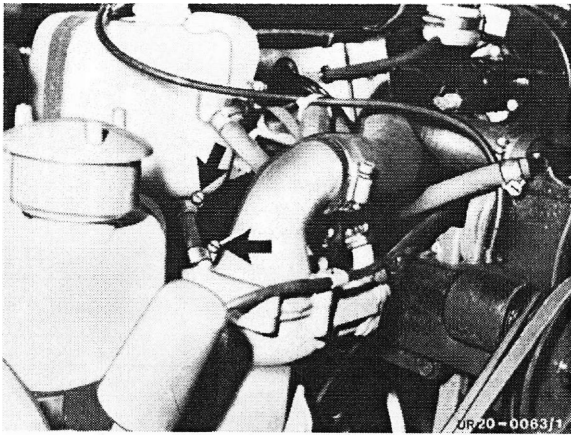

Filling line from the expansion tank to the flow-
Check the pipe for tightness, tighten if necessary.

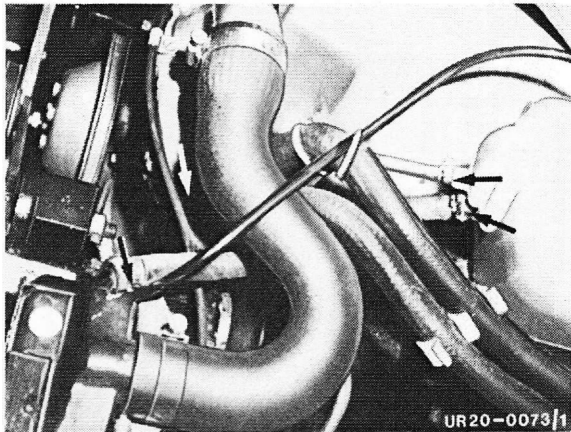


- Check the ventilation lines on the expansion tank as well as on the engine and cooler for tightness, if necessarytighten.

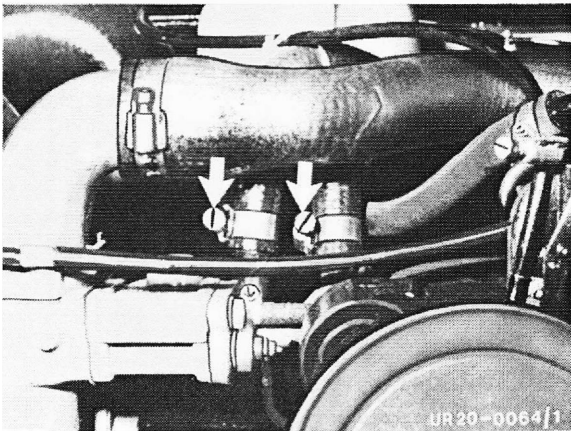

- Check the supply and return lines of the heater on the motor for tightness, tighten if necessary.

- Heating supply and return lines to the driver-
Check the house for tightness and tighten if

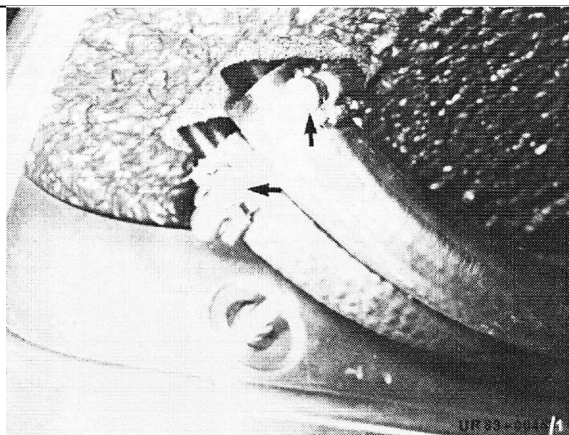

- Check the return line on the front and rear
cylinder heads for tightness, tighten if necessary.

