


- Check tire pressure, correct if necessary.
- Park the vehicle on a level surface.
- Make the headlight tester ready for operation according to the manufacturer's instructions.
- Check headlight setting.

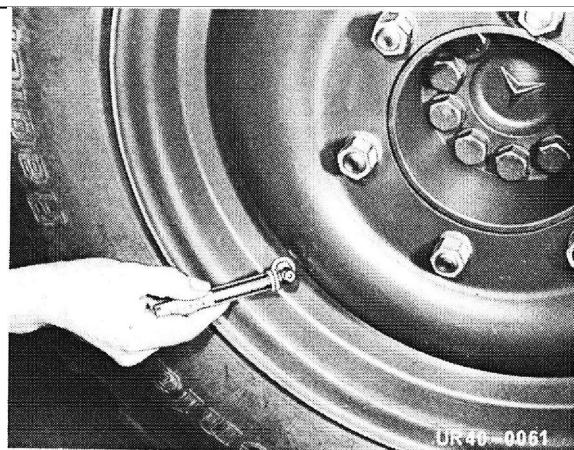

If headlights need to be adjusted:

- Unscrew the headlight cover.



- Headlights on height adjustment screw (2) or Adjust the side adjustment screw (1) accordingly.
- Screw on the headlight cover.

