THE OMNI-COMPASS LIVE ENGINE MANUAL

How to Read the Live Engine:
Its Monitors, Gauges and Knobs,
Native beside Omni-Compass

AJ Dubra
Owner and Developer

THE OMNI-COMPASS LLC
October 2026

The Omni-Compass Live Engine Manual
How to Read the Live Engine: Its Monitors, Gauges and Knobs, Native beside Omni-Compass
October 2026

Copyright © 2026 The Omni-Compass LLC. All rights reserved. No part of this book may be reproduced, stored or transmitted in any form or by any means, except as allowed by the Omni-Compass Evaluation License, without the written permission of The Omni-Compass LLC.

The Omni-Compass LLC reserves the right to change this book, the software it describes and their terms at any time, without notice. Every copy, export and printout of any part of this book carries this page, the LICENSE, the NOTICE and the Disclosures unchanged.

All patents, copyrights and trademarks covering the Omni-Compass engine, its mathematics and its software have been filed in the United States by The Omni-Compass LLC (no filing number is stated, and no grant, registration or approval is claimed). www.omni-compass.com

“Omni-Compass”, the Omni-Compass rose and the related names and marks are trademarks of The Omni-Compass LLC. Other names that appear in this book are the property of their owners and are used only to identify the systems Omni-Compass works with.

License. This book and the software it describes are proprietary and are not open source (SPDX-License-Identifier: LicenseRef-OmniCompass-Evaluation-1.0). They may be used only to evaluate Omni-Compass and to reproduce its published results, in simulation and on systems the reader owns or controls. Any commercial use, commercialization, monetization, production use, redistribution, hosted or managed service, or incorporation into any product or service requires a written Omni-Compass Enterprise License, signed by The Omni-Compass LLC and paid for. The full terms are printed in Appendix F.

Disclaimer. The software is provided “as is”, without warranty of any kind. This book is the reading manual of the live engine page and carries no benchmark results of its own; every published result carries its evidence class. A modelled result is a statement about a model; a software benchmark is a statement about the software it ran on; only a hardware meter speaks for hardware. Nothing in this book is a promise of a particular saving on a particular system: the only number that applies to a system is the one its own paired runs produce, on its own receipt.

Set in Liberation Serif and DejaVu Sans Mono, the text at 11 pt on a 16.5 pt line. Built from the repository by `docs/book/build_book.py`; the book and the code change in the same commit.

The Omni-Compass LLC · www.omni-compass.com

Contents

The Problem and the Answer vi

Foreword viii

Preface viii

Prelude: A Night at the Wall x

Introduction: The Page, Its Monitors and What This Manual Covers xi

The key: GAIN, EVEN and LOSS xii

What You Are Looking At xiv

Quick Reference: The Card for the Glove Box xvi

Disclosures, Declarations and Disclaimers xvii

Part One. The Page as a Monitor 1

1. A Monitor, Not a Drawing 1
2. The Engine Table of Contents and the Numbering 4
3. The Two Sides and the Colours 5

Part Two. Watch First: the Switch, the Alarms, the Wall and Every LOSS 9

4. The Master Switch 9
5. The Alarms, the Feed, the Event Log and the Metrics 11
6. The Monitor Wall 12

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Part Three. The Three Arms, Live, and the Knobs That Turn Them 16

7. Omni Direct: the Three Arms . . . 16
8. The Organism, Live . . . 17
9. The Control Console . . . 19
10. The Heartbeat Dial . . . 21

Part Four. The Measured Effect and the Whole 22

11. The Benefit Board, the Grid and the Catalog . . . 22
12. The Whole Organism, Every Way It Is Bought . . . 25

Part Five. Evidence by Stack 27

13. The Clouds . . . 27
14. The Orchestrators and Governors . . . 29
15. Kubernetes: the Official Run Playback . . . 30
16. Kubernetes: Per-Repetition Telemetry . . . 34
17. The Shipped Controller's Decision Trace . . . 35
18. The Chip and the Host . . . 37

Part Six. The Brain 38

19. One Control Cycle, Traced . . . 38
20. The Phase Plane and the Scoreboard . . . 39
21. The Brain's Internal State . . . 40
22. The Verdict . . . 43
23. The Telemetry Analytics and Omni-Compass in Its Own Words . . . 45
24. Failure Modes, Controls and Residual Risk . . . 47

Part Seven. The Proof: the C++ Twin and the Mathematics 47

25. The Component Specification . . . 48

Part Eight. Reference: the Pipeline and the Page's Own Drawing 50

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

26. The Pipeline That Rebuilds the Page . . . 51
27. The Page Governs Its Own Drawing . . . 51

Part Nine. Reading a Result off the Page 52

28. The Mechanism of Action, Side by Side . . . 52
29. From a Tile to Its Record . . . 54
30. When a Tile Reads LOSS . . . 55
31. What the Page Does Not Tell You . . . 56

Part Ten. License and Your Copy 57

32. License and Commercial Terms . . . 58
33. Verifying Your Copy of the Page . . . 58

Back Matter 59

Glossary . . . 59
Appendix A. The Page, Section by Section . . . 61
Appendix B. Every Control of the Console . . . 63
Appendix C. The Gauges on the Wall . . . 66
Appendix D. The Colours and the Marks . . . 67
Appendix E. Troubleshooting the Page . . . 68
Appendix F. The License . . . 69
Appendix G. Licensing: Questions and Answers . . . 81
Appendix H. Third-Party Notices . . . 83
Appendix I. The Enterprise License: Standard Terms . . . 84
Appendix J. Patents and Trademarks . . . 87
Appendix K. Security Policy . . . 89
Appendix L. The Page Word for Word: Every Section, Monitor and Knob . . . 91
Index . . . 220
Contact . . . 229

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

List of Figures

Every figure is drawn from the code it pictures, by one of two kits (`docs/book/figures.py`; `docs/book/schematics.py` for the wiring schematics, block diagrams, flowcharts, timing diagrams, state machines, the receipts charted from their own tables and the grids), and printed where the text first needs it; the same drawings stand beside the text on GitHub, in `docs/book/figures/`. A chart of a receipt is read by the reading key: it pictures the table and adds nothing to it.

Figure 1. Flowchart: the three-run reading rule, a change of 0.5% or more a change 7

Figure 2. State machine: the governor's modes 11

Figure 3. The seven organisms on the spine 18

Figure 4. The three-run rule: a change of 0.5% or more is a change, EVEN under it, and the runs that disagree 24

Figure 5. Timing diagram: the hand-back after a reset, a kill and a death 31

Figure 6. One pedal, no brake: the modes and the two switches 34

Figure 7. One decision of the governor, from the senses to the audit 36

Figure 8. The compass band, its cushions, and the smoothing of the force 40

Figure 9. The engine's six states, their couplings and the control law 41

Figure 10. The double well of the alignment and the cubic potential of the stress 42

Figure 11. Block diagram: the verdict's paired trial around a slow knob, read GAIN, EVEN or LOSS . . . 44

Figure 12. Flowchart: the verdict's trial on one step, from the reference to the reading 45

Figure 13. Block diagram: the compass law as a closed loop on one muscle 53

The Problem and the Answer

What the whole industry faces. Every computing system in service, from one server to a cloud region, from a GPU to a building's chillers, a grid feeder or a robot cell, is run by a stack of native controllers: the Kubernetes autoscalers and scheduler, the cloud's node pools, the GPU's power and clock firmware, the database's cache and connection pools, the building's cooling loops, the battery's management system, the

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

servo's loop. Each was designed and tuned alone, against its own setpoint, with margins sized for the worst case it might meet. Three costs follow, on every stack:

1. **Capacity held idle.** Worst-case margins stay in place through the common case. Machines, power caps, caches and cooling run far inside their limits, and the room between the operating point and the limit is paid for and seldom used.
2. **Late reaction.** Reactive loops act on averaged, lagging signals and wait out deliberate cooldowns, so queues and response-time tails form before capacity arrives.
3. **Loops at cross purposes.** The loops share power, cooling, connections and memory. One loop's correction is another loop's disturbance, and no loop sees the whole.

Demand for computing, above all for AI and the cloud, is growing faster than the power, cooling and hardware that can be built for it. The usual answer is to add: more machines, more power, more people watching thresholds. Replacing the native controllers is not an answer most operators will take: they are proven, often certified, and the people on call know them.

What Omni-Compass does about it. Omni-Compass is a supervisory governor. It sits on top of those native controllers and never replaces them. It plugs into each setting a native controller already exposes, through a two-way plug (one wire in, the reading; one wire out, the setting), takes a snapshot of every setting before its first write, and governs the whole stack as one body, the organism: every muscle driven as far as its own limit and never past it, and, on the engine that stands, never below native; where it cannot bring a muscle a GAIN, that muscle stays native. It acts before a line is crossed instead of after, reads back every write, puts every give-back to its own trial, records every decision with its reason, walks every setting home if it stops (the lease) and stops at once on the kill switch. Its first rule is do no harm, judged at the organism: never less work or health than native (`DISCLOSURES.md`, section 3). The aim is the one headline: more work, faster, on fewer machines, with less energy, from the hardware and the controllers already in place; in a cloud, the same work for a smaller bill.

Where the page shows it. The live engine page plays every benchmark back from its own SHA-256-checked files, native beside Omni-Compass on top of native, lane by lane, and runs the engine's own runs in the page: the Python's seeded runs, and the same runs through the engine's C++ twin, side by side (the page's section 7b). This book reads that page; the mechanism and every result are in the Owner's Manual.

What is not claimed. No new physics, no new model of computation, and no promise for any system Omni-Compass was not run on. It does not make a system immune to failure, delay or drift: it keeps each muscle inside its own limits and shows, row by row, what it did against native. A result on another system is that system's own, from its own paired runs; where it differs, the first presumption is the wiring (`DISCLOSURES.md`, section 4).

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Foreword

A governor that cannot be watched cannot be trusted. Every controller a stack already runs has a dashboard somewhere: the autoscaler's replica count, the card's clock and power, the building's setpoints. What none of them had was one wall where the whole body is seen at once, native beside the same body governed, decision by decision, with the record each number came from one click away. The live engine is that wall, and this book is how to read it.

I asked for it to be a monitor and not a drawing: every record on it made again by the repository's own code, every raw file checked against its own SHA-256 list before a byte of it is drawn, every word on it the run's own reading and never one drawn from the stream. So the page can be trusted the way a meter is trusted: it shows what the record holds, and when the record has nothing yet (a cloud set still running, a chip run not yet started) it says so and shows nothing in its place.

Read the key first. Then stand at the wall. The switch and the engine come first, the four signals of the living organism next, and every reading that went against native is raised before anything that went for it. If a tile reads LOSS, this book tells you where its record is and what to do: the row stays, its cause is found (our wiring first, native's setup second, the scoring third), and the test runs again. Nothing on the page is pushed toward GAIN; the only thing forced is the mechanism.

Preface

This is the Live Engine Manual, the third book: how to read the live engine page, the monitor of the engine and of the benchmark runs GitHub ran. It is for the operator at the dashboard: which tile means what, which knob does what, where every number comes from, and how the mechanism of action of Omni-Compass against native shows on the monitors. It explains neither how the engine is built (the Owner's Manual) nor how it is wired onto a stack (the Operator's Manual).

The book is in eight parts, and it can be read in two ways.

You are	Read
The operator on shift, at the wall	the Quick Reference card; Part Two (the wall and the switch); the chapter on a tile that reads LOSS in Part Seven; the troubleshooting appendix

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

You are	Read
CTO, architect, head of platform	the front matter; Part Three (the whole organism and the benefit board); Part Seven (the mechanism side by side; what the page does not tell you)
CEO, CFO, CIO, board member	the Problem and the Answer; the Foreword; the Disclosures; the bills and receipts in Part Three; the clouds in Part Four
Site reliability engineer, on call	the Quick Reference card; Part Two; the official run playback in Part Four (the heart and the two tickers); the gauges appendix
Control or plant engineer	Part Six (one cycle, the phase plane, the brain's state, the verdict, the specification); the console in Part Five
Auditor, diligence team	Part One (a monitor, not a drawing); the trace from a tile to its record and the verification chapter; the page's own appraisal
Procurement and counsel	the Disclosures and the papers bound into the back matter

Part One says what the page is and how it is built. **Part Two** is the wall and the switch. **Part Three** is the whole organism and the measured effect. **Part Four** is the evidence stack by stack, from the cloud down to the chip. **Part Five** is the organism live and the console. **Part Six** is the brain. **Part Seven** reads a result off the page. **Part Eight** is the license and how to verify a copy.

Conventions. `Code` is a command, file, anchor or switch exactly as typed. "Native" is the system by itself, amber; "Omni-Compass" is Omni-Compass on top of native, blue; there is no third side. "A section" is a numbered part of the page, named by its anchor; "a chapter" is a chapter of this book. A knob marked **LIVE** acts on the live engine; one marked **RECORDED** chooses a record and modifies nothing. Every number carries its evidence class: P a physical meter, L live software, S our own models (modelled); a model is never proof.

The standards every page of this manual keeps. The page, and so this book, keeps the following discipline throughout:

1. **Two sides, always.** Every monitor shows native beside Omni-Compass, the same whole system on the same demand, the same draw of noise, the same injected fault, at the same second. Omni-Compass is never shown standalone and never as a competitor to the controllers it sits on.
2. **Nothing typed in.** Every number is read from a record the repository holds when the page is built or opened; every raw file is matched against its run's own SHA-256 list before it is drawn; the brain, the compass law and the verdict running in the page are the engine's own code, ported and proven equal to the Python and the C++ on every build (`docs/engine/check_live_engine.py`).
3. **The record's own word.** Every word on the page is the reading its record carries under the one key; the page never draws a word from the stream it plays, and never prints "up", "down", "better" or "worse".

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

4. **Every row, LOSS included.** A reading that went against native is raised first, as an alarm, with its source record and the repository's root-cause document where one exists. Nothing is cut from the page because it went against Omni-Compass.
5. **Nothing read across engine versions.** The page names the engine it stands on, every record is rebuilt on the engine that stands, and `--check` fails a page whose engine differs; each three-run table on it names its own engine, and a table stands on an older engine only until its runs on the engine that stands land.
6. **Models are not proof.** Every view says its evidence class. The official Kubernetes and database runs are class L, played from their own checked files. The harness, the shipped controller on the toy cluster, the GPU card, the Linux host, the realms table and the grid are class S, our own models, shown beside the real runs and never presented as proof.
7. **Do no harm, in its one meaning.** Every knob on the console acts on both sides alike; what Omni-Compass does with it is held by its guards: no muscle driven below native or past its own limit, nothing taken from one muscle to give to another on the engine that stands, a give-back tried against native first and refused on a LOSS (`DISCLOSURES.md`, section 3).

Prelude: A Night at the Wall

It is a quarter past two. The on-call engineer has the wall open on one screen and the cluster's own console on the other. On the wall the switch is green and reads ON. Under it the four signals of the service: the work waiting, the work done, the decisions past their line, the capacity held; native in orange on the left of each tile, Omni-Compass in blue on the right, both moving on the same demand. The orange line of the work waiting climbs as the night's batch starts; the blue line climbs too, then bends sooner, because the governor's ticker (the page's section 4c) shows the pedal pushed at the first decision the compass left its center, and two machines recommended before native's autoscaler had seen its first late sample.

A tile in the alarms row turns red. It reads LOSS: the pod start wait, mean, +13% in one run. The engineer clicks it and lands on the three-run table it came from: run A of the Azure steady set, 33 paired repetitions, the interval −44 to +60 seconds, *no* in the significant column. The red is the run's own word for this run, a change past 0.5% whose interval holds zero; the three-run reading waits for B and C, and then reads the mean of the three. The row stays on the page, as every row does. The engineer opens the root-cause document the tile links to, `docs/POD_START_WAIT.md`, and reads that a pod's start on a shared host is the test machine's own unpacking of an image, the same on both sides at the same host load. Nothing to do tonight; the record is complete.

At three the batch is done. The blue line of the capacity held eases back a step at a time toward the orange one: the pedal lifted, the lease walking every setting toward native. The engineer scrolls to the page's section 5b, the phase plane, and watches sixty dots drift from the right edge back toward the middle line, native's a few decisions behind. Then back to the wall. Switch green, four signals calm, the alarms row empty but for the one

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

red tile that will stay until its runs B and C land and the three of them are read together. The page's own age, in the last tile, reads twelve minutes.

Introduction: The Page, Its Monitors and What This Manual Covers

The problem the page answers. Omni-Compass's answer to the problem the whole industry faces (the first section of this front matter) is a supervisory governor on top of controllers that each have their own dashboard, and the owner of the stack has to answer one question about it every day: is it doing what the receipts say, right now, on this body, and would I see it if it were not? The receipts are tables; a table is read after the fact. The page is the same record played back in motion, native beside Omni-Compass, with the governor's own decisions and the native controllers' own moves on two tickers side by side, so the mechanism is seen, not inferred.

What the page is made of. Four exporters build its records on the engine that stands: the realms harness (one organism and each muscle alone; `docs/engine/export_harness_trace.py`), the shipped controller on the toy cluster (on top of the autoscaler at the max, and in the cloud's setting; `docs/engine/export_controller_trace.py`), the official runs read back from their raw files and scored again by the repository's own scorer (`docs/engine/export_runs.py`, `tools/live_reps.py`), and the chip and host models with every judged row of the newest receipts (`docs/engine/export_scenarios.py`). A fifth record is the build itself: the engine, the commit, the time, and GitHub's own list of the runs in progress and of every run started for the chips and the clouds (`docs/engine/github_ledger.json`).

What runs live in the page. The brain (`omnicompass/core.py`, integrated by the fourth-order Runge–Kutta method), the compass law (`omnicompass/compass_law.py`) and the verdict (`omnicompass/verdict.py`) run in the page itself, ported to the browser and proven equal to the Python and the C++ on every build. They govern a stress-test model of sixty muscles, each on top of its own native controller, and they govern the page's own drawing (the page's section 8d). Everything else is a record played back.

What this manual covers. Every section of the page in the page's own order; every gauge, with its side, its aim and its word; every knob of the console, with what it acts on and what it leaves alone; the two tickers that show the mechanism of action; the trace from any tile to the record it came from; and what to do when a tile reads LOSS. It covers the page as built on omni-v18; a later engine renames itself on the page's title block and this book is realigned in the same push.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

What this manual does not cover. How the engine is built, its equations beyond the ones the page itself prints, the wiring of Omni-Compass onto any stack, and the benchmark results themselves as a body of evidence: those are the Owner's and the Operator's Manuals and `docs/STATE_OF_PLAY.md`.

The key: GAIN, EVEN and LOSS

Every judged reading in Omni-Compass is one of three words: **GAIN**, **EVEN** or **LOSS**. Better, same and worse are not used anywhere. The word is decided by what the gauge is for, never by the plus or minus sign of its number: who sets the aim differs from one system to the next, and each gauge's aim is written in its preregistration before the runs.

Word	What each letter stands for	Its sense in underwriting	What it means in a table
GAIN	**G** Growth (asset appreciation); **A** Advantage (risk reduction); **I** Improvement (margin expansion); **N** Net-positive (profitable outcome)	surplus and positive variance	the gauge moved toward its declared aim against native: more work done, a shorter wait, fewer misses or failures, or a resource cut
EVEN	**E** Equalized (zero variance); **V** Verified baseline (expected norm); **E** Equilibrium (balanced risk); **N** Neutral (no net change)	the break-even baseline: equilibrium	native and Omni could not be told apart: the same, or no difference beyond the noise; a knob native already runs at the top of its range is EVEN, at its limit on native
LOSS	**L** Leakage (capital drain); **O** Off-track (adverse selection); **S** Setback (claim liability); **S** Subpar (negative variance)	actuarial deficit and exposure	the gauge moved away from its declared aim: less work done, a longer wait, more misses or failures

How the sign of a number becomes a word:

- **Time waited, missed or failed** (a response time, time over the line, failed requests): a fall is GAIN, a rise is LOSS.
- **Work done** (work inside the line, throughput, a hit rate): a rise is GAIN, a fall is LOSS.
- **A resource spent or held** (energy, the power drawn and its peaks and swings, machines, memory, processor time, a bill, wear on a part): a fall is a **cut**, and a cut is GAIN. A rise is **power given**: what Omni put in to buy the work and the speed shown beside it. Power given is always shown and never hidden, and it is never called a loss (the founder's order of 12 October 2026: the max rides every muscle's

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

edge; it never shaves). A peak is power held, so a peak that rose is power given, in a data centre and in a building alike (17 October).

- **Work bought with each unit of a resource** (work per energy): a rise is a cut in what each unit of work took, a GAIN; a fall is power given, because it falls when more power is given for the same work.
- So a minus can read GAIN (a response time cut 65%, a bill cut 30%) and a plus can read LOSS (failed requests up).
- **The floor, and every change above it** (the founder's orders of 20 and 24 October 2026): a change of half of one percent (0.5%) or more either way is a change, and reads **GAIN** or **LOSS** (or **power given**) by what the gauge is for; EVEN is kept for a change under 0.5%. The change is the mean of the three runs' changes, each in percent of native. Where every run moved the same way with its 95% interval clear of zero, the word reads **in all three of our runs**; otherwise it reads **by the mean of our three runs** and says in how many of the three runs it stood beyond the noise, so a reader sees how firmly it stands. Where runs moved 0.5% or more in opposite directions, the reading is **the runs disagree**. A mean under 0.5% reads **EVEN, under the floor**, with its size.
- **The sign beside a word** (the same order): the number next to a word carries the word's sign, never the gauge's raw direction, so that no one mistakes which way a number went: GAIN +, LOSS −, EVEN =. A bill cut 3% reads GAIN +3%, failed requests up 2% read LOSS −2%, and a change inside the noise reads EVEN =0.3%.

Some preregistrations name their outcome with a label written before the runs (for example SUPERIOR WITHIN GUARDRAILS in the card protocol). The label stays as it was frozen, and every table shows it with its word first: TOWARD ITS AIMS reads GAIN; BOTH WAYS reads GAIN AND LOSS; AWAY FROM ITS AIMS reads LOSS; SAME AS NATIVE reads EVEN (the same as native); AT ITS LIMIT ON NATIVE reads EVEN (at its limit on native); SUPERIOR WITHIN GUARDRAILS reads GAIN (within the guardrails); ENERGY IMPROVEMENT WITH SERVICE TRADEOFF reads GAIN AND LOSS (energy cut, service traded for it); SERVICE IMPROVEMENT WITH ENERGY TRADEOFF reads GAIN, power given (service GAIN, energy given for it); NONINFERIOR / INCONCLUSIVE reads EVEN (inside the noise, within the guardrails); NOT ESTABLISHED reads EVEN (not established: inside the noise, a guardrail crossed on the mean). A run that breaks its own validity checks reads INVALID and carries no word.

Every reading is one of these. **GAIN, LOSS or power given in all three of our runs**: A, B and C moved the same way, every 95% interval clear of zero. **GAIN, LOSS or power given by the mean of our three runs**: the runs' mean moved 0.5% or more, with the count of runs that stood beyond the noise beside it. **EVEN, under the floor**: the mean moved less than 0.5%. **EVEN, the same**: no change at all. **The runs disagree**: runs moved 0.5% or more in opposite directions, so the test is unstable there and is looked into. **Shown, not judged**: a gauge declared in advance as shown only, such as the knob's own setting.

Why these three words: they are the words of underwriting and actuarial work, where every outcome is graded as surplus, break-even or deficit, and each letter spells out the same rule. Omni-Compass is there to add (GAIN), never to take (LOSS), and to hand a muscle back to its own native setting where it cannot add (EVEN). Its first rule is do no harm, in the founder's meaning of 19 October 2026: the organism

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Omni-Compass governs is never left turning out less than its native controllers make it turn out, nor less healthy, and every muscle works only as far as its own limit (`DISCLOSURES.md`, section 3). So **LOSS should never appear**: where it does, the row stays in the table, its cause is found and fixed (our own wiring first, then native's setup, then the scoring) and the test is run again.

Disclosure and disclaimer: GAIN, EVEN and LOSS, and the letters behind them, are The Omni-Compass LLC's own convention for reading its own results. The underwriting senses explain the words; they are not an actuarial, financial or insurance opinion, and no outside body defined, reviewed or approved them. A reading states what our own runs measured against native under the declared aims, not a promise about any other system; every number stands beside its word, so a reader can judge it by any other convention. Run and scored by The Omni-Compass LLC's own code. No outside party has reviewed or approved these results. Preregistered means the rules were written down in our own repository before the runs; nothing was filed with any outside body.

How to read a number beside a word. The word comes first and settles the direction; the number is the size, and it wears the word's sign so the two never pull apart: GAIN +29.6% on pods waiting means 29.6% fewer pods waited than under native (a fall in waiting is the gain, so it is written with the plus of the word, never with the minus of the gauge); LOSS −2.3% on alert minutes means 2.3% more minutes over the line; EVEN =0.9% means a 0.9% difference the noise covers; power given +3.1% means 3.1% more of a resource put in to buy the work beside it. The gauge's own direction is never hidden: on the page, hover any word or any coloured number and it says what the word means and why the number wears its sign, and where the page knows the gauge, what rose or fell against native (the page's section iv, "How to read a number beside a word"; the founder's order of 23 October).

What You Are Looking At

A live tuning engine, and one tuned engine. The page is a live tuning engine: every knob, button and monitor on it turns in real time, native alone, Omni-Compass on top, or both, and **any knob can move every metric, up or down**. Every benchmark is one engine at one tune, the factory tune; any other setting shows the engine's range, never a benchmark result (the page's first box, `#tuningBench`; section 1.1).

What the live engine is. The live engine is one web page, `docs/engine/OMNI_COMPASS_LIVE_ENGINE.html`, built by the repository's own code (`docs/engine/build_live_engine.py`) from the engine that stands and from the repository's own results. It is a monitor of the engine and of the benchmark runs GitHub ran: every number on it is read from a record the repository holds (a three-run table, a run's raw files, the engine's own audit, the realms table, the models' own readings), and every word on it (GAIN, EVEN, LOSS, power given) is that record's own reading under `tools/readings.py`. The page decides nothing about any result and types nothing in. Where it plays the repository's own models (evidence class S) it says so, and a model is never proof.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

What "native" and "Omni-Compass" mean on the page. Two names today, a third ordered on 23 October (below). *Native* is the whole system running by itself: every autoscaler, scheduler, firmware, thermostat, orchestrator and controller it ships with, every muscle wired and moving by its own machinery. *Omni-Compass* always means Omni-Compass on top of native: the same whole system with all of that still running underneath, and the governor on top of all of it, wired in through the two-way plug. No third side exists anywhere on the page. Native is drawn in orange, Omni-Compass in blue, in every chart, table, tile and number.

The third arm, Omni-Compass by itself (the founder's order of 23 October, `docs/SOLO_PREREGISTRATION.md`). The same system with each muscle's own native controller switched off and Omni-Compass the only controller moving that knob: on Kubernetes no pod autoscaler and no cluster autoscaler, while Kubernetes' own scheduler and kubelet stay. Where native is a setting rather than a controller (a cache's memory ceiling, a pool's size) the two Omni-Compass arms are one and the same arm. On the page the arm that was called Omni-Compass is now called Omni-Compass and native wherever an arm is named (the chips, the table heads, the lanes), and the third arm's column appears in every table from its first run on GitHub's machines, once the engine that carries it lands; nothing is written for it before. Until then every two-arm reading on the page is native against Omni-Compass and native.

What a monitor is. The page is laid out as an operations monitor is: a wall of tiles at the top (the status board), each tile a small copy of a monitor further down the page; then the monitors themselves, section by section, each with its own knobs in a bar at its head ("Controls"). A knob marked *Live* acts on the live engine, the engine's own mathematics running in the page; a knob marked *Recorded data* only chooses which record is shown and never modifies it. Every monitor shows native beside Omni-Compass on the same demand, the same seconds, so the one difference left between the two sides is Omni-Compass.

What a gauge is. A gauge is one measured quantity of the system (the work waiting, the work done, a response time, the machines in service, the energy drawn, a bill). On the page each gauge is drawn for both sides with its paired reading: the change from native, its 95% interval, and its word. The word is decided by what the gauge is for (the key, above), never by the sign of its number.

How to read the page, in order. The page is ordered by what the person watching the system needs first, down to what they need least (the founder's order of 24 October), and this manual follows it, chapter by chapter. First, watch: the control panel and the kill switch (the page's section 1a), the status board's alarms and watch items, worst first (1b), the monitor wall with a light on every monitor (1c), every LOSS row with its cause and its knob (1d), and the golden signals, the event log and the live metrics (1e). Then the three arms side by side, live: native, Omni-Compass on native and Omni direct (2a), the organism live (2b), the console with every knob and the native switch (2c) and the heartbeat dial (2d). Then what it bought: the benefit board (3a), the whole organism every way it is bought (3b) and the measured effect in full (3c). Then the evidence, stack by stack, from the cloud down to the chip (4a to 4f); the brain (5a to 5e); the failure modes (6); the proof, the Python's runs, the C++ twin and the mathematics (7a to 7c); and last the reference pages (8a to 8d).

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

What this manual is, and is not. It is the interpretation of the page: how to follow the dashboard, read each gauge, turn each knob, and see the mechanism of action of Omni-Compass against native as the monitors show it. Nothing in it decides a result: the records of authority are the repository's result files, the raw files GitHub archived with their SHA-256 lists, the two other manuals and `DISCLOSURES.md`.

Quick Reference: The Card for the Glove Box

Keep this card beside the screen that shows the wall. Every line is explained in the chapter named beside it.

The two sides (chapter 3). Orange is native, the system by itself. Blue is Omni-Compass on top of native. Nothing else is drawn.

The three words (the key). Green GAIN, yellow EVEN, red LOSS. A resource that rose is *power given*, blue. White with a dashed edge is *the runs disagree* or *the runs differ*; grey is *shown, not judged*; neither is a reading.

The switch (chapter 4). At the top of the wall. Green ON: the governor's outputs reach the muscles. Red: the kill switch engaged, every setting handed back to native at once, the decisions shaded red. White OFF: the brain reads in shadow and nothing it computes leaves it; every Omni-Compass side follows native in native's colour.

The four signals (chapter 6). The work waiting, the work done, the decisions past their line, the capacity held: latency, traffic, errors and saturation in site-reliability terms; native beside Omni-Compass on each.

The alarms row (chapter 5). Every reading that went against native, worst first, each with its source record and its root-cause document where one exists. ALERT, WARN, INFO as an operations log grades them.

Where a number comes from (chapter 29). Click the tile: it opens the monitor it is a copy of. The monitor names the table, the run and the file; the file's SHA-256 was matched before it was drawn. Open the table in `results/live/`; open the raw files on the `raw` branch.

When a tile reads LOSS (chapter 30). The row stays. Read the three-run reading, not the one run. Open the root-cause document. The cause is found in this order: our wiring, native's setup, the scoring. The test runs again. Nothing is tuned toward GAIN; where Omni-Compass cannot bring a knob a gain, that knob stays native.

The console (chapter 9). Every knob acts on both sides alike. Demand ×1 is the day as written; noise σ, sensor delay, and four faults of 40 decisions each (a surge, half the machines lost, a sense blind, a security hold); the dial (the max or the tune-down); pause, one decision, 1× to 60×; the same day again or a new day; every knob to its start.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

The age of the page (chapter 26). The last tile of the wall. The page is rebuilt by GitHub on every change to the engine, a model or a result, and every three hours.

What the page is not (chapter 31). It decides nothing. Class S views are models, not proof. The records of authority are the result files, the raw files and their SHA-256 lists, the manuals and `DISCLOSURES.md`.

Disclosures, Declarations and Disclaimers

This page is the one place every declaration about Omni-Compass is made. The README, the manual, the book, every guide and every report point here. Where any other page seems to say more than this page, this page governs.

Rights

1. Omni-Compass, its engine, its mathematics, its software and its documentation are the property of The Omni-Compass LLC. All patents, copyrights and trademarks covering them have been filed in the United States by The Omni-Compass LLC. No filing number is stated here, and no grant, registration or approval is claimed.
2. The software is licensed for evaluation and simulation only (`LICENSE`). Running it in production, on any system beyond evaluation, or in any product or service, requires a signed, paid Omni-Compass Enterprise License.
3. Names of other companies and products (NVIDIA, Kubernetes, Red Hat OpenShift, Amazon EKS, Google GKE, Microsoft AKS, Karpenter, Lambda and others) are the property of their owners. They identify the systems Omni-Compass was tested with or connects to. No affiliation, endorsement or certification by any of them is stated or implied.
4. All rights reserved. The Omni-Compass LLC reserves the right to change the software, the documentation, the results and the terms at any time, without notice. Every copy, fork, export, report, archive or printout of any part of Omni-Compass carries the README's notice, `LICENSE`, `NOTICE` and this page unchanged. The Omni-Compass LLC, www.omni-compass.com

What a result is, and what it is not

1. Every result carries its evidence class: **T** a theorem, **V** verified in code, **S** our own models (modelled), **L** live software (real Kubernetes on GitHub's machines), **P** a physical meter (a real card's own power meter). A model is a statement about the model. A software benchmark is a statement about the software and machine it ran on. Only a meter speaks for hardware.
2. The models were written by the same people who wrote the law. They show how the mechanism behaves; they are not an independent test.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

3. On Kubernetes in kind every machine stays powered, so energy there is a declared model, not a meter.
4. Every comparison is paired: the same seed, load and clock with and without Omni-Compass, in an order rotated by repetition. Intervals are 95% intervals over the paired repetitions. Ratios across seeds are summarised as geometric means. Labels are assigned by code from rules written and committed before the run (`docs/GPU_PREREGISTRATION.md`, `docs/REALMS_PREREGISTRATION.md`, `docs/K8S_COMPASS_PREREGISTRATION.md`), never by hand.
5. Losses and failed runs are kept beside the wins (`docs/EVIDENCE_LEDGER.md`, `results/live/`, git history). The first real-card run, for example, saved energy (+3.6% work per energy, proven) and made the slowest answers 58.5% slower; it is published as it happened.
6. No result is a promise of a saving on any other system. No dollar figure in this repository is a measured result. Nothing here is a vendor certification, a safety certification, legal advice or investment advice.

Do no harm, and the rule Omni-Compass keeps on every muscle

What "do no harm" means (the founder's words of 19 October 2026; this is its meaning everywhere in Omni-Compass, and it has no other). Omni-Compass has one goal: to strengthen the organism it governs and keep it healthy, working at the best state its own muscles can carry. Whatever is fed into the organism (its work, its data, its energy: its nutrients) passes through its muscles and comes out as its output. Omni-Compass's brain drives the organism toward the most and the best output it can make from what it is fed (the most work, done fastest, with the fewest misses and failures) while it keeps every muscle healthy.

- **Harm is judged at the organism.** Harm is the organism turning out less than its native controllers make it turn out (less work done; more time waited, missed or failed), or the organism made less healthy: a muscle pushed past its own limit, a service pushed over its own line, or anything made to fail. Omni-Compass does neither.
- **Every muscle only as far as it can go.** Omni-Compass can push a muscle only as far as that muscle itself can be pushed: its own limit, read live from the system, never past it. It finds the room each muscle already has and uses all of it. Whether its mathematics can draw a little more out of a muscle than the muscle was built to give is an open question; a measurement answers it before anything is claimed.
- **The muscles work as one body.** Where one muscle's strength cannot be used without straining another, the brain offsets and engages the muscles together to bring the whole organism to its best state. It may use one muscle less, leave it native, or rest it, so that another can carry more, whenever the organism's whole output comes out ahead and every muscle stays healthy. Which muscles to drive and which to leave native is the brain's live decision, at every moment and in every run.
- **Reactive and proactive.** Like an immune system, the brain answers a breach at once, and it acts before a line is crossed.
- **Every row is still shown.** Each muscle's and each gauge's reading stays in every table beside the organism's, LOSS included. Nothing is cut.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

How the engine that stands keeps it. The engine that stands keeps do no harm in its strictest form. By default it moves each muscle's settings toward more work, faster, up to the muscle's own limit and never past it (the max); on the dial anyone can tune it down toward the same work with less (the tune-down). Either way it keeps a step only where the muscle is never behind native for it: a step that costs the muscle more for each piece of work, or loses more than **2%** in any measure (work done, response time at the median, p95 or p99, time over the service line, or the machine's own cost of running Omni-Compass), is undone. A resource spent that rose is **power given**, shown beside the work, the speed and the wear it bought, never called a loss. Where no move passes that test, Omni-Compass leaves the muscle exactly as it runs alone. It takes nothing from one muscle to give to another: that form never harms the organism, but it leaves unused any gain that needs one muscle to give way to another. Letting one muscle give way so that the organism's whole output comes out ahead, judged on the organism and on every muscle's health, is the next engine version's work. It is built and proven in our own models first (the toy gate), every benchmark is run again on it, and no result claims it before its runs exist.

The factory tune: one tuned engine, and a tuning bench. The engine in this repository is presented as The Omni-Compass LLC tuned and ships it: self-running, set at the factory. Every muscle in the catalog is wired and runs on the setting found for it (its own card where one was found on development seeds and kept under the strict rule, 364 muscles in `realms/muscle_cards_v5.csv`; the engine's own setting for every other), frozen and fingerprinted by version (`python3 tools/omni_version.py`); no setting is presented as universal. **Every published benchmark result is one engine at its one factory tune**: the engine its table names (`python3 tools/omni_version.py`), run again on each engine that stands. From omni-v17 that tune is held to a declared rule (`docs/THE_TUNE.md`, `tools/tune_study.py`): of the tunes that harm no gauge against native, the one against which no other tune tried reads GAIN on one service gauge and LOSS on none, searched on development seeds and read again on untouched ones; the claim is non-dominance among the tunes searched, never a global optimum. The live engine page and the control panel are a live tuning engine: every knob, button and monitor turns in real time (the beat, the dial, the pedal, each muscle driven or left native, up or down, in or out, minus or plus) to show the mechanism of action with native alone, with Omni-Compass on top, or both side by side; what it shows at any other setting is the engine's range, never a benchmark result. As on any engine, where the mixture, the intake, the exhaust, the firing or the pistons change what it delivers, **turning any knob of Omni-Compass can change every metric, up or down, in any direction a tuner chooses**: one engine for many vessels, tuned many ways, for many outputs. A licensee may add on, retune, upgrade or tune down any muscle or combination (the dial, the cards, the bands and the service lines are exposed); a changed tune is the licensee's own, and so are its results. The factory tune is published only where it reads no LOSS: a LOSS found in The Omni-Compass LLC's own runs is treated as a fault in the mechanism or its wiring, found and fixed before the result is published, never as a number to live with (the founder's order of 23 October 2026). The one place a LOSS is meant to be seen is the live engine, when a person turns its knobs away from the factory tune (the dial, the heartbeat, the sizes, the load) to watch the system react and the brain hold or recover: that showing is the proof that the mechanism can be broken only by leaving it, and a changed tune's readings are the licensee's own.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

The wiring declaration

THE PUBLISHED BENCHMARKS ARE THE RECORD OF WHAT OMNI-COMPASS DID ON THE SYSTEMS, LOADS AND ENGINE THEY NAME, EACH WITH ITS EVIDENCE CLASS. WHERE A RESULT ON ANY OTHER SYSTEM DIFFERS FROM THEM, OR ANYTHING LOOKS WRONG, THE FIRST PRESUMPTION IS THE WIRING, THE SETTINGS, OR HOW OMNI-COMPASS WAS IMPLEMENTED OR READ, NOT THE LAW. CHECK THOSE FIRST (THE MANUAL'S "WIRED RIGHT OR WIRED WRONG") BEFORE DRAWING ANY CONCLUSION ABOUT OMNI-COMPASS.

Omni-Compass acts only through the wires it is given. It reads the meters it is pointed at and moves the settings it is allowed to move. If a reading is the wrong one, slow, or blind; if a lever is the wrong one, already owned by another controller, or given a range (cover) that is wrong for the machine; if a band or a service line is set for a different workload; then Omni-Compass will do exactly what its law says with the wrong information, and the result will not be the published one.

Therefore:

1. **It cannot be slapped on.** Every installation goes through the levels of the manual in order (chapter 6), starting read-only, and every writing level begins with the wire check (manual, section 4.4) and a watch arm that must equal native.
2. **If your paired receipts differ from the published benchmarks in direction** (service LOSS, or no saving where one was shown), **the first presumption is wiring, not the law.** Confirm the installation with the checks in the manual's section 4.5 (*Wired right or wired wrong*) before drawing any conclusion about Omni-Compass.
3. **This has happened to us, and is published.** On the first real card (NVIDIA A10, 2026-10-02) the governor read being busy as trouble, set its power lid under the card's own working draw and allowed the clock under the card's own working clock; the card served bursts more slowly and the slowest answers were 58.5% slower. The cause was found in the card's own samples and corrected (`docs/GPU_PREREGISTRATION.md`, amendments 6 and 7). That is what a wiring fault looks like, and how it is found.
4. Omni-Compass never writes outside a lever's cover, never fights another writer (it stops and leaves that lever alone), reads back every write, and returns every lever to the value it read before its first write when it stops or when the OFF switch is used. These protect the machine; they do not make a wrong wiring right.

Safety and responsibility

1. Run watch mode first; run the wire check before any write; keep the master OFF switch (`python3 tools/omni_switch.py off`, the whole harness at once) in reach at every level, and use it at the first sign of anything wrong, a suspected breach included.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

2. Omni-Compass is a supervisory governor. The machines' own controls (firmware, autoscalers, safety systems) stay in place and keep their own protections; Omni-Compass sets only values they already accept.
3. Do not connect Omni-Compass to safety-critical systems (vehicles, medical devices, grid protection, life safety) except as a modelled study, and never without the qualified review those systems require.
4. The software is provided "as is", without warranty of any kind, as stated in `LICENSE`. The operator is responsible for its use on their systems.

Changes to the work and to this page

1. The software, the law's settings, the benchmarks, the results, the documents, the licensing terms and this page may change at any time, without notice. The version in the repository's `main` branch at a given commit is the version that commit describes; `RELEASE_MANIFEST.json` and `python3 verify.py` identify it.
2. Statements about work in progress, planned features, expected results and future runs are expectations, not promises. Where a result has not yet been measured, the documents say so (`docs/STATE_OF_PLAY.md`, `docs/DOSSIER.md`, section 8).
3. A signed Omni-Compass Enterprise License governs its own terms for its own term.

Privacy and data

Omni-Compass contains no telemetry. It sends nothing to The Omni-Compass LLC or anyone else, and makes no network connection of its own except to the systems an operator points it at. Its logs and receipts stay on the operator's machines.

Where everything is

Question	Page
What has been measured, and how strongly	`docs/STATE_OF_PLAY.md`, `docs/DOSSIER.md`, `docs/EVIDENCE_LEDGER.md`
The rules written before each run	`docs/GPU_PREREGISTRATION.md`, `docs/REALMS_PREREGISTRATION.md`, `docs/K8S_COMPASS_PREREGISTRATION.md`
How to wire it, level by level, and how to confirm it is wired right	`docs/OMNI_COMPASS_MANUAL.md` (chapters 4 and 6), the book `docs/OMNI_COMPASS_MANUAL.pdf`

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Question	Page
The license, in plain answers, and third-party components	`LICENSE`, `LICENSING_FAQ.md`, `ENTERPRISE_LICENSE.md`, `NOTICE`, `THIRD_PARTY_NOTICES.md`, `PATENTS.md`, `TRADEMARKS.md`, `SECURITY.md`, `.github/CLA.md`
The muscles, what each is for and how it is wired	`docs/MUSCLE_CATALOG.md`
Proof the code is the code that ran	`python3 verify.py`, `RELEASE_MANIFEST.json`, `results/SEAL.json`
The live engine: every monitor, its feed and its knobs; the third manual, how to read and operate it	`docs/engine/OMNI_COMPASS_LIVE_ENGINE.html`, `docs/engine/monitors.json`, `docs/OMNI_COMPASS_LIVE_ENGINE_MANUAL.md` and `.pdf` (the Live Engine Manual's Appendix L, the page word for word: `docs/engine/PAGE_WORD_FOR_WORD.md`)
The whole organism, composed every way it is bought	`results/WHOLE_SYSTEM.md`, `tools/whole_system.py`, `docs/engine/export_whole.py`, `docs/WHOLE_SYSTEM_PREREGISTRATION.md`
The Python's runs that the live engine runs again	`tools/engine_runs.py`, `results/engine_runs/`, `results/heldout_seed_*/`

The whole organism, the cloud's back end, and the live engine

The composition is a model of measurements. `results/WHOLE_SYSTEM.md` (`tools/whole_system.py`) composes each layer's own measured ratio, native against Omni-Compass on top of native, into one benefit for a whole stack: the product law $R(g) = \prod_\ell R_\ell(g)$ gauge by gauge, its logarithm a sum with the variances added, each layer's runs A, B and C pooled by the inverse of their variances, and one index over the gauges with its 95% interval under two bounds (the gauges independent; perfectly correlated). No run here has stacked the layers: each factor is one layer's own run with the layers under it native, and the product assumes a layer's ratio does not change when the layers around it also carry Omni-Compass. That assumption is tested where the tables can test it (the governors' four ways), and the stacked run that replaces the composition is preregistered in `docs/WHOLE_SYSTEM_PREREGISTRATION.md`. Until it runs, the composition is class S of class P and L measurements, and every page that shows it says so.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Every way a stack is bought. The same law is read four ways (`docs/engine/export_whole.py`): on-site bare metal (the software on the owner's own racks and chips); through the cloud (the cloud's build, its bare metal at the back end and the software; and the cloud as two pieces, the back end left to the provider); in the device (Omni-Compass in the bare metal alone, the card and the machine); and as a service (the software alone, for an owner with neither bare metal of their own nor a cloud account). A piece with no measurement enters as exactly 1 and is named.

The cloud's back end is not ours to meter. Through the cloud, the bare metal belongs to the provider: no tenant can read its power meters or write its chips' limits, and no run here reaches it. The cloud piece's benefit is what the provider itself meters and bills, the machines counted every fifteen seconds and the bill at list price, read native against Omni-Compass on top of the cloud's own autoscaler; fewer machines held for the same work is also the provider's own benefit on its own hardware. The bare-metal piece is gauged on hardware we can meter (a card's own power meter; a processor's energy counter) and is carried to the provider's bare metal only as the same mechanism on the same kind of part, a modelled factor, never as a measurement of the provider's machines.

The organisms. The seven organisms of the catalog (the spine, the four realms, the four stacked, the tower), the orchestra beside them, and the whole stack composed above, counted by the founder as the eighth organism running native and the ninth with Omni-Compass on top of every piece. Every one is read native against Omni-Compass on top of native; none is a product.

The live engine. `docs/engine/OMNI_COMPASS_LIVE_ENGINE.html` is a monitor of the repository's records and of the engine's own mathematics running in the page. Every monitor carries its evidence class (P a physical meter, L live software, S our own models) and its state: live (the engine's port, proven equal to the Python and the C++ on every build by `docs/engine/check_live_engine.py`), a replay of a recorded run from its own files, a reading of the repository's tables, or built and awaiting its run. A monitor awaiting its run carries no invented number: its native lane shows what exists, its Omni-Compass lane stays empty, and the page names the run that fills it. The CPU host monitor plays the harness on its own modelled machine until a machine with its energy counter runs it; the GPU card monitor replays the one metered run of 2 October, made by a card controller replaced since, until its run on Lambda on the engine that stands lands. The kill switch on the page acts on what runs in the page: every Omni-Compass side follows native at once, and a recorded result changes its colour, never a value, a word or a row. The page's own seeded runs reproduce the Python's (`tools/engine_runs.py`) receipt by receipt, with one SHA-256 digest on each side; the 500 scenarios of `benchmarks/stack_benchmark.py` are replayed from their record with every trace hash, not recomputed in the page. The wall's Grafana dashboard (`deploy/grafana/omni-compass-wall.json`) names the open-source exporters and series that would carry each monitor on a running system; the page itself reads no live system.

The three manuals. The Operator's Manual wires and runs Omni-Compass; the Owner's Manual holds the whole mechanism and every result; the Live Engine Manual reads the live engine top to bottom, monitor by monitor and knob by knob. Each carries this notice, the `LICENSE`, the `NOTICE` and this page, and none of them changes what a result says.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

PART ONE

The Page as a Monitor

What the live engine page is: a monitor of the engine and of the runs GitHub ran, never a drawing; how it is built, its table of contents, and its two sides and three words.

CHAPTER 1

A Monitor, Not a Drawing

1.1 What the page is

The live engine is a monitor of the Omni-Compass engine and of the benchmark runs GitHub ran. A monitor shows what its instrument reads; a drawing shows what its author believes. The page is the former by construction: every record it replays is made again by the repository's own code on the checkout it is built from, and `--check` fails a page whose engine is not the one `python3 tools/omni_version.py` reads. So the page never runs ahead of the repository: when a new engine stands, the build stamps it on the page and rebuilds every record on it, and the page says in a banner that its prose was written for the older engine until a person realigns the words.

It is also a live tuning engine, a tuning bench. Its buttons turn the engine's knobs in real time: the heartbeat from 5 to 120 s, the dial between the max and the tune-down, the pedal, each muscle driven or left native, up or down, in or out, minus or plus. Turning them shows the mechanism of action and its variations with native alone, with Omni-Compass on top of native, or both side by side. As on any engine, where the mixture, the intake, the exhaust, the firing or the pistons change what a car's engine delivers, **turning any knob of Omni-Compass can change every metric, up or down, in any direction a tuner chooses**: one engine for many vessels, tuned many ways, for many outputs. The records the page replays are something else: the main engine's one tune, the factory tune, as the benchmarks ran it. That tune is chosen by a declared rule: of the tunes that harm no gauge against native, the one against which no other tried tune reads GAIN on one service gauge and LOSS on none, searched on development seeds and read again on untouched ones (`docs/THE_TUNE.md`). What the page shows at any other setting demonstrates the engine's range and is never a benchmark result; a tune other than the factory tune belongs to its tuner, and so do its results. The first box at the top of the page says which is which (`#tuningBench`). The beat on the dial (the page's section 2d) is one such knob: the factory tune runs it at 60 s, and every other beat is shown beside native with what it buys

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

and what it costs, as range, never as a result. Each muscle's own setting is part of the same factory tune: its card where one was found under the same rule, the engine's setting for the rest (`realms/muscle_cards_v5.csv`).

1.2 The five records

The page carries five kinds of record, and every monitor says which it plays.

Record	Made by	What it holds	Class
The harness	`docs/engine/export_harness_trace.py`	the realms harness (`realms/harness.py`, the max of `realms/compass_arm_v5.py` with the bone, the twins and the immune system): one organism of sixty muscles, and each muscle alone, native and with Omni-Compass on top, decision by decision	S
The controller	`docs/engine/export_controller_trace.py`	the shipped Kubernetes governor (`omni_controller/controller.py`) on the toy cluster, on top of the autoscaler at the max and in the cloud's setting, every tick and every audited decision, runs A, B and C of six hours	S
The runs	`docs/engine/export_runs.py`	the official runs as recorded: every three-run table's runs A, B and C read back from their raw files, every file's SHA-256 matched against the run's own list, every Kubernetes repetition scored by `tools/live_reps.py` and checked against the run's result	L
The scenarios	`docs/engine/export_scenarios.py`	the GPU card (`realms/gpu_card.py`), the Linux host (the conveyance of `tools/toy_gate.py`), every muscle and organism of the realms table (`results/realms_v5`), and every judged row of the newest engine's receipts (`results/live/V13_*.md` as they land)	S, with the receipts' own classes

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Record	Made by	What it holds	Class
The build	`docs/engine/build_live_engine.py`	the engine, its digest and the commit; the time; GitHub's runs in progress and queued; every run started for the chips and the clouds (`docs/engine/github_ledger.json`)	the record of the build

1.3 What runs live

Three parts of the engine run in the page itself: the brain (`omnicompass/core.py`), the compass law (`omnicompass/compass_law.py`) and the verdict (`omnicompass/verdict.py`), each ported to the browser and proven equal to the Python and the C++ on every build by `docs/engine/check_live_engine.py`. They drive the stress-test model of sixty muscles (the page's sections 2b, 2c, 5a to 5c) and the page's own render loop (the page's section 8d). Nothing else computes on the page: every other monitor plays a record.

1.4 What the page decides

Nothing. Every word on it is the reading its record carries under the one key (`tools/readings.py`), applied once, in the repository, when the table was written. The page never reads a word off the stream it draws. When a monitor has no record yet (a cloud set still running, a chip run not yet started), it says what the repository holds and shows nothing in its place: the empty slot is itself a true reading of the record.

1.5 The appraisal

Every view of the page is reproduced from the repository's own code by an independent path and compared value by value (`docs/engine/APPRAISAL.md`; rerun with `docs/engine/check_live_engine.py` and `docs/engine/check_records.py`). The brain's mathematics agree to machine precision; the harness views and the live controller are identical to the repository's own runs on every tick and every plant. Chapter 33 says how to rerun the appraisal on your copy.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

CHAPTER 2

The Engine Table of Contents and the Numbering

2.1 The page's own contents

The page opens with its legal notice (i), then the title page with the build (ii), the problem and the answer: what the whole industry faces and how Omni-Compass addresses it (iii), the executive summary with the reading key (iv), and then its own table of contents (v, "Engine table of contents"): the founder's orders of 21 October, the title, the problem and the solution, the summary and the key first and the contents after them. Beside the title, on a desktop, stand the owner's two illustrations, one above the other (on a phone they sit under the title): the stacks Omni-Compass sits on top of as he pictures them, and under it the Omni-Compass as the unified control authority. Each says under it that it is an illustration, not a result, that the product marks in it belong to their owners with no endorsement stated or implied, and what the engine draws over it: a ring at every decision of the live engine; on the rose two hands, native's (orange, the longer) and Omni-Compass's (blue), each at the mean place of that side's muscles in their bands, calm at north and the line at south; on the control core a glow that grows with the settings Omni-Compass wrote in that decision; and under each, that decision's counts. The marks are the engine's state (the page's section 2b), never a number of the picture's own. The body is numbered in eight parts, 1 to 8; the back matter is vi (disclosures, governing law and contact) and vii (the closing legal notice). A section's number is printed before its title; a lettered section (1a, 4c) is a section inside the numbered part that holds it, and every section of a part is lettered, one letter for each of its panels, with no unnumbered entry in the contents; part 6, the failure modes, is one section and carries no letter.

2.2 The sections, as built on omni-v18

Appendix A lists every section with its anchor and the chapter of this book that reads it. In the page's order: 1 watch first (1a the control panel and the kill switch, 1b the status board, 1c the monitor wall, 1d every LOSS row, 1e the golden signals, the event log and the live metrics); 2 the three arms, live, and the knobs that turn them (2a Omni direct: the three arms, 2b the organism live, native and Omni-Compass, 2c the console, 2d the heartbeat dial); 3 the measured effect (3a the benefit board, 3b the whole organism, every way it is bought, 3c the measured effect in full: the organisms, every muscle, the register, the grid and every three-run table); 4 the evidence by stack (4a the clouds, 4b the orchestrators and governors, 4c Kubernetes, the official run playback, 4d Kubernetes, per-repetition telemetry, 4e the shipped controller's decision trace, 4f the chip and the host); 5 the brain (5a one cycle, 5b the phase plane, 5c the brain's state, 5d the verdict, 5e the telemetry analytics and Omni-Compass in its own words); 6 the failure modes; 7 the proof (7a the Python's runs in the page, 7b the

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

C++ twin, the Python's runs through the C++ engine, 7c the component specification and mathematics); 8 reference (8a the monitor list, 8b the master switch's wiring, 8c the pipeline, 8d the self-governed rendering).

2.3 Anchors

Every section has an anchor that does not move when the page is reordered: `#s-problem`, `#s-read`, `#p-health`, `#s-health`, `#s-status`, `#s-wall`, `#s-loss`, `#s-feed`, `#p-organism`, `#s-direct`, `#s-engines`, `#s-desk`, `#s-dial`, `#p-effect`, `#s-board`, `#s-whole`, `#s-fleet`, `#p-evidence`, `#s-cloud`, `#s-orch`, `#s-ops`, `#s-runs`, `#s-live`, `#s-stacks`, `#p-brain`, `#s-decision`, `#s-plane`, `#s-brain`, `#s-verdict`, `#s-lab`, `#s-fail`, `#p-parts`, `#s-proof`, `#s-cpp`, `#s-math`, `#p-ref`, `#s-monlist`, `#s-master`, `#s-github`, `#s-self`, `#s-disclose`. The anchors kept their names when the page was reordered on 24 October; a part's anchor names the part that holds it now. A tile on the wall links to the anchor of the monitor it copies; a row of the table of contents links the same way. When this book names a section it gives its title and its anchor, so the reader finds it on a page whose numbering has moved.

2.4 The order, and why

The founder's order of 24 October: the page in its hierarchy of importance to the person studying and watching the system, first, second, third, down to the least important. The order is the order an operator's screens are laid out in industry (the overview and the alarms first, then the units side by side, then the detail and the diagnostics): is anything wrong now, and can I stop it (the switch, the alarms, the wall and every LOSS); what are the three arms doing this second, and what can I turn (the arms live, the console, the heartbeat); what has it bought (the board and the whole); where is the proof, stack by stack (the evidence); how does it think (the brain); where can it fail (the failure modes); how is it proven equal to its code (the Python, the C++ and the mathematics); and what is wired to what (the reference). The disclosures close the page as they open it.

CHAPTER 3

The Two Sides and the Colours

3.1 The sides

Native is orange, Omni-Compass is blue, everywhere: every line, bar, tile and number that belongs to one side wears that side's colour, in every chart and table, and the word native itself is orange wherever it stands on the page. Where a monitor draws the two sides on one axis, native is the left lane or the upper row; where it draws them as two instances (the organism, the phase plane), native is on the left.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

3.2 The words

GAIN is green, EVEN is yellow, LOSS is red. Every reading, in every table, chart, bar and tile, wears one of those three colours, or blue for power given, and no other. Power given wears blue, Omni-Compass's own colour, because it is what Omni-Compass put in. *The runs disagree* and *the runs differ* are white with a dashed edge, and *shown, not judged* is grey, because none of them is a reading. The size printed beside a word is how far the gauge moved from native and carries the word's own sign (GAIN +, LOSS −, EVEN =), never the gauge's raw direction. A change under half of one percent either way reads EVEN, under the floor.

How the executive summary counts (the consensus audit of 21 October, `docs/engine/CONSENSUS_AUDIT_2026-10-21.md`). Its first line counts the three-run tables of Omni-Compass against its native apart from the orchestrators' own cost: the four-ways tables in which Omni-Compass is in neither arm, or on the other side of the comparison, are counted in a sentence of their own and never in Omni-Compass's words. The floor reads every judged word, GAIN, LOSS and power given alike, in the tables, in the models' live judges and in the cloud's tally. A model's gauge that has one value a run (the Linux host's pod start wait and its 95th percentile) has no interval, so it is shown, not judged, with the way it moved and its size. And the line says which engines the tables stand on, so a reader never takes a table of an older engine for the engine that stands.

The audit of 22 October (`docs/engine/CONSENSUS_AUDIT_2026-10-22.md`). Five seats read the page again on omni-v16, each on one dimension: the mathematics and the readings, the underwriting (evidence, provenance, claims), the editing (tone, terms, consistency), the structure (hierarchy, order of comprehension, navigation) and the visual layout as rendered. That page carries each seat's grade part by part, the consensus grade, every finding merged with what was closed in the same push, and the order of the page the structure seat proposed, with its cost, for the founder's decision.

3.3 The sides are never a reading

Blue does not mean good and orange does not mean bad: they name who is being read. Where the two sides look the same, they are the same, and that is EVEN. Where Omni-Compass's blue line sits closer to a muscle's line than native's orange one, that is the max at work: every muscle to its own limit, never past it, and the capacity it holds there is power given, shown beside the work and the speed it bought.

3.4 The signals

Every monitor carries a signal beside its name, and every section a signal beside its heading (the worst of its monitors), read like a road's, each with its word:

Signal	Shape	Word	It means
red	the stop-sign octagon, blinking	**redlining**	a gauge over its line

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

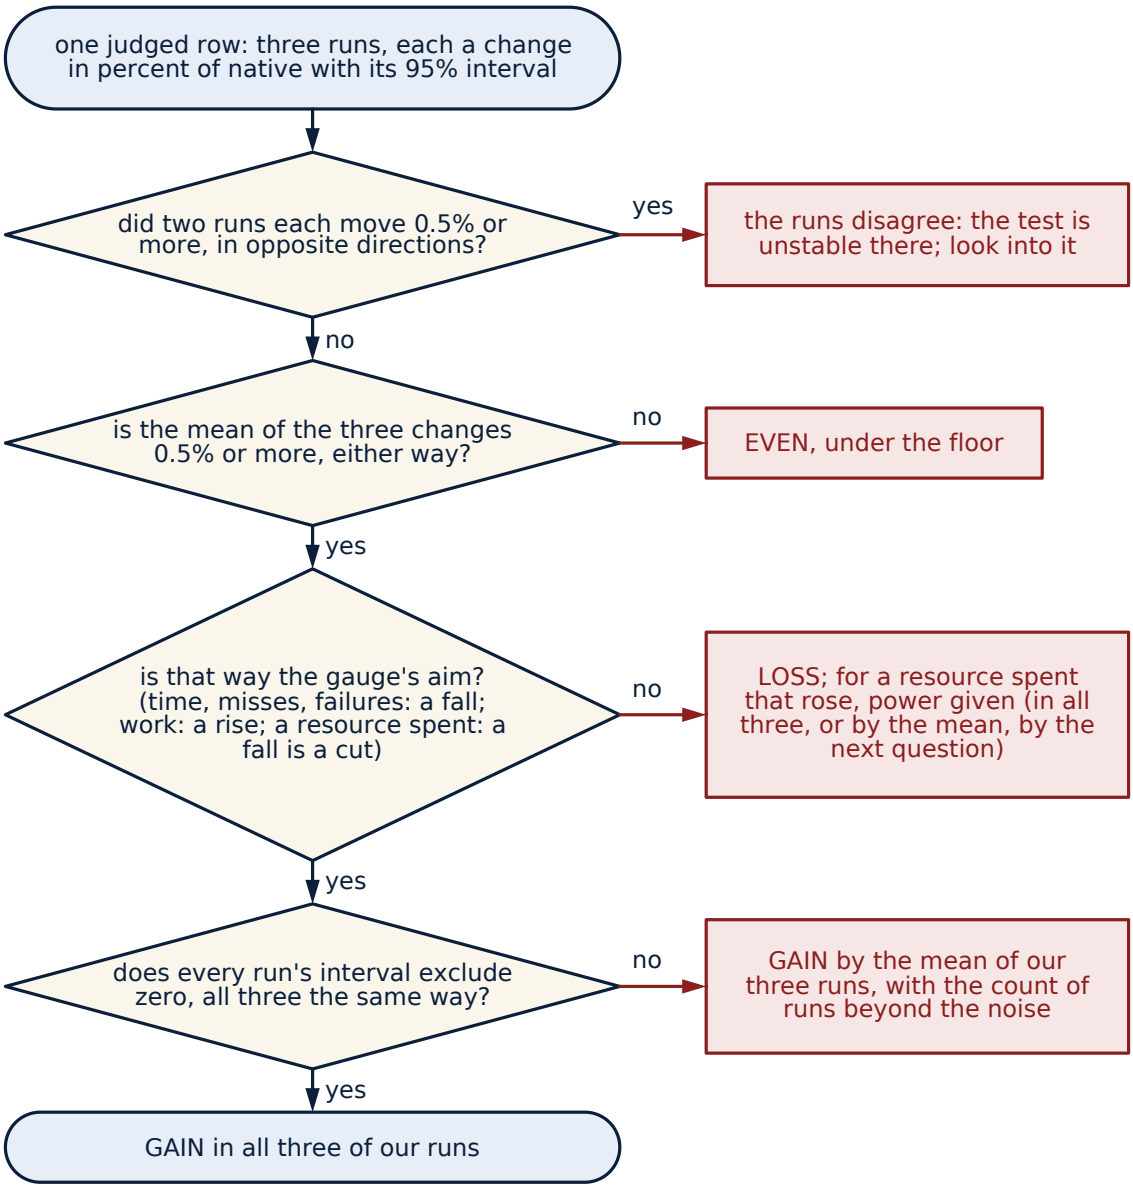


Figure 1. Flowchart: how a gauge's number becomes a word. The gauge's declared aim is read first: time waited, missed or failed, where a fall is GAIN; work done, where a rise is GAIN; a resource spent or held, where a fall is a cut (GAIN) and a rise is power given. Three runs A, B and C, each a paired change in percent of native with its 95% interval: runs that moved 0.5% or more in opposite directions disagree; a mean under 0.5% reads EVEN, under the floor; from 0.5% the word follows the aim, in all three of our runs when every interval is clear of zero the same way, by the mean of our three runs otherwise, with the count beyond the noise. The page draws exactly this rule, as tools/readings.py writes it.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Signal	Shape	Word	It means
yellow	the yield diamond	**steady**	a gauge within its band of a line, or heading for one by its own slope over its last readings: watched
green	the circle	**accelerating**	every gauge inside its lines, room to go
grey	a bar	**no line**	nothing on this monitor has a line to watch (a count, a bill, a digest)

Red is never a circle and only green is ever a circle, on the signals and on every marker the monitors draw; a side's swatch in a colour key is a bar. Hover a signal for the reading behind its word. The wall's line under the board counts the signals and prints the engine's own last act beside them, because the brain reads the same slope and acts before the line.

3.5 The answer first and the bench line

The page opens, straight under the legal notice, with **the answer first** (`#s-answer`, written by `tools/headline.py` from the engine that stands's own three-run record): native, Omni-Compass on top of native and Omni-Compass direct, each with its signal and its work, response, machines and units, and the two bills, on-site and through the cloud, each a total cost and reading *unresolved* wherever a price or a part is missing. Under the wall's signals stands **the bench line**: the architecture governing now (native alone, Omni-Compass on top of native, or Omni-Compass direct), the active profile (the factory profile of the engine that stands, or a custom profile with every knob that differs named) and the backend (this page's own model, class S; a recorded run where a monitor says so; the running software behind the control panel once it is connected). Two controls stand apart: **Restore factory profile** reapplies the released configuration, every knob back, Omni-Compass staying on; **Return to native** hands governance back to native and restores native's own settings (the kill switch). The heartbeat's buttons are its six stops, 10, 15, 30, 60, 90 and 120 s; 60 s is the factory's, and 10 s shows the governor faster than the 15 s the Kubernetes project ships.

3.6 The marks

A kill-switch window is shaded red across every time axis. A monitor on screen now carries an accent border on its tile. A tile with no reading says what it shows (a count, a state, an age) and carries no colour of a word. A row shown and not judged (the knob's own setting, the governor's own commands, Omni-Compass's own processor time) is grey and counted in no total. A ring that opens and fades at the head of a line is the decision that has just landed on it, and the small box beside the head prints that line's newest value, as a quote board prints the last price. A box drawn round a row, a cell or a bar of a record monitor is its reading cursor: it walks the record one row for each decision of the live engine, and the row it holds is named under the monitor; the record itself changes only when GitHub's next run rebuilds the page. An age printed beside a reading of GitHub ("read 06:16 UTC, 41 min 07 s ago") counts up every second.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

3.7 A live governor, driven from the control panel

Under the control panel stands **A live governor**. Everything else on the page runs in the page; this box talks to a real governor through its own control panel (`tools/omni_control.py serve`, started with `--allow-origin` naming the address the page is served from, and HTTPS beyond the loopback). Give the panel's address and a token of yours (held in the page's memory only, never stored) and press **Read its status**: the switch, the desired and the actual state, the governor's process and the age of its last decision, read again every 15 seconds. The buttons are the panel's own: **Autopilot**, **Watch** (it decides and audits every decision and writes nothing), **Off** (it hands every setting back and stops), **The max** and **Tune-down**, **Set the beat** (its six stops, 10, 15, 30, 60, 90 and 120 seconds), **Reset to native**, and the **Kill switch**. Each press carries a reason, needs its role (a viewer reads, an operator presses, the kill switch needs the security role, and arming it again needs two holders of that role), and is written to the panel's control log; every change passes through native, the governor handing back and starting again with the new setting. Every press is answered in the box in the order a command lives: *requested* (what was asked), *accepted* by the panel and *pending* until the governor's next status reads it applied, or *refused* with the panel's reason and nothing changed. A wrong token is answered 401, a missing role 403, and the box says so.

PART TWO

Watch First: the Switch, the Alarms, the Wall and Every LOSS

What the person watching needs first, in the page's order (the founder's order of 24 October): the master switch and the kill switch, the alarms, the golden-signal feed, the event log and the metrics exposition, and the monitor wall.

CHAPTER 4

The Master Switch

4.1 One switch for the whole organism

The master switch (the page's section 8b, `#s-master`; its kill switch heads the page's section 1a) is wired at the top of the organism: switch, brain, organism, every muscle, as the repository builds it

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

(`omnicompass/master.py`, `tools/omni_switch.py`). It holds the brain's outputs. Every governor on the page is registered with it and obeys it at once; on a real machine every governor exits at the switch.

4.2 The three states and their colours

State	Colour	What it means on the page	What it means on a real machine
ON	green	the brain's outputs reach every muscle; every monitor shows Omni-Compass acting on top of native	the governors run; every write read back; the lease renewed each beat
Kill switch engaged	red	every lever handed to native at once; the decisions shaded red on every time axis; the event log records the engagement and its clearing	`python3 tools/omni_switch.py off`: every governor hands back and exits, and none starts again until `on`
OFF	white	the brain keeps reading the native body in shadow, so its monitors keep moving, and nothing it computes leaves it; every Omni-Compass side follows native, drawn in native's colour, dashed	the governor in watch mode writes nothing (the Operator's Manual, level 1); off, it is not running

No monitor is switched off by the switch. That is deliberate: the operator sees what the brain would do while it does nothing, which is the watch level of every installation.


4.3 The table under the switch

Governor on this page; where it lives (the module, the section); its state; what it does at the switch. Every governor the page runs (the stress-test model's, the harness's, the live controller's replay, the page's own render governor) is a row, so there is no governor on the page that the switch does not reach.

4.4 What a kill-switch window looks like

Press the kill switch on the console (chapter 9) and every time axis on the page shades the window red from the press to its clearing. Inside it, Omni-Compass's lines fall onto native's; the governor's ticker (the page's section 4c) is empty, for nothing decides on top of native; the phase plane's right-hand dots take the left-hand positions. When the window clears, the lines part again where the governor's first decision lands.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

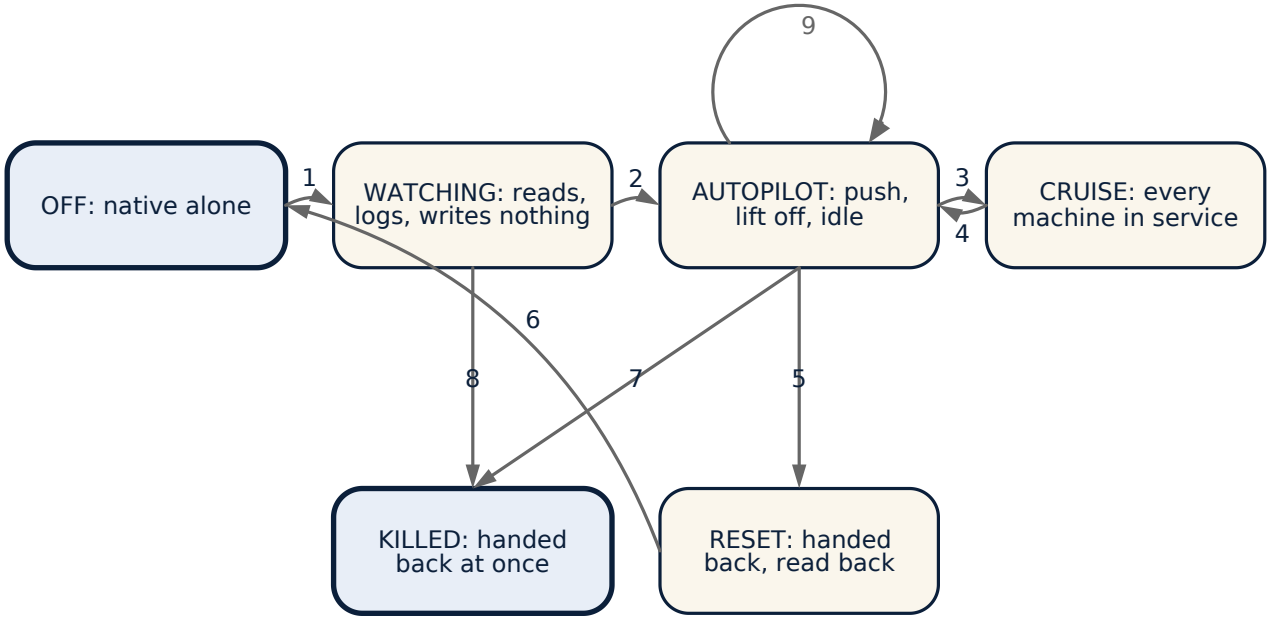

1 level 1 · 2 the wire check passed; level 2 and up · 3 pods waited 2 decisions · 4 the line empty 2 decisions · 5 the reset file: the end of a run · 6 exit 0 · 7 the kill switch, from any mode · 8 the kill switch · 9 idle at once when demand is at zero

Figure 2. State machine: the governor's modes. OFF is native alone; WATCHING reads and logs and writes nothing; AUTOPILOT pushes, lifts off and idles; CRUISE holds every machine in service while a known queue waits; RESET hands every setting back and reads it back. The kill switch leaves every mode for OFF at once; the lease walks a crashed governor's settings back to native. On the page the switch's three states are ON (green), the kill switch engaged (red) and OFF (white, the brain reading in shadow).

CHAPTER 5

The Alarms, the Feed, the Event Log and the Metrics

5.1 Alarms and watch items, by severity

The alarms table under the wall lists every reading that went against native and every open item (a run that ended without a measurement, a slot not yet run), graded ALERT, WARN and INFO as an operations log grades them, each with its item, its reading, its source and the repository's record. Filter by the three grades with the buttons at its head. An ALERT is a judged LOSS in a three-run table on the engine that stands; a WARN is a LOSS in one run of a table not yet complete, or a run that stopped before a result; INFO is a watch item.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

5.2 The golden-signal feed

One point per decision streamed from the live engine, gapless, the last 240 decisions, each signal on its own axis, with each side's last, mean and maximum as a time-series dashboard reports them; a kill-switch window shaded red; native in orange, Omni-Compass in blue, the same demand on both. The feed is the four signals of the wall at full size and full history.

5.3 The event log

The live engine's own events as it emits them, newest first, with the wall-clock time and the decision: a threshold breach and its clearing on either side, every injected fault and its end, the kill switch, the dial, a new day, and the brain's calm crossing the grant threshold. The log is what an operator reads to answer "what happened at 02:14": the decision number ties it to every other monitor.

5.4 The OpenMetrics exposition

The live engine's metrics in the OpenMetrics text format, the exposition format Prometheus scrapes and Grafana charts, refreshed every two seconds. They are: engagement (the switch), the decision index, breaches, work, band time, actuator moves and reversals per side, and frame time; then the verdict's keep ratio at each true cost (chapter 22), the three-run tables' rows by class and reading, and the build's engine, digest and commit. *Copy the exposition* puts the text on the clipboard, so the page's own metrics can be pasted into a scrape target and charted beside the stack's.

CHAPTER 6

The Monitor Wall

6.1 The numbered monitors and the control panel

Every monitor of the page (every chart canvas) carries its number in a badge above it, counted in its order of appearance from 1 at the top of the page to the last at the bottom; the page's section 1c shows them all at once on the monitor wall, numbered, read left to right and then down, as any page is read (the founder's order of 21 October), and a click on a tile scrolls to the monitor it copies. Two monitors that sit side by side in their section, native beside Omni-Compass, sit side by side on the wall too: a pair never splits across two rows, on the wall or on the page at any width. Each section names its monitors in the engine table of contents, and each badge names its section, so a monitor and its section read each other both ways. Under every monitor a strip carries its knobs: the kill switch, the console's knobs where the monitor is live, and its own buttons where it replays. The monitor list beside the wall (the page's section 8a, `#s-monlist`) gives every monitor by its

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

number, what it shows, its section, each monitor's evidence class, its state (live, replay, record, model or awaiting its run), the open-source exporter and series that would carry it on a running system, and, where it waits, the run that fills it; the whole wall is also a Grafana dashboard (`deploy/grafana/omni-compass-wall.json`), its panels numbered as the page numbers its monitors and laid out left to right, each under a row for the page's section that holds it, each carrying its wiring. The control panel (the page's section 1a, `#s-health`) holds the kill switch, the button that runs the Python's own seeded runs in the page (they also run on their own as the page opens), the three manuals and the wall's dashboard. The proof monitor (the page's section 7a, `#s-proof`) reads every run three ways: the Python's set as GitHub ran it (`tools/engine_runs.py`, its run linked), the same draws through the C++ harness on the engine's C++ twins (`cpp/tools/engine_runs.cpp`), and this page's own port, one SHA-256 digest each beside the digest of the draws themselves; the three must be one. Once that first check ends, the page checks the set again without end: one run at a time, about twice a second, each run recomputed from its own seed by the page's engine and held against the Python's receipt; the run being checked is boxed on all three lanes and its result printed under the digests. Appendix L lists every monitor under its number. On Grafana the wall opens with its own row of signals in the same words (the heartbeat, the senses, the master switch, the alarms firing), its knobs at the top (route, provider, machine, rate window, the control panel's address) and the panel's buttons as a link; `docs/MISSION_CONTROL.md` stands it up beside Omni-Compass in one command, with the alarms wired to the panel's operator buttons through the alert bridge.

Every monitor's wiring. Under every monitor one line names its wiring (`docs/engine/monitors.json`): the page's own code, the Python it ports or reads, the C++ twin or why there is none, the checks that hold them equal, each file linked at the build's commit, and how it moves; the monitor list carries the same. A live monitor runs the page's port of the engine, held equal to the Python by `docs/engine/check_live_engine.py` and the Python to its C++ twins by the parity tests; a replay plays a record the Python wrote, held equal to its source by `docs/engine/check_records.py`; a record reads a measured table as written, so no C++ applies.

The motion meter. The page watches itself as the viewer sees it. Every monitor in view is photographed small once a second; one whose picture changed in the last three seconds reads ● **moving** on its badge and in its row of the list, one in view for three seconds without a change reads ● **still** (and says so when the engine is paused). A monitor off screen rests, as the page's own governor rests it (chapter 27), and its row keeps what it did when it was last in view; the note under the list counts the monitors seen so far and how many of them moved. Scroll the page once from top to bottom and every row reads what its monitor does.

The switchboard stands with the wall, between its signals and its tiles: one breaker for every monitor, numbered as the wall numbers them and grouped by the page's parts, a breaker for each part (*all*) and the **main breaker**. A breaker off cuts that monitor's feed: its tile leaves the wall, its canvas in its section is drawn dimmed and says it was switched off at the switchboard, and its signal reads no line; a breaker on brings it back. A part's breaker throws every monitor of that part together, and the main breaker every monitor on the page. Each breaker carries its monitor's own signal (the stop-sign octagon, the diamond, the circle, the grey

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

bar), so the box reads at a glance which circuits are redlining. The switchboard changes what is watched, never the engine: no setting, knob or profile moves when a breaker is thrown.

6.2 What the wall is

The wall (the page's section 1c, `#s-wall`) is every monitor of the page in one view: the same canvases the sections draw, copied small four times a second, so nothing is drawn twice from different data. Every tile carries at its top its number and its title in capital letters, what the monitor shows, and under them its section and its state (live, replay, from the records, a model, or awaiting its run), so a tile says where its monitor is and what it represents before it is opened. Click a tile and the page scrolls to the monitor it copies. The page's own governor (the page's section 8d, chapter 27) leaves a monitor resting while it is off screen; every monitor is drawn once as the page opens, so no tile waits for its section to be scrolled to, and while the wall is in view the resting monitors are drawn in turn, one a frame, each by its own drawing code; a tile with the accent border is a monitor on screen now.

The light on every monitor (the founder's order of 23 October). Each tile carries a light in its top right corner, and each monitor the same light beside its number on the page (its shapes and words in section 3.4): the green circle, *accelerating*, while the gauge the monitor draws is inside its lines; the yellow diamond, *steady*, before the line, when the gauge is within 3% of it or when its own slope over the last readings, carried three readings ahead, crosses it; the red stop-sign octagon, blinking, *redlining*, when it is over; a grey bar where the monitor has no line to watch (a bill, a count of runs), and the light says so. The light reads the series the monitor draws and adds no number: on the live engine, the muscles against their lines; on a cluster replay, the 95th percentile against the 200 ms line and the pods waiting for a place; on the heart, the decision's own time against half its beat; on the CPU host, the busy share against the 75% line; on the card, the draw against its power limit; on the page's own governor, the time between frames against 1.5 frames; on the proof, the page's runs against the Python's (green when the digests match and every number is within 1e-9, red when they differ); on the governors and orchestrators, their own three-run tables; on a record, the judged rows of the newest tables (a LOSS row lights red and stays). A light fed by our own models says so (class S). Above the wall a line counts the lights and names the monitors heading for a line or over one, beside the engine's own last entry on its side. The three-reading projection is the light's own: the brain's law acts on the position inside its band and damps on the position's rate of change, with a fail-up at the band's 95% wall; it projects nothing ahead. Hover a light for its reading.

6.3 The order of the board

The board is laid out the way an operations monitor is. The switch and the engine come first. Next come the live organism's signals, native beside Omni-Compass, in the four a service is watched by (latency, traffic, errors and saturation in site-reliability practice): here the work waiting, the work done, the decisions past their line and the capacity held. Then every reading of the real and modelled runs that went against native, worst first. Last come GitHub (the runs in progress and queued) and the age of this page. A tile's word is its reading against native by the key; a tile with no reading says what it shows.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

6.4 Reading a signal tile

Each signal tile holds the last 120 decisions of both sides, native solid orange and Omni-Compass blue, each side's value now, and the running paired reading in the tables' words. With the master switch OFF the decisions are shaded red and Omni-Compass's side follows native: its value equals native's and its line is drawn in native's colour, dashed on top of native's, so both stay in view.

Signal	What it is	Its aim	A GAIN reads
The work waiting	the queue in front of the muscles: requests, jobs or pods not yet served	time waited: lower	the blue line under the orange one
The work done	the requests served, the jobs finished, the work inside the line	work done: higher	the blue line over the orange one
The decisions past their line	the share of decisions where a muscle's reading stood past its line (a miss)	missed: lower	the blue line under the orange one
The capacity held	the machines, replicas or clock a side holds in service	a resource held: a fall is a cut, a rise is power given	either way is shown beside the three above; a rise that bought nothing is a cost to find

6.5 Reading an alarm tile

An alarm tile is a judged row of a real or modelled run that read LOSS, or a run on the engine that stands that terminated without a measurement. It names its gauge, its size with the word's sign, the table or run it came from, and the repository's root-cause document where one exists (`docs/POD_START_WAIT.md`, `docs/TAIL_LATENCY.md`, and the others). The alarms are ordered worst first by their size. Chapter 30 is what to do with one.

6.6 The age of the page

The last tile. It counts from the build's time, printed in the title block, to now on the viewer's clock. A page older than three hours and a few minutes means the rebuild did not run or did not land (chapter 26); the records on it are still true for the build they name.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

PART THREE

The Three Arms, Live, and the Knobs That Turn Them

Native, Omni-Compass on native and Omni direct side by side; the organism live with each muscle's own knobs; the console with the native switch; and the heartbeat dial.

CHAPTER 7

Omni Direct: the Three Arms

7.1 What it shows (the page's section 2a, `#s-direct`)

From omni-v18 Omni-Compass's own orchestrator is part of the engine, and every organism it runs is shown three ways. **Native** is Kubernetes' published autoscaling rule on the muscles (written by The Omni-Compass LLC from the published rule), every machine on and the units spread. **Omni on native** is Omni-Compass on top of that rule: the rule's units and never fewer, with Omni-Compass's reflex, conveyance, room rule, packing and parked machines above them. **Omni direct** is Omni-Compass alone on the muscles, no Kubernetes beneath it. The section draws the three arms from the showing's own record (`results/orchestrator/`), class L.

The arm buttons (**All three**, **Native**, **Omni on native**, **Omni direct**) choose the arms drawn on the four monitors: the work answered each step, the 95th percentile each step (with the service's line), the units serving each step (with the units' top) and the machines on each step (with the machines there are). Native is orange, the two Omni-Compass arms blue, Omni on native dashed and Omni direct solid. The step slider walks the run step by step, and every monitor's light reads the step it stands on. The master switch shows native alone.

Under the monitors stand three tables. The first reads every pair (Omni on native against native, Omni direct against native, Omni direct against Omni on native) on the four gauges by the one key, each word with its direction in words, from the one run of each arm on one host (the quick form). The second gives each arm's totals in that run: requests answered, failed and wrong, the 95th and 99th percentiles, machine-minutes, unit-minutes and the processor conveyed. The third is the full form's three runs on GitHub's own machines, A, B and C from one commit (`results/orchestrator/V18_THREE_ARMS_ABC.md`): each pair and gauge with each run's word and the one rule's reading of the three: a change of 0.5% or more, the mean of the

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

three runs, reads GAIN, LOSS or power given by the gauge's aim (in all three when every run's interval is clear of zero on the same side, otherwise by the mean of the three with the count beyond the noise); under 0.5% it reads EVEN, under the floor; runs that moved 0.5% or more in opposite ways disagree. Work aims up; the 95th percentile aims down; units and machines are resources, so a fall is a cut, a GAIN, and a rise is power given.

On a real machine each arm is the control plane started with its brain (`python3 -m omni_orchestrator.control --brain yardstick`, `omni_native` or `omni`), and its kill switch is the control plane's kill file: the brain off, the declared state held, every conveyed wall handed back.

7.2 Each muscle's own knobs

Pick a muscle on either ring and its card opens with its own switch (Omni-Compass on it, or handed back to native) and its own knobs: **− 1 unit** and **+ 1 unit** (the muscle's smallest setting), **to its floor**, **to its top**, and **let go**. A knob is a person's hand on that muscle's lever on the Omni-Compass side, held for 20 decisions and never past the muscle's own limits; then the hand lets go and the engine moves the muscle again. Turn one and watch the band, the dots and the immune system answer it: this is the one place the page lets a reader push a muscle away from the factory tune by hand, and see whether the body holds or recovers. The factory button takes every hand off at once.

CHAPTER 8

The Organism, Live

8.1 The two instances (the page's section 2b, `#s-engines`)

The system rendered as an organism: each node is a muscle (one controlled actuator) and each ring its operating range. The left instance runs under its native controllers alone; the right runs the same controllers with Omni-Compass's brain, nerves, heart and immune system supervising them. Three buttons choose the body: *each muscle alone* (native, then on top, one at a time), *one organism* (the sixty muscles in one body) and the *stress-test model* (the console's sixty muscles). Evidence class S: our own models, shown beside the real runs and never presented as proof.

8.2 Reading a ring

A ring is a muscle's band drawn as a circle: calm at the inner edge, the line at the outer. The muscle's live value is the ball on the ring; the reference, the knob at native, is marked. Under the max a muscle is moved only where it has room above native; a muscle already at its limit on native is left native by design and its ball

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

sits where native's does. The counters under each ring and the scoreboard (chapter 20) give both sides and the difference. Where the two sides look the same, they are the same.

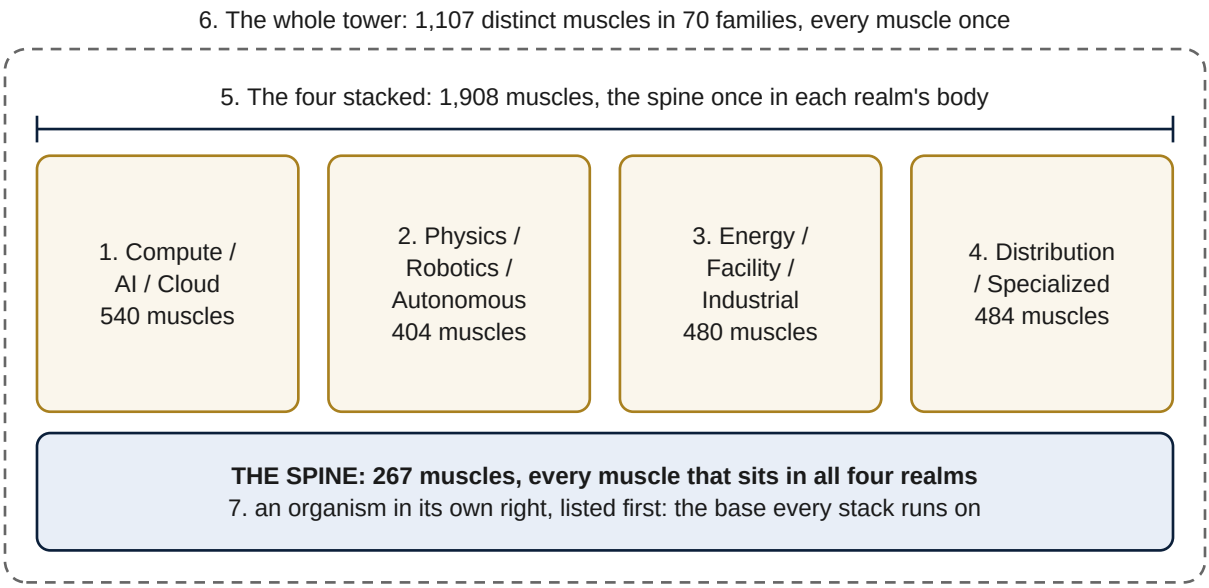


Figure 3. The seven organisms. The spine (267 muscles, every muscle that sits in all four realms), the four realms (Compute/AI/Cloud, Physics/Robotics/Autonomous, Energy/Facility/Industrial, Distribution/Specialized), the four stacked, and the whole tower of 1,107 muscles in 70 families. The organism monitor plays one organism of sixty muscles and each muscle alone; the benefit board (chapter 12) carries all seven.

8.3 The body scan

As a scan reads a living body organ by organ, this reads the system playing in the page's section 4c (the benchmark, run and repetition chosen there), organ by organ, half minute by half minute, from its own SHA-256-checked files: native beside Omni-Compass. Each organ names what it reads; where native has no such organ (the governor's heart, the nerves) the cell says so.

8.4 The immune system, live

The immune system is Omni-Compass's; native runs on its own controllers. Every room and every machine pool has a native twin: the same muscle under its own controller, on native's heat and load, the body's memory of healthy. A room that stands warmer than its twin is inflamed. Where its own knob can cool it, it is cured on the spot. Where it cannot, it sends the whole body a signal, its heat debt, like a cytokine calling for help, and the other muscles answer: the machine pools give back what Omni-Compass added until the room stands no

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

warmer than native's. The skeleton (the bone: the power and cooling lines the whole body shares) grants nothing it cannot carry. A cooling setting is walked back, never snapped. On the monitor an inflamed room is marked, its heat debt is a bar, and the pools' give-back is seen on their rings.

8.5 The anatomy

Part by part, in the order of control: the brain first, the whole organism last. Each part names what it reads, where it lives in the code, and its measure on this run.

CHAPTER 9

The Control Console

9.1 What the console is (the page's section 2c, `#s-desk`)

Runtime parameter control and fault injection on the live engine: load scaling, noise injection, sensor latency, capacity loss, a demand surge, a sensor blackout, a security hold, the dial, and the kill switch. Every control is applied to both sides identically; the response is plotted per decision, native beside Omni-Compass. The engine these knobs turn is the engine's own mathematics running in the page: the brain, the compass law and the verdict, proven equal to the Python and the C++ on every build. It governs the stress-test model's sixty muscles, each on top of its own native controller. The knobs move the live engine in the page's sections 2b and 5a to 5c, and the kill switch and the frame load also move the page's own render governor (the page's section 8d).

Back to the factory tune. One button, on the console under the kill switch, on the dock, above the wall and in every monitor's own knobs, puts back two things at once: the engine's tune as it ships (`DISCLOSURES.md`, section 3: the dial at the max, every muscle driven, Omni-Compass ON, the 60 s beat) and the page's plant at rest (the day as written, demand ×1, noise σ 0, sense delay +0, no fault held, speed 1×, running, no frame load, and the heartbeat monitor on 60 s, on-site, pods waiting, against native). It says what it put back. Turn anything, break it, watch it break; this button brings all of it back (the founder's order of 23 October). Native alone is not a tune: it is the kill switch.

9.2 Do no harm, at the console

Every control acts on both sides alike; what Omni-Compass does with them is held by its guards: no muscle driven below native or past its own limit, nothing taken from one muscle to give to another on the engine that stands, a give-back tried against native first and refused on a LOSS. Its one meaning is written once, in `DISCLOSURES.md`, section 3, and the page's back matter carries it.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

9.3 Every control

Appendix B lists each control in a table. In reading order:

Control	Marked	What it does, on both sides
Demand (×)	LIVE	scales every muscle's demand from this decision on; ×1 is the day as written
Noise σ	LIVE	multiplies each muscle's demand every decision by 1 + σ·z, z a fresh normal draw, one draw per muscle shared by both sides
Sensor delay (+8 ms, +16 ms, as it is)	LIVE	adds decisions between what a muscle does and what its controller reads, on both sides: native's controllers and Omni-Compass's law read the same late number
Surge ×2	LIVE, 40 decisions	doubles that body part's demand
Lose half its machines	LIVE, 40 decisions	halves a pool's capacity in service
A sense goes blind	LIVE, 40 decisions	forbids any hand-back (blind means hold)
Security hold	LIVE, 40 decisions	forbids any addition
Kill switch	LIVE	every lever to native at once; the window shaded red; the switch at the top of the wall reads red
Turn Omni-Compass OFF	LIVE	the brain reads in shadow; every Omni-Compass side follows native in native's colour
The dial: the max / tune-down	LIVE	the max: every muscle to its own limit, never below native; tune-down: never more than native, capacity handed back only with the organ's grant and the release gate
Pause, one decision, 1×, 4×, 16×, 60×	LIVE	the console's clock: a decision every 0.9 s at 1×; one decision steps once
The same day again, a new day	LIVE	replays the seed with the knobs as set; a new day draws a new seed
Every knob to its start	LIVE	returns demand, noise and delay to the day as written

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

9.4 What a fault shows

Press *Surge ×2* and watch the page's section 5b: both sides' dots for that body part move up and right; native's controllers each see their own reading one to three decisions late and add in the middle of their range; the compass law pushes at the first decision the position leaves the center, so the blue dots turn back before the right edge while orange ones cross it. Press *A sense goes blind* and the governor's hand-backs stop while its additions go on (blind means hold, never a guess). Press *Security hold* and every addition stops while hand-backs go on. In every case the native side is put through the same fault, so the difference is Omni-Compass alone.

9.5 The native switch: Omni on native, or Omni direct

Beside the dial stands **Native under Omni-Compass**, and the same switch stands on every monitor that shows Omni-Compass on top of native. *On* is the main engine's arm: every native controller runs underneath and Omni-Compass governs on top of it. *Off* switches every native controller on the Omni-Compass side off and leaves Omni-Compass alone on the muscles, Omni direct, by the rule of Omni direct's brain (`omni_orchestrator/brain.py`, its C++ twin proven equal): work waiting adds units now, an up force adds units at once, a down force gives one unit back only after it has held for three decisions with nothing waiting, and no lever stands below its twin, native's own rule computed on the same readings. The native side, on the left, runs as it does. In the live model the switch runs that rule on the sixty muscles (class S); on a monitor that replays a recorded run the switch says whether that record holds an Omni direct arm (the three-arm runs of the page's section 2a do) or not, since a recorded run is never rerun in the page. The kill switch still hands everything to native at once, and the factory button puts the switch back on.

CHAPTER 10

The Heartbeat Dial

10.1 What it shows (the page's section 2d, `#s-dial`)

The governor's heartbeat, its full decision, is a dial from omni-v17 on: the main engine decides every 60 s, and the operator may set any beat (`--interval`: 5, 15, 30, 60, 75, 90 or 120 s, or any value between), the fast checks every 5 s at every beat. The section shows every beat beside native in two tables for each setting the models read (the cloud's: the tune-down, the machines alone; the kind benchmark's: the max, every autoscaler sensed). The first table gives each beat's value and its word against native: the reads of the cluster a day (what a beat buys: about 39,700 at 60 s and 86,400 at 5 s), the governor's own processor, the pods waiting for a place, the 95th percentile, the minutes over the line, the autoscaler's shortfall, the machine hours and the

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

energy per core-hour; the main engine's row is set in bold. The second table gives each other beat's change against the main engine's 60 s, with its word. Read a row across: a beat whose service words read GAIN or EVEN against native and whose cost columns the operator accepts is a beat that can be set. A word of LOSS against native is the engine's at that beat and is listed with every other LOSS row (the page's section 1d, chapter 5). The values are our own models (class S), each beat's mean over seeded days on a plant that moves every 5 s; the real runs at every beat (`docs/PACE_PREREGISTRATION.md`, amendment 3) take their place in the note above the tables when their three runs land. The governor's own screen in Grafana shows the beat it runs at (`omni_heartbeat_seconds`, the median spacing of its last eleven decisions) and counts the time since its last decision in beats of that setting; the staleness alert fires after three, at any setting. The dial is the tuning bench's own example: the factory tune runs the main engine at 60 s, chosen and read again under the rule of `docs/THE_TUNE.md`; any other beat is the engine's range on the page, never a benchmark result, until its own three runs land on that beat and are read as that beat's. A beat set on a live system is the operator's own tune, and its results are its own.

PART FOUR

The Measured Effect and the Whole

The benefit board, the grid and the catalog, then the whole organism every way it is bought, its bills and receipts.

CHAPTER 11

The Benefit Board, the Grid and the Catalog

11.1 The benefit board (the page's section 3a, `#s-board`)

Every domain, native against Omni-Compass, as the repository's benefit sheet holds it (`results/BENEFIT_SHEET.json`, `docs/BENEFIT_SHEET.md`): the domain, the benchmark, its evidence class, its engine, its benefit (one number and one word), its GAIN rows, power given, EVEN and LOSS counts, and where it stands (landed, running, queued, not yet run). Each bar and square carries its own word; the size beside the word never carries a sign of its own.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

11.2 Where the benefit lives, gauge by gauge

Every judged row of every newest three-run table, sorted into the family of gauge it measures. A CTO reads speed, the service level, failures and work. A CFO reads machines, energy and the bill. A plant engineer reads peaks and swings, wear and accuracy, and misses. Each bar counts the rows that read GAIN in all three runs; the size beside it is the median of those rows' own sizes; the largest is printed beside the median; power given and LOSS rows are counted beside them, and the runs that disagree or differ are listed, not counted.

11.3 The trading floor: the market map and the quote board

Every three-run table on the page, read the way a trading floor reads its market (the founder's order of 21 October). The market map is a squarified treemap: one tile a table, grouped by stack, its area the number of gauges the table judged and its colour its reading: green GAIN, deeper the larger the share of its rows that read GAIN; red wherever any row reads LOSS; yellow EVEN; the accent where it gave power; grey with a dashed edge a table of an orchestrator's own cost, with no Omni-Compass in either arm. A reading cursor walks the map one table every one and a half seconds and names it under the map. The quote board gives every table a quote: its ticker (the table's file) and engine, the gauge that moved most with its mean change across the three runs, and that gauge in runs A, B and C as a candle: the vertical bar is the run's 95% interval, the tick its value, the line the zero of no change. The strip under each quote counts the table's rows by word, and a tape runs every headline across the top. Pointing at a tile or a quote shows its record: the table's title, engine, counts, the headline gauge in each run and the file. Every figure is the table's own; nothing is typed in.

11.4 Aggregate: one figure for the whole board

The Omni index (`results/OMNI_INDEX.md`): the geometric mean of the ratios of every measure that enters, where a measure enters only as its three-run reading allows (GAIN, LOSS or power given in all three runs counts; EVEN counts as exactly 1, so nothing inside the noise is claimed either way). Each test is read from its own newest three-run table, no table is pooled across engines, and every row names its table. The index is one number for the board; its row of factors under it is the board's own audit.

11.5 Third-party software still to be benchmarked

The register's slots, in order (`docs/REGISTER.md`): every muscle in them already runs, modelled, in the 1,107-muscle catalog and the seven organisms, native and with Omni-Compass on top; a slot is the same test on the outside world's own software, each queued until its three runs land. A slot shows its status in the register's own words, what is measured (the lines of its preregistration) and the known limits said before the result.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

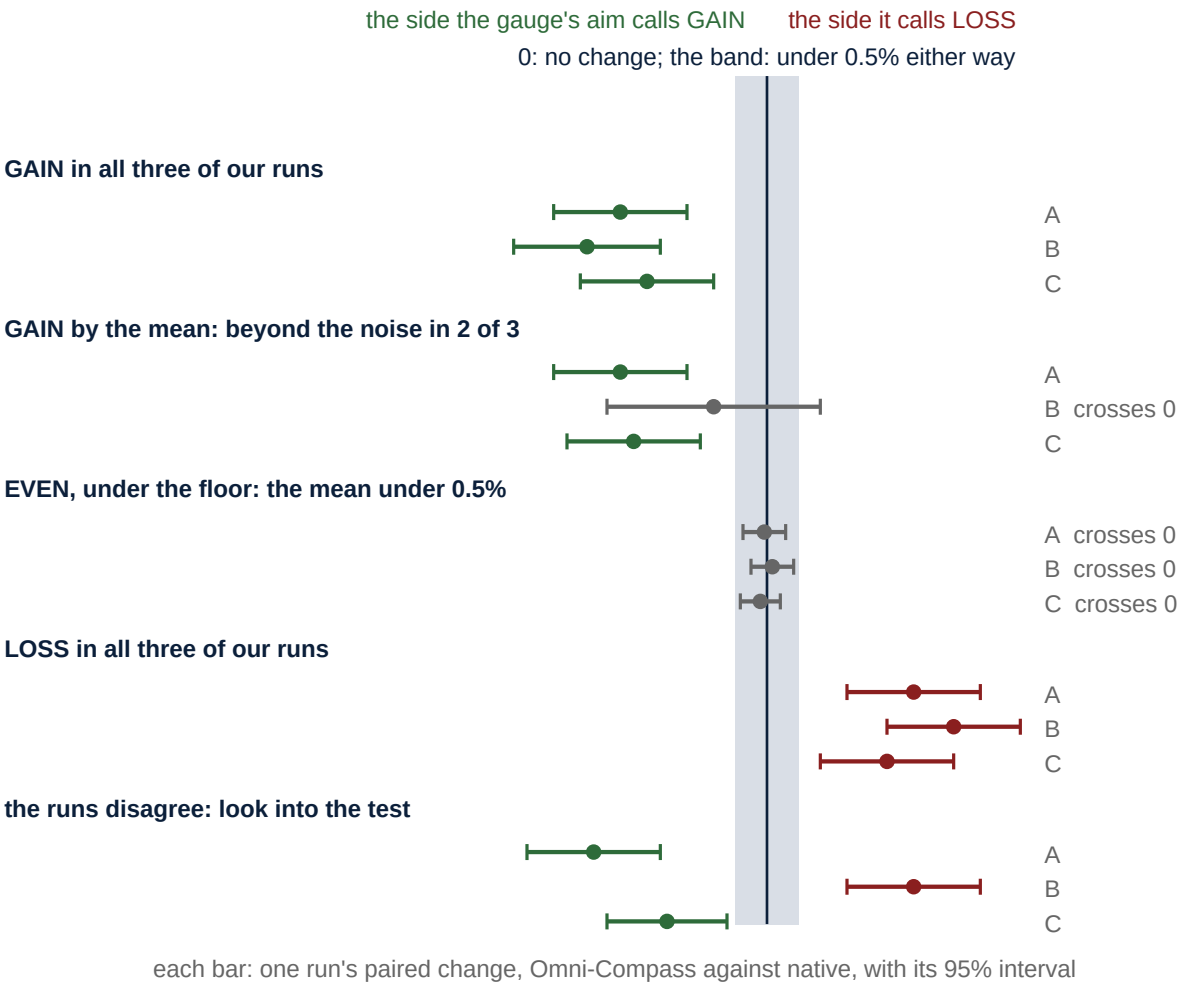


Figure 4. The three-run rule. A benchmark runs three times, A, B and C, on one engine version, each a paired run of native against Omni-Compass. A change of 0.5% or more, the mean of the three runs, is a change (the founder's order of 24 October 2026): GAIN or LOSS in all three of our runs when the three agree in sign with every 95% interval clear of zero, otherwise GAIN or LOSS by the mean of our three runs with the count beyond the noise; EVEN, under the floor, when the mean is under 0.5%; the runs disagree when runs that moved 0.5% or more point different ways. The board and the index count by this rule and no other.

11.6 The scale-out grid

Seven organisms × 1, 10, 100 and 1,000 copies × 1, 10, 100 and 1,000 runs: modelled (the misses) and with the real cluster inside (the 95th percentile), both values shown in every square. The 1,000 tier runs on GitHub's free runners only; paid machines stay at 100. Two buttons choose *the engine that stands: its runs as they land* or *the road: the newest grid with its squares landed*. A square not yet landed says so; a square beyond a free runner's memory or time is listed as pending runner capacity, never rented. The grid's monitor draws the engine that stands' own campaign as GitHub runs it: each square filled by its runs started (pale) and measured (solid), as GitHub was read at the build, with the age of that reading in its heading; the reading cursor walks

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

every started square and names it under the grid. Once the grid's receipt is written, each square takes its word. The road draws the newest grid with its squares landed, under its own engine's name, never read across.

11.7 Every three-run table

Every three-run table in the repository, native against Omni-Compass, every row as written, each benchmark's newest engine's table; open a row to read every judged row that is not EVEN. The table's own rule is printed with it; rows shown and not judged are left out of the counts; a tuning case is shown and never counted.

11.8 Every muscle and the seven organisms

From `results/realms_v5/REALMS_V5.json`, the realms runner at the max, its engine and commit named above it (`tools/run_realms_v5.py`, catalog `realms/catalog_v5.csv`), ten paired seeds per muscle and per organism, the lease after 80% of every run. Misses: the plant decisions over their line, summed over the ten seeds. A muscle reads GAIN when one of its aims (more work, faster, fewer misses) moved beyond the noise under some load with none moving the other way; EVEN at its limit on native when its knob already sits at the top of its range; EVEN, the same as native, when it wrote and nothing moved beyond the noise. Energy is power given where it rose. The seven organisms are listed spine first, then the four realms, the four stacked and the whole tower, each under its own load, the climb and the work waiting in line (the three buttons). Evidence class S: a model's energy is not a meter's.

11.9 Every family, by stack

Each muscle alone, native and then with Omni-Compass on top, grouped by the family of its knob and the stack it lives on; *Find a muscle* searches the 1,107 by name. A family reads GAIN when more of its rows read GAIN than LOSS; the row of a muscle at its limit on native is counted as EVEN.

CHAPTER 12

The Whole Organism, Every Way It Is Bought

12.1 Every way a stack is bought

Omni-Compass is wired into every piece of a stack through its own two-way plug: the software (the cluster, its add-ons, its governors and orchestrators, and the services on it: the pools, the consumers, the caches), the bare metal under it (the chip's power limit and clock; the machine's kernel and its own meter) and, where the stack

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

is rented, the cloud that bills the machines. The whole-organism monitor (the page's section 3b, `#s-whole`) has a button for each way a stack is bought: *on-site bare metal*, the software on the owner's own bare metal (software × bare metal, no cloud); *through the cloud*, the cloud's build, its bare metal at the back end and the software (cloud × bare metal × software), with the cloud as two pieces beside it; *in the device*, the bare metal alone, for one who buys the chip or the machine and no software stack on it; and *as a service*, the software alone, for one who runs it on machines someone else meters. The founder's question of 20 October, which this monitor answers: the cloud is a piece of the stack, bought and billed, and what Omni-Compass does there composes with what it does on every piece beneath it.

A tenant cannot meter the provider's bare metal at the back of a cloud: the cloud's piece is the bill and the machines the provider meters, and the bare-metal piece is gauged on hardware the repository meters and carried to the provider's only as a modelled factor, said so on the monitor (`DISCLOSURES.md`, section 9). A piece with no measured run yet is named and left out of the whole, never filled with a guess.

12.2 The stack, drawn

The stack, native beside Omni-Compass, with the work flowing down through the pieces: the service, the cluster, the governors, the machines, the chip, and, through the cloud, the provider's bill. The dots move at the live engine's demand; the picture is of the flow, not a measurement; each piece's measured factor replaces the picture's weight the moment its three runs land.

12.3 The collective synopsis

The benefits, gauge by gauge, added together over every measured piece: work (more), speed (a shorter 95th percentile), machines (fewer), energy (less), the bill (smaller), and the one number, the index over the gauges. Two readings are offered by the buttons: *every measured piece, every interval carried* (every factor with its own 95% interval, the whole their product) and *the strict reading: the index's rule* (only a factor that reads GAIN or power given in all three of its runs counts; EVEN counts as exactly 1). A third pair of buttons says what to do with a governor that replaces a native controller: *its one run beside the count* or *its one run in the count*.

12.4 The composition

Piece by piece and layer by layer: each factor with its 95% interval, the whole their product. Read the table left to right: the piece and its layer, the five gauges, the index, and the receipt (the table's own row) each factor is read from. A factor's interval that includes 1 is EVEN and multiplies the whole by exactly 1 in the strict reading.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

12.5 Bills and receipts

What native spent (the cost; runs A, B and C), what Omni-Compass spent (the expense; A, B and C), and the benefit (pooled, with its 95% interval), in the units each receipt bills in: machine-hours, dollars at list price, watt-hours of the declared model, the meter's watt-hours where a meter exists. The cost is native's, the expense is Omni-Compass's, and the benefit is their difference read by the key: a smaller bill is GAIN, a larger one is power given, shown beside the work it bought.

12.6 Beyond the count

The governors' tables on this page, the models beside them, the separability test (whether the pieces' factors may be multiplied: the factors are independent where each piece's run holds every other piece at native), and where the missing pieces are: every slot not yet measured is named, and the whole is read without it rather than with a guess in its place.

PART FIVE

Evidence by Stack

From the cloud down to the chip: the clouds, the orchestrators, the official Kubernetes runs and their playback, the shipped controller's decision trace, the card and the host.

CHAPTER 13

The Clouds

13.1 One metric: the bill

In a cloud Omni-Compass shows one thing: the same work as native for a smaller bill, never a bigger one. Every cloud set runs Omni-Compass at the tune-down on the machines alone (`OMNI_MACHINES_ONLY=1`, `--give-back-only`): no pod autoscaler moved, no processor conveyed, no power capped, so the pods are exactly native's. It parks only a machine the cloud already made, after its own trial, and wakes it on a breach. The bill and the machines aim lower; work, speed and failures must read EVEN or GAIN. Azure runs first and is the measure of the other two (Google Cloud, Amazon Web Services): the same tuning, mechanism and

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

harness. Google's and Amazon's sets are not yet run: their queues are switched off (24 October), kept ready as Azure's sets run, and the page reads each of their rows "not yet run" until the founder switches it on.

13.2 The monitor (the page's section 4a, `#s-cloud`)

Each provider's four sets (the steady set, the bursts `1 4 1 6 1 9` and `1 6 1 8 1 6`, the real day of Google 2011 on 1 to 9) and their status: measured to the end (engine, run, started), stopped before a result, or now. Then every cloud run GitHub has started, set by set; the bill on Azure run by run (machine-hours billed native · Omni-Compass; the bill; the 95th percentile; the failed requests), each with the engine it ran on; and the shipped controller in the cloud setting, live: native's machines against Omni-Compass's on the repository's toy cluster (class S), the cloud's own autoscaler running in both arms, its run and speed following the console's clock. Until a provider's first set lands, its bill monitor shows the same mechanism live: the machines billed (in service and booting) of native and of Omni-Compass on the cloud setting's model, decision by decision, marked class S and never that cloud's bill, which arrives with its first set; under it, the provider's newest check in its own words.

13.3 The stopping rule

From 19 October every Azure set runs up to 100 paired repetitions a run, the paid cap, under the preregistered stopping rule (`tools/stop_rule.py`). After 10, 20, 40 and 70 repetitions the bill's change is read with its 99% interval. The run stops once the bill is read (GAIN, power given, or EVEN within ±2% of native's bill), and never while the speed or the failed requests read a LOSS. Those runs carry "to the cap, stopping rule" in their title and count as their own A, B and C. So a cloud set that has run for a day and a half and shows no result on the board is not a fault: its bill has not yet been read at a look, and `peek` (`.github/workflows/peek.yml`) prints its finished repetitions, paired, while it runs.

13.4 Reading a cloud receipt

The rows an operator reads first: machines billed (machine-hours) and the compute bill at list price, both aiming lower; then the response time's mean, 95th and 99th percentiles, the time over the line, the failed requests and the alert minutes, all aiming lower and all required EVEN or GAIN; then the rows shown and not judged: the settings commands the governor wrote on its own (native is 0), the share of its additions decided inside the line, Omni-Compass's own processor time. A bill row whose interval includes zero is EVEN so far and the run goes on to its next look.

13.5 When a cloud is not ready

The conductor starts a cloud's set only after that cloud's newest check passed (`.github/workflows/cloud-check.yml`, `tools/cloud_key_check.py`: the key whole, the login, the plan, the machine type, every quota), at no cost. The monitor shows a failed check as the cloud's status, in the check's own words: a Google key stored cut short (the stored secret shorter than a whole key file)

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

is stored again whole (`docs/GOOGLE_SETUP.md`, section 4); an Amazon account on the Free plan, whose organization policy denies every machine read, is moved to the Paid plan (`docs/AMAZON_SETUP.md`, section 1a); an Azure key stored in another form than the whole block from `{` to `}` (a client secret's value alone, or a storage account's access key, for two) is stored again: one value to each of four boxes, or the whole block under a new name, which leaves a running set's login untouched (`docs/AZURE_SETUP.md`, section 7; Azure joined the check on 22 October). Nothing is built and nothing is billed until the check passes.

CHAPTER 14

The Orchestrators and Governors

14.1 What they are

The governors and orchestrators that sit between the work and the cluster: batch schedulers and job queues (Kueue, Volcano, the KAI scheduler, Armada), multi-cluster governors (Karmada, Open Cluster Management), the default Kubernetes scheduler and its bin-packing profile, the co-location and rightsizing controllers (Koordinator, Crane, CruiseKube, Goldilocks), the GPU and edge orchestrators (KubeRay, KubeEdge, Nephio) and Gödel. Each runs live on real Kubernetes as its project ships it, native and with Omni-Compass on top of it; Omni-Compass never replaces the orchestrator.

14.2 The monitor (the page's section 4b, `#s-orch`)

The road to a result, every governor at once: its register row, its preregistration, its rig on GitHub, runs A, B and C, and its three-run table as it lands. The orchestration stack, live: Omni-Compass on top, the governor native as shipped, Kubernetes and its nodes beneath, the work dots moving at the live engine's demand (a picture of the flow, not a measurement, replaced by the governor's readings the moment its three runs land). The catalog of governors: what each governs, native as shipped, Omni-Compass on top, and what the repository holds today. Click a governor (a tile, a row of the road or of the catalog) to hold it in every view.

14.3 The four ways

The founder's order of 20 October: each governor runs with the organism alone (nativebare), the orchestrator as shipped (native), Omni-Compass on top of the organism alone (compassbare) and Omni-Compass on top of the orchestrator (compass), all four in every repetition, each comparison paired within it and read by the one key (`docs/BATCH_QUEUE_PREREGISTRATION.md`, amendment 6). On the organism alone Omni-Compass sits on top of Kubernetes' own scheduler. The monitor shows the four as four columns of one table per governor; the comparisons an operator reads first are native against compass (what Omni-Compass adds on top of the orchestrator) and nativebare against compassbare (what it adds with no orchestrator at all).

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

In the official-run playback (the page's section 4c) each of a governor's five tables plays its own two arms of the run's repetitions, named on the lanes, the candles, the heat map and the repetition's table by the table's own words, the left lane its reference and the right lane its candidate; Omni-Compass's colour is drawn only on an arm that carries Omni-Compass, so the orchestrator's own cost (the orchestrator as shipped against the organism alone) plays in native's colours on both lanes.

14.4 The orchestra

The eighth organism: every governor's catalog muscles, each governor's a body of its own and all of them together one body, native and with Omni-Compass on top (modelled, class S; `tools/run_orchestra.py`, `results/orchestra/ORCHESTRA.md`). It is a grouping of catalog rows like the seven, never an engine file.

CHAPTER 15

Kubernetes: the Official Run Playback

15.1 What plays (the page's section 4c, `#s-ops`)

A real-time operations dashboard over the benchmark runs themselves (class L), not a model. Every series streams half minute by half minute out of the raw files GitHub archived, each file's SHA-256 matched before a byte is drawn: native (the whole cluster with everything it ships with) against Omni-Compass, the same load, the same second. Pick a benchmark, a run (A, B or C) and a repetition at the head of the section; the tiles, the candles, the heatmap, the bars and the two tickers all move together with the page's section 4d. The data pipeline is its own monitor: every stage from the GitHub Actions run to the page (the run, the raw files archived, the SHA-256 check, the official scorer, the three-run tables, the build, the page) drawn whole, the stage being read lit and the data moving between them. Under the receipt the page holds its own scoring of every repetition against the run's own scored summary (`LIVE_REPS.json`) and prints the largest relative difference: at machine precision (about 1e-16) for every run, the governors that run a group of two clusters included, whose every file the scorer reads at its own place in the repetition's folder.

15.2 The heart

A supervisory governor is only alive while its loop turns: once every decision it reads the whole body, decides, writes, and proves it is still there. That turn is the heart. Each beat pumps every reading in through the plug and the decision out (`omni_controller/controller.py`, its main loop) and renews the governor's lease (`master.heartbeat()`, `omnicompass/master.py`). If the heart stops, its process gone or its lease older than its limit (the larger of 120 s and five beats), the watchdog (`tools/omni_switch.py`

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

`watchdog`) walks every setting back to native: a stopped heart leaves the body exactly as native runs it. Native has no heart of its own: each of its controllers keeps its own clock, the pod autoscaler one sync every 15 s, and nothing proves any of them is still there.

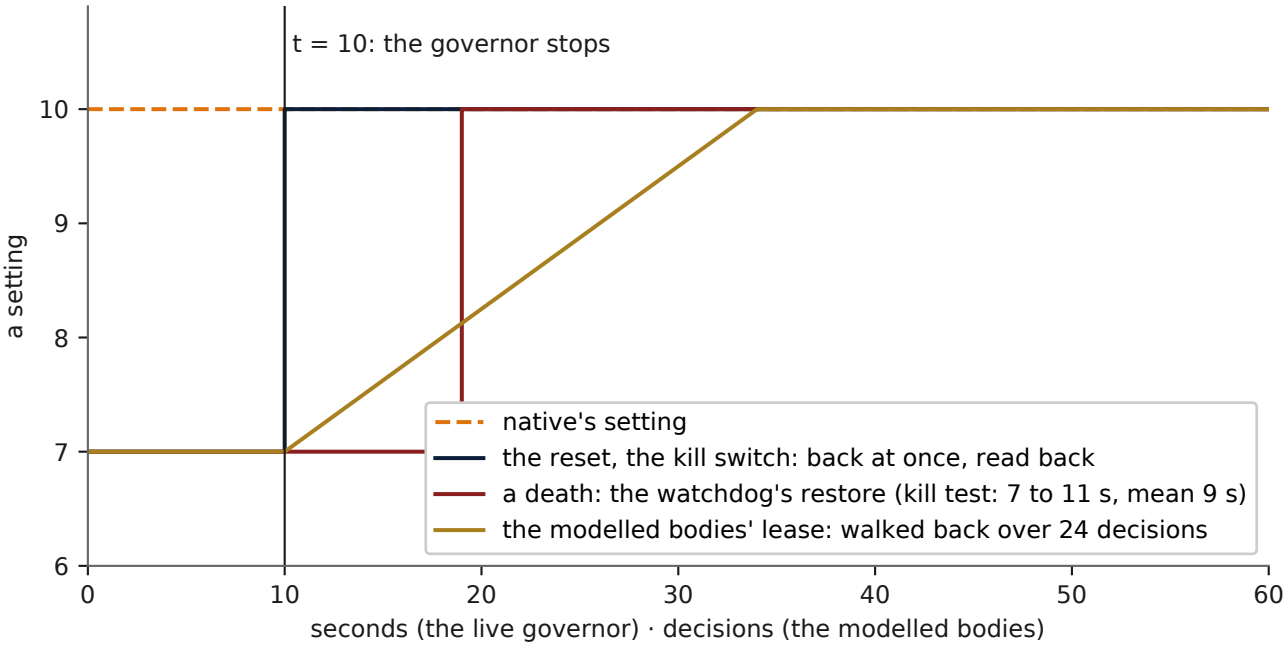


Figure 5. Timing diagram: the lease. The governor renews its lease on every beat; the watchdog reads the lease on its own clock. When the governor dies without handing back, the lease ages past its limit (the larger of 120 s and five beats) and the watchdog walks every setting back to native, a step at a time, reading each back. On the page, the heart monitor shows the beat and how close the lease came to its limit; a stopped heart leaves the body exactly as native runs it.

15.3 A healthy heart, never pushed

The beat runs at a fixed, calm rate (on omni-v16 one decision every 15 s, the fast checks every 5 s between beats; the runs replayed on the page ran before omni-v16, one decision a minute) and is never driven faster by the load it governs. Every clock of the engine counts seconds, so the beat's pace sets how often the body is read, never what a rule means: a give-back still waits its trial's minutes, the cushion still keeps its twenty minutes of memory, and a machine still goes back at most one a minute. What it costs is counted inside the body's own load (the row *Omni's own CPU*), so the organism never pays for its brain without knowing it. A decision that fails is recorded and skipped: it writes nothing, the body keeps the last settings that landed, and the next beat comes at its normal time. Two gauges read its health: the share of each beat spent deciding, and how close the lease came to its limit. The page calls a heart under strain when a decision takes more than half its beat, or a gap between beats runs past half the lease.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

15.4 The heartbeat sweep: the beat as a knob

Under the heart stands the heartbeat sweep (the panel `#beatPanel`, monitor *The heartbeat sweep: every beat the governor can run at*). The beat is a setting of the run, not a constant: the factory sets 15 s, and an operator may choose another for a system's own reasons (a slower beat reads the cluster less often; a faster one answers sooner). The monitor shows what each choice does. Its five rows of buttons pick the record to read:

- **Beat:** 5, 10, 15, 20, 30, 60, 75, 90 or 120 s.
- **Setting:** on-site, where the governor sizes the pool on top of the pod autoscaler, or in the cloud, the machines alone.
- **Engine:** omni-v16, every clock in seconds, or omni-v15, its rules counted in beats.
- **Against:** what each reading is set against: native, the same engine at 15 s (omni-v16's factory beat), or the same engine at 60 s (omni-v17's). The sweep's record is omni-v16's and omni-v15's; the dial's ladder (the page's section 2d, chapter 10) reads omni-v17. The monitor opens on 60 s, the factory's beat on the engine that stands.
- **Gauge:** pods waiting for a place, machine-hours, energy per used core-hour, the 95th and 99th percentile response, the minutes over the line, and the engine's own cost: its processor time, its reads of the cluster and its writes a day, and the fast check's rescues, the machines its 5-second check added only after a pod already waited.

The tiles give the chosen beat whole. They show what it is read against and every gauge's mean change with its 95% interval and its word (GAIN, EVEN, LOSS or power given, by the one key); the number carries the word's sign (GAIN +, LOSS −, EVEN =), never the gauge's raw direction. The last tiles give the engine's own cost a day; native, which runs no governor, costs nothing there. The rescues tile says why a slow beat waits more: the full decision sizes the pool ahead of the load, and read less often, the load outruns it between decisions, so the 5-second check adds the machine only once a pod already waits.

The chart gives the chosen gauge at every beat. Each bar is the mean change over the seeds, coloured by its word, with its whisker the 95% interval. A fall cannot pass −100%, so an interval reaching past it is cut there and marked ▼; the tiles print it whole. The beat chosen is framed, and a cursor reads the beats in turn and names the row it holds.

Every number is our own model (evidence class S), never a benchmark result. The shipped controller of each engine runs on the toy cluster's 5-second plant, eight seeds of a day each, paired by seed and read by the toy gate's own rule (`tools/heartbeat_sweep.py`; the record, `results/toy_gate/HEARTBEAT_SWEEP.md`). Every beat on this monitor is read in the model only: a real run reads the one beat it was started with, the governor's `--interval`, and the gauges `omni_decisions_total` and `omni_own_cpu_cores` of `tools/omni_exporter.py` show the beat it runs at and what it costs.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

15.5 The three charts

Response time, one candlestick per 30-second bin (open, high, low, close of the responses in the bin), native beside Omni-Compass; the latency heatmap, every response binned by time and by duration, the darker the fuller; throughput, requests served per 30-second bin. Read the three together: a GAIN in the 99th percentile shows as the candles' upper wicks shortening on the blue side while the heatmap's upper band thins and the throughput bars stand level or higher.

15.6 The governor's ticker

From the repetition's own `audit.jsonl`: the minute and second of the decision, the compass position (0 calm, 1 at the line), and the force on the pedal (push: toward more; lift: handing the setting back toward native). Then the machines it recommends, and the give-back verdict's state: *left native* means every setting stays native's; *acting* means a trial on its own measurement. Every line of the ticker is a line of the governor's audit, and the audit is the record of authority for what it did.

15.7 Native's own controllers' ticker

Native has no governor; its own controllers' moves are the second ticker, read from the native arm's `capture.csv`: the replicas its pod autoscaler holds, the pods waiting for a place and the machines ready, every change in the same repetition, newest first. With Omni-Compass OFF the first ticker is empty, for nothing decides on top of native. The two tickers side by side are the mechanism of action in its plainest form (chapter 28).

15.8 Every repetition side by side, and the run's receipt

Each repetition of the run as one small pair of lines; the receipt of this run as the repository wrote it; and this repetition scored by the repository's own scorer, which must equal the run's own summary over its repetitions (the count of matches is printed). Benchmark status, by block: landed, running, queued, or not yet run, for every Kubernetes benchmark of the campaign.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

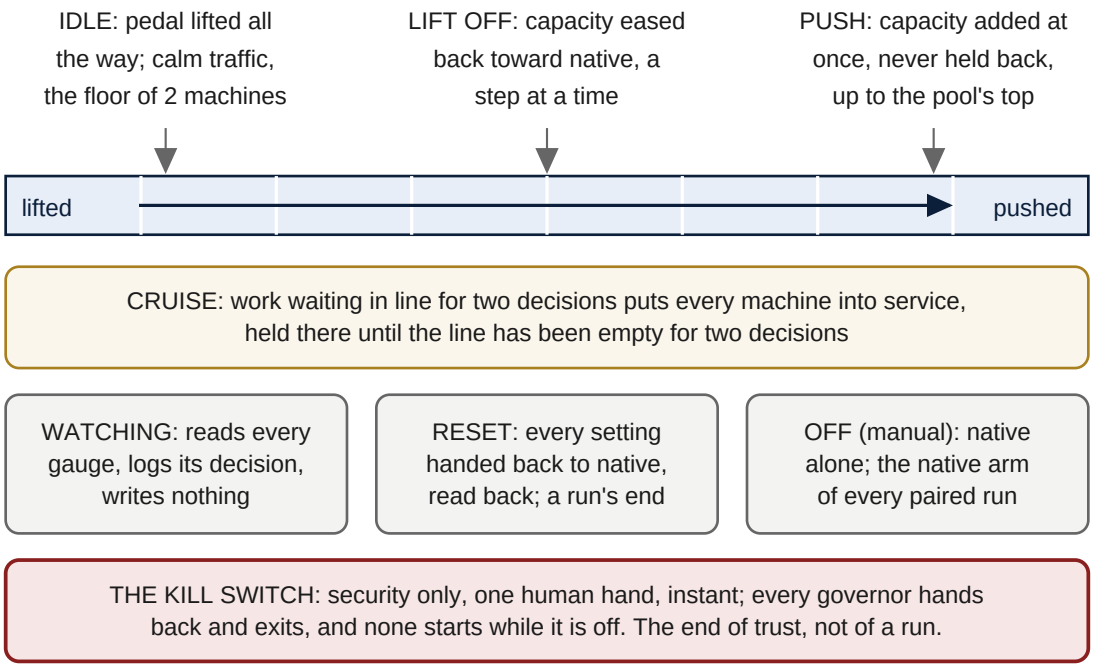


Figure 6. One pedal, no brake. Pushing the pedal adds capacity at once; lifting it eases capacity back toward native a step at a time, never below idle, the floor of two machines. Cruise holds every machine in service while a known queue waits. Watching reads and writes nothing. On the governor's ticker, push and lift are the force column, and the machines recommended are what the pedal bought or handed back.

CHAPTER 16

Kubernetes: Per-Repetition Telemetry

16.1 What it is (the page's section 4d, `#s-runs`)

The benchmark runs themselves at one-second resolution: each three-run table's runs A, B and C read back from the raw files GitHub archived (`results/live/raw`, on the `raw` branch), native and Omni-Compass, repetition by repetition, played second by second. Every file the page reads has its SHA-256 computed and matched against the run's own `SHA256SUMS_ALL.txt`, and every Kubernetes repetition is scored by `tools/live_reps.py`; where a run holds its own scored summary, the scorer's mean over its repetitions equals it. Class L: real Kubernetes on kind, real databases and a real broker.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

16.2 How to use it

Choose the benchmark, the run and the repetition; the page's section 4c dashboard follows. Read a gauge's two lines against each other for the whole repetition, then read the receipt of the run under it: the receipt's word is the reading; the lines are why. A repetition whose job failed and ran again is marked; one that failed three times is listed and left out.

CHAPTER 17

The Shipped Controller's Decision Trace

17.1 The one place the brain drives the muscles decision by decision (the page's section 4e, `#s-live`)

The shipped controller, `omni_controller/controller.py`, on the toy cluster of `pilot/selfpilot.py`, wired as the repository wires it. Each decision runs the chain left to right: the senses, the six-state brain, the nerves and the machine organ's grant, the compass law on the service (the cloud setting), the verdict's trial, the release gate, the plug. Every value below the chain is the controller's own audit record of that decision, recorded by `docs/engine/export_controller_trace.py` on runs A, B and C (six hours each, a decision every 15 s, the controller's own default on omni-v16; class S). Three buttons choose the setting: *on top of the HPA, the max*; *the cloud: the tune-down, machines only*; and the Linux host and the card (the page's section 4f).

17.2 Reading the trace

The columns, in the audit's order: the stress E, the utility U, the calm, κ, h, σ, ν (the four scalars of the nerves), the gate and whether it passed, whether machines were in service (a blind reading holds the decision), the recommendation, the machines seen, the density ρ, the compass position and velocity, the force, the verdict's word, the writes, the queue, and the law that decided. A row whose gate did not pass wrote nothing; a row whose verdict reads LOSS kept the setting at native; a row with a write names the lever and the value read back.

17.3 The paired change

Per 15-second tick, averaged over ten-minute blocks, with its 95% interval (Student's t) in each run; GAIN or LOSS only when all three runs point the same way with every interval clear of zero. Machines and power: a fall is a cut, a GAIN; a rise is power given. Our own models (class S): a model's small numbers are the model's.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

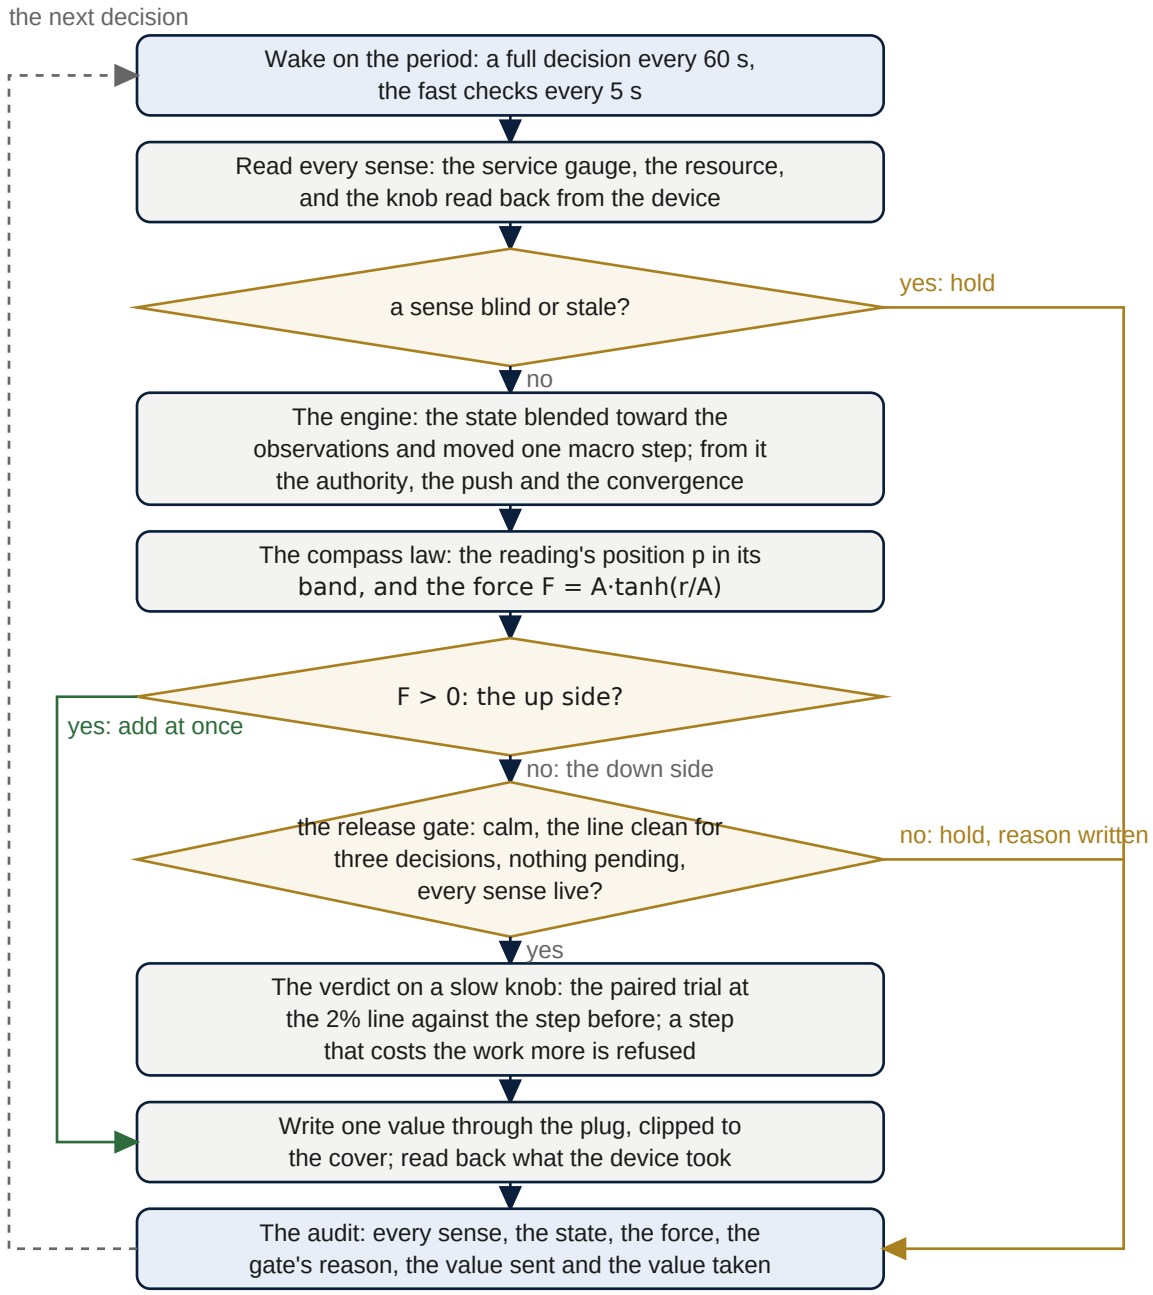


Figure 7. One decision of the governor. Read the body (the senses), place every reading in its band, let the brain's state evolve, grant or refuse through the nerves, apply the compass law to each muscle (push or lift), run the verdict's trial on a step past native, pass the release gate, write through the plug and read it back, renew the lease. On the decision-trace monitor each box is one column of the audit, and *open the same controller, decision by decision* steps through them.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

CHAPTER 18

The Chip and the Host

18.1 The highest-value point (the page's section 4f, `#s-stacks`)

The silicon itself, the chip at the far end of every stack: there the max rides each card's own limit, and every watt it takes is power given, shown beside the work it buys. The monitor holds the slots for the metered GPU and CPU runs (class P: the card's own meter on Lambda; the package's own energy counter, `tools/run_cpu_power.py`), every hardware run GitHub has started, newest first, and then the models of one GPU card and one Linux host (class S), native beside Omni-Compass, each run twice on the same load and seed, native first.

18.2 The settings

Buttons choose the stack (a GPU card; Linux, one host; Kubernetes, the page's section 4e; the cloud, the page's section 4a), the load on the card (AI token generation; compute-bound) and the card's power setting (the card as shipped, 150 W; an operator's cap, 105 W). The table under them, *where the mechanism moves on the chip models*, lists every setting with three runs each: the seconds held off native, the writes, the power (W) or the host's busy share native · Omni-Compass, and the response (ms) native · Omni-Compass. Click a setting to play it.

18.3 The 8-card node, built and awaiting its run

Under the settings, a node of eight NVIDIA cards stands built before its run (`scripts/gpu_8card.sh`, `docs/GPU_RUN_GUIDE.md`, section D): eight card slots, each native lane drawn from the repository's one-card model (class S, the same model on every card until the run, never eight measurements), each Omni-Compass lane empty and marked awaiting its run. Nothing on it is invented: on a running node the same panel reads the NVIDIA DCGM exporter's series card by card, and the 8-card run fills it when it lands.

18.4 Reading a row with nothing held off native

A row with no second held off native is Omni-Compass deciding to stay native: its trial of one step read LOSS and was refused, or the knob is already at its limit on native. That row is the engine's own rule at work and is not a fault. The slots marked not yet run are written as the repository holds them and fill in, played back from their raw files like every Kubernetes run, the moment their three runs land.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

PART SIX

The Brain

One control cycle traced, the phase plane and the scoreboard, the brain's state, the verdict, the telemetry analytics, and the failure modes.

CHAPTER 19

One Control Cycle, Traced

19.1 What it shows (the page's section 5a, `#s-decision`)

One control cycle traced end to end at reduced speed: the sensed inputs, the brain's decision, and the actuator (the muscle) it wrote. The max: every muscle to its own limit, never below native; the capacity it holds is power given. The tune-down: never more than native, and a step back only with the organ's grant and the release gate. In this model native already sits near its band, so the tune-down finds little to hand back; the scoreboard (chapter 20) reads its runs A, B and C live when the dial is on the tune-down. Class S.

19.2 How to read it

Follow the particles: in along the wires from the muscles' meters to the inner arc of nine senses; through the brain's six spokes; out through the nerves (the grant), the compass (the force) and the plug (the write). Each stress on the console lasts 40 decisions from the moment it is pressed, and both sides meet the same demand, so a cycle watched during a surge shows the push on the blue side and the native controllers' late, middle-of-the-range moves on the orange one.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

CHAPTER 20

The Phase Plane and the Scoreboard

20.1 The plane (the page's section 5b, `#s-plane`)

A phase portrait, the picture control engineers use for a system's state. Across is where each muscle sits in its band: p is 0 when calm, 0.5 at the center and 1 at its line. Up and down is how fast it moves there (v, per decision). A muscle at rest sits on the middle line. One climbing toward its line moves up and right, and past the right edge it is past its line. Native is on the left and Omni-Compass on the right: the same muscles at the same instant, one dot each. In the stress-test model the shading on the right is the force the compass law would apply there: the add force toward the line, the hand-back force toward calm. In the realms harness each muscle answers to its own rule, so no single field is drawn.

20.2 The scoreboard

Each panel is one gauge of the live organism, read every decision on both sides, as an operations dashboard shows it: native's value now and Omni-Compass's, the last 120 decisions of both (native solid orange, Omni-Compass blue), and the running paired reading in the tables' words. With the master switch OFF the decisions are shaded red and Omni-Compass's side follows native.

20.3 How each row is read

The paired change, native against Omni-Compass at the same decision, averaged over blocks of ten decisions so neighbouring decisions do not count twice, with its 95% interval (Student's t over the blocks). *This run*: a change of 0.5% or more reads by the gauge's aim (work: a rise is GAIN; misses, failed work, waiting: a fall is GAIN; energy or capacity held: a rise is power given, a fall a cut), clear of the noise or not, and a change under 0.5% reads EVEN. *Three runs*: a change of 0.5% or more, the mean of the three, reads GAIN, LOSS or power given, in all three of our runs when every interval is clear of zero the same way and by the mean of our three runs otherwise; under 0.5% EVEN, under the floor; runs that moved 0.5% or more in opposite directions disagree. The spread of positions can widen a little under the tune-down, because the calm muscles it hands back move toward their line while the busy ones stay.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

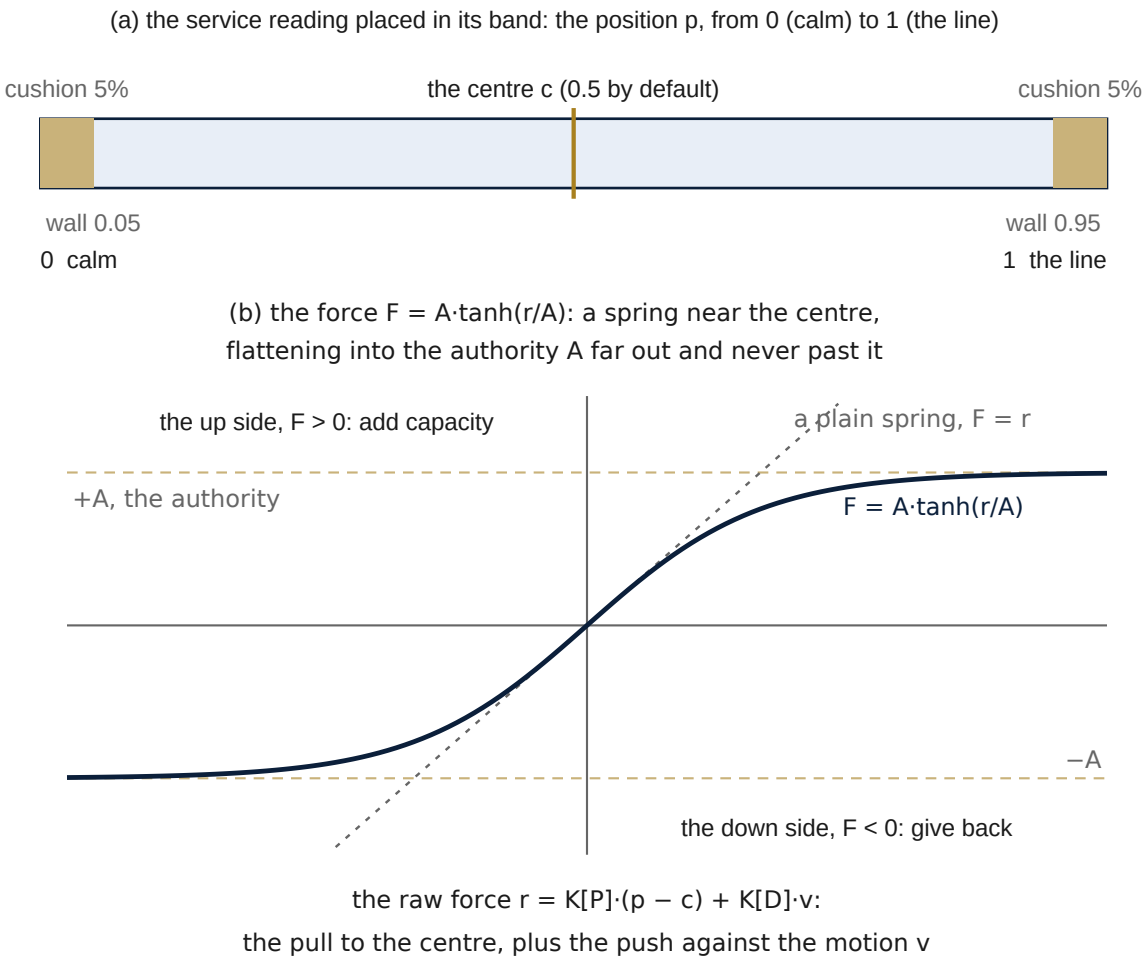


Figure 8. The compass band and the two forces. A reading is placed in its band, p = (r − lo)/(hi − lo), calm at 0, the center at ½, the line at 1, with 5% cushions at each end. Two antagonist forces act on the knob: the add force as the reading climbs toward the line, the hand-back force as it falls toward calm, combined as F = A·tanh((k$_P$(p − ½) + k[d]·v)/A), smooth, never hammering. It fails up past 0.95 and never hands back while it climbs above the center. The phase plane's shading is this force at every point.

CHAPTER 21

The Brain's Internal State

21.1 What is drawn (the page's section 5c, `#s-brain`)

The brain's six state variables rendered on their potential-energy landscapes: a state resting at a minimum is stable; a state driven toward a maximum is under load. Each ball is a live value of the engine's brain,

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

integrated by the Runge–Kutta method every decision. In the stress-test model its push and target feed the body's levers. In the harness views the harness arm acts muscle by muscle with no brain, so the brain drawn here is the page's own, fed the harness's readings. Class S.

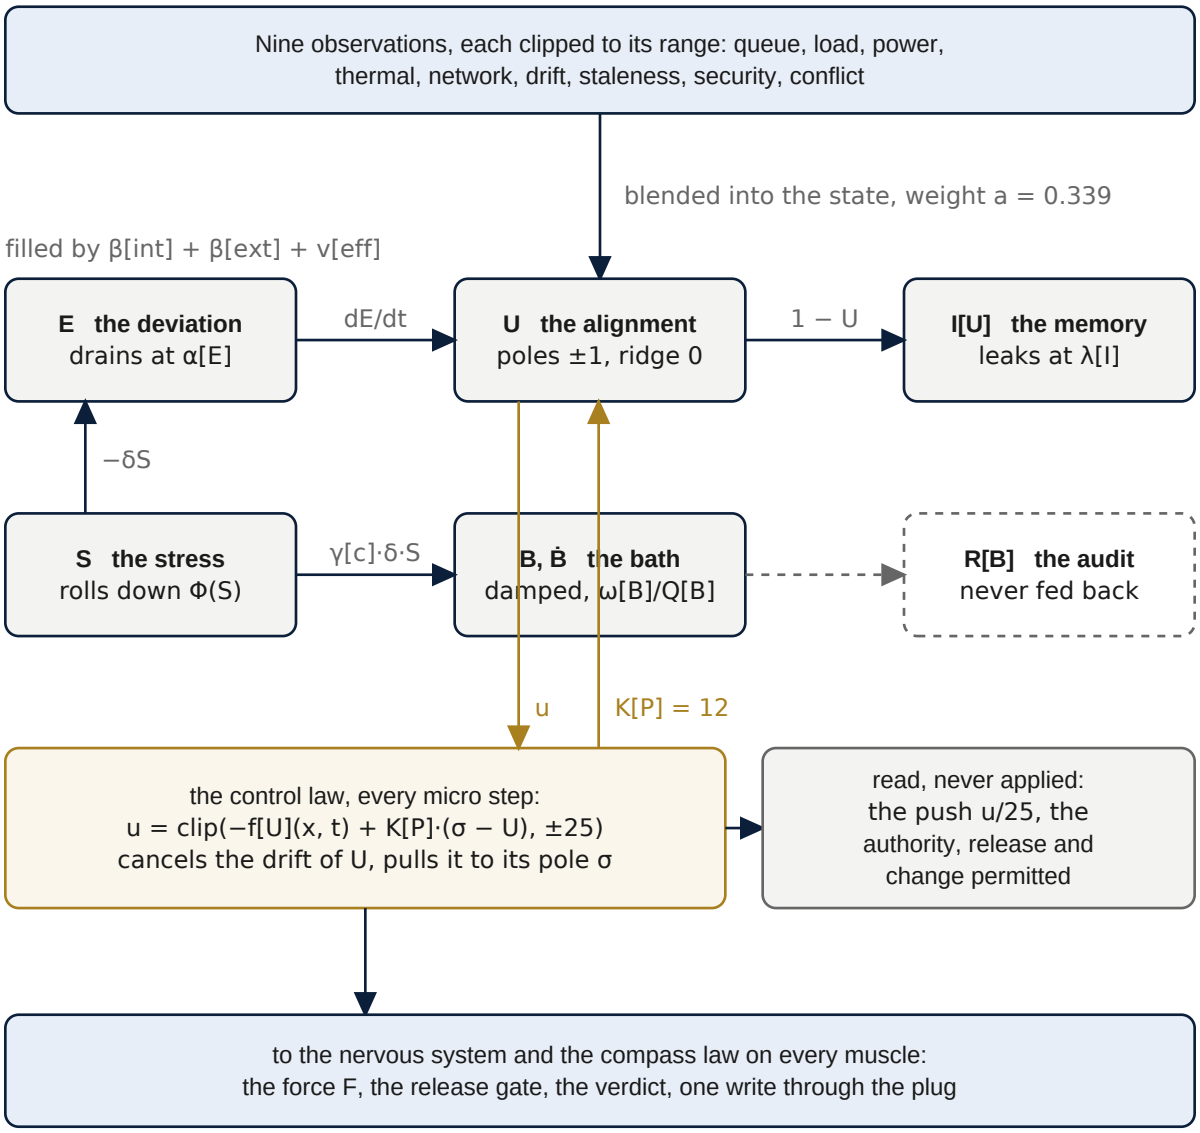


Figure 9. The engine's six states. E the stress, U the utility, I[U] the memory of need, S the stance, B the slow tide of physical load and Ḃ its rate, each drawn on its own scale (E, U and I[U] on [0, 1], S on [−1, 1], B on [−0.5, 1], Ḃ on [−0.5, 0.5]). The brain monitor draws each as a ball on its own landscape, live, every decision.

21.2 The three landscapes the page prints


The utility's well, $V(U) = -\mu(U^2/2 - U^4/4) + (\dot{E}/E_{max})\cdot U$: a rising stress E tilts the well toward the basin of collapse, and the ball rolls toward it unless the body is relieved. The stance's well, $\Phi(S) = \alpha_s S^2/2 + \beta_s S^3/4 -$

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

δS: S rolls to its minimum S* and the senses pull it back each decision. The tide, $\dot{B} = \gamma[c]\cdot\delta\cdot S - (\omega[B]/Q[B])\cdot\dot{B} - \omega[B]^2\cdot B$: the slow tide of physical load, a damped oscillator driven by the stance.

(a) the alignment U, a double well:
$V(U) = \mu(U^4/4 - U^2/2)$

(b) the stress S, a cubic potential:
$\Phi(S) = \alpha_s S^2/2 + \beta_s S^3/4 - \delta S$
(α_s 0.12, β_s 0.10, δ 0.5: the engine's defaults)

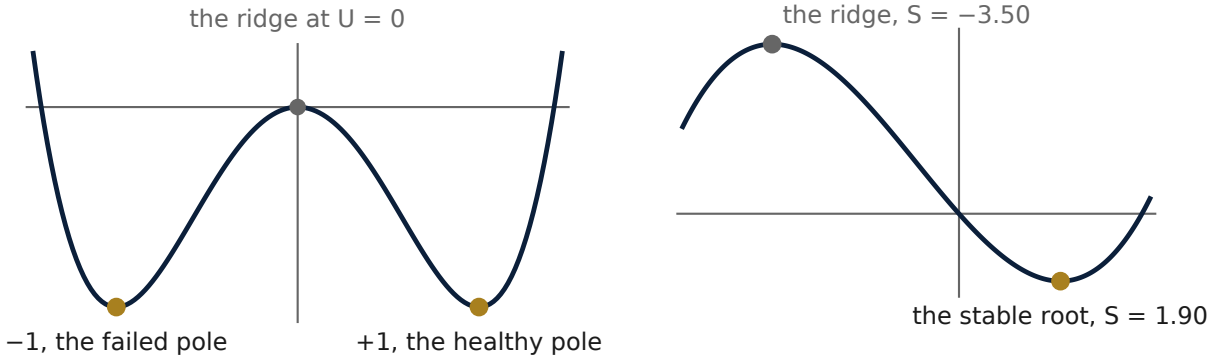

$dU/dt = \mu U(1 - U^2) + \ldots$
the ball rolls to the nearer pole

$dS/dt = -d\Phi/dS$: S rolls to the stable root;
the landscape is open below the ridge

Figure 10. The double well. The utility U rests in one of two basins: the working basin, where the body does its work inside its lines, and the basin of collapse. The stress E tilts the landscape; the brain's push and the body's relief tilt it back. A ball near the ridge between them is a body under load; the compass law and the nerves exist to keep it on the working side.

21.3 Calm and the grant

calm = $\kappa\cdot h\cdot(1 - (\sigma - 1)^+)\cdot(1 - \min(\nu, 1))$, where κ is the body's coherence, h the headroom, σ the stale share of the senses and ν the conflict. An organ may hand capacity back only when calm ≥ its threshold θ, the line is clean and every sense is live; expanding stays allowed except under a security hold. Under the max, lifting off toward native never needs this grant; going below native does. The monitor draws calm against θ for each organ, so the operator sees why a hand-back was refused.

21.4 Native, beside

Native has no brain to draw: each of its controllers reads one reading, its own muscle's, and moves. The orange panel draws, live from the same decisions, the mean position native's muscles' readings put them at, the share of its muscles past their line, and how many of its own controllers moved their setting this decision. Native has no nerves: nothing grants or refuses a controller, and a blind sense or a security hold changes nothing it does.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

CHAPTER 22

The Verdict

22.1 The change-acceptance test (the page's section 5d, `#s-verdict`)

Before a knob moves one step past native, the step runs as a trial: costs at native first, then at the step. The engine reads the change exactly as a report reads a row, on the log of each cost, with its 95% interval. Each step is kept unless the measurement reads LOSS or its estimated cost exceeds the 2% allowance; an EVEN result (no difference resolvable from the noise) is accepted, so on a high-variance workload a step with a small true cost can pass, and the lab under the monitor measures that false-acceptance rate.


22.2 The lab

Three knobs: *what the step truly does to the cost*, the *allowance* (tolerance) and the *noise σ of the log cost*, with the *pieces of work measured each side*. Set what the step truly costs and watch the rule decide: the keep ratio at each true cost is drawn, beside a rule of medians alone for comparison (the medians alone allow a step when the trial's median is within the allowance of the reference's; the engine's rule also refuses any step whose interval sits wholly above zero, and measures on while the interval is wider than the allowance, up to three times the pieces each side, keeping a step only if both estimates are inside the allowance).

22.3 How each muscle wires it

The Kubernetes controller measures 200 requests each side against a 2% allowance (`--verdict-samples 200 --allow 0.02`), the cost being each request's response time; the noise is measured at every build on each request of the newest tables' own runs. The GPU card measures 30 requests; in its model the card's own time per request carries no noise. The toy gate measures 60 (σ 0.25). Native has no trial: its knob never moves past its own setting, so there is nothing to judge; every step Omni-Compass takes past native has to pass this test first.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

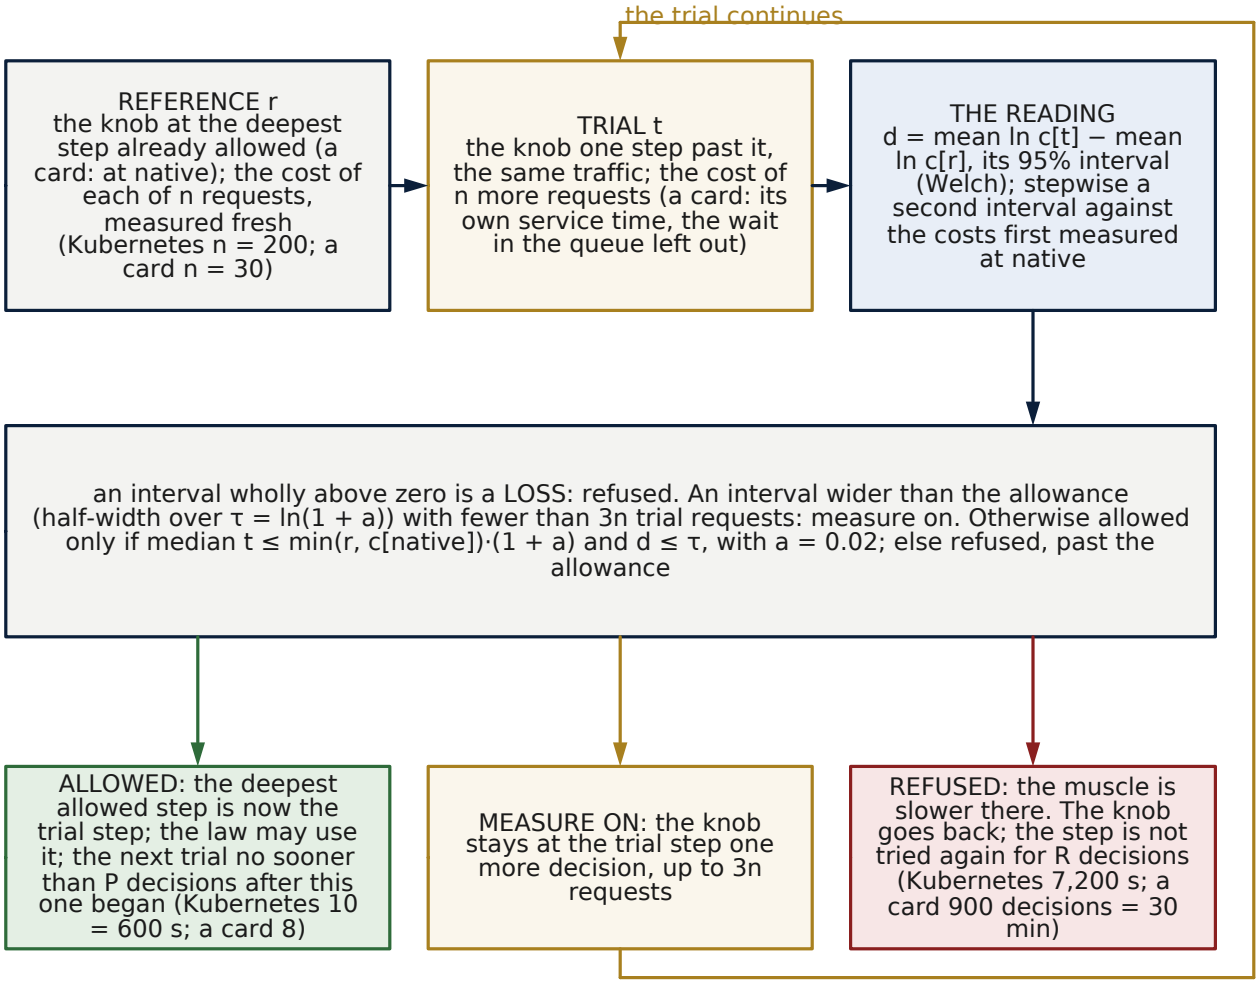

The verdict stands over every slow knob (the machines, the clock ceiling, a cache's notch). A trial begins only while the service is calm and nothing waits; a phase that sees the service leave calm, or that takes longer than its limit (Kubernetes 1,200 s; a card 30 decisions), is abandoned and the knob goes back, the step neither allowed nor refused. The knob never passes the deepest allowed step, so steps cannot add up past the allowance. On the max, the Kubernetes machine count never gives back a machine the cluster had on its own.

Figure 11. Block diagram: the verdict's paired trial around a slow knob, read GAIN, EVEN or LOSS. The reference is the cost of n pieces of work at the deepest step already allowed; the trial is the cost of n pieces at the step. Both on the log of the cost, with the 95% interval of their difference: an interval wholly above zero refuses the step; one inside the allowance keeps it; one wider than the allowance measures on, up to three times n each side. The verdict monitor runs this rule live at any true cost the viewer sets.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

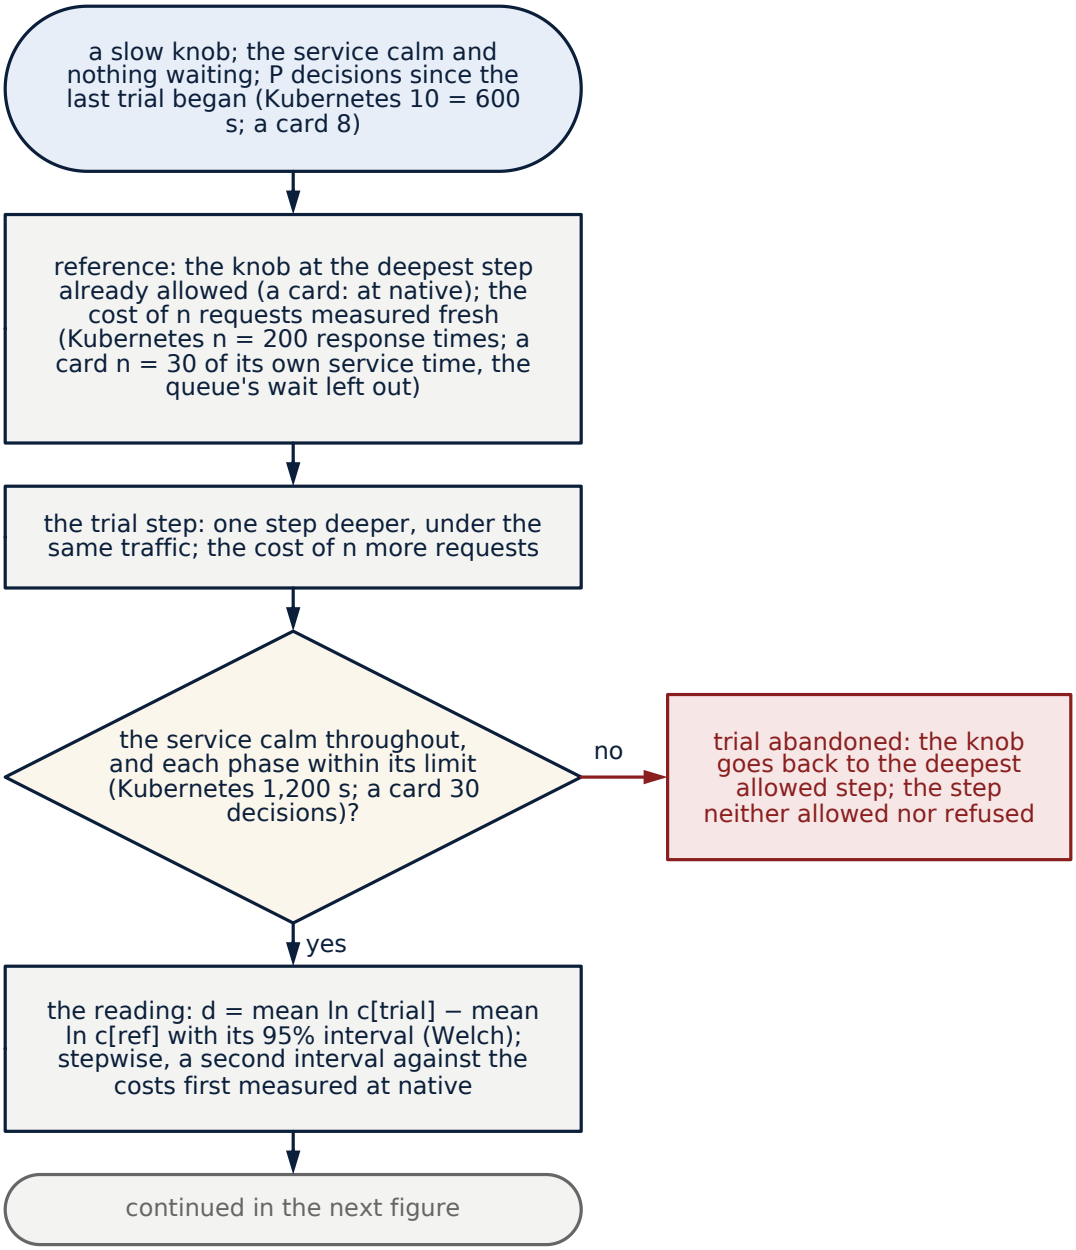


Figure 12. Flowchart: the give-back trial. A trial starts only with the organ's grant and a clean line; it runs to its full measurement and is never ended by the calm it causes; its reading against native decides, GAIN or EVEN keeps the step, LOSS refuses it and the setting stays; the release gate then passes or holds the write. The ticker's state column reads left native until a trial starts and acting while one runs.

CHAPTER 23

The Telemetry Analytics and Omni-Compass in Its Own Words

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

23.1 The tensor (the page's section 5e, `#s-lab`)

The engine's own record is a tensor: two sides × every decision × sixty muscles, each entry a muscle's compass position (0 calm, 0.5 the center of its band, 1 its line), recorded from `realms/harness.py` (class S). It fills in decision by decision as the page's section 2b plays: the tensor, the difference matrix and the principal motions replay that record on the live engine's clock, and no knob of the console changes them. Read it as a sheet of heat: a column (one decision) that is light on the blue side and dark on the orange side is a body Omni-Compass held nearer calm at that moment.

23.2 The difference matrix and the principal motions

The difference between the sides, muscle by decision, with the sign of the word; and the body's principal motions, the tensor's eigen-decomposition: the few patterns of movement that account for most of the body's motion, each with the share of the variance it carries. The line across each bar is the decision on screen: the share of that decision's own departure from the run's mean that lies in the mode. A first motion that is the whole body rising and falling together is a body breathing with its demand; a motion that is one room against the rest is that room's inflammation.

23.3 The service level and the error budget

The official runs (class L) read as a site-reliability engineer reads a service: the service level this repetition, the error budget burned, and every gauge of this repetition against native, each replaying the official run chosen in the page's section 4c.

23.4 Omni-Compass in its own words

Omni-Compass speaks for itself: every line is read from its own records at the moment on screen (the official run playing in the page's section 4c, its governor's own audit, and the engine's harness on the console's clock) and says what it is doing, beside what native does. *Speak aloud* reads it out on the viewer's own browser voice as the run plays.

23.5 Ask Omni-Compass

Ask in your own words, or pick a question (what are you doing right now; where do you read LOSS, and why; explain yourself to a buyer; show me your largest GAIN). Omni-Compass answers in the first person, for its own whole without it. The answers are drawn from the page's records and are not reviewed by any outside party.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

CHAPTER 24

Failure Modes, Controls and Residual Risk

24.1 The register (the page's section 6, `#s-fail`)

Every known way Omni-Compass can fall short, the control that mitigates it, that control's coverage and the residual risk where it does not reach, and its implementation in the code; every failure mode the live engine can be put through has a fault-injection control on the console, named in the row. The register is `docs/SAFETY_CASE.md` and `docs/THREAT_MODEL.md` read as a table.

24.2 The resource costs shown, not judged

Under the register, the rows the three-run tables report but do not judge: the governor's own commands, its processor time, the pending pods in a snapshot, the energy per core-hour. They are printed so the cost of the governor is never hidden; they carry no word because their preregistrations declared them shown only.

PART SEVEN

The Proof: the C++ Twin and the Mathematics

Every component of the engine, its equation and its module, and the same engine in C++, fed the Python's own runs.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

CHAPTER 25

The Component Specification

25.1 Every part and its equation (the page's section 7c, `#s-math`)

The component specification: every part of the engine, its equation in Unicode as the repository writes it, and the source module that implements it. Items 1 to 5 and 8 are the engine's code and run in every view; items 6 and 7 as written (the compass law on each muscle, the plug's lever) drive the stress-test model; in the harness views the max and the plants' own overrides take their place; the live controller runs the compass law on the service, as the page's section 4e shows.

Item	Part	What the page prints	Module
1	Senses	the muscles' meters read and normalised to nine observations: q, load, power, thermal, network, drift, stale, security, conflict	`adapter.observe_vector`
2	Assimilate	$x \leftarrow (1 - a)\cdot x + a\cdot x[obs]$, a = 0.339: the engine is pulled toward what the senses read	`adapter.assimilate`
3	Evolve	equations (1) to (7), the Runge–Kutta method, ten micro steps of 0.01, the controller evaluated and not applied	`core.macro_step`
4	Allocate	push = clip(−f[U] + 12·(1 − U), ±25)/25 and $\rho^* = \text{clamp}(\rho_0 - k[I]\cdot I[U] - k[E]\cdot E, \rho_{min}, \rho_0)$	`adapter.Governor.step`
5	Nerves	κ, h, σ, ν into calm; calm against each organ's θ grants contraction (the spine to nodes, θ 0.7; compute to pods, 0.5; physics to the processor's clock, 0.3; energy to power, 0.3; distribution to routing, 0.5)	`nervous_system`
6	Compass	$p = (r - lo)/(hi - lo)$; $F = A\cdot\tanh((k_P(p - ½) + k[d]\cdot v)/A)$; fails up past 0.95; never hands back while climbing above the center; k[d] at three times critical damping from the muscle's own τ, the push	`compass_law.CompassLaw`

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Item	Part	What the page prints	Module
7	Plug	one wire in, one wire out: each write clipped to the cover; the snapshot taken once at the start is what reset restores; each write read back; the kill switch hands every lever to native at once	`compass_law.Plug`, `master.py`
8	Verdict	the paired trial of chapter 22	`verdict.py` (its C++ twin `cpp/src/verdict.cpp`, 24.3)

25.2 What the specification is for

It lets the reader of the page check that what moves on the monitors is what the code says: the six spokes at the center of the cycle (E, U, I[U], S, B, Ḃ) are item 3's state, the inner arc of nine segments is item 1's senses, the force field of the phase plane is item 6's law. The Owner's Manual carries the derivations; this page carries the statements.

25.3 The C++ twin (the page's section 7b, `#s-cpp`)

The engine is written twice, in Python and in C++, line for line where a twin exists. Every time the page is built, the Python's own runs are fed into the C++ as its input and the C++ answer is set beside the Python's, number by number. Where they are the same to the last digit, the two are one engine. The section holds five tables.

Table	What it shows	How to read it
Every twin, on its own parity check	each Python file and its C++ twin, the inputs the check fed both, the largest difference, and the reading	"the same" on every row is a whole engine in two languages; "DIFFERS" names the row to look at
The Python's runs through the C++ harness, receipt by receipt	the record of the Python's seeded runs the page shows (the jump generator's 500), its draws (the Python's injection) fed to the C++ harness at the page's build (`cpp/tools/engine_runs.cpp`): the record, its runs and base seed, the Python's digest, the C++ engine's digest, how many receipts are identical to the last bit, the largest difference, the reading, and	the Python's runs are the input and the C++ engine's receipts the output; the two digests one string and every receipt identical is the same engine run twice, in two languages

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Table	What it shows	How to read it
	the GitHub run that made the record	
The compass law of every run on this page	every compass law the page's own runs wired while the page was built, grouped by the file that wired it, each law's readings in the order they came, through the C++ law and through the Python again	the C++ against the Python, and the Python again against the run's own forces: 0 (identical) on both is the run's law reproduced exactly
The seven organisms at the tune-down	each organism, its muscles, the muscles that run the compass law at the tune-down, the readings fed through the C++, and any muscle that differs	at the max, the default brain, the edge and the bone decide each muscle, and they have no C++ twin yet; the tune-down is where every muscle's law is the compass law, so that is where it is fed through
What runs in Python only, for now	every part of the engine with no C++ twin yet, by file	the list is the work still to twin; nothing on it is hidden from the other tables

A box under the organisms' table finds any muscle by its catalog id: it names each organism the muscle's law ran in, its readings, and whether the C++ and the Python gave the same answer. A muscle with no lever at the tune-down stays native there, and the box says so.

PART EIGHT

Reference: the Pipeline and the Page's Own Drawing

The pipeline that rebuilds the page, and the page's own render loop governed by the compass law.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

CHAPTER 26

The Pipeline That Rebuilds the Page

26.1 When the page is rebuilt

GitHub rebuilds the page (`.github/workflows/live-engine.yml`, `docs/engine/build_live_engine.py`) whenever the engine, a model or a result changes, and every three hours. Every record is made again by the repository's own code on the engine that stands, checked against the Python and the C++, and committed. The page's own file is outside its own push filter, so a rebuild never starts another rebuild; a front-page run that did not succeed starts no rebuild (`tests/test_workflow_triggers.py` holds both).

26.2 The CI pipeline monitor (the page's section 8c, `#s-github`)

Every workflow run in progress or queued at the build, as GitHub's own list at that moment, and the first of them in each state. The hardware and cloud runs, with their terminal status, are in the page's sections 4a and 4f; every run on the engine that stands that terminated without a measurement is raised on the status board.

26.3 Reading the pipeline against the conductor

The conductor (`scripts/dispatch_grid.py`, every 15 minutes) starts every run of the campaign on the engine that stands, A of every benchmark, then B, then C, a few a tick, and never starts one twice; it starts nothing while an Azure run, a grid report or a verify waits for a runner. So a pipeline monitor showing one Azure run queued and nothing else starting is the conductor holding, by its rule, not a fault. A long run on a free runner (the organisms at 1,000 copies) lists as in progress for its whole shard.

CHAPTER 27

The Page Governs Its Own Drawing

27.1 Omni-Compass inside the page (the page's section 8d, `#s-self`)

The engine that runs the page has Omni-Compass in it. Native is the browser's own loop: every chart on screen drawn on every frame, and when the frame overruns, whole frames dropped. Omni-Compass is the same loop with the engine's own compass law governing it. Each chart is a muscle whose knob is how many frames it

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

waits between draws, and the reading is the time between frames. Below the band's center the pedal lifts and every chart is handed back to native, drawn every frame. Toward the line it pushes: the charts farthest from where you are looking wait a frame or more, so the frame itself stays inside its line. Evidence class L: live software, on the viewer's own machine.

27.2 Reading it

The monitor shows the frame time on both sides, the frames dropped by native's loop, and the frames waited by each chart under Omni-Compass. On a laptop with the wall in view, the charts on screen draw every frame and the rest wait; scroll, and the waiting moves with the eye. The kill switch on the console reaches this governor too: engage it and the page draws as the browser alone would.

PART NINE

Reading a Result off the Page

The mechanism of action side by side, the trace from a tile to its record, what to do when a tile reads LOSS, and what the page does not tell you.

CHAPTER 28

The Mechanism of Action, Side by Side

28.1 What native does


Each native controller reads one reading, its own muscle's, one to three decisions late (the pod autoscaler one sync every 15 s), and moves its one setting toward the middle of its range, because protecting its one thing is its whole job. It has no heart (nothing proves it is still there), no brain (no state, no memory of need, no stress, no tide), and no nerves (nothing grants or refuses it, and a blind sense or a security hold changes nothing it does). Its moves are the second ticker of the page's section 4c and the orange panel of the page's section 5c.

28.2 What Omni-Compass does, on top

Once every decision it reads the whole body through the plug (the senses), places every reading in its band, lets the brain's state evolve, grants or refuses through the nerves, applies the compass law to each muscle (push toward more as the reading climbs, lift toward native as it falls, smooth, never hammering), runs the verdict's

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

trial on any step past native, passes the release gate, writes through the plug and reads it back, and renews its lease. Every one of those is a column of the audit, a line of the first ticker and a box of the cycle monitor. The native controllers keep running underneath, untouched; Omni-Compass moves only the settings they already expose.

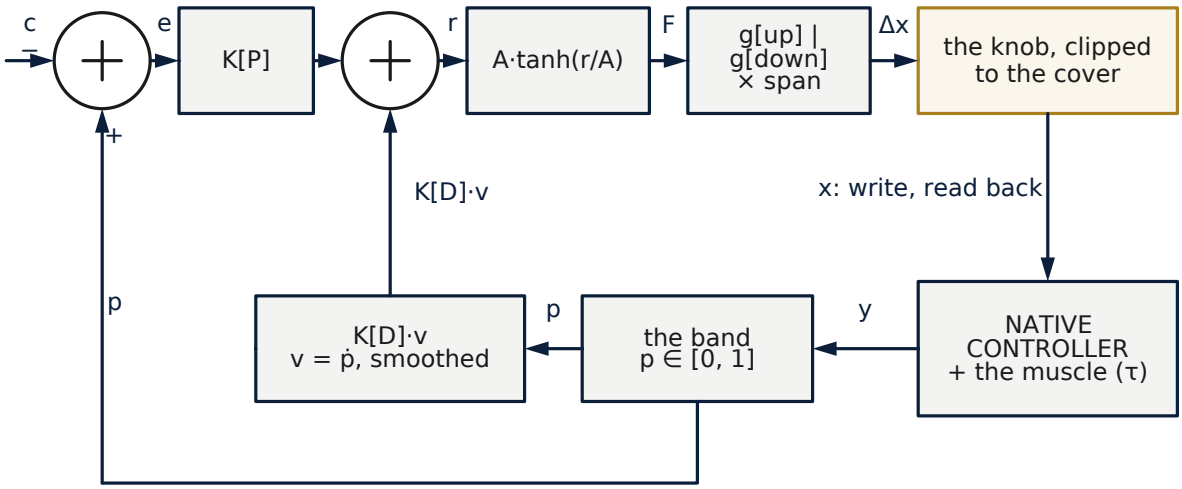

c the centre of the band; y the reading; p the reading's position in the band; e = p − c; v = ṗ smoothed; r the raw force; F the force after the saturation; Δx the step; x the knob. Fail up: p ≥ 0.95 → F = A at once; the down side held until p is back inside the band. No take-back while the reading climbs above the centre (F < 0 with v > 0 and p > c → F = 0). K[D] is set from the muscle's own response time τ (critical damping), never tuned by hand.

Figure 13. Block diagram: the compass control loop. The muscle's reading comes in on the sense terminal, is placed in its band, and the compass law computes a force; the force is a setting written out on the motor terminal, inside the knob's cover, through the plug, and read back; the native controller sits inside the loop, still reading its own gauge and still moving its own setting; the kill switch opens the motor terminal and the lease restores the snapshot. On the page the two tickers show the two loops, native's own and the governor's on top of it, at the same seconds.

28.3 Where to see the difference

On the official run playback (chapter 15): the first ticker shows the pedal pushed at the compass position's first move off the center and the machines recommended before native's first late sample; the second ticker shows native's autoscaler adding replicas a sync or two later. On the phase plane (chapter 20): the blue dots turn back before the right edge where the orange ones cross it. On the scoreboard: the work waiting lower, the decisions past their line fewer, the capacity held higher during the climb (power given) and eased back after it (the lift). On the brain (chapter 21): calm falling under a surge and the grant refused until the line is clean again, which native has no equivalent of.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

28.4 What the difference is not

It is not a competitor's dashboard. Omni-Compass never replaces the controller it sits on; every move native makes is still made. A monitor where the two sides are identical is a muscle Omni-Compass left native, at its limit or with nothing to add, and that reading is EVEN and correct.

CHAPTER 29

From a Tile to Its Record

29.1 The chain

Every number on the wall can be walked back to the file it came from.

1. **The tile** names its gauge and its word, and links to the monitor it copies.
2. **The monitor** names the benchmark, the run (A, B or C) and the repetition, or the table and the row, and the evidence class.
3. **The three-run table** is in `results/live/` (`V13_*.md` on the engine that stands; each table names its engine), with its runs' ids and its rule printed at its head.
4. **The run's raw files** are on the `raw` branch at `results/live/raw/run-<id>/`, with `SHA256SUMS_ALL.txt`; the page matched every file it drew against that list. `scripts/raw_archive.sh open /run-<id>/` places them where the table names them.
5. **The governor's audit** is the run's `audit.jsonl`; native's own controllers' moves are its `capture.csv`.
6. **The scorer** is `tools/live_reps.py`; the page's per-repetition score equals the run's own summary over its repetitions.

29.2 The engine's name

Every table and every monitor names the engine it ran on; the page's title block names the engine the page stands on (omni-v18). A table on an older engine stands only until its runs on the engine that stands land, and the board says which it is. Nothing is read across engines.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

CHAPTER 30

When a Tile Reads LOSS

30.1 The rule

Theoretically the word LOSS should never appear: the engine that stands moves a knob only where a paired trial on the muscle itself shows the muscle never behind for it, and where it cannot bring a knob a gain, that knob stays native. When LOSS does appear, the row stays, and the founder's order governs: if Omni-Compass hurts something, no mechanism of Omni-Compass is pushed through that muscle. The cause is found in this order, our own wiring first, native's setup second, the scoring third; the mechanism or its wiring is corrected; the test runs again on the next engine version, and the earlier table stands as its engine's record.

30.2 Read the three-run reading, not the one run

A red tile from one run of a table still running (the Azure steady set at 33 of up to 100 repetitions) is that run's own word for that run and not yet a reading: its interval may include zero (EVEN so far), and a three-run word needs all three runs. The alarms table grades it WARN. Wait for the look.

30.3 Open the root-cause document

Where the repository has found the cause it is linked from the tile: `docs/POD_START_WAIT.md` (a pod's start on one shared host is the test machine's own unpacking of an image, the same on both sides at the same host load), `docs/TAIL_LATENCY.md` (where a 95th or 99th percentile reads higher, and why), `docs/BATCH_QUEUE_PREREGISTRATION.md` amendment 11 (the conveyance on a shared host beside another workload's room, fixed in omni-v13). A tile with a root-cause document is a known cause with its fix landed or on the next version's list.

30.4 Which knob, and what to turn

The LOSS row names its gauge; the governor's audit names the knob that moved in that window and why. Three outcomes follow, and only these:

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

What the audit shows	What it means	What is done
a knob moved and the gauge went against its aim while the muscle stayed inside its limit	the wire or the rule is wrong for this muscle	the mechanism is corrected in the toy gate first, lands as the next engine version with no LOSS, and the benchmark runs again
a knob moved and the muscle went past its own limit, or another muscle's room was taken	a guard did not hold	the guard is corrected (as omni-v13 did for the conveyance on a shared host) and lands the same way
no knob moved, and the gauge still differs	the test machine, native's setup or the scoring	the rig or the scorer is fixed; a test machine's limit is never reported as Omni-Compass's result

Nothing is ever tuned to make a row read well; no row is steered. What is held to the letter is the mechanism: the code does what its rule says, the wire is fastened right, the harness measures as a deployment runs. On the page, each muscle of the stress-test model and of the replay carries its own switch on its card (the page's section 5a): one muscle handed back to native while the rest stay governed, to see that muscle's part in the result. On a real machine the same choice is the muscle's wiring, its knob set to watch (the Operator's Manual's wiring of each muscle); a live switch per muscle on the running engine, beside the kill switch, is the next version's work (`docs/CHANGE_CONTROL.md`).

30.5 On your own system

The Operator's Manual's "wired right or wired wrong" (the Operator's Manual's section 4.5) and its drill book (the Operator's Manual's chapter 28) are the procedure; `DISCLOSURES.md`, section 4, is the rule: where a result elsewhere differs from the published record, the first presumption is the wiring, the settings or the reading, not the law.

CHAPTER 31

What the Page Does Not Tell You

31.1 It decides nothing

The page is a monitor. Every word on it was decided in the repository when its table was written. A reading you disagree with is taken up with the table and its runs, never with the page.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

31.2 Class S is not proof

The harness, the shipped controller on the toy cluster, the GPU card, the Linux host, the realms table, the grid's modelled half and the orchestra are our own models. They show the mechanism; they do not measure a machine. A model's energy is not a meter's. The page says the class on every view, and the manuals say it again.

31.3 Slots not yet run are empty on purpose

The metered chip runs, the CPU host's meter, the clouds' sets still running and the register's third-party slots are written as the repository holds them and marked not yet run. An empty slot is a true reading of the record. Nothing is drawn in its place.

31.4 The page's age

A page is true for the build it names. The last tile of the wall is its age; the title block is its commit. A reading landed after the build is on the next page.

31.5 The page's section 8d is measured on your machine

The self-governed rendering is class L on the viewer's own device; its numbers are the viewer's browser's and prove nothing about any server.

31.6 Ask Omni-Compass is composed

Its answers are drawn from the page's records by a language model on the viewer's own account, are not reviewed by any outside party, and are not a record. The records are the tables and the raw files.

PART TEN

License and Your Copy

The terms the page and this manual are licensed under, and how to verify a copy of the page.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

CHAPTER 32

License and Commercial Terms

The live engine page, this manual and every part of the repository are the property of The Omni-Compass LLC; all rights reserved; all patents, copyrights and trademarks filed in the USA. Use is evaluation and simulation only under `LICENSE` (`LicenseRef-OmniCompass-Evaluation-1.0`); any commercial use, commercialization, monetization, production use, redistribution or hosted service requires a signed, paid Omni-Compass Enterprise License (`ENTERPRISE_LICENSE.md`). The license is governed by the laws of the State of Delaware and the federal laws of the United States, and the state courts of Delaware and the United States District Court for the District of Delaware have exclusive jurisdiction. Serving the page to others is a hosted service and needs the Enterprise License. The license, the licensing questions and answers, the third-party notices, the Enterprise License's standard terms, the patents and trademarks and the security policy are bound into this book in full (Appendices F to K). Licensing, pilots and evaluations: the Contact page.

CHAPTER 33

Verifying Your Copy of the Page

33.1 The engine

`python3 tools/omni_version.py` prints the engine the checkout stands on and its digest; the page's `<html data-engine>` must name the same. `python3 docs/engine/build_live_engine.py --check` rebuilds the page in memory and exits 1 if any record differs from the page; nothing is written.

33.2 The mathematics

`python3 docs/engine/check_live_engine.py` runs the page's brain, compass law and verdict against the Python and the C++ (`docs/engine/cpp_core_probe.cpp`) and prints the largest difference, which is at machine precision.

33.3 The records

`python3 docs/engine/check_records.py` reproduces every record the page carries by an independent path and compares value by value; `docs/engine/APPRAISAL.md` is the standing result.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

33.4 The wiring

`python3 -m unittest tests.test_live_monitors` holds every monitor to its wiring: every page function a monitor names is in the page's script; every Python, C++ and check file it names is in the repository; every monitor sits in a numbered section; every section of the page closes what it opens; and every panel of the Grafana wall sits under the row of its section, numbered as the page numbers it.

33.5 The whole

`python3 verify.py` runs every check of the repository, this page's included, and ends `VERIFICATION: PASS`; `python3 tools/release_manifest.py` writes `RELEASE_MANIFEST.json` at the commit and must read 0 FAIL. A copy whose page, engine or records differ from what these print is not a copy of the record.

Back Matter

BACK MATTER

Glossary

- **Alarm tile.** A judged row of a real or modelled run that read LOSS, or a run that ended without a measurement, raised on the wall worst first with its source and its root-cause document.
- **Anchor.** The part of a page address after **#** (`#s-health`) that names a section and does not move when sections are renumbered.
- **Band.** A reading's safe range, from calm (p = 0) through its center (p = 0.5) to its line (p = 1), with 5% cushions.
- **Beat.** One turn of the governor's loop: read, decide, write, renew the lease. The heart.
- **Calm.** $\kappa \cdot h \cdot (1 - (\sigma - 1)^{+}) \cdot (1 - \min(v, 1))$: the nerves' one number, against which each organ's threshold θ grants a hand-back.
- **Class (P, L, S).** The evidence class of a number: a physical meter, live software, our own models.
- **Compass position (p).** Where a reading sits in its band; 0 calm, 1 at the line.
- **Console.** The page's section 2c: every runtime control of the live engine, acting on both sides alike.
- **Decision.** One turn of the governor; the unit of time on every live monitor.
- **Dial.** The max (every muscle to its own limit, never below native; the default) or the tune-down (never more than native).

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Engine that stands.** The engine version on main, named on the page's title block and in `python3 tools/omni_version.py`.
- **Golden signals.** Latency, traffic, errors and saturation: on the wall, the work waiting, the work done, the decisions past their line and the capacity held.
- **Heart.** The governor's beat and its lease, drawn on the official run playback.
- **Immune system.** Omni-Compass's: native twins, the heat debt, the cure on the spot, the pools' give-back, the bone's grant.
- **Kill switch.** The instant hand-back of every lever to native, for security; red on the switch and on every time axis.
- **Lease.** The governor's proof of life; when it ages past its limit the watchdog walks every setting back to native.
- **Live / Recorded.** A knob marked Live acts on the live engine; one marked Recorded data chooses a record and modifies nothing.
- **Master switch.** The one switch at the top of the organism: ON (green), the kill switch engaged (red), OFF (white).
- **Monitor.** One section of the page that draws a record or the live engine; its small copy on the wall is a tile.
- **Native.** The whole system by itself with everything it ships with; orange.
- **Omni-Compass.** Omni-Compass on top of native; blue.
- **Pedal.** Push for more, lift for less; the force column of the governor's ticker.
- **Power given.** A resource spent or held that rose: what Omni-Compass put in to buy the work and speed beside it; green.
- **Shown, not judged.** A gauge declared in advance as shown only; grey; counted in no total.
- **Stopping rule.** The cloud sets' preregistered looks at 10, 20, 40 and 70 repetitions with 99% intervals (`tools/stop_rule.py`).
- **Ticker.** The governor's decisions (first ticker) and native's own controllers' moves (second ticker), newest first.
- **Tile.** One small monitor on the wall; click it to go to the monitor it copies.
- **Verdict.** The paired trial every step past native must pass: kept unless it reads LOSS or exceeds the 2% allowance.
- **Wall.** Every monitor of the page in one view (the page's section 1c), numbered 1 upward in its order of appearance and read left to right.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

APPENDIX

Appendix A. The Page, Section by Section

Page section	Anchor	Title	Chapter of this book
i	`#notice`	Legal notice	Notice and Disclaimer
ii	`#title-page`	Title page and build	1, 29
iii	`#s-problem`	The problem and the answer	The Problem and the Answer
iv	`#s-read`	Executive summary and reading key	the key; 3
v	`#contents`	Engine table of contents	2
1	`#p-health`	Watch first: the switch, the alarms, the wall and every LOSS	4 to 6
1a	`#s-health`	The control panel and the kill switch	4, 6
1b	`#s-status`	The status board: tiles, alarms and watch items	5, 6
1c	`#s-wall`	The monitor wall, read left to right	6
1d	`#s-loss`	Every LOSS row: its cause and its knob	5, 30
1e	`#s-feed`	The golden signals, the event log and the live metrics	5
2	`#p-organism`	The three arms, live, and the knobs that turn them	7 to 10
2a	`#s-direct`	Omni direct: the three arms, native, Omni on native and Omni direct	7
2b	`#s-engines`	The organism, live	8

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Page section	Anchor	Title	Chapter of this book
2c	#s-desk	Control console, and the native switch	9
2d	#s-dial	The heartbeat dial: every beat beside native	10
3	#p-effect	The measured effect: what Omni-Compass did against native	11, 12
3a	#s-board	The benefit board	11
3b	#s-whole	The whole organism, every way it is bought	12
3c	#s-fleet	Measured effect in full	11
4	#p-evidence	Evidence by stack, from the cloud down to the chip	13 to 18
4a	#s-cloud	Cloud providers: Azure, Google Cloud, Amazon Web Services	13
4b	#s-orch	Orchestrators and governors	14
4c	#s-ops	Kubernetes: official run playback	15
4d	#s-runs	Kubernetes: per-repetition run telemetry	16
4e	#s-live	Kubernetes and cloud: the shipped controller's decision trace	17
4f	#s-stacks	Hardware: the GPU card and the CPU host	18
5	#p-brain	Control architecture: the brain	19 to 23
5a	#s-decision	One control cycle, traced	19
5b	#s-plane	Phase plane and scoreboard	20
5c	#s-brain	The brain's internal state	21
5d	#s-verdict	The verdict: change acceptance testing	22

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Page section	Anchor	Title	Chapter of this book
5e	`#s-lab`	Telemetry analytics: the tensor, the modes, the service level	23
6	`#s-fail`	Failure modes, controls and residual risk	24
7	`#p-parts`	The proof: the Python's runs, the C++ twin and the mathematics	6, 25, 33
7a	`#s-proof`	The Python's runs, in this page	6, 33
7b	`#s-cpp`	The C++ twin: the Python's runs through the C++ engine	25.3
7c	`#s-math`	Component specification and mathematics	25.1, 25.2
8	`#p-ref`	Reference: the monitor list, the switch's wiring, the pipeline and the page's own rendering	4, 6, 26, 27
8a	`#s-monlist`	The monitor list: every monitor by its number	6
8b	`#s-master`	The master switch's wiring	4
8c	`#s-github`	CI pipeline: GitHub Actions	26
8d	`#s-self`	Self-governed rendering	27
vi	`#s-disclose`	Disclosures, governing law and contact	31, 32
vii	`#notice-end`	Closing legal notice	Notice and Disclaimer

APPENDIX

Appendix B. Every Control of the Console

Control	Where	Acts on	Leaves alone
Kill switch	the top of the wall; the console	every lever of every governor on the page, to	the records: nothing recorded is modified

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Control	Where	Acts on	Leaves alone
		native at once; shades every time axis red	
Turn Omni-Compass OFF / ON	the console	the brain's outputs: OFF, read in shadow, nothing leaves; ON, outputs reach the muscles	the native side, which never stops
The max / Tune-down	the console	the dial of the live engine's governor	the records; the official runs' own dial, named in each
Demand ×	the console	every muscle's demand, both sides, from this decision on	the seed
Noise σ	the console	each muscle's demand each decision, 1 + σ·z, one draw shared by both sides	the seed's day
Sensor delay (as it is, +8 ms, +16 ms)	the console	the decisions between a muscle's act and its controller's reading, both sides	the demand
Surge ×2 / Lose half its machines / A sense goes blind / Security hold	the console	one body part for 40 decisions, both sides	every other part
Pause / One decision / 1× 4× 16× 60×	the console	the console's clock	nothing else
The same day again / A new day	the console	the seed replayed or redrawn, with the knobs as set	the knobs
Every knob to its start	the console	demand, noise and delay, back to the day as written	the dial and the switch
A / B / C	the page's sections 4c, 4d, 4e, 4f	which run is played	the other runs
Benchmark, run, repetition	the page's sections 4c, 4d	which record is played	the record itself

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Control	Where	Acts on	Leaves alone
Each muscle alone / One organism / Stress-test model	the page's section 5a	which body the organism monitor plays	the console's knobs, which act on whichever plays
Its own load / The climb / Work waiting in line	the page's section 3c	which load the realms table is read under	the table
On-site bare metal / Through the cloud / In the device / As a service	the page's section 3b	which way the stack is bought in the composition	the receipts
Every measured piece / The strict reading	the page's section 3b	which rule the synopsis counts by	the factors
Its one run beside the count / in the count	the page's section 3b	whether a governor that replaces a controller enters the whole	the governor's own table
ALERT / WARN / INFO; All / LOSS / The runs disagree / Live now / Guards and open items / GitHub	the page's sections 1b, 1e, 3c	which rows are shown	the rows
Copy the exposition	the page's section 1e	the clipboard	the page
This muscle: Omni-Compass ON / handed back to native; Every muscle back under Omni-Compass	the page's section 5a, on the muscle's card	one muscle of the stress-test model run by native's own controller alone, or in a replay shown by native's own record, while every other muscle stays governed	the body's recorded totals in a replay; the kill switch, which hands every muscle back at once
Run the Python's 500 runs here; a new set (base seed, count); print and download the receipts	the page's sections 1a (the control panel) and 1f (the proof monitor)	the page's own run of the Python's seeded runs, its digest against the Python's	the Python's record, `results/engine_runs/`
Speak aloud / Ask Omni-Compass / Stop	the page's section 5e	the viewer's browser voice; a question composed on the viewer's own account	the records

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

APPENDIX

Appendix C. The Gauges on the Wall

Gauge	Side	Aim	GAIN reads	Power given reads	Where it comes from
The work waiting	both	time waited: lower	the blue line under the orange	—	the live engine; on the official runs, pending pods and the queue
The work done	both	work done: higher	the blue line over the orange	—	requests served, jobs finished, work inside the line
The decisions past their line	both	missed: lower	fewer blue past the line	—	the compass positions over 1
The capacity held	both	a resource held	a fall (a cut)	a rise	machines, replicas, clock in service
Response time, mean, 95th, 99th	both	time waited: lower	a fall	—	the runs' own samples, binned
Time over the response line	both	missed: lower	a fall	—	the share of samples over the line
Failed requests	both	failed: lower	a fall	—	the load generator's record
Alert minutes	both	time over the line: lower	a fall	—	whole minutes whose 95th percentile, failed requests counted over, was over the line
Machines billed, the compute bill	both	a resource spent	a fall	a rise	the cloud's own count of machines, priced at list

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Gauge	Side	Aim	GAIN reads	Power given reads	Where it comes from
Energy (declared model, the meter, Kepler)	both	a resource spent	a fall	a rise	the declared model; the RAPL counters where a meter exists (P); Kepler shown, not judged
HPA replicas, pods started	both	a resource held	a fall	a rise	native's autoscaler's own record in both arms
Pod start wait, total and mean	both	time waited: lower	a fall	—	the pods' own start times; the test machine's limit never read as the governor's
The governor's commands, its additions inside the line, its own processor time	Omni-Compass	shown, not judged	—	—	the audit; native is 0
Frame time, frames dropped, frames waited	both	time waited: lower	a fall	—	the viewer's browser (L, the viewer's machine)

APPENDIX

Appendix D. The Colours and the Marks

Mark	Meaning
Orange	native
Blue	Omni-Compass; on a reading, power given
Green	GAIN
Yellow	EVEN
Red	LOSS; the kill switch and its window; the master switch engaged
White, dashed edge	the runs disagree; the runs differ; not a reading
Grey	shown, not judged; a monitor with no record yet
Dashed blue on orange	Omni-Compass's side following native with the switch OFF
Accent border on a tile	the monitor it copies is on screen now

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Mark	Meaning
Red shading across a time axis	a kill-switch window
A bar on a ring	a room's heat debt (the immune system)

APPENDIX

Appendix E. Troubleshooting the Page

Symptom	Cause	What to do
The page is slow or stutters	the browser's own loop would draw every chart on every frame	the page's section 8d governs it: charts off screen wait; close other tabs; the kill switch on the console shows native's loop for comparison
A tile is grey and says "not yet run"	the record does not exist yet	nothing: an empty slot is a true reading; the board says where it stands
A monitor says "stopped before a result"	a cloud or chip run ended without a measurement	the alarms table carries it; the run's own log says why (a key cut short, a plan, a quota); fix at the cloud, never on the page
The age of the page is over three hours	the rebuild did not run or did not land	`.github/workflows/live-engine.yml` on GitHub; `python3 docs/engine/build_live_engine.py` locally
A number on the page differs from a table	the page was built before the table changed	the age tile; the table governs; the next build carries it
The two sides are identical on a monitor	the muscle is at its limit on native, or Omni-Compass left it native	EVEN, correct; chapter 26.4
The first ticker is empty	the switch is OFF or the kill switch engaged	nothing decides on top of native while it is; turn it ON
The page refuses to build	the checkout's engine is not the one the page names	a new engine is written into the page's words by a person first; `python3 tools/omni_version.py`

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

APPENDIX

Appendix F. The License

The license under which this book and the software are made available, as it stands in the file `LICENSE` at the root of the repository.

```
Omni-Compass Evaluation License, version 1.0 (revised 11 October 2026)
SPDX-License-Identifier: LicenseRef-OmniCompass-Evaluation-1.0

Copyright (c) 2026 The Omni-Compass LLC. All rights reserved.
All patents, copyrights and trademarks filed in the USA. www.omni-comp
    ↪ ass.com

THIS IS NOT AN OPEN-SOURCE LICENSE. The Software is proprietary. It is
    ↪  published so that it can be evaluated, reproduced
and audited, and for no other purpose. It is licensed, not sold. Evalu
    ↪ ation and simulation are free of charge; every
other use, and in particular every commercialization or monetization o

    ↪ f any kind, requires a signed, paid Omni-Compass
Enterprise License.

ACCEPTANCE. By downloading, copying, forking, installing, running, sca
    ↪ nning or otherwise using any part of the Software,
You accept this license. If You do not accept it, You may not use the

    ↪ Software. If You use the Software on behalf of an
organization, You represent that You have authority to bind it, and "Y
    ↪ ou" includes that organization and its
Affiliates.

1. DEFINITIONS
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
1.1 "Licensor" means The Omni-Compass LLC.
1.2 "Software" means everything Licensor publishes or makes availab
 ↪ le under this license, in any form: the source
    code and any object code; the Omni-Compass engine, the compass
 ↪ law, the governors, controllers, brains, shields,

    plugs and wiring; the harnesses, tools, scripts, workflows, con
 ↪ figurations, presets, catalogs, organisms and realms;
    the documentation, the manual, the book, the specifications, th
 ↪ e preregistrations and the receipts; the benchmarks,
    data, tables, reports and Results published by Licensor; and ev
 ↪ ery update, version and copy of any of them.

1.3 "Mechanism" means the methods, processes, control laws, algorit
 ↪ hms, architectures and systems embodied in or
    described by the Software, including everything described in th
 ↪ e patent applications Licensor has filed.
1.4 "Evaluation" means internal use by You, free of charge, solely
 ↪ to test, study and assess the Software in

    contemplation of an Enterprise License: reading it; running its
 ↪  tests, verifiers, benchmarks and simulations; and
    running it in observe, watch, dry-run or shadow mode, or in a t
 ↪ est environment, on systems You own or control,
    where it writes to no system that serves production traffic, re
 ↪ al users, customers, patients or passengers, and to

    no power system, vehicle, machine or physical process outside a
 ↪  test bench.
1.5 "Simulation" means running the Software against modelled, recor
 ↪ ded or synthetic systems, including the organisms,
    realms, traces and simulators published with the Software.
1.6 "Production Use" means any use that is not Evaluation or Simula

 ↪ tion, including any use in which the Software, the
    Mechanism or any output of either controls, governs, tunes, siz
 ↪ es, schedules or otherwise influences a system that
    serves production workloads or real users, or any physical proc
 ↪ ess outside a test bench.
1.7 "Commercial Use" means any use for, or in connection with, comm
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
    ↪ ercial advantage, revenue, cost reduction in
       operations, or monetary or other compensation, including consul
    ↪ ting, integration, managed, outsourcing, training,
       benchmarking-for-hire and advisory services, and any use by or
    ↪ for a for-profit operation beyond Evaluation.
   1.8 "Hosted Service" means making the Software, the Mechanism or an

    ↪ y of their functionality available to any third
       party over a network or as a service, including software-as-a-s
    ↪ ervice, platform-as-a-service, a managed or
       outsourced service, a cloud marketplace offering, or a feature
    ↪ of another product or service.
   1.9 "Derivative" means any modification, adaptation, translation, p

    ↪ ort, extension or re-implementation of the Software
       or of the Mechanism, and any work that incorporates, is based o
    ↪ n, or is built using the Software as a reference.
   1.10 "Results" means the measurements, tables, receipts, logs, repo
    ↪ rts and other outputs produced by running the
       Software.

   1.11 "Enterprise License" means a written agreement for the Softwar
    ↪ e signed by Licensor and a licensee, under which
       the licensee pays the fees it sets out; it may include order fo
    ↪ rms, riders and statements of work.
   1.12 "Marks" means the names "Omni-Compass" and "OmniCompass", the
    ↪ Omni-Compass compass rose with its ring of Greek

       letters, and every related name, logo and trade dress of Licens
    ↪ or.
   1.13 "Affiliate" means any entity that controls, is controlled by,
    ↪ or is under common control with You, where control
       means ownership of more than half of the voting interests or th
    ↪ e power to direct management.

   1.14 "You" means the individual or entity exercising rights under t
    ↪ his license, with its Affiliates where the
       Acceptance paragraph above includes them.

2. WHAT THIS LICENSE ALLOWS
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
   2.1 Copyright license. Subject to Your compliance with this license
    ↪ , Licensor grants You a personal, worldwide,
       royalty-free, non-exclusive, non-transferable, non-sublicensabl
    ↪ e and revocable license to download, copy, read,
       run and modify the Software solely for Evaluation and Simulatio
    ↪ n, and to reproduce and publish Results as section

       4 allows.
   2.2 Patent license. Subject to the same conditions, Licensor grants
    ↪  You a license of the same scope, under the patent
       rights Licensor holds or will hold in the filed applications an
    ↪ d any patent issuing from them, solely to the
       extent needed to carry out Evaluation and Simulation with the S

    ↪ oftware. No patent license is granted for any
       Production Use, Commercial Use or Hosted Service, for any Deriv
    ↪ ative used outside Evaluation or Simulation, or for
       any implementation of the Mechanism other than the Software its
    ↪ elf.
   2.3 Forks. You may keep a copy or a fork of the Software on a code-

    ↪ hosting service, publicly or privately, only for
       Evaluation and Simulation, with this license and every notice i
    ↪ ntact. A fork confers no right beyond this license.
   2.4 Reservation. Every right not expressly granted is reserved by L
    ↪ icensor. No right, title, license or interest is
       granted by implication, estoppel, exhaustion or otherwise.

3. WHAT THIS LICENSE DOES NOT ALLOW

   Unless an Enterprise License expressly permits it, You may not, and
    ↪  may not let or help anyone else:
   (a) make any Production Use or Commercial Use of the Software, the

    ↪ Mechanism or any Derivative;
   (b) commercialize or monetize the Software, the Mechanism, any Deri
    ↪ vative or any Result in any way, directly or
       indirectly, including by charging for access, services, support
    ↪ , results, savings or outcomes they produce;
   (c) offer the Software, the Mechanism or any Derivative as, or as p
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
    ↪ art of, a Hosted Service;
   (d) sell, resell, license, sublicense, lease, rent, lend, distribut
    ↪ e, publish as a package or binary, or otherwise
       transfer the Software or any Derivative, except forks under sec
    ↪ tion 2.3;
   (e) incorporate the Software, any part of it or any Derivative into

    ↪  any product, service, platform, appliance, image,
       firmware or offering;
   (f) use the Software, the Mechanism, the documentation or the Resul
    ↪ ts to design, build, train, tune, benchmark for
       sale, or improve any product or service that competes with Omni
    ↪ -Compass, or to re-implement the Mechanism;

   (g) use the Software or the Results to train, fine-tune or evaluate
    ↪  any machine-learning model intended to reproduce,
       imitate or substitute for the Mechanism;
   (h) remove, alter or obscure any notice, the SPDX identifiers, the
    ↪ patent and trademark notices, this license, the
       NOTICE or DISCLOSURES.md, or circumvent, disable or work around

    ↪  any limit, switch or safeguard in the Software,
       including the kill switch and the hand-back to native settings;
   (i) connect the Software so that it writes to a safety-critical sys
    ↪ tem, as section 10 describes;
   (j) use the Marks, except to refer to Omni-Compass accurately as TR
    ↪ ADEMARKS.md allows; or

   (k) use the Software in violation of any law, or in breach of secti
    ↪ on 11.

4. REPRODUCING AND PUBLISHING RESULTS

   You may reproduce the benchmarks published with the Software and pu

    ↪ blish Your own Results, provided that You: (a)
   name the Software's engine version and the exact commit You ran; (b
    ↪ ) report every measured row, the unfavourable ones
   included, with the evidence class the Software assigns to it; (c) m
    ↪ ake Your complete raw files and configuration
   available to Licensor on request; (d) do not state or imply any end
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
    ↪ orsement, certification or affiliation by
   Licensor; and (e) carry the notice at the top of README.md. Publish
    ↪ ing Results is not Commercial Use so long as no
   compensation is received for it, and it grants no right beyond this
    ↪  license.

5. THE OMNI-COMPASS ENTERPRISE LICENSE

   5.1 Every Production Use, Commercial Use, Hosted Service, distribut
    ↪ ion, incorporation, OEM or embedded use, and every
       other commercialization or monetization of the Software, the Me
    ↪ chanism or any Derivative requires an Enterprise

       License, signed before the use begins and paid as it provides.
    ↪ Moving from Evaluation to Production Use requires
       an Enterprise License before the first write to any production
    ↪ system.
   5.2 An Enterprise License sets its own scope, fees, term, support,
    ↪ warranties, indemnities and limits

       (ENTERPRISE_LICENSE.md summarizes the standard terms; the signe
    ↪ d agreement alone is binding). For its licensee and
       its scope, a signed Enterprise License governs where it differs
    ↪  from this license.
   5.3 Enterprise licensing: The Omni-Compass LLC, main office infrast
    ↪ ructure, toll-free direct 1-888-339-9551, system route asset 1-8

    ↪ 88-DEX-YLL-1, landline 321-746-4411 registered in Florida, www.o
    ↪ mni-compass.com.

6. OWNERSHIP AND INTELLECTUAL PROPERTY

   6.1 Licensor and its licensors own the Software, the Mechanism, the

    ↪  Marks and all intellectual property rights in
       them, including in every Derivative to the extent it embodies t
    ↪ hem. Nothing in this license transfers ownership.
   6.2 All patents, copyrights and trademarks covering the Omni-Compas
    ↪ s engine, its mathematics and its software have
       been filed in the United States by The Omni-Compass LLC. No fil
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
    ↪ ing number is stated here, and no grant,
       registration or approval is claimed; the status of every filing
    ↪  is held by the office where it was filed. Every
       person who downloads, copies, forks, scans or runs the Software
    ↪  is on notice of these filings and of this
       license (PATENTS.md, TRADEMARKS.md).

   6.3 Any use outside this license, without an Enterprise License, is
    ↪  unlicensed and infringes Licensor's copyright and
       other rights, in addition to breaching this license.

7. PATENT AND RIGHTS DEFENSE

   If You or any of Your Affiliates bring or join any claim, countercl
    ↪ aim or proceeding alleging that the Software or
   the Mechanism infringes, misappropriates or violates any patent, co
    ↪ pyright or other intellectual property right, or
   challenge the validity or enforceability of any of Licensor's right
    ↪ s in them, every license granted to You under this

   license ends automatically on the date the claim or challenge is fi
    ↪ led.

8. FEEDBACK AND CONTRIBUTIONS

   8.1 If You give Licensor comments, suggestions, ideas, reports or o

    ↪ ther feedback about the Software, You grant
       Licensor a perpetual, irrevocable, worldwide, royalty-free righ
    ↪ t to use, disclose and exploit it for any purpose,
       without obligation of any kind.
   8.2 Contributions are accepted only under the contributor license a
    ↪ greement (.github/CLA.md).

9. CHANGES

   Licensor reserves the right to change the Software, its documentati
    ↪ on, its results and these terms at any time,
   without notice. A changed version of these terms applies to every c
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
    ↪ opy of the Software obtained, and to every use
   made, after it is published in the Software's repository; continued
    ↪  use after publication is acceptance of the
   changed terms. Licensor may discontinue the Software, or this licen
    ↪ se for future copies, at any time.

10. SAFETY

   The Software is not designed, tested or certified for safety-critic
    ↪ al use. Under this license it may not write to
   any system whose failure could cause death, injury, environmental d
    ↪ amage or significant property damage, including

   vehicles and aircraft, medical devices, power-grid protection and d
    ↪ ispatch, industrial safety systems and life-safety
   systems; such systems may be studied only in Simulation. Any live c
    ↪ onnection to a physical system requires an
   Enterprise License, a written safety case accepted by the system's
    ↪ owner, and every review that system's regulator or

   owner requires. The machines' own controls and protections stay in
    ↪ place; the kill switch must remain operable at all
   times.

11. EXPORT CONTROL, SANCTIONS AND LAWFUL USE

   You will comply with every export-control, sanctions, anti-corrupti
    ↪ on and other law that applies to the Software and
   to Your use of it, including the U.S. Export Administration Regulat
    ↪ ions and the sanctions administered by the U.S.
   Treasury's Office of Foreign Assets Control. You represent that You
    ↪  are not located in, organized under the laws of,

   or ordinarily resident in a country or region subject to comprehens
    ↪ ive U.S. sanctions, and that You are not on, or
   owned or controlled by a party on, any U.S. restricted-party list.
    ↪ You will not use the Software for any end use
   prohibited by those laws, including the design, development or prod
    ↪ uction of weapons of mass destruction.
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
12. DATA AND PRIVACY

   The Software contains no telemetry. It sends nothing to Licensor an
    ↪ d makes no network connection of its own except to
   the systems You point it at. Your data and Your Results stay on You

    ↪ r systems and are Yours, subject to section 4. If
   You send Licensor any material (for example in an issue or an e-mai
    ↪ l), You represent that You may lawfully do so and
   that it contains no personal data or confidential information of an
    ↪ y third party.

13. THIRD-PARTY COMPONENTS

   Files that carry a different license notice (for example tests/thir
    ↪ d_party/) and third-party data sets (for example
   the PlanetLab traces under fleet/traces/ and k8s_controlplane/trace
    ↪ s/) remain under their own terms

   (THIRD_PARTY_NOTICES.md). Third-party software the Software runs on
    ↪  or connects to (Kubernetes, KEDA, Karpenter,
   NVIDIA drivers, databases and others) is licensed by its owners und
    ↪ er their own terms.

14. TERM AND TERMINATION

   14.1 This license lasts until it ends under this section or section
    ↪  7.
   14.2 It ends automatically, without notice, if You breach it. If Yo
    ↪ ur breach is Your first, was inadvertent, and is
        not a breach of sections 3(a) to 3(g) or section 10, Your lice

    ↪ nse is reinstated if You cure the breach within
        thirty days after You learn of it or after Licensor notifies Y
    ↪ ou, whichever comes first.
   14.3 Licensor may end this license for any person at any time by wr
    ↪ itten notice, and for all persons for future
        copies under section 9.
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
   14.4 When this license ends, You must stop all use of the Software,
    ↪  delete or destroy every copy and Derivative in Your
        possession or control, and, on request, certify in writing tha
    ↪ t You have done so.
   14.5 Sections 1, 3, 4(b) to 4(e), 6, 7, 8, 11, 12, 15 to 18 and 19
    ↪ survive the end of this license.

15. NO WARRANTY

   TO THE FULLEST EXTENT PERMITTED BY LAW, THE SOFTWARE, THE MECHANISM
    ↪  AND THE RESULTS ARE PROVIDED "AS IS" AND "AS
   AVAILABLE", WITH ALL FAULTS AND WITHOUT WARRANTY OR CONDITION OF AN
    ↪ Y KIND, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ANY
   WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITL
    ↪ E, NON-INFRINGEMENT, ACCURACY, QUIET ENJOYMENT, OR
   THAT THE SOFTWARE WILL BE ERROR-FREE OR UNINTERRUPTED. NO RESULT IS
    ↪  A PROMISE OF ANY OUTCOME ON ANY OTHER SYSTEM;
   MODELLED RESULTS (EVIDENCE CLASS S) ARE STATEMENTS ABOUT THE MODEL,
    ↪  NOT MEASUREMENTS (DISCLOSURES.md). YOU USE THE
   SOFTWARE AT YOUR OWN RISK AND ARE RESPONSIBLE FOR ITS USE ON YOUR S
    ↪ YSTEMS.

16. LIMITATION OF LIABILITY

   TO THE FULLEST EXTENT PERMITTED BY LAW, LICENSOR, ITS MEMBERS, MANA
    ↪ GERS, EMPLOYEES, CONTRACTORS AND LICENSORS SHALL NOT
   BE LIABLE FOR ANY INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL, EXE
    ↪ MPLARY OR PUNITIVE DAMAGES, OR FOR ANY LOSS OF
   PROFITS, REVENUE, SAVINGS, DATA, USE OR GOODWILL, OR ANY COST OF SU
    ↪ BSTITUTE GOODS OR SERVICES, ARISING OUT OF OR
   RELATING TO THE SOFTWARE, THE MECHANISM, THE RESULTS OR THIS LICENS
    ↪ E, UNDER ANY THEORY OF LIABILITY, EVEN IF ADVISED OF
   THEIR POSSIBILITY. LICENSOR'S TOTAL LIABILITY FOR ALL CLAIMS SHALL
    ↪ NOT EXCEED ONE HUNDRED U.S. DOLLARS (USD 100). THESE
   LIMITS APPLY EVEN IF A REMEDY FAILS OF ITS ESSENTIAL PURPOSE.
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
17. INDEMNITY

   You will defend, indemnify and hold harmless Licensor and its membe
    ↪ rs, managers, employees and contractors from and
   against every claim, loss, liability, damage, cost and expense (inc
    ↪ luding reasonable attorneys' fees) arising out of

   or relating to (a) Your use of the Software outside this license, (
    ↪ b) any Production Use, Commercial Use or Hosted
   Service without an Enterprise License, (c) Your Derivatives, (d) Yo
    ↪ ur Results as You publish them, or (e) Your
   violation of any law or third-party right.

18. U.S. GOVERNMENT END USERS

   The Software is "commercial computer software" and "commercial comp
    ↪ uter software documentation" as those terms are
   used in 48 C.F.R. 2.101, 12.212 and 227.7202. A U.S. Government end
    ↪  user acquires only the rights set out in this

   license, consistent with 48 C.F.R. 12.212 and 227.7202-1 through 22
    ↪ 7.7202-4.

19. GENERAL

   19.1 Governing law. This license is governed by the laws of the Sta

    ↪ te of Delaware and the federal laws of the United
        States, without regard to conflict-of-laws rules. The United N
    ↪ ations Convention on Contracts for the
        International Sale of Goods does not apply.
   19.2 Venue. The state courts of the State of Delaware and the Unite
    ↪ d States District Court for the District of

        Delaware have exclusive jurisdiction over any dispute arising
    ↪ out of or relating to this license, and You consent
        to their personal jurisdiction. Licensor may seek
        injunctive or other equitable relief in any court of competent
    ↪  jurisdiction, without posting a bond, to protect
        its intellectual property or confidential information; a breac
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
    ↪ h of sections 3 or 10 would cause Licensor
        irreparable harm.
   19.3 Enforcement costs. In any action to enforce this license, the
    ↪ prevailing party may recover its reasonable
        attorneys' fees and costs.
   19.4 Assignment. You may not assign or transfer this license or any

    ↪  right under it, by operation of law or otherwise;
        any attempt is void. Licensor may assign this license freely.
   19.5 Notices. Notices to Licensor go to The Omni-Compass LLC by tel
    ↪ ephone at its main office infrastructure (toll-free direct 1-888
    ↪ -339-9551; system route asset 1-888-DEX-YLL-1, landline 321-746-
    ↪ 4411 registered in Florida) or through www.omni-compass.com. Lic

    ↪ ensor may give notice to
        You through the Software's repository or at any address You ha
    ↪ ve given it.
   19.6 Severability and waiver. If any provision is held unenforceabl
    ↪ e, it is enforced to the maximum extent permitted and
        the rest of this license remains in effect. No failure or dela

    ↪ y in enforcing any provision is a waiver of it.
   19.7 Entire license. This license, with the NOTICE and DISCLOSURES.
    ↪ md, is the entire agreement between You and
        Licensor about its subject; for a licensee and its scope, a si
    ↪ gned Enterprise License governs where it differs.
   19.8 Interpretation. "Including" means "including without limitatio

    ↪ n". Headings are for convenience only. The
        English text of this license controls over any translation.
   19.9 Copies. Every copy, fork, export, report, archive or printout
    ↪ of any part of the Software must carry this
        LICENSE, the NOTICE and DISCLOSURES.md unchanged.

All rights reserved. Revision history: version 1.0 (evaluation and sim
    ↪ ulation only; first published 2026); revised
10 October 2026 (the notice in one wording everywhere); revised 11 Oct
    ↪ ober 2026 (definitions, patent license for
evaluation, hosted-service and machine-learning restrictions, results
    ↪ publication, patent and rights defense, safety,
```

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

```
export control, data, U.S. Government end users, term, cure, indemnity
    ↪ , Delaware governing law and venue).

Enterprise licensing: The Omni-Compass LLC, main office infrastructure
    ↪ , toll-free direct 1-888-339-9551, system route asset 1-888-DEX-
    ↪ YLL-1, landline 321-746-4411 registered in Florida, www.omni-com
    ↪ pass.com
```

APPENDIX

Appendix G. Licensing: Questions and Answers

Plain answers to the questions buyers, engineers and their lawyers ask. The binding terms are in `LICENSE`; where this page and `LICENSE` differ, `LICENSE` governs. Every declaration is in `DISCLOSURES.md`.

Is Omni-Compass open source? No. The source is published so that it can be evaluated, reproduced and audited. It is licensed under the Omni-Compass Evaluation License 1.0 (`LicenseRef-OmniCompass-Evaluation-1.0`), which permits evaluation and simulation only.

What may I do without a commercial license? Evaluation and simulation, free of charge (`LICENSE`, sections 1.4, 1.5 and 2): read the code; run `verify.py`, the simulations and the benchmarks; reproduce the published results and publish your own, every row included (`LICENSE`, section 4); run Omni-Compass in watch, dry-run or shadow mode, or in a test environment, on systems you own or control, where it writes to nothing that serves production traffic or real users and to no physical process outside a test bench. A limited patent license comes with it, for evaluation only (`LICENSE`, section 2.2).

What needs the Omni-Compass Enterprise License? Every commercialization or monetization of any kind; production use; operating any system beyond evaluation; offering it, or its function, as a hosted, managed or software-as-a-service offering; redistributing it; incorporating it, or any part or derivative of it, into a product, service, appliance or firmware; using it or its results to build or train a competing product (`LICENSE`, sections 3 and 5). The Enterprise License is a written agreement signed by The Omni-Compass LLC and paid for; its standard terms are summarized in `ENTERPRISE_LICENSE.md` (production, hosted service, OEM and embedded, managed service provider, research).

May I run it as a service for others? Not without an Enterprise License with a hosted-service rider (`LICENSE`, section 3(c); `ENTERPRISE_LICENSE.md`, section 1).

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

May I connect it to a grid, a plant, a vehicle or a medical device? Not under the evaluation license: such systems may be studied only in simulation. A live connection to any physical system needs an Enterprise License and a written safety case accepted by the system's owner (`LICENSE`, section 10).

How is the Enterprise License priced? Against the measured gain on the customer's own paired receipts (native against Omni-Compass on the same system, the same load and the same clock). Terms are set in each signed agreement; no price stated anywhere in this repository is an offer.

Are patents involved? All patents, copyrights and trademarks covering the Omni-Compass engine, its mathematics and its software have been filed in the United States by The Omni-Compass LLC (`PATENTS.md`). The evaluation license grants no patent license beyond evaluation.

May I use the name or the compass rose? Only to refer to Omni-Compass accurately (`TRADEMARKS.md`).

May I contribute? Contributions require the contributor license agreement (`.github/CLA.md`): every contribution is assigned to The Omni-Compass LLC, with a patent license from the contributor.

Does Omni-Compass send data anywhere? No. The software contains no telemetry and makes no network connection of its own except to the systems an operator points it at (a Kubernetes API, `nvidia-smi`, a meter command).

What do scanners report? The license is declared in machine-readable form for Black Duck, FOSSA, Snyk and REUSE (`pyproject.toml`, `REUSE.toml`, `.fossa.yml`, `.snyk`, `sbom/`); third-party components are listed in `THIRD_PARTY_NOTICES.md`.

Can the terms change? Yes. The Omni-Compass LLC reserves the right to change the software, its documentation, its results and these terms at any time, without notice; a changed version applies to copies obtained and uses made after it is published (`LICENSE`, section 9). A signed Enterprise License governs its own term.

Which law governs? The laws of the State of Delaware and the federal laws of the United States, with exclusive venue in the Delaware state courts and the United States District Court for the District of Delaware (`LICENSE`, section 19). The Omni-Compass LLC is based in Florida.

Who do I contact? The Omni-Compass LLC, main office infrastructure, toll-free direct 1-888-339-9551, system route asset 1-888-DEX-YLL-1, landline 321-746-4411 registered in Florida, www.omni-compass.com.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

APPENDIX

Appendix H. Third-Party Notices

Omni-Compass uses the following third-party components. Each remains under its own license; nothing in the Omni-Compass Evaluation License changes those terms. Installed versions are those resolved from `requirements.txt`.

Component	Use	License
NumPy	numerical arrays	BSD-3-Clause
Matplotlib	charts in the reports	Matplotlib License (PSF-based, BSD-compatible)
ReportLab (open-source edition)	the printable book and reports	BSD-3-Clause
Numba	compiled inner loops of the motion-axis plant	BSD-2-Clause
PyTorch (on GPU machines only, not installed by `requirements.txt`)	the GPU workload of the benchmark	BSD-3-Clause
`tests/third_party/hpa_independent.py`	an independently written HPA reference used unmodified in tests	its own terms, stated in the file
Liberation Serif and Liberation Sans fonts (embedded in the PDF book)	typesetting	SIL Open Font License 1.1
DejaVu Sans and DejaVu Sans Mono fonts (embedded in the PDF book)	typesetting	Bitstream Vera / DejaVu license (free)
PlanetLab / CoMon VM CPU traces, March 2011 (`fleet/traces/`, `k8s_controlplane/traces/`; source in their `PROVENANCE.json`)	held-out demand for the modelled fleet	their own terms (public research data); no Omni-Compass copyright is claimed in them

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Component	Use	License
Google cluster-usage traces 2011 (`clusterdata-2011-2`), from which `results/traces/google2011/` is derived (`docs/TRACES_PREREGISTRATION.md`)	the public demand trace on the real cluster	Google's published terms for the traces; no Omni-Compass copyright is claimed in the trace itself

Kubernetes, kind, `kubectl`, the NVIDIA driver and `nvidia-smi` are not distributed with Omni-Compass; it calls them where an operator has installed them. Their names are the property of their owners (`DISCLOSURES.md`, section 1).

APPENDIX

Appendix I. The Enterprise License: Standard Terms

This page summarizes the standard terms of the Omni-Compass Enterprise License, the paid license that every production use, commercial use, hosted service, distribution, OEM or embedded use, and every other commercialization or monetization of Omni-Compass requires (`LICENSE`, section 5). It is a summary for evaluation and planning. It is not an offer, and it binds no one: only an Enterprise License signed by The Omni-Compass LLC and the licensee, with its order form, grants any right, and that signed agreement controls over this page in every respect.

I.1 What can be licensed

License	What it allows
Production	The licensee runs Omni-Compass on top of its own systems (clusters, fleets, cards, sites, plants), on premises or in its own cloud accounts, within the scope in the order form
Hosted service	The licensee offers Omni-Compass's function to its own customers as a hosted, managed or software-as-a-service offering, under a hosted-service rider (per customer, per managed unit or revenue share)
OEM and embedded	The licensee ships Omni-Compass inside its own product, appliance, firmware or platform, under an OEM rider (per unit or per installed base)

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

License	What it allows
Managed service provider	The licensee operates Omni-Compass for named third parties under a managed-service rider
Research	A university or public laboratory uses Omni-Compass beyond evaluation for non-commercial research and publication, under a research rider

Scope is set in each order form: the licensed systems and their size (machines, cores, cards, sites, muscles or managed units), the fields of use, the territory, the named sites or accounts, and the engine versions covered.

I.2 Fees

Fees are set in each order form: a subscription, a usage-based fee, a share of the measured value captured, or a combination, with any minimum commitment. Where fees track value, the value is measured on the licensee's own paired receipts (native against Omni-Compass on the same system, the same load and the same clock), by the method the order form names. Payment terms, taxes and late charges are as the order form states. No price, rate or benchmark in this repository is an offer.

I.3 What the licensee receives

1. The licensed engine at a named, sealed version (its fingerprint, `tools/omni_version.py`), and each later version the subscription covers.
2. The wiring kits and the plug for the licensed systems, the manual and the book, and the receipts tooling.
3. Support and maintenance at the tier in the order form: response targets, named contacts, and corrections of defects that reproduce on the licensed version.
4. Installation through the manual's levels: read-only first, the wire check, a watch arm equal to native, then writing levels one at a time, each with its receipt.

I.4 Warranties

1. **Conformance.** For the warranty period in the order form, the licensed version performs materially as its documentation describes. The remedy is correction or, failing that, a refund of the fees paid for the nonconforming version for the affected period.
2. **The safeguards.** The kill switch hands every setting back to the value read before Omni-Compass's first write; the shield keeps every write inside the cover the operator granted; Omni-Compass never fights another writer.
3. **No other warranty.** No outcome, saving or result on the licensee's systems is warranted. Published results are evidence about the systems they ran on (`DISCLOSURES.md`, section 2).

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

I.5 Intellectual property

1. The Omni-Compass LLC keeps all right, title and interest in Omni-Compass, the Mechanism and the marks. The licensee receives the rights its order form lists, for its term, and no others.
2. **Patent license.** The Enterprise License includes a license under The Omni-Compass LLC's patent rights in the filed applications, and in any patent issuing from them, for the licensed scope.
3. **Infringement indemnity.** The Omni-Compass LLC defends the licensee against a third-party claim that the licensed version, used as licensed, infringes that party's intellectual property, and pays the damages finally awarded or the settlement it agrees, subject to prompt notice, control of the defense and the usual exclusions (modifications, combinations, unlicensed use, versions superseded by an offered fix). Remedies may include a license, a modification or a refund.
4. **Confidential filings.** The patent application number and other confidential information are disclosed to a licensee under the agreement's confidentiality terms.

I.6 Limits of liability

Each party's liability is limited to the fees paid or payable in the twelve months before the claim, and neither party is liable for indirect, incidental, special, consequential or punitive damages, except for the exclusions the signed agreement states (for example, breach of confidentiality, the infringement indemnity, and the licensee's breach of the license scope).

I.7 Confidentiality, data and security

1. **Confidentiality.** Mutual, for the term and a period after it, covering non-public information either party gives the other.
2. **Data.** Omni-Compass contains no telemetry. The licensee's data, readings, settings and receipts stay on the licensee's systems and remain the licensee's. Where the licensee chooses to share data for support, a data-processing agreement applies.
3. **Security.** A software bill of materials ships with every version (`sbom/`); vulnerabilities are handled under `SECURITY.md`; the licensee may run the verifier (`python3 verify.py`) and the seal checks on every delivered version.

I.8 Safety and operation

1. The licensee remains the operator of its systems. The machines' own controls and protections stay in place; Omni-Compass sets only values they already accept.
2. Any connection to a physical system (grid, plant, vehicle, robot, medical device, facility) requires a written safety case accepted by the system's owner and every review its regulator requires; safety-critical systems are licensed only on those terms.
3. The kill switch stays operable at all times.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

I.9 Compliance, audit and insurance

1. Each party complies with export-control, sanctions and anti-corruption law.
2. The licensee reports usage against the licensed scope as the order form provides, and The Omni-Compass LLC may verify it on reasonable notice, no more than once a year.
3. Insurance, where the order form requires it, is carried by each party at the limits stated there.

I.10 Term, renewal and transition

1. Term and renewal are as the order form states.
2. On termination or expiry, the licensee stops use, every setting Omni-Compass changed is handed back to native (the hand-back is built into the engine), and every copy is returned or destroyed; transition assistance is available at the rates in the order form.
3. Source-code escrow for the licensed version is available under a three-party escrow agreement.

I.11 Governing law and precedence

The signed agreement states its governing law and venue; the standard is the law of the State of Delaware, with venue in the Delaware state courts and the United States District Court for the District of Delaware. Its order of precedence is: the order form, then any rider, then the Enterprise License terms, then the documentation. This page and the evaluation license (`LICENSE`) are superseded by the signed agreement for the licensee and its scope.

I.12 How to obtain one

The Omni-Compass LLC, main office infrastructure, toll-free direct 1-888-339-9551, system route asset 1-888-DEX-YLL-1, landline 321-746-4411 registered in Florida, www.omni-compass.com. A license starts with an evaluation on the licensee's own systems (`LICENSE`, section 1.4): watch mode, the wire check, and paired receipts on its own load.

APPENDIX

Appendix J. Patents and Trademarks

J.1 Patents

All patents, copyrights and trademarks covering the Omni-Compass engine, its mathematics and its software have been filed in the United States by The Omni-Compass LLC.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

The filings cover, among other things, the Omni-Compass engine (the six-state closed law and its bounded control command held through the integration step), the compass law (the service position pulled to the middle of its band by a bounded push and pull, with fail-up at the wall), the antagonist up/down wiring of each muscle, the plug contract (one restore point, read-back, the one-writer rule), the two-wire governance of a processor (clock ceiling and power limit), the two-way nervous system that grants and withdraws authority per organ, and one governor over many machines and realms on one clock.

J.1.1 What has been filed

Application	a nonprovisional utility patent application under 35 U.S.C. 111(a), filed with the United States Patent and Trademark Office
Title of the invention	**The Omni-Compass**
Inventor	Alan John Dubra, Kissimmee, Florida, United States
Drawing sheets	15
Application data sheet signed	20 September 2026 (form PTO/AIA/14, 37 CFR 1.76)
Publication	normal eighteen-month publication requested
Application number	withheld here on purpose; the filing is verifiable with the USPTO and is shown to a licensee under a signed Omni-Compass Enterprise License

The application data sheet names no assignee; the application stands in the inventor's name. Any assignment to The Omni-Compass LLC is recorded with the USPTO separately (37 CFR part 3).

No patent license is granted by publishing this repository, by the evaluation license, or by any act of The Omni-Compass LLC other than a signed, paid Omni-Compass Enterprise License. Use outside the evaluation license is infringement. Everyone who downloads, forks, scans or runs this software is on notice of these filings.

J.2 Trademarks

All patents, copyrights and trademarks covering the Omni-Compass engine, its mathematics and its software have been filed in the United States by The Omni-Compass LLC.

J.2.1 The marks

"Omni-Compass", "OmniCompass", the Omni-Compass compass rose with its ring of Greek letters, and the related names, logos and trade dress (the "Marks") are trademarks of The Omni-Compass LLC; trademark applications have been filed in the United States. Neither the evaluation license (`LICENSE`) nor publication of this repository grants any license to the Marks. A license to use them is granted only in a signed Omni-Compass Enterprise License, and only as it states.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

J.2.2 What is allowed without a license

- Referring to Omni-Compass by name, accurately and in plain text, to say what it is, that you evaluated it, or that a result was produced with it, with the engine version and commit (`LICENSE`, section 4).
- Linking to the repository or to www.omni-compass.com.

J.2.3 What is not allowed

- Using any Mark, or anything confusingly similar, in the name of a product, service, company, domain, account, package, repository, fork or derivative.
- Using the logo or the compass rose, or altering any Mark.
- Suggesting endorsement, sponsorship, certification, partnership or affiliation by The Omni-Compass LLC.
- Using a Mark in advertising, comparative claims or sales material without a signed license.

J.2.4 Other companies' marks

Kubernetes is a trademark of The Linux Foundation; NVIDIA is a trademark of NVIDIA Corporation; KEDA and Karpenter are projects of their maintainers; other names belong to their owners. Their mention describes compatibility or a system Omni-Compass was tested with; it states no affiliation, endorsement or certification (`DISCLOSURES.md`, section 1).

J.2.5 Reporting misuse

The Omni-Compass LLC, main office infrastructure, toll-free direct 1-888-339-9551, system route asset 1-888-DEX-YLL-1, landline 321-746-4411 registered in Florida, www.omni-compass.com.

APPENDIX

Appendix K. Security Policy

K.1 Reporting a vulnerability

Report a suspected vulnerability privately to The Omni-Compass LLC by telephone at its main office infrastructure (toll-free direct 1-888-339-9551; system route asset 1-888-DEX-YLL-1, landline 321-746-4411 registered in Florida) or through www.omni-compass.com, never in a public issue, pull request or discussion. Include the version and commit, what you saw, how to reproduce it, and its likely impact. We acknowledge reports, keep the reporter informed, and coordinate disclosure: a fix or a mitigation is published before the details are, and the reporter is credited if they wish. Please give us a reasonable time to fix before any

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

disclosure, do not access data that is not yours, and do not disrupt any system; good-faith research that follows this policy will not be pursued by us.

K.2 What is in scope

The engine, the controllers, the plugs and wiring, the harnesses, the workflows and the verifier in this repository. Third-party software Omni-Compass runs on or connects to (Kubernetes, KEDA, Karpenter, NVIDIA drivers, databases) is reported to its own maintainers.

K.3 How Omni-Compass is built to fail safe

- The governor issues control actions only through the shield (`omnicompass/shield.py`, `cpp/src/shield.cpp`), inside the cover the operator granted, and never fights another writer.
- It snapshots every setting once, before its first write, and the kill switch (`python3 tools/omni_switch.py off`) hands every setting back; a dead-man lease hands them back if the governor stops.
- It runs under least privilege: on Kubernetes, a service account with `kubectl auth can-i` receipts for what it can and cannot do (`deploy/kind/rbac-omni.yaml`).
- The watchdog acts only on registry records its own user wrote that no other user can change, and never signals a process number the system gave to another process (`tools/omni_switch.py`). Put the switch and the registry in a directory only the governors' user can write (`OMNI_MASTER_OFF`, `OMNI_REGISTRY`); `status` warns when they are not.
- It contains no telemetry and makes no network connection of its own except to the systems an operator points it at.
- The threats of misuse, the guards against each and what is still open are set out in `docs/THREAT_MODEL.md`.
- Every release carries a software bill of materials (`sbom/`) and a seal of the engine and its twins (`results/SEAL.json`, `python3 verify.py`).
- The capture script (`fleet/capture/kube_capture.sh`) is read-only; no component writes to a live cluster unless the operator starts it in a writing mode.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

APPENDIX

Appendix L. The Page Word for Word: Every Section, Monitor and Knob

This appendix is the live engine page itself, written from `docs/engine/OMNI_COMPASS_LIVE_ENGINE.html` at every build of this book (`docs/book/build_live_manual.py`): every section in the page's own order with its number, title, summary and controls line; every monitor under the number its badge carries, with its evidence class, its state, the open-source feed that would carry it on a running system and its knobs; every knob; and every LOSS row with whose it is, its cause and the knob that answers it. Nothing here is typed twice: what the page says, this appendix says, so the book and the page read each other both ways. This edition was written from the page built 2026-10-24 22:32 UTC on omni-v18 (digest 1cb92edb64c4391d) from commit d8a76f1922d4.

Each part below is one section of the page, in the page's order and under its number: what the page says it is, its controls, its panels, and every monitor in it under its own number, with what it shows, its evidence and state, the feed that would carry it live, its knobs, how to read it and what to do with it.

L.1 ii Title page and build

The page, in its own words.

A live monitor of the Omni-Compass engine and of every benchmark GitHub has run on it: each run played back from its own SHA-256-checked files, each model run by the repository's own code, so the engine can be watched moving instead of only read. Two sides everywhere today: Native, the whole system running by itself, and Omni-Compass and native, the same system with Omni-Compass on top of all of it; the third, Omni-Compass by itself (each muscle's own native controller switched off, Omni-Compass the only controller on its knob), joins every table where native is a controller that can be switched off (on Kubernetes and in our models) once the engine that carries it lands and its runs are in; where native is a setting, or its own loop is the actuator, the two Omni-Compass arms are one, and the cloud waits for the founder's word (docs/SOLO_PREREGISTRATION.md). Beside this title stand the owner's two pictures, the stacks Omni-Compass sits on top of and the control authority, each with the engine's live marks over it. It is laid out as a book, read from the top down: this title page first, then the problem and the answer, what the whole industry faces and how Omni-Compass addresses it, then the executive summary and the reading key, then the table of contents, then the monitor wall with the control panel and the kill switch, every monitor at once with its number and its knobs, then the benefit board, then the whole organism composed every way it is bought, then every part from the whole down to the smallest: the measured effect in full, the evidence by stack from the cloud down to the chip, the organism and its muscles, the control console, the brain and its verdict, the failure modes, the component specification, and this page's own rendering. The disclosures close it. The

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

engine that stands is omni-v18: omni-v17 with Omni direct taken into the engine, the seven files of Omni-Compass's own orchestrator that hold its rules fingerprinted like every other wire, and every organism the orchestrator runs shown three ways, native, Omni on native and Omni direct (section L.12, docs/OMNI_V18.md); omni-v17 was omni-v16 with its full decision, the heartbeat, every 60 s by default and a dial from 5 to 120 s, each beat shown beside native with what it buys and what it costs (section L.15), and the cruise wait never under two readings (docs/OMNI_V17.md); omni-v16 was omni-v15 with every clock of the Kubernetes governor in seconds, so its decision period changes only how often it looks (at 60 s every value is omni-v15's); omni-v15 was omni-v14 with the brain's request for the power cap trimming only while the response line has been clean for the governor's own clear time, and every wire that holds a governor's rules inside the fingerprint (docs/OMNI_V15.md). Before it, omni-v14 was omni-v13 with a knob that leaves any muscle native, never written, and the operator's own commands run without a shell (docs/OMNI_V14.md); and omni-v13 fixed one fault found on its own runs: on a shared host at its top, while another workload there has room of its own, the governor's conveyance hands every processor limit it gave back to the operator's, and it counts every other pod by what it may use (docs/OMNI_V13.md). Before that, omni-v12 fixed two faults found on omni-v11's runs. A processor-limit raise that the cluster's admission refuses is held until the pod's limit changes, the raise shrinks or a wait passes; omni-v11 wrote it again at every fast check. The swarm's proximity reflex hands back the planner's cruise in the tick it is triggered. omni-v11's guard stays in it: a reading that shows no machine in service is blind, and nothing is decided or written from it.

THIS PAGE IS A LIVE TUNING ENGINE. THE BENCHMARKS ARE ONE TUNED ENGINE. Every knob, button and monitor on this page can be turned in real time: the heartbeat from 5 to 120 s, the dial between the max and the tune-down, the pedal, each muscle driven or left native, up or down, in or out, minus or plus, to see and produce the variations of the mechanism of action with native alone, with Omni-Compass on top of native, or both side by side. Like any engine, where turning the mixture, the intake, the exhaust, the firing or the pistons changes what it delivers, turning any knob can change every metric, up or down, in any direction a tuner chooses: that range is the engine's versatility, one engine for many vessels, tuned many ways, for many outputs. What the page shows at any setting other than the factory tune demonstrates that range and is never a benchmark result. Every benchmark result is one engine at its one factory tune: the engine its table names, every benchmark run again on the engine that stands (section L.41). From omni-v17 the factory tune is chosen by a declared rule: of the tunes that harm no gauge against native, the one against which no other tried tune reads GAIN on one service gauge and LOSS on none, searched on development seeds and read again on untouched ones (docs/THE_TUNE.md; DISCLOSURES.md, section 3). A tune other than the factory tune is the tuner's own, and its results are its own.

DISCLOSURE: REAL RUNS, A REAL ENGINE, NOTHING HARDWIRED. Every run played back on this page (sections L.23 and L.24) is read from the raw files of benchmark runs executed on GitHub's own machines, each file checked against its run's SHA-256 list before a single number is drawn; every three-run table is read as the repository holds it, each naming its runs, and the raw branch holds their folders as they are archived (a table whose folders are not yet there says so in section L.41). Every model view runs the engine's own code (the compass law, the brain, the verdict) live in this page, linked through software to the repository's Python and C++ and checked against them on every build. GitHub rebuilds the page from the repository

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

whenever the engine, a model or a result changes, and every three hours: no number on it is typed in by hand, and when the repository changes, the page changes with it.

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

L.2 The answer first: is Omni-Compass a benefit against native?

The page, in its own words.

The two bills

Its monitors. This section draws no canvas: it is words and their sources, written in the page itself.

L.3 iii The problem and the answer: what the whole industry faces, and how Omni-Compass addresses it

The page, in its own words.

In one paragraph. What every stack faces: capacity built and left idle, controllers that react after the line is crossed and work at cross purposes, demand outrunning power and hardware. What Omni-Compass does about it: a supervisory governor on top of every native controller, never in its place, every muscle driven to its own limit and never past it, reactive and proactive like an immune system. Where the proof is (the three-run tables, the receipts, the runs played back on this page), what is not claimed, and what is protected.

Read the whole section: what the industry faces, what Omni-Compass does, where the proof is, what is not claimed, what is protected (about three printed pages)

What the whole industry faces

More demand than capacity. Demand for computing is growing faster than the power, the machines and the budgets built to carry it. The International Energy Agency puts the world's data centres at about 415 TWh of electricity in 2024, around 1.5% of all the electricity the world used, and expects that to more than double, to about 945 TWh, by 2030, with artificial intelligence the largest driver. In the United States, Lawrence Berkeley National Laboratory counts 176 TWh in 2023, 4.4% of the country's electricity, and between 6.7% and 12% by 2028. The usual answer is to build more: more machines, more megawatts, more cooling and a larger bill.

Much of what is built sits idle. Across the Kubernetes clusters Cast AI measured in 2025, the average processor was 8% busy and the average memory 20% used, read before its own automation was switched on. The organizations Flexera surveyed estimate that 29% of what they spend on cloud infrastructure and platforms is wasted.

Not short of control, short of coordination. In every realm (compute, AI and the cloud; physics, robotics and autonomy; energy, facilities and industry; distribution and specialized systems) each machine already runs under local feedback loops: horizontal autoscalers, firmware power and clock governors,

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

building-management loops, battery-management systems, connection pools, servo controllers. Each loop is tuned on its own, against its own setpoint, with margins sized for a worst case. Four costs follow, and every operator pays them:

Reaction latency. Reactive loops act on lagging, averaged signals. A Kubernetes Horizontal Pod Autoscaler recomputes its replicas every 15 seconds by default and damps its scale-downs over a 5-minute stabilization window; new pods then need time to schedule and start. Queues form before capacity arrives.

Static over-provisioning. Worst-case margins persist through the far more common nominal regime. The operating point sits well inside the safe region, and the headroom between it and the constraint boundary is paid for and rarely used.

Uncoordinated coupling. Loops share resources: power, cooling, connections, memory, network. One loop's correction is another loop's disturbance: more web replicas saturate the database's connections; more cooling pushes a power feed toward its limit.

The gaps closed by hand. Operators close them with fixed settings, runbooks, alerts and on-call rotations, and the settings go stale as the load moves. That is safe, and it leaves the region between the operating point and the safe boundary unused nearly all of the time.

Omni-Compass's solution: govern what is built before building more

Omni-Compass is a supervisory governor. It sits on top of every native controller and never in place of one; native keeps running underneath, always. It treats each setting a native controller already exposes (a replica floor, a power cap, a clock ceiling, a temperature setpoint, a pool size) as a muscle, and the whole stack as one body, the organism. Through a two-way plug, one wire in (the readings native already reports) and one wire out (the settings native already exposes), it reads every muscle, places each reading in the muscle's own band, from calm to its line (the limit it must not cross: a response time, a temperature, a feed's rating), and moves each setting one bounded, smooth step at a time. By default every muscle is driven up to its own limit, never past it and never below native; every write is read back; every give-back is tried in its own paired trial (the muscle with and without it, under the same load) and undone if the muscle loses by it; a raise is held inside the muscle's own bounds and judged afterwards by the three-run tables; and wherever no gain can be brought, the muscle stays native. One brain governs the whole body, so a step on one muscle stands only while every muscle it couples to stays inside its own cushion. The aim, in one line: more work, faster, on fewer machines, with less energy. Where Omni-Compass takes more energy to buy more work or speed, that energy is shown beside what it bought, as power given, and never called a loss.

How it addresses each cost

What the industry faces, and what it costs	How Omni-Compass addresses it	How it is judged
Reaction latency: waiting, queues and time over the line before capacity arrives	it reads every muscle on its own clock (on Kubernetes its full read of the state every 15 seconds, the	time waited, missed or failed: a fall is GAIN, a rise is LOSS

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

What the industry faces, and what it costs	How Omni-Compass addresses it	How it is judged
	autoscaler's own pace, and its fast checks every 5 seconds) and moves as a reading nears its line, not after the line is crossed: proactive as well as reactive, like an immune system	
Static over-provisioning: machines, energy and a bill paid for headroom rarely used	every muscle driven up to its own limit and never past it, so the machines already paid for carry more work; in a public cloud it parks only a machine the cloud already made, after its own trial, and wakes it on a breach, so the bill can only fall or stay	work done: a rise is GAIN; machines, energy and the bill: a fall is a cut, a GAIN, and a rise is power given
Uncoordinated coupling: one loop's correction is another loop's disturbance	one brain for one body: a step on one muscle stands only while every muscle it couples to stays inside its own cushion	every muscle judged on itself, and the organism judged whole
The gaps closed by hand: settings retuned by hand, alert minutes, on-call	an autopilot: every write read back, every give-back on its own trial, every reason written to its audit; an alert minute on Omni-Compass's side is found and fixed, never accepted	the alert minutes, judged; the settings commands it wrote on its own, shown

Where this page shows each answer. Reaction latency: the organism live, every muscle's place in its band and the decisions past the line, native beside Omni-Compass (2b), and the shipped controller's decision trace (4e). Static over-provisioning: the benefit board (3a) and the clouds' bills (4a). Uncoordinated coupling: the whole organism (3b) and the organism's immune system (2b). The gaps closed by hand: the status board's alarms (1b) and the golden signals, the event log and the live metrics (1e).

What it does not do. It replaces no controller, and it creates no capacity a machine does not have: it uses the capacity already there, each muscle to its own limit. It promises no number on a system it has not run on: the only number that applies to a system is the one that system's own paired runs produce. The outside figures above are their authors' own, quoted for scale; none was measured, checked or endorsed by The Omni-Compass LLC, and none is a result of Omni-Compass.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

How it is held to account. Every benchmark has two arms, native and Omni-Compass on top of native, on the same machines with the same work, run three separate times. Every reading is one word, GAIN, EVEN or LOSS, decided by what the gauge is for (the key, in the next section); every result carries its evidence class (P a physical meter, L live software, S our own models, never shown as proof of hardware); and every row is shown, LOSS included. The governing rule is do no harm, in its one meaning (DISCLOSURES.md, section 3): the aim is an organism never left turning out less than native, nor less healthy; where a row reads LOSS against native (section L.9 lists each, 7 today), the row stays, its cause is found and fixed, and the test runs again. The executive summary under this section reads where the record stands, from the records on this page.

The outside sources. International Energy Agency, Energy and AI (April 2025), its executive summary. Lawrence Berkeley National Laboratory, 2024 United States Data Center Energy Usage Report (December 2024), prepared for the U.S. Department of Energy. Cast AI, 2026 State of Kubernetes Optimization Report: a seller of Kubernetes optimization, reporting its own customers' clusters as they ran before its automation. Flexera, 2026 State of the Cloud Report (March 2026): a survey of 753 cloud decision-makers and users, the figure their own estimate. The Kubernetes documentation, Horizontal Pod Autoscaling: the controller's defaults.

Its monitors. This section draws no canvas: it is words and their sources, written in the page itself.

L.4 iv Executive summary and reading key

The Omni index, every real test weighed together: the record loads below.

Controls. Live: the buttons act on the live engine; every number below is read from the records on this page.

The page, in its own words.

In one paragraph. Two sides everywhere today: native, the whole system by itself, and Omni-Compass and native, the same system with Omni-Compass on top of all of it; a third, Omni-Compass by itself, joins when the engine that carries it lands and its runs are in. Three words, by the one key: GAIN, EVEN and LOSS, with power given for a resource that rose, each number beside a word carrying the word's sign. Three classes of evidence: P a physical meter, L live software, S our own models, never proof. The figure of record is the Omni index, every real test weighed together.

Read the whole section: the executive summary, the key, the terms, the examples (about two printed pages)

Executive summary

Every number in this list is read from the records on this page when it opens (the three-run tables, the Omni index, the cloud ledger, the card run, the models' own readings, the realms table and the harness); none is typed in. Run and scored by The Omni-Compass LLC's own code. No outside party has reviewed or approved these results.

The key: GAIN, EVEN and LOSS

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

The terms this page uses, each defined once (the first time a term appears on the page it carries the same definition, shown when pointed at)

The size is how far the gauge moved from native; the word says whether that move helped the work. Examples, read from the three-run tables on this page, appear here when they load. A miss is a decision where the work went over its line. The key is written once in tools/readings.py and stands at the top of the README, the reading guide and both manuals. GAIN, EVEN and LOSS, and the letters behind them, are The Omni-Compass LLC's own convention for reading its own results; the underwriting senses explain the words and are not an actuarial, financial or insurance opinion, and no outside body defined, reviewed or approved them. Run and scored by The Omni-Compass LLC's own code. No outside party has reviewed or approved these results.

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

L.5 Part 1 of the page: Watch first: the switch, the alarms, the wall and every LOSS

L.6 The control panel and the kill switch: one switch for the whole organism, the Python's runs, the three manuals

The first view after the front matter: the control panel that drives every monitor of this page. The kill switch stands at its head, ON in green while Omni-Compass governs on top of native, red when engaged, and Omni-Compass OFF in white; the Python's own runs can be run again here at a button; the three manuals are a click away. The monitors it drives follow: the wall of every monitor (1b), the numbered list of them (1c), the status board (1d), the master switch's wiring (1e), the Python's runs in this page (1f), every LOSS row (1g), the golden signals (1h) and GitHub's pipeline (1i). No value here is typed in: each is computed at runtime from the live engine or from the repository's records embedded at build time.

Controls. Live: the kill switch acts at once on every governor of this page; the buttons run the Python's runs here and fetch the three manuals.

The page, in its own words.

The control panel: one switch for the whole organism, the Python's runs in this page, the three manuals

The kill switch. While Omni-Compass governs on top of native the switch reads ON in green. Pressed, it turns red: at the next decision every governor puts every setting it wrote back, reads each one back and stops (omnicompass/master.py, tools/omni_switch.py); the word OFF stands white, and every Omni-Compass side of every monitor follows native, drawn in native's colour. Native's own controllers under every muscle never stop and never see the switch. A recorded result never changes with it: its colour does, never a value, a word or a row. The same switch stands at the head of every section and in every monitor's own knobs; one press anywhere is one press everywhere. It is for security and is instant; the walk back after a crash is the lease, separate.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

The three manuals. The Live Engine Manual reads this page top to bottom: how to read, operate, tune and watch it, native beside Omni-Compass, chapter by chapter in the page's own order, and, in its last appendix, the page word for word, every section, every monitor under its number and every knob, written from this page at every build. The Operator's Manual wires and runs Omni-Compass on a stack; the Owner's Manual holds the whole mechanism, its mathematics, its source and every result. Each carries the notice, the LICENSE, the NOTICE and DISCLOSURES.md.

A live governor: hook a system up and drive it from here

Everything above runs in this page. This box talks to a real governor through its control panel (tools/omni_control.py serve --allow-origin naming this page's address): the panel's address and a token of yours, held in this page's memory only and never stored. Every press is the panel's own button, behind your token's role and written to its control log; every change passes through native (the governor hands back, then starts again with the new setting). A viewer token reads; an operator token presses; the kill switch needs the security role.

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

L.7 The status board: the tiles, the alarms and the watch items

Whether Omni-Compass is engaged, which signals are out of tolerance and where, and every LOSS row raised as an alarm with its source record. Each tile and each alarm is computed at runtime from the live engine or from the repository's records.

Controls. Live: the filters act at once, and every tile is read again four times a second.

The page, in its own words.

Alarms and watch items, by severity

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

L.8 The monitor wall: every monitor, numbered 1 upward in its order of appearance, read left to right

Every monitor of this page at once, numbered in the order it appears from the top, 1 first, and read left to right, then the next row, as any page is read; the last number is the last monitor on the page. Two monitors that sit side by side in their section, native beside Omni-Compass, stay side by side on the wall. Each tile carries at its top its number and its title, what the monitor shows, with its section and its state under them; the numbered list beside it (1c) says the rest.

Controls. Live: click a tile to go to its monitor; every tile is read again four times a second.

The page, in its own words.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

The monitor wall: every monitor of this page, numbered 1 upward in its order of appearance, read left to right, then the next row; click a tile to go to it

The same canvases the sections draw, copied small four times a second; nothing is drawn twice from different data. The page's own governor (section L.42) leaves a monitor resting while it is off screen, so while this wall is in view the resting monitors are drawn in turn, one a frame, each through its own drawing code; every monitor is drawn once as the page opens, so no tile waits for its section to be scrolled to. Two monitors that sit side by side in their section, native beside Omni-Compass, sit side by side on the wall too: a pair never splits across two rows. Each tile's head is its number and its title in capital letters, then its section and its state (live, replay, from the records, a model, or awaiting its run). A tile with the accent border is a monitor on screen now; the list of every monitor by its number follows in section L.39.

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

L.9 Every LOSS row: its cause and the knob that answers it

Every LOSS row of every three-run table on this page, Omni-Compass's own first and then the orchestrators' own, each with the cause the repository records and, where that cause is the governor's, the knob that brings it EVEN or leaves the muscle native; where the cause is the test machine, or not yet established, the row says so and asserts no knob. No row is cut and no number is tuned.

Controls. Recorded data: every row is read from the three-run tables on this page.

The page, in its own words.

Every LOSS row: its cause and the knob that answers it (Omni-Compass's own rows first, then the orchestrators' own cost)

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

L.10 The golden signals, the event log and the live metrics

The live organism's four golden signals, native beside Omni-Compass, one point a decision: errors (muscles over the line), throughput (work served), latency and saturation; the engine's own event log, newest first; and the same metrics in the OpenMetrics format Prometheus scrapes and Grafana charts.

Controls. Live: one point a decision from the live engine; the event log's filters act at once; the metrics refresh every two seconds.

The page, in its own words.

Golden-signal feed, live: the last 240 decisions, native beside Omni-Compass

One point per decision streamed from the live engine, gapless, each signal on its own axis, with each arm's last, mean and maximum as a time-series dashboard reports them; a kill-switch window is shaded red. Native in orange, Omni-Compass in blue, the same demand on both.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Engine event log, newest first

The live engine's own events as it emits them, with the wall-clock time and the decision. They are a threshold breach and its clearing on either arm, every injected fault and its end, the kill switch, the dial, a new day, and the brain's calm crossing the grant threshold. ALERT, WARN and INFO as an operations log grades them.

OpenMetrics exposition: the live metrics, ready for Prometheus and Grafana

The live engine's metrics in the OpenMetrics text format, the CNCF exposition format Prometheus scrapes and Grafana charts, refreshed every two seconds. They are engagement, the decision index, breaches, work, band time, actuator moves and reversals per arm, and frame time. Then the verdict's keep ratio at each true cost, the three-run tables' rows by class and reading, and the build's engine, digest and commit.

The board is laid out the way an operations monitor is. The switch and the engine come first. Next come the live organism's signals, native beside Omni-Compass, in the four a service is watched by (site reliability practice: latency, traffic, errors and saturation): here the work waiting, the work done, the decisions past their line and the capacity held. Then every reading of the real and modelled runs that went against native, worst first. Last come GitHub and the age of this page. A tile's word is its reading against native by the key (front matter, iv). A tile with no reading says what it shows.

Its monitors.

L.10.1 Monitor 1: Golden signal: errors

Errors a decision on the live organism, native beside Omni-Compass (site reliability's first of four).

- **Evidence and state.** Class S; live.
- **Feed.** the service's own request counter (Prometheus client), kube-state-metrics for pod restarts; series `http_requests_total{code=~"5.."}`, `kube_pod_container_status_restarts_total`; on a running system: `sum(rate(http_requests_total{code=~"5.."}[5m]))`.
- **Wired.** This page's `drawFeed` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.
- **Moves.** Every decision of the live engine: each side's line takes a point.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

(Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.

- **How to read it.** The four golden signals of a service, one point a decision of the live engine: native in amber, Omni-Compass in blue, the same demand on both. A red band is a kill-switch window.
- **What to do with it.** Watch latency and errors first: a rise there is the only thing that can read LOSS. Saturation and throughput are the work and the capacity held: capacity is power given when it rises.

L.10.2 Monitor 2: Golden signal: throughput

Work done a decision (traffic), native beside Omni-Compass.

- **Evidence and state.** Class S; live.
- **Feed.** the service's own request counter (Prometheus client); series `http_requests_total`; on a running system: `sum(rate(http_requests_total[5m]))`.
- **Wired.** This page's `drawFeed` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.
- **Moves.** Every decision of the live engine: each side's line takes a point.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **How to read it.** The four golden signals of a service, one point a decision of the live engine: native in amber, Omni-Compass in blue, the same demand on both. A red band is a kill-switch window.
- **What to do with it.** Watch latency and errors first: a rise there is the only thing that can read LOSS. Saturation and throughput are the work and the capacity held: capacity is power given when it rises.

L.10.3 Monitor 3: Golden signal: latency

Response time a decision, native beside Omni-Compass.

- **Evidence and state.** Class S; live.
- **Feed.** the service's own duration histogram; series `http_request_duration_seconds_bucket`; on a running system: `histogram_quantile(0.95, sum by (le) (rate(http_request_duration_seconds_bucket[5m])))`.
- **Wired.** This page's `drawFeed` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.
- **Moves.** Every decision of the live engine: each side's line takes a point.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The four golden signals of a service, one point a decision of the live engine: native in amber, Omni-Compass in blue, the same demand on both. A red band is a kill-switch window.
- **What to do with it.** Watch latency and errors first: a rise there is the only thing that can read LOSS. Saturation and throughput are the work and the capacity held: capacity is power given when it rises.

L.10.4 Monitor 4: Golden signal: saturation

Capacity held against capacity used, native beside Omni-Compass.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Evidence and state.** Class S; live.
- **Feed.** node_exporter; series `node_cpu_seconds_total`; on a running system: `1 - avg(rate(node_cpu_seconds_total{mode="idle"}[5m]))`.
- **Wired.** This page's `drawFeed` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.
- **Moves.** Every decision of the live engine: each side's line takes a point.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The four golden signals of a service, one point a decision of the live engine: native in amber, Omni-Compass in blue, the same demand on both. A red band is a kill-switch window.
- **What to do with it.** Watch latency and errors first: a rise there is the only thing that can read LOSS. Saturation and throughput are the work and the capacity held: capacity is power given when it rises.

L.11 Part 2 of the page: The three arms, live, and the knobs that turn them

L.12 Omni direct: the three arms, native, Omni on native and Omni direct

From omni-v18 Omni direct is part of the engine: Omni-Compass's own orchestrator runs the organism with no Kubernetes beneath it, and every organism is shown three ways. Native is Kubernetes' published autoscaling rule on the muscles, written by us, every machine on and the units spread. Omni on native is Omni-Compass on top of that rule: the rule's units and never fewer, Omni's reflex and fail-up above them, its

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

conveyance (each unit's processor wall raised into the room its machine can spare under 75% busy), the busy room rule, packing and the machines parked and woken on top. Omni direct is Omni-Compass alone on the muscles: all of that, and a unit fewer than the rule's count tried under the verdict on the service's own response times and kept only where it reads no LOSS within 2%; a trial the traffic keeps abandoning holds the next one off, and work waiting in line hands a step back at once. Every pair is read by the one key, paired by step.

Controls. Recorded data: the showing's own record (results/orchestrator/, gathered by tools/orchestrator_record.py from the files tools/orchestrator_show.py wrote), one run of each arm, class L. The arm buttons choose the arms drawn; the step slider walks the run step by step, and every monitor's light reads the step it stands on. The master switch shows native alone. On a real machine each arm is the control plane started with its brain (python3 -m omni_orchestrator.control --brain yardstick, omni_native or omni), and its kill switch is the control plane's kill file: the brain off, the declared state held, every conveyed wall handed back.

The page, in its own words.

Work: requests answered each step

The 95th percentile response each step

Units serving each step

Machines on each step

Every pair, read by the one key

Three runs on GitHub's machines (A, B and C from one commit)

How to read it: each word is the pair's reading by the gauge's aim (the key at the top of the page), from the mean of the step-by-step differences and its 95% interval on Student's t; the direction follows the word in words. Work aims up; the 95th percentile aims down; units and machines are resources, so a fall is a cut, a GAIN, and a rise is power given. The orange line on native is the native arm drawn; Omni-Compass's arms are blue, Omni on native dashed and Omni direct solid. The tables above are one run of each arm on one host (the quick form); the three-run table under them is the full form on GitHub's own machines, A, B and C from one commit, combined by the one rule (the founder's order of 24 October 2026): a change of 0.5% or more, the mean of the three runs, reads GAIN, LOSS or power given by the gauge's aim (in all three when every run's interval is clear of zero on the same side, otherwise by the mean of the three with the count beyond the noise); under 0.5% it reads EVEN, under the floor; runs that moved 0.5% or more in opposite ways disagree.

Its monitors.

L.12.1 Monitor 5: Omni direct: work each step

Requests answered each step by native, Omni on native and Omni direct, the same clients (1 2 3 2 3 4).

- **Evidence and state.** Class L; record.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Feed.** the showing's record (results/orchestrator/), from the control plane's timeline and the front's own answers.
- **Wired.** This page's `drawDirect, lampDirect` → the Python `omni_orchestrator/control.py`, `omni_orchestrator/brain.py`, `tools/orchestrator_show.py`, `tools/orchestrator_record.py` → the C++ Omni direct's brain is Python (omni_orchestrator/); it has no C++ twin yet; held equal by `tests/test_orchestrator.py`.
- **Moves.** The showing's record, replayed step by step with the step slider; the arm buttons choose the arms drawn; the master switch shows native alone.
- **Knobs.** Arm: which arm stands on the right: Omni-Compass governing, or watching only; One decision: step the engine one decision while paused; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..

L.12.2 Monitor 6: Omni direct: the 95th percentile each step

The 95th percentile response each step, the three arms, against the service's line.

- **Evidence and state.** Class L; record.
- **Feed.** the showing's record (results/orchestrator/), from the control plane's timeline and the front's own answers.
- **Wired.** This page's `drawDirect, lampDirect` → the Python `omni_orchestrator/control.py`, `omni_orchestrator/brain.py`, `tools/orchestrator_show.py`, `tools/orchestrator_record.py` → the C++ Omni direct's brain is Python (omni_orchestrator/); it has no C++ twin yet; held equal by `tests/test_orchestrator.py`.
- **Moves.** The showing's record, replayed step by step with the step slider; the arm buttons choose the arms drawn; the master switch shows native alone.
- **Knobs.** Arm: which arm stands on the right: Omni-Compass governing, or watching only; One decision: step the engine one decision while paused; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.12.3 Monitor 7: Omni direct: units each step

Units serving each step, the three arms, against the service's most.

- **Evidence and state.** Class L; record.
- **Feed.** the showing's record (results/orchestrator/), from the control plane's timeline and the front's own answers.
- **Wired.** This page's `drawDirect, lampDirect` → the Python `omni_orchestrator/control.py`, `omni_orchestrator/brain.py`, `tools/orchestrator_show.py`, `tools/orchestrator_record.py` → the C++ Omni direct's brain is Python (omni_orchestrator/); it has no C++ twin yet; held equal by `tests/test_orchestrator.py`.
- **Moves.** The showing's record, replayed step by step with the step slider; the arm buttons choose the arms drawn; the master switch shows native alone.
- **Knobs.** Arm: which arm stands on the right: Omni-Compass governing, or watching only; One decision: step the engine one decision while paused; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..

L.12.4 Monitor 8: Omni direct: machines each step

Machines on each step, the three arms, against the fleet.

- **Evidence and state.** Class L; record.
- **Feed.** the showing's record (results/orchestrator/), from the control plane's timeline and the front's own answers.
- **Wired.** This page's `drawDirect, lampDirect` → the Python `omni_orchestrator/control.py`, `omni_orchestrator/brain.py`, `tools/orchestrator_show.py`, `tools/orchestrator_record.py` → the C++ Omni direct's brain is Python (omni_orchestrator/); it has no C++ twin yet; held equal by `tests/test_orchestrator.py`.
- **Moves.** The showing's record, replayed step by step with the step slider; the arm buttons choose the arms drawn; the master switch shows native alone.
- **Knobs.** Arm: which arm stands on the right: Omni-Compass governing, or watching only; One decision: step the engine one decision while paused; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

(the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..

L.13 The organism, live: native and Omni-Compass

The system rendered as an organism: each node is a muscle (one controlled actuator) and each ring its operating range. The left instance runs under its native controllers alone; the right runs the same controllers with Omni-Compass's brain, nerves, heart and immune system supervising them. Evidence class S: our own models, shown beside the real runs and never presented as proof.

Controls. Live: the rings, the immune system and the anatomy respond to the console.

The page, in its own words.

Every view is run twice on the same body, the same load and the same seed: native (left), then Omni-Compass (right). "One organism" is the sixty muscles in one body: the whole native organism on the left, the same organism with Omni-Compass on the right; "each muscle alone" runs each muscle native and then with Omni-Compass, one at a time. The counters under each ring and the scoreboard (section L.29) give both arms and the difference. Where the two sides look the same, they are the same. Under the max a muscle is moved only where it has room above native. A muscle already at its limit on native (— of these sixty) is left native by design. Inside one organism the bone, the power and cooling the whole body shares, holds most moves back. A dashed white ring marks every muscle that differs between the two sides at that moment; the counter under each ring counts them. In these harness views the max acts muscle by muscle and the brain at the center reads the body without steering it, as in the realms harness itself; section L.25 shows the live controller, where the brain's rules run every decision.

Reading the rings: a quick-start guide

Native

Omni-Compass

The body scan: every organ, native and Omni-Compass, live from the official run playing

As a scan reads a living body organ by organ, this reads the system playing in section L.23 (the benchmark, run and repetition chosen there), organ by organ, half minute by half minute, from its own SHA-256-checked files: native beside Omni-Compass. Where native has no such organ the cell says so.

The immune system, live: native beside Omni-Compass (the immune system is Omni-Compass's; native runs on its own controllers)

The body keeps itself healthy the way a human body does. Every room and every machine pool has a native twin: the same muscle under its own controller, on native's heat and load, the body's memory of healthy. A room that stands warmer than its twin is inflamed. Where its own knob can cool it, it is cured on the spot.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Where it cannot, it sends the whole body a signal, its heat debt, like a cytokine calling for help. The other muscles answer: the machine pools give back what Omni-Compass added until the room stands no warmer than native's. The skeleton (the bone: the power and cooling lines the whole body shares) grants nothing it cannot carry. A cooling setting is walked back, never snapped. A pool never loses a machine its queue needs, a battery is timed for its line, and no sense is locked. On the ring a pulsing red circle marks the inflamed muscle, and red signals run from it to every machine pool that answers it.

The anatomy, part by part, in the order of control: the brain first, the whole organism last

Its monitors.

L.13.1 Monitor 9: The organism, live: native

Sixty muscles of the stress model, each on its own native controller, at their positions in the band.

- **Evidence and state.** Class S; live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); kube-state-metrics; series `omni_recommended`, `kube_horizontalpodautoscaler_status_current_replicas`.
- **Wired.** This page's `drawRing` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.
- **Moves.** Every decision: each muscle moves to its position in the band.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused; Body: which body the organism runs: the harness, the organism, every muscle alone; The muscle's own switch: pick one muscle on either ring: its card, and its own switch, which hands that one muscle back to native (Omni-Compass OFF on it) or puts Omni-Compass on it again; the kill switch

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

hands every muscle back at once. Its own knobs beside the switch: one unit down or up (its smallest setting), to its floor or to its top, and let go; the hand holds the lever on Omni-Compass's side for 20 decisions, never past the muscle's own limits, then gives it back to the engine (the live model, class S)..

- **How to read it.** The organism the brain governs, muscle by muscle: positions in the compass band, the brain's grants and pushes, the immune system's heat debt; native's own controllers under every muscle.
- **What to do with it.** Turn the console's knobs (demand, noise, sensor delay, faults) and watch both arms take the same input; the difference between the lanes is what Omni-Compass did.

L.13.2 Monitor 10: The organism, live: Omni-Compass

The same sixty muscles with Omni-Compass on top of their native controllers, the brain's grants and pushes.

- **Evidence and state.** Class S; live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_recommended`, `omni_recommended_moves_total`, `omni_writes_total`; on a running system: `omni_recommended`; `increase(omni_writes_total[1h])`.
- **Wired.** This page's `drawRing` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.
- **Moves.** Every decision: each muscle moves to its position, the brain's grants and pushes pulse.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused; Body: which body the organism runs: the harness, the organism, every muscle alone; The muscle's own switch: pick one muscle on either ring: its card, and its own switch, which hands that one muscle back to native (Omni-Compass OFF on it) or puts Omni-Compass on it again; the kill switch hands every muscle back at once. Its own knobs beside the switch: one unit down or up (its smallest

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

setting), to its floor or to its top, and let go; the hand holds the lever on Omni-Compass's side for 20 decisions, never past the muscle's own limits, then gives it back to the engine (the live model, class S)..

- **How to read it.** The organism the brain governs, muscle by muscle: positions in the compass band, the brain's grants and pushes, the immune system's heat debt; native's own controllers under every muscle.
- **What to do with it.** Turn the console's knobs (demand, noise, sensor delay, faults) and watch both arms take the same input; the difference between the lanes is what Omni-Compass did.

L.13.3 Monitor 11: The immune system

Where the two sides differ, and the body's heat debt: a room warmer than its native twin, inflamed, given back.

- **Evidence and state.** Class S; live.
- **Feed.** Prometheus Alertmanager; tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `ALERTS`, `omni_compass_decisions_total{zone="wall"}`; on a running system: `sum(ALERTS{alertstate="firing"})`; `increase(omni_compass_decisions_total{zone="wall"}[1h])`.
- **Wired.** This page's `drawImm` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py`, `realms/compass_arm_v5.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.
- **Moves.** Every decision: each side's pools, warmest room and muscles past the line take a point.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The organism the brain governs, muscle by muscle: positions in the compass band, the brain's grants and pushes, the immune system's heat debt; native's own controllers under every muscle.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **What to do with it.** Turn the console's knobs (demand, noise, sensor delay, faults) and watch both arms take the same input; the difference between the lanes is what Omni-Compass did.

L.13.4 Monitor 12: The body parts on the band

Each body part's muscles (the spine and the four realms) at their positions in the band, native above and Omni-Compass below, every decision.

- **Evidence and state.** Class S; live.
- **Feed.** the realms harness's own record (realms/harness.py, each body part's muscles at their positions in the band, recorded by docs/engine/export_harness_trace.py); no Prometheus feed.
- **Wired.** This page's `drawSwarm` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.
- **Moves.** Every decision: each muscle's dot moves to its position in the band.
- **Knobs.** Speed: 1×, 4×, 16× or 60× of the engine's clock; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** The organism the brain governs, muscle by muscle: positions in the compass band, the brain's grants and pushes, the immune system's heat debt; native's own controllers under every muscle.
- **What to do with it.** Turn the console's knobs (demand, noise, sensor delay, faults) and watch both arms take the same input; the difference between the lanes is what Omni-Compass did.

L.14 Control console: every runtime control of the live engine

The engine these knobs turn is the engine's own mathematics running in this page: the brain (omnicompass/core.py, integrated by RK4), the compass law (omnicompass/compass_law.py) and the verdict (omnicompass/verdict.py). docs/engine/check_live_engine.py proves the port equal to the Python and the C++ on every build. It governs the stress-test model's sixty muscles (class S), each on top of its own native controller. Every knob acts on both sides at once, the same demand, the same draw of noise, the same lost pool, so the one difference left between them is Omni-Compass. The knobs move the live engine in sections L.13 and L.28 to L.30, and the kill switch and the frame load also move this page's own renderer (section

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.42). A recorded run (the benefit board, the chips' and Kubernetes' replays, the official runs) is a record: no knob rewrites it.

The page, in its own words.

Do no harm. Every control here acts on both arms alike; what Omni-Compass does with them is held by its guards: no muscle driven below native or past its own limit, nothing taken from one muscle to give to another, a give-back tried against native first and refused on a LOSS. Its one meaning is written once, in the back matter (vi) as DISCLOSURES.md section 3 writes it.

What these controls do. Runtime parameter control and fault injection on the live engine: load scaling, noise injection, sensor latency, capacity loss, a demand surge, a sensor blackout, a security hold, the dial, and the kill switch. Every control is applied to both arms identically; the response is plotted per decision, native beside Omni-Compass.

System response, per decision

Frame timing: the inter-frame interval against the 60 Hz budget

Control event log, newest first

Control-loop performance assessment, this day (live)

Its monitors.

L.14.1 Monitor 13: The console's response

The last 120 decisions of the live engine: the muscles past their line and the work, native beside Omni-Compass, every knob of the console turned marked.

- **Evidence and state.** Class S; live.
- **Feed.** this page's own clock (no exporter: the page measures itself).
- **Wired.** This page's `drawDeskCv` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.
- **Moves.** Every decision: both lanes slide one decision, a ring opens at each head with its newest value; every knob turned is marked.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

(Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused; Pause: hold the engine's clock; Frame load: +0, +8 or +16 ms burned inside every frame of this page.

- **How to read it.** The live engine's response to every knob, native beside Omni-Compass, and the page's own frame budget.
- **What to do with it.** Every knob acts on both arms alike; the difference between them is Omni-Compass's doing alone.

L.14.2 Monitor 14: The frame budget

The time between frames of this page against its line under the frame load knob.

- **Evidence and state.** Class S; live.
- **Feed.** this page's own clock (no exporter: the page measures itself).
- **Wired.** This page's `drawFrameCv` → the Python none: the page's own frame clock, measured in the browser; there is nothing to port → the C++ none: the page's own frame clock, measured in the browser; there is nothing to port.
- **Moves.** Every frame of this page.
- **Knobs.** Frame load: +0, +8 or +16 ms burned inside every frame of this page.
- **How to read it.** The live engine's response to every knob, native beside Omni-Compass, and the page's own frame budget.
- **What to do with it.** Every knob acts on both arms alike; the difference between them is Omni-Compass's doing alone.

L.15 The heartbeat dial: every beat beside native, what it buys and what it costs

The governor's heartbeat, its full decision, is a dial from omni-v17 on: the main engine decides every 60 s, and any beat can be set, 5, 15, 30, 60, 75, 90 or 120 s or any value between, with the fast checks (the scheduling floor, the pod reflex, the conveyance every 15 s) every 5 s at every beat. Every clock of the governor counts seconds (omni-v16), so turning the dial changes only how often it looks. Each beat stands beside native with what it buys (the reads of the cluster a day) and what it costs (the governor's own processor, and every service row read against native and against the main engine's 60 s), because an operator may want a fast beat for its reads and accept what it costs, or a slow one. At each beat the other knobs may want their own combination;

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

that tuning is the next study, in the toy first. The governor's own screen counts the time since its last decision in beats of the setting it runs at and alerts after three (omni_heartbeat_seconds, deploy/grafana/omni-compass.json, deploy/prometheus/omni-compass-rules.yaml).

Controls. Recorded data: every beat of the Kubernetes governor read in our own models (class S, results/toy_gate/V17_LADDER.json, tools/beat_ladder.py); the real runs at every beat (docs/PACE_PREREGISTRATION.md, amendment 3) join their place when their three runs land. The beat itself is set on the governor's command line (--interval) or with the control panel's heartbeat button (POST /v1/beat, tools/omni_control.py: one button for each stop of the dial), which hands every setting back and starts the governor again at the new beat.

The page, in its own words.

Every beat, in our own models

How to read it: each value is the beat's mean over seeded days on a plant that moves every 5 s, the same seeds and plant at every beat; the word beside it is its reading against native, paired by seed (GAIN, EVEN, LOSS, power given: the key at the top of the page). The second table reads each beat against the main engine's 60 s. Native has no governor, so its reads and processor are blank. The reads are what a beat spends to look more often, shown as the key reads a resource spent: power given. A LOSS here is the engine's at that beat and stands with every other LOSS row (1g).

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

L.16 Part 3 of the page: The measured effect: what Omni-Compass did against native

L.17 The benefit board: every domain, native against Omni-Compass

The first thing after the wall: every benchmark's measured effect in one board, native against Omni-Compass on top of native, by domain and by gauge family, and the Omni index that weighs them together. Every bar is its table's own word (GAIN green, EVEN yellow, LOSS red, power given blue) beside its size; every LOSS row stands on it and is raised on the status board (section L.7) and answered, with its cause and its knob, in section L.9. The whole organism composed from these same tables follows in section L.18; every table, every muscle and the grid in full in section L.19.

Controls. Recorded data: every receipt as the repository holds it. The kill switch recolours a recorded result and never rewrites it; console controls never modify it.

The page, in its own words.

The benefit board: every domain, native against Omni-Compass

Where the benefit lives, gauge by gauge

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Every judged row of every newest three-run table (the tables below), sorted into the family of gauge it measures. A CTO reads speed, the service level, failures and work. A CFO reads machines, energy and the bill. A plant engineer reads peaks and swings, wear and accuracy, and misses. Each bar counts the rows that read GAIN in all three runs; the size beside it is the median of those rows' own sizes (the middle of runs A, B and C). Power given and LOSS rows are counted beside them.

The trading floor: every three-run table on one screen, the market map and the quote board

Every three-run table on this page (the tables of section L.19, as GitHub's runs wrote them) read the way a trading floor reads its market. The map: one tile a table, grouped by stack, its area the gauges it judged and its colour its reading: green GAIN, the deeper the more of its rows; red where any row reads LOSS; yellow EVEN; blue where it gave power; grey with a dashed edge an orchestrator's own cost, with no Omni-Compass in either arm. The board: one quote a table, its ticker and engine, the gauge that moved most with its mean change, and that gauge in each of the three runs (A, B and C) as a candle, the bar its 95% interval and the tick its value against the zero line; the strip under it counts the table's rows by word, and the tape runs every headline across the top. Point at a tile or a quote for its record. Nothing here is typed in: every figure is the table's own.

Aggregate: one figure for the whole board

Its monitors.

L.17.1 Monitor 15: The benefit board

Every domain's three-run table as one bar: GAIN, EVEN, LOSS and power given, native against Omni-Compass.

- **Evidence and state.** Class L/S; record.
- **Feed.** the build (the repository's tables, no live feed: a recording rule would compose the layers' ratios).
- **Wired.** This page's `drawBenefit, fxCursor` → the Python `tools/benefit_sheet.py`, `tools/omni_index.py`, `tools/readings.py` → the C++ none: the repository's measured tables, read as written; no engine runs in the page for them; held equal by `tests/test_benefit_sheet.py`, `tests/test_readings.py`.
- **Moves.** The reading cursor walks the bars, one benchmark at a time.
- **Knobs.** Filter: which rows, words, families or organisms are shown; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **How to read it.** Bars and tiles in the traffic light of the one key: GAIN green to one side, LOSS red to the other, EVEN yellow on zero, power given blue. A figure is a composition or a table's own word, never a single run's number.
- **What to do with it.** Read the word before the size, and the interval before the word: an interval across zero is EVEN whatever its centre. A LOSS on the board is answered on the status board, with its cause and its knob.

L.17.2 Monitor 16: Where the benefit lives, gauge by gauge

The same tables by gauge family: work, speed, misses, resources.

- **Evidence and state.** Class L/S; record.
- **Feed.** the build (the repository's tables, no live feed: a recording rule would compose the layers' ratios).
- **Wired.** This page's `drawFam` → the Python `tools/benefit_sheet.py`, `tools/readings.py` → the C++ none: the repository's measured tables, read as written; no engine runs in the page for them; held equal by `tests/test_benefit_sheet.py`, `tests/test_readings.py`.
- **Moves.** The reading cursor walks the families, one at a time.
- **Knobs.** Filter: which rows, words, families or organisms are shown; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** Bars and tiles in the traffic light of the one key: GAIN green to one side, LOSS red to the other, EVEN yellow on zero, power given blue. A figure is a composition or a table's own word, never a single run's number.
- **What to do with it.** Read the word before the size, and the interval before the word: an interval across zero is EVEN whatever its centre. A LOSS on the board is answered on the status board, with its cause and its knob.

L.17.3 Monitor 17: The market map: every three-run table a tile

Every three-run table on the page as a tile of a squarified treemap, grouped by stack: its area the gauges it judged, its colour its reading (GAIN green, LOSS red, EVEN yellow, power given the accent, an orchestrator's own cost grey and dashed).

- **Evidence and state.** Class L/S; record.
- **Feed.** the build (the repository's three-run tables, no live feed: a recording rule would carry each table's counts).

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Wired.** This page's `drawTradeMap` → the Python `tools/confirm_abc.py`, `tools/readings.py`, `docs/engine/build_live_engine.py` → the C++ none: the repository's measured tables, read as written; no engine runs in the page for them; held equal by `tests/test_confirm_abc.py`, `tests/test_readings.py`, `docs/engine/build_live_engine.py`.
- **Moves.** The scan cursor walks every tile, one every 1.5 s.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** Bars and tiles in the traffic light of the one key: GAIN green to one side, LOSS red to the other, EVEN yellow on zero, power given blue. A figure is a composition or a table's own word, never a single run's number.
- **What to do with it.** Read the word before the size, and the interval before the word: an interval across zero is EVEN whatever its centre. A LOSS on the board is answered on the status board, with its cause and its knob.

L.17.4 Monitor 18: The quote board: every three-run table a quote

Every three-run table as a quote: its ticker and engine, the gauge that moved most with its mean change, that gauge in runs A, B and C as a candle (the 95% interval and the value), its rows counted by word, and a tape of every headline.

- **Evidence and state.** Class L/S; record.
- **Feed.** the build (the repository's three-run tables, no live feed: a recording rule would carry each table's counts).
- **Wired.** This page's `drawQuotes` → the Python `tools/confirm_abc.py`, `tools/readings.py`, `docs/engine/build_live_engine.py` → the C++ none: the repository's measured tables, read as written; no engine runs in the page for them; held equal by `tests/test_confirm_abc.py`, `tests/test_readings.py`, `docs/engine/build_live_engine.py`.
- **Moves.** The tape of the headlines runs across the top at 55 px a second.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **How to read it.** Bars and tiles in the traffic light of the one key: GAIN green to one side, LOSS red to the other, EVEN yellow on zero, power given blue. A figure is a composition or a table's own word, never a single run's number.
- **What to do with it.** Read the word before the size, and the interval before the word: an interval across zero is EVEN whatever its centre. A LOSS on the board is answered on the status board, with its cause and its knob.

L.18 The whole organism, every way it is bought: on-site bare metal, through the cloud, in the device, as a service

Omni-Compass is wired into every piece of a stack through its own two-way plug: the software (the cluster: Kubernetes, its add-ons, its governors and orchestrators; and the services on it: the pools, the consumers, the caches), the bare metal under it (the chip's power limit and clock; the machine's kernel and its own meter) and, where the stack is rented, the cloud that bills the machines. A stack is bought one of two ways: on-site bare metal, the software on the owner's own bare metal (software × bare metal, no cloud); through the cloud, the cloud's build, its bare metal at the back end and the software (cloud × bare metal × software), with the cloud as two pieces beside it (cloud × software, the back-end bare metal left to the provider). The composition is read four ways (the Scenario knob): the two ways a stack is bought, and two more that take its pieces alone, in the device (the bare metal by itself) and as a service (the software by itself). Every piece's benefit is added into one collective reading, gauge by gauge (work, the 95th percentile response, machines, energy, the bill), with the receipts under it: what native spent, what Omni-Compass spent, and the benefit, in the units each table measured. The repository composes the layers in one place, tools/whole_system.py, which writes results/WHOLE_SYSTEM.md from the tables that stand: each layer measured against its own native with the layer under it as native runs it; a gauge's ratio oriented so that above 1 is a GAIN at every layer alike; the layers composed by the product law, $R(g) = \prod_\ell R_\ell(g)$, $\log R = \Sigma_\ell \log R_\ell$ (for small benefits the product is their sum), every interval carried (the exact Student t per run; A, B and C pooled by inverse variance; the layers' variances added); two readings of the same numbers (every measured piece: everything measured enters with its interval; the strict reading, the index's rule: only what held the same way in all three of our runs, everything else exactly 1); and the separability assumption tested on the governors' four ways. This section recomputes nothing from the tables: it regroups that file's layers into the two ways (docs/engine/export_whole.py), summing the logarithms of the layers a scenario stacks and adding their variances, as the file's rule composes any set of layers; the one number is the mean of the gauge logarithms, its 95% interval under the file's two bounds. The composition is a model (evidence class S) of class P and class L measurements under the separability assumption, and says so; no run has yet stacked every layer at once, and that stacked run is the measurement that would replace it. The chip's one measured run (2 October, on the card controller since replaced) stands beside the count by default, every row of it shown, as the repository's own headline has it; one click puts it in, until its run on Lambda on the engine that stands replaces it. The machine (the kernel, bare metal, Kepler) is not yet run and enters as exactly 1, named. GAIN is green, LOSS red, EVEN yellow, power given blue, on every word, cell and tile.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

The page, in its own words.

The third arm, Omni-Compass by itself. Every composition on this page is bought two ways today, native and Omni-Compass and native. The founder's order of 23 October adds a third wherever native is a controller that can be switched off: Omni-Compass by itself, the muscle's own native controller switched off and Omni-Compass alone on its knob (docs/SOLO_PREREGISTRATION.md). Its column appears here from its first run on GitHub's machines, read from the raw files like every other; nothing is written for it before then.

DISCLOSURE: THE CLOUD'S BACK END IS NOT OURS TO METER. Through the cloud, the bare metal at the back end belongs to the provider: no tenant can read its power meter or write its chips' limits, so no run here reaches it. What a tenant can measure is what the cloud meters and bills: the machines it counts every fifteen seconds and the bill at list price (section L.21); that difference, native against Omni-Compass on top of the cloud's own autoscaler, is the cloud piece's benefit, and it is the provider's own health on its own hardware too, fewer machines held for the same work. The bare-metal piece is gauged on hardware we can meter (the card's own meter, the CPU host's energy counter, section L.26) and claimed for the provider's bare metal only as the same mechanism on the same kind of part: the composition multiplies it in as a modelled factor (class S of class P), never as a measurement of the provider's machines. Four ways are composed: on-site bare metal (the owner's own racks and chips: software × bare metal); through the cloud (the cloud's build, its bare metal at the back end and the software; and the cloud as two pieces, the back end left to the provider); in the device (Omni-Compass built into the bare metal alone, the card and the machine, nothing else wired: for an owner who ships hardware); as a service (the software alone, run for an owner with neither bare metal of their own nor a cloud account: the transport of the software only). This whole stack is a composition with two arms, native and with Omni-Compass on top of every piece; it is not counted among the organisms (the seven, and the orchestra the eighth). Each piece is its own newest measurement, on the engine its record names (the cloud piece Azure's runs on omni-v1, the chip piece the card run of 2 October under a controller since replaced, the software pieces their newest three-run tables): the composition is across those engines, names each, and is remade as each piece's run on the engine that stands lands.

The stack, native beside Omni-Compass: work flowing down through the pieces

The collective synopsis: the benefits, gauge by gauge, added together

The composition, piece by piece and layer by layer: each factor with its 95% interval, the whole their product

Bills and receipts: what native spent (the cost), what Omni-Compass spent (the expense), and the benefit, in the units each table measured

Beyond the count: the governors' tables on this page, the models beside, the separability test, and where the missing pieces land

Its monitors.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.18.1 Monitor 19: The whole organism, composed

The pieces of a stack, native beside Omni-Compass, each piece's composed factors and the whole, their product, in every way a stack is bought.

- **Evidence and state.** Class S (of P and L); composed.
- **Feed.** the build (the repository's tables, no live feed: a recording rule would compose the layers' ratios).
- **Wired.** This page's `drawWhole` → the Python `tools/whole_system.py`, `docs/engine/export_whole.py` → the C++ none: a composition of measured tables by the product law, read as tools/whole_system.py writes it; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** Work flows down both columns; the reading cursor walks the pieces, one a decision.
- **Knobs.** Scenario: on-site bare metal, through the cloud, in the device, as a service; Reading: every measured piece carried, or the index's strict rule; The chip's run: the chip's one run beside the count or in it; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** Bars and tiles in the traffic light of the one key: GAIN green to one side, LOSS red to the other, EVEN yellow on zero, power given blue. A figure is a composition or a table's own word, never a single run's number.
- **What to do with it.** Read the word before the size, and the interval before the word: an interval across zero is EVEN whatever its centre. A LOSS on the board is answered on the status board, with its cause and its knob.

L.19 Measured effect in full: the organisms, every muscle, the register, the grid and every three-run table

Everything the board in section L.17 stands on, from the organisms down to the single muscle: the seven organisms under their three loads, all 1,107 muscles of the catalog one cell each, every registered benchmark still to run, the scale-out grid of copies and runs, and every three-run table in the repository with every row as it is written.

Controls. Recorded data: every receipt as the repository holds it. Console controls never modify it.

The page, in its own words.

Every benchmark's benefit in one place, as the repository's benefit sheet holds it (results/BENEFIT_SHEET.json), with the Omni index that weighs them together

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

(results/OMNI_INDEX.md). Then the grid: every organism at 1, 10, 100 and 1,000 copies, each at 1, 10, 100 and 1,000 runs, modelled and with the real cluster inside. The 1,000 tier runs on GitHub's free runners only; paid machines stay at 100. Each bar and square carries its own word, and the size beside the word carries the word's sign: GAIN +, LOSS −, EVEN =, power given +.

The seven organisms of the catalog under three loads, then the whole stack's two arms, native and with Omni-Compass

The founder's count of 20 October: the seven organisms of the catalog (the spine first, the base every stack runs on; the four realms; the four stacked; the whole tower), each run native and with Omni-Compass on top of native, under its own load, the climb (1 2 3 2 3 4 …) and work waiting in line; and the whole organism, the software, the cloud and the hardware stacked into one body (section L.18), composed from the pieces' own readings, native and with Omni-Compass on top of every piece: a composition with two arms, not an organism of the catalog. The orchestra, every governor's muscles as one body, is the eighth organism (section L.22). The monitor below draws the seven from the realms table; the whole stack's two arms are section L.18's composition until the stacked run, preregistered in docs/WHOLE_SYSTEM_PREREGISTRATION.md, measures them in one run.

Every muscle of the catalog, one cell each, its word against native

Click a cell to read the muscle: its name, family, realm, template, knob and its word under each load.

Third-party software still to be benchmarked: the register's slots, in order

What these slots are. Every muscle in them (a legged robot's gait, locomotion_speed; a wind turbine's blade pitch, pitch_angle_limit; a mobile robot's travel speed, agv_speed and trajectory_speed) already runs, modelled, in the 1,107-muscle catalog and the seven organisms below, native and with OMNI-COMPASS on top. A slot here is the next step for that kind of muscle: the same test on the outside world's own software (MuJoCo's Unitree Go2, NREL's OpenFAST, ROS 2 Nav2), each queued until its three runs land.

The scale-out grid: seven organisms × 1, 10, 100 and 1,000 copies × 1, 10, 100 and 1,000 runs (the 1,000 tier on GitHub's free runners only)

Modelled (class S): the misses

With the real cluster inside (class L inside the model): the 95th percentile

Every three-run table in the repository, native against Omni-Compass, every row as written (each benchmark's newest engine's table; class L real software, class S outside simulators)

From each benchmark's newest engine's table (results/live/V10_*.md today), read row by row by docs/engine/export_scenarios.py; open a row to read every judged row that is not EVEN. Class L: the real software (Kubernetes on kind, the real databases and broker). Class S: the outside simulators run by our own runner (CityLearn, pandapower on SimBench, MuJoCo Menagerie, gym-pybullet-drones). Rows shown and not judged are left out of the counts; the counts take every table of a receipt, its tuning case included where it

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

has one (a receipt's own summary line counts its untouched cases). Run and scored by The Omni-Compass LLC's own code. No outside party has reviewed or approved these results.

Every muscle of the catalog and the seven organisms, native against Omni-Compass (the realms table)

The eighth organism, the orchestra (every governor's catalog muscles, each governor's a body of its own and all of them one body), has its own runner and its own table: section L.22, under the governors.

Every family, by stack: each muscle alone, native and then with Omni-Compass

From results/realms_v5/REALMS_V5.json, the realms runner at the max, its engine and commit named above (tools/run_realms_v5.py, catalog realms/catalog_v5.csv), ten paired seeds per muscle and per organism, the lease after 80% of every run. Misses: the plant decisions over their line, summed over the ten seeds. A muscle reads GAIN when one of its aims (more work, faster, fewer misses) moved beyond the noise under some load with none moving the other way; EVEN at its limit on native when its knob already sits at the top of its range. Energy is power given where it rose. Evidence class S, our own models: a model's energy is not a meter's, and a plant written by the same people who wrote the law is not an independent test. Run and scored by The Omni-Compass LLC's own code. No outside party has reviewed or approved these results.

Its monitors.

L.19.1 Monitor 20: The seven organisms, three loads

Each organism's misses against native under its own load, the climb and the line (the realms table).

- **Evidence and state.** Class S; record.
- **Feed.** the build (the repository's tables, no live feed: a recording rule would compose the layers' ratios).
- **Wired.** This page's `drawOrgCv` → the Python `tools/run_realms_v5.py`, `realms/harness.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `tests/test_realms.py`, `tests/test_cpp_governor_parity.py`.
- **Moves.** The reading cursor walks every organism under every load, one a decision.
- **Knobs.** Filter: which rows, words, families or organisms are shown; Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** Each organism or grid square read by the one key: green GAIN, yellow EVEN, red LOSS, grey a single run, dashed not yet run.
- **What to do with it.** A dashed square is pending runner capacity, never rented. A LOSS square names its organism, its size and its runs.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.19.2 Monitor 21: Every muscle of the catalog

The 1,107 muscles as one matrix, each cell its word against native, by family and realm; a click names the muscle.

- **Evidence and state.** Class S; record.
- **Feed.** the build (the repository's tables, no live feed: a recording rule would compose the layers' ratios).
- **Wired.** This page's `drawMuscleCv` → the Python `tools/run_realms_v5.py`, `realms/harness.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `tests/test_realms.py`, `tests/test_cpp_governor_parity.py`.
- **Moves.** The reading cursor walks the 1,107 muscles, one a decision; a click holds one.
- **Knobs.** Filter: which rows, words, families or organisms are shown; Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** Every muscle of the catalog one cell, its word against native on its own load: green GAIN, yellow EVEN (pale: at its limit on native), red LOSS.
- **What to do with it.** Click a cell to read the muscle: its family, realm, template, knob and its word under each load.

L.19.3 Monitor 22: The scale-out grid

Seven organisms × copies × runs: every square's word, modelled and with the real cluster inside.

- **Evidence and state.** Class S/L; record.
- **Feed.** the build (the repository's tables, no live feed: a recording rule would compose the layers' ratios).
- **Wired.** This page's `drawGridCv` → the Python `tools/grid_v5.py`, `scripts/dispatch_grid.py`, `docs/engine/build_live_engine.py` → the C++ none: the grid's squares as its runs on GitHub write them; held equal by `tests/test_grid_v5.py`.
- **Moves.** The reading cursor walks every square with runs started, one a decision; the age of GitHub's reading counts up every second.
- **Knobs.** Filter: which rows, words, families or organisms are shown; Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** Each organism or grid square read by the one key: green GAIN, yellow EVEN, red LOSS, grey a single run, dashed not yet run.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **What to do with it.** A dashed square is pending runner capacity, never rented. A LOSS square names its organism, its size and its runs.

L.20 Part 4 of the page: Evidence by stack, from the cloud down to the chip

L.21 Cloud providers: Azure, Google Cloud, Amazon Web Services

In a cloud the one metric is the bill: whether the same workload costs less with Omni-Compass on top. Each provider's four test sets and their status.

Controls. Recorded data: GitHub's own cloud runs as read at the build. The controller below plays live; its run and speed follow the console's clock.

The page, in its own words.

In a cloud, Omni-Compass shows one thing: the same work as native for a smaller bill, never a bigger one. Every cloud set runs Omni-Compass at the tune-down on the machines alone: no pod autoscaler moved, no processor conveyed, no power capped, so the pods are exactly native's. It parks only a machine the cloud already made, after its own trial, and wakes it on a breach. The bill and the machines aim lower; work, speed and failures must read EVEN or GAIN. Azure runs first and is the measure of the other two: the same tuning, mechanism and harness.

Every cloud run GitHub has started, set by set

The bill monitors: Azure, Google Cloud and Amazon Web Services, native against Omni-Compass

One monitor a provider, the same harness, mechanism and tuning in all three (Azure is the measure of the other two). Each bar pair is a finished set: native's machine-hours (orange) beside Omni-Compass's (blue), the word by the one key (the bill aims lower: a fall is a GAIN, inside the noise EVEN, a rise power given), the bill at list price under it. A provider with no finished set shows its empty frame and the reason its hourly gate holds, in its own job's words; nothing is drawn for a run that has not run.

The bill on Azure, run by run, each with the engine it ran on

From 19 October: every Azure set runs up to 100 paired repetitions a run, the paid cap, under the preregistered stopping rule (tools/stop_rule.py). After 10, 20, 40 and 70 repetitions the bill's change is read with its 99% interval. The run stops once the bill is read (GAIN, power given, or EVEN within ±2% of native's bill), and never while the speed or the failed requests read a LOSS. Those runs carry "to the cap, stopping rule" in their title and count as their own A, B and C; the 5-repetition runs below stay as their own engines' record.

The shipped controller in the cloud setting, live: native's machines against Omni-Compass's

The controller every cloud set runs (omni_controller/controller.py --give-back-only, the tune-down, the machines alone), decision by decision on the repository's toy cluster (class S). The cloud's own autoscaler runs

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

in both arms. Omni-Compass only parks a machine the cloud already made, after its trial, and wakes it on a breach. The bill is the machine-minutes in service, counted from the record.

Native

Omni-Compass

Its monitors.

L.21.1 Monitor 23: Azure: the bill, run by run

Machine-hours billed and the bill at list price, native against Omni-Compass, every finished Azure set with its 95% interval, and the running set's repetitions done.

- **Evidence and state.** Class L (metered by Azure); record.
- **Feed.** OpenCost; Azure's own billing export; series `node_total_hourly_cost`, `kube_node_info`; on a running system: `sum(node_total_hourly_cost)`.
- **Wired.** This page's `drawCloudBill` → the Python `tools/live_reps.py`, `tools/stop_rule.py`, `docs/engine/build_live_engine.py` → the C++ none: the bill as Azure meters it; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** The reading cursor walks the finished sets; the age of GitHub's reading counts up every second.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** The bill the cloud meters: machine-hours and the bill at list price, native's bar beside Omni-Compass's, each finished set with its word; the running set's repetitions measured so far; each provider's hourly gate with the reason its own job wrote.
- **What to do with it.** The bill aims lower: a fall is a GAIN, inside the noise EVEN, a rise power given. A provider whose gate holds runs nothing and bills nothing; its frame stays empty until its first set lands.

L.21.2 Monitor 24: Google Cloud: the gate and the bill

The same monitor for Google Cloud: the hourly gate's reading (the key, the login, the quota) and, once a set runs, its bill native against Omni-Compass.; until its first set lands, the mechanism every cloud set runs, live on the cloud setting's model (class S, marked, never this cloud's bill)

- **Evidence and state.** Class L; awaiting its run: not yet run: the queue is switched off (the key has not been stored whole); on the founder's word, wired as Azure's sets are (100 paired repetitions under the stopping rule, the 60 s beat, the $0 check first).

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Feed.** OpenCost; Google Cloud Billing export; series `node_total_hourly_cost`; on a running system: `sum(node_total_hourly_cost)`.
- **Wired.** This page's `drawCloudBill` → the Python `tools/cloud_key_check.py`, `omni_controller/controller.py`, `pilot/selfpilot.py`, `fleet/harness.py`, `tools/toy_gate.py`, `docs/engine/export_controller_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/shield.cpp`, `cpp/src/compass.cpp`, `cpp/src/hpa.cpp`; held equal by `tests/test_cloud_check.py`, `docs/engine/check_records.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_shield_parity.py`, `tests/test_cpp_hpa_parity.py`.
- **Moves.** Until the first set lands: the modelled machines decision by decision on the live engine's clock, a ring at each head.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** The bill the cloud meters: machine-hours and the bill at list price, native's bar beside Omni-Compass's, each finished set with its word; the running set's repetitions measured so far; each provider's hourly gate with the reason its own job wrote.
- **What to do with it.** The bill aims lower: a fall is a GAIN, inside the noise EVEN, a rise power given. A provider whose gate holds runs nothing and bills nothing; its frame stays empty until its first set lands.

L.21.3 Monitor 25: Amazon: the gate and the bill

The same monitor for Amazon Web Services: the hourly gate's reading and, once a set runs, its bill native against Omni-Compass.; until its first set lands, the mechanism every cloud set runs, live on the cloud setting's model (class S, marked, never this cloud's bill)

- **Evidence and state.** Class L; awaiting its run: not yet run: the queue is switched off (the account cannot leave Amazon's Free plan yet); on the founder's word, wired as Azure's sets are (100 paired repetitions under the stopping rule, the 60 s beat, the $0 check first).
- **Feed.** OpenCost; AWS Cost and Usage Report; series `node_total_hourly_cost`; on a running system: `sum(node_total_hourly_cost)`.
- **Wired.** This page's `drawCloudBill` → the Python `tools/cloud_key_check.py`, `omni_controller/controller.py`, `pilot/selfpilot.py`, `fleet/harness.py`, `tools/toy_gate.py`, `docs/engine/export_controller_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/shield.cpp`,

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

`cpp/src/compass.cpp`, `cpp/src/hpa.cpp`; held equal by `tests/test_cloud_check.py`, `docs/engine/check_records.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_shield_parity.py`, `tests/test_cpp_hpa_parity.py`.

- **Moves.** Until the first set lands: the modelled machines decision by decision on the live engine's clock, a ring at each head.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** The bill the cloud meters: machine-hours and the bill at list price, native's bar beside Omni-Compass's, each finished set with its word; the running set's repetitions measured so far; each provider's hourly gate with the reason its own job wrote.
- **What to do with it.** The bill aims lower: a fall is a GAIN, inside the noise EVEN, a rise power given. A provider whose gate holds runs nothing and bills nothing; its frame stays empty until its first set lands.

L.21.4 Monitor 26: The cloud setting, live: native's machines

The shipped controller's cloud mode on the toy cluster: the cloud's own autoscaler alone.

- **Evidence and state.** Class S; replay.
- **Feed.** kube-state-metrics; tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `kube_node_info`, `omni_nodes_observed`; on a running system: `count(kube_node_info)`.
- **Wired.** This page's `drawCluster` → the Python `omni_controller/controller.py`, `pilot/selfpilot.py`, `fleet/harness.py`, `tools/toy_gate.py`, `docs/engine/export_controller_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/shield.cpp`, `cpp/src/compass.cpp`, `cpp/src/hpa.cpp`; held equal by `docs/engine/check_records.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_shield_parity.py`, `tests/test_cpp_hpa_parity.py`.
- **Moves.** The shipped controller's record played decision by decision on the live engine's clock; a ring opens at each head with its newest value.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Speed: 1×, 4×, 16× or 60× of the engine's clock; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off:

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..

- **How to read it.** The bill the cloud meters: machine-hours and the bill at list price, native's bar beside Omni-Compass's, each finished set with its word; the running set's repetitions measured so far; each provider's hourly gate with the reason its own job wrote.
- **What to do with it.** The bill aims lower: a fall is a GAIN, inside the noise EVEN, a rise power given. A provider whose gate holds runs nothing and bills nothing; its frame stays empty until its first set lands.

L.21.5 Monitor 27: The cloud setting, live: Omni-Compass's machines

The same autoscaler with Omni-Compass parking a machine only after its trial, waking it on a breach.

- **Evidence and state.** Class S; replay.
- **Feed.** kube-state-metrics; tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `kube_node_info`, `omni_nodes_observed`, `omni_writes_total`; on a running system: `count(kube_node_info)`; `omni_nodes_observed`.
- **Wired.** This page's `drawCluster` → the Python `omni_controller/controller.py`, `pilot/selfpilot.py`, `fleet/harness.py`, `tools/toy_gate.py`, `docs/engine/export_controller_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/shield.cpp`, `cpp/src/compass.cpp`, `cpp/src/hpa.cpp`; held equal by `docs/engine/check_records.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_shield_parity.py`, `tests/test_cpp_hpa_parity.py`.
- **Moves.** The shipped controller's record played decision by decision on the live engine's clock; a ring opens at each head with its newest value.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Speed: 1×, 4×, 16× or 60× of the engine's clock; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** The bill the cloud meters: machine-hours and the bill at list price, native's bar beside Omni-Compass's, each finished set with its word; the running set's repetitions measured so far; each provider's hourly gate with the reason its own job wrote.
- **What to do with it.** The bill aims lower: a fall is a GAIN, inside the noise EVEN, a rise power given. A provider whose gate holds runs nothing and bills nothing; its frame stays empty until its first set lands.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.22 Orchestrators and governors: every scheduler, queue and multi-cluster governor, native and with Omni-Compass on top

These are the governors and orchestrators that sit between the work and the cluster: batch schedulers and job queues, multi-cluster governors, the default Kubernetes scheduler, GPU and edge orchestrators, and the rightsizing controllers. Each runs four ways in every repetition: the organism alone, the orchestrator as shipped, Omni-Compass on the organism alone, and Omni-Compass on top of the orchestrator; only the last two, each against its own native, are readings of Omni-Compass, and the other comparisons are the orchestrator's own cost. Each has three runs, and every row is shown. Every place below is laid out now and fills itself from the repository as each one lands. Until then it says what the repository holds, and nothing more.

Controls. Recorded data: each governor's place as the repository holds it, its runs read from GitHub at the build and played here the moment they land; click a governor (a tile, a row of the road or of the catalog) to hold it.

The page, in its own words.

The road to a result, every governor at once: its register row, its preregistration, its rig on GitHub, runs A, B and C, its three-run table

The orchestration stack, live: Omni-Compass on top, the governor native as shipped, Kubernetes and its nodes beneath

Where each governor sits in the stack. Omni-Compass reads and writes on top of it once its wire is in the repository. The governor runs native as shipped beneath it, and Kubernetes places the work on the nodes. The work dots move at the live engine's demand (section L.14): a picture of the flow, not a measurement. Each governor's readings replace this picture the moment its three runs land.

The catalog of governors and orchestrators: what each governs, native as shipped, Omni-Compass on top, and what the repository holds now

The four ways: the organism alone, the governor as shipped, Omni-Compass on the organism alone, Omni-Compass on top of the governor, all four in every repetition

The orchestra, the eighth organism: every governor's catalog muscles, native and with Omni-Compass on top (modelled, class S)

Its monitors.

L.22.1 Monitor 28: The orchestrators' road

Every scheduler, queue and multi-cluster governor on its way through trial, A, B and C, on the engine that stands.

- **Evidence and state.** Class L; record.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Feed.** GitHub Actions API (read at the build); live: github-actions-exporter.
- **Wired.** This page's `drawOrchRoad` → the Python `tools/governors_page.py`, `tools/confirm_abc.py`, `docs/engine/build_live_engine.py` → the C++ none: the governors are live software on Kubernetes, run as their projects ship them; held equal by `tests/test_governors_page.py`.
- **Moves.** A dot travels each governor's road, a running run pulses, and the reading cursor walks the governors, one a decision.
- **Knobs.** Governor: which orchestrator or governor is shown; Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** Each scheduler, queue and multi-cluster governor four ways: the organism alone, the orchestrator as shipped, Omni-Compass on the organism alone, Omni-Compass on the orchestrator.
- **What to do with it.** Only two of the four comparisons are Omni-Compass against its native (on top of the orchestrator; on the organism alone); the others are the orchestrator's own cost and are never counted as Omni-Compass's.

L.22.2 Monitor 29: An orchestrator, four ways

The organism alone, the orchestrator as shipped, Omni-Compass on the organism alone, Omni-Compass on the orchestrator: the four arms of the chosen governor.

- **Evidence and state.** Class L; record.
- **Feed.** kube-state-metrics; each orchestrator's own metrics endpoint (Kueue, Volcano, KAI, Koordinator, Crane, KubeRay); series `kube_pod_status_phase{phase="Pending"}`, `kueue_pending_workloads`; on a running system: `sum(kube_pod_status_phase{phase="Pending"})`.
- **Wired.** This page's `drawOrch` → the Python `tools/governors_page.py`, `tools/run_orchestra.py` → the C++ none: the governors are live software on Kubernetes, run as their projects ship them; held equal by `tests/test_governors_page.py`, `tests/test_orchestra.py`.
- **Moves.** Work flows down the stack at the live engine's demand.
- **Knobs.** Governor: which orchestrator or governor is shown; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..

- **How to read it.** Each scheduler, queue and multi-cluster governor four ways: the organism alone, the orchestrator as shipped, Omni-Compass on the organism alone, Omni-Compass on the orchestrator.
- **What to do with it.** Only two of the four comparisons are Omni-Compass against its native (on top of the orchestrator; on the organism alone); the others are the orchestrator's own cost and are never counted as Omni-Compass's.

L.23 Kubernetes: official run playback

Playback of the official benchmark runs from their archived raw files: the native cluster and the Omni-Compass cluster under identical load, in 30-second bins, every file verified against its run's SHA-256 manifest.

The page, in its own words.

A real-time operations dashboard over the benchmark runs themselves (class L), not a model. Every series below streams half minute by half minute out of the raw files GitHub archived, each file's SHA-256 matched before a byte is drawn: native (the whole cluster with everything it ships with, everything but Omni-Compass) against Omni-Compass, the same load, the same second. The tiles, the candles, the heatmap, the bars and the governor's ticker all move together with section L.24 (pick a benchmark, a run or a repetition in either place). Every word is the run's own reading, never one drawn from the stream.

Data pipeline: from the GitHub Actions run to this page

The heart: the governor's beat from this repetition's own audit, beside native's own clock

Why a heart. A supervisory governor is only alive while its loop turns: once every decision it reads the whole body, decides, writes, and proves it is still there. That turn is the heart. Each beat pumps every reading in through the plug and the decision out (omni_controller/controller.py, its main loop), and renews the governor's lease (master.heartbeat(), omnicompass/master.py). If the heart stops, its process gone or its lease older than its limit (the larger of 120 s and five beats), the watchdog (tools/omni_switch.py watchdog) walks every setting back to native: a stopped heart leaves the body exactly as native runs it. Native has no heart of its own: each of its controllers keeps its own clock (the pod autoscaler every 15 s, the firmware, the thermostats) and no beat joins them. On omni-v16 the governor's heart beats at the pod autoscaler's own pace, a full read of the state every 15 s (the founder's order of 22 October; docs/OMNI_V16.md).

A healthy heart, never pushed. The beat runs at a fixed, calm rate (on omni-v16 one decision every 15 s, the fast checks every 5 s between beats; the runs replayed here ran before omni-v16, one decision a minute) and is never driven faster by the load it governs. Every clock of the engine counts seconds, so the beat's pace sets how often the body is read, never what a rule means: a give-back still waits its trial's minutes, the cushion still keeps its twenty minutes of memory, and a machine still goes back at most one a minute. What it costs is counted inside the body's own load, so the organism never pays for its own brain without knowing it. A

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

decision that fails is recorded and skipped: it writes nothing, the body keeps the last settings that landed, and the next beat comes at its normal time (safe_step). Two gauges below read its health: the share of each beat spent deciding, and how close the lease came to its limit. The page calls a heart under strain when a decision takes more than half its beat, or a gap between beats reaches 80% of the lease. Past half its beat, the governor would have less than half its period left to act before the next reading. Both lines are this page's reading, not rules of the engine; the engine's own guard is the lease and the watchdog.

The heartbeat sweep: every beat the governor can run at, what it does against native and what it costs

A knob, not a fixed number. The governor's full read of the state, its heartbeat, is a setting of the run: every clock of the engine counts seconds, so the beat sets only how often the body is read, never what a rule means (omni-v16, docs/OMNI_V16.md). The factory sets 60 s since omni-v17, the main engine (omni-v16 set 15 s, the pod autoscaler's own pace; this sweep reads omni-v16 and omni-v15, and the dial's own ladder reads omni-v17 at every beat in section L.15); an operator may choose another for a system's own reasons, a slower beat to read the cluster less, a faster one to answer sooner, and this monitor shows what each choice does. Each bar is our own model (evidence class S, never a benchmark result): the shipped controller on the toy cluster's 5-second plant, eight seeds of a day each, paired by seed with native and read by the one key (tools/heartbeat_sweep.py, results/toy_gate/HEARTBEAT_SWEEP.md). Every beat here is read in the model only: a real run reads the one beat it was started with, the governor's --interval.

Response time: one candlestick per 30-second bin

Latency heatmap: every response, binned

Throughput: requests served per 30-second bin

Every repetition of this run, side by side

The governor's ticker: every decision of Omni-Compass in this repetition, newest first

Native's own controllers' ticker: every change its pod autoscaler and the cluster made in the same repetition, newest first

From the repetition's own audit.jsonl: the minute and second of the decision, the compass position (0 calm, 1 at the line), and the force on the pedal (push: toward more; lift: handing the setting back toward native). Then the machines it recommends, and the give-back verdict's state: "left native" means every setting stays native's; "acting" means a trial on its own measurement. Native has no governor; its own controllers' moves are the second ticker, read from the native arm's capture.csv: the replicas its pod autoscaler holds, the pods waiting for a place and the machines ready. With Omni-Compass OFF the first ticker is empty, for nothing decides on top of native.

Benchmark status, by block

Its monitors.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.23.1 Monitor 30: The data pipeline, live: every stage from the GitHub Actions run to this page

Every stage from the GitHub Actions run to this page: the run, the raw files archived, the SHA-256 check, the official scorer, the three-run tables, the build and the page, the stage being read lit.

- **Evidence and state.** Class L; replay.
- **Feed.** GitHub Actions API (read at the build); live: github-actions-exporter.
- **Wired.** This page's `drawPipe` → the Python `scripts/raw_archive.sh`, `tools/live_reps.py`, `tools/confirm_abc.py`, `docs/engine/build_live_engine.py` → the C++ none: the stages are GitHub's runs and the repository's own tools; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** The stage being read lights in turn and the data moves between the stages.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Speed: 1×, 4×, 16× or 60× of the engine's clock; Gauge: which gauge of the run is shown; Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** A Kubernetes run played back from its own archived files, or the shipped controller replayed decision by decision from its own audit: the machines, the replicas, the response line, native beside Omni-Compass.
- **What to do with it.** Pick the run (A, B or C) and the gauge; read the paired difference in each repetition before the table's word. A run of the engine that stands carries omni-v18; an older engine's run is its own record.

L.23.2 Monitor 31: The official run's heartbeat

The official run's heartbeat: native's own 15 s clock above, every beat of the governor's decision loop in the repetition below, native beside Omni-Compass.

- **Evidence and state.** Class L; replay.
- **Feed.** kube-state-metrics; the load generator's own histogram (the rig's loadgen); series `kube_horizontalpodautoscaler_status_current_replicas`, `kube_node_status_allocatable`; on a running system: `sum(kube_horizontalpodautoscaler_status_current_replicas)`.
- **Wired.** This page's `drawHeart` → the Python `docs/engine/export_runs.py`, `omni_controller/controller.py` → the C++ none: the live software's own measurements, played back from their SHA-256-checked files; held equal by `docs/engine/build_live_engine.py`.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Moves.** The chosen repetition replayed decision by decision; native's own 15 s clock beats above.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Speed: 1×, 4×, 16× or 60× of the engine's clock; Gauge: which gauge of the run is shown; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** A Kubernetes run played back from its own archived files, or the shipped controller replayed decision by decision from its own audit: the machines, the replicas, the response line, native beside Omni-Compass.
- **What to do with it.** Pick the run (A, B or C) and the gauge; read the paired difference in each repetition before the table's word. A run of the engine that stands carries omni-v18; an older engine's run is its own record.

L.23.3 Monitor 32: The heartbeat sweep: every beat the governor can run at

The governor's beat as a knob: what a decision every 5 to 120 s does against native, or against the same engine at 15 s or 60 s, on-site and in the cloud, gauge by gauge with its 95% interval, and what each beat costs the engine; our own model.

- **Evidence and state.** Class S; model.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_decisions_total`, `omni_decision_seconds`, `omni_last_decision_timestamp_seconds`, `omni_own_cpu_cores`; on a running system: `60 * rate(omni_decisions_total[5m])`; `omni_own_cpu_cores`; `time() - omni_last_decision_timestamp_seconds`.
- **Wired.** This page's `drawBeat, beatSetup` → the Python `tools/heartbeat_sweep.py`, `tools/toy_gate.py`, `omni_controller/controller.py` → the C++ none here: the sweep runs the shipped Python controller on the toy cluster; the C++ governor twin is held to the Python's at 60 s and at 15, 10 and 5 s (tests/test_cpp_governor_parity.py); held equal by `results/toy_gate/HEARTBEAT_SWEEP.md`, `docs/engine/build_live_engine.py`.
- **Moves.** A cursor reads the beats in turn and names the row it holds; every button redraws the chart from the record.
- **Knobs.** Beat: the governor's full read of the state and its decision: at the bench's six stops, 10, 15, 30, 60, 90 or 120 s (the heartbeat sweep's record holds 5, 20 and 75 s too, read in its file); on a real governor its --interval (60 s at the factory since omni-v17, 15 s on omni-v16); Scenario: on-site bare metal, through the cloud, in the device, as a service; Engine: which engine's record the monitor reads: the engine that stands or the one before it; Against: what each reading is set against: native, or the same engine at another

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

setting; Gauge: which gauge of the run is shown; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..

- **How to read it.** A Kubernetes run played back from its own archived files, or the shipped controller replayed decision by decision from its own audit: the machines, the replicas, the response line, native beside Omni-Compass.
- **What to do with it.** Pick the run (A, B or C) and the gauge; read the paired difference in each repetition before the table's word. A run of the engine that stands carries omni-v18; an older engine's run is its own record.

L.23.4 Monitor 33: The official run: response time candles

The response time of the chosen run as candles, one a half minute, native above and Omni-Compass below, on one logarithmic scale.

- **Evidence and state.** Class L; replay.
- **Feed.** the load generator's own histogram (the rig's loadgen); series `http_request_duration_seconds_bucket`; on a running system: `histogram_quantile(0.95, sum by (le) (rate(http_request_duration_seconds_bucket[1m])))`.
- **Wired.** This page's `drawCandle` → the Python `docs/engine/export_runs.py`, `tools/live_reps.py`, `scripts/raw_archive.sh` → the C++ none: the live software's own measurements, played back from their SHA-256-checked files; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** The chosen run replayed half minute by half minute.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Gauge: which gauge of the run is shown; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** A Kubernetes run played back from its own archived files, or the shipped controller replayed decision by decision from its own audit: the machines, the replicas, the response line, native beside Omni-Compass.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **What to do with it.** Pick the run (A, B or C) and the gauge; read the paired difference in each repetition before the table's word. A run of the engine that stands carries omni-v18; an older engine's run is its own record.

L.23.5 Monitor 34: The official run: the heat map

The responses of each half minute counted in eight response-time buckets, native above and Omni-Compass below.

- **Evidence and state.** Class L; replay.
- **Feed.** the load generator's own histogram (the rig's loadgen).
- **Wired.** This page's `drawHeat` → the Python `docs/engine/export_runs.py`, `tools/live_reps.py`, `scripts/raw_archive.sh` → the C++ none: the live software's own measurements, played back from their SHA-256-checked files; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** The chosen run replayed half minute by half minute.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Gauge: which gauge of the run is shown; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** A Kubernetes run played back from its own archived files, or the shipped controller replayed decision by decision from its own audit: the machines, the replicas, the response line, native beside Omni-Compass.
- **What to do with it.** Pick the run (A, B or C) and the gauge; read the paired difference in each repetition before the table's word. A run of the engine that stands carries omni-v18; an older engine's run is its own record.

L.23.6 Monitor 35: The official run: paired bars

The requests answered each half minute, native and Omni-Compass side by side, the failed requests marked.

- **Evidence and state.** Class L; replay.
- **Feed.** the load generator's own histogram (the rig's loadgen).
- **Wired.** This page's `drawBars` → the Python `docs/engine/export_runs.py`, `tools/live_reps.py`, `scripts/raw_archive.sh` → the C++ none: the live software's own measurements, played back from their SHA-256-checked files; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** The chosen run replayed half minute by half minute.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Gauge: which gauge of the run is shown; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** A Kubernetes run played back from its own archived files, or the shipped controller replayed decision by decision from its own audit: the machines, the replicas, the response line, native beside Omni-Compass.
- **What to do with it.** Pick the run (A, B or C) and the gauge; read the paired difference in each repetition before the table's word. A run of the engine that stands carries omni-v18; an older engine's run is its own record.

L.23.7 Monitor 36: The official run: the repetitions

Each repetition's reading in the chosen gauge with its interval.

- **Evidence and state.** Class L; replay.
- **Feed.** the load generator's own histogram (the rig's loadgen).
- **Wired.** This page's `drawReps` → the Python `docs/engine/export_runs.py`, `tools/live_reps.py`, `scripts/raw_archive.sh` → the C++ none: the live software's own measurements, played back from their SHA-256-checked files; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** Each repetition's reading filled in as the run replays.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Gauge: which gauge of the run is shown; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** A Kubernetes run played back from its own archived files, or the shipped controller replayed decision by decision from its own audit: the machines, the replicas, the response line, native beside Omni-Compass.
- **What to do with it.** Pick the run (A, B or C) and the gauge; read the paired difference in each repetition before the table's word. A run of the engine that stands carries omni-v18; an older engine's run is its own record.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.24 Kubernetes: per-repetition run telemetry

Per-run telemetry at one-second resolution, with the run's receipt and each repetition's score from the repository's own scorer.

The page, in its own words.

These are the benchmark runs themselves, not a model: each three-run table's runs A, B and C, read back from the raw files GitHub archived (results/live/raw), native and Omni-Compass, repetition by repetition, played second by second. Every file the page reads has its SHA-256 computed and matched against the run's own SHA256SUMS_ALL.txt, and every Kubernetes repetition is scored by the repository's own scorer (tools/live_reps.py); where a run holds its own scored summary, the scorer's mean over its repetitions equals it (the count is below). Class L: real Kubernetes on kind, real databases and a real broker.

Native

Omni-Compass

The receipt of this run

This repetition, scored by the repository's own scorer

Benchmark status: landed, running, queued, or not yet run

Its monitors.

L.24.1 Monitor 37: Per-repetition run telemetry

One repetition half minute by half minute from its archived capture: the 95th percentile of the response time, the replicas, the host's processor and the governor's heartbeat, native beside Omni-Compass.

- **Evidence and state.** Class L; replay.
- **Feed.** kube-state-metrics; metrics-server; Kepler; series `kube_node_status_condition`, `kube_pod_status_phase`, `kepler_node_package_joules_total`; on a running system: `sum(kube_pod_status_phase{phase="Pending"})`; `rate(kepler_node_package_joules_total[1m])`.
- **Wired.** This page's `drawRuStrip` → the Python `docs/engine/export_runs.py`, `tools/live_reps.py`, `scripts/raw_archive.sh` → the C++ none: the live software's own measurements, played back from their SHA-256-checked files; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** The archived capture replayed half minute by half minute; a ring opens at each head with its newest value.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Repetition: which repetition of the run is replayed; Speed: 1×, 4×, 16× or 60× of the engine's clock; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

(white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..

- **How to read it.** A Kubernetes run played back from its own archived files, or the shipped controller replayed decision by decision from its own audit: the machines, the replicas, the response line, native beside Omni-Compass.
- **What to do with it.** Pick the run (A, B or C) and the gauge; read the paired difference in each repetition before the table's word. A run of the engine that stands carries omni-v18; an older engine's run is its own record.

L.25 Kubernetes and cloud: the shipped controller's decision trace

The shipped controller's decision trace, replayed from its own audit log one decision at a time: its inputs, its choice and its writes.

Controls. Recorded data: the shipped controller replayed decision by decision from its own audit (class S).

The page, in its own words.

This is the one place in the repository where the brain drives the muscles decision by decision: the shipped controller, omni_controller/controller.py, on the toy cluster of pilot/selfpilot.py, wired as the repository wires it. Each decision runs the chain left to right: the senses, the six-state brain, the nerves and the machine organ’s grant, the compass law on the service (cloud setting), the verdict’s trial, the release gate, the plug. Every value below is the controller’s own audit record of that decision, recorded by docs/engine/export_controller_trace.py on runs A, B and C (six hours each, a decision every 60 s, class S).

Native

Omni-Compass

This decision, brain to muscle, as the controller audited it

Three runs, A B C (the whole six hours of each)

The paired change per 15 s tick, averaged over ten-minute blocks, with its 95% interval (Student’s t) in each run; GAIN or LOSS only when all three runs point the same way with every interval clear of zero (tools/readings.py). Machines and power: a fall is a cut, a GAIN; a rise is power given. Our own models (class S): a model’s small numbers are the model’s.

What the real thing reads (class L: real Kubernetes, three runs each; every Kubernetes three-run table on this page, each on its newest engine)

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

How steadily the governor steered on real Kubernetes: its own moves on every table results/STEERING.json holds, each on its own engine, beside native's own controllers

Its monitors.

L.25.1 Monitor 38: The shipped controller's trace: native

The controller every Kubernetes and cloud set runs, replayed decision by decision from its own audit: native's cluster.

- **Evidence and state.** Class S; replay.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_nodes_observed`; on a running system: `omni_nodes_observed`.
- **Wired.** This page's `drawCluster` → the Python `omni_controller/controller.py`, `pilot/selfpilot.py`, `fleet/harness.py`, `tools/toy_gate.py`, `docs/engine/export_controller_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/shield.cpp`, `cpp/src/compass.cpp`, `cpp/src/hpa.cpp`; held equal by `docs/engine/check_records.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_shield_parity.py`, `tests/test_cpp_hpa_parity.py`.
- **Moves.** The shipped controller's record played decision by decision on the live engine's clock; a ring opens at each head with its newest value.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Speed: 1×, 4×, 16× or 60× of the engine's clock; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** A Kubernetes run played back from its own archived files, or the shipped controller replayed decision by decision from its own audit: the machines, the replicas, the response line, native beside Omni-Compass.
- **What to do with it.** Pick the run (A, B or C) and the gauge; read the paired difference in each repetition before the table's word. A run of the engine that stands carries omni-v18; an older engine's run is its own record.

L.25.2 Monitor 39: The shipped controller's trace: Omni-Compass

The same, Omni-Compass's cluster: every write, every trial, every hold.

- **Evidence and state.** Class S; replay.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_recommended`, `omni_writes_total`, `omni_verdict_state`; on a running system: `omni_recommended`; `increase(omni_writes_total[1h])`.
- **Wired.** This page's `drawCluster` → the Python `omni_controller/controller.py`, `pilot/selfpilot.py`, `fleet/harness.py`, `tools/toy_gate.py`, `docs/engine/export_controller_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/shield.cpp`, `cpp/src/compass.cpp`, `cpp/src/hpa.cpp`; held equal by `docs/engine/check_records.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_shield_parity.py`, `tests/test_cpp_hpa_parity.py`.
- **Moves.** The shipped controller's record played decision by decision on the live engine's clock; a ring opens at each head with its newest value.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Speed: 1×, 4×, 16× or 60× of the engine's clock; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** A Kubernetes run played back from its own archived files, or the shipped controller replayed decision by decision from its own audit: the machines, the replicas, the response line, native beside Omni-Compass.
- **What to do with it.** Pick the run (A, B or C) and the gauge; read the paired difference in each repetition before the table's word. A run of the engine that stands carries omni-v18; an older engine's run is its own record.

L.25.3 Monitor 40: The shipped controller's trace: the strip

The shipped controller's machines (in service, booting and parked) and the response time over the run, native beside Omni-Compass, replayed from its own audit.

- **Evidence and state.** Class S; replay.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_compass_position`, `omni_compass_force`; on a running system: `omni_compass_position`; `omni_compass_force`.
- **Wired.** This page's `drawCStrip` → the Python `omni_controller/controller.py`, `pilot/selfpilot.py`, `fleet/harness.py`, `tools/toy_gate.py`, `docs/engine/export_controller_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/shield.cpp`, `cpp/src/compass.cpp`, `cpp/src/hpa.cpp`; held equal by `docs/engine/check_records.py`,

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

`tests/test_cpp_governor_parity.py`, `tests/test_cpp_shield_parity.py`, `tests/test_cpp_hpa_parity.py`.

- **Moves.** The shipped controller's record played decision by decision on the live engine's clock; a ring opens at each head with its newest value.
- **Knobs.** Run: A, B or C (or the archived run) the monitor plays; Speed: 1×, 4×, 16× or 60× of the engine's clock; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** A Kubernetes run played back from its own archived files, or the shipped controller replayed decision by decision from its own audit: the machines, the replicas, the response line, native beside Omni-Compass.
- **What to do with it.** Pick the run (A, B or C) and the gauge; read the paired difference in each repetition before the table's word. A run of the engine that stands carries omni-v18; an older engine's run is its own record.

L.26 Hardware: the GPU card and the CPU host

The chip is the far end of every stack: there the max would ride each card's own limit, and every watt it takes is power given, shown beside the work it buys. No GPU card and no CPU package has been measured on the engine that stands; what the chip receipts will measure is listed below, no result before its record. Below: the slots for the metered GPU and CPU runs, every hardware run GitHub has started, then the models of one GPU card and one Linux host, native beside Omni-Compass.

Controls. Recorded data: GitHub's chip runs, then the chip models replayed from the repository's own run (class S); pick a setting in the table below.

The page, in its own words.

Each stack is run twice on the same load and the same seed: native first, then Omni-Compass. Left is native, right is Omni-Compass, and every table gives both columns and the difference. Each stack is its own model in the repository, run exactly as the repository runs it and recorded second by second by docs/engine/export_scenarios.py (class S, our own models). The clouds are section L.21 and Kubernetes sections L.23 to L.25, above this one; every muscle of the catalog, the seven organisms and the three-run tables are in section L.19.

Hardware runs: the slots for the metered GPU and CPU runs

The GPU runs on Lambda (class P: the card's own meter) and the CPU on its own machine (class P: the package's own energy counter, tools/run_cpu_power.py) are the receipts this engine still has to earn: whether

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

the same work is done for less power on the chip itself is what those runs will read, and nothing here reads it before they land. Their runs on the engine that stands are not hooked up yet: each place is written here as the repository holds it and fills in, played back from its raw files like every Kubernetes run, the moment its three runs land. Until then the views below are the repository's own models of one GPU card and one Linux host (class S), run native and then with Omni-Compass on the same load and seed.

The GPU card, metered: the one real run, replayed second by second (class P, the card's own meter)

The engine that stands on a real card, its own meter recording native beside Omni-Compass: an NVIDIA A100 (SXM4, 40 GB) on Lambda on 24 October (workflow run 40079645681, omni-v18's card governor at commit e3b05dc), ten paired repetitions of 600 s an arm, native (the card as shipped), Omni-Compass watching only (the switch OFF: it reads and writes nothing) and Omni-Compass governing the power limit and the clock ceiling, every sample of nvidia-smi (200 ms) and every decision of the governor's own audit (results/gpu/run-20261024T091235Z, docs/engine/export_gpu_run.py). On this card native already runs both knobs at their top (the power limit 400 W of 400 W, the clock unlocked to 1,410 MHz), so the factory tune's governor asked for exactly that in its 3,050 decisions and wrote nothing: at its limit on native. One run; B and C and the 8-card run are not yet run. The A10 run of 2 October (the card controller of commit c908054, replaced since) stays as its own record in results/gpu/run-20261002T082232Z. Its own table, re-read by the one key:

The CPU host: built and waiting for its machine (a model of a machine until then, class S)

The CPU power harness (tools/run_cpu_power.py) puts Omni-Compass on top of the Linux kernel's own frequency governor and meters the processor's package energy (RAPL). No GitHub runner exposes that counter or a writable ceiling, so its real run waits for a Linux machine that does (the register's row 79, cpu-power.yml). Until then this monitor plays the harness on its own modelled machine (--plant sim, written for its tests; results/sim/cpu_power_model, three repetitions): the mechanism moving, every decision and write of its own audit, never a measurement. The machine layer enters the whole organism as exactly 1 until the real run lands.

An 8-card node: built and awaiting its run (scripts/gpu_8card.sh)

The 8-card result is one command on a rented machine with eight NVIDIA cards (scripts/gpu_8card.sh, docs/GPU_RUN_GUIDE.md section D): every card runs the whole card test at once, its firmware alone against its firmware with Omni-Compass on top, 24 paired repetitions a test pooled across the cards. It has not run. The monitor is built for it: eight card slots, each native lane drawn from the repository's one-card model (class S: AI token generation at the card's shipped 150 W, the same model on every card until the run, never eight measurements), each Omni-Compass lane empty until the run lands. On a running node the same panel reads the NVIDIA DCGM exporter's series card by card.

Every chip run GitHub has started, newest first

Where the mechanism moves on the chip models: every setting, three runs each

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Read from the replayed record itself, second by second, in each of the three runs (seeds as below). A row with no second held off native is Omni-Compass deciding to stay native: its trial of one step read LOSS and was refused, or the knob is already at its limit on native.

Native

Omni-Compass

What Omni-Compass did, as its own audit records it

Three runs, A B C (the whole run of each)

Its monitors.

L.26.1 Monitor 41: The GPU card, metered: the one real run

The NVIDIA A100 run of 24 October on Lambda (omni-v18's card governor) replayed from the card's own meter: draw, limit, clock and temperature, requests served and the 95th percentile, native beside Omni-Compass governing (or watching only), every write of the governor marked (none in this run: both knobs at their top on native).

- **Evidence and state.** Class P; awaiting its run: its omni-v13 run on Lambda (lambda-gpu.yml, one exact commit): the replaced controller's run stands until then, shown as such.
- **Feed.** NVIDIA DCGM exporter; series `DCGM_FI_DEV_POWER_USAGE`, `DCGM_FI_DEV_POWER_MGMT_LIMIT`, `DCGM_FI_DEV_SM_CLOCK`, `DCGM_FI_DEV_GPU_TEMP`; on a running system: `DCGM_FI_DEV_POWER_USAGE`; `DCGM_FI_DEV_POWER_MGMT_LIMIT`; `DCGM_FI_DEV_SM_CLOCK`.
- **Wired.** This page's `drawGpuRun` → the Python `docs/engine/export_gpu_run.py` → the C++ none: the 2 October run of an earlier controller, replayed from the card's own meter; today's GPU rules have their twin, cpp/src/gpu_rules.cpp, for the run on Lambda; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** The card's own meter replayed at ten times the run's seconds.
- **Knobs.** Repetition: which repetition of the run is replayed; Arm: which arm stands on the right: Omni-Compass governing, or watching only; Speed: 1×, 4×, 16× or 60× of the engine's clock; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** The card's own meter, second by second: its draw, the power limit Omni-Compass wrote (dashed), its clock, the 95th percentile against the response line, its temperature; every write of the governor a red tick.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **What to do with it.** Power on a card is a resource: a fall is a cut, a rise power given; the response time is the judge. The one real run on the page is the replaced controller's record and is shown as such until its omni-v18 run lands.

L.26.2 Monitor 42: The CPU host, metered: awaiting its machine

The CPU power harness on the host: the frequency ceiling, the clock run at, the package power and the response line, native beside Omni-Compass; today its own modelled machine (class S), the real run the day a machine with its meter runs it.

- **Evidence and state.** Class S (model) until the run; awaiting its run: a Linux machine whose processor exposes its energy counter (RAPL) and a writable frequency ceiling (register row 79, cpu-power.yml).
- **Feed.** node_exporter (rapl, cpufreq collectors); Kepler; series `node_rapl_package_joules_total`, `node_cpu_scaling_frequency_hertz`, `node_cpu_scaling_frequency_max_hertz`, `kepler_node_package_joules_total`; on a running system: `rate(node_rapl_package_joules_total[1m])`; `avg(node_cpu_scaling_frequency_hertz)`.
- **Wired.** This page's `drawCpuHost` → the Python `docs/engine/export_cpu_model.py`, `tools/run_cpu_power.py` → the C++ none: the host's model until its run lands on a machine with its meter; held equal by `tests/test_run_cpu_power.py`.
- **Moves.** The host's model replayed second by second until its run lands.
- **Knobs.** Repetition: which repetition of the run is replayed; Speed: 1×, 4×, 16× or 60× of the engine's clock; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** The processor's frequency ceiling (the knob), the clock the kernel's own governor ran at under it, the package power and the busy share, native beside Omni-Compass.
- **What to do with it.** Until a machine with its energy counter runs it, the monitor plays the harness's own modelled machine: read the mechanism, never the numbers.

L.26.3 Monitor 43: An 8-card node: built and awaiting its run

Eight card slots for scripts/gpu_8card.sh: each native lane the repository's one-card model (class S), each Omni-Compass lane empty until the 8-card run lands, 24 paired repetitions a test pooled across the cards.

- **Evidence and state.** Class S (native model) until the run; awaiting its run: scripts/gpu_8card.sh on a rented machine with eight NVIDIA cards (docs/GPU_RUN_GUIDE.md, section D).

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Feed.** NVIDIA DCGM exporter, card by card; series `DCGM_FI_DEV_POWER_USAGE`, `DCGM_FI_DEV_POWER_MGMT_LIMIT`, `DCGM_FI_DEV_SM_CLOCK`; on a running system: `sum by (gpu) (DCGM_FI_DEV_POWER_USAGE)`.
- **Wired.** This page's `drawGpu8` → the Python `realms/gpu_card.py`, `omni_controller/gpu_governor.py`, `scripts/gpu_8card.sh` → the C++ `cpp/src/gpu_rules.cpp`; held equal by `docs/engine/check_records.py`, `tests/test_cpp_twins_parity.py`.
- **Moves.** The one-card model's native lanes replayed second by second; the Omni-Compass lanes wait for the 8-card run.
- **Knobs.** Speed: 1×, 4×, 16× or 60× of the engine's clock; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** The card's own meter, second by second: its draw, the power limit Omni-Compass wrote (dashed), its clock, the 95th percentile against the response line, its temperature; every write of the governor a red tick.
- **What to do with it.** Power on a card is a resource: a fall is a cut, a rise power given; the response time is the judge. The one real run on the page is the replaced controller's record and is shown as such until its omni-v18 run lands.

L.26.4 Monitor 44: The chip and the host, modelled

The repository's own models of one GPU card and one Linux host, native beside Omni-Compass, second by second (class S).

- **Evidence and state.** Class S; model.
- **Feed.** NVIDIA DCGM exporter; node_exporter; series `DCGM_FI_DEV_POWER_USAGE`, `DCGM_FI_DEV_SM_CLOCK`, `node_cpu_scaling_frequency_hertz`; on a running system: `DCGM_FI_DEV_POWER_USAGE`; `DCGM_FI_DEV_SM_CLOCK`.
- **Wired.** This page's `drawSStrip` → the Python `realms/gpu_card.py`, `omnicompass/compass_law.py`, `tools/toy_gate.py`, `omni_controller/muscles.py`, `omnicompass/conveyance.py`, `docs/engine/export_scenarios.py` → the C++ `cpp/src/conveyance.cpp`, `cpp/tools/engine_runs.cpp`; held equal by `docs/engine/check_records.py`, `tests/test_cpp_conveyance_parity.py`, `verify.py`.
- **Moves.** The chip's and the host's models replayed second by second; a ring opens at each head with its newest value.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Knobs.** Stack: the GPU card, the Linux host, Kubernetes or the cloud; Run: A, B or C (or the archived run) the monitor plays; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** The card's own meter, second by second: its draw, the power limit Omni-Compass wrote (dashed), its clock, the 95th percentile against the response line, its temperature; every write of the governor a red tick.
- **What to do with it.** Power on a card is a resource: a fall is a cut, a rise power given; the response time is the judge. The one real run on the page is the replaced controller's record and is shown as such until its omni-v18 run lands.

L.27 Part 5 of the page: Control architecture: the brain

L.28 One control cycle, traced step by step

One control cycle traced end to end at reduced speed: the sensed inputs, the brain's decision, and the actuator (muscle) it wrote. Evidence class S: our own models, shown beside the real runs and never presented as proof.

Controls. Live: the cycle and the controls below share the console's state.

The page, in its own words.

One decision, in the order the code runs it

Controls

The max: every muscle to its own limit, never below native; the capacity it holds is power given. Tune-down: never more than native, and a step back only with the organ’s grant and the release gate. In this model native already sits near its band, so the tune-down finds little to hand back; the scoreboard (section L.29) reads its runs A, B and C live when the dial is on the tune-down. The spread of positions can widen a little, because the calm muscles it hands back move toward their line while the busy ones stay.

Each stress lasts 40 decisions from the moment you press it. Both arms meet the same demand.

Every muscle has its own knobs: scale it down or up by one unit (its smallest setting), to its floor or to its top. The hand holds the lever on Omni-Compass's side for 20 decisions, never past the muscle's own limits, then gives the muscle back to the engine; watch the band, the dots and the immune system answer. The live model only (class S); the factory button clears every hand.

Its monitors.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.28.1 Monitor 45: One control cycle, traced

The compass band with its cushions, the two forces and one decision, step by step.

- **Evidence and state.** Class S; live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_compass_position`, `omni_compass_force`; on a running system: `omni_compass_position`; `omni_compass_force`.
- **Wired.** This page's `drawBand` → the Python `omnicompass/compass_law.py` → the C++ `cpp/tools/engine_runs.cpp`; held equal by `docs/engine/check_live_engine.py`, `verify.py`.
- **Moves.** One control cycle traced step by step on the followed muscle, every decision.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The brain's six state variables integrated by the fourth-order Runge–Kutta step every decision, the compass band with its cushions and its two forces, the organs' grants, native's own controller beside each grant.
- **What to do with it.** The brain never forces: it reacts to what the body shows. A grant to expand is not a write; a write happens only where the muscle's own trial allows it.

L.29 Phase plane and scoreboard

The phase-plane state of every muscle (its position and velocity in its band) for both arms at the same instant, with the running scoreboard. Evidence class S: our own models, shown beside the real runs and never presented as proof.

Controls. Live: every plane, strip and well responds to the console.

The page, in its own words.

How to read the plane. It is a phase portrait, the picture control engineers use for a system's state. Across is where each muscle sits in its band: p is 0 when calm, 0.5 at the center and 1 at its line. Up and down is how

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

fast it moves there (v, per decision). A muscle at rest sits on the middle line. One climbing toward its line moves up and right, and past the right edge it is past its line. Native is on the left and Omni-Compass on the right: the same muscles at the same instant, one dot each. In the realms harness each muscle answers to its own rule, so no single field is drawn. In the stress-test model the shading on the right is the force the compass law would apply there: the add force gives capacity and the hand-back force returns it. Past the 0.95 wall the law fails up at once. Under each plane, the same instant in words.

Native

Omni-Compass

Live stat panels: native beside Omni-Compass, now and over the last 120 decisions

Each panel is one gauge of the live organism, read every decision on both sides, as an operations dashboard shows it. It gives native's value now and Omni-Compass's, the last 120 decisions of both (native solid orange, Omni-Compass blue), and the running paired reading in the tables' words. With the master switch OFF the decisions are shaded red and Omni-Compass's side follows native: its value equals native's and its line is drawn in native's colour, dashed on top of native's, so both stay in view.

Native against Omni-Compass

How each row is read: the paired change, native against Omni-Compass at the same decision, averaged over blocks of ten decisions so neighbouring decisions do not count twice, with its 95% interval (Student’s t over the blocks). This run: an interval that includes zero reads EVEN; clear of zero, the word follows the gauge’s aim (work: a rise is GAIN; misses, failed work, waiting: a fall is GAIN; energy or capacity held: a rise is power given, a fall a cut). Three runs (tools/readings.py): GAIN or LOSS only when all three runs point the same way with every interval clear of zero; EVEN when an interval includes zero; “the runs disagree” when clear runs point different ways. The spread of positions and the settings are shown, never judged: no rule of the engine aims at them. Run and scored by The Omni-Compass LLC's own code. No outside party has reviewed or approved these results.

Its monitors.

L.29.1 Monitor 46: Phase plane: native

Native's muscles in position and velocity.

- **Evidence and state.** Class S; live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_compass_position`.
- **Wired.** This page's `drawPhase` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

`docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.

- **Moves.** Every decision: each muscle's point moves in position and velocity.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The brain's six state variables integrated by the fourth-order Runge–Kutta step every decision, the compass band with its cushions and its two forces, the organs' grants, native's own controller beside each grant.
- **What to do with it.** The brain never forces: it reacts to what the body shows. A grant to expand is not a write; a write happens only where the muscle's own trial allows it.

L.29.2 Monitor 47: Phase plane: Omni-Compass

Omni-Compass's muscles in position and velocity, the band's walls drawn.

- **Evidence and state.** Class S; live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_compass_position`.
- **Wired.** This page's `drawPhase` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.
- **Moves.** Every decision: each muscle's point moves in position and velocity.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

(Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.

- **How to read it.** The brain's six state variables integrated by the fourth-order Runge–Kutta step every decision, the compass band with its cushions and its two forces, the organs' grants, native's own controller beside each grant.
- **What to do with it.** The brain never forces: it reacts to what the body shows. A grant to expand is not a write; a write happens only where the muscle's own trial allows it.

L.29.3 Monitor 48: The scoreboard strip

The body's capacity in service and its demand (in the harness, its electrical power), the muscles past their line and the spread of positions over the day, native beside Omni-Compass.

- **Evidence and state.** Class S; live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_compass_decisions_total`, `omni_writes_total`; on a running system: `increase(omni_compass_decisions_total{zone="wall"}[1h])`; `increase(omni_writes_total[1h])`.
- **Wired.** This page's `drawStrip` → the Python `omnicompass/adapter.py`, `omnicompass/core.py`, `omnicompass/nervous_system.py`, `omnicompass/compass_law.py`, `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_twins_parity.py`, `docs/engine/check_records.py`.
- **Moves.** Every decision of the live engine (900 ms at 1×): the line takes a point, a ring opens at its head and its newest value is printed beside it.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.

- **How to read it.** The brain's six state variables integrated by the fourth-order Runge–Kutta step every decision, the compass band with its cushions and its two forces, the organs' grants, native's own controller beside each grant.
- **What to do with it.** The brain never forces: it reacts to what the body shows. A grant to expand is not a write; a write happens only where the muscle's own trial allows it.

L.30 The brain's internal state

The brain's six state variables rendered on their potential-energy landscapes: a state resting at a minimum is stable; a state driven toward a maximum is under load. Evidence class S: our own models, shown beside the real runs and never presented as proof.

Controls. Live: every plane, strip and well responds to the console.

The page, in its own words.

The same state the cycle panel prints, drawn as the physics it is. Each ball is a live value of the engine's brain, integrated by RK4 every decision. In the stress-test model its push and target feed the body's levers. In the harness views the harness arm (realms/compass_arm_v5.py) acts muscle by muscle with no brain, so the brain drawn here is the page's own, fed the harness's readings. With each muscle alone there is no body, and its power and thermal readings are held at 0.3. Native has none of this: no state, no memory of need, no stress, no tide; each controller sees only its own reading, one to three decisions late.

U on the double well · eq. (2)

$V(U) = -\mu(U^2/2 - U^4/4) + (\dot{E}/E_{max})\cdot U$. A rising E tilts the well toward the basin of collapse.

S in its potential Φ · eqs. (5)–(6)

$\Phi(S) = \alpha_s S^2/2 + \beta_s S^3/4 - \delta S$. S rolls to S*; the senses pull it back each decision.

The bath B · eq. (7)

$\dot{B} = \gamma[c]\,\delta\,S - (\omega[B]/Q[B])\,\dot{B} - \omega[B]^2\,B$. The slow tide of physical load.

Native, the same decisions: what its own controllers read and do

Native has no brain to draw: each of its controllers reads one reading, its own muscle's, and moves. Drawn live from the same decisions as the wells above: the mean position its muscles' readings put them at (0 calm, 1 at the line), the share of its muscles past their line, and how many of its own controllers moved their setting this decision. Class S, our own models.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

The nerves: four scalars multiply into calm

Native has no nerves: nothing grants or refuses a controller, and a blind sense or a security hold changes nothing it does.

calm = κ·h·(1 − (σ − 1)⁺)·(1 − min(ν, 1)). An organ may hand capacity back only when calm ≥ its θ, the line is clean and every sense is live; expanding stays allowed except under a security hold. Under the max, lifting off toward native never needs this grant; going below native does.

Its monitors.

L.30.1 Monitor 49: The brain's state: the well

The brain's double-well potential and where its state sits.

- **Evidence and state.** Class S; live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_verdict_state`.
- **Wired.** This page's `drawBrain, drawWell` → the Python `omnicompass/core.py`, `omnicompass/adapter.py` → the C++ `cpp/src/core.cpp`, `cpp/src/governor.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`.
- **Moves.** Every decision the ball rolls to the brain's state and a ring opens where it lands.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The brain's six state variables integrated by the fourth-order Runge–Kutta step every decision, the compass band with its cushions and its two forces, the organs' grants, native's own controller beside each grant.
- **What to do with it.** The brain never forces: it reacts to what the body shows. A grant to expand is not a write; a write happens only where the muscle's own trial allows it.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.30.2 Monitor 50: The brain's state: stress S in its potential

Stress S on its cubic potential $\Phi(S) = \alpha_s S^2/2 + \beta_s S^3/4 - \delta S$, rolling toward S*; the senses pull it back each decision (eqs. (5)–(6)).

- **Evidence and state.** Class S; live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_compass_position`, `omni_compass_force`.
- **Wired.** This page's `drawBrain, drawWell` → the Python `omnicompass/core.py`, `omnicompass/adapter.py` → the C++ `cpp/src/core.cpp`, `cpp/src/governor.cpp`; held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`.
- **Moves.** Every decision the ball rolls to the brain's state and a ring opens where it lands.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The brain's six state variables integrated by the fourth-order Runge–Kutta step every decision, the compass band with its cushions and its two forces, the organs' grants, native's own controller beside each grant.
- **What to do with it.** The brain never forces: it reacts to what the body shows. A grant to expand is not a write; a write happens only where the muscle's own trial allows it.

L.30.3 Monitor 51: The brain's state: the bath B

The bath oscillator B, the slow tide of physical load, over the last 120 decisions (eq. (7)), its spring at the latest B.

- **Evidence and state.** Class S; live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_recommended`.
- **Wired.** This page's `drawBrain` → the Python `omnicompass/core.py`, `omnicompass/adapter.py` → the C++ `cpp/src/core.cpp`, `cpp/src/governor.cpp`;

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

held equal by `docs/engine/check_live_engine.py`, `tests/test_cpp_governor_parity.py`.

- **Moves.** Every decision the bath's line takes a point and a ring opens at its head.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The brain's six state variables integrated by the fourth-order Runge–Kutta step every decision, the compass band with its cushions and its two forces, the organs' grants, native's own controller beside each grant.
- **What to do with it.** The brain never forces: it reacts to what the body shows. A grant to expand is not a write; a write happens only where the muscle's own trial allows it.

L.30.4 Monitor 52: Native's own controller beside the brain

What native's controller would do at the same decision, beside the brain's grant.

- **Evidence and state.** Class S; live.
- **Feed.** kube-state-metrics; series `kube_horizontalpodautoscaler_status_desired_replicas`.
- **Wired.** This page's `drawNat6c` → the Python `realms/harness.py`, `docs/engine/export_harness_trace.py` → the C++ none: native's own controllers, as the harness's record or the page's own model holds them; held equal by `docs/engine/check_records.py`.
- **Moves.** Every decision of the live engine.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.

- **How to read it.** The brain's six state variables integrated by the fourth-order Runge–Kutta step every decision, the compass band with its cushions and its two forces, the organs' grants, native's own controller beside each grant.
- **What to do with it.** The brain never forces: it reacts to what the body shows. A grant to expand is not a write; a write happens only where the muscle's own trial allows it.

L.31 The verdict: change acceptance testing

The change-acceptance test. Each step is trialled against native and kept unless the measurement reads LOSS or its estimated cost exceeds the 2% allowance. An EVEN result (no difference resolvable from the noise) is also accepted, so on high-variance workloads a step with a small true cost can pass; the lab below measures that false-acceptance rate.

The page, in its own words.

Before a knob moves one step past native, the step runs as a trial: costs at native first, then at the step. The engine that stands reads the change exactly as a report reads a row, on the log of each cost, with its 95% interval. Set what the step truly costs and watch the rule decide. It opens wired as the shipped Kubernetes controller is wired, on the noise the real runs measured.

This trial

Over many trials at this cost

Native: its knob never moves past its own setting, so there is no trial and nothing to judge; every step Omni-Compass takes past native has to pass this test first. The medians alone allow a step when the trial's median is within the allowance of the reference's. The engine's rule (omni-v12's, unchanged) also refuses any step whose interval sits wholly above zero. It measures on while the interval is wider than the allowance, up to three times the pieces measured each side. It keeps a step only if both estimates are inside the allowance. Ported from omnicompass/verdict.py; the costs are modelled (class S).

How each muscle wires it. The Kubernetes controller measures 200 requests each side against a 2% allowance (omni_controller/controller.py --verdict-samples 200 --allow 0.02), the cost being each request's response time. The noise is measured at every build on each request of the newest tables' own runs. The σ 0.05 and 0.25 this page carried before 19 October did not come from these files and are withdrawn. The GPU card measures 30 requests (gpu_compass.py --verdict-samples 30); in its model the card's own time per request carries no noise. The toy gate measures 60 (tools/toy_gate.py, σ 0.25). What the rule does there is computed live in this page as you read: trials at each cost with this lab's own rule, 200 requests a side to start (the trial side measured

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

on to 600 while its interval is wider than the allowance), a 2% allowance and the measured σ (modelled, class S). With noise this wide, 200 requests a side do not refuse a small LOSS on their own; with no noise any LOSS it can read is refused, even 0.1%. A larger sample would refuse more, and any change to the rule or its sample is the next engine version, landed through the toy gate and told to the founder (his order of 19 October). Above the verdict the max never goes below native at all, so in the default it never runs (section L.25: no trial on top of the HPA).

Its monitors.

L.31.1 Monitor 53: The verdict: one trial

A give-back trial judged against native: its reference, its step, its interval and the word.

- **Evidence and state.** Class S; live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_verdict_state`; on a running system: `omni_verdict_state`.
- **Wired.** This page's `drawVerdict, vTick, judge` → the Python `omnicompass/verdict.py`, `omnicompass/student_t.py` → the C++ `cpp/tools/engine_runs.cpp`; held equal by `docs/engine/check_live_engine.py`, `verify.py`.
- **Moves.** A cost measured every 28 ms until the verdict reads; a new trial starts 2.6 s after.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** A give-back trial judged against native: its reference, its step, its interval, the word; then the keep ratio at every true cost.
- **What to do with it.** A step is kept only when its interval stays inside the allowance; a refused step leaves the muscle where native had it.

L.31.2 Monitor 54: The verdict: every true cost

The keep ratio of the verdict at each true cost, from trials run in this page's idle time.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Evidence and state.** Class S; live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_verdict_state`.
- **Wired.** This page's `drawVerdict2, runTrialSync` → the Python `omnicompass/verdict.py`, `omnicompass/student_t.py` → the C++ `cpp/tools/engine_runs.cpp`; held equal by `docs/engine/check_live_engine.py`, `verify.py`.
- **Moves.** Trials run in the browser's idle time; the shares fill as they run.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native).
- **How to read it.** A give-back trial judged against native: its reference, its step, its interval, the word; then the keep ratio at every true cost.
- **What to do with it.** A step is kept only when its interval stays inside the allowance; a refused step leaves the muscle where native had it.

L.32 Telemetry analytics and Omni-Compass in its own words

The same telemetry analysed four ways: a three-dimensional tensor view, a difference matrix, a principal-component decomposition and Omni-Compass's own account of its run; the service level and error budget in SRE terms; and Omni-Compass answering the viewer's questions about itself from the page's own records.

Controls. Recorded data: the engine's harness record (class S), played on the live engine's clock, and the official run chosen in section L.23 (class L). Console controls never modify either.

The page, in its own words.

The engine's own record is a tensor: two arms × every decision × sixty muscles, each entry a muscle's compass position (0 calm, 0.5 the center of its band, 1 its line), recorded from realms/harness.py by docs/engine/export_harness_trace.py (class S, our own models). It fills in below decision by decision as section L.13 plays, and the same numbers are read three more ways: the difference between the arms, the body's principal motions, and Omni-Compass's own account of what it is doing. Then the official runs (class L) are read as an SRE reads a service: the service level, the error budget burned and every gauge against native; and Omni-Compass answers questions about itself, reading the page's own records through tools and turning the dashboard to a run. No word on this panel is drawn from a picture: every GAIN, EVEN, LOSS and power given is a run's own reading.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Omni-Compass, in its own words

Omni-Compass speaks for itself here: every line is read from its own records at the moment on screen (the official run playing in section L.23, its governor's own audit, and the engine's harness on the console's clock), and says what it is doing, beside what native does. Speak aloud reads it out on the viewer's own browser voice as the run plays, and reads its answers below too.

The telemetry tensor, in three dimensions

The difference matrix: Omni-Compass against native

The body's principal motions (the tensor's eigen-decomposition)

The service level and the error budget, this repetition

Every gauge of this repetition against native

Ask Omni-Compass: it answers for itself, from its own records on this page

Connecting…

Omni-Compass's answers are drawn from this page's records and are not reviewed by any outside party. © 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only. Any commercial use, commercialization, monetization, production use, redistribution or hosted service of any part of Omni-Compass requires a signed, paid Omni-Compass Enterprise License from The Omni-Compass LLC. Every copy, export, report and printout carries this notice with LICENSE, NOTICE and DISCLOSURES.md. All patents, copyrights and trademarks filed in the USA. www.omni-compass.com

Its monitors.

L.32.1 Monitor 55: Telemetry tensor: the cube

The engine's harness record as a tensor (decisions × sixty muscles × two arms), native and Omni-Compass as two slabs, filling in on the live engine's clock.

- **Evidence and state.** Class S (the harness's record, realms/harness.py); replay.
- **Feed.** kube-state-metrics; the service's own metrics.
- **Wired.** This page's `drawCube` → the Python `realms/harness.py`, `realms/compass_arm_v5.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_records.py`.
- **Moves.** Fills in decision by decision on the live engine's clock, and turns.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles

(Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.

- **How to read it.** The organism's telemetry as a tensor (muscle by gauge by time), its difference between the arms, its principal modes, the service level against its objective and the error budget burned, native beside Omni-Compass.
- **What to do with it.** The service level and the budget are what an on-call engineer is paged on: watch the burn rate on both arms under the same knobs.

L.32.2 Monitor 56: Telemetry tensor: the difference

The difference of the two sides' tensors, cell by cell.

- **Evidence and state.** Class S (the harness's record, realms/harness.py); replay.
- **Feed.** the build (the repository's tables, no live feed: a recording rule would compose the layers' ratios).
- **Wired.** This page's `drawDelta` → the Python `realms/harness.py`, `realms/compass_arm_v5.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_records.py`.
- **Moves.** One column a decision on the live engine's clock.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The organism's telemetry as a tensor (muscle by gauge by time), its difference between the arms, its principal modes, the service level against its objective and the error budget burned, native beside Omni-Compass.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **What to do with it.** The service level and the budget are what an on-call engineer is paged on: watch the burn rate on both arms under the same knobs.

L.32.3 Monitor 57: Telemetry tensor: the modes

The principal modes of the telemetry (its matrix decomposed).

- **Evidence and state.** Class S (the harness's record, realms/harness.py); replay.
- **Feed.** the build (the repository's tables, no live feed: a recording rule would compose the layers' ratios).
- **Wired.** This page's `drawModes, tEig` → the Python `realms/harness.py`, `realms/compass_arm_v5.py`, `docs/engine/export_harness_trace.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `docs/engine/check_records.py`.
- **Moves.** Every decision: the line across each bar is that decision's own motion in the mode; the first mode's line takes a point, a ring at its head.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The organism's telemetry as a tensor (muscle by gauge by time), its difference between the arms, its principal modes, the service level against its objective and the error budget burned, native beside Omni-Compass.
- **What to do with it.** The service level and the budget are what an on-call engineer is paged on: watch the burn rate on both arms under the same knobs.

L.32.4 Monitor 58: Service level: the objective

The share of each half minute's requests answered inside the 500 ms line, native beside Omni-Compass, through the official run chosen in section L.23.

- **Evidence and state.** Class L (the official run's request log, SHA-256-checked); replay.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Feed.** SLO recording rules (sloth, pyrra) over the service's histogram; series `slo:sli_error:ratio_rate5m`; on a running system: `1 - slo:sli_error:ratio_rate5m`.
- **Wired.** This page's `drawSankey` → the Python `docs/engine/export_runs.py`, `tools/live_reps.py`, `scripts/raw_archive.sh` → the C++ none: the live software's own measurements, played back from their SHA-256-checked files; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** Half minute by half minute through the official run; its newest value printed at the head.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The organism's telemetry as a tensor (muscle by gauge by time), its difference between the arms, its principal modes, the service level against its objective and the error budget burned, native beside Omni-Compass.
- **What to do with it.** The service level and the budget are what an on-call engineer is paged on: watch the burn rate on both arms under the same knobs.

L.32.5 Monitor 59: Service level: the error budget burn

The requests over the 500 ms line counted up since the repetition began, native beside Omni-Compass: each side's error budget burned.

- **Evidence and state.** Class L (the official run's request log, SHA-256-checked); replay.
- **Feed.** SLO recording rules (sloth, pyrra); series `slo:error_budget:remaining`; on a running system: `slo:error_budget:remaining`.
- **Wired.** This page's `drawSankey` → the Python `docs/engine/export_runs.py`, `tools/live_reps.py`, `scripts/raw_archive.sh` → the C++ none: the live software's own measurements, played back from their SHA-256-checked files; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** Half minute by half minute through the official run; its newest value printed at the head.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.
- **How to read it.** The organism's telemetry as a tensor (muscle by gauge by time), its difference between the arms, its principal modes, the service level against its objective and the error budget burned, native beside Omni-Compass.
- **What to do with it.** The service level and the budget are what an on-call engineer is paged on: watch the burn rate on both arms under the same knobs.

L.32.6 Monitor 60: Telemetry radar

Every gauge of the repetition replaying in section L.23 against native's 0 line: GAIN to the right in green, LOSS to the left in red, its side the run's own reading.

- **Evidence and state.** Class L (the official run's own gauges); replay.
- **Feed.** the build (the repository's tables, no live feed: a recording rule would compose the layers' ratios).
- **Wired.** This page's `drawRadar` → the Python `docs/engine/export_runs.py`, `tools/live_reps.py`, `scripts/raw_archive.sh` → the C++ none: the live software's own measurements, played back from their SHA-256-checked files; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** Each gauge of the repetition replaying in section L.23.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.; The dial: the max (every muscle to its own limit) or the tune-down (never more than native); Demand: ×0.25 to ×2 of the day's own demand, both arms alike; Noise: σ of the demand's noise, one draw a muscle a decision, both arms alike; Sense delay: decisions added between what a muscle does and what its controller reads, both arms alike; Faults: a surge, half the machines lost, a sense blind, a security hold, on the chosen body

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

part; Speed: 1×, 4×, 16× or 60× of the engine's clock; One decision: step the engine one decision while paused.

- **How to read it.** The organism's telemetry as a tensor (muscle by gauge by time), its difference between the arms, its principal modes, the service level against its objective and the error budget burned, native beside Omni-Compass.
- **What to do with it.** The service level and the budget are what an on-call engineer is paged on: watch the burn rate on both arms under the same knobs.

L.33 Failure modes, controls and residual risk

The failure-mode register: every known way Omni-Compass can fall short, the control that mitigates it, that control's coverage, and the residual risk where it does not reach. Every failure mode the live engine can be put through has a fault-injection control; trigger it and observe both arms on the console. Below: the resource costs the three-run tables report but do not judge.

Controls. Live: every way below that the live engine can be put through has its own button, and the response plays on the console (section L.14), native beside Omni-Compass.

The page, in its own words.

Failure-mode register: control, coverage and residual risk

Reported, unjudged metrics: the resource cost of the work

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

L.34 Part 7 of the page: The proof: the Python's runs, the C++ twin and the mathematics

L.35 The Python's runs, in this page: the jump generator's runs recomputed here, the 500 scenarios replayed

The Python's runs, the C++ harness's and this page's, run by run: the jump generator's set GitHub ran in the Python (its run linked), the same draws run through the C++ harness on the engine's C++ twins, and the same set recomputed here by this page's own port of the engine as the page opens; every receipt compared three ways, one SHA-256 digest each, and the digest of the draws themselves; and the Python's 500 scenarios a seed replayed from its own record with every trace hash.

Controls. Live: the runs start on their own when the page opens; the buttons run them again, run a new set from any base, print them and save the receipts.

The page, in its own words.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

The Python's runs, in this page: the engine's seeded runs recomputed here, and the 500 scenarios replayed

How the three prove each other. tools/engine_runs.py runs N runs from a base seed: run k's seed is base + k·0x9E3779B9 mod 2^{32} (the jump generator), its stream mulberry32 (this page's own generator, written in the Python bit for bit), through the engine that stands: 288 decisions of the brain's state equations integrated by the fourth-order Runge–Kutta step, 80 steps of the compass law and one give-back trial judged by the verdict. Each run's receipt is its final state, its pushes and grants, the law's mean and last force and the trial's answer; the digest is the SHA-256 of every receipt at six decimals. The Python writes every draw of every run, the injection, and the C++ harness (cpp/tools/engine_runs.cpp) reads it as its input, puts the mechanism on through the engine's C++ twins and writes every receipt: its digest must be the Python's. This page runs the same N with its own port of the engine (proven equal to the Python and the C++ to 1e-12 on every build by docs/engine/check_live_engine.py) as it opens and compares every receipt and the digest. GitHub does all three on every set it runs (.github/workflows/engine-runs.yml) and on every push (verify.py); run the Python again with another base and it writes another set, and the three digests must be one.

Its monitors.

L.35.1 Monitor 61: The Python's runs, reproduced here

The engine's seeded runs: the Python's receipts (results/engine_runs) beside the same runs computed by this page's own engine, run by run, with one digest each.

- **Evidence and state.** Class S (the engine itself); live.
- **Feed.** tools/engine_runs.py (the Python) and this page.
- **Wired.** This page's `drawProof, engineRuns, proofRecheck` → the Python `tools/engine_runs.py` → the C++ `cpp/tools/engine_runs.cpp`, `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/nervous_system.cpp`; held equal by `verify.py`, `tests/test_engine_runs.py`, `.github/workflows/engine-runs.yml`.
- **Moves.** The page recomputes one run of the Python's set from its own seed about twice a second, round after round, and holds its receipt against the Python's.
- **Knobs.** Runs: how many of the Python's runs this page computes again; Print: the receipts of the runs, printable, with the digests and the notice.
- **How to read it.** The Python's seeded runs beside this page's: one cell a run (green agrees to 1e-9, red differs, blue a new set), the two digests under them; and the Python's 500 scenarios a seed replayed with every trace hash.
- **What to do with it.** Press the button to run the Python's set here; run a new base to make a new set and run the printed command in the Python to compare digests. Print or download the receipts for the file.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.35.2 Monitor 62: The Python's 500 scenarios, replayed

benchmarks/stack_benchmark.py's 500 scenarios a seed base (the two held-out seeds), each through every arm, replayed from its record scenario by scenario with every trace hash and the file's SHA-256; verify.py replays them on every push.

- **Evidence and state.** Class S; replay.
- **Feed.** benchmarks/stack_benchmark.py (results/heldout_seed_*/RUNS.csv).
- **Wired.** This page's `drawHeld` → the Python `benchmarks/stack_benchmark.py`, `omnicompass/adapter.py`, `omnicompass/shield.py`, `omnicompass/stack_sim.py`, `docs/engine/export_heldout.py` → the C++ `cpp/src/governor.cpp`, `cpp/src/core.cpp`, `cpp/src/shield.cpp`; held equal by `verify.py`, `tests/test_cpp_governor_parity.py`, `tests/test_cpp_shield_parity.py`.
- **Moves.** The 500 scenarios replayed one after another from the record, every scenario's trace hash with it.
- **Knobs.** Seed base: which held-out seed base's 500 scenarios are replayed; Arm: which arm stands on the right: Omni-Compass governing, or watching only; Gauge: which gauge of the run is shown; Speed: 1×, 4×, 16× or 60× of the engine's clock; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white); Native under Omni-Compass: On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was..
- **How to read it.** The Python's seeded runs beside this page's: one cell a run (green agrees to 1e-9, red differs, blue a new set), the two digests under them; and the Python's 500 scenarios a seed replayed with every trace hash.
- **What to do with it.** Press the button to run the Python's set here; run a new base to make a new set and run the printed command in the Python to compare digests. Print or download the receipts for the file.

L.36 The C++ twin: the Python's runs through the C++ engine

The page, in its own words.

In plain words. The engine is written twice, in Python and in C++, line for line. Every time this page is built, the Python's own runs are fed into the C++ as its input, and the C++ answer is set beside the Python's, number by number. Where they are the same to the last digit, the two are one engine. Where a part runs in Python only, the last table names it.

Every twin, on its own parity check

The Python's runs through the C++ engine, receipt by receipt

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

The Python's seeded runs (tools/engine_runs.py: the jump generator's seeds, 288 decisions of the brain, 80 steps of the compass law and one give-back trial a run) are the input: the Python writes every run's draws as the injection, the C++ harness (cpp/tools/engine_runs.cpp) reads it, puts the mechanism on through the C++ twins (the governor, the nervous system, the compass law, the verdict) and writes its own receipts and digest, the output. The proof monitor (section L.35, the Python's runs, in this page) shows the same column run by run.

The compass law of every run on this page, reading by reading

The seven organisms at the tune-down, every muscle's law

What runs in Python only, for now

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

L.37 Component specification and mathematics

The component specification: every part, its equations and the source module that implements it, in Unicode as the repository writes them.

Controls. Live: the brain's six state variables below are read from the live engine every decision, beside the equations that evolve them.

The page, in its own words.

Items 1 to 5 and 8 are the engine’s code and run in every live view (the official-run playback of 5c and 5d replays records and runs none of it). Items 6 and 7 as written (the compass law on each muscle, the plug’s lever) drive the stress-test model. In the harness views the max and the plants’ own overrides take their place. The live controller runs the compass law on the service, as section L.25 shows.

The stress-test model, written out (class S, drawn for this page)

Who drives what

What is the engine's code

The six-state engine, its constants and RK4 integrator, the assimilation, push and ρ*, the four nerve scalars and the organ thresholds, the compass law and the verdict in words are ported from omnicompass/core.py, adapter.py, nervous_system.py, compass_law.py and verdict.py at commit c8ba7775d. All are inside the omni-v18 fingerprint, unchanged since omni-v17 (omni-v18 added only Omni direct's seven files, and omni-v17 moved only the Kubernetes governor's default beat to 60 s and its cruise wait to two readings at least, neither of which the port computes); adapter.py carries omni-v16's clocks in seconds (at the page's 60 s step every value is omni-v15's) and omni-v15's clear-time gate on the power-cap request, which the port does not compute (it ports the states, the push and the headroom), and the others are omni-v12's bytes. omni-v9 added omnicompass/student_t.py, and the page carries its Student t too, computed by bisection on its own distribution and rounded to three decimals as the printed tables are. omni-v10 changed only the CityLearn

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

wire's glide, omni-v11 only the Kubernetes governor's blind-reading guard, omni-v12 only that governor's hold on a refused raise, and omni-v13 only the governor's conveyance on a shared host at its top, omni-v14 only the governor and its muscles: a muscle left native, the operator's commands without a shell, and omni-v15 the brain's power-cap request through the line's own clear time, with the card governor handing the brain its clear flag. Checked against the Python on seeded inputs (docs/engine/check_live_engine.py): 8,000 decisions of the governor (state, push, ρ*, κ, h, σ, ν, calm), 48,000 organ grants, 4,800 compass forces, 300 verdict intervals and 400 full verdict trials. A build passes only when the largest difference is under 10^{-12}, no grant and no verdict differs, and the Student t is equal on all 500 degrees of freedom checked. And against the C++ twin of the core (cpp/src/core.cpp, compiled by the check with docs/engine/cpp_core_probe.cpp): 2,000 seeded states, the derivative and the RK4 step within 10^{-12} of each other. The check prints its own measured differences in each build's report on GitHub. The page's engine, the Python and the C++ are one engine. The harness views are not ported: they are the harness’s own record, made by its code.

The two bodies

The realms harness (the default). The sixty muscles are one organism of realms/harness.py. Each is a plant of realms/plants.py: machine pools under their autoscalers, cooled zones, batteries on their lines, motion axes and process loops. They are coupled through their heat and their power, under the climb (1 2 3 2 3 4 …), for 240 decisions of 15 s. Omni-Compass is the max of realms/compass_arm_v5.py with the body’s bone, its twins and the muscles’ cards; at 80% the brain goes silent and the lease walks every setting back to native over 24 decisions. Recorded on seeds 3000, 3001 and 3002 (runs A, B and C) by docs/engine/export_harness_trace.py; the page replays the record. Each muscle alone is the same harness one muscle at a time, as run_muscle_arm runs the preregistered muscle table: under the line (work waiting at the start), the max with the muscle's own twin, and the lease after 80%. Each muscle's decisions are laid on 240 frames. A frame shows the last decision it covers, and reads over the line if any of them was. In that harness the brain’s state is computed from the body’s aggregate, as a governor reads it, and shown; the max itself acts muscle by muscle. The stress-test model. A model drawn for this page so the body can be stressed by hand (a surge, a blind sense, a security hold, the kill switch), evidence class S; like every view it runs native and Omni-Compass, side by side, on the same demand. Sixty muscles named from the 1,107-muscle catalog (twelve each from the spine and the four realms), each a capacity lever with its own response time τ and sensing delay, under an HPA-style native controller (target 0.70, 10% tolerance, five-decision scale-down window). Demand climbs 1 2 3 2 3 4, surges, eases and idles over six hours, the same for both arms. The lever rules that turn F into a write are this page's, written out above and kept inside the doctrine. Under the max: never below native, and lifting off hands back toward native. On the tune-down: never above native, and below it only with the organ's grant and the release gate.

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.38 Part 8 of the page: Reference: the monitor list, the switch's wiring, the pipeline and this page's own rendering

L.39 The monitor list: every monitor by its number, what it shows, its section and its feed

The list that goes with the wall: every monitor by its number, in the same order, with what it shows, the section it lives in, its evidence class and state, the open-source feed that would carry it live and its knobs. Read the wall, find a number, read its line here.

Controls. Recorded data: the list is the page's own registry of its monitors, read when the page opens; click a number to go to its monitor, a section to go to its section.

The page, in its own words.

Every monitor by its number: what it shows, its section, where its numbers come from, the open-source feed that would carry it live, its knobs, and what is still awaiting its run

The motion meter: every monitor in view is photographed small once a second, as you see it, and its badge says whether it moved.

Every monitor is one canvas on this page; its number is its order of appearance from the top, and the wall (section L.8) reads them left to right, then the next row. The feeds name the open-source exporters an operator's Prometheus and Grafana already run (node_exporter, kube-state-metrics, the NVIDIA DCGM exporter, Kepler, OpenCost, the governor's own tools/omni_exporter.py); the button in the control panel downloads the whole wall as a Grafana dashboard on those series (deploy/grafana/omni-compass-wall.json, written from docs/engine/monitors.json), beside the governor's own screen (deploy/grafana/omni-compass.json). A monitor the page draws from the repository's tables, or from its own clock, says so: no series carries it.

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

L.40 The master switch's wiring: the switch above the brain, the brain above the organism, every muscle under it

One switch for the whole organism, drawn as the repository wires it: the master switch holds the brain's outputs; the brain sits above the organism; every muscle hangs under it with native's own controller under every muscle, never switched. Every governor of this page is listed with its state at the switch.

Controls. Live: the switch on this monitor is the kill switch of section L.6.

The page, in its own words.

The master switch, wired at the top of the organism: switch, brain, organism, every muscle

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

One switch for the whole organism, as the repository builds it (omnicompass/master.py, tools/omni_switch.py). It sits at the top and holds the brain's outputs. With it OFF, nothing the brain computes is pushed or pulled into any muscle, and every muscle runs on native's own controllers, which never stop. On a real machine every governor exits at the switch; on this page the brain keeps reading the native body in shadow, so its monitors keep moving, and nothing it computes leaves it. No monitor is switched off: every Omni-Compass side follows native, drawn in native's colour. Every governor on this page is registered with it and obeys it at once. The live organism hands every setting it held back to native's own controller and reads each one back. Every record's Omni-Compass side, and every playback, trace, table, board and grid, reads native's own. Native's own controllers sit under every muscle and are never switched, so native's side never moves with it. Every section carries the same switch in its controls bar; pressing any one of them throws this one.

Its monitors.

L.40.1 Monitor 63: The master switch and the kill switch

The switch above the brain: ON, Omni-Compass governs every wired muscle; engaged, every setting is handed back to native's own controller at once and every Omni-Compass side on the page follows native.

- **Evidence and state.** Class S (the page's port of the master switch; the real one is omnicompass/master.py); live.
- **Feed.** tools/omni_exporter.py (the governor's own audit, Prometheus text format); series `omni_master_switch`; on a running system: `omni_master_switch`.
- **Wired.** This page's `drawMaster, masterSet` → the Python `omnicompass/master.py`, `tools/omni_switch.py`, `omnicompass/nervous_system.py` → the C++ `cpp/src/nervous_system.cpp`; held equal by `tests/test_master_switch.py`, `tests/test_cpp_twins_parity.py`.
- **Moves.** Every decision: the brain's pulse and the work flowing down to every muscle; the switch acts at once.
- **Knobs.** Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white).
- **How to read it.** The wiring from the top down: the master switch above the brain, the brain above the organism, the organism above every muscle, and native's own controllers under every muscle, never switched. The switch's state is the word on it: ON in green while Omni-Compass governs; engaged, the switch red and OFF in white.
- **What to do with it.** Press the kill switch only for security: it is instant, every setting goes back to native and is read back. Watch the governors' table beside it: every governor on the page says OFF and what it handed back.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.41 CI pipeline: GitHub Actions runs in progress and queued

Every GitHub Actions workflow run in progress or queued at build time. The hardware and cloud runs, with their terminal status, are in sections L.21 and L.26; every run on the engine that stands that terminated without a measurement is raised on the status board (section L.7).

Controls. Recorded data: GitHub's runs as read when the page was built.

The page, in its own words.

GitHub Actions, as a monitor: the runs in flight, the Azure set's repetitions, the clouds' gates, the chips

Read at the build from GitHub's own API: a workflow's running runs in solid blue, its waiting ones pale; the Azure set to the paid cap with its repetitions measured so far (the table is written when the set ends); each cloud's hourly gate with the reason its own job wrote. Live, the same lives in the open-source github-actions-exporter for Prometheus.

Workflow runs in progress and queued

The page is rebuilt by GitHub itself (.github/workflows/live-engine.yml, docs/engine/build_live_engine.py) whenever the engine, a model or a result changes, and every three hours. Every record is made again by the repository's own code on the engine that stands, checked against the Python and the C++, and committed. This table is GitHub's own list at that moment.

Its monitors.

L.41.1 Monitor 64: GitHub Actions: the runs in flight

Every workflow run in progress or queued when the page was built, the Azure set's repetitions done of its cap, and the clouds' gates.

- **Evidence and state.** Class L (GitHub's own API, read at the build); record.
- **Feed.** GitHub Actions API (read at the build); live: github-actions-exporter; series `github_workflow_run_status`, `github_job_duration_seconds`; on a running system: `sum by (workflow) (github_workflow_run_status == 1)`.
- **Wired.** This page's `drawCi` → the Python `docs/engine/build_live_engine.py` → the C++ none: GitHub's own record of its runs, read from its API at the build; held equal by `docs/engine/build_live_engine.py`.
- **Moves.** The reading cursor walks the workflows, one a decision; the age of GitHub's reading counts up every second.
- **Knobs.** Filter: which rows, words, families or organisms are shown.
- **How to read it.** GitHub's runs in flight at the build by workflow, the Azure set's repetitions measured, each cloud's gate with its reason, the chips' runs.
- **What to do with it.** A gate that holds names its fix in its own words; nothing is billed while it holds.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

L.42 Self-governed rendering: Omni-Compass inside this page

The page's own render loop is governed by the same compass law, measured on the client device, native beside Omni-Compass.

The page, in its own words.

The engine that runs this page has Omni-Compass in it. Native is the browser's own loop: every chart on screen drawn on every frame, and when the frame overruns, whole frames dropped. Omni-Compass is the same loop with the engine's own compass law governing it (omnicompass/compass_law.py, ported here and checked against the Python). Each chart is a muscle whose knob is how many frames it waits between draws, and the reading is the time between frames. Below the band's center the pedal lifts and every chart is handed back to native, drawn every frame. Toward the line it pushes: the charts farthest from where you are looking wait a frame or more, so the frame itself stays inside its line. Every step is a trial run to its full measurement and kept only when the frame shortens; a step that buys nothing is refused and every chart handed back to native (the reflex rule: where a knob cannot bring a GAIN, it stays native). The reading is the time between frames, the band two frames wide with its center one frame at 60 Hz. The two arms take turns in paired windows of three seconds on this same page, on your own machine, and are read by the three-run rule's interval (class L: this browser, live; a reading of this page, never a benchmark of record).

Native

Omni-Compass

Frame timing: the inter-frame interval against the 60 Hz budget

Paired measurement of this page, per window

Its monitors.

L.42.1 Monitor 65: Self-governed rendering

This page's own render loop governed by the compass law: the frame time against its line, native (no governor) beside Omni-Compass.

- **Evidence and state.** Class S; live.
- **Feed.** this page's own clock (no exporter: the page measures itself).
- **Wired.** This page's `drawSelf` → the Python `omnicompass/compass_law.py` → the C++ `cpp/tools/engine_runs.cpp`; held equal by `docs/engine/check_live_engine.py`.
- **Moves.** Every frame: this page's own frame time under the compass law.
- **Knobs.** Frame load: +0, +8 or +16 ms burned inside every frame of this page; Kill switch: Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white).

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **How to read it.** This page's own render loop governed by the compass law: the time between frames against its line, native (no governor) beside Omni-Compass.
- **What to do with it.** Load the page with the frame-load knob and watch the governor shed chart frames to keep every frame inside its line.

L.43 vi Disclosures, governing law and contact

The page, in its own words.

What this page is

Disclosures

Contact

Its monitors. This section draws no canvas: its views are tables and text the page builds from its records.

L.44 Every monitor

No.	Monitor	Section	Class	State
1	Golden signal: errors	1e The golden signals, the event log and the live metrics	S	live
2	Golden signal: throughput	1e The golden signals, the event log and the live metrics	S	live
3	Golden signal: latency	1e The golden signals, the event log and the live metrics	S	live
4	Golden signal: saturation	1e The golden signals, the event log and the live metrics	S	live
5	Omni direct: work each step	2a Omni direct	L	record
6	Omni direct: the 95th percentile each step	2a Omni direct	L	record
7	Omni direct: units each step	2a Omni direct	L	record
8	Omni direct: machines each step	2a Omni direct	L	record
9	The organism, live: native	2b The organism, live	S	live

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

No.	Monitor	Section	Class	State
10	The organism, live: Omni-Compass	2b The organism, live	S	live
11	The immune system	2b The organism, live	S	live
12	The body parts on the band	2b The organism, live	S	live
13	The console's response	2c Control console	S	live
14	The frame budget	2c Control console	S	live
15	The benefit board	3a The benefit board	L/S	record
16	Where the benefit lives, gauge by gauge	3a The benefit board	L/S	record
17	The market map: every three-run table a tile	3a The benefit board	L/S	record
18	The quote board: every three-run table a quote	3a The benefit board	L/S	record
19	The whole organism, composed	3b The whole organism, every way it is bought	S (of P and L)	composed
20	The seven organisms, three loads	3c Measured effect in full	S	record
21	Every muscle of the catalog	3c Measured effect in full	S	record
22	The scale-out grid	3c Measured effect in full	S/L	record
23	Azure: the bill, run by run	4a Cloud providers	L (metered by Azure)	record
24	Google Cloud: the gate and the bill	4a Cloud providers	L	awaiting its run
25	Amazon: the gate and the bill	4a Cloud providers	L	awaiting its run
26	The cloud setting, live: native's machines	4a Cloud providers	S	replay
27	The cloud setting, live: Omni-Compass's machines	4a Cloud providers	S	replay
28	The orchestrators' road	4b Orchestrators and governors	L	record
29	An orchestrator, four ways	4b Orchestrators and governors	L	record

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

No.	Monitor	Section	Class	State
30	The data pipeline, live: every stage from the GitHub Actions run to this page	4c Kubernetes	L	replay
31	The official run's heartbeat	4c Kubernetes	L	replay
32	The heartbeat sweep: every beat the governor can run at	4c Kubernetes	S	model
33	The official run: response time candles	4c Kubernetes	L	replay
34	The official run: the heat map	4c Kubernetes	L	replay
35	The official run: paired bars	4c Kubernetes	L	replay
36	The official run: the repetitions	4c Kubernetes	L	replay
37	Per-repetition run telemetry	4d Kubernetes	L	replay
38	The shipped controller's trace: native	4e Kubernetes and cloud	S	replay
39	The shipped controller's trace: Omni-Compass	4e Kubernetes and cloud	S	replay
40	The shipped controller's trace: the strip	4e Kubernetes and cloud	S	replay
41	The GPU card, metered: the one real run	4f Hardware	P	awaiting its run
42	The CPU host, metered: awaiting its machine	4f Hardware	S (model) until the run	awaiting its run
43	An 8-card node: built and awaiting its run	4f Hardware	S (native model) until the run	awaiting its run
44	The chip and the host, modelled	4f Hardware	S	model
45	One control cycle, traced	5a One control cycle, traced step by step	S	live
46	Phase plane: native	5b Phase plane and scoreboard	S	live
47	Phase plane: Omni-Compass	5b Phase plane and scoreboard	S	live

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

No.	Monitor	Section	Class	State
48	The scoreboard strip	5b Phase plane and scoreboard	S	live
49	The brain's state: the well	5c The brain's internal state	S	live
50	The brain's state: stress S in its potential	5c The brain's internal state	S	live
51	The brain's state: the bath B	5c The brain's internal state	S	live
52	Native's own controller beside the brain	5c The brain's internal state	S	live
53	The verdict: one trial	5d The verdict	S	live
54	The verdict: every true cost	5d The verdict	S	live
55	Telemetry tensor: the cube	5e Telemetry analytics and Omni-Compass in its own words	S (the harness's record, realms/harness.py)	replay
56	Telemetry tensor: the difference	5e Telemetry analytics and Omni-Compass in its own words	S (the harness's record, realms/harness.py)	replay
57	Telemetry tensor: the modes	5e Telemetry analytics and Omni-Compass in its own words	S (the harness's record, realms/harness.py)	replay
58	Service level: the objective	5e Telemetry analytics and Omni-Compass in its own words	L (the official run's request log, SHA-256-checked)	replay
59	Service level: the error budget burn	5e Telemetry analytics and Omni-Compass in its own words	L (the official run's request log, SHA-256-checked)	replay
60	Telemetry radar	5e Telemetry analytics and Omni-Compass in its own words	L (the official run's own gauges)	replay
61	The Python's runs, reproduced here	7a The Python's runs, in this page	S (the engine itself)	live
62	The Python's 500 scenarios, replayed	7a The Python's runs, in this page	S	replay

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

No.	Monitor	Section	Class	State
63	The master switch and the kill switch	8b The master switch's wiring	S (the page's port of the master switch; the real one is omnicompass/master.py)	live
64	GitHub Actions: the runs in flight	8c CI pipeline	L (GitHub's own API, read at the build)	record
65	Self-governed rendering	8d Self-governed rendering	S	live

L.45 Every knob

Knob	What it does	Where it is
Kill switch	Omni-Compass ON (green) or engaged (red): every setting handed back to native at once; every Omni-Compass side follows native (white)	the kill switch (section L.6; its wiring, section L.40)
The dial	the max (every muscle to its own limit) or the tune-down (never more than native)	the console's dial
Demand	×0.25 to ×2 of the day's own demand, both arms alike	the console's demand slider
Noise	σ of the demand's noise, one draw a muscle a decision, both arms alike	the console's noise slider
Sense delay	decisions added between what a muscle does and what its controller reads, both arms alike	the console's delay slider
Faults	a surge, half the machines lost, a sense blind, a security hold, on the chosen body part	the console's fault buttons
Speed	1×, 4×, 16× or 60× of the engine's clock	the console's time knob
One decision	step the engine one decision while paused	the console's time knob
Pause	hold the engine's clock	the console's time knob
Frame load	+0, +8 or +16 ms burned inside every frame of this page	the console's frame-load knob
Run	A, B or C (or the archived run) the monitor plays	the monitor's own buttons

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Knob	What it does	Where it is
Repetition	which repetition of the run is replayed	the monitor's own buttons
Arm	which arm stands on the right: Omni-Compass governing, or watching only	the monitor's own buttons
Stack	the GPU card, the Linux host, Kubernetes or the cloud	the monitor's own buttons
Governor	which orchestrator or governor is shown	the monitor's own table
Scenario	on-site bare metal, through the cloud, in the device, as a service	the monitor's own buttons
Reading	every measured piece carried, or the index's strict rule	the monitor's own buttons
The chip's run	the chip's one run beside the count or in it	the monitor's own buttons
Beat	the governor's full read of the state and its decision: at the bench's six stops, 10, 15, 30, 60, 90 or 120 s (the heartbeat sweep's record holds 5, 20 and 75 s too, read in its file); on a real governor its --interval (60 s at the factory since omni-v17, 15 s on omni-v16)	the monitor's own buttons
Engine	which engine's record the monitor reads: the engine that stands or the one before it	the monitor's own buttons
Against	what each reading is set against: native, or the same engine at another setting	the monitor's own buttons
Gauge	which gauge of the run is shown	the monitor's own buttons
Filter	which rows, words, families or organisms are shown	the monitor's own buttons
Body	which body the organism runs: the harness, the organism, every muscle alone	the organism's own buttons
The muscle's own switch	pick one muscle on either ring: its card, and its own switch, which hands that one muscle back to native (Omni-Compass OFF on it) or puts Omni-Compass on it again; the kill switch hands every muscle back at once. Its own knobs beside the	the organism's monitors and the muscle's card (section L.13)

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

Knob	What it does	Where it is
	switch: one unit down or up (its smallest setting), to its floor or to its top, and let go; the hand holds the lever on Omni-Compass's side for 20 decisions, never past the muscle's own limits, then gives it back to the engine (the live model, class S).	
Runs	how many of the Python's runs this page computes again	the monitor's own buttons
Print	the receipts of the runs, printable, with the digests and the notice	the monitor's own button
Seed base	which held-out seed base's 500 scenarios are replayed	the monitor's own buttons
Native under Omni-Compass	On: Omni-Compass on top of native, every native controller running underneath (the main engine's arm). Off: every native controller on the Omni-Compass side switched off, Omni-Compass alone on the muscles (Omni direct). In the live model it runs Omni direct's own rule (omni_orchestrator/brain.py); a recorded run shows its Omni direct arm where one was run (section L.12) and says where none was.	every monitor that shows Omni-Compass on top of native, and the console (section L.14)

L.46 Every LOSS row, whose it is, its cause and the knob that answers it

160 LOSS rows are Omni-Compass against its native; 171 are an orchestrator's own cost against the organism alone, with no Omni-Compass in either arm. Every one is shown as its table writes it.

- **Omni-Compass against native.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BARE.md`): response time (ms), 95th percentile, A B C −2.4% (−6.9 to +2.1) · −6.5% (−16.7 to +3.8) · −7.7% (−1.4 to −14.1). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Omni-Compass against native.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BARE.md`): response time (ms), 99th percentile, A B C −3.2% (−8.3 to +1.9) · −6.3% (−18.3 to +5.8) · −9.7% (−3.3 to −16.0). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BARE.md`): failed requests (%), A B C −12.0% (−379.2 to +355.1) · =0.0000 (±0.0000 to ±0.0000) · =0.0000 (±0.0000 to ±0.0000). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BARE.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −2.8% (−6.0 to +0.4) · −7.7% (−17.7 to +2.4) · −20.6% (−0.0 to −41.2). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BARE.md`): pod start wait, total (s), A B C −125.0% (−300.3 to +50.3) · −666.7% (−151.6 to −1181.7) · −233.3% (−723.9 to +257.2). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BARE.md`): pod start wait, mean (s), A B C −275.0% (−596.0 to +46.0) · −261.1% (−52.5 to −469.8) · −333.3% (−884.0 to +217.3). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BARE.md`): batch: queue finished (s), A B C −1.4% (−0.4 to −2.4) · −2.3% (−1.0 to −3.5) · −1.6% (−3.2 to +0.1). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BARE.md`): queue: job turnaround, submitted to done, mean (s), A B C −5.1% (−1.9 to −8.3) · −8.9% (−4.9 to −12.9) · −9.1% (−0.9 to −17.3). Cause: Job turnaround under Armada, Omni-Compass on the organism alone (V12_ARMADA_4W_BARE.md): under investigation since 21 October 2026 (`docs/LOSS_ROWS_UNDER_INVESTIGATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_TOP.md`): pod start wait, total (s), A B C

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

−400.0% (−879.7 to +79.7) · −2.3000 (−1.0361 to −3.5639) · −6.7% (−181.4 to +168.1). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.

- **Omni-Compass against native.** Batch queue (omni-v10, `results/live/V10_BATCH.md`): pod start wait, total (s), A B C −142.4% (−731.5 to +446.7) · −18.0000 (−1.9839 to −34.0161) · =0.0% (−337.2 to +337.2). Cause: The pod start wait on one shared host: where it goes, why it rose, and the rig amendment of 18 October (`docs/POD_START_WAIT.md`). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Batch queue (omni-v10, `results/live/V10_BATCH.md`): pod start wait, mean (s), A B C −27.3% (−390.6 to +336.1) · −13.1000 (−1.3938 to −24.8062) · =0.0% (−337.2 to +337.2). Cause: The pod start wait on one shared host: where it goes, why it rose, and the rig amendment of 18 October (`docs/POD_START_WAIT.md`). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Batch queue (omni-v10, `results/live/V10_BATCH.md`): batch: queue finished (s), A B C −0.5% (−1.2 to +0.1) · −0.9% (−0.2 to −1.6) · −0.8% (−0.2 to −1.4). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream (omni-v12, `results/live/V12_BINPACK.md`): response time (ms), 99th percentile, A B C −2.9% (−7.0 to +1.2) · −2.4% (−8.3 to +3.4) · −2.7% (−5.7 to +0.4). Cause: Amendment 5: the governor's own core (written before any run on it, 20 October 2026) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream (omni-v12, `results/live/V12_BINPACK.md`): time over the response line (% of samples), A B C −40.0% (−89.3 to +9.4) · −27.7% (−118.3 to +62.9) · −14.8% (−52.8 to +23.2). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream (omni-v12, `results/live/V12_BINPACK.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −75.0% (−161.4 to +11.4) · −44.4% (−212.8 to +123.9) · =0.0% (−44.4 to +44.4). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream (omni-v12, `results/live/V12_BINPACK.md`): pod start wait, total (s), A B C

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

−500.0% (−1272.6 to +272.6) · −400.0% (−979.2 to +179.2) · =0.0% (−337.2 to +337.2). Cause: Amendment 5: the governor's own core (written before any run on it, 20 October 2026) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.

- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream (omni-v12, `results/live/V12_BINPACK.md`): pod start wait, mean (s), A B C −400.0% (−1091.1 to +291.1) · −275.0% (−708.5 to +158.6) · =0.0% (−337.2 to +337.2). Cause: Amendment 5: the governor's own core (written before any run on it, 20 October 2026) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream (omni-v12, `results/live/V12_BINPACK.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C =0.0% (−337.2 to +337.2) · =0.0% (±0.0 to ±0.0) · −0.1000 (−0.3262 to +0.1262). Cause: Amendment 5: the governor's own core (written before any run on it, 20 October 2026) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream (omni-v12, `results/live/V12_BINPACK.md`): queue: job turnaround, submitted to done, mean (s), A B C −1.4% (−0.8 to −1.9) · −1.0% (−0.4 to −1.7) · −1.2% (−0.7 to −1.6). Cause: Amendment 5: the governor's own core (written before any run on it, 20 October 2026) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_BARE.md`): response time (ms), 95th percentile, A B C −4.7% (−11.2 to +1.7) · −6.7% (−15.0 to +1.7) · −5.4% (−12.4 to +1.5). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_BARE.md`): response time (ms), 99th percentile, A B C −2.3% (−10.6 to +6.1) · −3.5% (−9.6 to +2.6) · =0.3% (−11.9 to +11.3). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_BARE.md`): alert

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −0.9% (−4.7 to +2.8) · −11.6% (−25.2 to +2.1) · −3.6% (−11.8 to +4.6). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.

- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_BARE.md`): queue: job turnaround, submitted to done, mean (s), A B C −4.4% (−10.5 to +1.7) · −3.6% (−10.3 to +3.2) · −4.3% (−10.9 to +2.3). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_TOP.md`): pod start wait, total (s), A B C −80.0% (−284.6 to +124.6) · −100.0% (−494.7 to +294.7) · −0.6000 (−1.2032 to +0.0032). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_TOP.md`): pod start wait, mean (s), A B C −260.0% (−7.2 to −512.8) · −62.5% (−392.4 to +267.4) · −0.6000 (−1.2032 to +0.0032). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_TOP.md`): queue: job turnaround, submitted to done, mean (s), A B C −2.2% (−6.7 to +2.3) · −2.4% (−6.0 to +1.2) · −5.2% (−0.9 to −9.5). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Crane (Effective HPA, on Kubernetes 1.25) under the batch stream, the four ways (omni-v12, `results/live/V12_CRANE_4W_BARE.md`): pod start wait, total (s), A B C −60.3% (−15.0 to −105.6) · −28.7% (−80.0 to +22.5) · −69.0% (−30.9 to −107.1). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Crane (Effective HPA, on Kubernetes 1.25) under the batch stream, the four ways (omni-v12, `results/live/V12_CRANE_4W_TOP.md`): pod start wait, total (s), A B C −80.9% (−37.3 to −124.5) · −104.5% (−46.9 to −162.2) · −54.4% (−20.0 to −88.9). Cause: Amendment 10: what the counted runs of 20 October found (written after those runs, before the Gödel runs start again) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Omni-Compass against native.** Crane (Effective HPA, on Kubernetes 1.25) under the batch stream, the four ways (omni-v12, `results/live/V12_CRANE_4W_TOP.md`): pod start wait, mean (s), A B C −8.6% (−26.8 to +9.5) · −21.3% (−1.4 to −41.2) · −0.9% (−16.8 to +15.0). Cause: Amendment 10: what the counted runs of 20 October found (written after those runs, before the Gödel runs start again) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** CruiseKube (omni-v10, `results/live/V10_CRUISEKUBE.md`): response time (ms), mean, A B C −1.4% (−3.6 to +0.8) · −0.9% (−2.7 to +0.9) · −1.4% (−0.3 to −2.5). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** CruiseKube (omni-v10, `results/live/V10_CRUISEKUBE.md`): response time (ms), 95th percentile, A B C −1.5% (−3.9 to +0.8) · −3.0% (−7.8 to +1.7) · −0.5% (−2.2 to +1.1). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** CruiseKube (omni-v10, `results/live/V10_CRUISEKUBE.md`): response time (ms), 99th percentile, A B C −1.3% (−7.9 to +5.2) · −3.1% (−11.2 to +5.1) · −2.7% (−0.0 to −5.3). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The KAI scheduler under the batch stream (omni-v12, `results/live/V12_KAI.md`): response time (ms), 99th percentile, A B C −0.7% (−4.7 to +3.4) · −9.7% (−21.7 to +2.4) · −5.7% (−23.3 to +11.8). Cause: Amendment 5: the governor's own core (written before any run on it, 20 October 2026) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The KAI scheduler under the batch stream (omni-v12, `results/live/V12_KAI.md`): time over the response line (% of samples), A B C −8.8% (−42.4 to +24.7) · −42.3% (−93.8 to +9.2) · −6.5% (−60.1 to +47.1). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The KAI scheduler under the batch stream (omni-v12, `results/live/V12_KAI.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −28.6% (−131.3 to +74.2) · −61.1% (−143.7 to +21.5) · =0.0% (−46.2 to +46.2). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** The KAI scheduler under the batch stream (omni-v12, `results/live/V12_KAI.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C =0.0% (±0.0 to ±0.0) · =0.0% (±0.0 to ±0.0) · −20.0% (−50.2 to +10.2). Cause: Amendment 5:

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

the governor's own core (written before any run on it, 20 October 2026) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.

- **Omni-Compass against native.** The KAI scheduler under the batch stream (omni-v12, `results/live/V12_KAI.md`): queue: job turnaround, submitted to done, mean (s), A B C −1.5% (−0.4 to −2.5) · −5.3% (−13.1 to +2.4) · −2.2% (−9.9 to +5.4). Cause: Amendment 5: the governor's own core (written before any run on it, 20 October 2026) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BARE.md`): response time (ms), 95th percentile, A B C −2.3% (−9.1 to +4.4) · −6.2% (−16.5 to +4.2) · −1.3% (−11.2 to +8.6). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BARE.md`): batch: queue finished (s), A B C −0.5% (−0.1 to −0.9) · −1.0% (−0.2 to −1.8) · =0.1% (−0.9 to +1.0). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BARE.md`): queue: job turnaround, submitted to done, mean (s), A B C −3.9% (−0.6 to −7.2) · −8.2% (−2.6 to −13.8) · =0.0% (−11.1 to +11.2). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_TOP.md`): response time (ms), 95th percentile, A B C −2.8% (−14.1 to +8.6) · −3.4% (−9.1 to +2.4) · −4.4% (−16.0 to +7.1). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_TOP.md`): response time (ms), 99th percentile, A B C −3.7% (−12.0 to +4.5) · −3.4% (−10.3 to +3.5) · =0.5% (−9.2 to +10.2). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_TOP.md`): pod start wait, mean (s), A B C −433.3% (−984.6 to +117.9) · −166.7% (−369.3 to +36.0) · −25.0% (−221.8 to +171.8). The knob: the test machine, not the

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.

- **Omni-Compass against native.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_TOP.md`): batch: queue finished (s), A B C −0.8% (−0.1 to −1.6) · −1.1% (−0.3 to −1.9) · −0.6% (−1.4 to +0.3). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_TOP.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −62.5% (−146.8 to +21.8) · −15.4% (−91.2 to +60.5) · −14.3% (−46.6 to +18.0). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_TOP.md`): queue: job turnaround, submitted to done, mean (s), A B C −5.6% (−11.7 to +0.4) · −6.5% (−0.8 to −12.2) · −5.0% (−0.2 to −9.9). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BARE.md`): response time (ms), 95th percentile, A B C −12.7% (−5.9 to −19.5) · −4.6% (−12.9 to +3.6) · −4.0% (−10.0 to +2.0). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BARE.md`): response time (ms), 99th percentile, A B C −15.0% (−3.5 to −26.5) · −7.4% (−15.3 to +0.4) · −5.7% (−16.8 to +5.3). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BARE.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −14.7% (−32.0 to +2.6) · −8.8% (−20.4 to +2.7) · −4.8% (−1.2 to −8.4). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BARE.md`): pod start wait, total (s), A B C −300.0% (−672.5 to +72.5) · −1.2000 (−0.3879 to −2.0121) · −1.9000 (−3.9077 to +0.1077). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BARE.md`): pod start wait, mean (s), A B C

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

−150.0% (−399.4 to +99.4) · −0.9500 (−0.3091 to −1.5909) · −1.2500 (−0.2210 to −2.2790). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.

- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BARE.md`): batch: queue finished (s), A B C −2.7% (−1.0 to −4.5) · −1.2% (−2.6 to +0.1) · −2.0% (−0.7 to −3.3). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BARE.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −37.5% (−105.9 to +30.9) · −4.0% (−66.5 to +58.5) · −14.3% (−72.3 to +43.7). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BARE.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −20.0% (−103.1 to +63.1) · −33.3% (−83.6 to +16.9) · =0.0% (±0.0 to ±0.0). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BARE.md`): queue: job turnaround, submitted to done, mean (s), A B C −11.6% (−4.9 to −18.2) · −2.2% (−6.0 to +1.7) · −5.8% (−1.3 to −10.4). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_TOP.md`): response time (ms), mean, A B C −13.9% (−28.2 to +0.4) · −10.5% (−21.6 to +0.5) · −2.7% (−13.9 to +8.4). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_TOP.md`): response time (ms), 95th percentile, A B C −20.0% (−4.1 to −35.9) · −16.7% (−1.6 to −31.8) · −2.5% (−11.3 to +6.2). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_TOP.md`): response time (ms), 99th percentile, A B C −12.0% (−1.8 to −22.1) · −11.1% (−1.2 to −21.0) · −4.0% (−12.2 to +4.2). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_TOP.md`): time over the response line (% of samples), A B C −4.9% (−10.0 to +0.1) · −5.4% (−1.7 to −9.1) · −8.3% (−24.3 to +7.7). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_TOP.md`): failed requests (%), A B C −93.2% (−189.8 to +3.5) · −177.2% (−413.2 to +58.9) · −187.3% (−444.8 to +70.3). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_TOP.md`): pod start wait, total (s), A B C −250.0% (−712.5 to +212.5) · −72.7% (−291.2 to +145.8) · −100.0% (−364.5 to +164.5). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_TOP.md`): pod start wait, mean (s), A B C −32.1% (−211.2 to +147.0) · −59.0% (−238.9 to +121.0) · −44.1% (−219.6 to +131.4). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_TOP.md`): batch: queue finished (s), A B C −4.3% (−1.8 to −6.8) · −4.1% (−1.8 to −6.3) · −3.0% (−6.4 to +0.3). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_TOP.md`): queue: job turnaround, submitted to done, mean (s), A B C −15.7% (−5.9 to −25.6) · −14.2% (−6.1 to −22.2) · −9.6% (−20.8 to +1.7). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Kubernetes with KEDA's HTTP add-on on the live requests in flight (omni-v11, `results/live/V11_KEDA_REQUESTS.md`): failed requests (%), A B C −0.0120 (−0.0391 to +0.0151) · =0.0000 (±0.0000 to ±0.0000) · =0.0000 (±0.0000 to ±0.0000). Cause: 1. No tail reads LOSS (`docs/TAIL_LATENCY.md`). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** Koordinator under the batch stream (omni-v12, `results/live/V12_KOORDINATOR.md`): pod start wait, total (s), A B C −300.0% (−864.2 to +264.2) · −300.0% (−645.5 to +45.5) · −350.0% (−1004.1 to +304.1). The knob: the test machine, not the

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.

- **Omni-Compass against native.** Koordinator under the batch stream (omni-v12, `results/live/V12_KOORDINATOR.md`): pod start wait, mean (s), A B C −200.0% (−619.8 to +219.8) · −300.0% (−645.5 to +45.5) · −225.0% (−674.6 to +224.6). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_BARE.md`): response time (ms), 95th percentile, A B C −5.8% (−1.6 to −9.9) · −6.9% (−15.1 to +1.2) · −5.8% (−12.8 to +1.2). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_BARE.md`): response time (ms), 99th percentile, A B C −6.6% (−17.9 to +4.7) · −7.3% (−16.1 to +1.6) · −3.6% (−8.4 to +1.3). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_BARE.md`): queue: job turnaround, submitted to done, mean (s), A B C −5.3% (−15.3 to +4.7) · −3.9% (−7.9 to +0.1) · −7.2% (−0.2 to −14.2). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_TOP.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C =0.0000 (±0.0000 to ±0.0000) · −100.0% (−506.0 to +306.0) · =0.0% (−337.2 to +337.2). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_TOP.md`): batch: queue finished (s), A B C −1.8% (−7.2 to +3.7) · =0.0% (−0.8 to +0.8) · −1.8% (−4.8 to +1.3). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_TOP.md`): queue: job turnaround, submitted to done, mean (s), A B C −5.9% (−14.1 to +2.3) · −1.9% (−8.5 to +4.7) · −3.4% (−7.8 to +1.1). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BARE.md`): response time (ms), 95th percentile, A

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

B C −6.3% (−13.4 to +0.8) · −7.0% (−2.5 to −11.4) · −3.4% (−7.4 to +0.7). Cause: Amendment 10: what the counted runs of 20 October found (written after those runs, before the Gödel runs start again) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.

- **Omni-Compass against native.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BARE.md`): response time (ms), 99th percentile, A B C −9.8% (−1.5 to −18.0) · −4.4% (−0.1 to −8.7) · −13.0% (−4.7 to −21.2). Cause: Amendment 10: what the counted runs of 20 October found (written after those runs, before the Gödel runs start again) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BARE.md`): pod start wait, total (s), A B C −0.5556 (−1.4244 to +0.3133) · −0.5000 (−1.1952 to +0.1952) · −0.6000 (−1.3689 to +0.1689). Cause: Amendment 10: what the counted runs of 20 October found (written after those runs, before the Gödel runs start again) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BARE.md`): pod start wait, mean (s), A B C −0.5556 (−1.4244 to +0.3133) · −0.3500 (−0.7647 to +0.0647) · −0.6000 (−1.3689 to +0.1689). Cause: Amendment 10: what the counted runs of 20 October found (written after those runs, before the Gödel runs start again) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BARE.md`): batch: queue finished (s), A B C −0.8% (−0.1 to −1.5) · −0.7% (−0.2 to −1.2) · −0.6% (−0.2 to −1.1). Cause: Amendment 10: what the counted runs of 20 October found (written after those runs, before the Gödel runs start again) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BARE.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −57.1% (−168.9 to +54.6) · −120.0% (−301.0 to +61.0) · −76.9% (−219.0 to +65.1). Cause: Amendment 10: what the counted runs of 20 October found (written after those runs, before the Gödel runs start again) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Omni-Compass against native.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BARE.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −200.0% (−505.1 to +105.1) · =0.0% (−119.2 to +119.2) · −50.0% (−125.4 to +25.4). Cause: Amendment 10: what the counted runs of 20 October found (written after those runs, before the Gödel runs start again) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BARE.md`): queue: job turnaround, submitted to done, mean (s), A B C −6.8% (−14.2 to +0.6) · −5.0% (−10.2 to +0.2) · −6.1% (−1.9 to −10.4). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_TOP.md`): response time (ms), 95th percentile, A B C −3.9% (−14.7 to +6.9) · −5.6% (−15.5 to +4.2) · −0.5% (−7.0 to +5.9). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_TOP.md`): queue: job wait, submitted to its first pod running, mean (s), A B C =0.4% (−8.5 to +9.2) · −0.6% (−9.1 to +7.9) · −1.0% (−5.7 to +3.7). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BARE.md`): response time (ms), 95th percentile, A B C −3.8% (−9.8 to +2.2) · −1.6% (−8.2 to +5.0) · −4.4% (−13.8 to +5.1). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BARE.md`): pod start wait, total (s), A B C =0.0000 (±0.0000 to ±0.0000) · −0.3000 (−0.9786 to +0.3786) · =0.0000 (±0.0000 to ±0.0000). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BARE.md`): pod start wait, mean (s), A B C =0.0000 (±0.0000 to ±0.0000) · −0.3000 (−0.9786 to +0.3786) · =0.0000 (±0.0000 to ±0.0000). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Omni-Compass against native.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BARE.md`): queue: job turnaround, submitted to done, mean (s), A B C −8.2% (−0.2 to −16.1) · −3.3% (−7.8 to +1.2) · −5.3% (−12.8 to +2.3). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_TOP.md`): failed requests (%), A B C =0.0000 (±0.0000 to ±0.0000) · −0.0093 (−0.0303 to +0.0117) · =0.0000 (±0.0000 to ±0.0000). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_TOP.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −2.6% (−13.8 to +8.7) · −2.9% (−7.6 to +1.8) · −2.0% (−5.1 to +1.1). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_TOP.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −2.6% (−80.1 to +75.0) · =0.0% (−63.2 to +63.2) · =0.0% (−17.9 to +17.9). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_TOP.md`): queue: job turnaround, submitted to done, mean (s), A B C −0.9% (−7.3 to +5.4) · −4.2% (−10.6 to +2.2) · −3.5% (−9.6 to +2.7). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BARE.md`): response time (ms), 95th percentile, A B C −4.3% (−9.4 to +0.7) · −3.8% (−11.8 to +4.2) · −1.8% (−11.6 to +8.0). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BARE.md`): response time (ms), 99th percentile, A B C −5.1% (−16.3 to +6.1) · −5.1% (−13.1 to +3.0) · −3.0% (−10.7 to +4.7). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BARE.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −2.7% (−0.2 to

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

−5.2) · −2.4% (−5.2 to +0.4) · −10.9% (−22.7 to +0.9). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.

- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BARE.md`): pod start wait, total (s), A B C −112.5% (−333.3 to +108.3) · −1100.0% (−243.6 to −1956.4) · −116.7% (−303.5 to +70.2). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BARE.md`): pod start wait, mean (s), A B C −100.0% (−302.1 to +102.1) · −525.0% (−52.2 to −997.8) · −100.0% (−244.8 to +44.8). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BARE.md`): batch: queue finished (s), A B C −2.3% (−0.9 to −3.7) · −1.4% (−0.3 to −2.6) · −1.0% (−2.4 to +0.3). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BARE.md`): queue: job turnaround, submitted to done, mean (s), A B C −6.5% (−3.2 to −9.9) · −4.9% (−9.9 to +0.2) · −2.3% (−7.5 to +2.9). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_TOP.md`): response time (ms), 95th percentile, A B C −9.2% (−20.0 to +1.6) · −1.6% (−15.2 to +12.0) · −41.2% (−1.6 to −80.7). Cause: Alert minutes under Open Cluster Management, Omni-Compass on top (V12_OCM_4W_TOP.md): under investigation since 21 October 2026 (`docs/LOSS_ROWS_UNDER_INVESTIGATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_TOP.md`): response time (ms), 99th percentile, A B C −11.2% (−24.3 to +2.0) · −6.9% (−21.4 to +7.7) · −38.0% (−0.1 to −76.0). Cause: Alert minutes under Open Cluster Management, Omni-Compass on top (V12_OCM_4W_TOP.md): under investigation since 21 October 2026 (`docs/LOSS_ROWS_UNDER_INVESTIGATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_TOP.md`): failed requests (%), A B

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

C −39.5% (−125.8 to +46.7) · −123.7% (−450.7 to +203.3) · −207.5% (−675.6 to +260.7). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.

- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_TOP.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −5.7% (−1.4 to −10.0) · −6.1% (−0.8 to −11.4) · −45.5% (−5.7 to −85.2). Cause: Alert minutes under Open Cluster Management, Omni-Compass on top (V12_OCM_4W_TOP.md): under investigation since 21 October 2026 (`docs/LOSS_ROWS_UNDER_INVESTIGATION.md`). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_TOP.md`): pod start wait, total (s), A B C −866.7% (−127.9 to −1605.4) · −2.9000 (−1.1014 to −4.6986) · −5.0000 (−10.4892 to +0.4892). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_TOP.md`): pod start wait, mean (s), A B C −416.7% (−69.1 to −764.2) · −1.6167 (−0.8358 to −2.3975) · −2.4667 (−5.2106 to +0.2772). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_TOP.md`): batch: queue finished (s), A B C −5.5% (−2.2 to −8.9) · −3.0% (−1.0 to −5.0) · −2.6% (−9.5 to +4.4). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_TOP.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −210.8% (−435.5 to +13.9) · −168.7% (−386.7 to +49.3) · −358.1% (−736.6 to +20.3). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_TOP.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −304.8% (−617.8 to +8.1) · −88.9% (−210.0 to +32.2) · −1389.5% (−2898.4 to +119.4). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Omni-Compass against native.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_TOP.md`): queue: job turnaround, submitted to done, mean (s), A B C −15.6% (−2.8 to −28.4) · −6.9% (−18.7 to +5.0) · −19.6% (−8.1 to −31.0). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Robustness (omni-v11, `results/live/V11_ROBUST_LONG.md`): pod start wait, total (s), A B C −268.2% (−723.1 to +186.8) · −135.7% (−466.4 to +195.0) · −138.1% (−64.2 to −212.0). Cause: On omni-v11 (19 October): both scenarios, three runs each, on the rules above unchanged (`docs/ROBUSTNESS_PREREGISTRATION.md`). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** A public day of demand (omni-v10, `results/live/V10_TRACE_GOOGLE2011.md`): pod start wait, total (s), A B C −76.1% (−43.5 to −108.6) · −116.3% (−31.1 to −201.4) · −45.1% (−115.0 to +24.8). Cause: The pod start wait on one shared host: where it goes, why it rose, and the rig amendment of 18 October (`docs/POD_START_WAIT.md`). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** The Kubernetes scheduler as shipped under the batch stream (omni-v12, `results/live/V12_VANILLA.md`): response time (ms), 95th percentile, A B C =0.2% (−5.3 to +4.9) · −9.1% (−3.9 to −14.2) · −5.3% (−11.9 to +1.2). Cause: Amendment 5: the governor's own core (written before any run on it, 20 October 2026) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The Kubernetes scheduler as shipped under the batch stream (omni-v12, `results/live/V12_VANILLA.md`): response time (ms), 99th percentile, A B C −1.0% (−4.6 to +2.6) · −5.7% (−1.0 to −10.4) · −4.5% (−1.1 to −8.0). Cause: Amendment 5: the governor's own core (written before any run on it, 20 October 2026) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** The Kubernetes scheduler as shipped under the batch stream (omni-v12, `results/live/V12_VANILLA.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C =0.0% (−4.9 to +4.9) · −28.9% (−61.6 to +3.8) · −22.1% (−49.8 to +5.7). The knob: the muscle's floor and the trial's tolerance; a muscle that fails a request native served stays native until the gate reads no LOSS.
- **Omni-Compass against native.** The Kubernetes scheduler as shipped under the batch stream (omni-v12, `results/live/V12_VANILLA.md`): queue: job turnaround, submitted to done, mean (s), A B C −0.9% (−0.2 to −1.7) · −0.9% (−0.1 to −1.6) · −1.2% (−0.6 to −1.8). Cause: Amendment 5: the governor's

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

own core (written before any run on it, 20 October 2026) (`docs/BATCH_QUEUE_PREREGISTRATION.md`). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.

- **Omni-Compass against native.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_BARE.md`): response time (ms), 95th percentile, A B C −7.6% (−0.8 to −14.5) · −2.9% (−8.8 to +2.9) · −7.5% (−15.1 to +0.1). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_BARE.md`): response time (ms), 99th percentile, A B C −9.7% (−1.9 to −17.5) · =0.4% (−10.6 to +9.7) · −10.4% (−21.7 to +0.9). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_BARE.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C =0.0% (−159.0 to +159.0) · −25.0% (−126.5 to +76.5) · −150.0% (−391.4 to +91.4). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_BARE.md`): queue: job turnaround, submitted to done, mean (s), A B C −7.3% (−1.1 to −13.4) · −1.5% (−4.8 to +1.8) · −9.0% (−1.5 to −16.5). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_TOP.md`): response time (ms), 95th percentile, A B C =0.3% (−21.7 to +22.3) · −13.4% (−35.1 to +8.4) · −10.6% (−28.2 to +7.0). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_TOP.md`): pod start wait, total (s), A B C −100.0% (−506.0 to +306.0) · −1300.0% (−3685.5 to +1085.5) · −1.2000 (−2.7004 to +0.3004). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_TOP.md`): pod start wait, mean (s), A B C −100.0% (−506.0 to +306.0) · −600.0% (−1825.1 to +625.1) · −1.2000 (−2.7004 to +0.3004). The knob: the test machine, not

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.

- **Omni-Compass against native.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_TOP.md`): queue: job turnaround, submitted to done, mean (s), A B C −6.4% (−0.7 to −12.1) · −1.8% (−8.1 to +4.5) · −2.3% (−6.8 to +2.1). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Wandering demand (omni-v10, `results/live/V10_WANDERING.md`): pod start wait, total (s), A B C −32.8% (−89.4 to +23.9) · −4.5% (−91.1 to +82.1) · −14.7% (−57.0 to +27.6). The knob: the test machine, not the governor: the image unpacked inside the window on the one runner every kind node shares (`docs/POD_START_WAIT.md`); the rig pre-pulls the image in both arms.
- **Omni-Compass against native.** Kafka, a consumer group's operator-set size (the verdict's objective (omni-v16, `results/live/V16_KAFKA.md`): end-to-end latency, 99th percentile (ms), A B C +0.1% (-1.4 to +1.7) · -0.1% (-11.7 to +11.4) · +1.9% (-9.1 to +13.0). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** Kafka, a consumer group's operator-set size (the verdict's objective (omni-v16, `results/live/V16_KAFKA.md`): consumer lag, most messages waiting at once, A B C +2.2% (-6.7 to +11.1) · +1.2% (-3.2 to +5.6) · +0.5% (-6.5 to +7.5). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Kafka, a consumer group's operator-set size (the verdict's objective (omni-v16, `results/live/V16_KAFKA.md`): end-to-end latency, mean (ms), A B C +2.9% (-3.1 to +8.9) · +0.3% (-12.1 to +12.8) · +3.0% (-6.2 to +12.1). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** Kafka, a consumer group's operator-set size (the verdict's objective (omni-v16, `results/live/V16_KAFKA.md`): consumer lag, most messages waiting at once, A B C +2.3% (-13.1 to +17.8) · +1.2% (-5.4 to +7.7) · +2.3% (-2.0 to +6.6). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Kafka, a consumer group's operator-set size (the verdict's objective (omni-v16, `results/live/V16_KAFKA.md`): consumer lag, mean messages waiting, A B C +2.6% (-6.5 to +11.6) · +1.3% (-8.9 to +11.5) · +3.6% (-2.1 to +9.3). The knob: the compass band's upper cushion on this muscle or the give-back trial's tolerance; where no setting brings the row EVEN in the toy gate, the muscle stays native on this stack.
- **Omni-Compass against native.** Kafka, a consumer group's operator-set size (the verdict's objective (omni-v16, `results/live/V16_KAFKA_SERVICE.md`): end-to-end latency, mean (ms), A B C

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

+1.0% (-1.9 to +3.8) · +0.6% (-0.9 to +2.1) · +0.8% (-0.1 to +1.7). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.

- **Omni-Compass against native.** PostgreSQL behind PgBouncer, the untouched workloads (the verdict's objective (omni-v16, `results/live/V16_PGBENCH.md`): latency, median (ms), A B C +0.6% (-2.1 to +3.3) · +1.2% (+0.8 to +1.6) · +0.0% (-5.6 to +5.6). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** PostgreSQL behind PgBouncer, the untouched workloads (the verdict's objective (omni-v16, `results/live/V16_PGBENCH.md`): work inside the response line (transactions a second answered within the line), A B C -6.5% (-23.4 to +10.3) · -1.3% (-27.8 to +25.2) · -0.1% (-1.3 to +1.1). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** PostgreSQL behind PgBouncer, the untouched workloads (the verdict's objective (omni-v16, `results/live/V16_PGBENCH.md`): latency, 95th percentile (ms, lag included), A B C +430.3% (-716.0 to +1576.6) · +75.3% (-349.2 to +499.8) · -0.2% (-22.6 to +22.2). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** PostgreSQL behind PgBouncer, the untouched workloads (the verdict's objective (omni-v17, `results/live/V17_PGBENCH_SERVICE.md`): latency, median (ms), A B C +0.3% (-0.7 to +1.2) · +37.2% (-177.8 to +252.3) · +1776.0% (-2882.0 to +6434.0). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** PostgreSQL behind PgBouncer, the untouched workloads (the verdict's objective (omni-v17, `results/live/V17_PGBENCH_SERVICE.md`): work inside the response line (transactions a second answered within the line), A B C -0.0% (-1.8 to +1.7) · +0.0% (-0.1 to +0.2) · -3.4% (-13.1 to +6.4). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** Redis, a cache's operator-set memory ceiling (the verdict's objective (omni-v16, `results/live/V16_REDIS_SERVICE.md`): latency, 99th percentile (ms), A B C +2.2% (+1.3 to +3.1) · +0.2% (-0.2 to +0.5) · +0.1% (-0.0 to +0.2). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** Redis, a cache's memory as shipped (no ceiling) (omni-v16, `results/live/V16_REDIS_SHIPPED.md`): latency, 95th percentile (ms), A B C +1.4% (-5.8 to +8.5) · +1.7% (-3.4 to +6.7) · +1.2% (-1.0 to +3.4). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** sysbench on MySQL, a database's operator-set buffer pool (the verdict's objective (omni-v16, `results/live/V16_SYSBENCH.md`): work inside the response line (transactions a second answered within the line), A B C -5.7% (-10.5 to -0.9) · +0.0% (-1.2 to +1.3) ·

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

-0.2% (-0.6 to +0.1). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.

- **Omni-Compass against native.** sysbench on MySQL, a database's operator-set buffer pool (the verdict's objective (omni-v16, `results/live/V16_SYSBENCH.md`): latency, mean (ms), A B C +28.5% (+7.8 to +49.3) · -0.1% (-4.1 to +3.8) · +6.9% (-0.4 to +14.2). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** sysbench on MySQL, a database's buffer pool as shipped (the verdict's objective (omni-v16, `results/live/V16_SYSBENCH_SHIPPED.md`): latency, mean (ms), A B C +1.5% (-0.3 to +3.4) · +0.6% (-12.4 to +13.6) · -0.2% (-1.7 to +1.4). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v16, `results/live/V16_YCSB.md`): latency, 95th percentile (ms), A B C +3.2% (-9.0 to +15.5) · +2.6% (-10.5 to +15.7) · +5.5% (-25.8 to +36.8). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v16, `results/live/V16_YCSB.md`): latency, 99th percentile (ms), A B C +3.0% (-8.3 to +14.2) · +0.2% (-3.1 to +3.5) · +2.1% (-4.3 to +8.6). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v16, `results/live/V16_YCSB.md`): latency, mean (ms), A B C +2.1% (-2.8 to +6.9) · +0.2% (-7.8 to +8.2) · +2.1% (-3.0 to +7.2). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v16, `results/live/V16_YCSB.md`): latency, 99th percentile (ms), A B C -0.3% (-1.5 to +0.8) · +1.5% (-7.5 to +10.5) · +0.9% (-6.1 to +7.8). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v16, `results/live/V16_YCSB.md`): latency, 95th percentile (ms), A B C -0.2% (-2.5 to +2.0) · -0.4% (-3.1 to +2.4) · +8.1% (-9.2 to +25.5). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v16, `results/live/V16_YCSB.md`): latency, 99th percentile (ms), A B C -0.4% (-1.0 to +0.3) · +1.4% (-7.3 to +10.0) · +1.5% (-16.5 to +19.6). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v16, `results/live/V16_YCSB.md`): latency, mean (ms), A B C +1.1% (-0.6 to +2.8) · +3.6% (-2.4 to +9.6) · +7.0% (-4.6 to +18.5). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v16, `results/live/V16_YCSB.md`): latency, 95th percentile (ms), A B C +0.3% (-1.8 to +2.4) · -0.5% (-3.1 to +2.2) · +11.6% (-30.1 to +53.2). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v17, `results/live/V17_YCSB_SERVICE.md`): latency, 95th percentile (ms), A B C +11.4% (-26.3 to +49.1) · +2.7% (-9.7 to +15.2) · +1.3% (-1.6 to +4.2). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v17, `results/live/V17_YCSB_SERVICE.md`): latency, 99th percentile (ms), A B C +2.8% (-5.8 to +11.4) · +2.8% (-5.5 to +11.0) · +0.1% (-2.5 to +2.8). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v17, `results/live/V17_YCSB_SERVICE.md`): latency, mean (ms), A B C +2.3% (-8.7 to +13.4) · +1.6% (-4.8 to +8.0) · +0.4% (-0.0 to +0.8). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v17, `results/live/V17_YCSB_SERVICE.md`): latency, 95th percentile (ms), A B C +0.7% (-0.8 to +2.1) · +0.9% (-0.1 to +1.8) · +0.1% (-0.9 to +1.0). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v17, `results/live/V17_YCSB_SERVICE.md`): latency, mean (ms), A B C +0.7% (+0.3 to +1.1) · +1.5% (-0.5 to +3.5) · +0.7% (-0.7 to +2.1). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v17, `results/live/V17_YCSB_SERVICE.md`): latency, 95th percentile (ms), A B C +1.3% (+0.5 to +2.1) · +1.0% (-1.2 to +3.1) · +2.0% (+0.4 to +3.7). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (the verdict's objective (omni-v17, `results/live/V17_YCSB_SERVICE.md`): latency, mean (ms), A B C -0.5% (-1.1 to +0.2) · +1.0% (-2.2 to +4.2) · +2.1% (-0.1 to +4.2). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (native exactly as the vendor ships it) (omni-v16, `results/live/V16_YCSB_SHIPPED.md`): latency, 95th percentile (ms), A B C +1.2% (-1.5 to +3.9) · +3.6% (-12.3 to +19.6) · +0.9% (-7.0 to +8.7). The knob:

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.

- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (native exactly as the vendor ships it) (omni-v16, `results/live/V16_YCSB_SHIPPED.md`): latency, 99th percentile (ms), A B C +1.5% (-2.8 to +5.8) · +5.2% (-23.9 to +34.2) · +0.1% (-7.6 to +7.8). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (native exactly as the vendor ships it) (omni-v16, `results/live/V16_YCSB_SHIPPED.md`): latency, mean (ms), A B C +0.8% (-0.3 to +1.8) · +2.3% (-30.7 to +35.3) · -0.0% (-3.3 to +3.3). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (native exactly as the vendor ships it) (omni-v16, `results/live/V16_YCSB_SHIPPED.md`): latency, 95th percentile (ms), A B C +0.4% (-10.6 to +11.3) · +1.6% (-7.6 to +10.9) · +0.0% (-1.4 to +1.4). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (native exactly as the vendor ships it) (omni-v16, `results/live/V16_YCSB_SHIPPED.md`): latency, 99th percentile (ms), A B C +4.8% (-4.3 to +13.9) · +0.0% (-15.4 to +15.4) · +1.3% (-5.8 to +8.4). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **Omni-Compass against native.** YCSB on MongoDB, a database's operator-set cache size (native exactly as the vendor ships it) (omni-v16, `results/live/V16_YCSB_SHIPPED.md`): latency, mean (ms), A B C +0.9% (-1.2 to +2.9) · +2.5% (-7.0 to +12.1) · +0.2% (-4.1 to +4.5). The knob: the muscle's own card (its band, cushions and glide); a setting that reads LOSS in the toy gate is refused and the muscle stays native.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BOTH.md`): pod start wait, total (s), A B C −400.0% (−25.3 to −774.7) · −666.7% (−176.7 to −1156.6) · −433.3% (−1007.0 to +140.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BOTH.md`): pod start wait, mean (s), A B C −425.0% (−53.6 to −796.4) · −366.7% (−136.3 to −597.0) · −494.4% (−1023.8 to +34.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BOTH.md`): batch: queue finished (s), A B C −72.4%

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

(−61.8 to −82.9) · −68.6% (−58.6 to −78.6) · −86.7% (−75.6 to −97.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BOTH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −1190995.2% (−1185985.7 to −1196004.8) · −1634917.6% (−1630334.8 to −1639500.5) · −1324419.0% (−1319896.0 to −1328942.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BOTH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −221050.0% (−220287.4 to −221812.6) · −245633.3% (−245069.1 to −246197.6) · −245750.0% (−245056.6 to −246443.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BOTH.md`): queue: job turnaround, submitted to done, mean (s), A B C −528.0% (−478.0 to −578.0) · −469.9% (−426.8 to −513.0) · −904.9% (−825.1 to −984.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_BOTH.md`): queue: jobs unfinished at the window's end, A B C −24.0000 (−24.0000 to −24.0000) · −24.0000 (−24.0000 to −24.0000) · −24.0000 (−24.0000 to −24.0000). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_ORCH.md`): batch: queue finished (s), A B C −72.6% (−62.2 to −83.1) · −68.4% (−58.3 to −78.6) · −86.7% (−75.4 to −98.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_ORCH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −1193142.9% (−1189052.7 to −1197233.0) · −1632935.3% (−1629797.0 to −1636073.6) · −1323895.2% (−1320577.4 to −1327213.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_ORCH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −221366.7% (−220793.7 to −221939.6) · −245383.3% (−244977.9 to −245788.8) · −245666.7% (−245189.8 to −246143.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_ORCH.md`): queue: job turnaround, submitted to done, mean (s), A B C −529.1% (−479.5 to −578.7) · −469.3% (−425.4 to −513.1) · −904.5% (−823.7 to −985.2). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_ORCH.md`): queue: jobs unfinished at the window's end, A B C −24.0000 (−24.0000 to −24.0000) · −24.0000 (−24.0000 to −24.0000) · −24.0000 (−24.0000 to −24.0000). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_VS.md`): response time (ms), mean, A B C −365.9% (−157.4 to −574.3) · −387.2% (−211.6 to −562.8) · −271.6% (−1.7 to −541.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_VS.md`): response time (ms), 95th percentile, A B C −1362.7% (−633.9 to −2091.4) · −1439.3% (−847.3 to −2031.3) · −986.8% (−75.2 to −1898.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_VS.md`): response time (ms), 99th percentile, A B C −1691.7% (−817.5 to −2565.8) · −1837.8% (−1123.2 to −2552.5) · −1233.4% (−145.9 to −2320.8). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_VS.md`): time over the response line (% of samples), A B C −583748.7% (−317248.1 to −850249.4) · −27.7590 (−17.8729 to −37.6451) · −13.9600 (−2.2913 to −25.6287). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_VS.md`): failed requests (%), A B C −0.0076 (−0.0252 to +0.0100) · =0.0000 (±0.0000 to ±0.0000) · =0.0000 (±0.0000 to ±0.0000). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Armada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_ARMADA_4W_VS.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −12.3333 (−7.0357 to −17.6310) · −14.0000 (−10.0676 to −17.9324) · −8.2000 (−2.5094 to −13.8906). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_BOTH.md`): response time (ms), 95th percentile, A B C −10.5% (−21.8 to +0.8) · −1.0% (−12.1 to +10.2) · −7.2% (−17.7 to +3.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_BOTH.md`): response time (ms), 99th percentile, A B C −14.2% (−31.2 to +2.7) · −7.9% (−19.0 to +3.3) · −12.7% (−29.1 to +3.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **the orchestrator’s own cost.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_BOTH.md`): queue: job turnaround, submitted to done, mean (s), A B C −5.9% (−12.0 to +0.1) · −2.7% (−5.8 to +0.5) · −4.4% (−10.0 to +1.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_ORCH.md`): response time (ms), 99th percentile, A B C −13.8% (−28.2 to +0.5) · −14.7% (−32.7 to +3.2) · −9.9% (−27.3 to +7.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_VS.md`): time over the response line (% of samples), A B C −21.1% (−5.3 to −36.8) · −37.2% (−12.4 to −61.9) · −29.8% (−1.0 to −58.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_VS.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −1.9% (−6.1 to +2.4) · −28.3% (−59.6 to +3.0) · −8.9% (−22.4 to +4.7). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_VS.md`): batch: queue finished (s), A B C =0.4% (−0.7 to +1.4) · −0.6% (−1.4 to +0.2) · −0.8% (−1.7 to +0.2). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The Kubernetes scheduler with the operator's bin-packing profile under the batch stream, the four ways (omni-v12, `results/live/V12_BINPACK_4W_VS.md`): queue: job turnaround, submitted to done, mean (s), A B C −0.7% (−7.7 to +6.2) · −3.3% (−9.3 to +2.8) · −5.0% (−15.0 to +4.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Crane (Effective HPA, on Kubernetes 1.25) under the batch stream, the four ways (omni-v12, `results/live/V12_CRANE_4W_BOTH.md`): response time (ms), mean, A B C −2.2% (−4.4 to +0.1) · −2.4% (−5.1 to +0.2) · −1.7% (−4.4 to +1.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Crane (Effective HPA, on Kubernetes 1.25) under the batch stream, the four ways (omni-v12, `results/live/V12_CRANE_4W_BOTH.md`): pod start wait, total (s), A B C −80.9% (−32.7 to −129.0) · −68.8% (−12.8 to −124.7) · −71.8% (−31.7 to −112.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Crane (Effective HPA, on Kubernetes 1.25) under the batch stream, the four ways (omni-v12, `results/live/V12_CRANE_4W_ORCH.md`): response time (ms), mean, A B C −2.6% (−0.7 to −4.4) · −3.2% (−0.5 to −5.9) · −2.9% (−0.9 to −5.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **the orchestrator’s own cost.** Crane (Effective HPA, on Kubernetes 1.25) under the batch stream, the four ways (omni-v12, `results/live/V12_CRANE_4W_VS.md`): pod start wait, total (s), A B C −60.3% (−28.4 to −92.2) · −56.1% (−0.6 to −111.6) · −51.9% (−20.4 to −83.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Crane (Effective HPA, on Kubernetes 1.25) under the batch stream, the four ways (omni-v12, `results/live/V12_CRANE_4W_VS.md`): pod start wait, mean (s), A B C −1.6% (−25.0 to +21.9) · −16.8% (−44.7 to +11.2) · −7.8% (−24.3 to +8.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BOTH.md`): response time (ms), mean, A B C −0.6% (−10.0 to +8.8) · −7.1% (−17.1 to +2.9) · −6.9% (−16.0 to +2.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BOTH.md`): response time (ms), 95th percentile, A B C −41.9% (−11.7 to −72.1) · −45.9% (−20.6 to −71.1) · −57.5% (−32.2 to −82.7). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BOTH.md`): response time (ms), 99th percentile, A B C −45.2% (−12.1 to −78.2) · −48.9% (−22.4 to −75.5) · −62.1% (−33.1 to −91.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BOTH.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −2.3% (−18.4 to +13.7) · −4.3% (−11.6 to +3.0) · −5.5% (−0.9 to −10.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BOTH.md`): pod start wait, total (s), A B C −100.0% (−369.2 to +169.2) · −0.4000 (−0.9001 to +0.1001) · −0.5000 (−1.0058 to +0.0058). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BOTH.md`): pod start wait, mean (s), A B C −300.0% (−684.5 to +84.5) · −0.4000 (−0.9001 to +0.1001) · −0.5000 (−1.0058 to +0.0058). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BOTH.md`): batch: queue finished (s), A B C −5.1% (−1.7 to −8.5) · −6.9% (−3.4 to −10.3) · −5.1% (−3.0 to −7.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BOTH.md`): queue: job wait, submitted to its first pod running, mean

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

(s), A B C −1753.8% (−1040.8 to −2466.9) · −1626.7% (−910.1 to −2343.3) · −915.8% (−807.5 to −1024.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BOTH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −550.0% (−38.6 to −1061.4) · −650.0% (−129.0 to −1171.0) · −128.6% (−70.6 to −186.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_BOTH.md`): queue: job turnaround, submitted to done, mean (s), A B C −48.0% (−17.8 to −78.1) · −51.3% (−28.0 to −74.7) · −52.5% (−31.0 to −73.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_ORCH.md`): response time (ms), mean, A B C −13.2% (−1.6 to −24.8) · −15.8% (−8.1 to −23.5) · −18.3% (−7.5 to −29.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_ORCH.md`): response time (ms), 95th percentile, A B C −38.1% (−7.2 to −69.0) · −41.1% (−19.5 to −62.6) · −50.8% (−22.6 to −79.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_ORCH.md`): response time (ms), 99th percentile, A B C −39.9% (−7.8 to −72.1) · −44.0% (−23.2 to −64.9) · −61.3% (−30.8 to −91.7). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_ORCH.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −1.2% (−13.8 to +11.5) · −6.9% (−4.3 to −9.5) · −6.4% (−2.0 to −10.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_ORCH.md`): batch: queue finished (s), A B C −4.2% (−1.6 to −6.9) · −5.7% (−2.8 to −8.6) · −4.6% (−2.7 to −6.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_ORCH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −1461.5% (−1162.4 to −1760.7) · −1613.3% (−1157.7 to −2069.0) · −968.4% (−828.5 to −1108.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_ORCH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −300.0% (−115.3 to −484.7) · −550.0% (−225.7 to −874.3) · −100.0% (−31.0 to −169.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_ORCH.md`): queue: job turnaround, submitted to done, mean (s), A B C −40.1% (−16.1 to −64.0) · −42.1% (−24.1 to −60.0) · −45.2% (−26.8 to −63.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** The KAI scheduler under the batch stream, the four ways (omni-v12, `results/live/V12_KAI_4W_VS.md`): time over the response line (% of samples), A B C −16.2% (−5.8 to −26.6) · −5.0% (−22.3 to +12.2) · −8.2% (−18.5 to +2.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): response time (ms), mean, A B C −45.7% (−15.8 to −75.5) · −33.1% (−14.0 to −52.3) · −25.0% (−7.6 to −42.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): response time (ms), 95th percentile, A B C −81.3% (−33.4 to −129.1) · −62.1% (−27.0 to −97.3) · −38.8% (−13.8 to −63.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): response time (ms), 99th percentile, A B C −73.4% (−34.4 to −112.5) · −64.1% (−30.5 to −97.7) · −36.5% (−13.7 to −59.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): time over the response line (% of samples), A B C −17.9% (−8.8 to −27.1) · −12.6% (−0.3 to −25.0) · −22.4% (−7.1 to −37.8). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): failed requests (%), A B C −912.6% (−76.0 to −1749.3) · −0.1452 (−0.2990 to +0.0085) · −1119.8% (−2446.7 to +207.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −45.1% (−21.3 to −68.9) · −34.5% (−21.0 to −48.0) · −30.8% (−18.3 to −43.2). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): pod start wait, total (s), A B C −600.0% (−1458.5 to +258.5) · −1.9000 (−0.4914 to −3.3086) · −2.2000 (−4.4820 to +0.0820). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): pod start wait, mean (s), A B C −98.1% (−342.1 to +145.9) · −1.0333 (−0.3341 to −1.7326) · −1.2250 (−0.2048 to −2.2452). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): batch: queue finished (s), A B C −16.5% (−7.4 to −25.6) · −15.7% (−8.5 to −23.0) · −14.3% (−5.7 to −22.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −2550.0% (−7297.6 to +2197.6) · −3040.0% (−7128.9 to +1048.9) · −18419.0% (−3305.6 to −33532.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −180.0% (−82.2 to −277.8) · −183.3% (−52.1 to −314.5) · −24360.0% (−1893.1 to −46826.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_BOTH.md`): queue: job turnaround, submitted to done, mean (s), A B C −83.0% (−40.0 to −126.1) · −78.2% (−42.6 to −113.8) · −57.9% (−24.1 to −91.8). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): response time (ms), mean, A B C −27.9% (−13.5 to −42.3) · −20.4% (−10.8 to −30.0) · −21.6% (−7.9 to −35.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): response time (ms), 95th percentile, A B C −51.1% (−21.9 to −80.2) · −38.9% (−18.4 to −59.5) · −35.4% (−13.9 to −56.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): response time (ms), 99th percentile, A B C −54.9% (−23.6 to −86.2) · −47.7% (−25.1 to −70.2) · −31.3% (−13.1 to −49.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): time over the response line (% of samples), A B C −12.4% (−0.5 to −24.3) · −6.9% (−19.9 to +6.2) · −13.0% (−4.3 to −21.8). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): failed requests (%), A B C −424.2% (−953.0 to +104.6) · −0.0524 (−0.1403 to +0.0355) · −324.7% (−930.4 to +281.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −34.3% (−13.3 to −55.3) · −22.1% (−12.1 to −32.1) · −31.7% (−8.1 to −55.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): pod start wait, total (s), A B C −100.0% (−439.7 to +239.7) · −1.1000 (−2.4676 to +0.2676) · −1.1000 (−2.4254 to +0.2254). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): pod start wait, mean (s), A B C −50.0% (−324.8 to +224.8) · −0.6500 (−1.4049 to +0.1049) · −0.8500 (−1.8338 to +0.1338). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): batch: queue finished (s), A B C −11.7% (−5.1 to −18.3) · −11.2% (−6.1 to −16.2) · −11.0% (−5.0 to −16.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −4531.3% (−13992.7 to +4930.2) · −1692.0% (−4647.7 to +1263.7) · −11114.3% (−22602.3 to +373.7). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −6540.0% (−21413.9 to +8333.9) · −150.0% (−31.4 to −268.6) · −12780.0% (−31619.7 to +6059.7). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_ORCH.md`): queue: job turnaround, submitted to done, mean (s), A B C −58.2% (−28.9 to −87.5) · −56.1% (−30.6 to −81.6) · −44.2% (−20.7 to −67.7). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_VS.md`): pod start wait, total (s), A B C −100.0%

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

(−248.6 to +48.6) · −9.1% (−181.0 to +162.8) · −72.7% (−250.9 to +105.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

- **the orchestrator’s own cost.** Karmada on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_KARMADA_4W_VS.md`): pod start wait, mean (s), A B C −66.7% (−168.4 to +35.0) · −46.2% (−216.6 to +124.3) · −47.1% (−147.8 to +53.7). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_BOTH.md`): pod start wait, total (s), A B C −50.0% (−163.1 to +63.1) · −0.7000 (−1.5294 to +0.1294) · =0.0% (−337.2 to +337.2). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_BOTH.md`): batch: queue finished (s), A B C −79.6% (−57.4 to −101.8) · −82.5% (−72.2 to −92.7) · −90.2% (−71.9 to −108.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_BOTH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −332575.0% (−204178.2 to −460971.8) · −701433.3% (−502619.2 to −900247.5) · −227980.0% (−149811.1 to −306148.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_BOTH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −172733.3% (−104746.8 to −240719.9) · −763800.0% (−530043.0 to −997557.0) · −136780.0% (−86044.3 to −187515.7). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_BOTH.md`): queue: job turnaround, submitted to done, mean (s), A B C −1607.8% (−1081.3 to −2134.4) · −849.4% (−675.6 to −1023.2) · −1322.9% (−1027.8 to −1618.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_BOTH.md`): queue: jobs unfinished at the window's end, A B C −5.3000 (−11.4906 to +0.8906) · −10.7000 (−4.0490 to −17.3510) · −8.8000 (−3.2613 to −14.3387). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_ORCH.md`): batch: queue finished (s), A B C −76.5% (−54.1 to −98.9) · −82.5% (−72.8 to −92.1) · −86.9% (−68.4 to −105.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_ORCH.md`): queue: job wait, submitted to its first pod

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

running, mean (s), A B C −310637.5% (−166814.0 to −454461.0) · −686083.3% (−439006.5 to −933160.2) · −233933.3% (−162122.7 to −305743.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_ORCH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −171200.0% (−91149.9 to −251250.1) · −797900.0% (−545467.5 to −1050332.5) · −139600.0% (−101748.5 to −177451.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_ORCH.md`): queue: job turnaround, submitted to done, mean (s), A B C −1512.7% (−1011.0 to −2014.4) · −831.8% (−691.5 to −972.0) · −1276.6% (−979.1 to −1574.2). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_ORCH.md`): queue: jobs unfinished at the window's end, A B C −4.9000 (−10.5971 to +0.7971) · −9.4000 (−3.5091 to −15.2909) · −9.6000 (−3.5005 to −15.6995). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_VS.md`): response time (ms), mean, A B C −40.4% (−83.9 to +3.0) · −148.2% (−55.6 to −240.8) · −71.4% (−13.0 to −129.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_VS.md`): response time (ms), 95th percentile, A B C −191.2% (−63.6 to −318.8) · −485.5% (−212.9 to −758.0) · −285.6% (−106.4 to −464.8). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_VS.md`): response time (ms), 99th percentile, A B C −181.3% (−56.9 to −305.8) · −481.6% (−212.0 to −751.1) · −285.0% (−116.9 to −453.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_VS.md`): time over the response line (% of samples), A B C −4381.5% (−8894.3 to +131.3) · −7419.5% (−3065.0 to −11774.0) · −8073.6% (−3500.6 to −12646.7). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Koordinator under the batch stream, the four ways (omni-v12, `results/live/V12_KOORDINATOR_4W_VS.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −4.9000 (−0.7503 to −9.0497) · −8900.0% (−4446.3 to −13353.7) · −9500.0% (−6140.7 to −12859.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BOTH.md`): response time (ms), mean, A B C −85.7% (−68.2 to −103.3) · −85.1% (−68.5 to −101.7) · −67.0% (−49.1 to −84.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BOTH.md`): time over the response line (% of samples), A B C −212.8% (−175.6 to −250.1) · −223.2% (−172.9 to −273.6) · −207.9% (−172.9 to −243.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BOTH.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −202.8% (−146.0 to −259.6) · −216.4% (−168.3 to −264.6) · −157.0% (−115.5 to −198.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BOTH.md`): pod start wait, total (s), A B C −1.1111 (−2.5203 to +0.2981) · −0.2000 (−0.6524 to +0.2524) · −0.8000 (−1.6121 to +0.0121). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BOTH.md`): pod start wait, mean (s), A B C −0.7407 (−1.6355 to +0.1540) · −0.2000 (−0.6524 to +0.2524) · −0.8000 (−1.6121 to +0.0121). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BOTH.md`): batch: queue finished (s), A B C −89.3% (−79.7 to −98.9) · −80.1% (−69.7 to −90.5) · −80.8% (−71.6 to −90.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BOTH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −1967119.6% (−1111934.3 to −2822304.9) · −1287745.8% (−521467.2 to −2054024.4) · −1250833.4% (−747221.5 to −1754445.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BOTH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −1001696.3% (−623421.0 to −1379971.7) · −230987.0% (−116467.0 to −345506.9) · −285052.5% (−193399.9 to −376705.2). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BOTH.md`): queue: job turnaround, submitted to

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

done, mean (s), A B C −1067.6% (−891.6 to −1243.7) · −910.0% (−690.2 to −1129.8) · −774.9% (−649.7 to −900.2). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_BOTH.md`): queue: jobs unfinished at the window's end, A B C −13.4444 (−7.1631 to −19.7258) · −11.3000 (−3.8583 to −18.7417) · −14.5000 (−8.3259 to −20.6741). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_ORCH.md`): response time (ms), mean, A B C −87.9% (−61.0 to −114.8) · −86.6% (−61.9 to −111.4) · −70.6% (−49.8 to −91.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_ORCH.md`): time over the response line (% of samples), A B C −221.2% (−183.5 to −258.9) · −234.2% (−179.7 to −288.8) · −217.5% (−182.6 to −252.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_ORCH.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −204.2% (−145.9 to −262.4) · −219.2% (−169.2 to −269.1) · −159.1% (−116.0 to −202.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_ORCH.md`): pod start wait, total (s), A B C −0.2222 (−0.7347 to +0.2902) · −0.8000 (−2.0526 to +0.4526) · −0.3000 (−0.7828 to +0.1828). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_ORCH.md`): pod start wait, mean (s), A B C −0.2222 (−0.7347 to +0.2902) · −0.5500 (−1.3837 to +0.2837) · −0.3000 (−0.7828 to +0.1828). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_ORCH.md`): batch: queue finished (s), A B C −90.4% (−80.4 to −100.4) · −80.6% (−70.9 to −90.3) · −81.4% (−72.4 to −90.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_ORCH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −1959438.6% (−1137492.1 to −2781385.0) · −1280430.0% (−511805.8 to −2049054.2) · −1238207.0% (−751232.1 to −1725181.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_ORCH.md`): queue: job wait, submitted to its first

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

pod running, 95th percentile (s), A B C −1015791.5% (−684899.6 to −1346683.4) · −228574.2% (−114225.9 to −342922.5) · −286211.2% (−190609.6 to −381812.7). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_ORCH.md`): queue: job turnaround, submitted to done, mean (s), A B C −1067.4% (−882.4 to −1252.3) · −927.0% (−727.3 to −1126.7) · −779.3% (−655.6 to −902.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** KubeRay (the Ray autoscaler) under the batch stream, the four ways (omni-v12, `results/live/V12_KUBERAY_4W_ORCH.md`): queue: jobs unfinished at the window's end, A B C −14.3333 (−8.2201 to −20.4465) · −11.1000 (−3.7552 to −18.4448) · −14.6000 (−8.6134 to −20.5866). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BOTH.md`): response time (ms), 95th percentile, A B C −9.5% (−1.9 to −17.1) · −13.4% (−3.4 to −23.4) · −15.4% (−7.8 to −22.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BOTH.md`): response time (ms), 99th percentile, A B C −10.6% (−22.0 to +0.7) · −13.1% (−4.1 to −22.1) · −11.8% (−3.7 to −19.8). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BOTH.md`): failed requests (%), A B C =0.0000 (±0.0000 to ±0.0000) · −0.0093 (−0.0303 to +0.0117) · =0.0000 (±0.0000 to ±0.0000). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BOTH.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −2.6% (−11.0 to +5.9) · −3.9% (−8.8 to +1.0) · −3.0% (−6.5 to +0.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BOTH.md`): pod start wait, total (s), A B C −0.1000 (−0.3262 to +0.1262) · −0.3000 (−0.7828 to +0.1828) · −1.2222 (−2.8427 to +0.3983). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BOTH.md`): pod start wait, mean (s), A B C −0.1000 (−0.3262 to +0.1262) · −0.3000 (−0.7828 to +0.1828) · −0.7222 (−1.6052 to +0.1607). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BOTH.md`): batch: queue finished (s), A B C −1.0% (−0.3 to −1.7)

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

· −1.6% (−0.8 to −2.5) · −1.9% (−1.1 to −2.8). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BOTH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −185.7% (−419.5 to +48.1) · −118.2% (−27.2 to −209.1) · −537.5% (−360.4 to −714.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BOTH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −100.0% (−215.2 to +15.2) · =0.0% (−42.1 to +42.1) · −800.0% (−569.4 to −1030.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_BOTH.md`): queue: job turnaround, submitted to done, mean (s), A B C −12.5% (−3.2 to −21.8) · −13.8% (−6.4 to −21.3) · −16.6% (−8.6 to −24.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_ORCH.md`): response time (ms), mean, A B C −7.3% (−0.0 to −14.5) · −6.4% (−1.8 to −11.0) · −8.9% (−3.7 to −14.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_ORCH.md`): response time (ms), 95th percentile, A B C −12.8% (−0.3 to −25.2) · −10.0% (−1.4 to −18.7) · −10.2% (−2.9 to −17.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_ORCH.md`): response time (ms), 99th percentile, A B C −13.2% (−27.7 to +1.3) · −7.0% (−0.4 to −13.6) · −11.1% (−5.0 to −17.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_ORCH.md`): time over the response line (% of samples), A B C −5.2% (−10.5 to +0.2) · −3.9% (−8.5 to +0.7) · −7.2% (−2.9 to −11.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_ORCH.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C =0.0% (−6.1 to +6.1) · −1.0% (−8.0 to +6.0) · −1.0% (−3.3 to +1.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_ORCH.md`): pod start wait, total (s), A B C −0.4000 (−1.3048 to +0.5048) · −0.4000 (−1.3048 to +0.5048) · −0.3333 (−1.1020 to +0.4353). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_ORCH.md`): pod start wait, mean (s), A B C −0.4000 (−1.3048 to +0.5048) · −0.4000 (−1.3048 to +0.5048) · −0.3333 (−1.1020 to +0.4353). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_ORCH.md`): batch: queue finished (s), A B C −0.9% (−1.9 to +0.1) · −1.1% (−0.3 to −1.8) · −1.4% (−0.6 to −2.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_ORCH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −178.6% (−75.7 to −281.5) · −118.2% (−22.2 to −214.1) · −537.5% (−313.8 to −761.2). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_ORCH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −233.3% (−118.2 to −348.5) · −25.0% (−62.7 to +12.7) · −700.0% (−394.9 to −1005.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Kueue under the batch stream, the four ways (omni-v12, `results/live/V12_KUEUE_4W_ORCH.md`): queue: job turnaround, submitted to done, mean (s), A B C −11.5% (−0.3 to −22.7) · −9.3% (−2.0 to −16.5) · −12.7% (−5.4 to −19.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): response time (ms), mean, A B C −59.9% (−38.6 to −81.3) · −51.7% (−23.3 to −80.0) · −58.7% (−37.1 to −80.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): response time (ms), 95th percentile, A B C −51.5% (−36.6 to −66.4) · −55.2% (−22.4 to −88.0) · −55.0% (−29.0 to −81.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): response time (ms), 99th percentile, A B C −49.4% (−31.0 to −67.8) · −58.4% (−25.9 to −90.9) · −52.9% (−30.2 to −75.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): time over the response line (% of samples), A B C −55.9% (−30.2 to −81.5) · −23.9% (−11.2 to −36.5) · −75.5% (−53.5 to −97.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): failed requests (%), A

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

B C −1075.1% (−3104.7 to +954.5) · −1410.9% (−3307.7 to +485.9) · −41.3% (−301.7 to +219.2). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −24.8% (−18.0 to −31.6) · −26.6% (−20.5 to −32.7) · −74.3% (−40.2 to −108.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): pod start wait, total (s), A B C −262.5% (−638.2 to +113.2) · −1350.0% (−337.7 to −2362.3) · −733.3% (−1506.4 to +39.7). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): pod start wait, mean (s), A B C −181.8% (−456.0 to +92.4) · −708.3% (−164.7 to −1251.9) · −516.7% (−1102.4 to +69.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): batch: queue finished (s), A B C −21.4% (−16.0 to −26.8) · −19.4% (−11.5 to −27.4) · −19.1% (−13.1 to −25.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −14475.7% (−1985.4 to −26966.0) · −15860.7% (−1447.0 to −30274.5) · −17305.6% (−349.2 to −34262.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −22685.7% (−4894.5 to −40476.9) · −13100.0% (−1240.5 to −24959.5) · −16980.0% (−170.1 to −33789.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_BOTH.md`): queue: job turnaround, submitted to done, mean (s), A B C −70.9% (−54.6 to −87.2) · −67.7% (−38.0 to −97.5) · −76.8% (−55.5 to −98.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_ORCH.md`): response time (ms), mean, A B C −43.6% (−24.2 to −62.9) · −56.4% (−31.6 to −81.2) · −15.7% (−63.5 to +32.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_ORCH.md`): response time (ms), 95th percentile, A B C −38.7% (−19.4 to −58.1) · −52.7% (−28.2 to −77.2) · −9.8% (−62.5 to +42.8). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_ORCH.md`): response time (ms), 99th percentile, A B C −34.4% (−13.7 to −55.0) · −48.2% (−27.5 to −69.0) · −10.8% (−62.1 to +40.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_ORCH.md`): time over the response line (% of samples), A B C −38.4% (−26.1 to −50.6) · −26.6% (−12.2 to −41.0) · −17.6% (−69.8 to +34.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_ORCH.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −18.1% (−12.6 to −23.7) · −19.4% (−10.7 to −28.0) · −19.8% (−73.8 to +34.2). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_ORCH.md`): batch: queue finished (s), A B C −15.0% (−9.3 to −20.7) · −15.9% (−9.3 to −22.6) · −16.1% (−4.7 to −27.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_ORCH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −4589.2% (−12556.0 to +3377.6) · −5839.3% (−343.3 to −11335.2) · −4080.2% (−10503.3 to +2342.8). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_ORCH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −5528.6% (−14699.6 to +3642.5) · −6887.5% (−13992.2 to +217.2) · −1177.8% (−3216.5 to +860.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_ORCH.md`): queue: job turnaround, submitted to done, mean (s), A B C −47.9% (−27.4 to −68.3) · −57.0% (−30.7 to −83.2) · −46.0% (−18.7 to −73.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_VS.md`): pod start wait, total (s), A

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

B C −466.7% (−186.8 to −746.5) · −2.4000 (−0.9225 to −3.8775) · −1.3000 (−0.4047 to −2.1953). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

- **the orchestrator’s own cost.** Open Cluster Management on the group of two clusters under the batch stream, the four ways (omni-v12, `results/live/V12_OCM_4W_VS.md`): pod start wait, mean (s), A B C −266.7% (−26.9 to −506.4) · −1.2500 (−0.6136 to −1.8864) · −0.8000 (−0.2615 to −1.3385). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_BOTH.md`): pod start wait, total (s), A B C =0.0% (−168.6 to +168.6) · −366.7% (−1211.2 to +477.8) · −500.0% (−1326.0 to +326.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_BOTH.md`): pod start wait, mean (s), A B C −100.0% (−326.2 to +126.2) · −366.7% (−1211.2 to +477.8) · −500.0% (−1326.0 to +326.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_BOTH.md`): batch: queue finished (s), A B C −1.8% (−0.8 to −2.8) · −1.7% (−0.4 to −2.9) · −1.8% (−0.4 to −3.2). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_BOTH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −1126.7% (−1020.2 to −1233.2) · −1088.9% (−690.1 to −1487.7) · −1416.7% (−986.8 to −1846.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_BOTH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −333.3% (−174.4 to −492.3) · −450.0% (−38.7 to −861.3) · −550.0% (−436.9 to −663.1). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_BOTH.md`): queue: job turnaround, submitted to done, mean (s), A B C −32.1% (−13.4 to −50.8) · −19.7% (−5.5 to −33.9) · −26.0% (−8.1 to −43.9). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_ORCH.md`): batch: queue finished (s), A B C −1.2% (−0.6 to −1.8) · −1.4% (−0.4 to −2.5) · −1.4% (−0.3 to −2.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_ORCH.md`): queue: job wait, submitted to its first pod running, mean (s), A B C −1053.3% (−883.9 to −1222.8) · −866.7% (−664.7 to −1068.6) · −1491.7% (−1085.0 to −1898.3). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_ORCH.md`): queue: job wait, submitted to its first pod running, 95th percentile (s), A B C −366.7% (−231.3 to −502.0) · −275.0% (−78.2 to −471.8) · −500.0% (−331.4 to −668.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_ORCH.md`): queue: job turnaround, submitted to done, mean (s), A B C −24.2% (−10.9 to −37.5) · −17.6% (−5.6 to −29.5) · −23.2% (−6.9 to −39.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_VS.md`): response time (ms), mean, A B C −20.0% (−0.7 to −39.3) · −11.4% (−29.2 to +6.3) · −13.1% (−27.6 to +1.5). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_VS.md`): response time (ms), 95th percentile, A B C −92.6% (−46.7 to −138.5) · −31.9% (−10.8 to −53.0) · −50.9% (−23.2 to −78.6). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_VS.md`): response time (ms), 99th percentile, A B C −73.3% (−31.5 to −115.1) · −9.6% (−27.4 to +8.3) · −23.6% (−1.1 to −46.0). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_VS.md`): time over the response line (% of samples), A B C −124.1% (−51.4 to −196.7) · −50.2% (−5.7 to −94.8) · −54.8% (−19.1 to −90.4). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.
- **the orchestrator’s own cost.** Volcano under the batch stream, the four ways (omni-v12, `results/live/V12_VOLCANO_4W_VS.md`): alert minutes (whole minutes whose 95th percentile, failed requests counted over, was over the line), A B C −30.3% (−6.8 to −53.8) · −11.3% (−26.1 to +3.6) · −23.2% (−48.2 to +1.8). The knob: nothing of Omni-Compass to turn: the orchestrator's own cost.

BACK MATTER

Index

Every term of the glossary where this book defines or discusses it, every muscle family where it is named, every file of the repository and every command-line setting this book names, with the pages they stand on. A plain mention of a common word is not an entry: the index points to where a thing is explained. A term whose

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

pages would run past its line keeps the pages that fit, where it is defined and first used; after those it is throughout the book.

-

--allow-origin 9
--check . . . . . x, 1
--give-back-only 27
--interval 21, 32
--verdict-samples 43

.

.github/workflows/cloud-check.yml 28
.github/workflows/engine-runs.yml 165
.github/workflows/live-engine.yml 51, 68
.github/workflows/peek.yml 28

B

benchmarks/stack_benchmark.py . . . . . xxiii, 166

C

cpp/src/compass.cpp 126, 127, 128, 140, 141
cpp/src/conveyance.cpp 146
cpp/src/core.cpp 100, 101, 102, 103, 108, 109, 110, 111, 112, 122, 123, 126
cpp/src/governor.cpp 100, 101, 102, 103, 108, 109, 110, 111, 112, 122, 123, 126
cpp/src/gpu_rules.cpp 146
cpp/src/hpa.cpp 126, 127, 128, 140, 141
cpp/src/nervous_system.cpp 100, 101, 102, 103, 108, 109, 110, 111, 112, 122, 123, 149
cpp/src/shield.cpp 90, 126, 127, 128, 140, 141, 166
cpp/src/verdict.cpp 49
cpp/tools/engine_runs.cpp 13, 49, 146, 148, 157, 158, 165, 172

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

D

deploy/grafana/omni-compass-wall.json . . . . . xxiii, 13
deploy/kind/rbac-omni.yaml 90
docs/AMAZON_SETUP.md 29
docs/AZURE_SETUP.md 29
docs/BATCH_QUEUE_PREREGISTRATION.md . . 29, 55, 181, 182, 183, 184, 185, 190, 191, 195, 196
docs/BENEFIT_SHEET.md 22
docs/book/build_live_manual.py 91
docs/CHANGE_CONTROL.md 56
docs/DOSSIER.md xxi
docs/engine/APPRAISAL.md 3, 58
docs/engine/build_live_engine.py . . . . . xiv, 3, 51, 117, 120, 123, 125, 130, 133, 134, 135, 136, 137
docs/engine/check_live_engine.py . . . . . ix, xxiii, 3, 13, 100, 101, 102, 103, 108, 109, 110, 111, 112
docs/engine/check_records.py 3, 13, 100, 101, 102, 103, 108, 109, 110, 111, 112, 126, 127
docs/engine/CONSENSUS_AUDIT_2026-10-21.md 6
docs/engine/CONSENSUS_AUDIT_2026-10-22.md 6
docs/engine/cpp_core_probe.cpp 58
docs/engine/export_controller_trace.py . . . . . xi, 2, 35, 126, 127, 128, 140, 141
docs/engine/export_cpu_model.py 145
docs/engine/export_gpu_run.py 144
docs/engine/export_harness_trace.py . . . . . xi, 2, 100, 101, 102, 103, 108, 109, 110, 111, 112, 149, 150
docs/engine/export_heldout.py 166
docs/engine/export_runs.py . . . . . xi, 2, 133, 135, 136, 137, 138, 162, 163
docs/engine/export_scenarios.py . . . . . xi, 2, 146
docs/engine/export_whole.py . . . . . xxii, xxiii, 120
docs/engine/github_ledger.json . . . . . xi, 3
docs/engine/monitors.json . . . . . xxii, 13
docs/engine/OMNI_COMPASS_LIVE_ENGINE.html . . . . . xiv, xxii, xxiii, 91
docs/engine/PAGE_WORD_FOR_WORD.md xxii

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

docs/EVIDENCE_LEDGER.md . . . . . xviii, xxi
docs/GOOGLE_SETUP.md 29
docs/GPU_PREREGISTRATION.md . . . . . xviii, xx, xxi
docs/GPU_RUN_GUIDE.md 37
docs/K8S_COMPASS_PREREGISTRATION.md . . . . . xviii, xxi
docs/LOSS_ROWS_UNDER_INVESTIGATION.md 180, 193, 194
docs/MISSION_CONTROL.md 13
docs/MUSCLE_CATALOG.md xxii
docs/OMNI_COMPASS_LIVE_ENGINE_MANUAL.md xxii
docs/OMNI_COMPASS_MANUAL.md xxi
docs/OMNI_COMPASS_MANUAL.pdf xxi
docs/PACE_PREREGISTRATION.md 22
docs/POD_START_WAIT.md . . . . . x, 15, 55, 180, 181, 182, 183, 184, 186, 187, 188, 189, 190
docs/REALMS_PREREGISTRATION.md . . . . . xviii, xxi
docs/REGISTER.md 23
docs/ROBUSTNESS_PREREGISTRATION.md 195
docs/SAFETY_CASE.md 47
docs/SOLO_PREREGISTRATION.md xv
docs/STATE_OF_PLAY.md . . . . . xii, xxi
docs/TAIL_LATENCY.md 15, 55, 188
docs/THE_TUNE.md . . . . . xix, 1, 22
docs/THREAT_MODEL.md 47, 90
docs/TRACES_PREREGISTRATION.md 84
docs/WHOLE_SYSTEM_PREREGISTRATION.md xxii

F

fleet/capture/kube_capture.sh 90
fleet/harness.py 126, 127, 128, 140, 141

O

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

omnicompass/adapter.py 100, 101, 102, 103, 108, 109, 110, 111, 112, 149, 150, 151
omnicompass/compass_law.py . . . . . xi, 3, 100, 101, 102, 103, 108, 109, 110, 111, 112, 146, 148
omnicompass/conveyance.py 146
omnicompass/core.py . . . . . xi, 3, 100, 101, 102, 103, 108, 109, 110, 111, 112, 149, 150
omnicompass/master.py 10, 30, 170
omnicompass/nervous_system.py 100, 101, 102, 103, 108, 109, 110, 111, 112, 149, 150, 151
omnicompass/shield.py 90, 166
omnicompass/stack_sim.py 166
omnicompass/student_t.py 157, 158
omnicompass/verdict.py . . . . . xi, 3, 157, 158
omni_controller/controller.py 2, 30, 35, 126, 127, 128, 133, 134, 140, 141
omni_controller/gpu_governor.py 146
omni_controller/muscles.py 146

P

pilot/selfpilot.py 35, 126, 127, 128, 140, 141

R

realms/catalog_v5.csv 25
realms/compass_arm_v5.py 2, 110, 159, 160, 161
realms/gpu_card.py 2, 146
realms/harness.py 2, 46, 100, 101, 102, 103, 108, 109, 110, 111, 112, 122, 123
realms/muscle_cards_v5.csv . . . . . xix, 2
results/BENEFIT_SHEET.json 22
results/live/raw 34
results/live/V10_BATCH.md 181
results/live/V10_CRUISEKUBE.md 184
results/live/V10_TRACE_GOOGLE2011.md 195
results/live/V10_WANDERING.md 197
results/live/V11_KEDA_REQUESTS.md 188

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

results/live/V11_ROBUST_LONG.md . . . 195
results/live/V12_ARMADA_4W_BARE.md . . . 179, 180
results/live/V12_ARMADA_4W_BOTH.md . . . 201, 202
results/live/V12_ARMADA_4W_ORCH.md . . . 202, 203
results/live/V12_ARMADA_4W_TOP.md . . . 180
results/live/V12_ARMADA_4W_VS.md . . . 203
results/live/V12_BINPACK.md . . . 181, 182
results/live/V12_BINPACK_4W_BARE.md . . . 182, 183
results/live/V12_BINPACK_4W_BOTH.md . . . 203, 204
results/live/V12_BINPACK_4W_ORCH.md . . . 204
results/live/V12_BINPACK_4W_TOP.md . . . 183
results/live/V12_BINPACK_4W_VS.md . . . 204
results/live/V12_CRANE_4W_BARE.md . . . 183
results/live/V12_CRANE_4W_BOTH.md . . . 204
results/live/V12_CRANE_4W_ORCH.md . . . 204
results/live/V12_CRANE_4W_TOP.md . . . 183, 184
results/live/V12_CRANE_4W_VS.md . . . 205
results/live/V12_KAI.md . . . 184, 185
results/live/V12_KAI_4W_BARE.md . . . 185
results/live/V12_KAI_4W_BOTH.md . . . 205, 206
results/live/V12_KAI_4W_ORCH.md . . . 206, 207
results/live/V12_KAI_4W_TOP.md . . . 185, 186
results/live/V12_KAI_4W_VS.md . . . 207
results/live/V12_KARMADA_4W_BARE.md . . . 186, 187
results/live/V12_KARMADA_4W_BOTH.md . . . 207, 208
results/live/V12_KARMADA_4W_ORCH.md . . . 208, 209
results/live/V12_KARMADA_4W_TOP.md . . . 187, 188
results/live/V12_KARMADA_4W_VS.md . . . 209, 210
results/live/V12_KOORDINATOR.md . . . 188, 189

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

results/live/V12_KOORDINATOR_4W_BARE.md . . . 189
results/live/V12_KOORDINATOR_4W_BOTH.md . . . 210
results/live/V12_KOORDINATOR_4W_ORCH.md . . . 210, 211
results/live/V12_KOORDINATOR_4W_TOP.md . . . 189
results/live/V12_KOORDINATOR_4W_VS.md . . . 211
results/live/V12_KUBERAY_4W_BARE.md . . . 189, 190, 191
results/live/V12_KUBERAY_4W_BOTH.md . . . 212, 213
results/live/V12_KUBERAY_4W_ORCH.md . . . 213, 214
results/live/V12_KUBERAY_4W_TOP.md . . . 191
results/live/V12_KUEUE_4W_BARE.md . . . 191, 192
results/live/V12_KUEUE_4W_BOTH.md . . . 214, 215
results/live/V12_KUEUE_4W_ORCH.md . . . 215, 216
results/live/V12_KUEUE_4W_TOP.md . . . 192
results/live/V12_OCM_4W_BARE.md . . . 192, 193
results/live/V12_OCM_4W_BOTH.md . . . 216, 217
results/live/V12_OCM_4W_ORCH.md . . . 217, 218
results/live/V12_OCM_4W_TOP.md . . . 193, 194, 195
results/live/V12_OCM_4W_VS.md . . . 218, 219
results/live/V12_VANILLA.md . . . 195
results/live/V12_VOLCANO_4W_BARE.md . . . 196
results/live/V12_VOLCANO_4W_BOTH.md . . . 219
results/live/V12_VOLCANO_4W_ORCH.md . . . 219, 220
results/live/V12_VOLCANO_4W_TOP.md . . . 196, 197
results/live/V12_VOLCANO_4W_VS.md . . . 220
results/live/V13_*.md . . . 2
results/live/V16_KAFKA.md . . . 197
results/live/V16_KAFKA_SERVICE.md . . . 197
results/live/V16_PGBENCH.md . . . 198
results/live/V16_REDIS_SERVICE.md . . . 198

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

results/live/V16_REDIS_SHIPPED.md . . . 198
results/live/V16_SYSBENCH.md . . . 198, 199
results/live/V16_SYSBENCH_SHIPPED.md . . . 199
results/live/V16_YCSB.md . . . 199, 200
results/live/V16_YCSB_SHIPPED.md . . . 200, 201
results/live/V17_PGBENCH_SERVICE.md . . . 198
results/live/V17_YCSB_SERVICE.md . . . 200
results/OMNI_INDEX.md . . . 23
results/orchestra/ORCHESTRA.md . . . 30
results/orchestrator/V18_THREE_ARMS_ABC.md . . . 16
results/realms_v5 . . . 2
results/realms_v5/REALMS_V5.json . . . 25
results/SEAL.json . . . xxii, 90
results/toy_gate/HEARTBEAT_SWEEP.md . . . 32, 134
results/WHOLE_SYSTEM.md . . . xxii

S

scripts/dispatch_grid.py . . . 51, 123
scripts/gpu_8card.sh . . . 37, 146
scripts/raw_archive.sh . . . 133, 135, 136, 137, 138, 162, 163

T

tests/test_benefit_sheet.py . . . 115, 116
tests/test_cloud_check.py . . . 126, 127
tests/test_confirm_abc.py . . . 117
tests/test_cpp_conveyance_parity.py . . . 146
tests/test_cpp_governor_parity.py . . . 100, 101, 102, 103, 108, 109, 110, 111, 112, 122, 123, 126
tests/test_cpp_hpa_parity.py . . . 126, 127, 128, 140, 141, 142
tests/test_cpp_shield_parity.py . . . 126, 127, 128, 140, 141, 142, 166
tests/test_cpp_twins_parity.py . . . 100, 101, 102, 103, 108, 109, 110, 111, 112, 146, 150, 151

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

tests/test_engine_runs.py . . . 165
tests/test_governors_page.py . . . 130
tests/test_grid_v5.py . . . 123
tests/test_master_switch.py . . . 170
tests/test_orchestra.py . . . 130
tests/test_orchestrator.py . . . 105, 106
tests/test_readings.py . . . 115, 116, 117
tests/test_realms.py . . . 122, 123
tests/test_run_cpu_power.py . . . 145
tests/test_workflow_triggers.py . . . 51
tests/third_party/hpa_independent.py . . . 83
tools/benefit_sheet.py . . . 115, 116
tools/cloud_key_check.py . . . 28, 126
tools/confirm_abc.py . . . 117, 130, 133
tools/engine_runs.py . . . xxii, xxiii, 13, 165
tools/governors_page.py . . . 130
tools/grid_v5.py . . . 123
tools/headline.py . . . 8
tools/heartbeat_sweep.py . . . 32, 134
tools/live_reps.py . . . xi, 2, 34, 54, 125, 133, 135, 136, 137, 138, 162, 163
tools/omni_exporter.py . . . 32
tools/omni_index.py . . . 115
tools/omni_switch.py . . . 10, 90, 170
tools/omni_version.py . . . 85
tools/orchestrator_record.py . . . 105, 106
tools/orchestrator_show.py . . . 105, 106
tools/readings.py . . . xiv, 3, 115, 116, 117
tools/run_cpu_power.py . . . 37, 145
tools/run_orchestra.py . . . 30, 130

© 2026 The Omni-Compass LLC. All rights reserved. Evaluation and Simulation use only.
All patents, copyrights and trademarks filed in the USA.

tools/run_realms_v5.py 25, 122, 123
tools/stop_rule.py 28, 60, 125
tools/toy_gate.py 2, 126, 127, 128, 134, 140, 141, 146
tools/tune_study.py xix
tools/whole_system.py . . . . . xxii, 120

BACK MATTER

Contact

Licensing, pilots, evaluations and the Omni-Compass Enterprise License:

The Omni-Compass LLC

Owner and developer: AJ Dubra

Main office infrastructure: toll-free direct 1-888-339-9551, system route asset 1-888-DEX-YLL-1

Landline, registered in Florida: 321-746-4411

www.omni-compass.com

Repository: github.com/The-Omni-Compass-LLC/The-Omni-Compass

Any use beyond evaluation and simulation requires a signed, paid Omni-Compass Enterprise License. Write to The Omni-Compass LLC before any production use.

© 2026 The Omni-Compass LLC. All rights reserved. **Evaluation and Simulation use only.** Any commercial use, commercialization, monetization, production use, redistribution or hosted service of any part of Omni-Compass requires a signed, paid Omni-Compass Enterprise License from The Omni-Compass LLC. Every copy, export, report and printout carries this notice with `LICENSE`, `NOTICE` and `DISCLOSURES.md`. `SPDX-License-Identifier: LicenseRef-OmniCompass-Evaluation-1.0` All patents, copyrights and trademarks filed in the USA. www.omni-compass.com