
AR68.30-P-4301-01GW	Remove/install grab handle	

- 1 Unclip cover (2) from grab handle (1) and lift cover on nuts (3).
- 2 Remove bolts (3).
- 3 Remove grab handle (1).
  - i Installation: Ensure that grab handle (1) is not installed with sides mixed up.
- 4 Install in the reverse order.

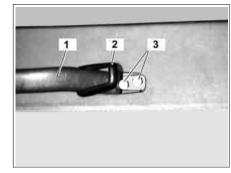

P68.30-0540-01