
Sample Minimum Equipment List

EICAS Ref sample library for the 777

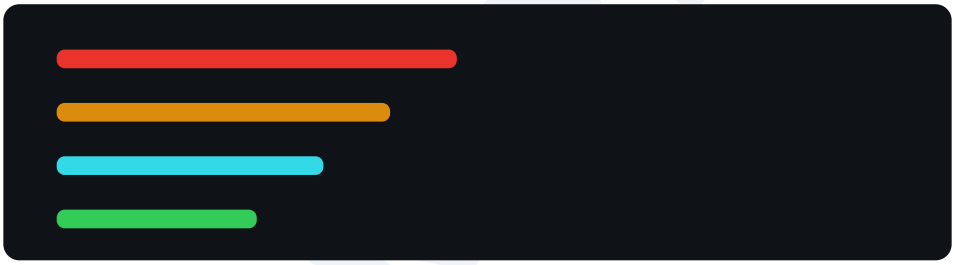

Fictional content for demonstration only.

Not a real manual. Never use it for dispatch.

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
ADIRU/GPS DISAGREE	Caution	N/A
ADS-B OUT L	Advisory	N/A
ADS-B OUT R	Advisory	N/A
AIR DATA SYS	Caution	N/A
AIRSPEED LOW	Caution	N/A
ALTITUDE ALERT	Caution	N/A
ALTITUDE CALLOUTS	Advisory	N/A
ALTN ATTITUDE	Advisory	N/A
ALTN VENT SYS	Advisory	N/A
ANTI-ICE ENG L	Advisory	N/A
ANTI-ICE ENG R	Advisory	N/A
ANTI-ICE LEAK ENG L	Caution	N/A
ANTI-ICE LEAK ENG R	Caution	N/A
ANTI-ICE LOSS ENG L	Advisory	N/A
ANTI-ICE LOSS ENG R	Advisory	N/A
ANTI-ICE ON	Advisory	N/A
ANTI-ICE VLV WING L	Caution	N/A
ANTI-ICE VLV WING R	Caution	N/A
ANTI-ICE WING	Caution	30-11-01
ANTISKID	Advisory	N/A
APU DOOR	Status	49-11-01
APU FAULT	Advisory	49-11-01
APU LIMIT	Advisory	49-11-01
APU SHUTDOWN	Advisory	49-11-01
AUTO SPEEDBRAKE	Advisory	N/A
AUTOBRAKE	Advisory	32-42-04
AUTOPILOT	Caution	N/A
AUTOPILOT DISC	Warning	N/A
AUTOTHROTTLE DISC	Caution	N/A
AUTOTHROTTLE L	Advisory	N/A

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
AUTOTHROTTLE R	Advisory	N/A
BARO SET DISAGREE	Advisory	N/A
BATTERY TEMP	Caution	24-31-01
BLEED ISLN CLOSED C	Advisory	N/A
BLEED ISLN CLOSED L	Advisory	N/A
BLEED ISLN CLOSED R	Advisory	N/A
BLEED ISLN OPEN C	Advisory	N/A
BLEED ISLN OPEN L	Advisory	N/A
BLEED ISLN OPEN R	Advisory	N/A
BLEED LEAK BODY	Caution	N/A
BLEED LEAK L	Caution	N/A
BLEED LEAK R	Caution	N/A
BLEED LEAK STRUT L	Caution	N/A
BLEED LEAK STRUT R	Caution	N/A
BLEED LOSS BODY	Advisory	N/A
BLEED LOSS BODY L	Advisory	N/A
BLEED LOSS BODY R	Advisory	N/A
BLEED LOSS WING L	Advisory	N/A
BLEED LOSS WING R	Advisory	N/A
BLEED OFF APU	Advisory	N/A
BLEED OFF ENG L	Advisory	N/A
BLEED OFF ENG R	Advisory	N/A
BOTTLE 1 DISCH ENG	Advisory	N/A
BOTTLE 2 DISCH ENG	Advisory	N/A
BOTTLE DISCH APU	Advisory	N/A
BOTTLE DISCH CARGO	Advisory	N/A
BRAKE SOURCE	Advisory	N/A
BRAKE TEMP	Advisory	N/A
CABIN ALTITUDE	Warning	NO DISPATCH
CABIN ALTITUDE AUTO	Caution	N/A

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
CABIN FAN L	Advisory	21-25-01
CABIN FAN R	Advisory	21-25-01
CABIN TEMPERATURE	Advisory	N/A
CARGO A/C LWR AFT	Advisory	N/A
CARGO A/C LWR FWD	Advisory	N/A
CARGO HEAT AFT	Advisory	N/A
CARGO HEAT BULK	Advisory	N/A
CHKL INCOMPLETE NORM	Caution	N/A
CHKL NON-NORMAL	Advisory	N/A
CONFIG DOORS	Warning	N/A
CONFIG FLAPS	Warning	N/A
CONFIG GEAR	Warning	N/A
CONFIG GEAR STEERING	Warning	N/A
CONFIG PARKING BRAKE	Warning	N/A
CONFIG RUDDER	Warning	N/A
CONFIG SPOILERS	Warning	N/A
CONFIG STABILIZER	Warning	N/A
CONFIG WARNING SYS	Advisory	N/A
CREW OXYGEN LOW	Advisory	N/A
DATALINK LOST	Advisory	N/A
DATALINK SYS	Advisory	N/A
DET FIRE APU	Advisory	N/A
DET FIRE CARGO AFT	Advisory	N/A
DET FIRE CARGO FWD	Advisory	N/A
DET FIRE CARGO MAIN	Advisory	N/A
DET FIRE ENG L	Advisory	N/A
DET FIRE ENG R	Advisory	N/A
DISPLAY SELECT PNL	Advisory	N/A
DOOR AFT CARGO	Caution	N/A
DOOR BULK CARGO	Advisory	N/A

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
DOOR E/E ACCESS	Advisory	N/A
DOOR ENTRY 1L	Advisory	N/A
DOOR ENTRY 1R	Advisory	N/A
DOOR ENTRY 2L	Advisory	N/A
DOOR ENTRY 2R	Advisory	N/A
DOOR ENTRY 3L	Advisory	N/A
DOOR ENTRY 3R	Advisory	N/A
DOOR ENTRY 4L	Advisory	N/A
DOOR ENTRY 4R	Advisory	N/A
DOOR ENTRY 5L	Advisory	N/A
DOOR ENTRY 5R	Advisory	N/A
DOOR FWD ACCESS	Advisory	N/A
DOOR FWD CARGO	Caution	N/A
DOOR MAIN DECK CARGO	Caution	N/A
DOOR WING SLIDE L	Advisory	N/A
DOOR WING SLIDE R	Advisory	N/A
DOORS	Advisory	N/A
DUCT TEMP HIGH	Caution	NO DISPATCH
EFIS CONTROL PNL L	Advisory	N/A
EFIS CONTROL PNL R	Advisory	N/A
ELEC AC BUS L	Caution	N/A
ELEC AC BUS R	Caution	N/A
ELEC BACKUP GEN L	Advisory	N/A
ELEC BACKUP GEN R	Advisory	N/A
ELEC BACKUP SYS	Advisory	N/A
ELEC BATTERY OFF	Advisory	N/A
ELEC BUS ISLN L	Advisory	N/A
ELEC BUS ISLN R	Advisory	N/A
ELEC CABIN/UTIL OFF	Advisory	N/A
ELEC GEN DRIVE L	Advisory	N/A

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
ELEC GEN DRIVE R	Advisory	N/A
ELEC GEN OFF APU	Advisory	N/A
ELEC GEN OFF L	Advisory	N/A
ELEC GEN OFF R	Advisory	N/A
ELEC GND HDLG BUS	Advisory	N/A
ELEC IFE/SEATS OFF	Advisory	N/A
ELEC STANDBY SYS	Advisory	N/A
ELT ON	Advisory	N/A
EMER LIGHTS	Advisory	N/A
ENG AUTOSTART L	Caution	N/A
ENG AUTOSTART OFF	Advisory	N/A
ENG AUTOSTART R	Caution	N/A
ENG CONTROL L	Advisory	N/A
ENG CONTROL R	Advisory	N/A
ENG EEC MODE L	Advisory	N/A
ENG EEC MODE R	Advisory	N/A
ENG FAIL L	Caution	N/A
ENG FAIL R	Caution	N/A
ENG FUEL FILTER L	Advisory	N/A
ENG FUEL FILTER R	Advisory	N/A
ENG FUEL VALVE L	Advisory	N/A
ENG FUEL VALVE R	Advisory	N/A
ENG IDLE DISAGREE	Advisory	N/A
ENG LIMIT PROT L	Caution	N/A
ENG LIMIT PROT R	Caution	N/A
ENG OIL FILTER L	Advisory	N/A
ENG OIL FILTER R	Advisory	N/A
ENG OIL PRESS L	Caution	N/A
ENG OIL PRESS R	Caution	N/A
ENG OIL TEMP L	Advisory	N/A

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
ENG OIL TEMP R	Advisory	N/A
ENG REV LIMITED L	Advisory	N/A
ENG REV LIMITED R	Advisory	N/A
ENG REVERSER L	Advisory	N/A
ENG REVERSER R	Advisory	N/A
ENG RPM LIMITED L	Advisory	N/A
ENG RPM LIMITED R	Advisory	N/A
ENG SHUTDOWN	Caution	N/A
ENG SHUTDOWN L	Caution	N/A
ENG SHUTDOWN R	Caution	N/A
ENG START VALVE L	Advisory	N/A
ENG START VALVE R	Advisory	N/A
ENG STARTER CUTOUT L	Caution	N/A
ENG STARTER CUTOUT R	Caution	N/A
ENG THRUST L	Caution	N/A
ENG THRUST R	Caution	N/A
EQUIP COOLING	Advisory	N/A
EQUIP COOLING OVRD	Advisory	N/A
FIRE APU	Warning	N/A
FIRE CARGO AFT	Warning	N/A
FIRE CARGO FWD	Warning	N/A
FIRE CARGO MAIN DECK	Warning	N/A
FIRE ENG L	Warning	N/A
FIRE ENG R	Warning	N/A
FIRE WHEEL WELL	Warning	N/A
FLAP/SLAT CONTROL	Caution	N/A
FLAPS DRIVE	Caution	N/A
FLAPS PRIMARY FAIL	Caution	N/A
FLIGHT CONTROL MODE	Caution	N/A
FLIGHT CONTROLS	Caution	N/A

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
FLT CONTROL VALVE	Advisory	N/A
FMC	Advisory	N/A
FMC L	Advisory	N/A
FMC MESSAGE	Advisory	N/A
FMC R	Advisory	N/A
FUEL AUTO JETTISON	Caution	N/A
FUEL CROSSFEED AFT	Advisory	N/A
FUEL CROSSFEED FWD	Advisory	N/A
FUEL DISAGREE	Advisory	N/A
FUEL FLOW ENG L	Advisory	N/A
FUEL FLOW ENG R	Advisory	N/A
FUEL IMBALANCE	Advisory	N/A
FUEL IN CENTER	Advisory	N/A
FUEL JETT NOZZLE L	Advisory	N/A
FUEL JETT NOZZLE R	Advisory	N/A
FUEL JETTISON MAIN	Advisory	N/A
FUEL JETTISON SYS	Caution	N/A
FUEL LOW CENTER	Advisory	N/A
FUEL PRESS ENG L	Caution	N/A
FUEL PRESS ENG L+R	Advisory	N/A
FUEL PRESS ENG R	Caution	N/A
FUEL PUMP AUX	Advisory	28-22-01
FUEL PUMP CENTER L	Advisory	N/A
FUEL PUMP CENTER R	Advisory	N/A
FUEL PUMP L AFT	Advisory	N/A
FUEL PUMP L FWD	Advisory	N/A
FUEL PUMP R AFT	Advisory	N/A
FUEL PUMP R FWD	Advisory	N/A
FUEL QTY LOW	Caution	N/A
FUEL SCAVENGE SYS	Advisory	N/A

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
FUEL TEMP LOW	Caution	N/A
FUEL VALVE APU	Advisory	N/A
GALLEY POWER	Advisory	25-30-01
GEAR DISAGREE	Caution	N/A
GEAR DOOR	Advisory	N/A
GND PROX SYS	Advisory	N/A
GPS	Advisory	N/A
GPS L	Advisory	N/A
GPS R	Advisory	N/A
HEAT PITOT C	Advisory	N/A
HEAT PITOT L	Advisory	N/A
HEAT PITOT L+C+R	Advisory	N/A
HEAT PITOT R	Advisory	N/A
HYD AUTO CONTROL C	Advisory	N/A
HYD AUTO CONTROL L	Advisory	N/A
HYD AUTO CONTROL R	Advisory	N/A
HYD OVERHEAT DEM C1	Advisory	N/A
HYD OVERHEAT DEM C2	Advisory	N/A
HYD OVERHEAT DEM L	Advisory	N/A
HYD OVERHEAT DEM R	Advisory	N/A
HYD OVERHEAT PRI C1	Advisory	N/A
HYD OVERHEAT PRI C2	Advisory	N/A
HYD OVERHEAT PRI L	Advisory	N/A
HYD OVERHEAT PRI R	Advisory	N/A
HYD PRESS DEM C1	Advisory	N/A
HYD PRESS DEM C2	Advisory	N/A
HYD PRESS DEM L	Advisory	N/A
HYD PRESS DEM R	Advisory	29-11-01
HYD PRESS PRI C1	Advisory	N/A
HYD PRESS PRI C2	Advisory	N/A

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
HYD PRESS PRI L	Advisory	N/A
HYD PRESS PRI R	Advisory	N/A
HYD PRESS SYS C	Caution	29-11-01
HYD PRESS SYS L	Caution	29-11-01
HYD PRESS SYS L+C	Caution	N/A
HYD PRESS SYS L+C+R	Caution	N/A
HYD PRESS SYS L+R	Caution	N/A
HYD PRESS SYS R	Caution	29-11-01
HYD PRESS SYS R+C	Caution	N/A
HYD QTY LOW C	Advisory	N/A
HYD QTY LOW L	Advisory	N/A
HYD QTY LOW L+C	Caution	N/A
HYD QTY LOW L+C+R	Caution	N/A
HYD QTY LOW L+R	Caution	N/A
HYD QTY LOW R	Advisory	N/A
HYD QTY LOW R+C	Caution	N/A
ICE DETECTOR	Status	N/A
ICE DETECTORS	Advisory	N/A
ICING ENG	Caution	N/A
ICING WING	Advisory	N/A
ILS ANTENNA	Caution	N/A
INSUFFICIENT FUEL	Advisory	N/A
LANDING ALTITUDE	Advisory	N/A
MAIN BATTERY DISCH	Advisory	N/A
MAIN DECK A/C	Advisory	N/A
MAIN GEAR BRACE L	Caution	N/A
MAIN GEAR BRACE R	Caution	N/A
MAIN GEAR STEERING	Advisory	N/A
NAV ADIRU INERTIAL	Caution	N/A
NAV UNABLE RNP	Caution	N/A

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
NO AUTOLAND	Caution	N/A
NO LAND 3	Caution	N/A
OUTFLOW VALVE AFT	Advisory	N/A
OUTFLOW VALVE FWD	Advisory	N/A
OVERHEAT ENG L	Caution	N/A
OVERHEAT ENG R	Caution	N/A
OVERSPEED	Warning	N/A
PACK L	Advisory	N/A
PACK L + R	Caution	N/A
PACK MODE L	Advisory	N/A
PACK MODE R	Advisory	N/A
PACK R	Advisory	N/A
PASS OXYGEN ON	Advisory	N/A
PILOT RESPONSE	Warning	N/A
PITCH DOWN AUTHORITY	Caution	N/A
PITCH UP AUTHORITY	Caution	N/A
PRI FLIGHT COMPUTERS	Caution	N/A
RADIO TRANSMIT	Advisory	N/A
RAT UNLOCKED	Advisory	N/A
RESERVE BRAKES/STRG	Advisory	N/A
RUNWAY POS	Advisory	N/A
RUNWAY SYS	Advisory	N/A
SATCOM	Advisory	N/A
SATCOM DATALINK	Advisory	N/A
SATCOM VOICE	Advisory	N/A
SATVOICE LOST	Advisory	N/A
SGL SOURCE AIR DATA	Advisory	N/A
SGL SOURCE DISPLAYS	Caution	N/A
SGL SOURCE RAD ALT	Advisory	N/A
SINGLE SOURCE F/D	Advisory	N/A

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
SINGLE SOURCE ILS	Caution	N/A
SLATS DRIVE	Caution	N/A
SLATS PRIMARY FAIL	Caution	N/A
SMOKE CREW REST F/D	Caution	N/A
SMOKE EQUIP COOLING	Caution	N/A
SMOKE LAV/COMPT	Advisory	N/A
SMOKE LAVATORY	Caution	N/A
SMOKE REST UPR DR 4	Caution	N/A
SMOKE REST UPR DR 5	Caution	N/A
SPEEDBRAKE EXTENDED	Caution	N/A
SPOILER ACTUATOR	Status	27-61-03
SPOILERS	Advisory	27-61-03
STAB GREENBAND	Advisory	N/A
STABILIZER	Warning	N/A
STABILIZER C	Advisory	N/A
STABILIZER CUTOUT	Advisory	N/A
STABILIZER R	Advisory	N/A
SUPRNMRY OXYGEN LOW	Advisory	N/A
SUPRNMRY OXYGEN ON	Advisory	N/A
TAIL SKID	Advisory	N/A
TAIL STRIKE	Caution	N/A
TCAS	Advisory	N/A
TCAS OFF	Advisory	N/A
TCAS RA CAPTAIN	Advisory	N/A
TCAS RA F/O	Advisory	N/A
TERR OVRD	Advisory	N/A
TERR POS	Advisory	N/A
THRUST ASYM COMP	Advisory	N/A
TIRE PRESS	Advisory	N/A
TRANSPONDER L	Advisory	N/A

SAMPLE

EICAS Messages Cross Reference List

Message	Level	MEL Item
TRANSPONDER R	Advisory	N/A
TRIM AIR L	Advisory	N/A
TRIM AIR R	Advisory	N/A
VHF DATALINK	Advisory	N/A
VNAV STEP CLIMB	Advisory	N/A
WINDOW FLT DECK L	Advisory	N/A
WINDOW FLT DECK R	Advisory	N/A
WINDOW HEAT	Advisory	N/A
WINDOW HEAT L FWD	Advisory	N/A
WINDOW HEAT L SIDE	Advisory	N/A
WINDOW HEAT R FWD	Advisory	N/A
WINDOW HEAT R SIDE	Advisory	N/A
WINDOWS	Advisory	N/A
WINDSHEAR SYS	Advisory	N/A

SAMPLE

21-25-01 Cabin Recirculation Fans

Interval	Installed	Required	Procedure
C	**2**	**1**	**(M)**

One may be inoperative provided:
a. The remaining fan operates normally.
b. The affected fan is deactivated.

MAINTENANCE (M)

Deactivate the affected sample fan.

SAMPLE

24-31-01 Battery Temperature Sensor

Interval	Installed	Required	Procedure
C	**1**	**0**	**(M) (O)**

May be inoperative provided the battery temperature is checked before each flight.

OPERATIONS (O)

Check the sample battery temperature on the ground.

SAMPLE

25-30-01 Galley Power Relays

Interval	Installed	Required	Procedure
D	**-**	**0**	

May be inoperative.

SAMPLE

27-61-03 Spoiler Actuators

Interval	Installed	Required	Procedure
C	**14**	**12**	**(M) (O)**

Two may be inoperative provided:
a. They are a symmetrical sample pair.
b. The affected panels are secured down.
c. The sample landing distance for SPOILERS is used.

OPERATIONS (O)

Use the sample SPOILERS landing distance.

MAINTENANCE (M)

Secure the affected sample spoiler panels down.

SAMPLE

28-22-01 Auxiliary Fuel Pump

Interval	Installed	Required	Procedure
C	**1**	**0**	**(O)**

May be inoperative provided takeoff performance is calculated with the onboard performance tool (OPT) sample pump-inoperative option.

OPERATIONS (O)

Select the sample pump-inoperative option.

SAMPLE

29-11-01 Hydraulic Pumps

Interval	Installed	Required	Procedure
C	**2**	**1**	**(M) (O)**

One may be inoperative provided:
a. The other sample pump on the same system operates normally.
b. The sample landing distance for HYD PRESS SYS R is used.

OPERATIONS (O)

Brief the sample crew on the reduced pump capacity.

MAINTENANCE (M)

Deactivate the affected sample pump.

SAMPLE

30-11-01 Wing Anti-Ice Valves

Interval	Installed	Required	Procedure
C	**2**	**0**	**(M) (O)**

May be inoperative closed provided the airplane is not operated in sample icing conditions.

PLACARD

Wing anti-ice - DO NOT USE

OPERATIONS (O)

Plan the sample route clear of icing conditions.

MAINTENANCE (M)

Secure the sample valves closed.

SAMPLE

32-42-04 Autobrake System (Including Autobrake Solenoid Valve)

32-42-04A Solenoid Verified Closed

Interval	Installed	Required	Procedure
C	**1**	**0**	**(M)**

May be inoperative provided:
a. The autobrake solenoid valve is verified closed.
b. The autobrake selector stays in the OFF position.

PLACARD

Autobrake selector - LEAVE OFF

MAINTENANCE (M)

Verify that the sample autobrake solenoid valve is closed.

SAMPLE

49-11-01 Auxiliary Power Unit (APU)

Interval	Installed	Required	Procedure
C	**1**	**0**	**(M) (O)**

May be inoperative provided:
a. Sample ground power and air are available at each stop.
b. The sample APU fuel valve is verified closed.

OPERATIONS (O)

Plan the sample flight without the APU.

MAINTENANCE (M)

Verify that the sample APU fuel valve is closed.

SAMPLE

Section 3 - Configuration Deviation List

32-12-01 Main Landing Gear Drag Strut Door

One may be missing provided:
a. The sample door fairing edges are smooth.
b. The sample gear door indication is checked.
The maximum sample airspeed is 250 KIAS.

Number Installed	Takeoff	Enroute Climb	Approach/Landing Climb
For -300ER:			
2	1,200 kg	650 kg	90 kg
For 777F:			
2	1,450 kg	700 kg	110 kg



Invented sample limitation, for demonstration only.

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL