
Sample Quick Reference Handbook

EICAS Ref sample library for the 777

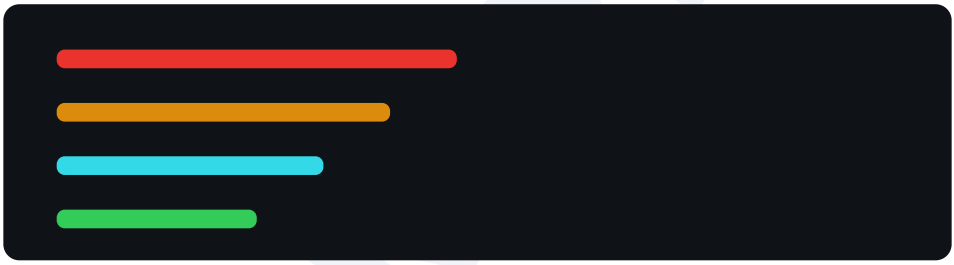

Fictional content for demonstration only.

Not a real manual. Never use it for flight.

SAMPLE

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

ADIRU/GPS DISAGREE **11.90**
ADS-B OUT L **11.90**
ADS-B OUT R **11.90**
AIR DATA SYS **11.90**
AIRSPEED LOW **15.90**
ALTITUDE ALERT **15.90**
ALTITUDE CALLOUTS **15.90**
ALTN ATTITUDE **10.90**
ALTN VENT SYS **2.90**
ANTI-ICE ENG L **3.90**
ANTI-ICE ENG R **3.90**
ANTI-ICE LEAK ENG L **3.90**
ANTI-ICE LEAK ENG R **3.90**
ANTI-ICE LOSS ENG L **3.90**
ANTI-ICE LOSS ENG R **3.90**
ANTI-ICE ON **3.90**
ANTI-ICE VLV WING L **3.90**
ANTI-ICE VLV WING R **3.90**
ANTI-ICE WING **3.90**
ANTISKID **14.90**
APU LIMIT **7.90**
APU SHUTDOWN **7.90**
AUTO SPEEDBRAKE **9.90**
AUTOBRAKE **14.1**
AUTOPILOT **4.90**
AUTOPILOT DISC **4.90**
AUTOTHROTTLE DISC **4.90**
AUTOTHROTTLE L **4.90**

SAMPLE

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

AUTOTHROTTLE R **4.90**
BARO SET DISAGREE **10.90**
BATTERY TEMP **6.2**
BLEED ISLN CLOSED C **2.90**
BLEED ISLN CLOSED L **2.90**
BLEED ISLN CLOSED R **2.90**
BLEED ISLN OPEN C **2.90**
BLEED ISLN OPEN L **2.90**
BLEED ISLN OPEN R **2.90**
BLEED LEAK BODY **2.90**
BLEED LEAK L **2.90**
BLEED LEAK R **2.90**
BLEED LEAK STRUT L **2.90**
BLEED LEAK STRUT R **2.90**
BLEED LOSS BODY **2.90**
BLEED LOSS BODY L **2.90**
BLEED LOSS BODY R **2.90**
BLEED LOSS WING L **2.90**
BLEED LOSS WING R **2.90**
BLEED OFF APU **2.90**
BLEED OFF ENG L **2.90**
BLEED OFF ENG R **2.90**
BOTTLE 1 DISCH ENG **8.90**
BOTTLE 2 DISCH ENG **8.90**
BOTTLE DISCH APU **8.90**
BOTTLE DISCH CARGO **8.90**
BRAKE SOURCE **14.90**
BRAKE TEMP **14.90**

SAMPLE

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

CABIN ALTITUDE **2.3**
CABIN ALTITUDE AUTO **2.90**
CABIN FAN L, R **2.1**
CABIN TEMPERATURE **2.90**
CARGO A/C LWR AFT **2.90**
CARGO A/C LWR FWD **2.90**
CARGO HEAT AFT **2.90**
CARGO HEAT BULK **2.90**
CHKL INCOMPLETE NORM **10.90**
CHKL NON-NORMAL **10.90**
CONFIG DOORS **15.90**
CONFIG FLAPS **15.90**
CONFIG GEAR **15.90**
CONFIG GEAR STEERING **15.90**
CONFIG PARKING BRAKE **15.90**
CONFIG RUDDER **15.90**
CONFIG SPOILERS **15.90**
CONFIG STABILIZER **15.90**
CONFIG WARNING SYS **15.90**
CREW OXYGEN LOW **1.90**
DATALINK LOST **5.90**
DATALINK SYS **5.90**
DET FIRE APU **8.90**
DET FIRE CARGO AFT **8.90**
DET FIRE CARGO FWD **8.90**
DET FIRE CARGO MAIN **8.90**
DET FIRE ENG L **8.90**
DET FIRE ENG R **8.90**

SAMPLE

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

DISPLAY SELECT PNL **10.90**
DOOR AFT CARGO **1.90**
DOOR BULK CARGO **1.90**
DOOR E/E ACCESS **1.90**
DOOR ENTRY 1L **1.90**
DOOR ENTRY 1R **1.90**
DOOR ENTRY 2L **1.90**
DOOR ENTRY 2R **1.90**
DOOR ENTRY 3L **1.90**
DOOR ENTRY 3R **1.90**
DOOR ENTRY 4L **1.90**
DOOR ENTRY 4R **1.90**
DOOR ENTRY 5L **1.90**
DOOR ENTRY 5R **1.90**
DOOR FWD ACCESS **1.90**
DOOR FWD CARGO **1.90**
DOOR MAIN DECK CARGO **1.90**
DOOR WING SLIDE L **1.90**
DOOR WING SLIDE R **1.90**
DOORS **1.90**
DUCT TEMP HIGH **2.2**
EFIS CONTROL PNL L **10.90**
EFIS CONTROL PNL R **10.90**
ELEC AC BUS L **6.90**
ELEC AC BUS R **6.90**
ELEC BACKUP GEN L **6.90**
ELEC BACKUP GEN R **6.90**
ELEC BACKUP SYS **6.90**

SAMPLE

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

ELEC BATTERY OFF **6.90**
ELEC BUS ISLN L **6.90**
ELEC BUS ISLN R **6.90**
ELEC CABIN/UTIL OFF **6.90**
ELEC GEN DRIVE L **6.90**
ELEC GEN DRIVE R **6.90**
ELEC GEN OFF APU **6.90**
ELEC GEN OFF L **6.90**
ELEC GEN OFF R **6.90**
ELEC GND HDLG BUS **6.90**
ELEC IFE/SEATS OFF **6.90**
ELEC STANDBY SYS **6.90**
ELT ON **1.90**
EMER LIGHTS **1.90**
ENG AUTOSTART L **7.90**
ENG AUTOSTART OFF **7.90**
ENG AUTOSTART R **7.90**
ENG CONTROL L **7.90**
ENG CONTROL R **7.90**
ENG EEC MODE L **7.90**
ENG EEC MODE R **7.90**
ENG FAIL L **7.90**
ENG FAIL R **7.90**
ENG FUEL FILTER L **7.90**
ENG FUEL FILTER R **7.90**
ENG FUEL VALVE L **7.90**
ENG FUEL VALVE R **7.90**
ENG IDLE DISAGREE **7.90**

SAMPLE

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

ENG LIMIT PROT L **7.90**
ENG LIMIT PROT R **7.90**
ENG OIL FILTER L **7.90**
ENG OIL FILTER R **7.90**
ENG OIL PRESS L **7.90**
ENG OIL PRESS R **7.90**
ENG OIL TEMP L **7.90**
ENG OIL TEMP R **7.90**
ENG REV LIMITED L **7.90**
ENG REV LIMITED R **7.90**
ENG REVERSER L **7.90**
ENG REVERSER R **7.90**
ENG RPM LIMITED L **7.90**
ENG RPM LIMITED R **7.90**
ENG SHUTDOWN **7.90**
ENG SHUTDOWN L **7.90**
ENG SHUTDOWN R **7.90**
ENG START VALVE L **7.90**
ENG START VALVE R **7.90**
ENG STARTER CUTOUT L **7.90**
ENG STARTER CUTOUT R **7.90**
ENG THRUST L **7.90**
ENG THRUST R **7.90**
EQUIP COOLING **2.90**
EQUIP COOLING OVRD **2.90**
FIRE APU **8.90**
FIRE CARGO AFT **8.90**
FIRE CARGO FWD **8.90**

SAMPLE

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

FIRE CARGO MAIN DECK **8.90**
FIRE ENG L **8.90**
FIRE ENG R **8.90**
FIRE WHEEL WELL **8.90**
FLAP/SLAT CONTROL **9.90**
FLAPS DRIVE **9.90**
FLAPS PRIMARY FAIL **9.90**
FLIGHT CONTROL MODE **9.90**
FLIGHT CONTROLS **9.90**
FLT CONTROL VALVE **9.90**
FMC **11.90**
FMC L **11.90**
FMC MESSAGE **11.90**
FMC R **11.90**
FUEL AUTO JETTISON **12.90**
FUEL CROSSFEED AFT **12.90**
FUEL CROSSFEED FWD **12.90**
FUEL DISAGREE **12.90**
FUEL FLOW ENG L **12.90**
FUEL FLOW ENG R **12.90**
FUEL IMBALANCE **12.90**
FUEL IN CENTER **12.90**
FUEL JETT NOZZLE L **12.90**
FUEL JETT NOZZLE R **12.90**
FUEL JETTISON MAIN **12.90**
FUEL JETTISON SYS **12.90**
FUEL LOW CENTER **12.90**
FUEL PRESS ENG L **12.90**

SAMPLE

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

FUEL PRESS ENG L+R **12.90**
FUEL PRESS ENG R **12.90**
FUEL PUMP AUX **12.1**
FUEL PUMP CENTER L **12.90**
FUEL PUMP CENTER R **12.90**
FUEL PUMP L AFT **12.90**
FUEL PUMP L FWD **12.90**
FUEL PUMP R AFT **12.90**
FUEL PUMP R FWD **12.90**
FUEL QTY LOW **12.90**
FUEL SCAVENGE SYS **12.90**
FUEL TEMP LOW **12.2**
FUEL VALVE APU **12.90**
GALLEY POWER **6.1**
GEAR DISAGREE **14.90**
GEAR DOOR **14.90**
GND PROX SYS **15.90**
GPS **11.90**
GPS L **11.90**
GPS R **11.90**
HEAT PITOT C **3.90**
HEAT PITOT L **3.90**
HEAT PITOT L+C+R **3.90**
HEAT PITOT R **3.90**
HYD AUTO CONTROL C **13.90**
HYD AUTO CONTROL L **13.90**
HYD AUTO CONTROL R **13.90**
HYD OVERHEAT DEM C1 ..... **13.90**

SAMPLE

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

EICAS Messages Section Index

HYD OVERHEAT DEM C2 ..... **13.90**
HYD OVERHEAT DEM L **13.90**
HYD OVERHEAT DEM R **13.90**
HYD OVERHEAT PRI C1 ..... **13.90**
HYD OVERHEAT PRI C2 ..... **13.90**
HYD OVERHEAT PRI L **13.90**
HYD OVERHEAT PRI R **13.90**
HYD PRESS DEM C1 ..... **13.90**
HYD PRESS DEM C2 ..... **13.90**
HYD PRESS DEM L **13.90**
HYD PRESS DEM R **13.90**
HYD PRESS PRI C1 ..... **13.90**
HYD PRESS PRI C2 ..... **13.90**
HYD PRESS PRI L **13.90**
HYD PRESS PRI R **13.90**
HYD PRESS SYS C **13.90**
HYD PRESS SYS L **13.90**
HYD PRESS SYS L+C **13.90**
HYD PRESS SYS L+C+R **13.90**
HYD PRESS SYS L+R **13.90**
HYD PRESS SYS R **13.1**
HYD PRESS SYS R+C **13.90**
HYD QTY LOW C **13.90**
HYD QTY LOW L **13.90**
HYD QTY LOW L+C **13.90**
HYD QTY LOW L+C+R **13.90**
HYD QTY LOW L+R **13.90**
HYD QTY LOW R **13.90**

SAMPLE

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

HYD QTY LOW R+C **13.90**
ICE DETECTORS **3.90**
ICING ENG **3.90**
ICING WING **3.90**
ILS ANTENNA **11.90**
INSUFFICIENT FUEL **11.90**
LANDING ALTITUDE **2.90**
MAIN BATTERY DISCH **6.90**
MAIN DECK A/C **2.90**
MAIN GEAR BRACE L **14.90**
MAIN GEAR BRACE R **14.90**
MAIN GEAR STEERING **14.90**
NAV ADIRU INERTIAL **11.90**
NAV UNABLE RNP **11.90**
NO AUTOLAND **4.90**
NO LAND 3 ..... **4.90**
OUTFLOW VALVE AFT **2.90**
OUTFLOW VALVE FWD **2.90**
OVERHEAT ENG L **8.90**
OVERHEAT ENG R **8.90**
OVERSPEED **15.90**
OXYGEN LOW (SADU Message) **1.90**
PACK L **2.90**
PACK L + R **2.90**
PACK MODE L **2.90**
PACK MODE R **2.90**
PACK R **2.90**
PASS OXYGEN ON **1.90**

SAMPLE

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

PILOT RESPONSE **15.90**
PITCH DOWN AUTHORITY **9.90**
PITCH UP AUTHORITY **9.90**
PRI FLIGHT COMPUTERS **9.90**
RADIO TRANSMIT **5.90**
RAT UNLOCKED **13.90**
RESERVE BRAKES/STRG **14.90**
RUNWAY POS **15.90**
RUNWAY SYS **15.90**
SATCOM **5.90**
SATCOM DATALINK **5.90**
SATCOM VOICE **5.90**
SATVOICE LOST **5.90**
SGL SOURCE AIR DATA **10.90**
SGL SOURCE DISPLAYS **10.90**
SGL SOURCE RAD ALT **10.90**
SINGLE SOURCE F/D **10.90**
SINGLE SOURCE ILS **11.90**
SLATS DRIVE **9.90**
SLATS PRIMARY FAIL **9.90**
SMOKE CREW REST F/D **8.90**
SMOKE EQUIP COOLING **8.90**
SMOKE LAV/COMPT **8.90**
SMOKE LAVATORY **8.90**
SMOKE REST UPR DR 4 ..... **8.90**
SMOKE REST UPR DR 5 ..... **8.90**
SPEEDBRAKE EXTENDED **9.90**
SPOILERS **9.1**

SAMPLE

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

STAB GREENBAND **9.90**
STABILIZER **9.90**
STABILIZER C **9.90**
STABILIZER CUTOUT **9.90**
STABILIZER R **9.90**
SUPRNMRY OXYGEN LOW **1.90**
SUPRNMRY OXYGEN ON **1.90**
TAIL SKID **14.90**
TAIL STRIKE **15.90**
TCAS **15.90**
TCAS OFF **15.90**
TCAS RA CAPTAIN **15.90**
TCAS RA F/O **15.90**
TERR OVRD **15.90**
TERR POS **15.90**
THRUST ASYM COMP **9.90**
TIRE PRESS **14.90**
TRANSPONDER L **11.90**
TRANSPONDER R **11.90**
TRIM AIR L **2.90**
TRIM AIR R **2.90**
VHF DATALINK **5.90**
VNAV STEP CLIMB **11.90**
WINDOW FLT DECK L **1.90**
WINDOW FLT DECK R **1.90**
WINDOW HEAT **3.90**
WINDOW HEAT L FWD **3.90**
WINDOW HEAT L SIDE **3.90**

SAMPLE

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Non-Normal Checklists Chapter EICAS

EICAS Messages Section Index

WINDOW HEAT R FWD **3.90**
WINDOW HEAT R SIDE **3.90**
WINDOWS **1.90**
WINDSHEAR SYS **15.90**

SAMPLE

Non-Normal Checklists Chapter Unann

Unannunciated Checklists Section Index

Aborted Engine Start L, R **7.90**
Airspeed Unreliable **10.1**
Automatic Unlock **1.90**
Bomb on Board **0.90**
Cabin Temp Cold **2.90**
Cabin Temp Hot **2.90**
CONFIG MN CGO DR **15.90**
Ditching **0.90**
DOOR MN CARGO **1.90**
Dual Eng Fail/Stall **7.90**
Eng In-Flight Start L, R **7.90**
Eng Lim/Surge/Stall L, R **7.90**
Eng Svr Damage/Sep L, R **7.90**
Evacuation **0.90**
FIRE CARGO MAIN DECK **8.90**
Fire Eng on Ground L, R **0.90**
Fire Eng Tailpipe L, R **8.90**
Fuel Jettison **12.90**
Fuel Leak **12.90**
Gear Lever Locked Down **14.90**
Ice Crystal Icing **3.90**
Jammed Flight Controls **9.90**
Lock Fail **1.90**
Overweight Landing **0.90**
Precautionary Disembarkation **0.90**
SDS FAULT **8.90**
Smoke or Fumes Removal **8.90**
Smoke, Fire or Fumes **8.90**

SAMPLE

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Non-Normal Checklists Chapter Unann

Unannunciated Checklists Section Index

Tail Strike **15.90**
Volcanic Ash **7.90**
Window Damage Fwd L, R **1.90**
Window Damage Side L, R **1.90**

SAMPLE

Normal Checklists Chapter NC

PREFLIGHT

Sample documents . . . . . **On board C**
Demo oxygen . . . . . **Checked C, F/O**
Training instruments . . . . . **Set C, F/O**
Sample fuel . . . . . **__ KGS C**

BEFORE START

Doors . . . . . **Closed C, F/O**
Seat belt signs . . . . . **ON F/O**

777-300ER

Cabin ready signal . . . . . **Received F/O**

777F

Courier area . . . . . **Secured F/O**
Parking brake . . . . . **Set C**
Takeoff data . . . . . **Checked C**

BEFORE TAXI

Sample anti-ice . . . . . **__ C**
Flight controls . . . . . **Checked C**
Demo lights . . . . . **ON F/O**

BEFORE TAKEOFF

Sample flaps . . . . . **__ PF**
Demo trim . . . . . **__ PF**
Training cabin . . . . . **Ready PM**

AFTER TAKEOFF

Sample gear . . . . . **UP PM**
Demo flaps . . . . . **UP PM**
Training pressure . . . . . **Checked PM**

SAMPLE

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Normal Checklists Chapter NC

DESCENT

Sample landing altitude . . . . . __ **PM**
Demo briefing . . . . . **Complete PF, PM**
Sample minimums . . . . . __ **PF, PM**

APPROACH

Sample altimeters . . . . . __ **PF, PM**
Demo approach aids . . . . . **Set PF**
Training speeds . . . . . **Checked PM**

LANDING

Sample brakes . . . . . __ **PF**
Landing gear . . . . . **DOWN PF**
Flaps . . . . . __ **PF**

SHUTDOWN

Sample fuel pumps . . . . . **OFF F/O**
Demo beacon . . . . . **OFF F/O**
Training hydraulics . . . . . __ **C**

SECURE

Sample navigation units . . . . . **OFF F/O**
Demo emergency lights . . . . . **OFF F/O**
Training packs . . . . . **OFF F/O**

SAMPLE

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Non-Normal Checklists Chapter NNC

Miscellaneous Section 0

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Miscellaneous

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Airplane Gen., Emer. Equip., Doors, Windows Section 1

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Airplane Gen., Emer. Equip., Doors, Windows

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Air Systems Section 2

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Air Systems

CABIN FAN L, R

Condition: A cabin recirculation fan has failed.

1 CABIN FAN switch (affected side) . . . . . **OFF**

2 Cabin temperature . . . . . **Monitor**

Note: Cabin air flow is slightly reduced.
Cabin temperature stays in the normal range.

■ ■ ■ ■

SAMPLE

Air Systems

DUCT TEMP HIGH

Condition: Duct temperature is above the sample limit.
Objective: To bring the duct temperature down.

1 TRIM AIR switch . . . . . **OFF**

Caution! Do not select the trim air switch ON again. The sample duct can overheat.

2 Choose one:

◇ DUCT TEMP HIGH message blanks:

■■■■

◇ DUCT TEMP HIGH message stays shown:

3 Plan to land at the nearest suitable airport.

■■■■

SAMPLE

Air Systems

CABIN ALTITUDE

Condition: The sample cabin altitude is above the limit.

1 Sample oxygen masks . . . . . **On**

2 Sample crew communication . . . . . **Establish**

3 Descend to the sample safe altitude.

Note: These steps are invented for the sample library and are not a real procedure.

■ ■ ■ ■

SAMPLE

Air Systems

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Anti-Ice, Rain Section 3

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Anti-Ice, Rain

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Automatic Flight Section 4

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Automatic Flight

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Communications Section 5

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Communications

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Electrical Section 6

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Electrical

GALLEY POWER

777-300ER

Condition: Power to the sample galleys is lost.

1 GALLEY switch . . . . . **OFF, then ON**

Note: The galleys stay unpowered if the message stays shown.

■ ■ ■ ■

GALLEY POWER

777F

Condition: Power to the courier area galley is lost.

1 COURIER GALLEY switch . . . . . **OFF, then ON**

■ ■ ■ ■

SAMPLE

Electrical

BATTERY TEMP

Condition: The sample battery temperature is high.

1 BATTERY switch . . . . . **OFF**

Note: The standby power sources are not available with the battery switch OFF.

2 Plan to land at the nearest suitable airport.

■ ■ ■ ■

SAMPLE

Electrical

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Engines, APU Section 7

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Engines, APU

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Fire Protection Section 8

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Flight Controls Section 9

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Flight Controls

SPOILERS

Condition: One or more sample spoiler panels have a fault.
Objective: To land with the remaining sample spoilers.

1 Sample speedbrake lever . . . . . **DOWN**

Note: Some sample spoiler panels may not extend in flight or on the ground.

2 Choose one:

◇ SPOILERS message blanks:

■ ■ ■ ■

◇ SPOILERS message stays shown:

3 Plan a flaps 25 or flaps 30 sample landing.

Note: Use the sample landing distance for SPOILERS in Performance Inflight.

4 Sample speedbrake lever (after landing) . . . . . **UP**

■ ■ ■ ■

SAMPLE

Flight Controls

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Flight Instruments, Displays Section 10

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Flight Instruments, Displays

AIRSPEED UNRELIABLE

Condition: The sample airspeed indications disagree.
Objective: To keep a safe sample flight path.

1 Sample autopilot . . . . . **Disconnect**

2 Sample autothrottle . . . . . **Disconnect**

3 Set the sample pitch and thrust.

> **Caution!** Do not follow a sample speed that disagrees with the other indications.

4 Check the sample pitch and thrust in the table.

Note: Refer to the Flight With Unreliable Airspeed table in the Performance Inflight chapter.

Note: These steps are invented for the sample library and are not a real procedure.

■ ■ ■ ■

SAMPLE

Flight Instruments, Displays

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Flight Management, Navigation Section 11

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Flight Management, Navigation

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Fuel Section 12

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Fuel

FUEL PUMP AUX

Condition: The auxiliary fuel pump pressure is low.

1 AUX PUMP switch . . . . . **OFF**

■ ■ ■ ■

SAMPLE

Fuel

FUEL TEMP LOW

Condition: Fuel temperature is at the sample limit.
Objective: To raise the fuel temperature.

1 Increase airspeed or descend to warmer air.

Note: A higher airspeed warms the fuel quickly.
Descending to warmer air warms it more slowly.

■ ■ ■ ■

SAMPLE

Fuel

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Hydraulics Section 13

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Hydraulics

HYD PRESS SYS R

Condition: Right sample hydraulic system pressure is low.

1 R SAMPLE PUMP selector . . . . . **OFF**

2 Choose one:

◇ HYD PRESS SYS R message blanks:

■ ■ ■ ■

◇ HYD PRESS SYS R message stays shown:

3 Sample right thrust reverser . . . . . **Inop**

Note: Use the sample landing distance for HYD PRESS SYS R in Performance Inflight.

4 Plan a flaps 30 sample landing.

■ ■ ■ ■

SAMPLE

Hydraulics

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Landing Gear Section 14

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Landing Gear

AUTOBRAKE

Condition: The autobrake is disarmed or has a fault.

1 AUTOBRAKE selector . . . . . **OFF**

Note: Use manual braking for the landing.

2 Use the landing distance for manual braking.

■ ■ ■ ■

SAMPLE

Landing Gear

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Non-Normal Checklists Chapter NNC

Warning Systems Section 15

Table of Contents

The checklists of this chapter are listed in the
EICAS Messages and Unannunciated Checklists indexes.

SAMPLE

Warning Systems

Not in the sample library

The checklists of this chapter are not part of the sample library. Import your own QRH to use them.

■■■■

SAMPLE

Performance Inflight - General

FLIGHT WITH UNRELIABLE AIRSPEED /

TURBULENT AIR PENETRATION

777-300ER - Pitch attitude (degrees) and %N1

Phase	200 T	250 T	300 T
Climb (flaps up)	8.0 / 88	7.5 / 90	7.0 / 92
Cruise	2.5 / 80	3.0 / 82	3.5 / 84
Descent	-1.0 / 45	-0.5 / 48	0.0 / 50
Holding (flaps up)	3.5 / 64	4.0 / 68	4.5 / 72
Approach (flaps 20)	5.0 / 60	5.5 / 63	6.0 / 66

Sample values, invented for demonstration only.
Never use them for flight.

SAMPLE

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Performance Inflight - Advisory Information

NON-NORMAL CONFIGURATION LANDING DISTANCE

HYD PRESS SYS R (Flaps 30)

VREF30 + 10

LANDING DISTANCE AND ADJUSTMENTS (M)

BRAKING CONFIGURATION	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ONE REV	REVERSE THRUST NO REV
Dry Runway									
MAX MANUAL	1310	43/-33	48	-63/129	21/-21	43/-43	68	86	215
AUTOBRAKE MAX	1430	43/-33	48	-63/129	21/-21	43/-43	68	0	0
AUTOBRAKE 3	1790	43/-33	48	-63/129	21/-21	43/-43	68	0	0
Good Reported Braking Action									
MAX MANUAL	1520	50/-40	55	-70/150	25/-25	50/-50	75	100	250
AUTOBRAKE MAX	1640	50/-40	55	-70/150	25/-25	50/-50	75	100	250
AUTOBRAKE 3	2000	50/-40	55	-70/150	25/-25	50/-50	75	100	250
Good To Medium Reported Braking Action									
MAX MANUAL	1740	58/-48	63	-78/174	29/-29	58/-58	83	116	290
AUTOBRAKE MAX	1860	58/-48	63	-78/174	29/-29	58/-58	83	116	290
AUTOBRAKE 3	2220	58/-48	63	-78/174	29/-29	58/-58	83	116	290
Medium Reported Braking Action									
MAX MANUAL	1960	65/-55	70	-85/195	32/-32	65/-65	90	130	325
AUTOBRAKE MAX	2080	65/-55	70	-85/195	32/-32	65/-65	90	130	325
AUTOBRAKE 3	2440	65/-55	70	-85/195	32/-32	65/-65	90	130	325
Medium To Poor Reported Braking Action									
MAX MANUAL	2230	74/-64	79	-94/222	37/-37	74/-74	99	148	370
AUTOBRAKE MAX	2350	74/-64	79	-94/222	37/-37	74/-74	99	148	370
AUTOBRAKE 3	2710	74/-64	79	-94/222	37/-37	74/-74	99	148	370
Poor Reported Braking Action									
MAX MANUAL	2540	84/-74	89	-104/252	42/-42	84/-84	109	168	420
AUTOBRAKE MAX	2660	84/-74	89	-104/252	42/-42	84/-84	109	168	420
AUTOBRAKE 3	3020	84/-74	89	-104/252	42/-42	84/-84	109	168	420

Sample values, invented for demonstration only.

MAX MANUAL assumes maximum sample manual braking.

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Performance Inflight - Advisory Information

NON-NORMAL CONFIGURATION LANDING DISTANCE

SPOILERS (Flaps 25)
VREF25
LANDING DISTANCE AND ADJUSTMENTS (M)

BRAKING CONFIGURATION	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ONE REV	REVERSE THRUST NO REV
Dry Runway									
MAX MANUAL	1420	47/-37	52	-67/141	23/-23	47/-47	72	94	235
AUTOBRAKE MAX	1540	47/-37	52	-67/141	23/-23	47/-47	72	94	235
AUTOBRAKE 3	1900	47/-37	52	-67/141	23/-23	47/-47	72	94	235
Good Reported Braking Action									
MAX MANUAL	1650	55/-45	60	-75/165	27/-27	55/-55	80	110	275
AUTOBRAKE MAX	1770	55/-45	60	-75/165	27/-27	55/-55	80	110	275
AUTOBRAKE 3	2130	55/-45	60	-75/165	27/-27	55/-55	80	110	275
Good To Medium Reported Braking Action									
MAX MANUAL	1880	62/-52	67	-82/186	31/-31	62/-62	87	124	310
AUTOBRAKE MAX	2000	62/-52	67	-82/186	31/-31	62/-62	87	124	310
AUTOBRAKE 3	2360	62/-52	67	-82/186	31/-31	62/-62	87	124	310
Medium Reported Braking Action									
MAX MANUAL	2120	70/-60	75	-90/210	35/-35	70/-70	95	140	350
AUTOBRAKE MAX	2240	70/-60	75	-90/210	35/-35	70/-70	95	140	350
AUTOBRAKE 3	2600	70/-60	75	-90/210	35/-35	70/-70	95	140	350
Medium To Poor Reported Braking Action									
MAX MANUAL	2400	80/-70	85	-100/240	40/-40	80/-80	105	160	400
AUTOBRAKE MAX	2520	80/-70	85	-100/240	40/-40	80/-80	105	160	400
AUTOBRAKE 3	2880	80/-70	85	-100/240	40/-40	80/-80	105	160	400
Poor Reported Braking Action									
MAX MANUAL	2710	90/-80	95	-110/270	45/-45	90/-90	115	180	450
AUTOBRAKE MAX	2830	90/-80	95	-110/270	45/-45	90/-90	115	180	450
AUTOBRAKE 3	3190	90/-80	95	-110/270	45/-45	90/-90	115	180	450

Sample values, invented for demonstration only.

MAX MANUAL assumes maximum sample manual braking.

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL

Performance Inflight - Advisory Information

NON-NORMAL CONFIGURATION LANDING DISTANCE

SPOILERS (Flaps 30)
VREF30
LANDING DISTANCE AND ADJUSTMENTS (M)

BRAKING CONFIGURATION	REF DIST	WT ADJ	ALT ADJ	WIND ADJ	SLOPE ADJ	TEMP ADJ	APP SPD ADJ	REVERSE THRUST ONE REV	REVERSE THRUST NO REV
Dry Runway									
MAX MANUAL	1360	45/-35	50	-65/135	22/-22	45/-45	70	90	225
AUTOBRAKE MAX	1480	45/-35	50	-65/135	22/-22	45/-45	70	0	0
AUTOBRAKE 3	1840	45/-35	50	-65/135	22/-22	45/-45	70	0	0
Good Reported Braking Action									
MAX MANUAL	1590	53/-43	58	-73/159	26/-26	53/-53	78	106	265
AUTOBRAKE MAX	1710	53/-43	58	-73/159	26/-26	53/-53	78	106	265
AUTOBRAKE 3	2070	53/-43	58	-73/159	26/-26	53/-53	78	106	265
Good To Medium Reported Braking Action									
MAX MANUAL	1820	60/-50	65	-80/180	30/-30	60/-60	85	120	300
AUTOBRAKE MAX	1940	60/-50	65	-80/180	30/-30	60/-60	85	120	300
AUTOBRAKE 3	2300	60/-50	65	-80/180	30/-30	60/-60	85	120	300
Medium Reported Braking Action									
MAX MANUAL	2060	68/-58	73	-88/204	34/-34	68/-68	93	136	340
AUTOBRAKE MAX	2180	68/-58	73	-88/204	34/-34	68/-68	93	136	340
AUTOBRAKE 3	2540	68/-58	73	-88/204	34/-34	68/-68	93	136	340
Medium To Poor Reported Braking Action									
MAX MANUAL	2340	78/-68	83	-98/234	39/-39	78/-78	103	156	390
AUTOBRAKE MAX	2460	78/-68	83	-98/234	39/-39	78/-78	103	156	390
AUTOBRAKE 3	2820	78/-68	83	-98/234	39/-39	78/-78	103	156	390
Poor Reported Braking Action									
MAX MANUAL	2650	88/-78	93	-108/264	44/-44	88/-88	113	176	440
AUTOBRAKE MAX	2770	88/-78	93	-108/264	44/-44	88/-88	113	176	440
AUTOBRAKE 3	3130	88/-78	93	-108/264	44/-44	88/-88	113	176	440

Sample values, invented for demonstration only.

MAX MANUAL assumes maximum sample manual braking.

SAMPLE LIBRARY - FICTIONAL CONTENT - NOT A REAL MANUAL