
GP60M

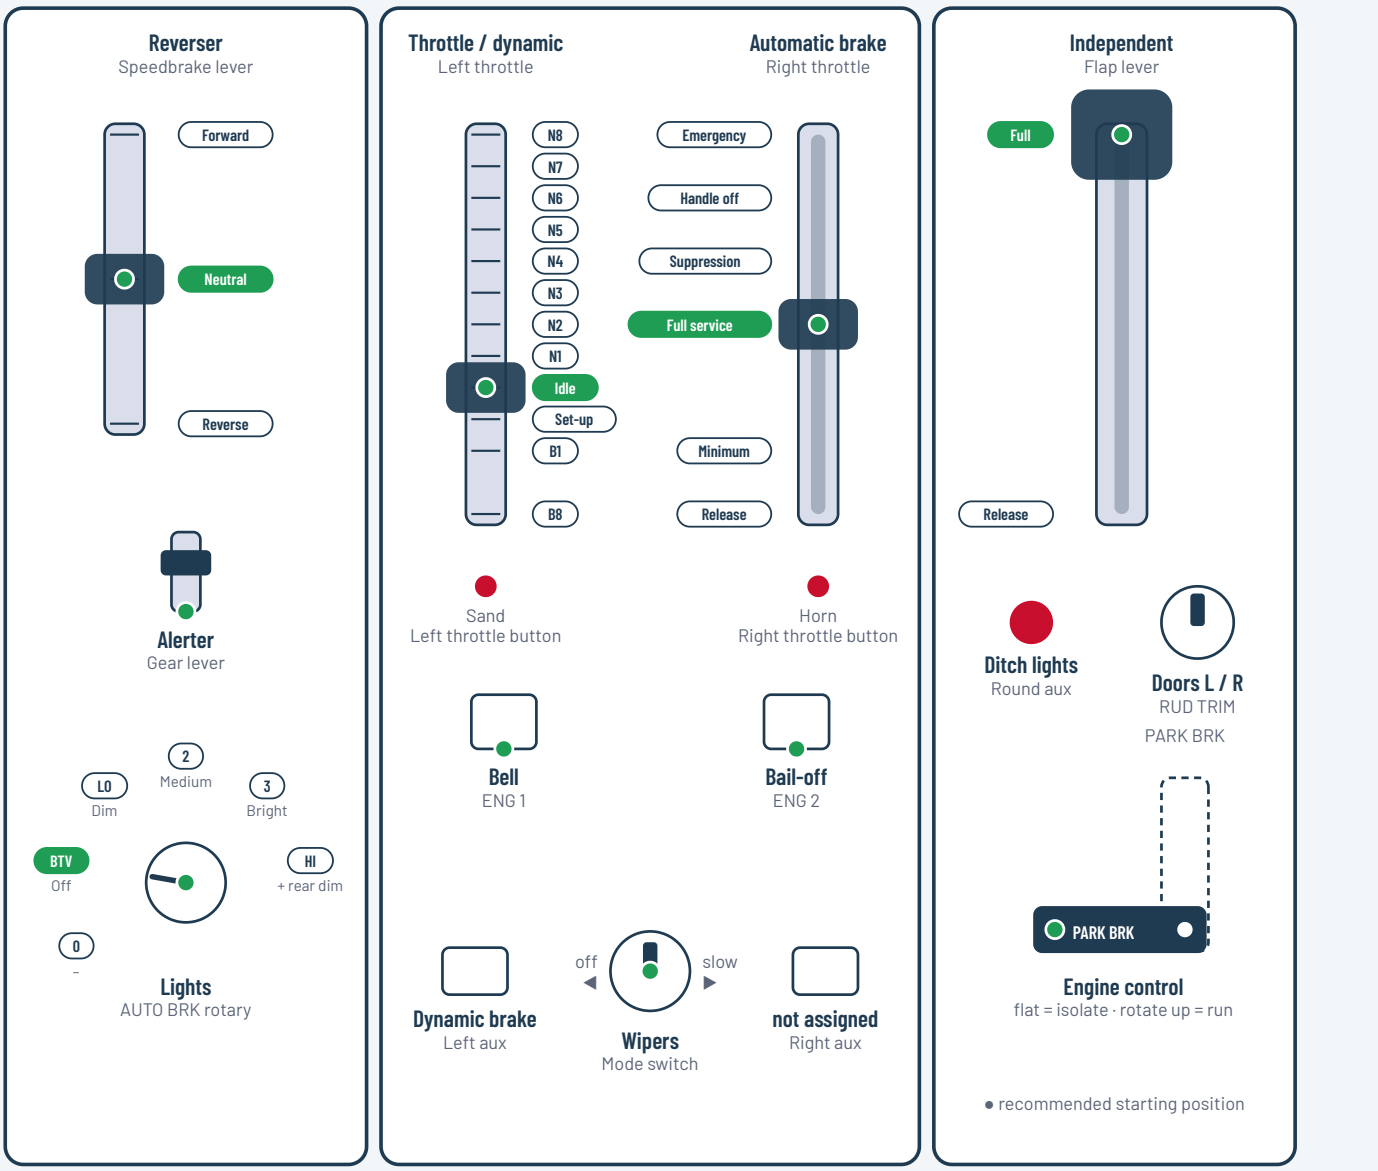

Cab setup

- PARK BRK up: engine control at Run; no key on this loco. The lead unit may load with a trailing-unit brake set-up (MU-2A valve, brake cut-out): set it to Lead in the cab
- Reverser from Neutral to Forward; dynamic brake switch on (left aux lit)
- Lights to Bright, ditch lights on (round aux)
- Independent at Full, automatic brake at Full service (parked); handle at Idle

Cleared to depart

- Check the signal; bell on (ENG 1)
- Automatic brake to Release, independent to Release (ENG 2 up to bail off)
- Handle away from you: N1 … N8
- Reset the alerter with the gear lever
- Brake: handle back through Idle and Set-up into the dynamic zone; automatic brake into the service zone for the stop, Emergency at the far end



© TheJAG