

## **BOYHOM R36S MANUAL**



## **Functional Description**

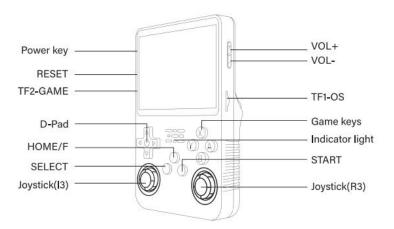

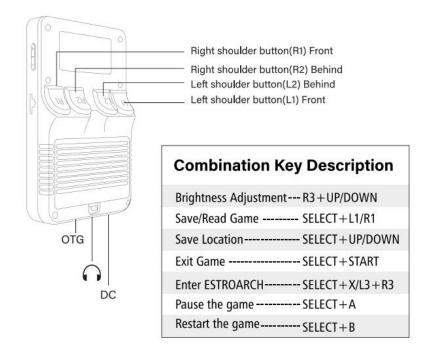

### **BOYHOM R36S MANUAL**

# **Special Instruction**

power on/off & memory card description

- You must insert the system card into TF1-OS position before starting up, then press the power key to power on and enter the system.
- Insert the copied game data card into the TF2-GAME bit, after booting inton The system, select(OPTIONS-ADVANCED-SWTCHT TO SD2 FOR ROMS), and display the content of the game card after running.

#### Warning instructions

Without a system card, the device will only turn on yellow light without picture Display. At this time, you must insert the system card and press the reset key To enter the system.

If the software sets SD2 and pulls out TF2-GAME and turns on, it will also appear that the system does not woke.

#### Charging instructions

- When the host red light flashes, please charge in in time. After connecting DC to charge, the indicator shows static red.
- If the red light starts flashing and does not charge in time, the host will be powered off automatically after about an hour of service. Please press the power key for 12 seconds until the green light is turned off and recharged. Afther about an hour. It will turn on normally. So please charge it in time.

#### Classical parameter



#### **Configuration List**

Video game handhe <b>l</b> d	*1
Type-c data line	*1
Certificate	*1
Product description	*1