良值 IINE



Pictures above for refence only

IINE WIRELESS CONTROLLER FOR PS4/PC

C E 中文说明书 Manual

Button Layout



Description of Switch button layout differences:

【Share】= 【—】　　【options】= 【+】

【PS】= 【Home】　　Touch pad =screenshot

Instructions Before Use

Before using the controller, it is important to follow these preparation steps to ensure optimal performance and functionality.

Compatibility

PS3/PS4　Phone/Pad　Switch　PC

Note: Can only support native gamepad games on iOS APP Store

Check steps

1.Package Checking
Before using the product, please check that everything is complete. Open the package and inspect the product and accessories for completeness and condition. If you find any issues or missing items, contact our customer service immediately for assistance.

2.Controller Inspection
Before proceeding with the setup, check that the controller is in good condition and has no obvious damage or cracks.

3.Check the Hardware
Check if the buttons are not sticking, the joysticks rotate smoothly, and the trigger buttons operate seamlessly.

4.Reading the Product Manual
Before using the product, carefully read the instruction manual. It provides essential information, usage guidelines, and important considerations. Thoroughly understanding the manual helps grasp the product's features, functions, and prevents unnecessary mistakes.

5.Power Supply and Charging Cable Checking
Examine the included charging cable for any issues. Firstly, inspect its appearance for abnormalities. Next, connect the charging cable to the charger and assess its functionality to ensure there are no issues.

6.Environment
When using this product, it's crucial to ensure the safety of the operating environment. For instance, extreme temperatures or high humidity may impact its performance. Before usage,assess the operating environment and take necessary safety precautions.

How to Connect

Connection to PS3/PS4

Wired Connection

For the first connection of this controller to a PS3/PS4, use the included USB cable to connect the controller to the console.



Wireless Connection

(Must be wired connection first to activate wireless mode): Press and hold the [PS] button until the top LED indicator flashes briefly then stays on.



Connection to Switch

Wired Connection

- Wired Connection in TV Mode: Use the included USB cable connect controller and Switch console. The top LED will flash briefly then stay on once connected successfully. (In wired connection to Switch, the controller supports 3.5mm audio.)



- Wired Connection in Handheld Mode:Use the included USB cable connect controller and Switch,The top LED will flash briefly then stay on once connected successfully. (To wake up the controller when powered off, press any button.)



Wireless Connection

- Select 【Controller-Change Grip/Order】 on the console's main menu.



- When the controller is in powered off mode, press and hold [Option] + [PS] buttons. The LED light will flash then stay on, indicating successful connection to console.



*After successfully connected, with a vibration feedback.

Controller Automatically Shuts Down

- When the controller is on, holding the "PS" button for 10 seconds turns it off.
- In reconnecting mode, if it can't connect within 15 seconds, it shuts down.
- During gameplay, if there's no input for 10 minutes, it shuts down.
- Exceeding a 10-meter connection range also triggers shutdown.

Connection to PC

Wireless Connection

1.Open computer settings, choose "Bluetooth & devices"



2. Press and hold the [Share] + [PS] button of the controller for 5~10 seconds.



3.Select [DUALSHOCK 4 Wireless Controller]. (There are stay-on LED light and vibration feedback when connected successfully).

Wired Connection

1.Plug the USB cable into the computer and the USB-C end into the controller to automatically connected to the PC platform.



2.When connected successfully, the LED stays on and with vibration feedback.


(In wired connection to PC, the controller supports 3.5mm audio; Press and hold [Share] + [Options] for 3s to change to X-input mode.)

Connection to Phone/Tablet

Android System



1.Open your phone settings and turn on Bluetooth

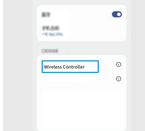

2.Press and hold the [Share] + [PS] button. When the light flashes briefly and then stays on, the connection is successful.

(Supported games include PPTV Game Hall, YY Play, Metal Slug 2, Cadillacs and Dinosaurs, Contra, and more.)

IOS System

(IOS13.0 or above version)



1.Open your phone settings and turn on Bluetooth



2.Press and hold the [Share] + [PS] button. When the light flashes briefly and then stays on, the connection is successful.

(Supports Metal Slug 3, Minecraft, and other iOS native games.)

Controller Function Setting


Controller Macro Function (set macros for one-button combo execution)

Start Macro:
Hold the MR/ML button for 3s until the controller LED flashes.

Set Macro:
Press the action button which you need to set in turn, the macro will record the button press intervals. (Up to 21 buttons can be programmed in a macro.)

Complete Macro:
After setting up, press MR/ML once to complete the macro setting.

Clean Macro:
Hold [MR]/[ML] for 8s; the LED will flash and with vibration feedback.

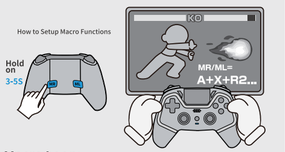

Macro Loop:
(Please set up the macro settings before starting the macro looping.)
Enable/Disable:Hold down the [Turbo] button, then press the macro setting button(MR/ML) to activate macro looping.



*With vibration feedback, and indicator light flashes

Turbo/Auto-fire Settings

Manual Fire
Press 【Turbo】 button+ any action button, you can set the specified action button as manual fire.

Auto Fire
Repeat press 【Turbo】 button + any action button, the manual fire turn into auto fire.

Clean Fire
Repeat the operation for the third time to cancel this button fire setting. Press and hold the 【Turbo】 button for 10s to clean all button fire.
(The indicator from flashes to stay on.)



Turbo Rate Adjustment:

(Speed up the turbo rate:
Press[Turbo] + push the right joystick upwards)

(Slow down the turbo rate:
Press[Turbo] + push the right joystick downwards)



5 shots/s　12 shots/s　20 shots/s

Light Function



Change Light Color
Hold [Turbo] + press [L3 joystick](each press will changes the light color)
Hold on 【Turbo】 + press

Adjust Brightness
Hold [Turbo] + [L3 joystick] (hold both buttons for gradual brightness adjustment. Release to maintain current brightness.)
Strong ⟷ Weak
【Turbo】 + Hold on long press for3S

Change Light Mode
Hold [Turbo] + press [L3 joystick] twice (each operation will changes the light mode)
Breathing Light Mode
↓
Colorful Rainbow Mode
↓
Turn Off Lights
Hold down 【Turbo】 press ×2

Other Functions

Charging Function



Please use a 5V 1A charger for charging. The breathing light is on during charging, and the light goes off when fully charged

Controller Reset



Long press the reset button to reset the controller. After resetting, follow the First-time connection method to connect the controller.

Routine maintenance

- **About Charging:**
  Recommend to use the 5V 1A charger to prevent damage to the controller circuit, and avoid high-power or PD fast charging chargers due to different charging protocols.
- **Dust Prevention:**
  To prevent joystick drifting caused by dust, use a storage bag or other protective measures to minimize dust impact on the inside of the game controller.
- **Firmware Update:**
  Check for the latest firmware updates on the IINE APP. If updates are available, follow the instructions provided to update the controller's firmware.
- **Ventilation Recommendation:**
  Store the controller in a dry environment to safeguard electronic components from potential damage due to humidity.
- **Protective Measures:**
  To safeguard vulnerable parts like joystick and joypad, use protective cases or films to minimize scratches and collisions during daily use.
- **Avoid Overuse:**
  Prevent overuse to extend battery life. Turn off the equipment when not in use.
- **Power Supply and Cable Inspection:**
  Regularly inspect the power cord and plug for integrity. Charge the controller periodically, as prolonged battery depletion can lead to battery damage.
- **Safety Performance Check:**
  Regularly examine the mechanical function of the product to ensure the proper operation of the device and other hardware.

Controller Q&A

- **Q: What should I do if the joystick drifts?**
  A:Calibrating Joysticks on Switch: Go to Switch [Settings > Controllers and Sensors], then follow the prompts to calibrate the joysticks.
  Calibrating Joysticks on PC: Follow the [Game Controllers] settings window to calibrate the joysticks.
- **Q: How long can the controller be used?**
  A: Under normal conditions, our controller can last for approximately 10 hours. Usage of features like vibration and Auto-fire affects battery consumption.
- **Q: How to Charge the Controller?**
  A: **Charging with Charging Cable:**Plug the provided charging cable into the controller's type-C port to charge it.
- **Q: What is the operating current and Voltage?**
  A: Working Voltage:4.5V-5.5V;Working Current:4.5V-5.5V;
- **Q: How to reset the controller?**
  A: Long press the reset button to reset the controller.
- **Q: How to calibrate the controller's triggers and joysticks?**
  Frequent use and long periods of operation may cause wear and performance degradation, which can result in reduced accuracy. Follow these steps to calibrate the controller's triggers and joysticks:
  Step 1:
  With the controller powered off, set the triggers to analog trigger mode.
  Then press [Turbo + Options + PS] simultaneously. The LED light will flash quickly, indicating that the controller has entered calibration mode.
  Step 2:
  Calibrate Triggers and Joysticks
  Once in calibration mode, press both the left and right triggers four times simultaneously (this action calibrates the triggers). Then, rotate both the left and right joysticks in a circular motion three times (this action calibrates the joysticks). The LED light will stay on for 2 seconds, and the controller will automatically power off, completing the calibration.



良值 IINE



1. 主机连接（PS5/PS4）

PS4/PC用透明手柄

IINE Wireless Controller for PS4/PC

产品图片仅供参考
Pictures above for refence only

C E 中文说明书 Manual

按键分配



参数：

尺寸:155.5*107.3*52mm
重量:290g
材质:ABS+铜
工作电压:4.5V-5.5V

标配:
手柄*1 说明书*1 1m数据线*1
休眠电流:15uA
工作电流:150-200mA

使用前准备

感谢您使用我公司产品，
使用产品前，请仔细阅读以下信息。

支持平台

PS3/PS4主机　手机/平板　Switch　PC

注：ios系统仅限原生游戏使用

检查步骤

1.确认产品完整性
在开始使用产品之前，我们需要仔细阅读产品的说明书。说明书通常包括产品的基本信息、使用方法、注意事项等内容。通过仔细阅读说明书，我们可以更好地了解产品的特点和功能，并且可以避免一些不必要的错误操作。

2.外观检查
检查产品外壳是否完好，没有明显的损伤或裂痕。

3.硬件检查
按键是否卡顿，摇杆是否转动顺畅，板机键是否流畅。

4.阅读产品说明书
在使用产品之前，我们需要仔细阅读产品的说明书。说明书通常包括产品的基本信息、使用方法、注意事项等内容。通过仔细阅读说明书，我们可以更好地了解产品的特点和功能，并且可以避免一些不必要的错误操作。

5.检查电源和电源线
检查所带的充电线是否正常。首先，查看充电线的外观是否有异常；其次，连接充电器使用充电线，检查充电线功能是否有问题。

6.确保使用环境安全
在使用产品时，我们需要确保使用环境的安全。例如，在甜高温或超低温及极度潮湿的环境里使用，使用之前，我们应该对使用环境进行评估，并采取必要的安全措施。

7.安装要求
请使用相对应的机型进行匹配安装，请不要强行安装到不属于该产品适配机型上，并按照要求进行正确的安装。

如何连接

首次连接PS3/PS4主机

- 首次连接时，需要用一条USB线先与PS主机进行有线通信。通信过程中，长按PS键，顶部LED灯闪烁片刻后常亮，即为连接上主机。



*连接成功后，手柄给予震动反馈

Switch连接——有线连接

- 首次连接时，Switch是TV模式下，需要用一条USB线与Switch主机底座进行有线通信。通信过程中，顶部LED灯闪烁片刻后常亮，即为连接上主机。有线模式下，手柄支持3.5mm音频。



*连接成功后，手柄给予震动反馈

- 首次连接时，支持C-线，一端连接手柄，另一端连接Switch主机，进行有线连接。通信过程中，顶部LED灯闪烁片刻后常亮，即为连接上主机。手柄关机状态下，需按手柄任意键，唤醒手柄；



*连接成功后，手柄给予震动反馈

Switch连接——无线连接

- 在主机主界面，选择【手柄-更改握法/顺序】



- 手柄在关机状态下，长按【Options】键+【PS】键，LED灯闪烁片刻后常亮，即为连接上主机。



*连接成功后，手柄给予震动反馈

手柄自动关机

- 当手柄在开机状态下，长按【PS】键10s,手柄灯熄灭，手柄关机。
- 当手柄在回连状态下，15s后无法连接，自动关机。
- 当手柄在联机状态下，10min内无按键操作，自动关机。
- 当手柄位置超于10米连接距离时，自动关机。

连接PC

无线连接

1.长按【Share】键+【PS】键5~10s,



2.打开电脑系统设置，选择蓝牙和其他设备并连接。



3.选择DUALSHOCK 4 Wireless Controller，连接成功后LED灯常亮，手柄给予震动反馈。

有线连接

1.一端插USB至电脑，一端口插手柄，自动识别PC平台。



2.连接成功后，LED灯常亮。


(USB有线连接默认是PS4有线音频，长按【Share】键+【Options】键3s,切换X-input模式，设备显示为Controller(XBOX 360 For Windows) Xbox 360 Controller for Windows；)

连接手机/平板

安卓



1.打开手机设置，开启蓝牙。



2.长按【Share】键+【PS】键，灯光闪烁片刻后常亮，即连接成功。
（支持葡萄游戏厅，约战，合金弹头2，恐龙快打，魂斗罗等）

IOS (ios13以上版本)



1.打开手机设置，开启蓝牙。



2.长按【Share】键+【PS】键，灯光闪烁片刻后常亮，即连接成功。
（支持合金弹头3，我的世界等ios原生游戏）

手柄功能设置

手柄宏功能(设置宏，一键放连招)

进入定义： 按住MR/ML键3-5秒，直至手柄LED灯闪烁，松手设置宏编程操作。此时LED灯将变为闪烁；

按键设置： 依次按下需要设置的功能键，宏定义会记录按键间隔时间。（宏编程最多可编程21个按键。）

完成定义： 设置完成后，按一下MR/ML键，完成宏定义设置。

清除定义： 长按MR/ML键8秒后，LED灯闪烁并震动提示。

如何设置宏：



MR/ML可设置为组合键，同时记忆按键和间隔时间，设置完成即可一键放出组合连招。

宏循环： 请先设置好宏录制；
开启/关闭：先按住连发键，再按宏编程按键，即可实现宏编程循环。

*指示灯闪烁

连发/自动连发设置

手动连发
第一次按Turbo+任意一个动作键
可设置指定的按键手动连发

自动连发
第二次重复第一次连招操作
可将手动连发的按键设置为自动连发

清除连发
第三次重复操作，即可取消此按键的连发

清除所有按键的连发：
长按Turbo键10秒
(指示灯恢复常亮)





设置连发键，手柄实现自动连击

连发速率调节：




(连发+摇杆往上，加快连发速率)
(连发+摇杆往下，减慢连发速率)

每秒连续连发 5 下　每秒连续连发 12 下　每秒连续连发 20 下

灯光功能



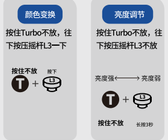

其他功能



连接状态：会以常亮的方式显示。
关机充电：会以呼吸灯方式显示，充满后灯熄灭。
NS模式下：进入【手柄】查看电量
PS4模式下：进入【装备】左下角查看电量



长按重置键10s，进行复位。
复位后，需要按首次连接方法，连接手柄

日常维护

- **关于充电：**
  请不要使用大功率或PD快充充电器给手柄充电;充电器充电协议的不一样,可能会导致手柄电路损坏;建议使用5V 1A充电器给手柄充电。
- **防尘措施：**
  游戏手柄内部受到粉尘干扰后,容易产生漂移的可能,建议使用收纳包或其他防护措施,以减少灰尘对产品内部的影响。
- **软件和固件更新：**
  定期检查产品的软件和固件更新,及时安装以获取最新的功能及产品优化。
- **保持通风：**
  建议放在干燥的环境进行保存,确保产品内部的电子元器件不被潮湿的环境破坏掉。
- **防护措施：**
  对于易受损部分,如摇杆和机身,建议使用保护套或保护膜,以减少日常使用中的划痕和碰撞。
- **避免过度使用：**
  避免产品的过度使用,超长时间使用产品可能导致电池寿命减短。在不需要使用时,将设备关闭。
- **电源和电线检查：**
  定期检查电源线和插头的完好性,并且给手柄充电。电池长期处于亏电状态会导致电池损坏。
- **定期检查安全性能：**
  定期检查产品的机械功能,确保装置等硬件正常运作。

产品答疑

- **游戏手柄漂移怎么办？**
  您好，手柄摇杆在运输的过程中受到碰撞，可能会导致手柄漂移；
  ·NS模式下校准方式:设置【手柄与感应器】根据提示校准摇杆即可。
  ·电脑模式下校准方式：设置-控制器-校准及高级设置-自行调整手柄死区。
  ·ps4模式下校准方式：手柄水平方桌面不动两秒自动校正。
- **游戏手柄能使用多长时间？**
  您好，我们手柄在正常状态下，可以连续使用10个小时，具体看您使用手柄的情况,如果您长时间使用震动,会耗电更快,反之也一样。
  (在灯光最动不开的情况下续航可达20小时左右)
- **如何给产品充电？**
  充电线充电:用附送的充电线插到手柄充电口上，即可给手柄充电。
- **如何给手柄复位？**
  轻按重置键10s即可将手柄复位。
- **如何校准手柄板机和3D？**



  进入校准模式：
  手柄在关机状态下，将扳机拨到长行程，
  短按【Turbo+Options+PS】组合键进行校准，通道灯快闪。

  校准扳机和3D：进入到校准模式后，缓慢按下左右扳机4次，摇左右3D转圈3次(先校准扳机，再校准3D),校准成功后，通道灯常亮2秒，自动关机。