

Mixer Buddy XL

TIMBRE INDUSTRIES CO

MIDI Chart

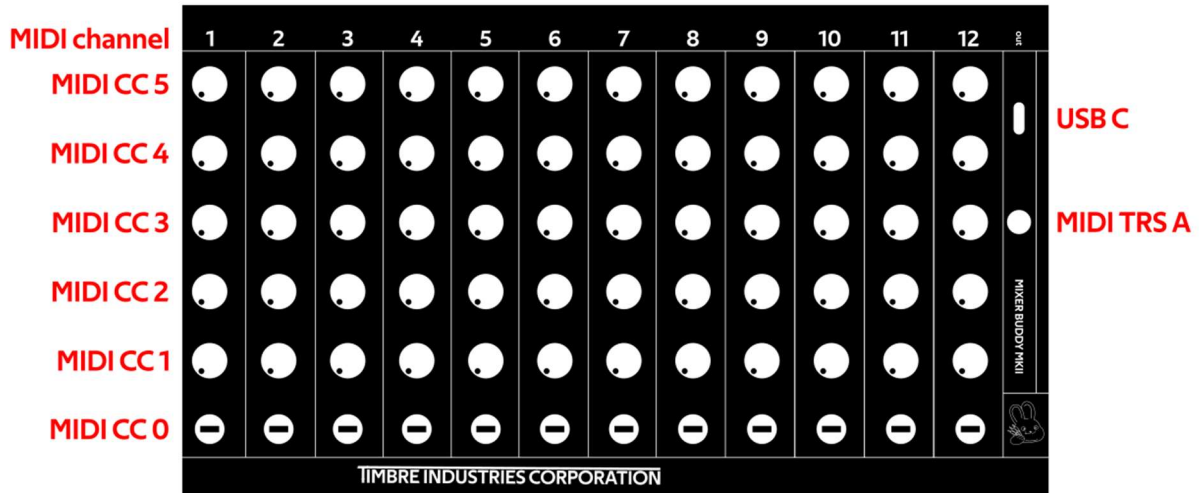


Figure 1: Default MIDI mapping

Default configuration

Thank you for your purchase of Mixer Buddy XL! This short guide will explain the MIDI options that the controller has and how to edit MIDI CCs. In Figure 1, you can see the default mapping of the controller. Straight out of the box, this is perfectly mappable with the Bluebox Eurorack mixer in mind. It will give you full control over mutes and five parameters for twelve channels. Or twelve channels and a dedicated channel for a reverb or delay effect. Whichever way you map it! Mixer Buddy sends MIDI out simultaneously over USB C and TRS A. So you could potentially split the controller over different modules.

Editing: Setting up Arduino IDE

Other MIDI hosts might require different CCs. You can edit the CCs of Mixer Buddy with the Arduino IDE file that's attached in the .zip. For this, you will need the [Arduino IDE](#) software. In the library manager, you need to download [Control Surface by Pieter P](#), see Figure 2. You will also need the [Teensyduino library](#), just follow the instructions in that link and after that, install Teensy in the board manager (see figure 3). Restart Arduino after this. You can then connect your Mixer Buddy to your Eurorack power, turn the power on and then connect Mixer Buddy to your PC through the front panel, or with the micro USB connection directly. Do note that Mixer Buddy needs to be powered by it's 10 pin connector, otherwise it will not be found by your PC.

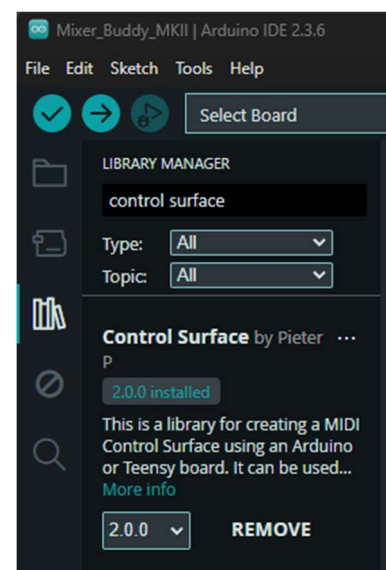


Figure 2: Installing Control Surface

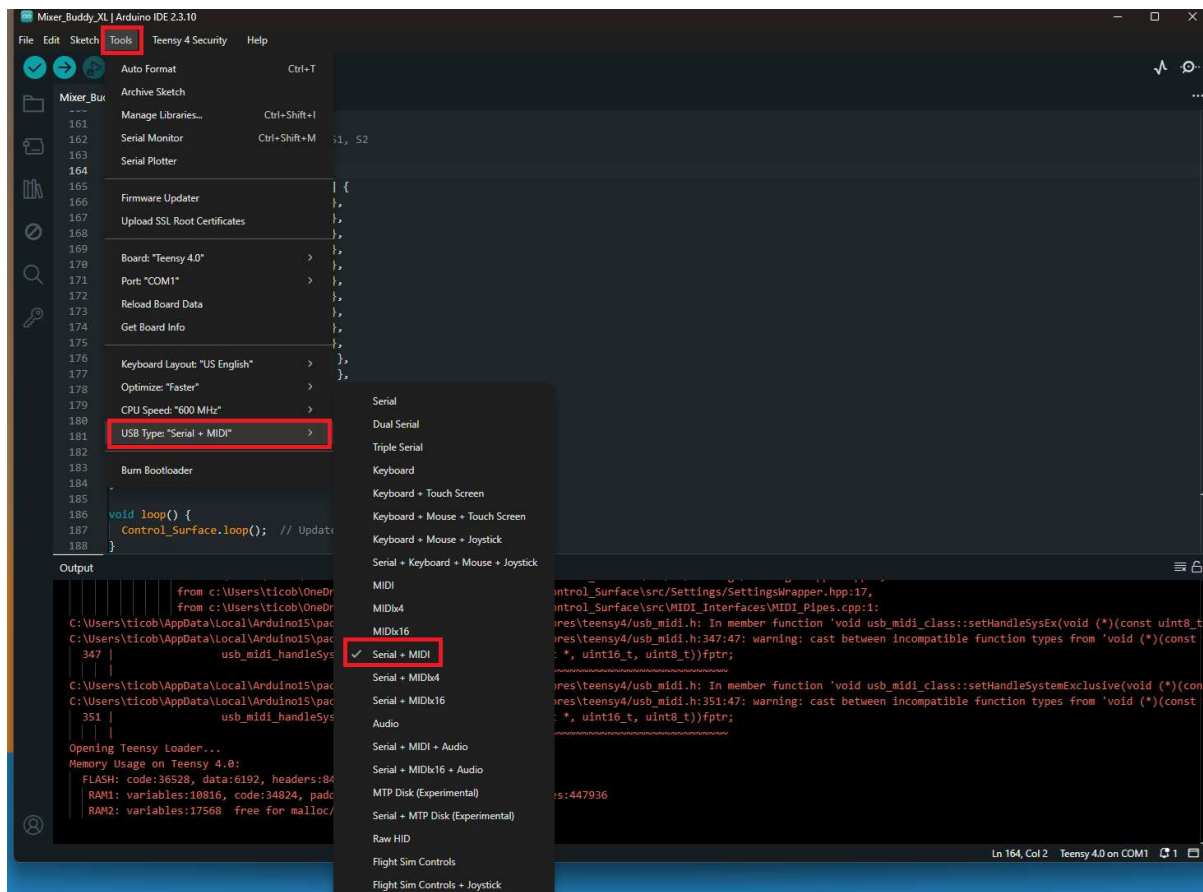


Figure 3: USB type of the Teensy

For the final step, you need to select the USB Type for the Teensy. Under 'Tools' there's 'USB Type:', that needs to be set to 'Serial + MIDI', as in the screenshot above. After editing, just select the plugged in Teensy 4.0 in the Select board and upload your file. Done!

Editing: Using Arduino IDE

Switching out CCs is easy. Below the image, in Table 1, is a list of which CC button and potentiometer is mapped to what input pin in the Arduino file. The IDE file also has instructions on how to read and edit the CCs inside it. If you want to change the controls to something else than CCs, you can program this yourself as well. You could even map banks and macros, though this will take some programming. If you're interested in the possibilities, take a look at the [Control Surface](#) library!

IDE control naming

In table 1 you can find all the names of the CCs and their connection pins used in IDE in a table. This corresponds with the numbers used for the pots and switches used in figure 5. If any other questions arise, you can always send a message through [Etsy](#). Happy controlling and patching!

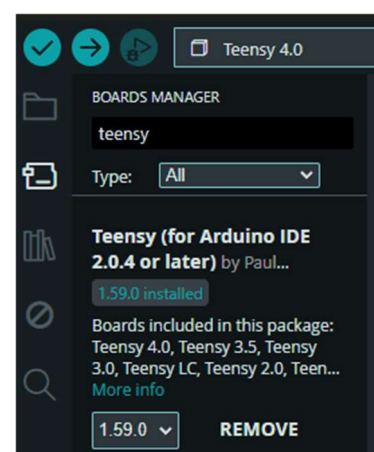


Figure 4: Installing Teensyduino

29	5	4	mux2.pin(5)	Potentiometer
30	5	5	mux2.pin(4)	Potentiometer
31	6	0	CCButton button6, 11	Switch
32	6	1	mux2.pin(13)	Potentiometer
33	6	2	mux2.pin(12)	Potentiometer
34	6	3	mux2.pin(11)	Potentiometer
35	6	4	mux2.pin(10)	Potentiometer
36	6	5	mux2.pin(9)	Potentiometer
37	7	0	CCButton button7, 12	Switch
38	7	1	mux3.pin(2)	Potentiometer
39	7	2	mux3.pin(1)	Potentiometer
40	7	3	mux3.pin(0)	Potentiometer
41	7	4	mux2.pin(15)	Potentiometer
42	7	5	mux2.pin(14)	Potentiometer
43	8	0	CCButton button8, 18	Switch
44	8	1	mux3.pin(7)	Potentiometer
45	8	2	mux3.pin(6)	Potentiometer
46	8	3	mux3.pin(5)	Potentiometer
47	8	4	mux3.pin(4)	Potentiometer
48	8	5	mux3.pin(3)	Potentiometer
49	9	0	CCButton button9, 19	Switch
50	9	1	mux3.pin(12)	Potentiometer
51	9	2	mux3.pin(11)	Potentiometer
52	9	3	mux3.pin(10)	Potentiometer
53	9	4	mux3.pin(9)	Potentiometer
54	9	5	mux3.pin(8)	Potentiometer
55	10	0	CCButton button9, 20	Switch
56	10	1	mux4.pin(1)	Potentiometer
57	10	2	mux4.pin(0)	Potentiometer
58	10	3	mux3.pin(15)	Potentiometer
59	10	4	mux3.pin(14)	Potentiometer
60	10	5	mux3.pin(13)	Potentiometer
61	11	0	CCButton button9, 21	Switch
62	11	1	mux4.pin(6)	Potentiometer
63	11	2	mux4.pin(5)	Potentiometer
64	11	3	mux4.pin(4)	Potentiometer
65	11	4	mux4.pin(3)	Potentiometer
66	11	5	mux4.pin(2)	Potentiometer
67	12	0	CCButton button9, 22	Switch
68	12	1	mux4.pin(11)	Potentiometer
69	12	2	mux4.pin(10)	Potentiometer
70	12	3	mux4.pin(9)	Potentiometer
71	12	4	mux4.pin(8)	Potentiometer
72	12	5	mux4.pin(7)	Potentiometer