How to Setup console log on Tinker Board/Tinker Board S

Change log

2017/06/29	Init version	1.0	Yi-hsin_hung
2017/08/16	Enable more logs	1.0.1	Jamess Huang
2017/08/24	Update putty settings	1.0.2	Jamess Huang
2017/08/24	Update putty settings	1.0.3	Jamess Huang
2017/10/27	Change UART port from port 1 to port 3	1.0.4	Jamess Huang
2018/02/05	set hw_intf.conf	1.0.5	Jamess Huang
2018/03/05	Fix typo	1.0.6	Jamess Huang

- **UART Cable**

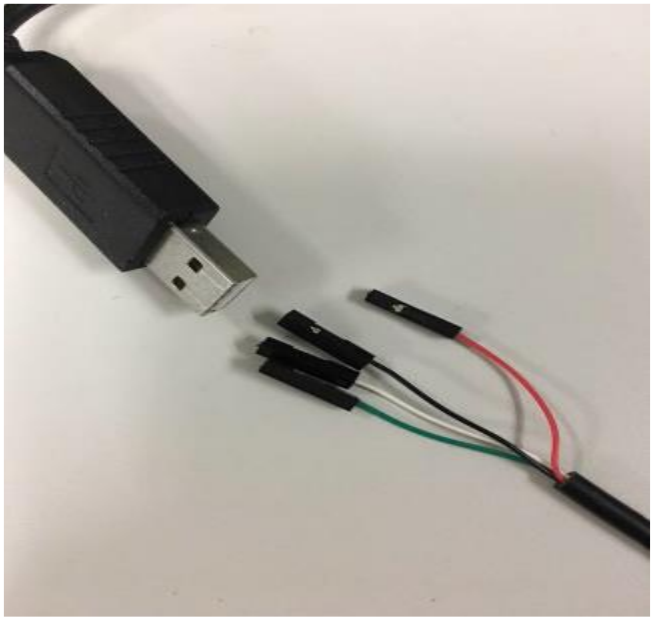

- **Setup environment**

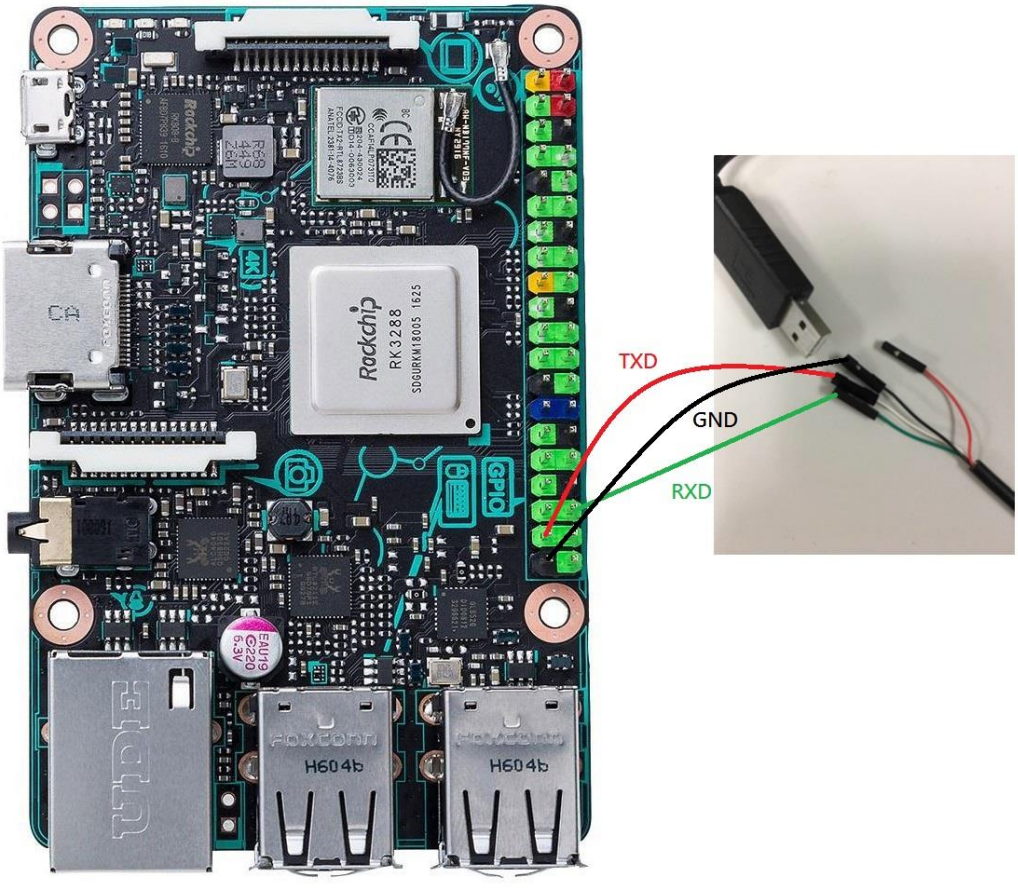

- **Open putty and setup the parameter**

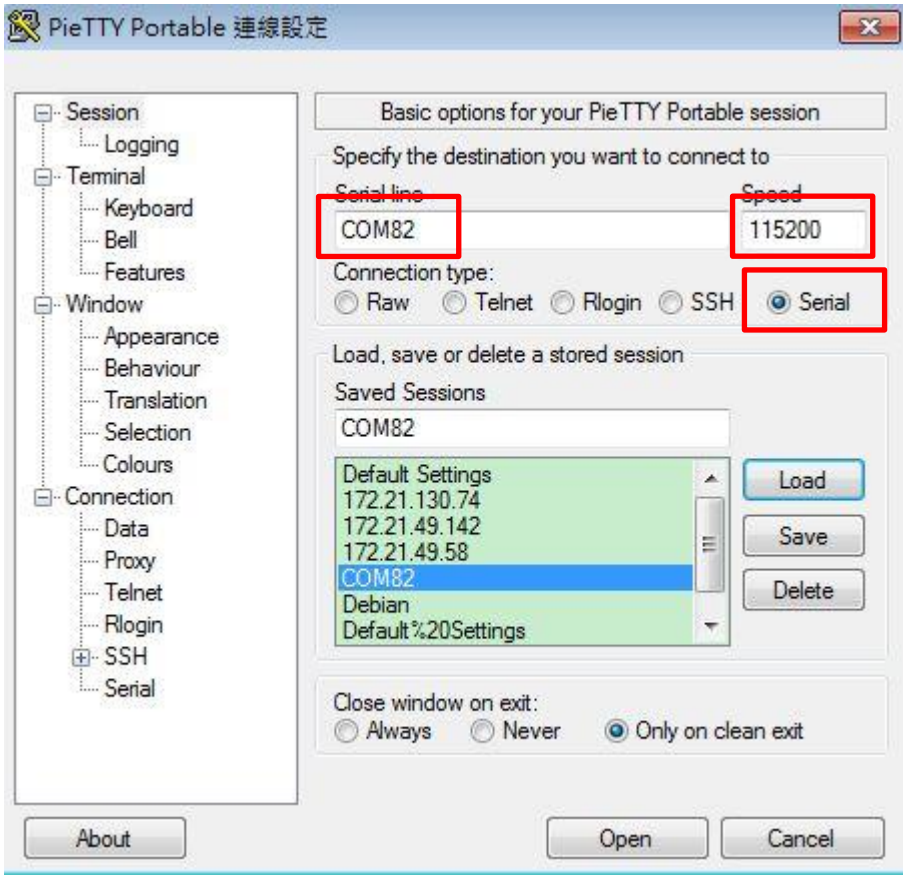

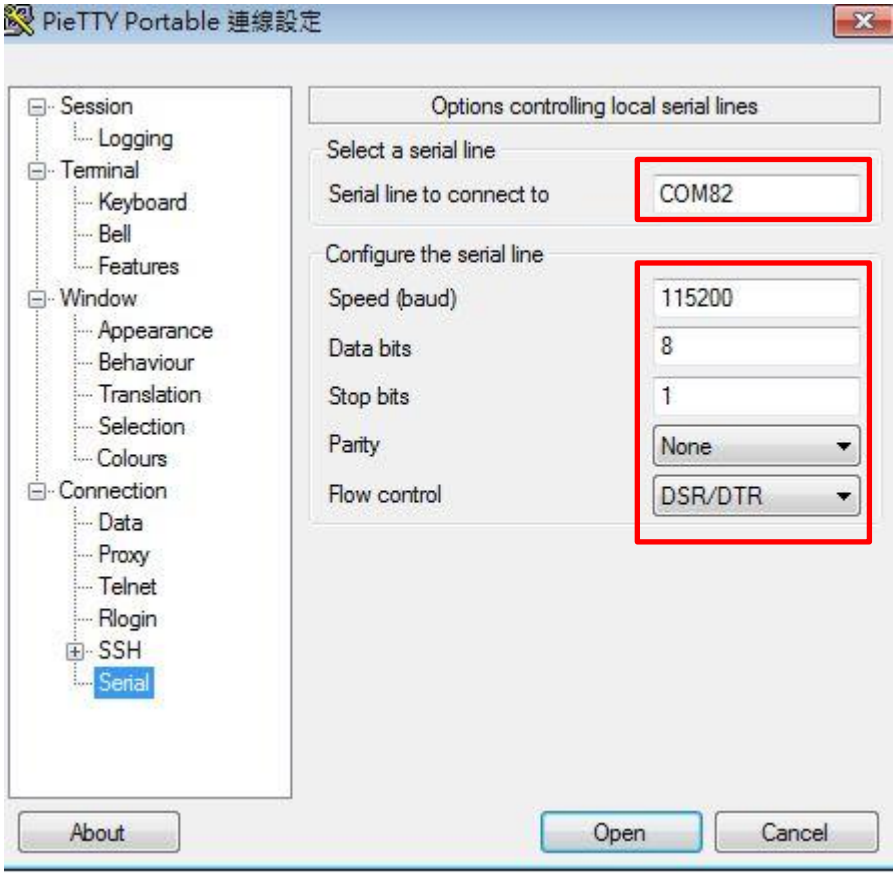

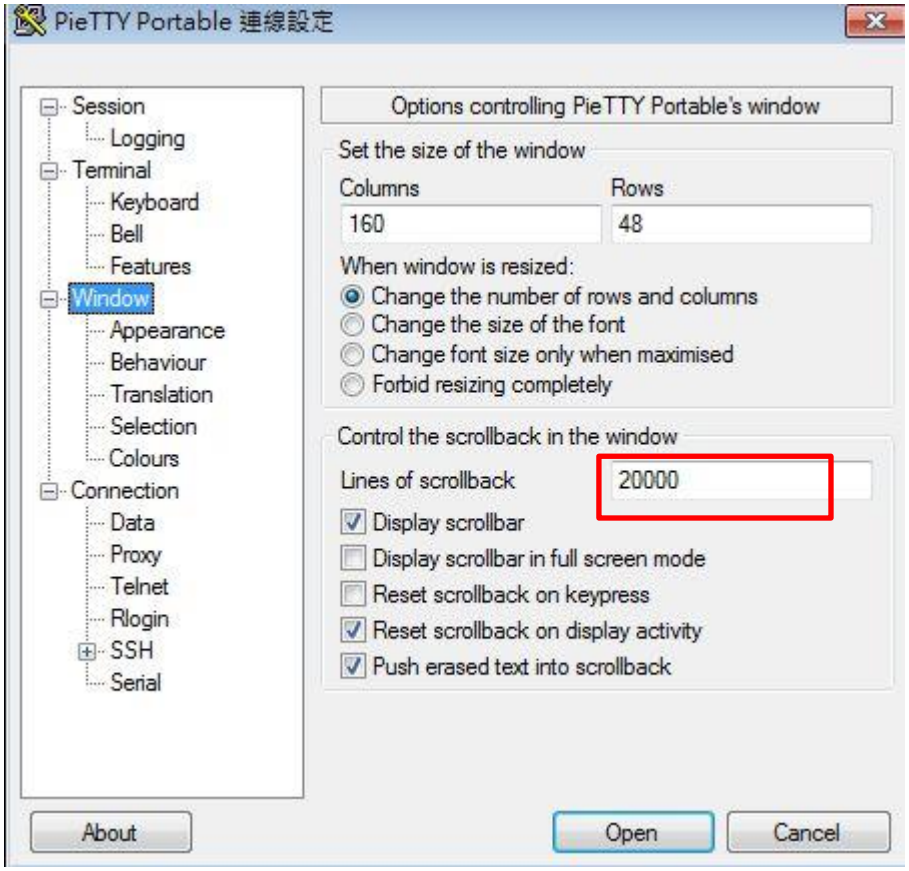
PieTTY Portable 連線設定
Session
Logging
Terminal
Keyboard
Bell
Features
Window
Appearance
Behaviour
Translation
Selection
Colours
Connection
Data
Proxy
Telnet
Rlogin
SSH
Serial
Options controlling PieTTY Portable's window
Set the size of the window
Columns
Rows
160
48
When window is resized:
Change the number of rows and columns
Change the size of the font
Change font size only when maximised
Forbid resizing completely
Control the scrollback in the window
Lines of scrollback
20000
Display scrollbar
Display scrollbar in full screen mode
Reset scrollback on keypress
Reset scrollback on display activity
Push erased text into scrollback
About
Open
Cancel