SCRAMBLE



SCRAMBLE

- $\mbox{\ensuremath{^{\star}}}$ Object of game is to invade five SCRAMBLE defense systems to destroy THE BASE.
- * Use joystick to move up, down, accelerate, and decelerate.
- $\mbox{\scriptsize \star}$ Use Laser and bombs to destroy rockets, fuel tanks, mystery targets and UFO's.
- * Hit fuel tanks for extra fuel for AIRCRAFT.
- * Bonus AIRCRAFT at 10,000 points.

SCRAMBLE

SECTION 1 INSTALLATION

1.1 INTRODUCTION

This game has been STERN final tested and is ready to play, but on all games there are some items that must be checked after shipment. Making these visual inspections may avoid time consuming service work later. Minor troubles caused by abusive handling in shipment are unavoidable, such as cable connectors thay may have become loosened. Check ALL CONNECTORS on the game to make sure they are firmly seated. Check to make sure that the game control boards are firmly seated. Examine the exterior of the game cabinet for dents, chips or broken parts. Check all major sub-assemblies, control panels, and T.V. monitor to make sure that they have not loosened up during shipment.

1.2 VISUAL INSPECTION BEFORE PLUGGING IN LINE CORD

- 1. Check the transformer for any foreign material shorting across wiring lugs.
- 2. Check that fuses are firmly seated and making good contact. Line fuse (3 AMP SLO-BLO) located on the transformer board, fluorescent lite fuse (1 AMP SLO-BLO) located on the fluorescent board, and 3 circuit board fuses located on the power supply board (See drawing B).
- Check the T.V. for any foreign material that could cause shorts (VISUAL INSPECTION ONLY).
- 4. Check game boards for any foreign material that could cause shorts. Make sure ribbon cables are pushed into circuit boards.

1.3 ON/OFF POWER INTERLOCK SWITCHES

- The on/off power switch is located on the top right side, 12 inches from the front.
- There are two interlock main power switches by the front door and one by the back access panel.

3. Interlock switch interrupts all power from game except service outlet. Interlock switch can be locked in "on" position by pulling stem out when servicing game.


1.4 GENERAL INFORMATION


- On front door there is a service switch.
 Depressing this switch will coin machine without advancing coin counter (if installed).
- Wiring for a counter is inside the front door on the left hand side of cabinet. (6 VDC COUNTER)
- 3. There are two coin chutes on the front door that are connected in parallel. (Note: They cannot be adjusted to work separately, see Dip Switches 4 and 5 below)
- 4. Game adjustment switches are located on CPU board. (See below for adjustments)
- 5. The electronics package used in SCRAMBLE is the same for stand-up model and cocktail table model. (They can be interchanged if Dip Switch #3 is changed on CPU board)
- Volume control for electronic sound is located on CPU board.
- 7. Power supply board has an adjustment (See DWG B) for the +5 VDC regulator, this MUST BE SET BETWEEN +5.0 VDC and 5.25 VDC.


GAME ADJUSTMENTS


1	WITCH 2	ROCKET
OFF	OFF	Freeplay
OFF	ON	5
ON	OFF	4
ON	ON	3
SWITCH		
OFF		Table
ON		Up Right


GAME ADJUSTMENTS CONTINUED

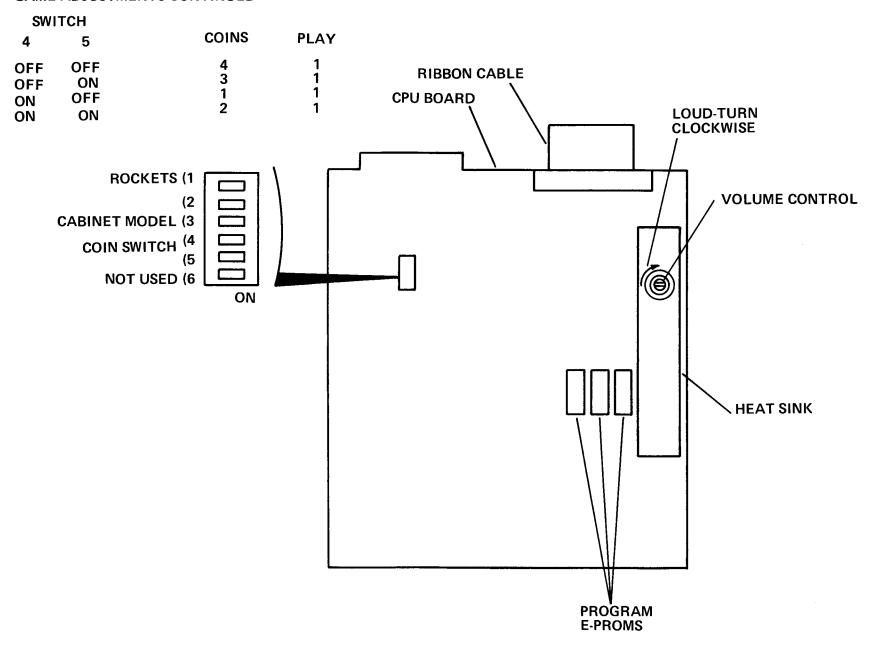


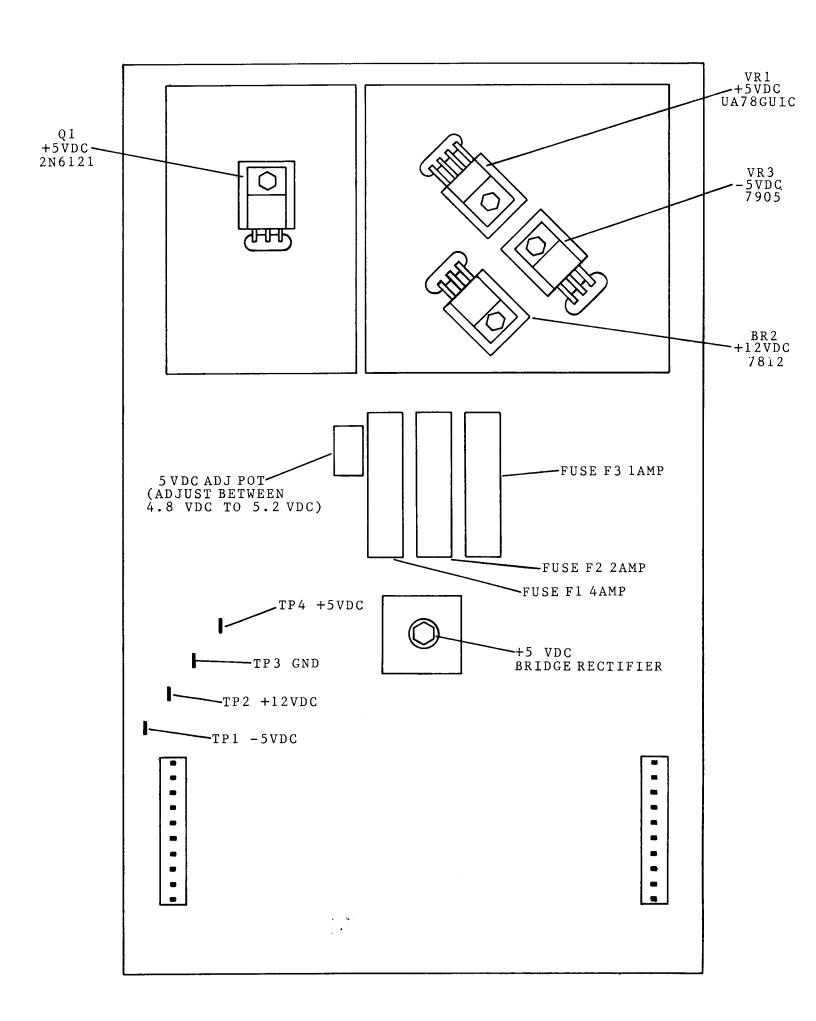

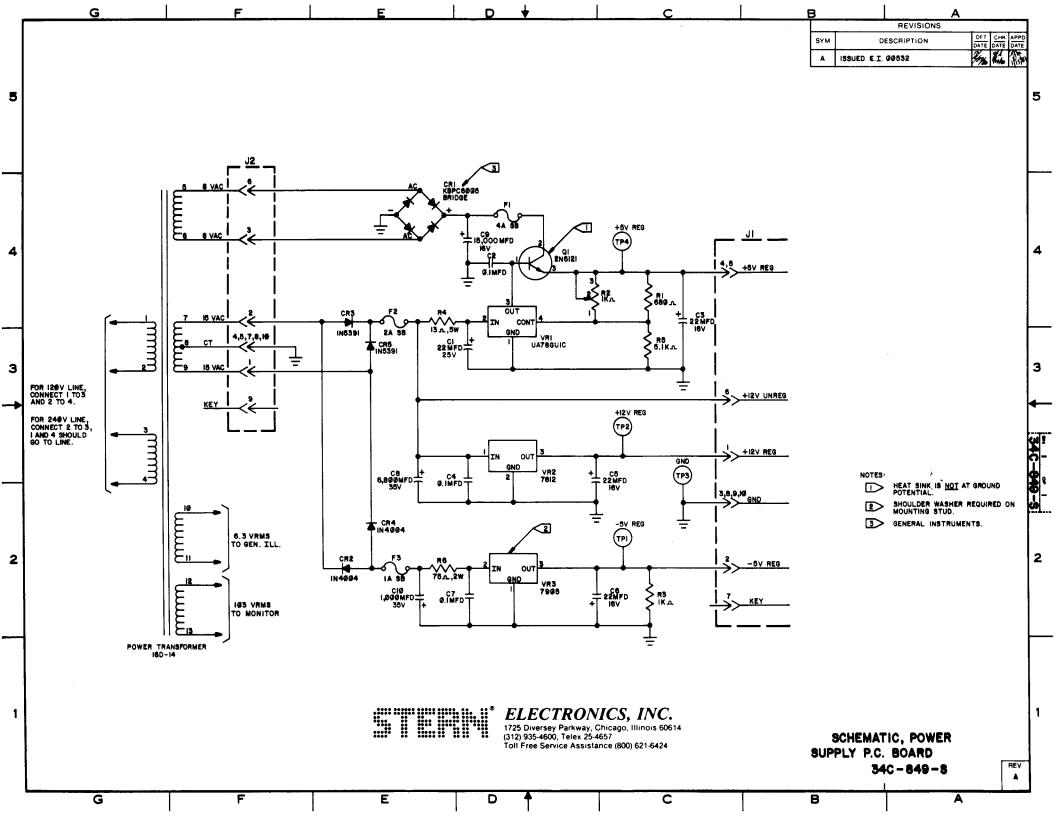

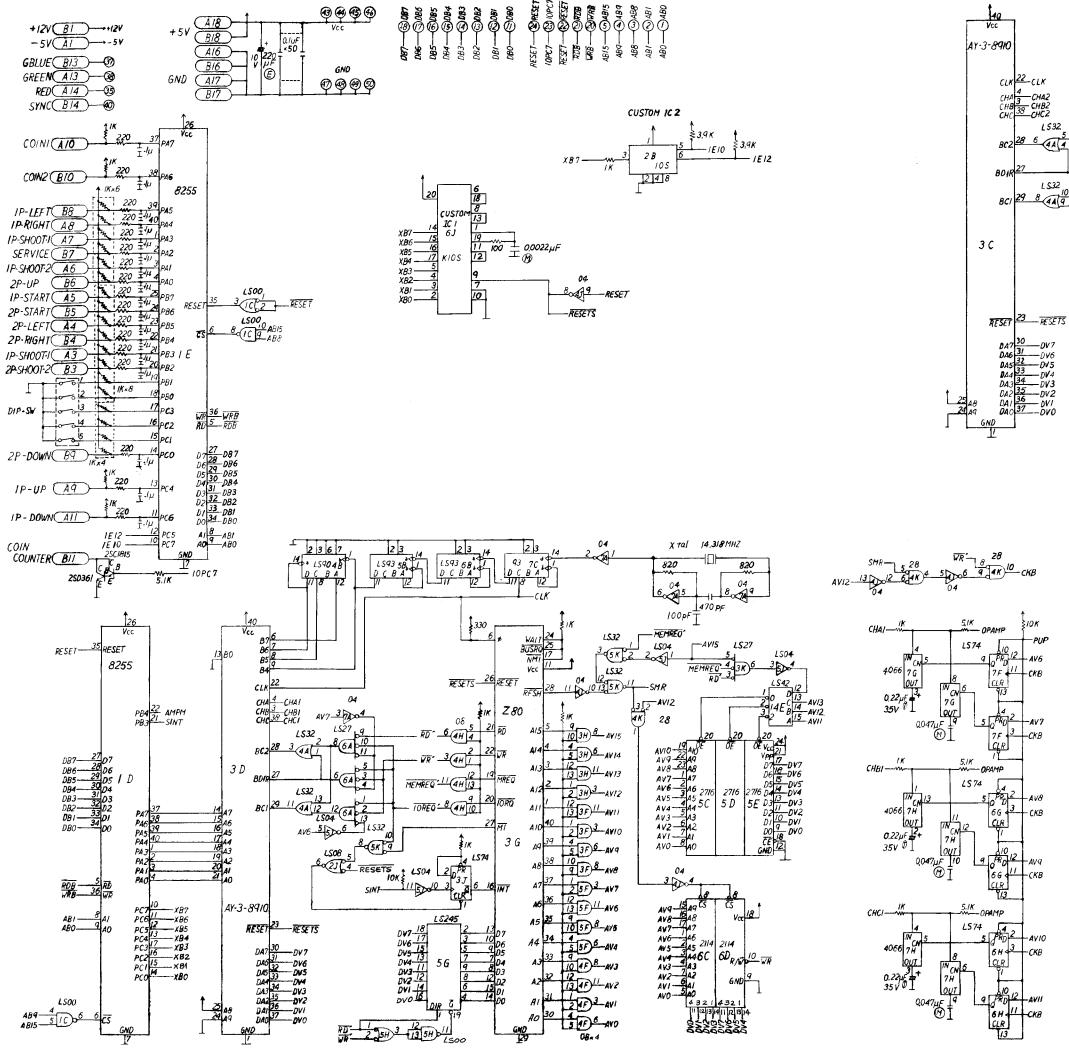

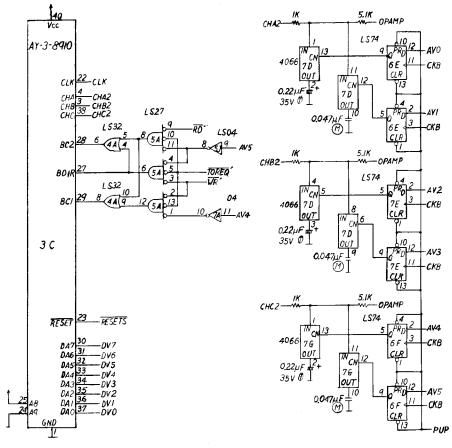

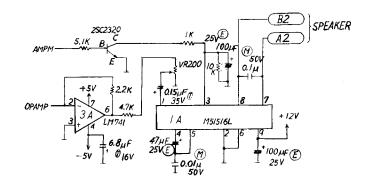

— NOTES ——

O; TANTALUM ELECTROLYTIC CONDENSER.

(M); MYLAR CAPACITOR.
(E); ELECTROLYTIC CONDENSER.

NO MARK ; CERAMIC CONDENSER.

B is parts side.

) ; 50 PIN CONNECTOR.

† ; VCC, +5V 1 ; GND, OV



SCRAMBLE 33A-105 (L-1200-1)

