
2. ハーネスの接続 / HARNESS CONNECTION

2-1 端子NO.のふり方 (CN1) / TERMINAL NUMBERING (CN1) コネクター CR7E-56DA-3,96E (HRS)3.96mm pitch CONNECTOR 1168-056-009 (KEL)3.96mm pitch

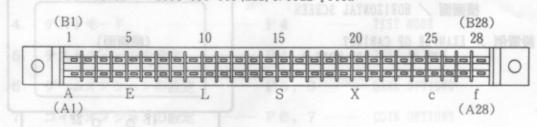

2-2 エッジコネクター端子の配列 (CN1) / SIGNAL TO TERMINAL (CN1)

半田面	. 100	子番号	部品面
SOLDER SIDE	PI	N #	PARTS SIDE
GND	A	1	GND
GND	В	2	GND
+ 5 V	C	3	+5 V
+5 V	D	4	+5 V
(表現底) (使用)	E	5	4説明 / 1837
+12V	F	6	+12V
	Н	7	
	J	8	COIN COUNTER 1
(GND)	K	9	(GND)
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	P	13	VIDEO BLUE
SERVICE SWITCH	R	14	VIDEO GND
0.0	S	15	TEST SW
COIN SWITCH 2	T	16	COIN SWITCH 1
START SWITCH 2	U	17	START SWITCH 1
2P UP	V	18	1P UP
2P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P PUSH 1	Z	22	1P PUSH 1
2P PUSH 2	a	23	1P PUSH 2
2P PUSH 3	b	24	1P PUSH 3
	C	25	/ BLAC
	d	26	/ IMAG
GND	е	27	GND
GND	f	28	GND

※ JAMMA コネクター表

2-3 CN3コネクター端子接続信号表 (CN3) / CONNECTORS CN3 TERMINAL CONNECTION SIGNAL LIST 使用コネクター / CONNECTORS : B15P-SHF-1AA (JST) 造合コネクター / LEGITIMATE CONNECTORS : H15P-SHF-AA (JST)

端子番号 PIN #	長旦夕 / CICNAI
1	信号名 / SIGNAL COIN SW3
2	3P PUSH 3
3	3P LEFT
4	3P RIGHT
5	3P UP
6	3P DOWN
7	3P PUSH 1
8	3P PUSH 2
9 ~ 13	NOT USE
14	GND
15	GND

2-4 CN2コネクターの端子接続信号表

CONNECTORS CN2 TERMINAL CONNECTION SIGNAL LIST

使用コネクター / CONNECTORS : B4P-VH (JST) 適合コネクター / LEGITIMATE CONNECTORS : VHR-4N (JST)

端子番号 PIN#	信号名 / SIGNAL
1	L-SPEAKER (+)
2	L-SPEAKER (-)
3	R-SPEAKER (-)
4	R-SPEAKER (+)

It is necessary to adjust the following setting options when installing