


**SNK** 


### **OWARNING**

 ${\bf 1}$ ) Make sure the game cartridge is installed with the markings matching the main board.

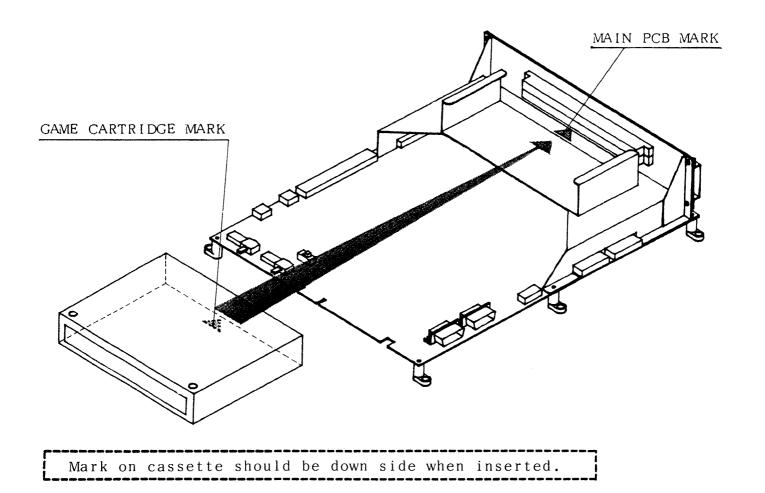

- 2) Make sure the power is off when you insert or remove the cartridge. Make sure the cartridge is firmly inserted in the slot or it will not work properly.
- 3) Do not put any electric conductive materials on or in the slots.
- f 4) Do not insert any other cartridge than the MVS cartridge with the 240 pin connector The NEO GEO Rental System cartridge will not fit on this connector!
- 5) MVS preserves the income data of max 8 games even the power is off or the game cartridges are removed from PCB.

For example: 6 cartridges has been used, A,B,C,D,E, & F on the MVS. If new game title G is used, the data for A,B,C,D,E, & F will still remain.

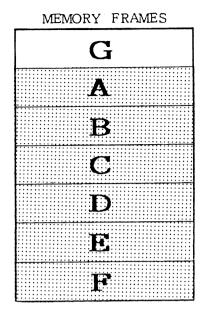

## OSOUND OUT PUT

•In case of monaural cabinet (one speaker)

Connect to the 56 pins edge connector. Put "MONO/STEREO" SWITCH into monaural position.


•In case of stereo cabinet (two speakers)


Connect to the 4 pin connector (CN2) of speaker out put on the P.C.B.


Put "MONO/STEREO SWITCH" into stereo position.

(Note)

Don't connect stereo and monaural speaker at same time.

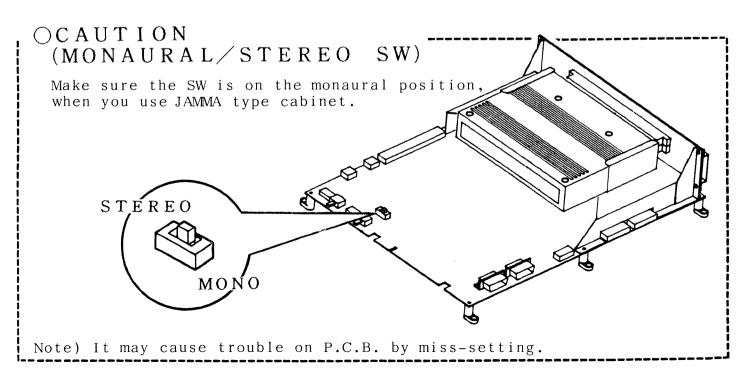

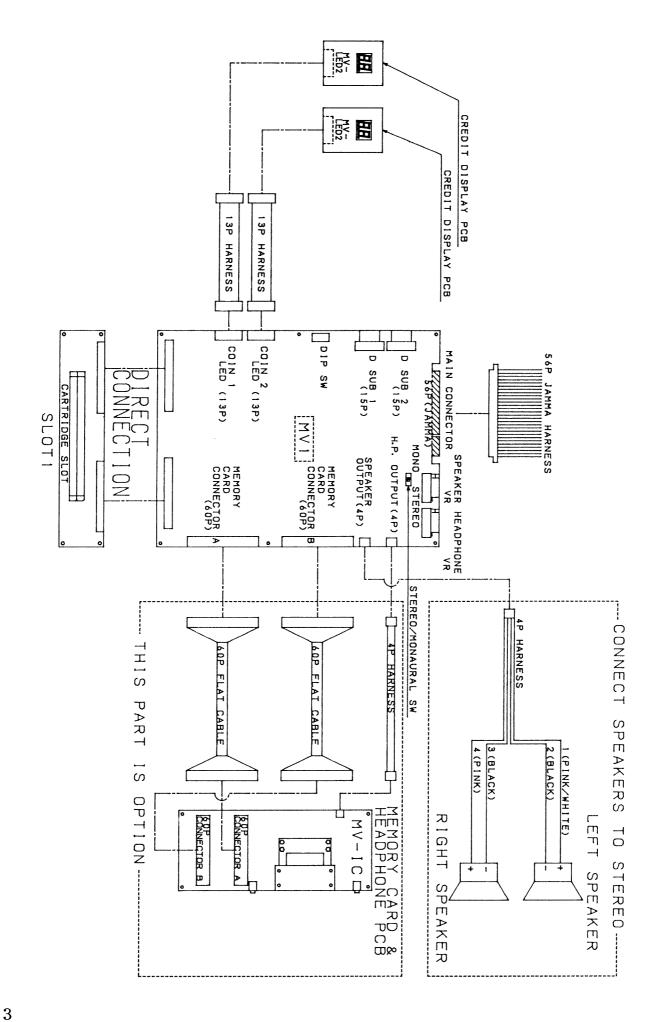

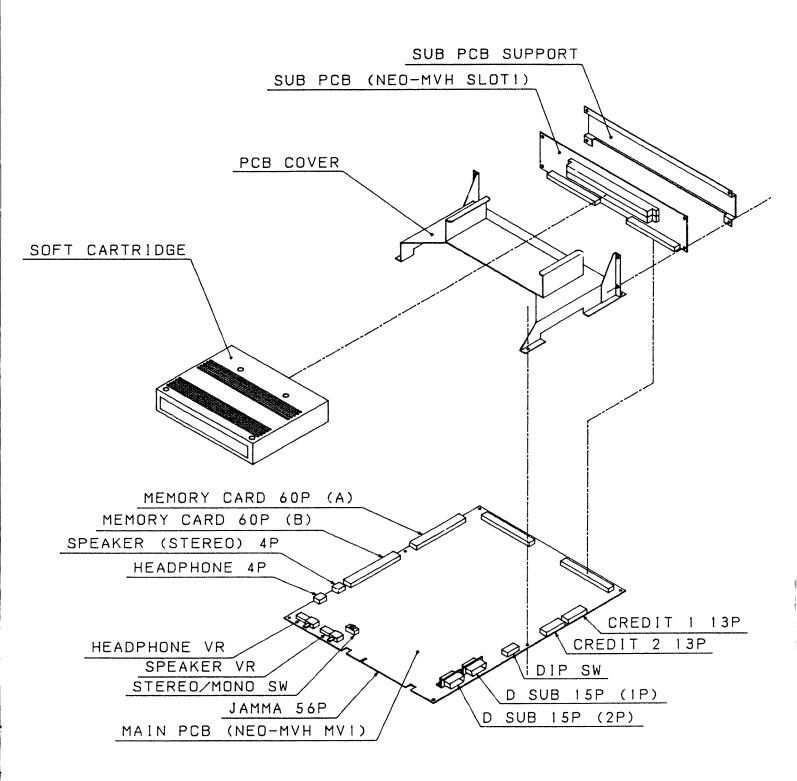


## OMODE SETTING

The MVS (Multi Video System) enables the dip settings to appear on the monitor instead of the dipswitch settings on conventional pcbs. It allows you to obtain collection information, game times, etc. The following are the directions on how to operate and choose settings:

How to operate: After turning the power on, press the test switch inside the cabinet.

Move the cursor to your selection with the joystick and press "A"button.


#### MAIN MENU

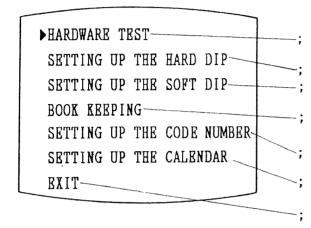


Cabinet switches, monitor adjustments, color tests, EL board tests, etc.
Main pcb dip switch display.
Coinage Settings, difficulty levels, etc. for each software titles.
Cabinet coins, cabinet plays, plays for each software title.
Setting up the memory card & code number for collection purposes.
Setting up the time & date on the cabinet.

Return to the game screen after completion of soft dip settings.

#### HARDWARE TEST

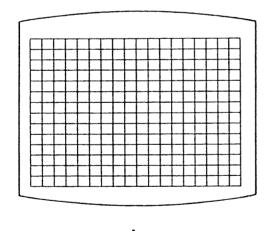

; Cross Hatch

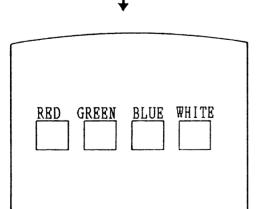

UP DOWN	P1 P2 0 0	12345678 00000000
LEFT RIGHT PUSH1 PUSH2 PUSH3	0 0 0 0 0 0 0 0	COIN1 O COIN2 O SERVICE O
PUSH4 START SELECT	0 0 0 0 0 0	BL LED1 LED2 0 00 00

- If With the dipswitch "on" the number l appears on the screen. With the dipswitch "off" the number 0 appears on the screen.
- @ Disregard the part of "EL"
- Check if the number of LED I is the same as displayed on the LED on the control panel.

1

**G** Press the 1 player start button

SOUND TEST

SOUND OFF

RIGHT

LEFT

CENTER

- In the case of JAMMA, they will output on the same speaker as of right, left, center "Sound Test"
- The area in red on the monitor moves from "sound off" to "center" by moving the joystick up and down.

RIGHT Sound comes out the right side speaker

LEFT Sound comes out the left side speaker

CENTER Sound comes out both speakers

**\** 

**G** Press the 1 player start button

MEMORY CARD TEST

INSERT MEMORY CARD

- This test is available only the case you connect IC PCB (MV-IC) with its cable.
- ☐ You can check if the memory card works properly by inserting it during this screen

NOTE: Data that was already saved on the memory card will be erased.

+

**G** Press the 1 player start button

BACKUP CLEAR

OK=PUSH A, B, C BUTTON

Then you press the A, B, & C buttons simultaneously, you will clear the data.

SETTING UP THE CALENDAR
CURRENT TIME
17/ 2/90 SAT
19:30:41
THE TIME TO BE SET UP
A BUTTON, JOYSTICK=SELECT
17/ 2/90 19:30:41

Red number is changeable. Increase number with "A" button, decrease number with "B" button. Press "D" button when finished with setting.

@ Press 1P button to start

RETURN TO CROSS HATCH

#### HARD DIP SETTING

SETTING UP THE HARD DIP

12345678

SETTING MODE 1...... ON

COMMUNICATION ...000... OFF

FREE PLAY .0 OFF

COIN SWITCH ..0.... 2

STOP MODE ...... 0 OFF

0=0FF 1=0N

3 Shows present state of dipswitch.

#### SETTING UP THE SOFT DIP

SETTING UP THE CABINET

SLOT1 NAM-1975

SLOT2 BASEBALL STARS

SLOT3 MAHJONG

SLOT4 TOP PLAYERS GOLF

SLOT5 MAGICIAN LORD

- 🕝 Cabinet setting

; Each software setting

## SETTING UP THE CABINET

SETTING UP THE CABINET

COIN RATE ICOIN=ICREDIT

GAME SELECT ONLY WHEN WERE HELD (\*ANYTIME)—

GAME START COMPULSION SOME TO (\*WITHOUT)—

DEMO SOUND SET PUP NIN WEACH GAME (\*WITHOUT)—

In the case of NAM-1975 (In the case of each game)

CONTINUE 3time (+WITHOUT+PREE)

DEMO SOUND YES (+NO)

HOW TO PLAY YES (+NO)

DIFFICULTY LEVEL 4

BONUS RATE SECOND BONUS (+EVERY+NO)

BONUS 100000/200000

HERO 3

#### BOOK KEEPING

CABINET/COIN

CABINET/PLAY

SLOT1 NAM1975

SLOT2 BASEBALL STARS

SLOT3 TOP PLAYERS GOLF

SLOT4 MAHJONG

SLOT5 MAGICIAN LORD

#### CABINET/COIN


_						
	CABINET/COIN					
		P1	P2	SERVICE		
	FEB/17	02244	0	25		
	FEB/16	04422	0	36		
	FEB/15	06633	0	47		
	FEB/14	08844	0	48		
	FEB/13	02399	0	29		
	FBB/12	05699	0	94		

- If Move cursor to "cabinet setting" and press "A" button.
- Move the cursor by joystick and increase with "A" button, decrease with "B" button.
- ♂ Disregard this
- Setting of time limitation after inserting coin. (Change with "A", "B" button)
- for any of the games. (Change with "A" button)
- Return to previous menu with "C" button. Move cursor to the game you wish to set and press "A" button.
- ; Set number of continue plays.
- Then there is no "demo sound" on cabinet setting, "with" will be ignored.
- ; With or without game play instructions
- ; when game starts.

Difficulty setting. The higher the number, the more difficult.

- GPress "C" button once to return to "Soft dip menu setting". Press "C" button again to return to main menu.

  Be sure to press "C" button after making game selection.
- ☞ Move the cursor to "Book Keeping" with joystick and press "A" button.
- ; Total coins of cabinet
- ; Total plays, number of continue plays for the cabinet
- ; Total plays, number of continue plays for each title
- (7) Move the cursor to cabinet/coin with joystick and press "A" button.
- T Weekly income chart.

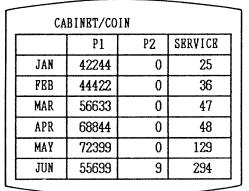

Cabinet coins for the first 6 months of the year.

1

♂ Press "A" button

CABINET/COIN					
		P1	P2	SERVICE	
	JUL	42244	0	25	
	AUG	44422	0	36	
Г	SBP	56633	0	47	
	OCT	68844	0	48	
	NOV	72399	0	129	
	DEC	55699	0	294	

Cabinet coins for the second 6 months of the year.

+

@ Press "A" button

## CABINET/PLAY

	CABINET/PLAY					
		PLAY	CONT.	AV. TIME		
	FEB/17	22	33	5:20		
	FEB/16	44	55	6:20		
	FEB/15	66	77	7:20		
	FBB/14	88	99	8:20		
	FEB/13	23	32	9:20		
	FBB/12	56	55	4:20		
	FEB/11	11	88	5:20		
_						

1

@ Press "A" button

CABINET/PLAY					
	PLAY	CONT.	AV. TIMB		
JAN	42244	33363	5:20		
FEB	44422	35543	6:20		
MAR	56633	37773	7:20		
APR	68844	39983	8:20		
MAY	72399	33232	9:20		
JUN	55699	15519	4:20		

	CABINET/PLAY				
		PLAY	CONT.	AV. TIMB	
	JUL	42244	33363	5:20	
-	AUG	44422	35543	6:20	
I	SEP	56633	37773	7:20	
	OCT	68844	39983	8:20	
	NOV	72399	33232	9:20	
	DEC	55699	15519	4:20	

Retrieve book keeping information for each software title the same way as "Cabinet Coin" & "Cabinet Play".

## SETTING UP THE CODE NUMBER

CODE NUMBER SETTING
2408
D BUTTON: SET
CODE NUMBER WILL BE SET INTO
MEMORY CARD WHEN INSERTED
DURING THIS MODE.

- F After pressing the "C" button twice, return to the main menu.

  Press "A" button after selection CODE


  NUMBER SETTING with the joystick.
- Therease numbers with the "A" button.
  Decrease numbers with the "B" button.
  Use the joystick to move left to change selected numbers.
  Set Code Number Setting with the "D" button.

The total data of book keeping can be collected by these procedure.

# OMULTI VIDEO INCOME TOTALIZATION SYSTEM (Book Keeping System)


- 1) The Multi Video System (MVS) is equipped with back-up ram and calendar IC which allows the daily income data to be saved even when the power is off.
- 2) After pressing the test button and selecting "Book Keeping" from the menu, you can view the "Income Data" on the screen.
- 3) One exclusive Memory Card is capable of saving the income data of several cabinets.
- 4) The collected data from the memory card used in connection with the exclusive memory card adapter and card reader enables you to check the entire income totals on your personal computer.
- 5) It is easy to collect the income data by saving it on the book keeping memory card. The code number system keeps important data confidential.

## OWIRING DIAGRAM (MONAURAL)

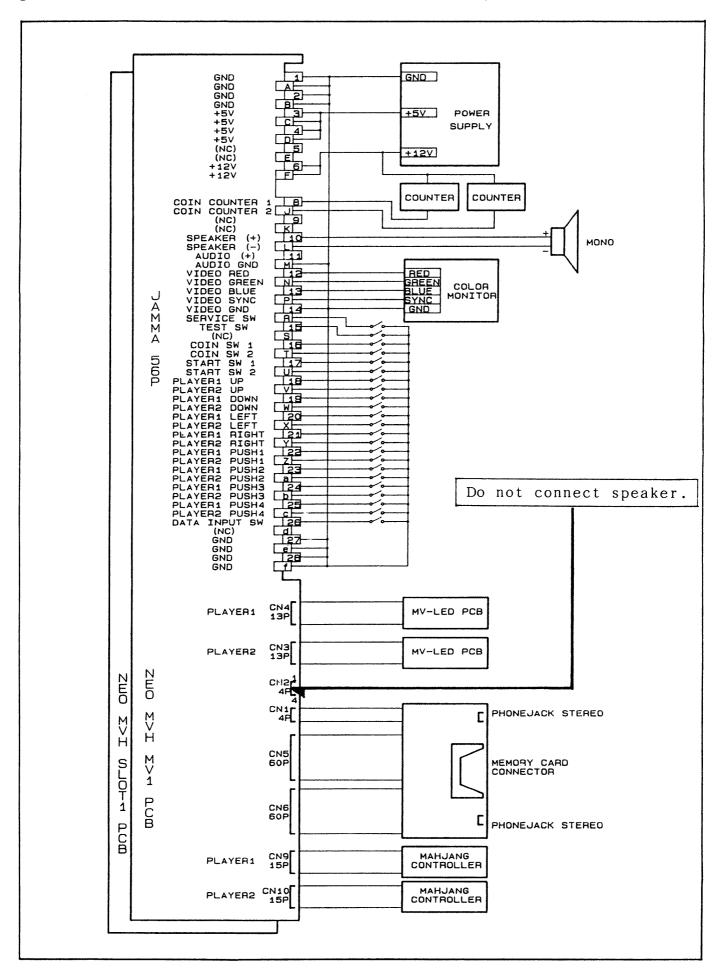

Set the switch on PCB on monaural position.

## OWIRING DIAGRAM (STEREO)

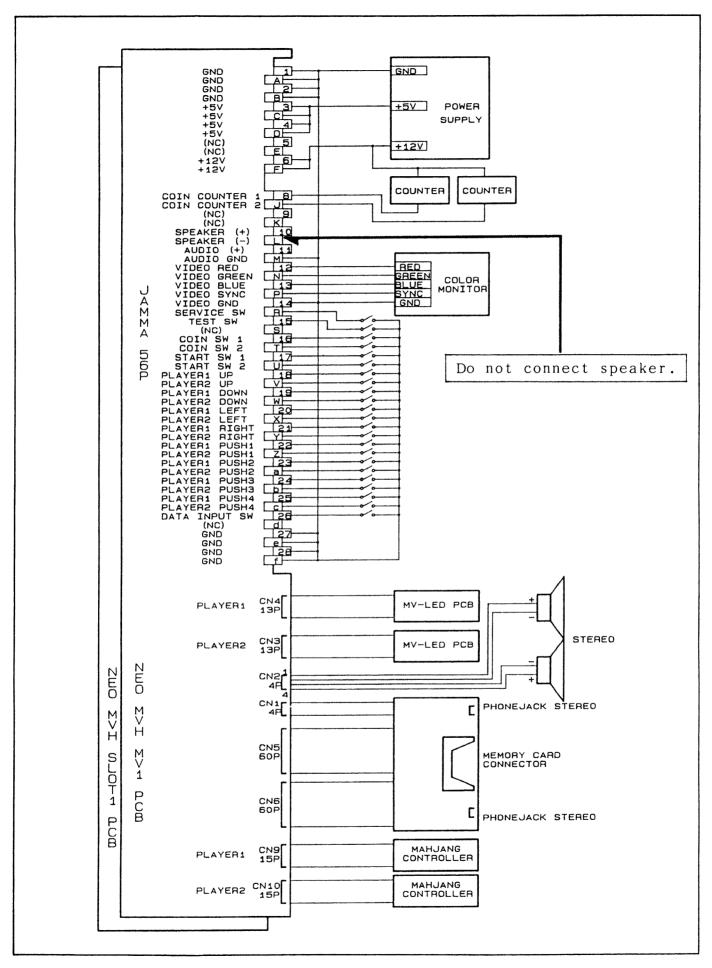

Set the switch on PCB on stereo position.

## OMV1 MAIN HARNES

SOLDER SIDE	PI	N #	PART SIDE
G N D	A	1	G N D
G N D	В	2	G N D
+ 5 V	С	3	+ 5 V
+ 5 V	D	4	+ 5 V
	E	5	
+ 1 2 V	F	6	+ 1 2 V
KEY	Н	7	KEY
COIN COUNTER 2	J	8	COIN COUNTER1
COIN LOCKOUT 2	K	9	COIN LOCKOUT1
SPEAKER (-)	L	1 0	SPEAKER (+)
AUDIO (GND)	M	1 1	
VIDEO GREEN	N	1 2	VIDEO RED
VIDEO SYNC	P	1 3	VIDEO BLUE
SERVICE SW	R	1 4	VIDEO GND
	S	1 5	TEST SW
COIN SW2	Т	1 6	COIN SW1
START SW2	U	1 7	START SW1
2 P U P	v	1 8	1 P U P
2 P DOWN	w	19	1 P DOWN
2P LEFT	Х	2 0	1P LEFT
2 P RIGHT	Y	2 1	1P RIGHT
2 P PUSH1	Z	2 2	1P PUSH1
2 P PUSH2	a	2 3	1P PUSH2
2 P PUSH3	ь	2 4	1P PUSH3
2 P PUSH4	С	2 5	1P PUSH4
	d	2 6	DATA INPUT SW
G N D	е	2 7	G N D
G N D	f	2 8	G N D

This is for monaural setting.

