

仕 様 書



目 次

1.	基	板	仕	様	 1
2.	ディ	ップン	スイット	チ表	3
3.	י ב	ネク	g —	表	 5
	テス	トエ	— К <i>Е</i>	上様	 6

1. 基板仕樣

POWER SUPPLY:

VOLTAGE

 $5V \pm 5\%$

12V ±10%

AMPERE

5V MAX 5A

12V MAX 1A

MONITOR INTERFACE:

VIDEO SIGNALS.....TTL POSITIVE

SYNC SIGNALS.....TTL NEGATIVE (COMPOSITE SYNC)

HORIZONTAL FREQUENCY 15. 723KHz

H. PERIOD

•••••63.6 μ s

H. BLANK

 $---15.6 \mu_{s}$

H. SYNC PULSE

····· 6. 0 μ s

VERTICAL FREQUENCY

.....60.0Hz

V. PERIOD

·····16. 663ms


V. BLANK

·····1. 40ms

V. SYNC PULSE

 $\cdots 318 \mu_s$

		OPREA	ATING		STORAGE						
TEMPERATURE RANGE		0	TO 50°C		-5 TO 60°C						
RELATIVE HUMIDITY		20	TO 70%		NO	MORE	THAN	80%			
VIBRATION RANGE	NO	MORE	THAN	0. 5G	NO	MORE	THAN	1. 0G			
TOLERANCE FOR FALLING	NO	MORE	THAN	0 ст	NO	Packeo MORE	d) THAN	50ст			

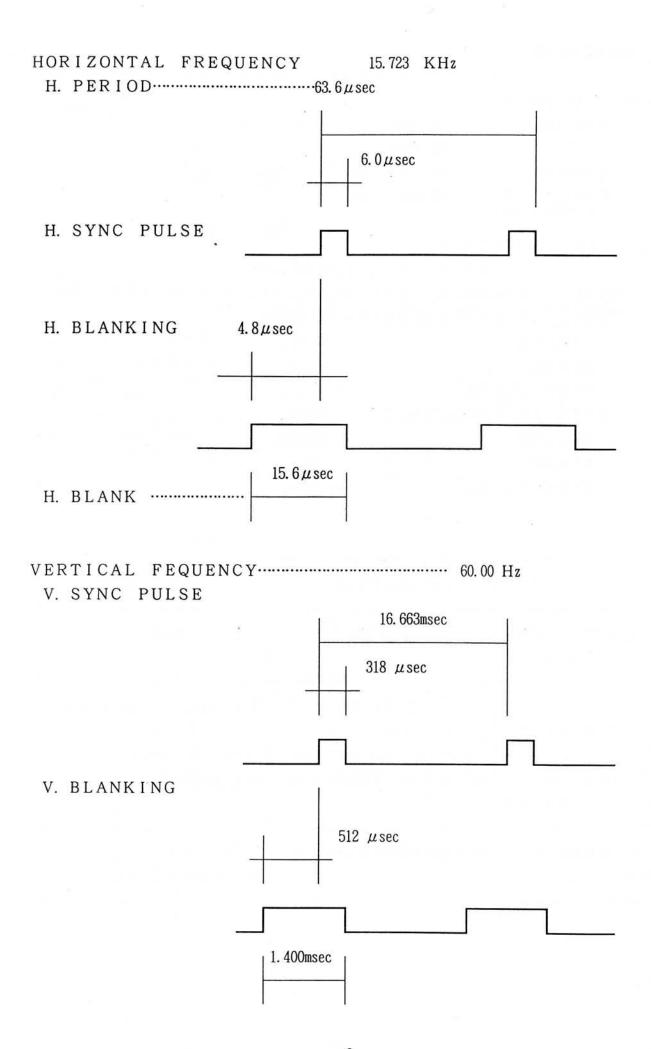

2. DIP SWITCH SETTING

DIP SW1

	SW1										
OPTION S	ETTING	1	2	3	4	5	6	7	8		
	3	OFF	OFF								
NUMBER OF	2	ON	OFF								
PLAYERS	4	OFF	ON								
	5	ON	ON				OFF ON OFF ON				
	STANDARD			OFF	OFF						
GAME	EASY			ON	OFF						
DIFFICULTY	HARD			OFF	ON						
	VERY EASY			ON	ON						
NOT USE	•			-	-	- 1					
COMMITTING DI AV	ON						OFF				
CONTINUED PLAY	OFF						ON				
	OFF							OFF			
ATTRACT SOUND	ON							ON			
TEST MODE	GAME MODE								OFF		
IESI MODE	TEST MODE								01		

DIP SW2

OPTION	SW2											
OFFICE	SETTING	1	2	3	4	5	6	7	8			
SCREEN	NORMAL	OFF										
INVERSION	INVERSION	ON										
NOT USE												
	1 COIN 1 PLAY				OFF	OFF	OFF	OFF	OFF			
	2 COINS 1 PLAY		-		OFF	ON	OFF	OFF	OFF			
COIN MODE 1	3 COINS 1 PLAY				OFF	OFF	ON	OFF	OFF			
	4 COINS 1 PLAY				OFF	ON	ON	OFF	OFF			
	5 COINS 1 PLAY				OFF	OFF	OFF	ON	OFF			
	6 COINS 1 PLAY				OFF	ON	OFF	ON	OFF			
	1 COIN 2 PLAYS				OFF	OFF	ON	ON	OFF			
COIN MODE 1	1 COIN 3 PLAYS				OFF	ON	ON	ON	OFF			
COIN HODE I	1 COIN 4 PLAYS				OFF	OFF	OFF	OFF	ON			
	1 COIN 5 PLAYS				OFF	ON	OFF	OFF	ON			
	1 COIN 6 PLAYS				OFF	OFF	ON	OFF	ON			
	2 COINS 3 PLAYS				OFF	ON	ON	OFF	ON			
	3 COINS 2 PLAYS				OFF	OFF	OFF	ON	ON			
	4 COINS 3 PLAYS				OFF	ON	OFF	ON	ON			
	1-COIN CONTINUE			4	OFF	OFF	ON	ON	ON			
	FREE PLAY				OFF	ON	ON	ON	ON			
	1 COIN 1 PLAY				ON	OFF	OFF					
COIN MODE 2 .	2 COINS 1 PLAY				ON	ON	OFF					
SELECTOR A	3 COINS 1 PLAY				ON	OFF	ON					
	5 COINS 1 PLAY				ON	ON	ON					
	1 COIN 2 PLAYS				ON			OFF	OFF			
COIN MODE 2	1 COIN 3 PLAYS				ON		6	ON	OFF			
SELECTOR B	1 COUN 5 PLAYS				ON			OFF	OFF OFF OFF OFF ON ON OFF ON			
LEI .	1 COIN 6 PLAYS				ON			ON	ON			

^{*} Please turn off the power switch before changing the DIP switch setting or the change will not take effect.

^{* 1-}COIN CONTINUE is the mode which starts the game with 2 coins but continues it with 1 coin alone. When this mode is set, no other coin mode can be set.

3 . EDGE CONNECTOR

JAMMA STANDARD (3.96 m/m pitch)

 \cdot CR7E-56DA-3. 96E (HIROSE)

 \cdot 1 1 6 8 - 0 5 6 - 0 0 9 (1

SOLDER SIDE			COMPONENTS SIDE
GND	A	1	GND
GND	В	2	GND
+ 5 V	С	3	+ 5 V
+ 5 V	D	4	+ 5 V
	Е	5	
+ 1 2 V	F	6	+ 1 2 V
POST	Н	7	POST
COIN COUNTER B	J	8	COIN COUNTER A
4	K	9	
SOUND OUT (-)	L	10	SOUND OUT (+)
	M	11	
GREEN	N	12	RED
SYNC	P	13	BLUE
SERVICE SW	R	14	GND
	S	15	
COIN B	T	16	COIN A
2 P SELECT	U	17	1 P SELECT
2 P U P	V	18	1P UP
2 P DOWN	W	19	1P DOWN
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2 P BOMB SET	Z	22	1 P BOMB SET
2 P BOMB FIRE	a	23	1 P BOMB FIRE
	b	24	
	С	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

N.B.

^{*} Use two 8-way joysticks, each with two push-button switches, 2 player interactive and a horizontally placed CRT monitor.

4. テストモード仕様

1. テスト項目

以下の項目のテストを行う。

①RAMテスト

②R OMテスト

③I/O PORTテスト,

④DIP SWテスト

⑤SOUNDテスト

⑥CHARACTERテスト

⑦COLORテスト

®CROSS HATCHテスト

⑨OPTIONテスト

RAMの読み書きテスト

ROMのチェックテスト

ボタン・レバー・コインテスト

ディップスイッチテスト

音のテスト

物体の表示テスト


色のテスト

画面の歪テスト

チケットのディスペンサーのテスト

DIP SW1の8をONにした後、電源を入れるとすぐに①、②のテストを開始します。 テストモードを終了させるには、電源をOFFにしてDIP SW1の8をOFFにして、電源を OFFにして下さい。

2. テスト手順概略

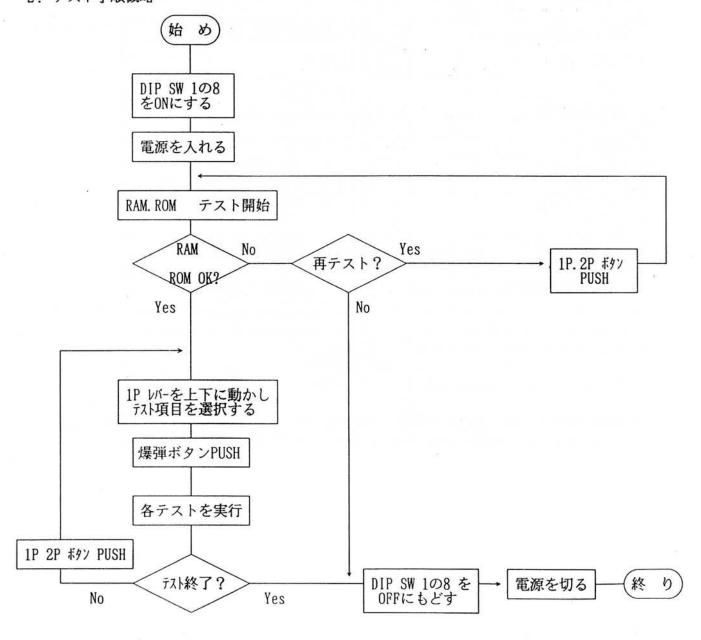

3. RAM. ROMFAL

電源を入れてからしばらく画面が変化せず、種々の模様が画面に表示されるのは、画面用のRAMのチェックのためである。RAM、ROMがOKならば、"RAM OK" "ROM OK" と表示される。

- ・RAMが不良のとき、画面に"RAM NG"と不良箇所が表示される。
- ・ROMが不良のとき、画面に "ROM NG" と表示される。
- ・RAM ROMテスト終了後、RAM ROMが正常な場合、1Pと2Pスタートボタンを押せば次の項目へ移る。
- ・RAM ROMテスト終了後、RAM ROMが不良の場合、1Pと2Pスタートボタンを押せば再度テストを行う。

4. テスト項目一覧の表示

以下のテスト項目が表示されるので、1 Pレバーを上下に動かして希望のテスト項目を選択する。


- 1. I/O
- 2. SOUND
- 3. CHARCTER
- 4. COLOR
- 5. CROSS HATCH
- 6. OPTION
- 7. EXIT
- ・爆弾ボタンかリモコンボタンを押すと赤く表示されている項目のテストを開始する。
- ・1Pと2Pスタートボタンを押すと当該項目のテストを終了する。
- ・6のOPTIONテストは、1Pスタートボタンのみテストを開始する。

5. I/O ポート テスト

・各レバー、ボタン、コインがONされた時の状態が画面に表示される。

KEY	PORT1	F 0	E 0	D 0	C 0	B 0	A 0	9	8	7 0	6 0	5 0	4 0	3 0	2	1 0	0 0
KEY	PORT2	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
IN	PORT	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
DIP	SW	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0

- 6. SOUND テスト 画面に音の番号が表示され、それに対応した音が発音されるかテストする。
- 7. CHARACTER FXI

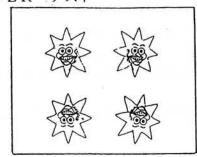


左図の様に上下左右反転の図柄が 出ている事を確認する。

8. COLORFAL


1 P レバーを下げることにより以下のテストを①→②→③→④→⑤→⑥→⑦→⑧→①と進ませる事ができる。

- ① 全面 青色を表示する。
- ② 全面 赤色を表示する。
- ③ 全面 マゼンダを表示する。
- ④ 全面 緑色を表示する。
- ⑤ 全面 シアンを表示する。
- ⑥ 全面 黄色を表示する。
- ⑦ 全面 白色を表示する。
- ⑧ 右の様なカラーパターンを表示する。

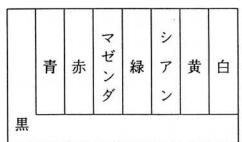

9. CROSS HATCH FXh

画面に2ドットの白線でCROSS HATCH PATTERNを表示する。

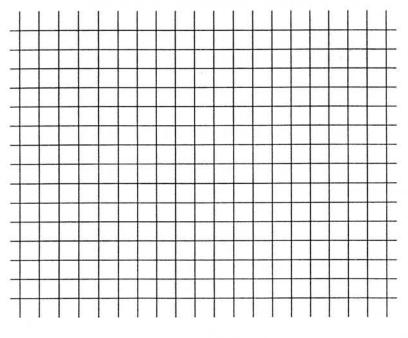

1ドットの白線

15本

修理品 〒920-02 石川県河北郡内灘町字 の宛先 緑台1丁目174

ウチナダ電子工業㈱内

アイレム(株)サービスセンター サービス 係

電話番号 0762-38-4133