



Service #

708-215-5100

Jerry Korbecki ext. 122

INSTRUCTION MANUAL




KONAMI® is a trademark of Konami Industry Co., Ltd.

Sunsetriders is a registered trademark of Konami Co. LTD. © 1991 Konami Co. Inc.

SUNSETRIDERS™ PARTS LIST

Part #	Description
072010	AC Harness
064011	DC Harness
064003	Sunsetrider PCB
064100	Sunsetrider Control Panel Overlay
064101	Instruction Decal (w/arrows)
064200	Marquee
064300	Upper Right Side Decal
064301	Upper Left Side Decal
064302	Middle Right Side Decal
064303	Middle Left Side Decal
064304	Lower Right Side Decal
064305	Lower Left Side Decal
064400	Manual
30255	Red Button
30256	Yellow Button
30258	Blue Button
30259	Green Button
30313	Red Micro Joystick
30314	Blue Micro Joystick
30315	Green Micro Joystick
30316	Yellow Micro Joystick
35404	Power Supply
40356	Tempered Glass
40524	Monitor

CONTROL PANEL ASSEMBLY

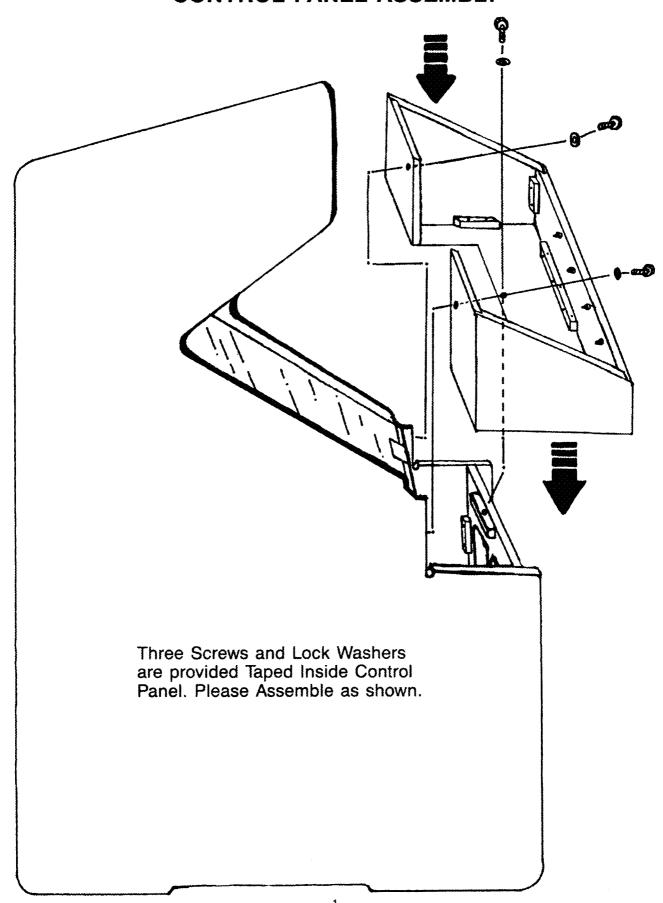

SUNSETRIDERS™ TECHNICAL INFORMATION

TECHNICAL INFORMATION

- (1) Required power capacity GND-Vcc 5V 4A or more GND-(+12V) *See the Wiring Diagram.
- (2) Output

R (red) analog, positive G (green) analog, positive B (blue) analog, positive SYNC. H-V complexed, negative

- (3) The monitor should be horizontally installed.
- (4) Use the volume knob on the PCB to adjust sound level. Turn the knob clockwise for increased volume. In monaural output mode, use the left volume knob.
- (5) Handle with care.

PLAY INSTRUCTION

- 1 to 4 players can play at the same time.
- Decide the character you want to control out of the four Bounty Hunters. Two of them use pistols as their weapons, the others use rifles. Deposit coin(s) in coin slot of your favorite character and press SHOOT or JUMP button to start the game.
- Control your character using the 8-way JOYSTICK. Use JUMP button to get over obstacles. Press SHOOT button to attack enemies. Enemies can also be destroyed by shooting down barrels and lamps aimed at them.
- To jump up to the second floor, push JOYSTICK upward and press JUMP button. To jump down, pull down JOYSTICK and press JUMP button.
- To avoid enemies' bullets, you can slide by pressing JUMP button with JOYSTICK pulled diagonally downward.
- Shoot sacks, and gold and silver badges come out. Pick them up for power-up:

Gold badge: QUICK DRAW... Keep SHOOT button pressed to fire consecutively. Silver badge: TWO-GUNS... You can fire in two directions.

- Pick up gold dust and roast-chickens for additional points.
 Extra points are also awarded for picking up the same power-up item you already have.
- You will lose a life when you are hit by enemies' bullets, runaway bulls, falling barrels and flames, etc. The game is over when you have lost all your lives.
- There are eight stages and two bonus stages. A large reward is given you for defeating the boss enemy in each stage. In bonus stages, aim and shoot the enemies coming out in eight different positions. Shoot as many enemies as possible for maximum reward.
- Continuation is available as long as you continue to add coins when necessary. Any player can join at anytime.

CABINET INFORMATION

- (1) Use a multi-control upright cabinet with four sets of an 8-way joystick and two function buttons.
- (2) Four independent coin slots are necessary. Start buttons are substituted by the function buttons for each player.







8-Way Joystick Shoot Button Jump Button

SUNSETRIDERS™ TECHNICAL INFORMATION (cont.)

SELF TEST

Normal: "OK" will be displayed. Then the game will

start.

Abnormal: "BAD" will be displayed and self test will re-

peat. If "EEPROM 15B BAD" is displayed, switch off and switch on again with TEST

SWITCH (on the PCB) pressed.

MANUAL TEST

(1) HOW TO START

After switching on the power, press the TEST SWITCH on the PCB or on the cabinet, and you will get the MAIN MENU of the Manual Test.

NOTE: Switching on with TEST SWITCH pressed causes the program in the EEPROM to be initialized to default.

- (2) HOW TO RETURN TO THE GAME MODE Select "GAME MODE" on the MAIN MENU, then press 1 SHOOT button to return to the game mode.
- (3) ITEMS AND HOW TO SELECT
 Use player 1 JOYSTICK to highlight desired test and press player 1 SHOOT button to initiate testing. Press player 1 SHOOT button during or at the end of each test to return to the MAIN MENU.

I/O CHECK SCREEN CHECK COLOR CHECK SOUND CHECK MASK ROM CHECK GAME OPTIONS COIN OPTIONS GAME MODE

1 PLAYER JOYSTICK = SELECT ITEM

1 PLAYER SHOOT = DO CHECK

(4) EXPLANATION OF THE ITEMS

1. I/O CHECK

Check all the joysticks and buttons to see "1" when switched on. Press player 1 and 2 SHOOT buttons at the same time to return to MAIN MENU.

2. SCREEN CHECK

Adjust focus, alignment, size, etc. using the crosshatch screen.

3. COLOR CHECK

Adjust color brightness so that the specified area will be colorless.

4. SOUND CHECK

When "SOUND SCALE CHECK" is highlighted, a music scale sounds. At "SOUND CODE," push player 1 JOYSTICK right/left to change sound code.

5. MÁSK ROM CHECK

Roms will be checked one after another, and the message "OK" or "BAD" will be displayed on the screen.

SUNSETRIDERS™ TECHNICAL INFORMATION (cont.)

6. GAME OPTIONS

Following screen will appear. Use player 1 JOYSTICK up/down to select the item and push JOYSTICK right/left to modify setting. Factory settings are shown in green, and modified results in red.

After modification is completed, highlight "SAVE AND EXIT" and press player 1 SHOOT button to save and return to MAIN MENU.

GAME OPTIONS

1 CREDIT 3 LIVES PLAYER'S LIFE DIFFICULTY LEVEL 4/MEDIUM VIDEO SCREEN FLIP NORMAL SOUND OUTPUT STEREO SOUND IN ATTRACT MODE ON

FACTORY SETTINGS SAVE AND EXIT EXIT

- 1 PLAYER JOYSTICK UP/DOWN=SELECT OPTION 1 PLAYER JOYSTICK RIGHT/LEFT=MODIFY SETTING
- * If you select "EXIT" instead of "SAVE AND EXIT" after modifying some settings, the message appears: "YOU DID NOT SAVE. DO YOU WANT TO SAVE? YES/NO." When you choose "YES" the screen shows "NOW SAVING" and returns to MENU SCREEN. If you select "NO," "NO MODIFICATION" is shown and then MENU SCREEN appears.
- 7. COIN OPTIONS

Selecting this item, the screen shows following options.

COIN OPTIONS

NO FREE PLAY YES 1 PREMIUM START

2 COINS 1 CREDIT 1 COIN 1 CREDIT STARTING CONTINUATION

FACTORY SETTINGS SAVE AND EXIT **EXIT**

1 PLAYER JOYSTICK UP/DOWN=SELECT OPTION

1 PLAYER JOYSTICK RIGHT/LEFT=MODIFY SETTING

When you want "PREMIUM START" setting, choose the number of extra coins necessary for starting, then decide the coin setting for continuation. The number of coins for starting will be the sum of both numbers. If you do not want premium start setting, the number of coins necessary for starting and continuation will be the same.

*COIN SETTING OPTIONS

2 2 2 COIN (S) 3 5 CREDIT (S) 2 3 4 5 6

.. "NO" or "YES 1" to "YES 4"

(The number means the EXTRA coins necessary)

... Select from 1 to 9 lives.

"NORMAL" or "UPSIDE DOWN" "STEREO" or "MONAURAL"


... All the settings return to default. ... Save the modified settings

... Select out of 8 levels.

... "ON" or "OFF"

Same as above "GAME OPTIONS"

3	3	3	4	4	4	
1	2	4	1	3	5	

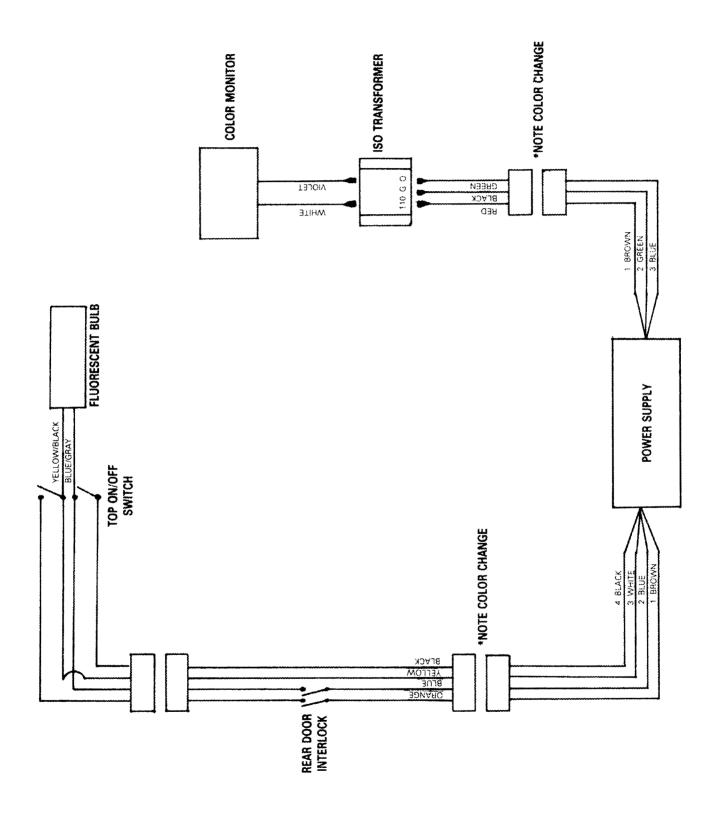


SUNSETRIDER™: SUB HARNESS FOR 3 PLAYERS & 4 PLAYERS

	1	Coin 3	White/Violet	
	2	Empty		
	3	3P Left	White/Red	
	4	3P Right	White/Yellow	
	5	3P Up	White/Black	
	6	3P Down	White/Blue	
CN3	7	3P Shoot	White/Brown	
3 P	8	3P Jump	White/Orange	
CONTROLS	9	Empty		
	10	Empty		
	11	Empty		
	12	Empty		
	13	Empty		
	14	Empty		
	15	Ground	Black	
	4	Coin 4	Blue	
	1	Coin 4	Blue	
	2	Empty		
	3	Empty 4P Left	Yellow/Black	
	3 4	Empty 4P Left 4P Right	Yellow/Black Brown/Black	
	2 3 4 5	Empty 4P Left 4P Right 4P Up	Yellow/Black Brown/Black Green/Yellow	
CNA	2 3 4 5 6	Empty 4P Left 4P Right 4P Up 4P Down	Yellow/Black Brown/Black Green/Yellow Yellow/Red	
CN4	2 3 4 5 6 7	Empty 4P Left 4P Right 4P Up 4P Down 4P Shoot	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White	
4P	2 3 4 5 6 7	Empty 4P Left 4P Right 4P Up 4P Down 4P Shoot 4P Jump	Yellow/Black Brown/Black Green/Yellow Yellow/Red	
	2 3 4 5 6 7 8 9	Empty 4P Left 4P Right 4P Up 4P Down 4P Shoot 4P Jump Empty	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White	
4P	2 3 4 5 6 7 8 9	Empty 4P Left 4P Right 4P Up 4P Down 4P Shoot 4P Jump Empty Empty	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White	
4P	2 3 4 5 6 7 8 9 10	Empty 4P Left 4P Right 4P Up 4P Down 4P Shoot 4P Jump Empty Empty Empty Empty	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White	
4P	2 3 4 5 6 7 8 9 10 11	Empty 4P Left 4P Right 4P Up 4P Down 4P Shoot 4P Jump Empty Empty Empty Empty Empty Empty	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White	
4P	2 3 4 5 6 7 8 9 10 11 12 13	Empty 4P Left 4P Right 4P Up 4P Down 4P Shoot 4P Jump Empty Empty Empty Empty Empty Empty Empty Empty Empty	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White	
4P	2 3 4 5 6 7 8 9 10 11	Empty 4P Left 4P Right 4P Up 4P Down 4P Shoot 4P Jump Empty Empty Empty Empty Empty Empty	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White	

SUNSETRIDER™: WIRING HARNESS


WIRE COLOR KEY:	Solder Side -			→ Parts Side	
BLACK	GND	А	1	GND	BLACK
BLACK	GND	В	2	GND	BLACK
RED	+5V DC	С	3	+5V DC	RED
RED	+5V DC	D	4	+5V DC	RED
	NOT USED	E	5	NOT USED	
ORANGE	+ 12V DC	F	6	+12V DC	ORANGE
	*KEY	Н	7	*KEY	
	(EMPTY)	J	8	COIN COUNTER	GREEN/VIOLET
	(EMPTY)	К	9	(EMPTY)	
	(EMPTY)	L	10	(EMPTY)	
	(EMPTY)	M	11	(EMPTY)	
WHITE/GREEN	VIDEO GREEN	Ν	12	VIDEO RED	RED/WHITE
WHITE	VIDEO SYNC	Р	13	VIDEO BLUE	BLUE/WHITE
	(EMPTY)	R	14	VIDEO GROUND	BLACK
	(EMPTY)	S	15	TEST	YELLOW
VIOLET/WHITE	COIN 2	Т	16	COIN 1	BLUE/BROWN
	NOT USED	U	17	(EMPTY)	
BLUE/YELLOW	2P UP	٧	18	1P UP	ORANGE/WHITE
VIOLET/YELLOW	2P DOWN	W	19	1P DOWN	BLACK/WHITE
ORANGE/GREEN	2P LEFT	Х	20	1P LEFT	RED/GRAY
ORANGE/YELLOW	2P RIGHT	Υ	21	1P RIGHT	GRAY/WHITE
BLACK/YELLOW	2P SHOOT	Z	22	1P SHOOT	RED/WHITE
ORANGE/GRAY	2P JUMP	а	23	1P JUMP	GREEN/BROWN
	NOT USED	b	24	NOT USED	
	NOT USED	С	25	NOT USED	
	NOT USED	d	26	NOT USED	
BLACK	GND	е	27	GND	BLACK
BLACK	GND	f	28	GND	BLACK


(BASE COLOR/LINE COLOR)

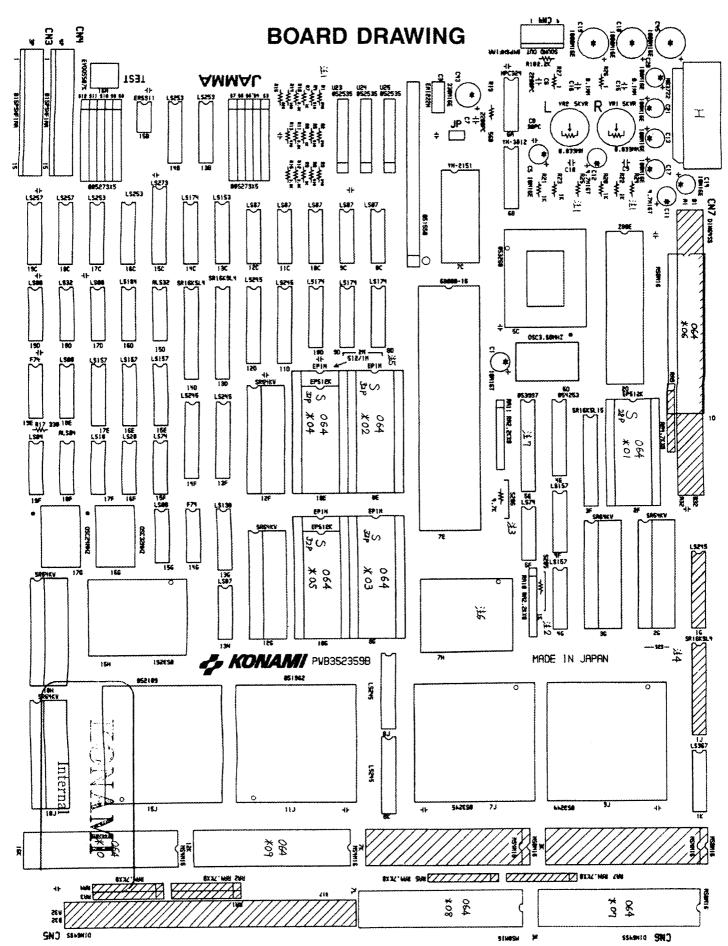



THIS EQUIPMENT COMPLIES WITH THE REQUIREMENTS IN PART 15 OF FCC RULES FOR A CLASS A COMPUTING DEVICE. OPERATION OF THIS EQUIP-MENT IN A RESIDENTIAL AREA MAY CAUSE UNACCEPTABLE INTERFERENCE TO RADIO AND TV RECEPTION REQUIRING THE **OPERATOR TO TAKE WHATEVER** STEPS ARE NECESSARY TO CORRECT THE INTERFERENCE. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.




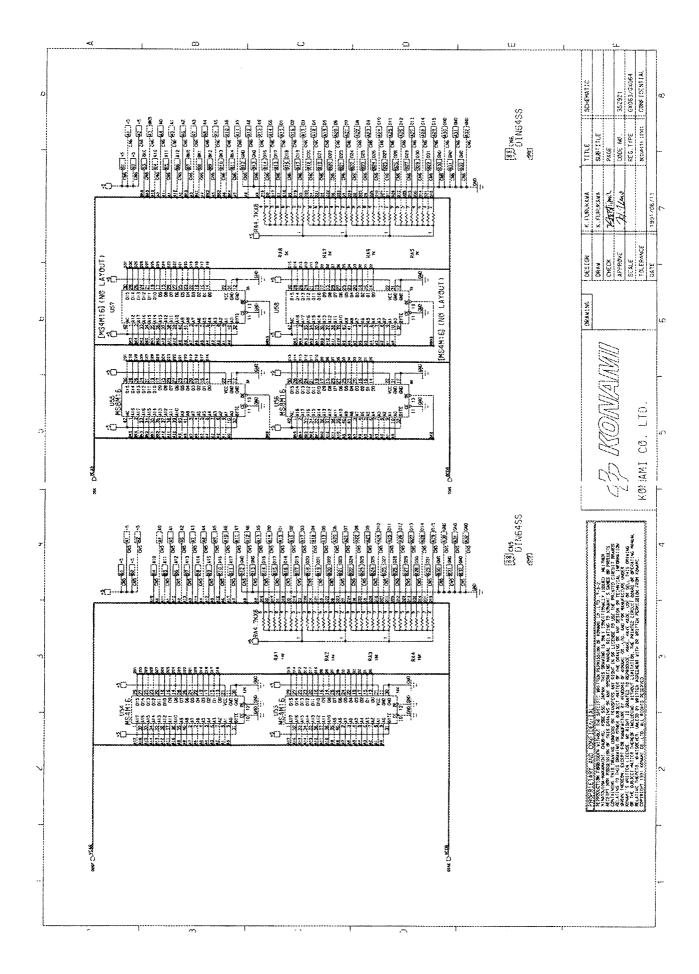

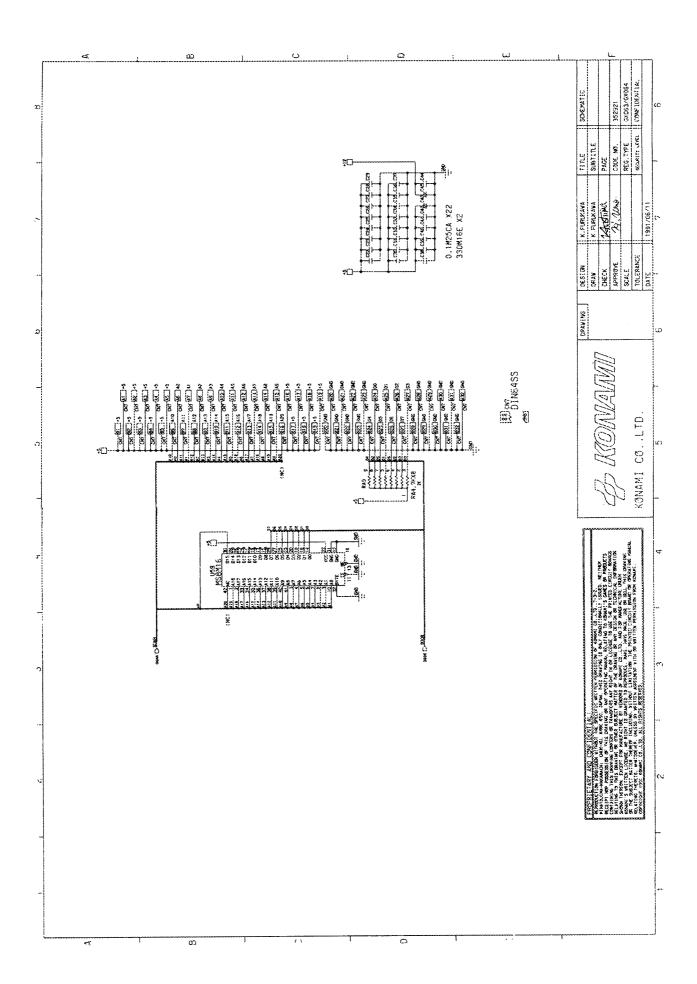

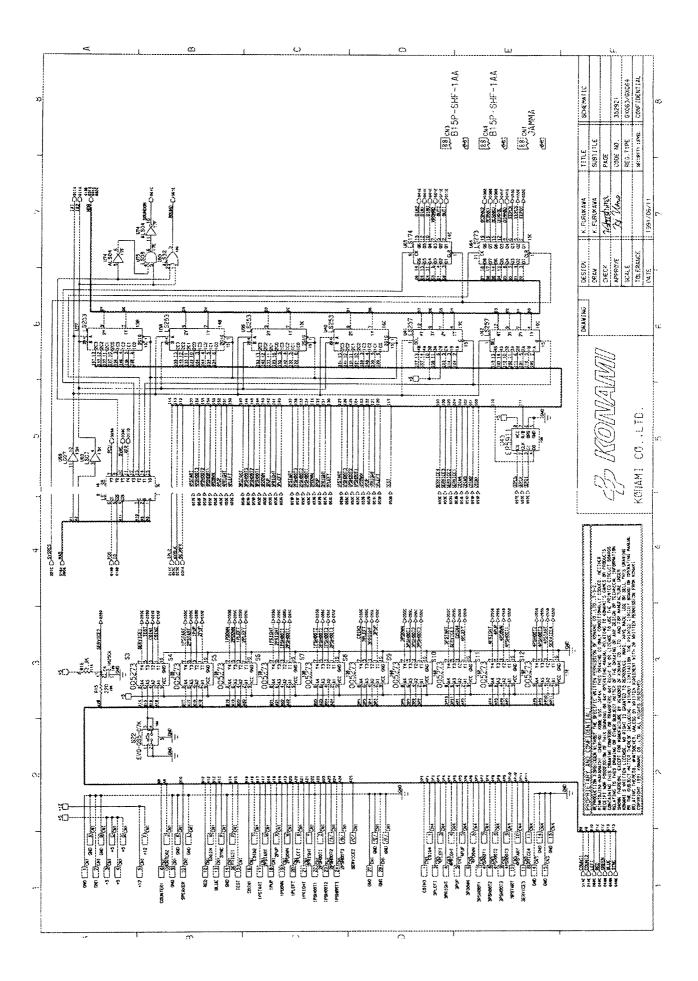

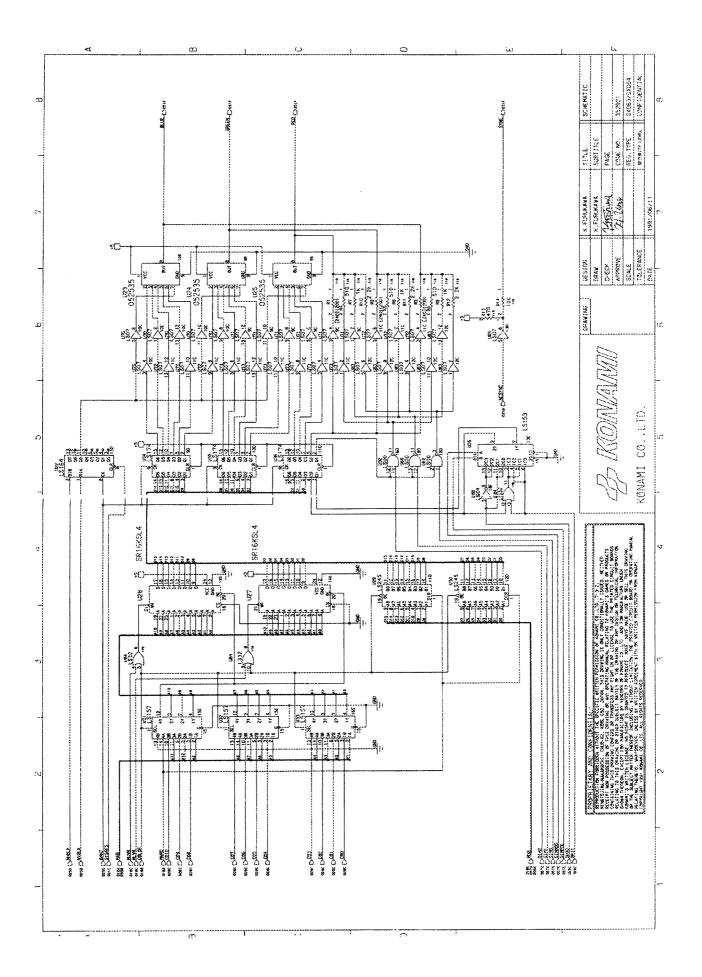

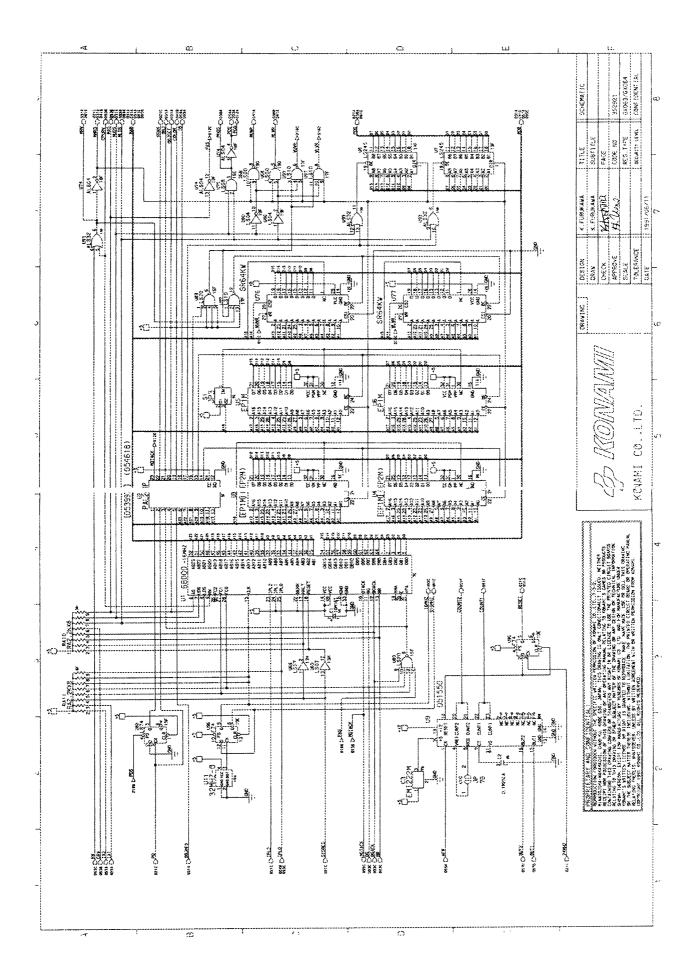

WIRING DIAGRAM

