



Service #

**708-215-5100**  
Jerry Korbecki ext. 122

# INSTRUCTION MANUAL


 KONAMI® is a trademark of Konami Industry Co., Ltd.

Vendetta is a registered trademark of Konami Co. LTD. © 1991 Konami Co. Inc.

# VENDETTA™ PARTS LIST

Part #	Description
072010	AC Harness
072011	DC Harness
081003	Vendetta PCB
081100	Vendetta Control Panel Overlay
081101	Instruction Decal
081200	Marquee
081300	Upper Right Side Decal
081301	Upper Left Side Decal
081302	Middle Right Side Decal
081303	Middle Left Side Decal
081304	Lower Right Side Decal
081305	Lower Left Side Decal
081400	Manual
30110	Red Button
30112	Blue Button
30118	Yellow Button
30119	Green Button
30202	Switch Holder
30250	Palnuts
30304	Red Joy Stick
30305	Blue Joy Stick
30306	Green Joy Stick
30307	Yellow Joy Stick
35404	Power Supply
40356	Tempered Glass
40524	Monitor

## CONTROL PANEL ASSEMBLY

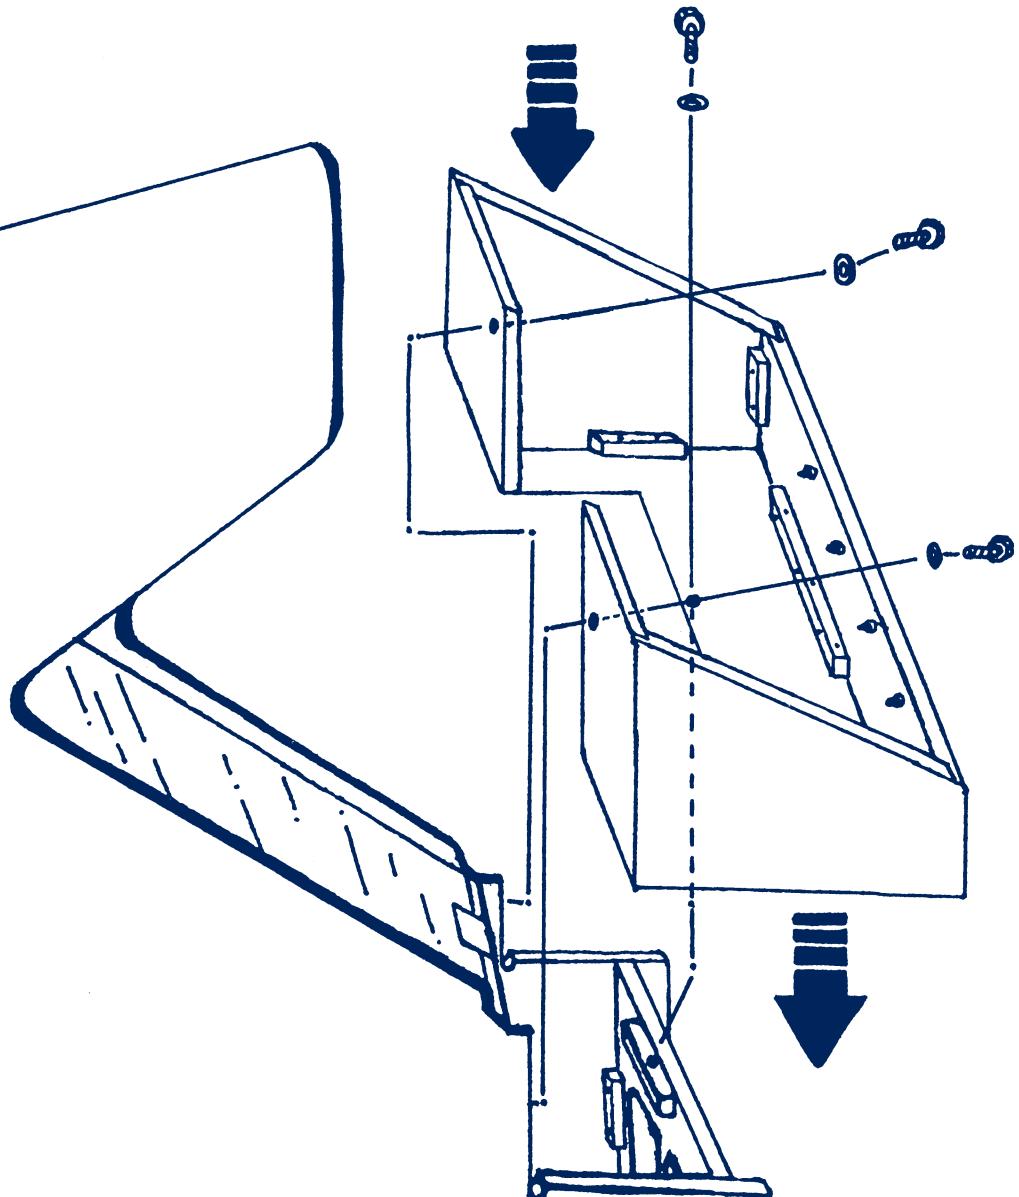

Three Screws and Lock Washers  
are provided Taped Inside Control  
Panel. Please Assemble as shown.

# VENDETTA™ TECHNICAL INFORMATION

## TECHNICAL INFORMATION

- (1) Required power capacity  
GND-Vcc 5V 4A or more  
GND-(+12V)  
\*See the Wiring Diagram.
- (2) Output  
R (red) analog, positive  
G (green) analog, positive  
B (blue) analog, positive  
SYNC. H-V complexed, negative
- (3) The monitor should be horizontally installed.
- (4) Use the volume knob on the PCB to adjust sound level.  
Turn the knob clockwise for increased volume. In monaural output mode, use the left volume knob.
- (5) Handle with care.

## CABINET INFORMATION

- (1) Use a multi control upright cabinet with four sets of an 8-way joystick and two function buttons.
- (2) Four independent coin slots are necessary. Start buttons are substituted by the function buttons for each player.



8-Way  
Joystick



Punch  
Button



Kick  
Button

## PLAY INSTRUCTION

- 1 to 4 players.
- Decide the character you want to control out of the four Cobras. Deposit coin(s) in coin slot of your favorite character and press the punch or kick button to start the game.
- Control your character using the 8-way joystick and attack the enemies by using the punch and kick button.
- Press the punch and kick button simultaneously for a stronger attack.
- Waggle the joystick or press the button repeatedly to avoid enemy attack when you are captured or floored.
- Press the punch and kick button on coming closer to the enemies to hold them for your advantageous attack. (e.g.—You can head-lock the enemies, throw them away and etc.)
- Pick up weapons (a bat, a knife, a shotgun and etc.) for special attack. And pick up items on the ground (a wooden box, a gasoline drum, a water bucket, a bottle, a barrel and etc.) to throw at enemies.  
\*Please note: All items as weapons are limited in number of their use.
- Pick up food (a roast chicken and etc.) to restore your energy.
- You will lose a life when your energy is exhausted. The game is over when you have used up all your lives.
- There are 8 stages and one extra stage. Each stage has three or four scenes.
- You may continue the game as many times as you want. Any player can join at any time.

# VENDETTA™ TECHNICAL INFORMATION (cont.)

## SELF TEST

Normal: OK will be displayed. Then the game will start.  
Abnormal: BAD will be displayed and self test will repeat itself. If “13B BAD” is displayed, switch off and switch on again with TEST SWITCH (on the PCB) pressed.

## MANUAL TEST

### (1) HOW TO START

After switching on the power, press the TEST SWITCH on the PCB or on the cabinet, and you will get the MENU SCREEN of the Manual Test.

NOTE: Switching on with TEST SWITCH pressed causes the program in the EEPROM to be initialized to default.

### (2) HOW TO RETURN TO THE GAME MODE

Select “EXIT” on the MENU SCREEN to return to the game mode.

### (3) ITEMS AND HOW TO SELECT

Move arrow with 1P JOYSTICK to desired test and press 1P PUNCH button to begin. Select “EXIT” to return to the MENU SCREEN.

- 1. ROM Check
- 2. Screen Check
- 3. Color Check
- 4. I/O Check
- 5. Music Check
- 6. Sound Check
- 7. Coin, Game Options
- .EXIT

### (4) EXPLANATION OF THE ITEMS

#### 1. ROM CHECK

Roms will be checked one after another, and the message “OK” or “BAD” and check-sums will be displayed on the screen.

In this test only, you cannot return to the MENU SCREEN until the test is through.

#### 2. SCREEN CHECK

Adjust focus, alignment, size, etc. using the cross-hatch screen.

#### 3. COLOR CHECK

Adjust color brightness.

#### 4. I/O CHECK

Check all the joysticks and buttons to see “1” when switched on.

#### 5. MUSIC CHECK

Select “NEXT MUSIC” to change music.

#### 6. SOUND CHECK

Next sound code is called automatically. Select “NEXT SOUND” to change it quicker.

# VENDETTA™ GAME SET UP

## 7. COIN, GAME OPTIONS

Following screen will appear. Use JOYSTICK to select the option to modify and press PUNCH button. After modification is completed in the sub-screen, select EXIT to save and return to this screen.

### 7. COIN, GAME OPTIONS

#### 7-1. COIN SETTING

STARTING 1 COIN 1 CREDIT  
CONTINUE 1 COIN 1 CREDIT

#### 7-2. NUMBER OF PLAYERS

2 PLAYERS

#### 7-3. DIFFICULTY

NORMAL

#### 7-4. SOUND IN ATTRACT MODE

ON

#### 7-5. VIDEO SCREEN FLIP

NORMAL

#### 7-6. SOUND OUTPUT

STEREO

#### 7-7. FACTORY SETTING

.EXIT

### 7-1. COIN SETTING

Selecting this item, the screen shows following options.

#### PREMIUM START SETTING

OFF  
 ON  
 EXIT

COINS	CREDITS
1	1
1	2
1	3
1	4
1	5
1	6
1	7
2	1
2	3
2	5
3	1
3	2
3	4
4	1
4	3
4	5

- ① When "PREMIUM START OFF" is selected, the number of coins necessary for starting and for continuation will be the same. Select "EXIT" and return to the original screen.

# VENDETTA™ GAME SET UP (Cont.)

- ② When "PREMIUM START ON" is selected, choose the number of extra coins for premium start, then decide the coin setting for continuation. The number of coins for starting will be the sum of both numbers.

PREMIUM START SETTING		
	OFF	
<input type="radio"/>	ON	
EXIT		
NUMBER OF EXTRA COINS FOR PREMIUM START	<input type="radio"/>	COINS
		CREDITS
1	1	1
2	1	2
3	1	3
4	1	4
5	2	5
	2	6
	2	7
	3	8
	3	9
	3	10
	4	11
	4	12
	4	13

\*  shows recommended setting for PREMIUM START

## 7-2. NUMBER OF PLAYERS LIVES

- . 1 LIFE
- . 2 LIVES
- . 3 LIVES
- . 4 LIVES
- . 5 LIVES
- . 6 LIVES
- . 7 LIVES
- . EXIT

## 7-3. DIFFICULTY LEVEL

- . EASY
- . NORMAL
- . DIFFICULT
- . VERY DIFFICULT
- . EXIT

## 7-4. SOUND IN ATTRACT MODE

- . OFF
- . ON
- . EXIT

## 7-5. VIDEO SCREEN FLIP

- . NORMAL
- . UPSIDE DOWN
- . EXIT

## 7-6. SOUND OUTPUT

- . MONAURAL
- . STEREO
- . EXIT

\*  shows recommended settings.

## 7-7. FACTORY SETTING

All the settings returns to default by selecting "FACTORY SETTING."

# VENDETTA™: SUB HARNESS FOR 3 PLAYERS & 4 PLAYERS

---

CN3 3P CONTROLS	1	Coin 3	White/Violet
	2	Empty	
	3	3P Left	White/Red
	4	3P Right	White/Yellow
	5	3P Up	White/Black
	6	3P Down	White/Blue
	7	3P Punch	White/Brown
	8	3P Kick	White/Orange
	9	Empty	
	10	Empty	
	11	Empty	
	12	Empty	
	13	Empty	
	14	Empty	
	15	Ground	Black
CN4 4P CONTROLS	1	Coin 4	Blue
	2	Empty	
	3	4P Left	Yellow/Black
	4	4P Right	Brown/Black
	5	4P Up	Green/Yellow
	6	4P Down	Yellow/Red
	7	4P Punch	Yellow/White
	8	4P Kick	Yellow/Blue
	9	Empty	
	10	Empty	
	11	Empty	
	12	Empty	
	13	Empty	
	14	Empty	
	15	Ground	Black

# VENDETTA™: WIRING HARNESS


## WIRE COLOR KEY:

Solder Side ← → Parts Side

BLACK	GND	A	1	GND	BLACK
BLACK	GND	B	2	GND	BLACK
RED	+5V DC	C	3	+5V DC	RED
RED	+5V DC	D	4	+5V DC	RED
ORANGE	NOT USED	E	5	NOT USED	
	+ 12V DC	F	6	+ 12V DC	ORANGE
	*KEY	H	7	*KEY	
	(EMPTY)	J	8	COIN COUNTER	GREEN/VIOLET
	(EMPTY)	K	9	(EMPTY)	
	(EMPTY)	L	10	(EMPTY)	
	(EMPTY)	M	11	(EMPTY)	
WHITE/GREEN	VIDEO GREEN	N	12	VIDEO RED	RED/WHITE
WHITE	VIDEO SYNC	P	13	VIDEO BLUE	BLUE/WHITE
	(EMPTY)	R	14	VIDEO GROUND	BLACK
	(EMPTY)	S	15	TEST	YELLOW
VIOLET/WHITE	COIN 2	T	16	COIN 1	BLUE/BROWN
	NOT USED	U	17	(EMPTY)	
BLUE/YELLOW	2P UP	V	18	1P UP	ORANGE/WHITE
VIOLET/YELLOW	2P DOWN	W	19	1P DOWN	BLACK/WHITE
ORANGE/GREEN	2P LEFT	X	20	1P LEFT	RED/GRAY
ORANGE/YELLOW	2P RIGHT	Y	21	1P RIGHT	GRAY/WHITE
BLACK/YELLOW	2P PUNCH	Z	22	1P PUNCH	RED/WHITE
ORANGE/GRAY	2P KICK	a	23	1P KICK	GREEN/BROWN
	NOT USED	b	24	NOT USED	
	NOT USED	c	25	NOT USED	
	NOT USED	d	26	NOT USED	
BLACK	GND	e	27	GND	BLACK
BLACK	GND	f	28	GND	BLACK


(BASE COLOR/LINE COLOR)

# AC WIRING HARNESS

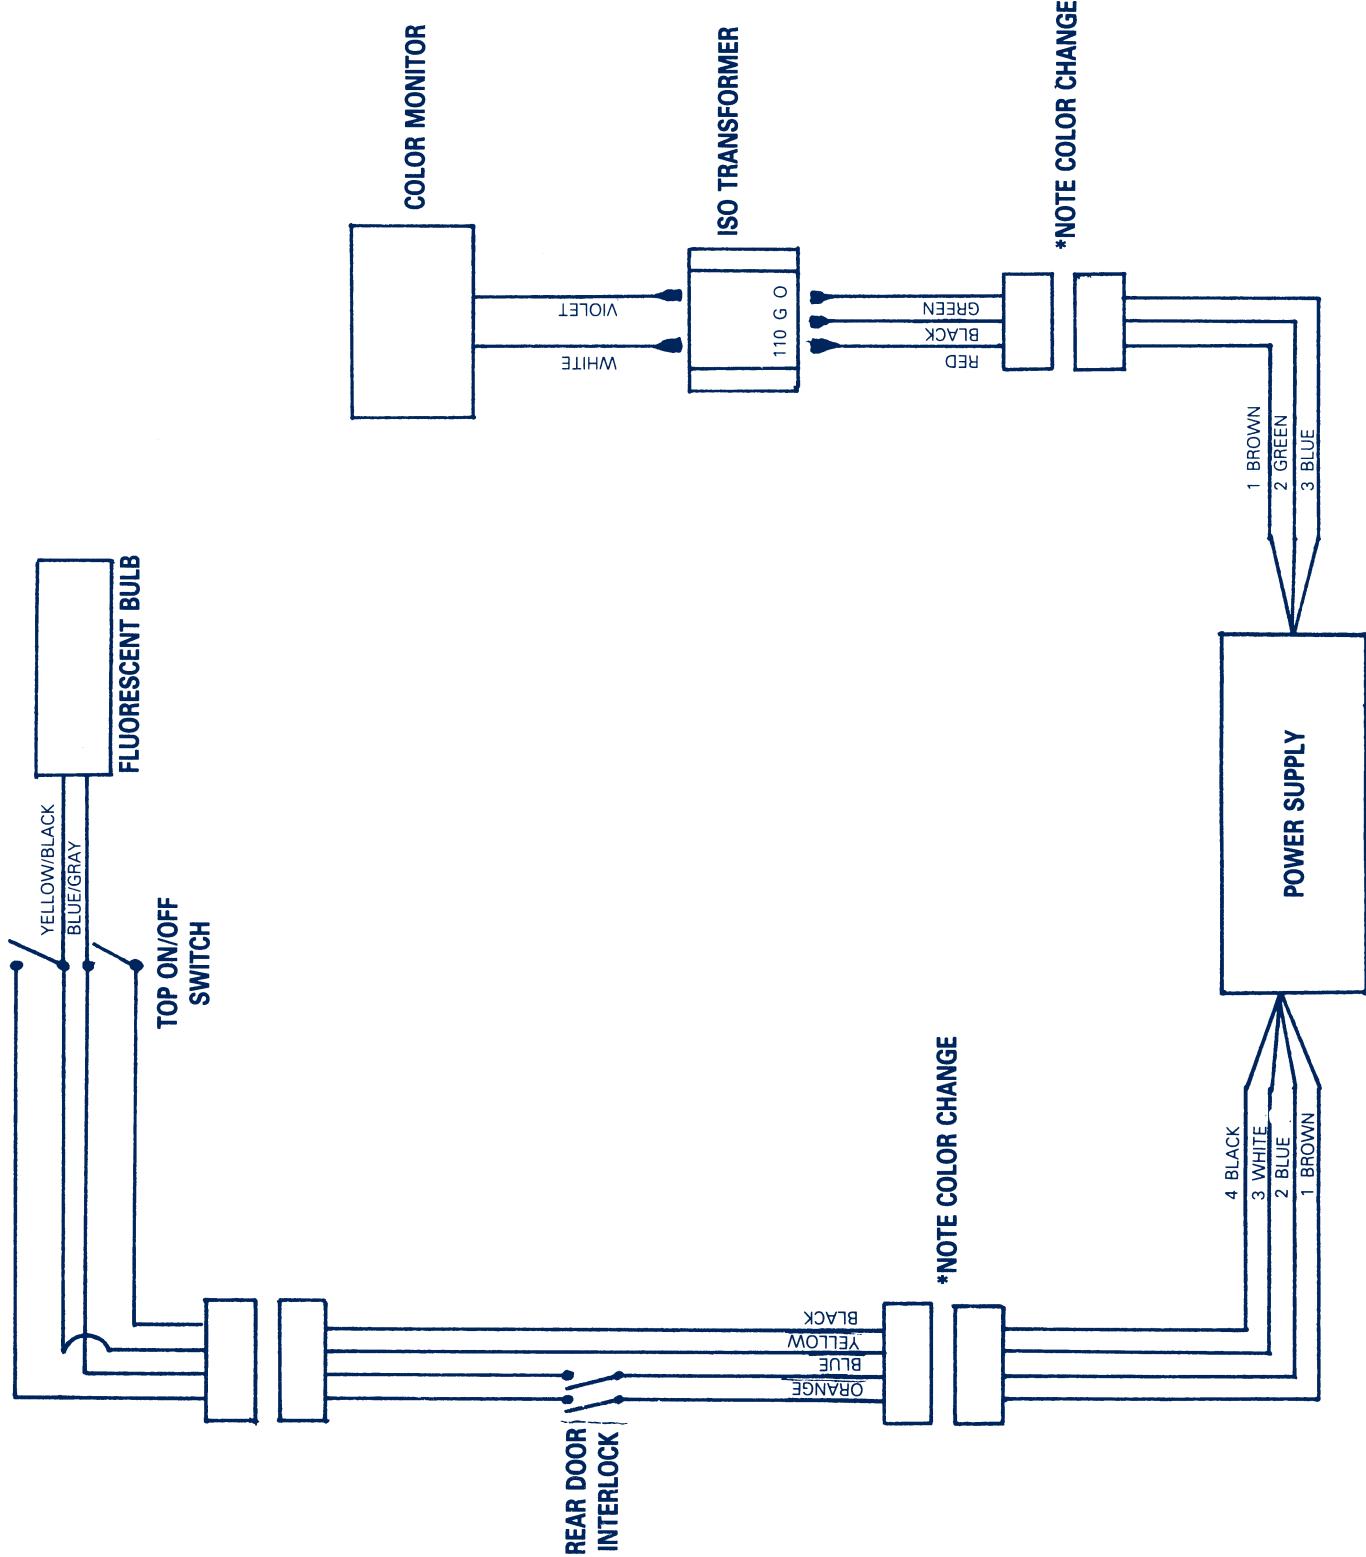

ASSEMBLY DRAWING  
GX081 PWB352292A  
(MASK , 4P Version)


352654

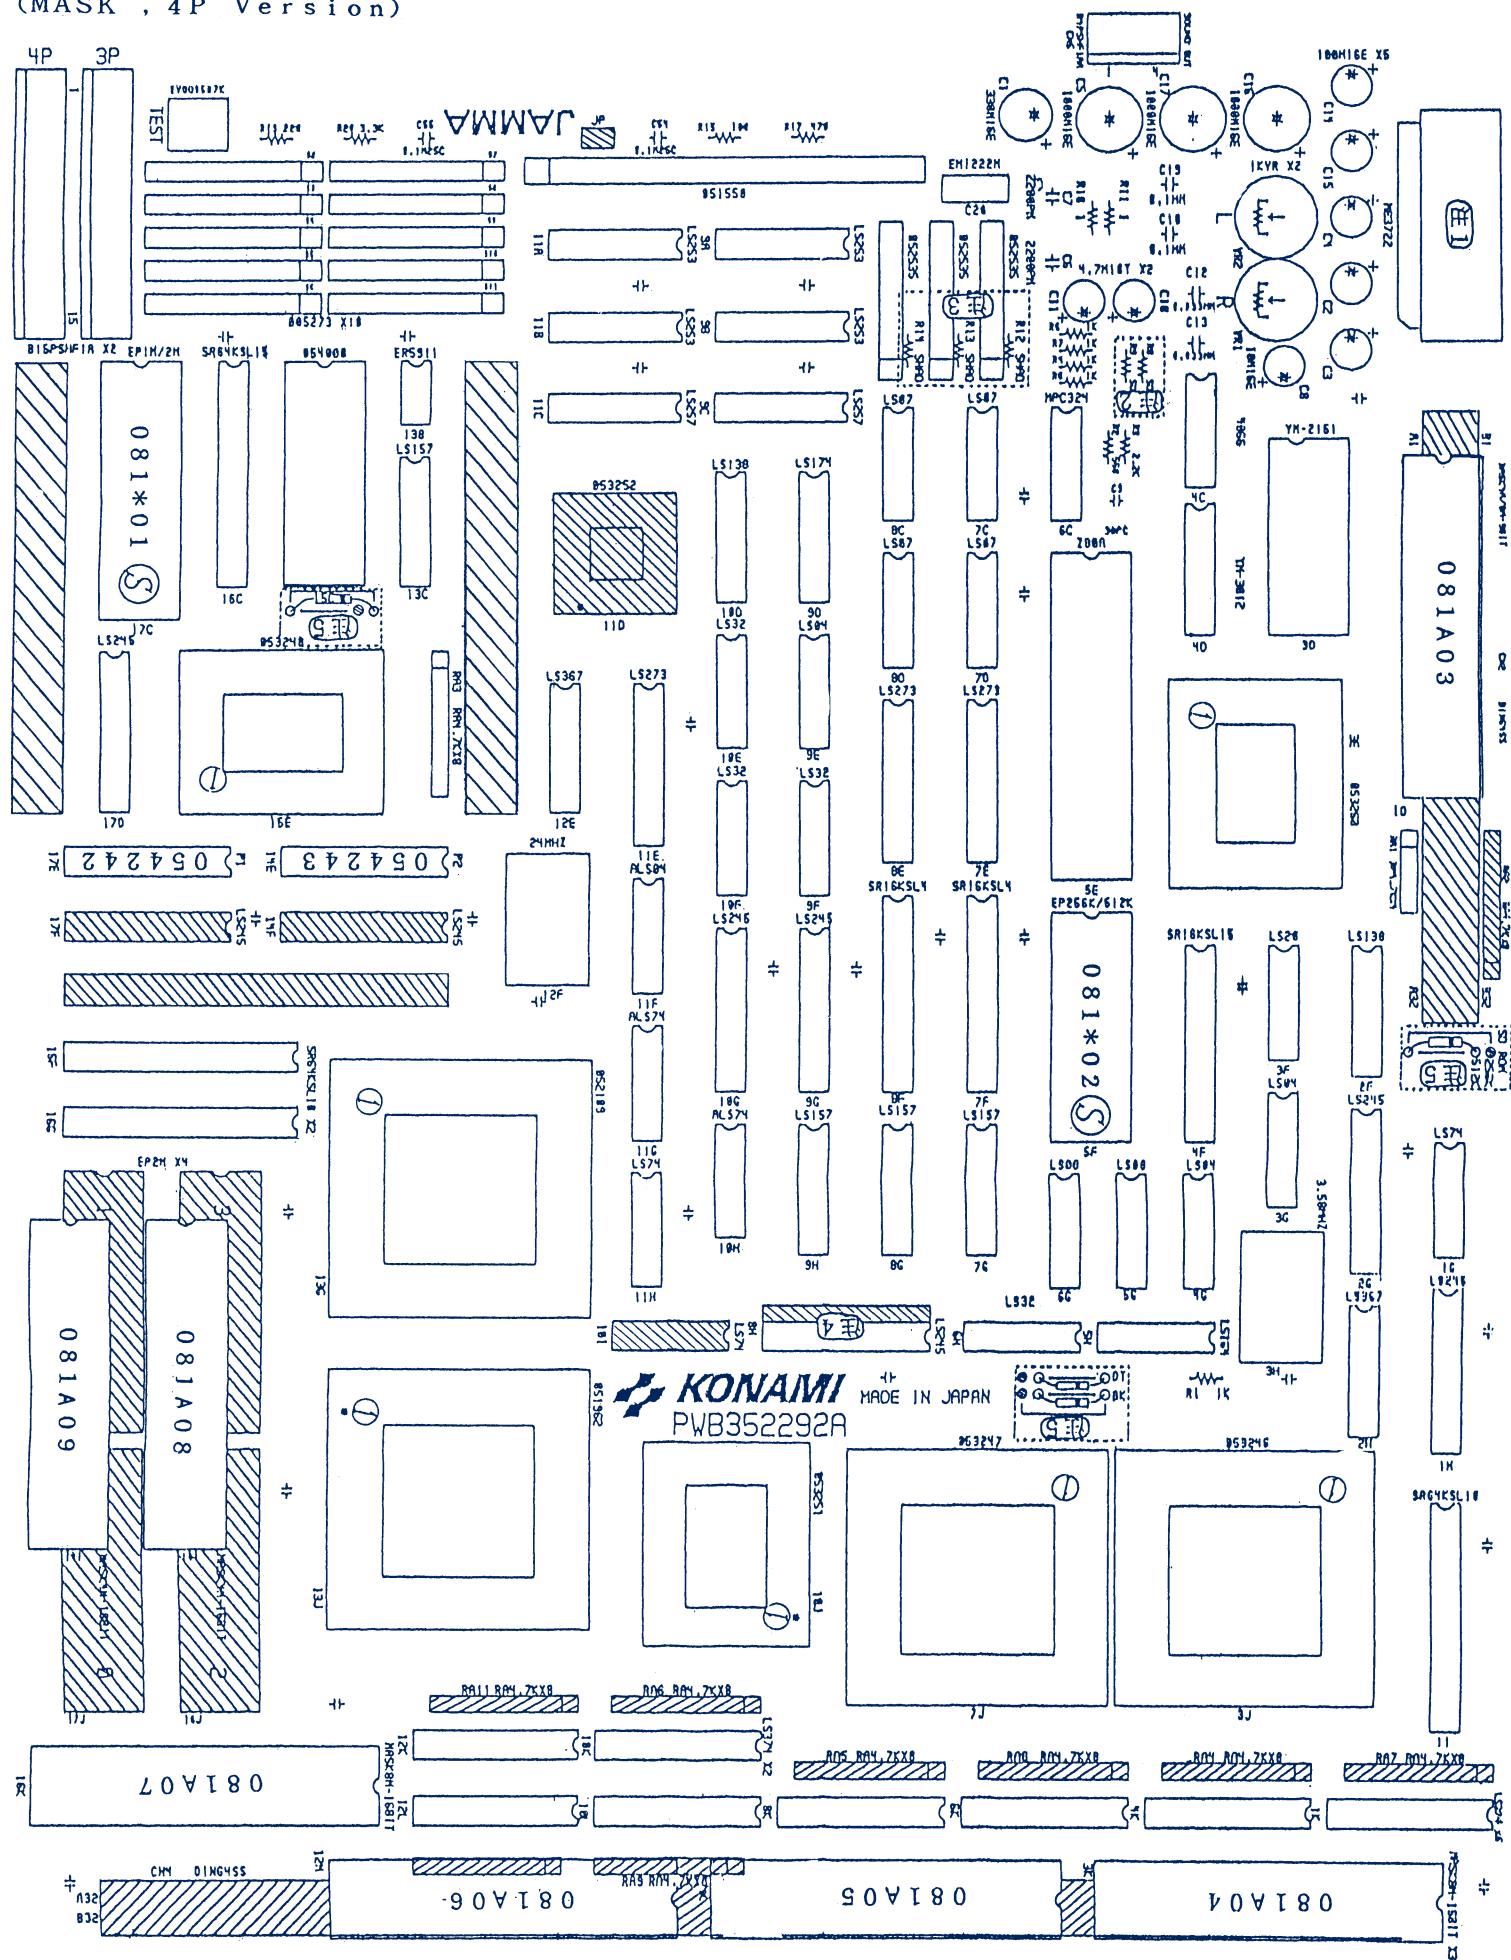



THIS EQUIPMENT COMPLIES  
WITH THE REQUIREMENTS IN  
PART 15 OF FCC RULES FOR A  
CLASS A COMPUTING DEVICE.  
OPERATION OF THIS EQUIP-  
MENT IN A RESIDENTIAL AREA  
MAY CAUSE UNACCEPTABLE  
INTERFERENCE TO RADIO AND  
TV RECEPTION REQUIRING THE  
OPERATOR TO TAKE WHATEVER  
STEPS ARE NECESSARY TO  
CORRECT THE INTERFERENCE.  
THIS DEVICE MUST ACCEPT  
ANY INTERFERENCE RECEIVED,  
INCLUDING INTERFERENCE  
THAT MAY CAUSE UNDESIRER  
OPERATION.



900 Deerfield Parkway, Buffalo Grove, 60089-4510  
Telephone: (708) 215-5100, Telex: 6871385 KONAM UW, Fax: (708) 215-5122

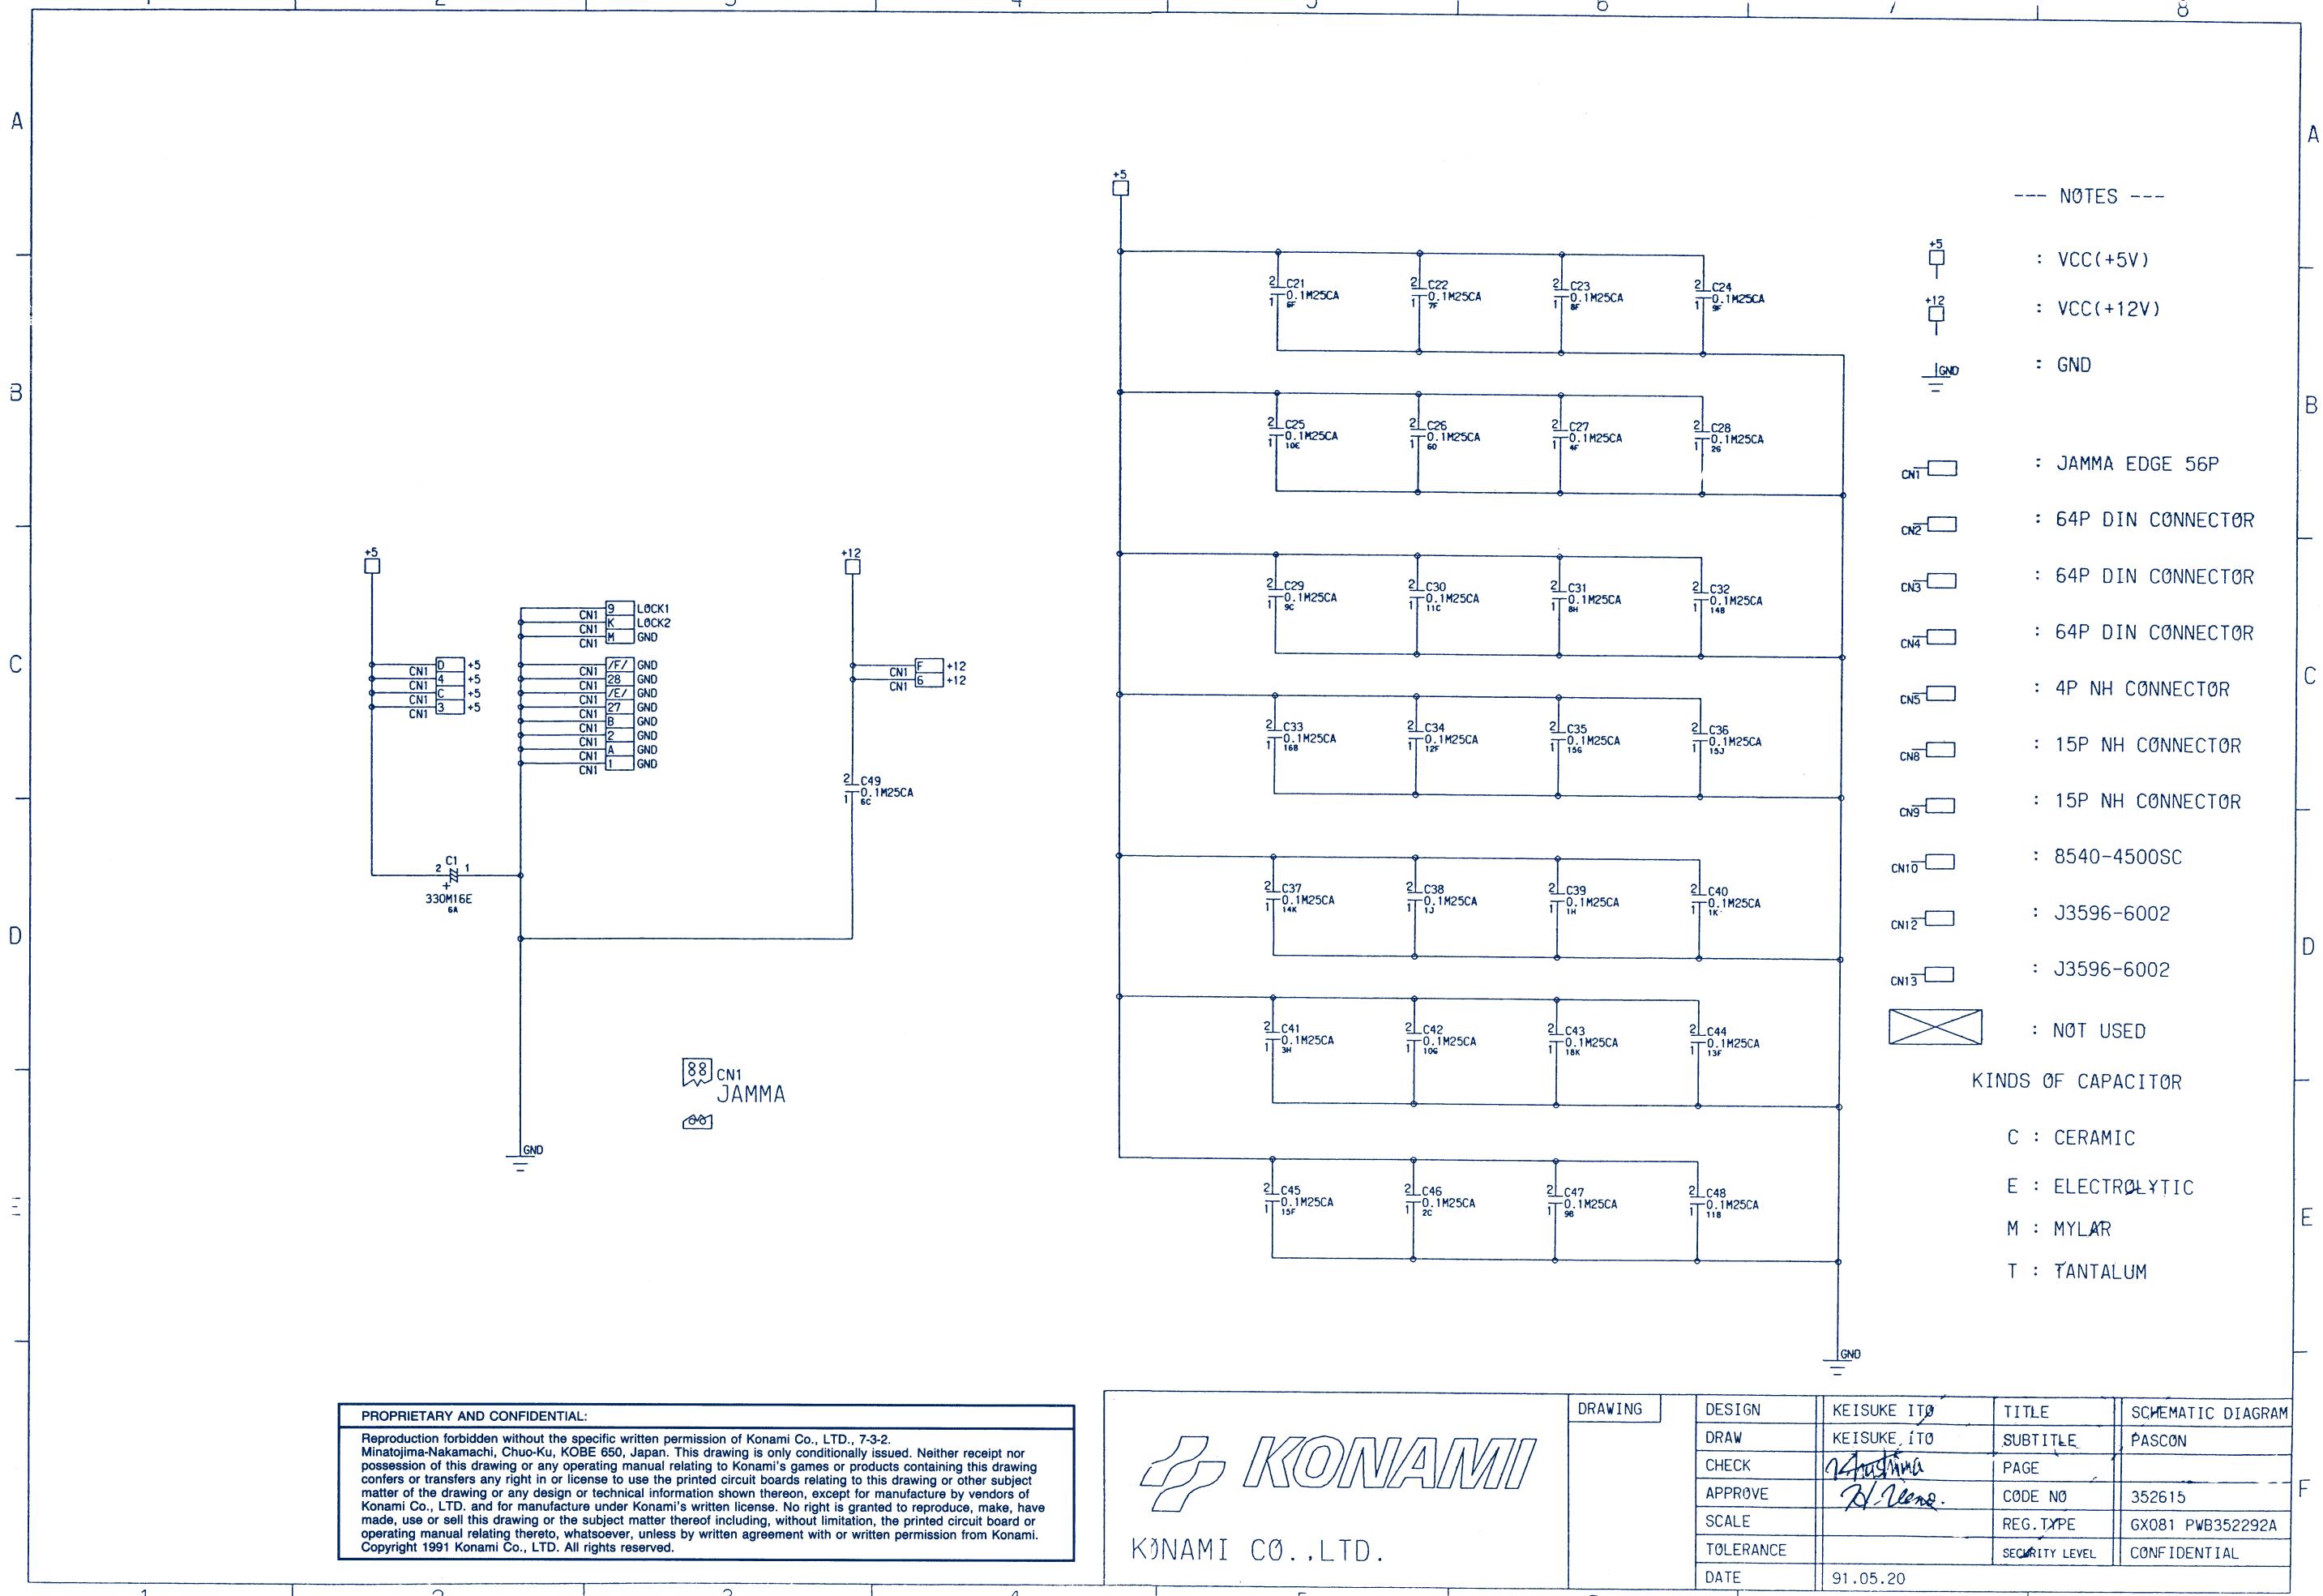

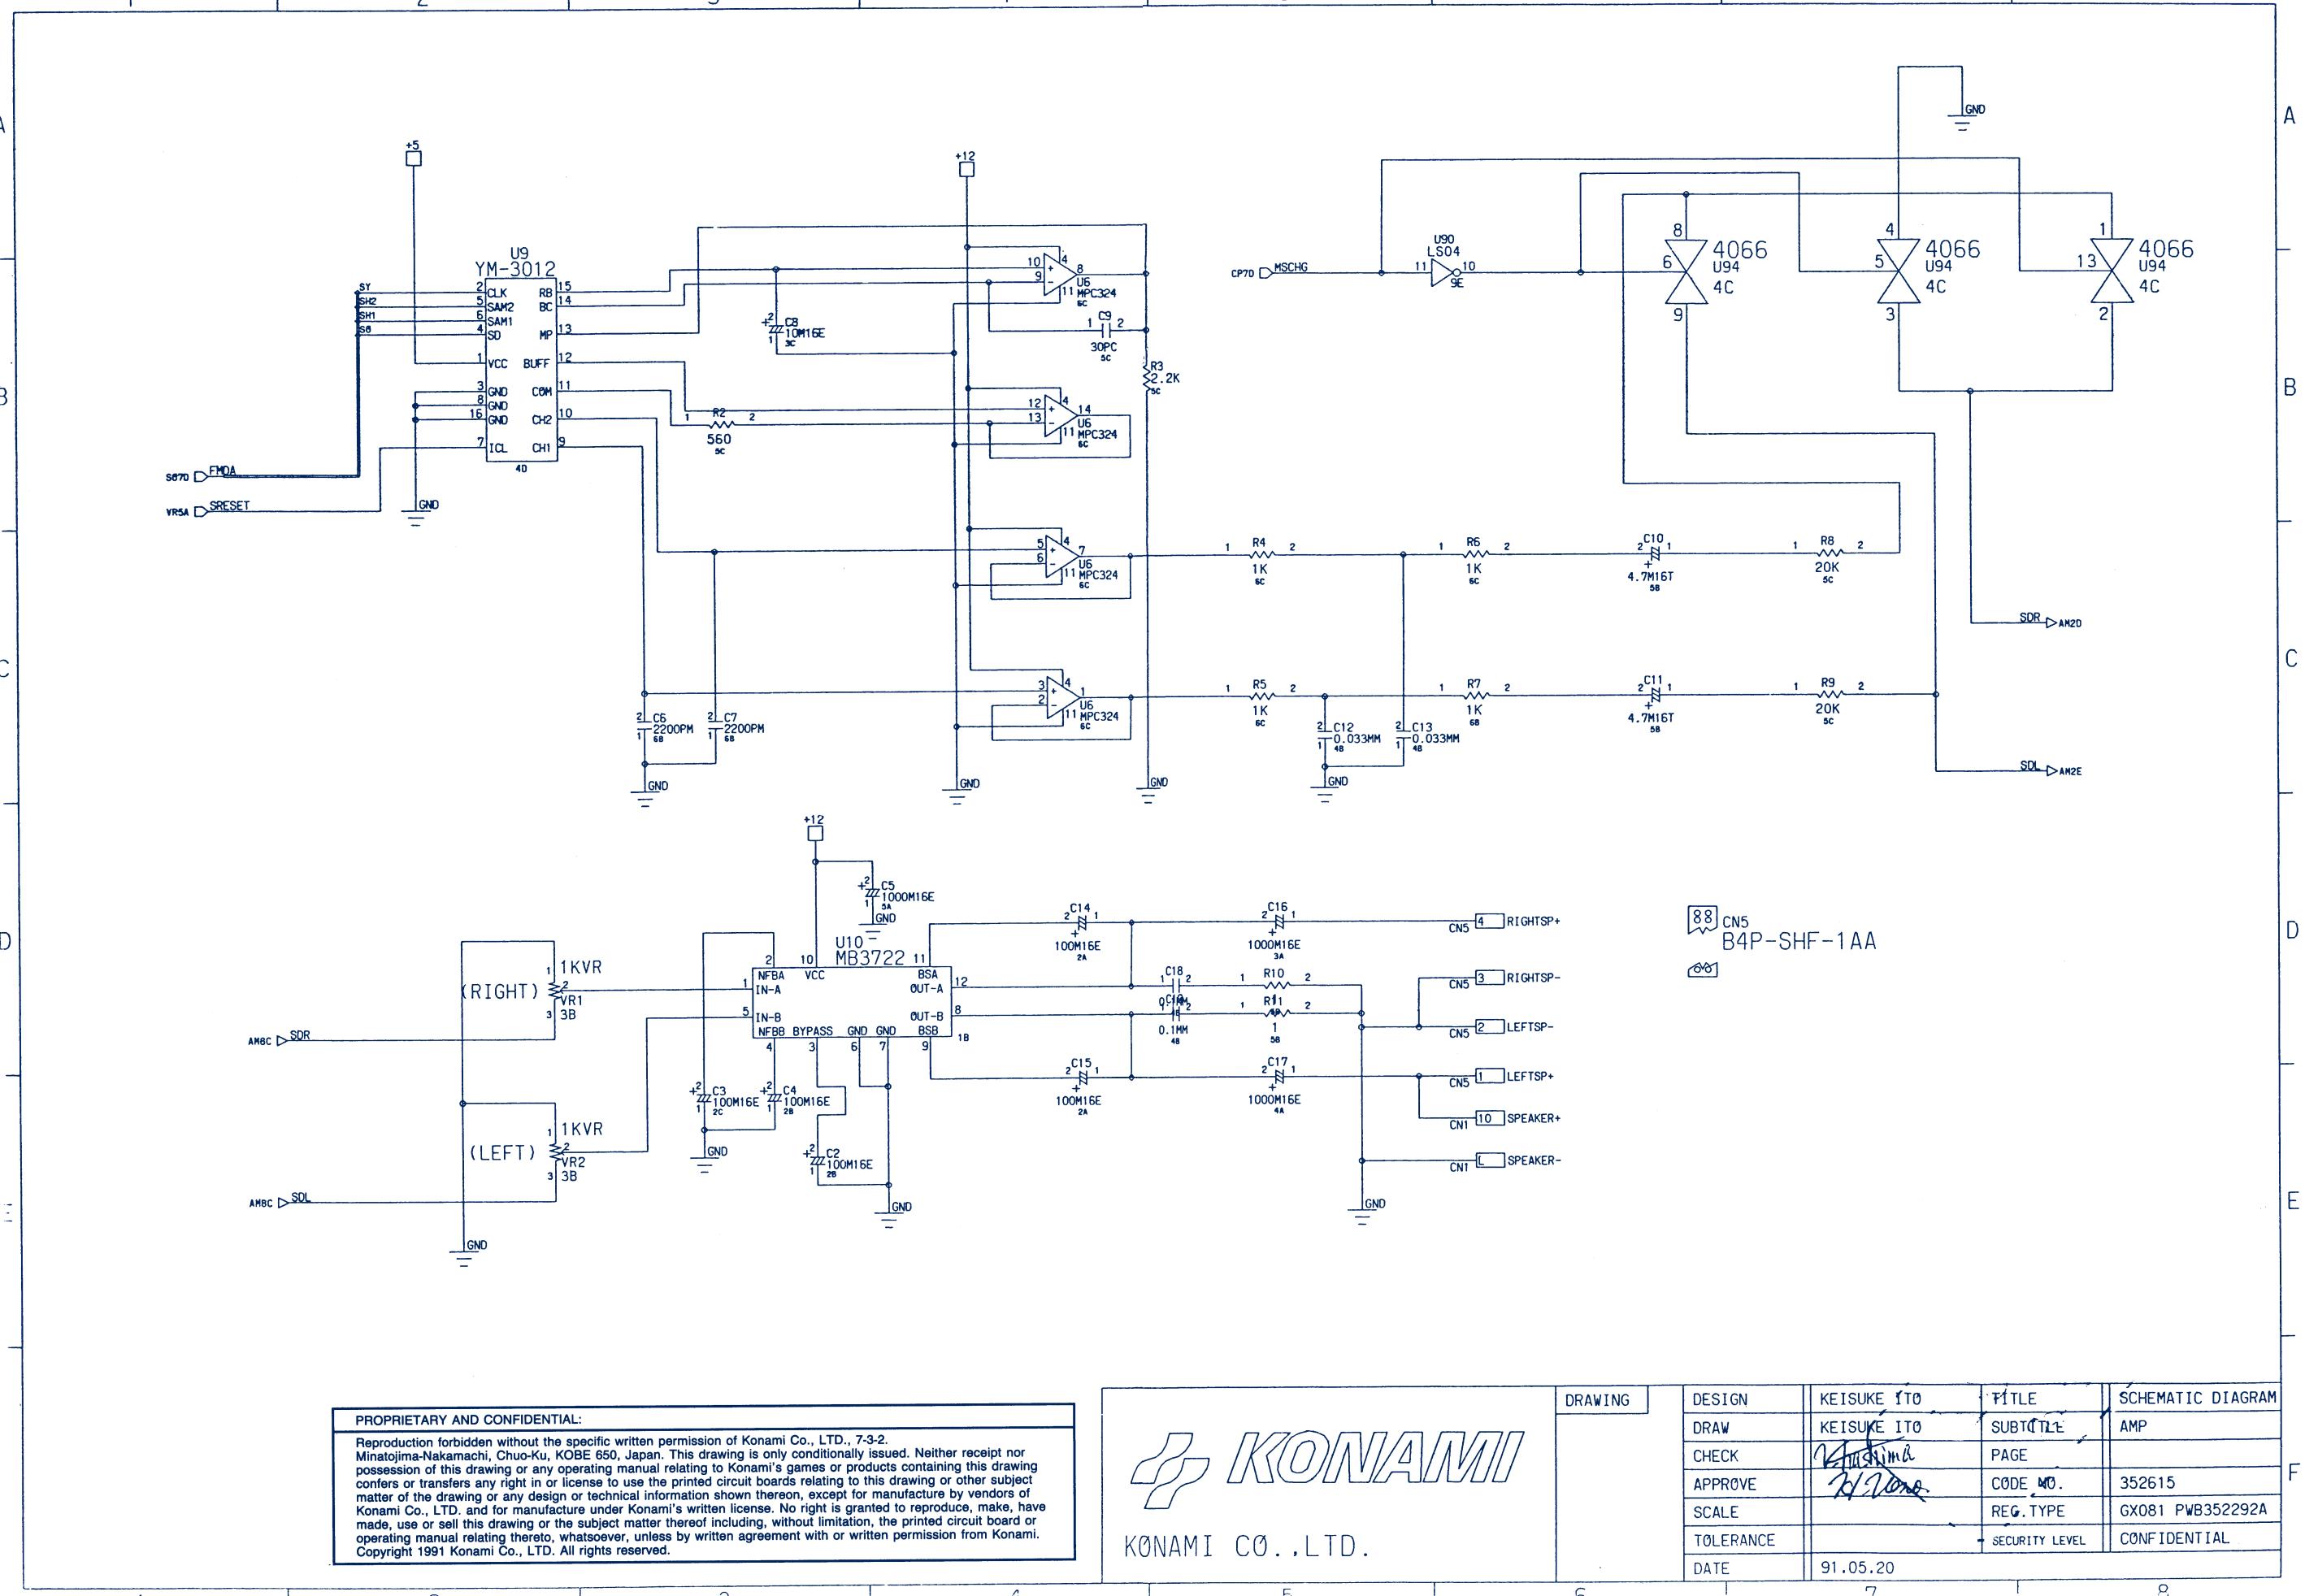

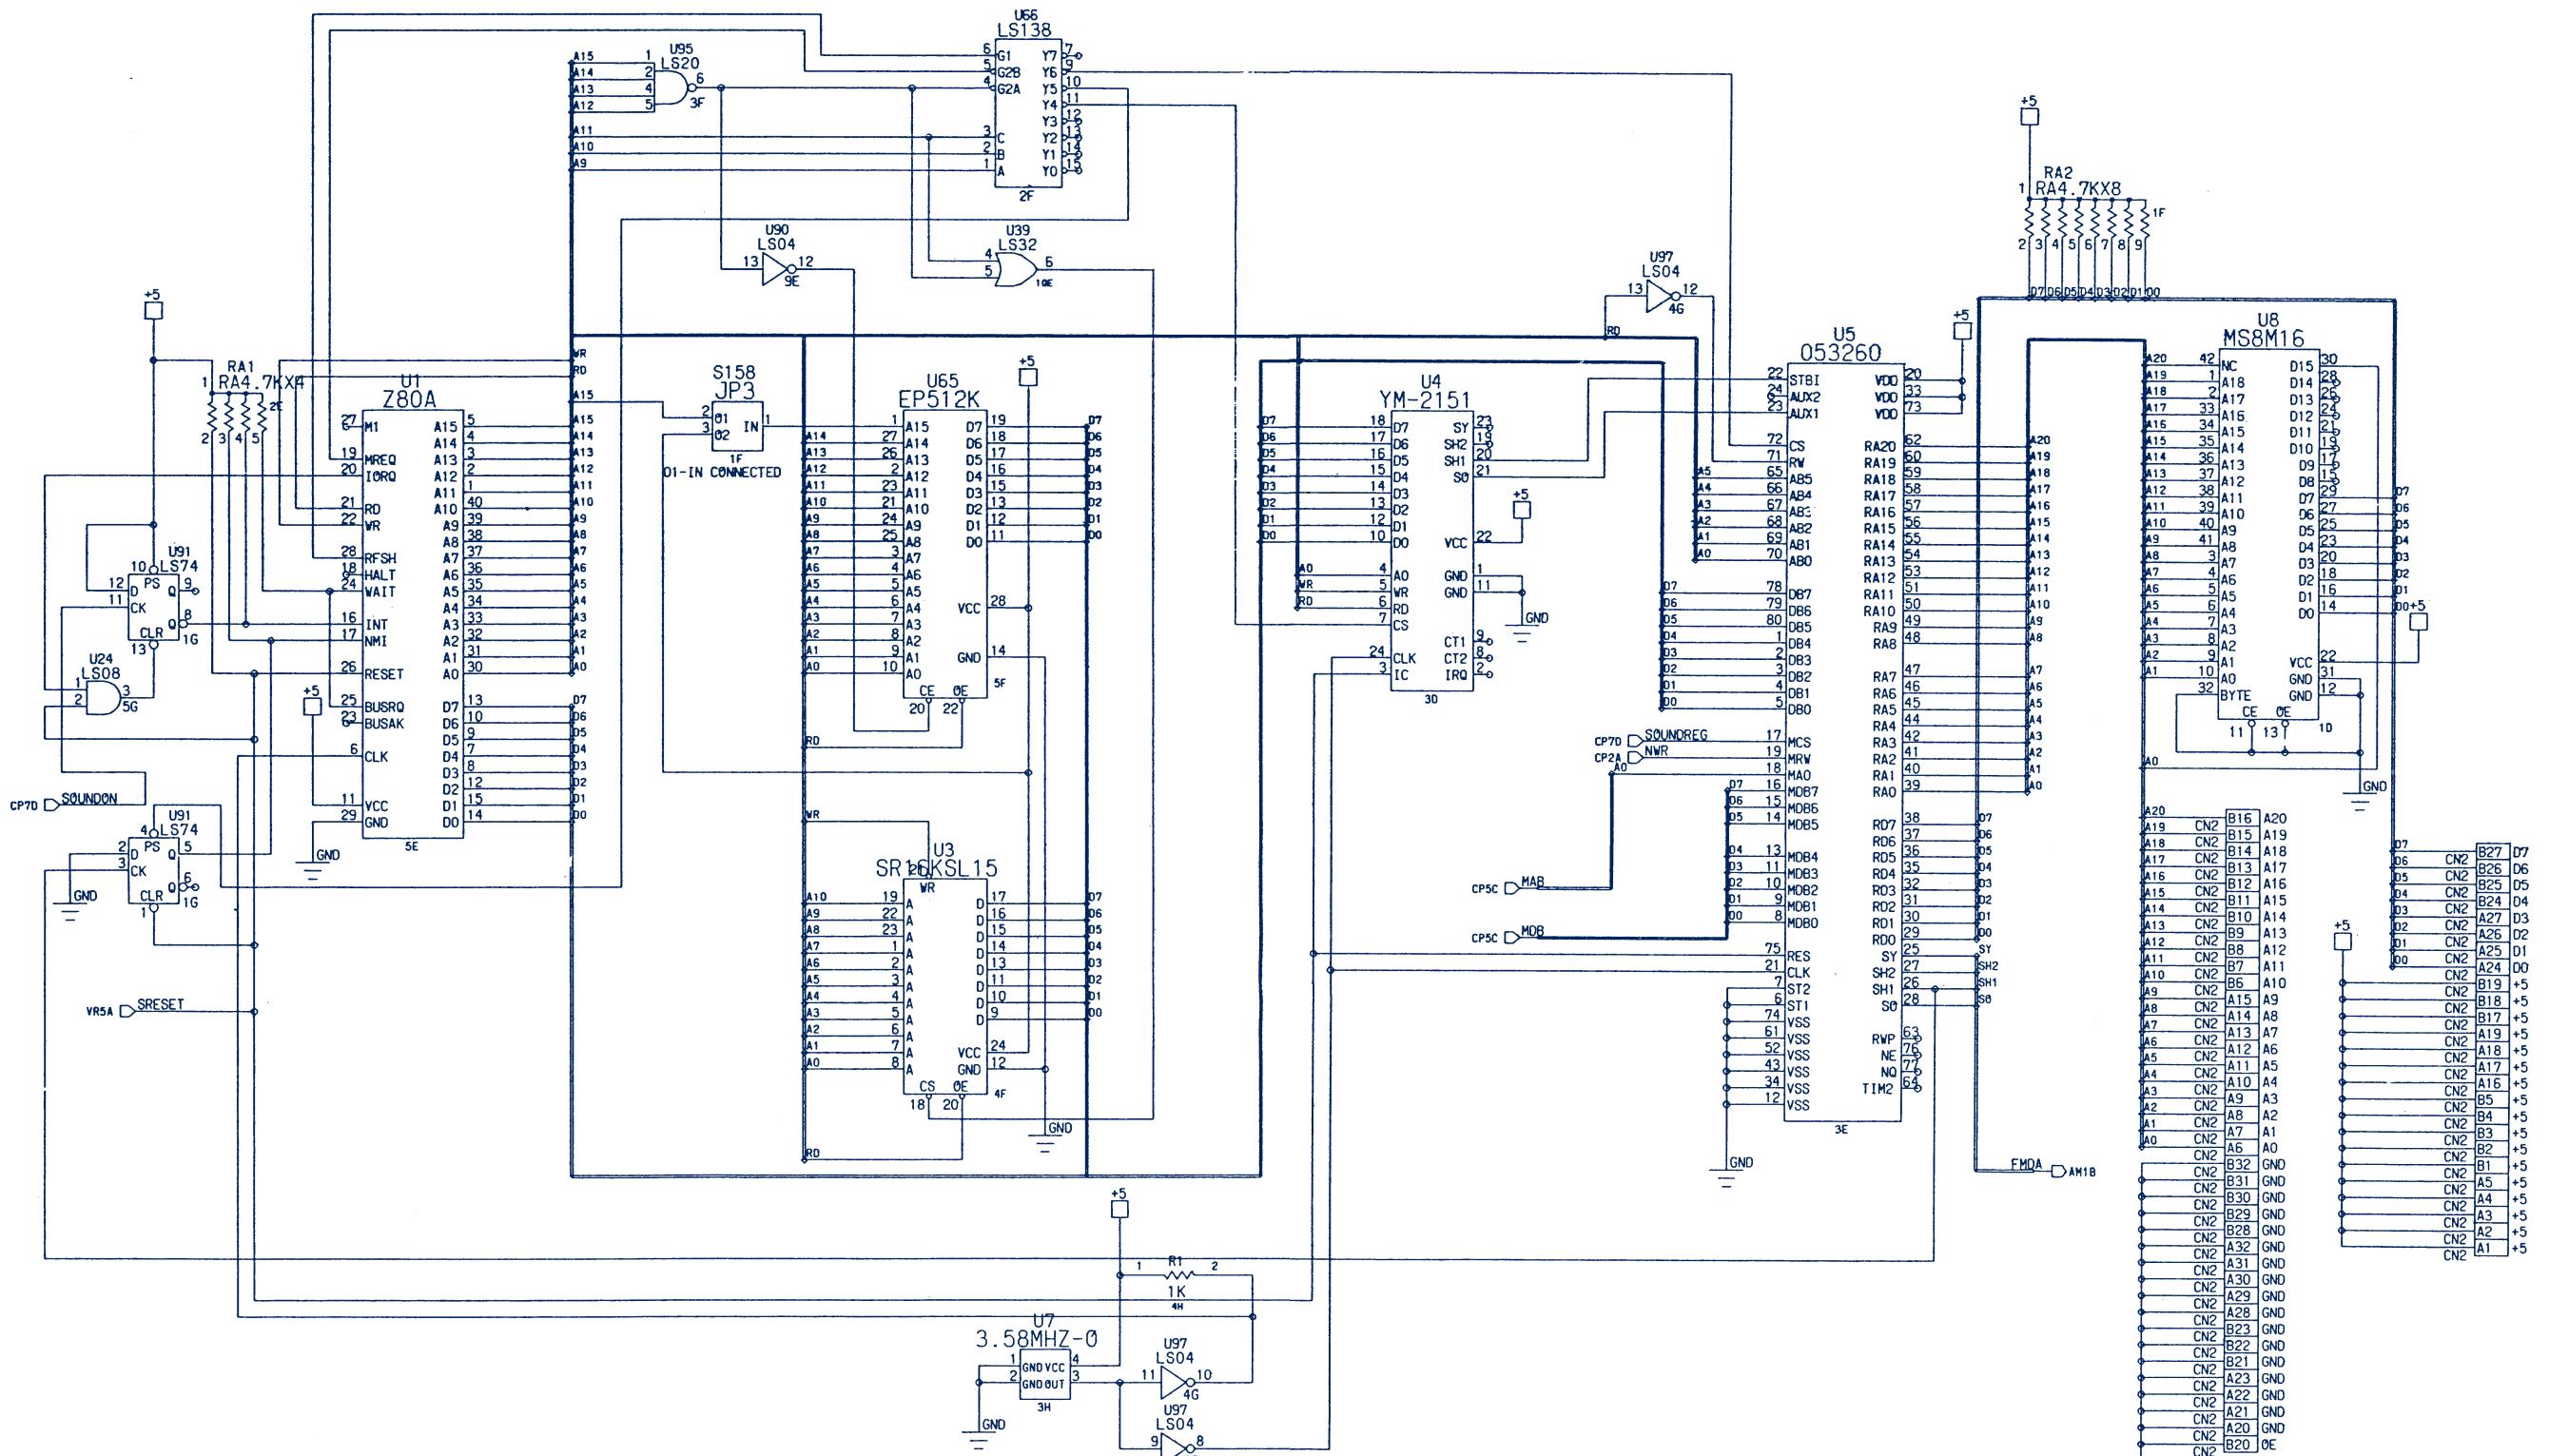


PROPRIETARY AND CONFIDENTIAL:

Reproduction forbidden without the specific written permission of Konami Co., LTD., 7-3-2.  
Minatojima-Nakamachi, Chuo-Ku, KOBE 650, Japan. This drawing is only conditionally issued. Neither receipt nor possession of this drawing or any operating manual relating to Konami's games or products containing this drawing confers or transfers any right in or license to use the printed circuit boards relating to this drawing or other subject matter of the drawing or any design or technical information shown thereon, except for manufacture by vendors of Konami Co., LTD. and for manufacture under Konami's written license. No right is granted to reproduce, make, have made, use or sell this drawing or the subject matter thereof including, without limitation, the printed circuit board or operating manual relating thereto, whatsoever, unless by written agreement with or written permission from Konami. Copyright 1991 Konami Co., LTD. All rights reserved.



KONAMI CO., LTD.

DRAWING	DESIGN	KEISUKE ITO	TITLE	SCHEMATIC DIAGRAM
DRAW		KEISUKE ITO	SUBTITLE	SOUND
CHECK		Yasutomo	PAGE	
APPROVE		Y. Ito.	CODE NO.	352615
SCALE			REG. TYPE	GX081 PWB352292A
TOLERANCE			SECURITY LEVEL	CONFIDENTIAL
DATE	91.05.20			

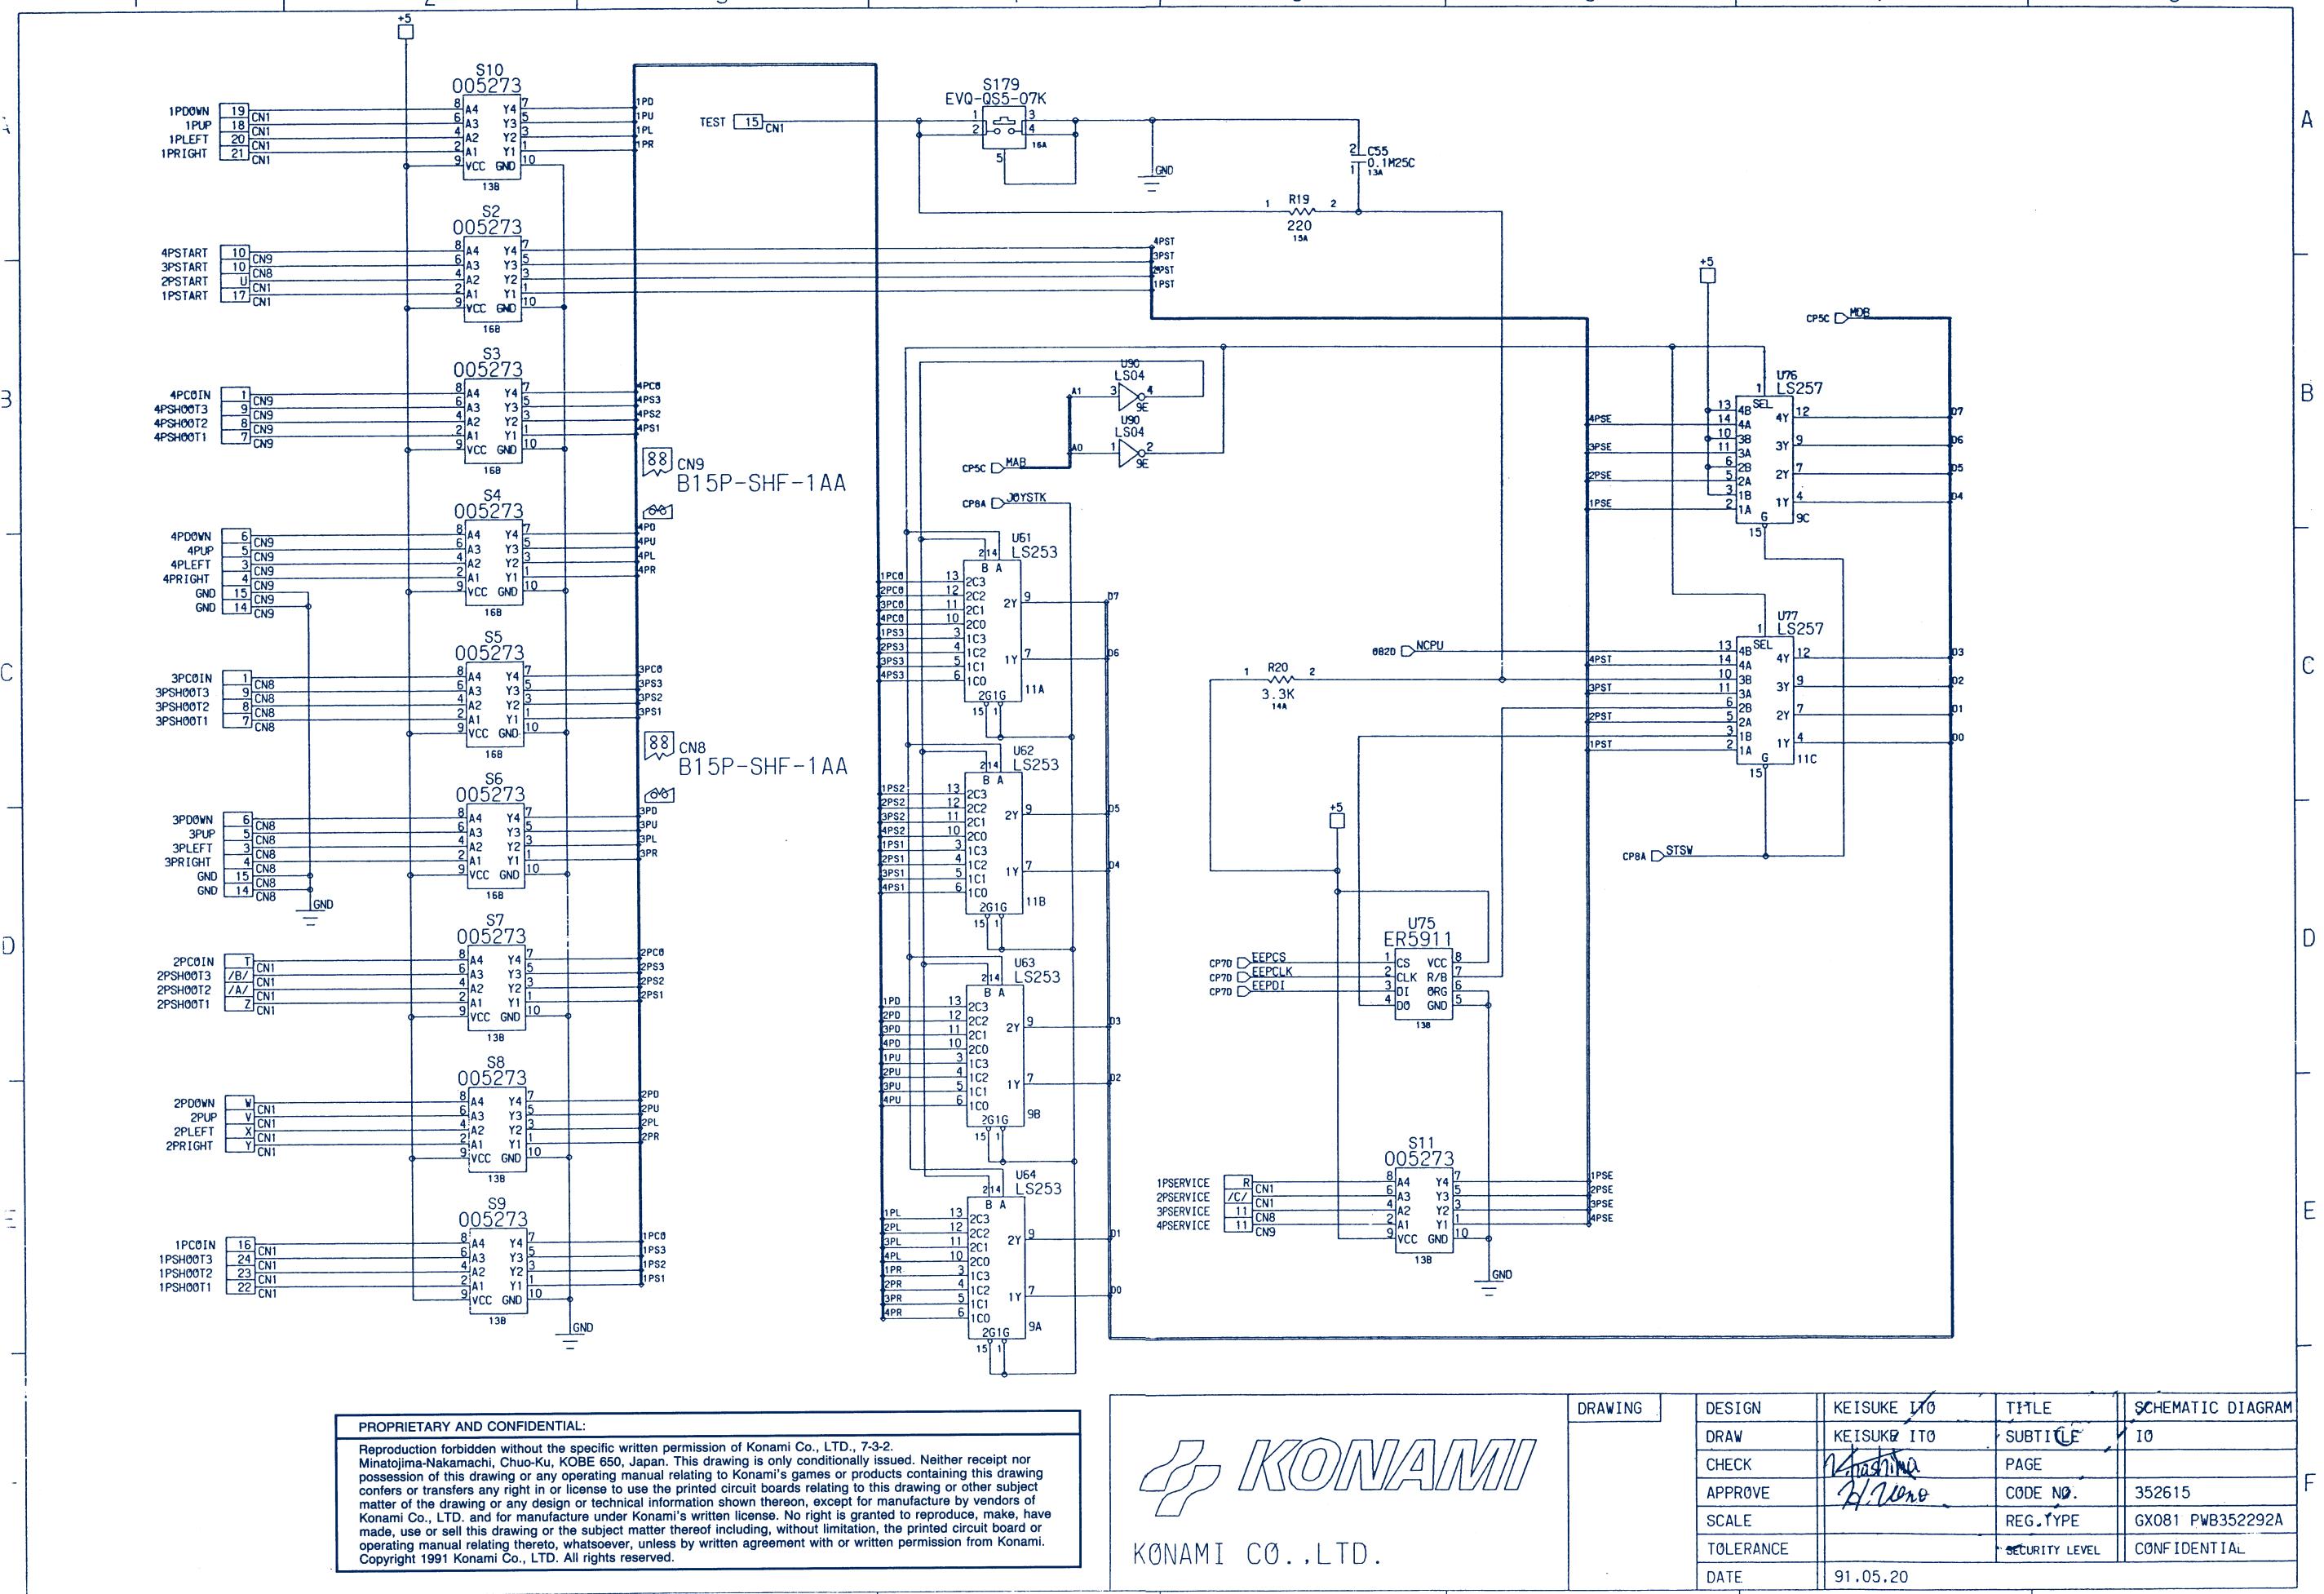

A


B

C

D

E

F

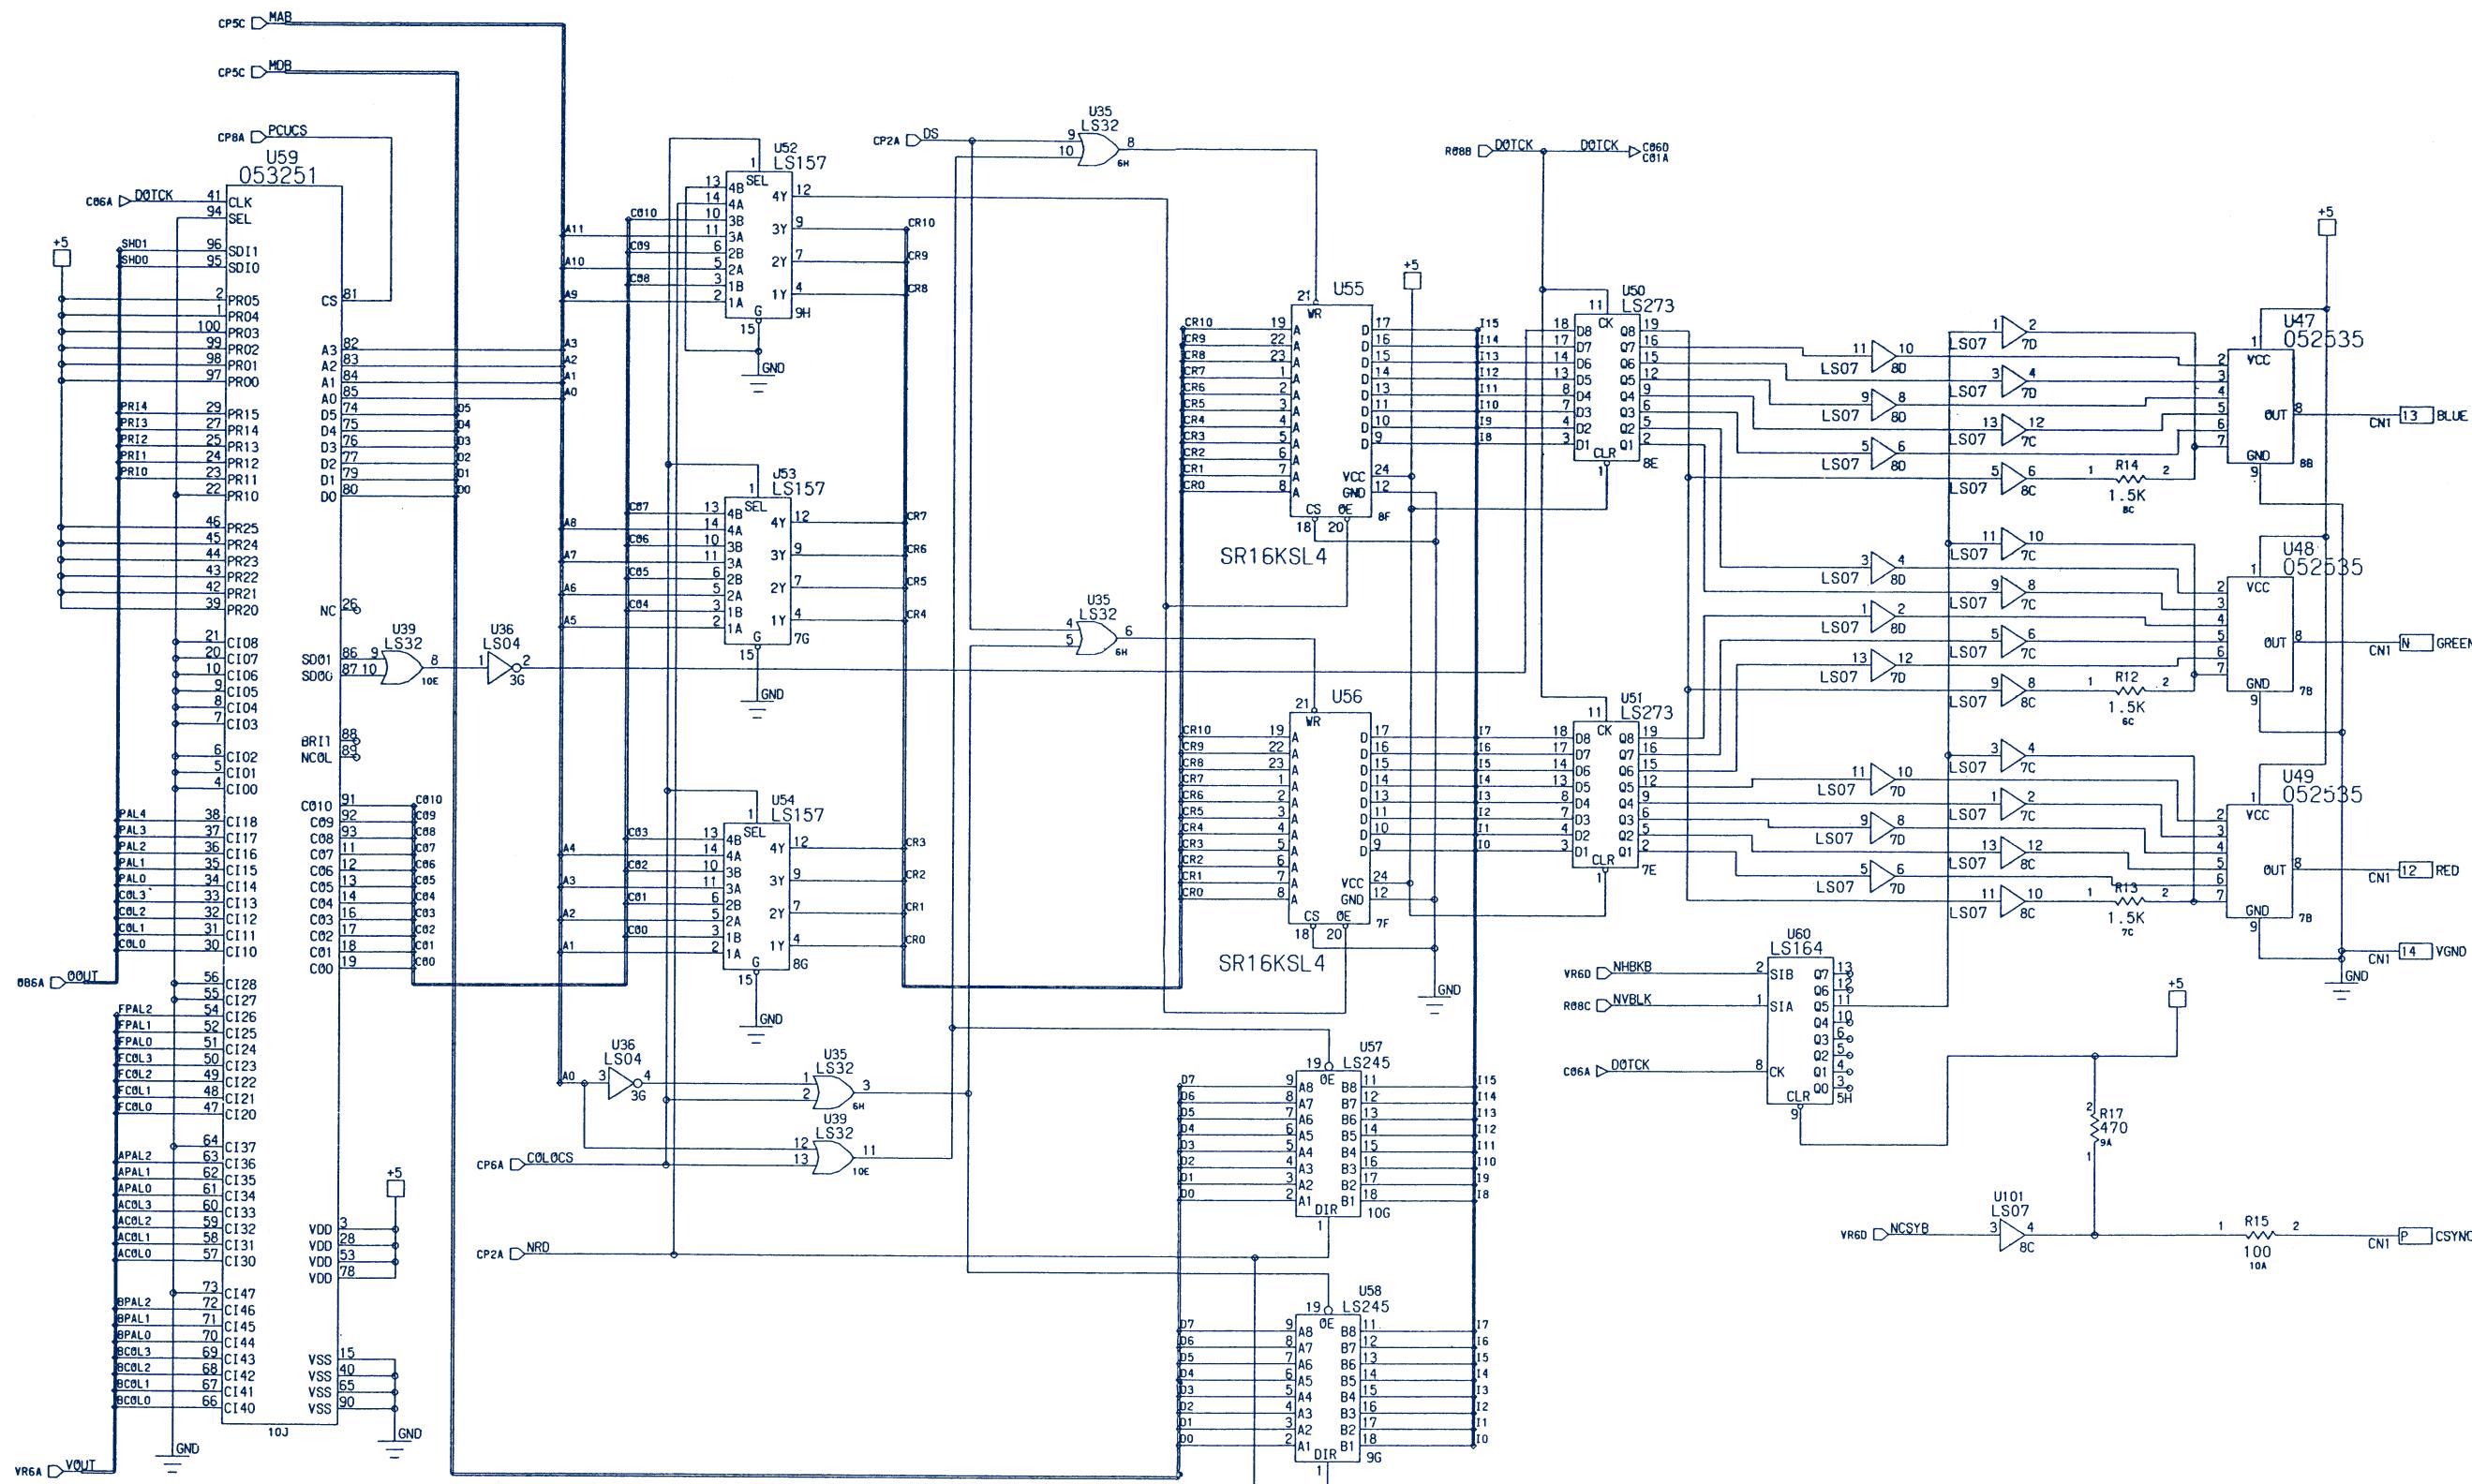



## PROPRIETARY AND CONFIDENTIAL:

Reproduction forbidden without the specific written permission of Konami Co., LTD., 7-3-2.  
Minatojima-Nakamachi, Chuo-Ku, KOBE 650, Japan. This drawing is only conditionally issued. Neither receipt nor possession of this drawing or any operating manual relating to Konami's games or products containing this drawing confers or transfers any right in or license to use the printed circuit boards relating to this drawing or other subject matter of the drawing or any design or technical information shown thereon, except for manufacture by vendors of Konami Co., LTD. and for manufacture under Konami's written license. No right is granted to reproduce, make, have made, use or sell this drawing or the subject matter thereof including, without limitation, the printed circuit board or operating manual relating thereto, whatsoever, unless by written agreement with or written permission from Konami. Copyright 1991 Konami Co., LTD. All rights reserved.



DRAWING	DESIGN	KEISUKE ITO	TITLE	SCHEMATIC DIAGRAM
DRAW	KEISUKE ITO	SUBTITLE	COLOR	
CHECK	Yoshimura	PAGE		
APPROVE	Z. Ito	CODE NO..	352615	
SCALE		REG. TYPE	GX081 PWB352292A	
TOLERANCE		SECURITY LEVEL	CONFIDENTIAL	
DATE	91.05.20			

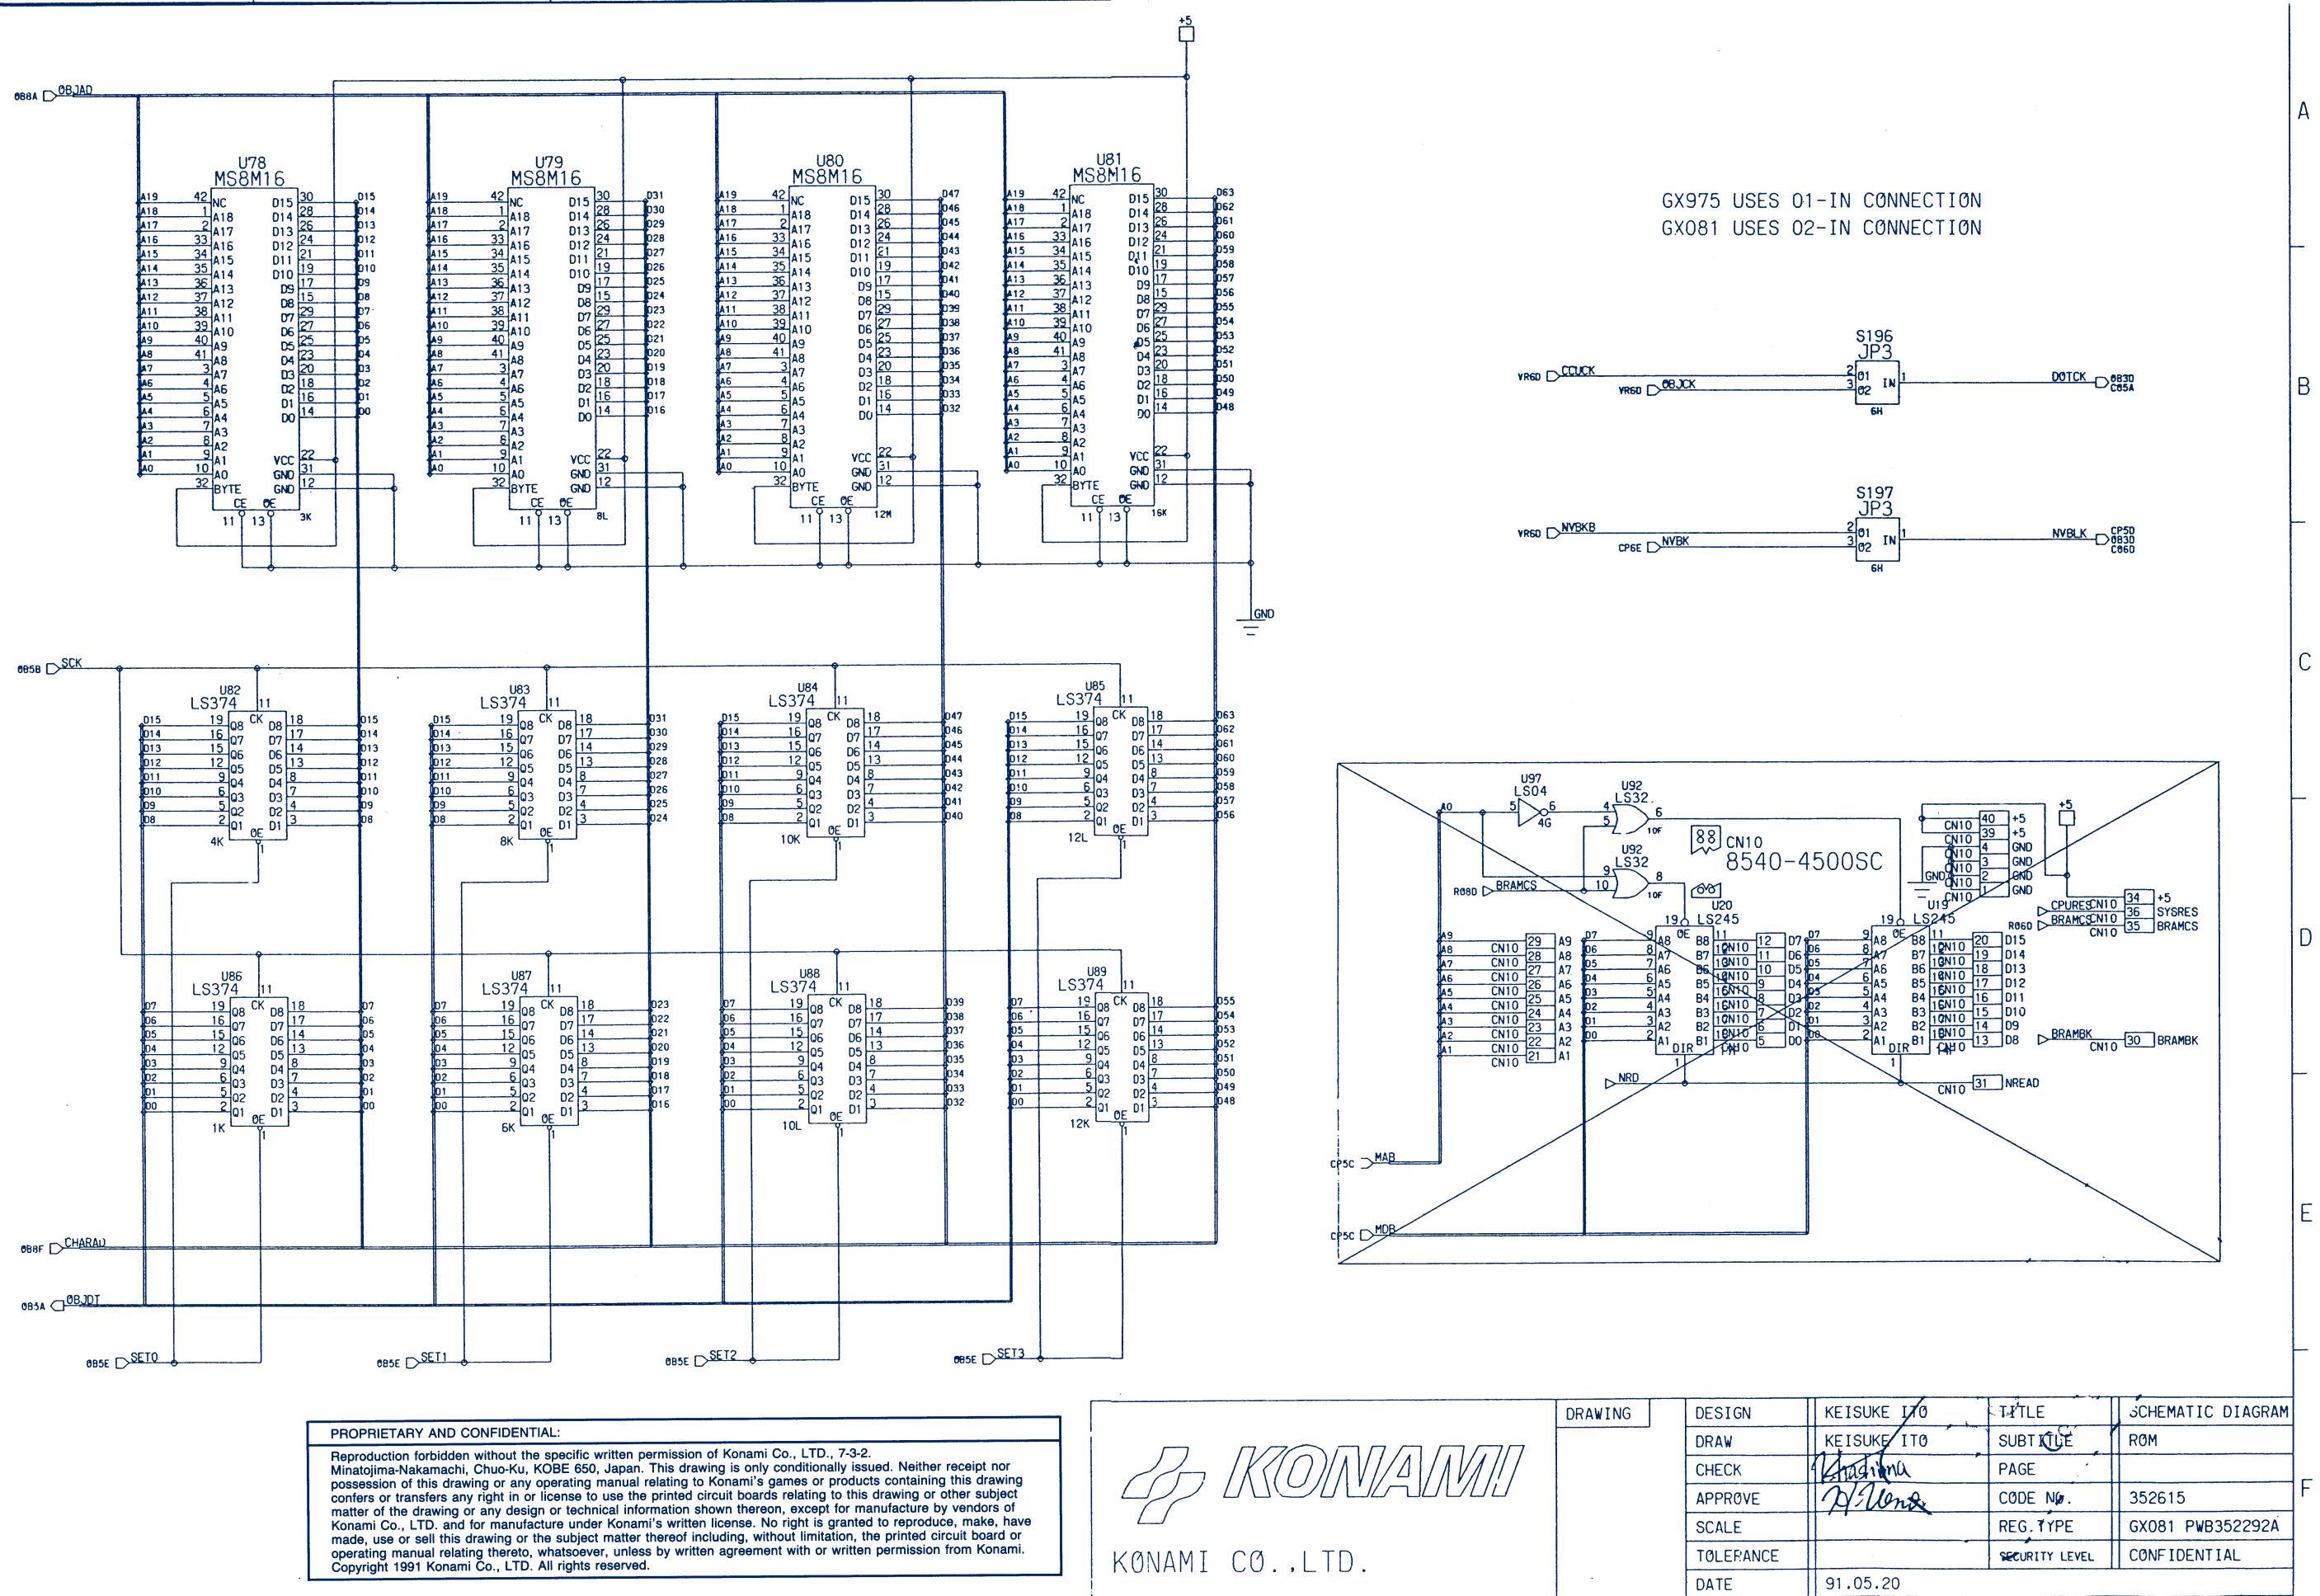

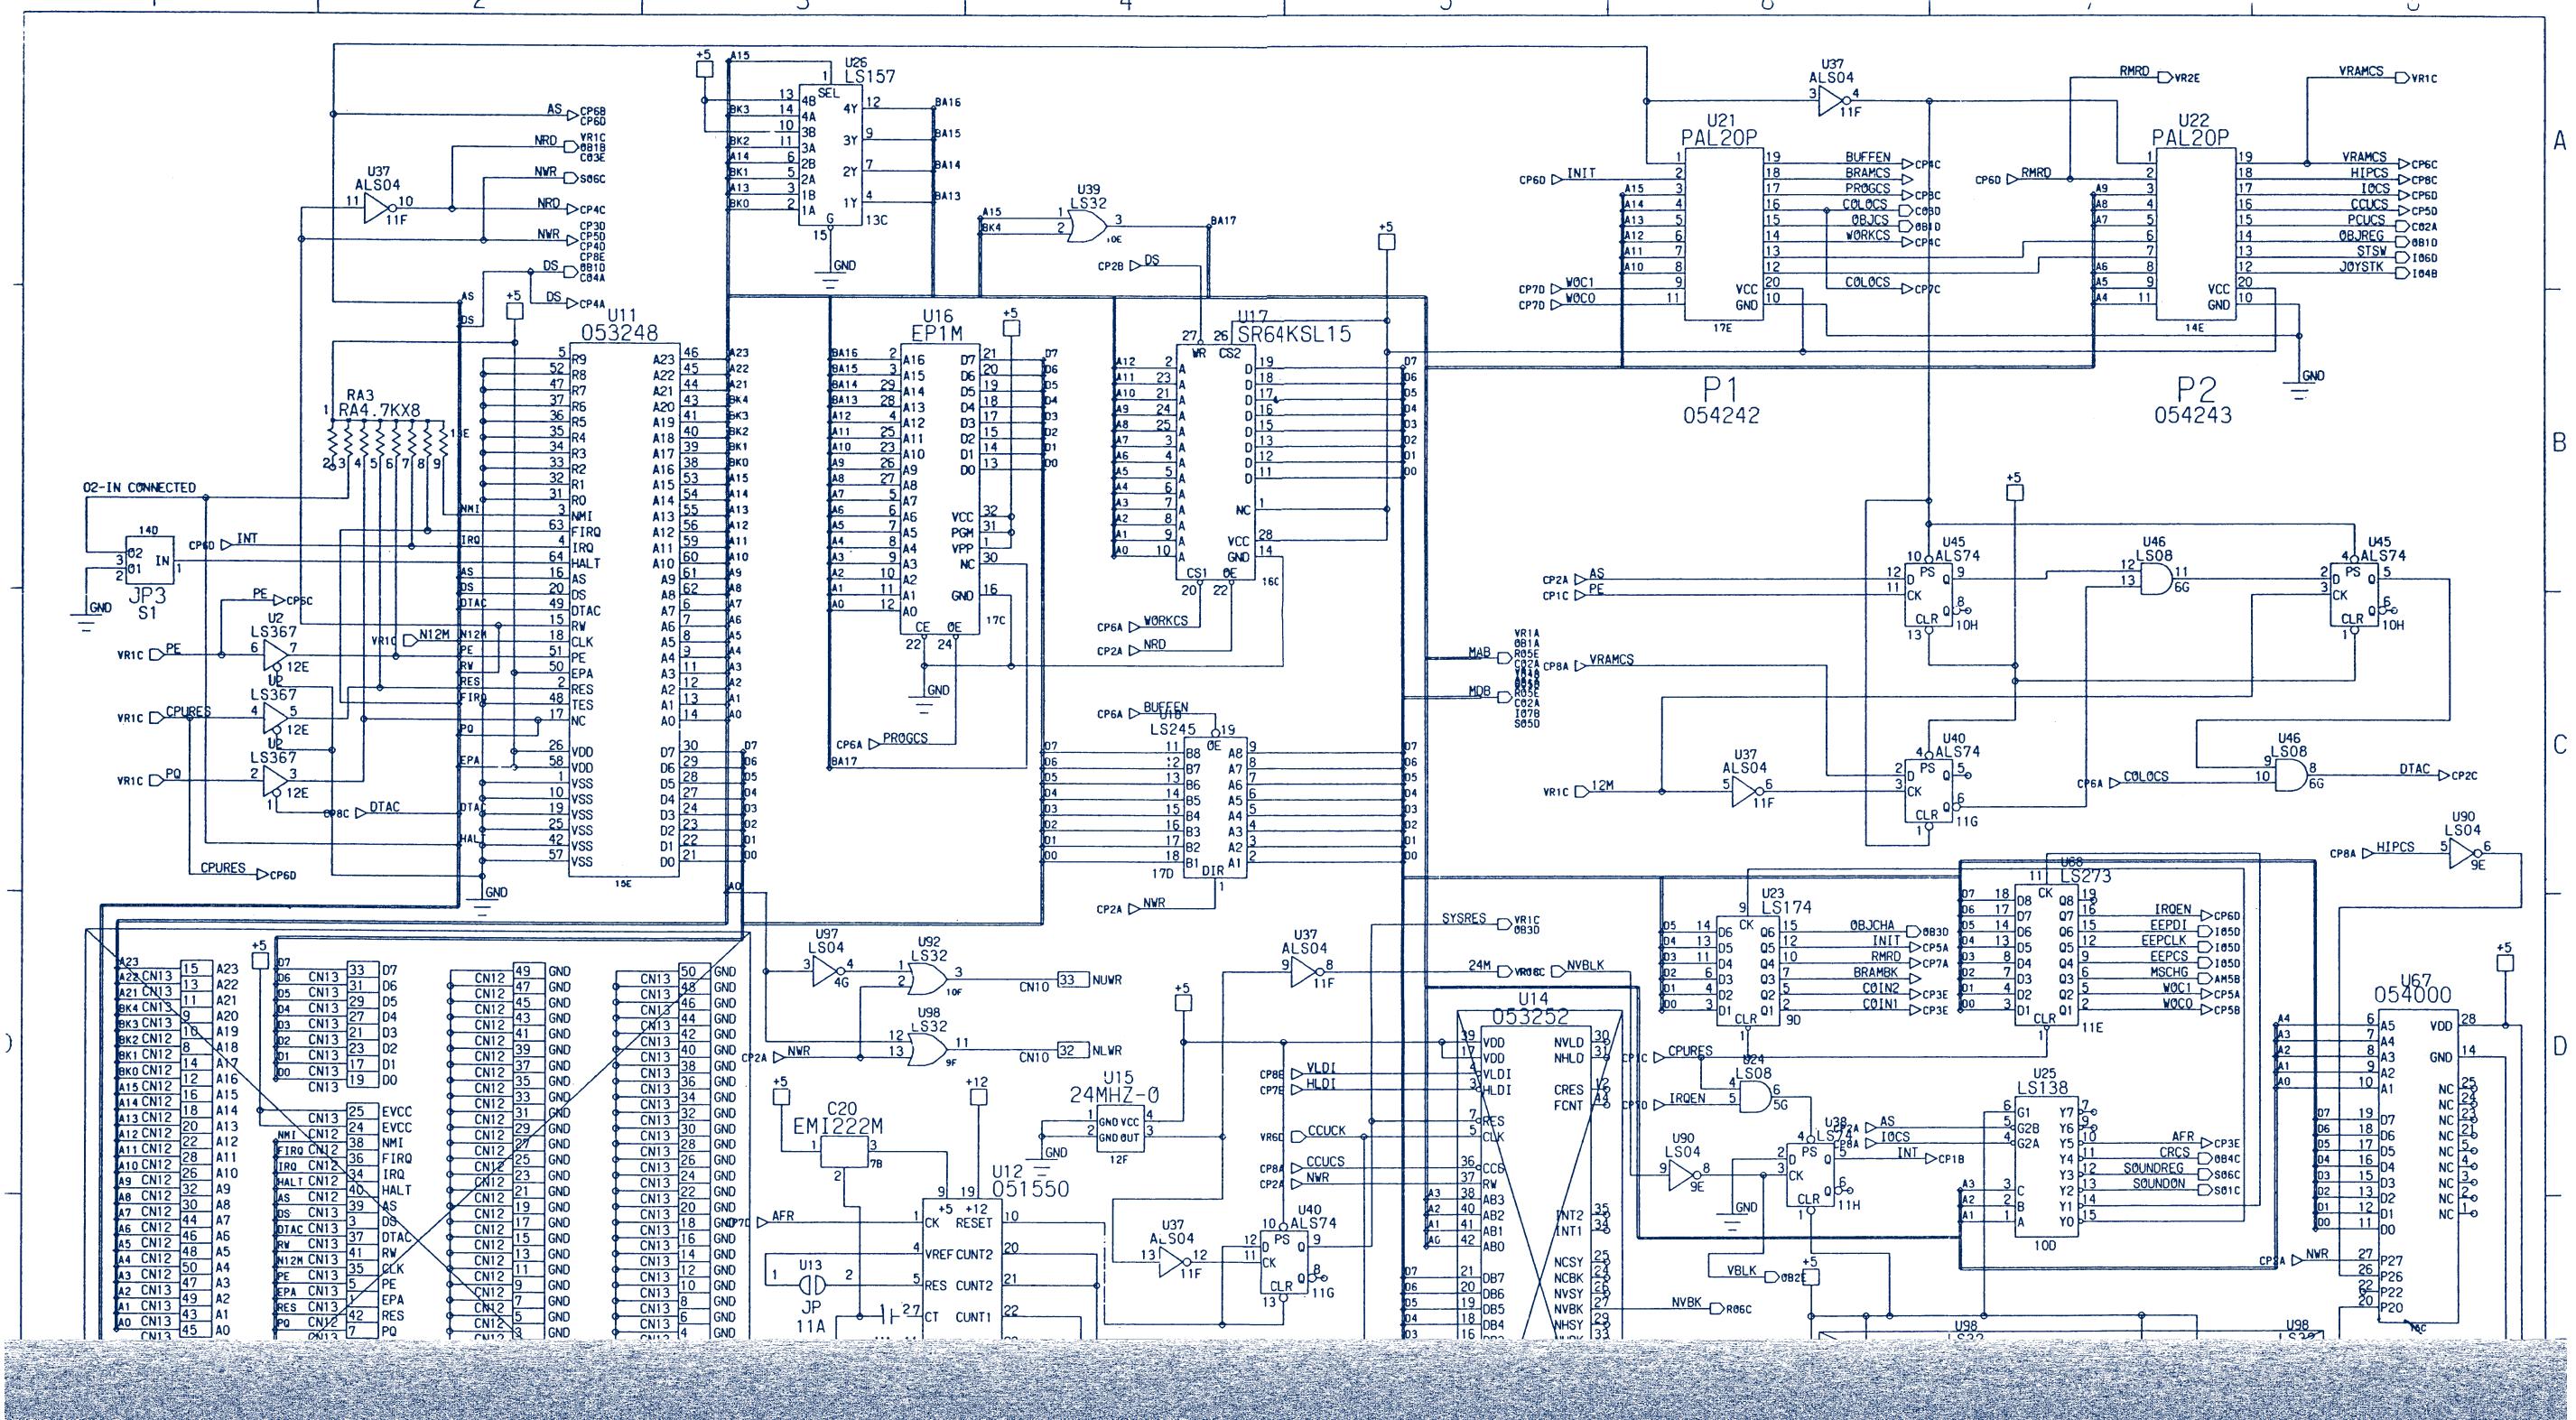

# WIRING DIAGRAM

