Stompin' game review

Please disregard Self-Test and Attract Mode information shown on page 6 of Bally Sente Field Conversion Kit Manual (M051-00C47-A019). Refer to information on this page instead.

After installing the STOMPIN' game in your SAC 1 unit, check the game as follows:

Self Test

- 1. Power on game. If title page of game appears, switch on Self-Test function by moving Self-Test switch located on the electronic chassis between the sound board and the game cartridge.
- 2. RAM and ROM Test should appear on screen (Screen 1). If RAM and all ROMs are working correctly, the test will show an "OK" next to them. If any are bad, the word "BAD" will appear on the screen.
- 3. At the conclusion of the RAM/ROM Test, the Sound Board Test will occur (Screen 1). If the board tests out, advance to the next test mode by pressing the ZAPPER button.
- 4. The next test mode is the Switch Input Test (Screen 2). Test all switches except the ZAPPER. If the correct word lights up on screen when a switch is closed, the switch is working correctly. Test coin mechancisms. If everything is working correctly, advance to next screen by pressing ZAPPER button.
- 5. The next test mode is the Coin Option Settings (Screen 3). The STOMPIN' game has the European coin mode options. See "Option Switch Settings" Sheet regarding the setting of European coin mode options. Press ZAPPER button to advance to next test mode.
- 6. The next test mode is the Game Options (Screen 4). The game features controlled by these option switch settings are self explanatory. Press the ZAPPER button to advance to next test mode.
- 7. You are now in the statistics mode. A series of three (3) screens display information, in bar graph form, since the last time the statistics were reset. Screen 5: Game Score Stats: Time Distribution

Screen 6: Game Score Stats: Level Distribution
* Screen 7: Game Score Stats: Score Distribution

Press ZAPPER to advance through the screens! Press START to clear and reset the statistics. Move the Self-Test Switch to return the game to Play Mode.

* Please note: After Screen 7 is displayed, pressing ZAPPER will advance through Screens 5, 6, and 7 again. To break from this recycling, move the Self-Test Switch to return the game to Play Mode.

Play Mode

- 1. Title screen will appear.
- 2. Instruction screen will appear.
- 3. Game demonstation will be displayed.
- 4. Credits screen will appear.
- 5. High score table will appear.
- 6. Missing kids page will appear.

Game Description

STOMPIN' is a game which will challenge you both mentally and physically. In this game you, the player, are given the task of preventing various bugs and critters from eating away the food located at the center of the screen. You do this by stepping on the FLOORPLAY controller, each section of which corresponds to one of the sections surrounding the food on the screen. When stepping upon a section that is occupied by a bug, that bug is squashed and you have successfully kept him from the food. The game is over when all the food is gone.

The game consists of three (3) distinct environments. Each one contains its own set of "critters" and levels of increasing difficulty as shown in the following table.

				Environment		
Ro	und	Level		layed on Sci		Critters
	1	1		hen Floor W/		Ants
			in C	enter Square	<u>:</u>	
	2	2	31	11 '	II	Ants & Cockroaches
*	3	3	II	н	11	Ants, Cockroaches & Mice
*	4	4	11	ıı	11	Ants, Cockroaches, Mice & Spiders
*	5	5	Patio W/Hot Dogs on Barbecue Grill in Center Square			Gophers
	6 7	6	11	* 31	u	Crows
	7	7	ш	11	11	Gophers & Crows
;	8	8		W/Small Fli er Square	es in	Slow Frogs
*	9	9	II	, n	11	Slow Fish
* 1	0	10	н	II .	ŧt.	Fast Frogs
* 1	1	11	u	н	11	Fast Fish

After Round 11 ends, the succeeding rounds will repeat the same level of difficulty, (Level 11).

* NOTE: By using a Game Option Switch, a bee will appear in various rounds. If the bee is squashed during a round, a bonus of 2000 points are awarded. Also, all of the other critters will be killed automatically with their point values added to the score and the round ends.

STOMPIN'

OPTION SWITCH SETTINGS - DIP SWITCH "G1"

	SW#1 SW#2 SW#3 SW#4 SW#5 SW#6 SW#7 SW#
* MISSING KIDS DISPLAYED MISSING KIDS NOT DISPLAYED	OFF XX XX ON XX XX
* KID ON RIGHT NOT LOCATED KID ON RIGHT WAS LOCATED	OFF ON
* KID ON LEFT NOT LOCATED KID ON LEFT WAS LOCATED	OFF ON
* ATTRACT SOUND PRESENT ATTRACT SOUNDS ABSENT	OFF ON
NO BEE PRESENT * BEE IS IN GAME	OFF ON
NO BUGS (For Floor Demo) * BUGS PRESENT (Regular Play)	OF ON
* INDICATED FACTORY RECOMMENDED SETTINGS	PART NO. MO51-00E38-A007

STOMPIN' OPTION SWITCH SETTINGS - DIP SWITCH "H1" VARIOUS CREDIT OPTIONS SW#1 SW#2 SW#3 SW#4 SW#5 SW#6 SW#7 SW#8 FREE PLAY OFF OFF OFF OFF OFF OFF * 1 COIN / 1 CREDIT 1 COIN / 2 CREDITS ON ON **OFF** ON 2 COINS / 1 CREDIT 0FF ON 3 COINS / 1 CREDIT 0FF 0FF * NO BONUS COINS ON ON ON 2 COINS ADDS 1 BONUS COIN OFF ON ON 3 COINS ADDS 1 BONUS COIN OFF ON ON COINS ADDS 1 BONUS COIN 0FF OFF ON COINS ADDS 2 BONUS COINS ON ON OFF COINS ADDS 1 BONUS COIN 0FF ON OFF COINS ADDS 2 BONUS COINS ON OFF OFF COINS ADDS 3 BONUS COINS 0FF OFF OFF * LEFT COIN MECH X 1 ON LEFT COIN MECH X 2 0FF * RIGHT COIN MECH X 1 NO ON RIGHT COIN MECH X 4 0FF ON RIGHT COIN MECH X 5 0FF ON RIGHT COIN MECH X 6 0FF 0FF

PART NO. M051-00E38-A007

* INDICATED FACTORY RECOMMENDED SETTINGS

KIT PARTS LIST: STOMPIN' U.R. PART NO. GE38-00001-0000

ITEM	PART NO.	DESCRIPTION
1	AE38-00004-0000	CONTROL SHELF ASSY.
	AE38-00005-0000	CONTROL SHELF CABLE ASSY.
	B006-08029-010B	FLOOR-PLAY INTERFACE BD. ASSY.
	U570-00042-0200	SWITCH: SW., SPST., 1A, 125VAC - RED
	0E38-00100-00XF	PANEL: CONTROL SHELF SCREENED
	0E38-00101-0000	BRKT: INTERFACE SUPPORT
	0E38-00700-00XF	END: GRAB BAR (2 REQ'D.)
	0E38-00701-0000	TUBING: GRAB BAR
	0E38-00901-0000	CUSHION: GRAB BAR
	0017-00032-0092	SWITCH: SPDT P.B. MOMENTARY, LED.
	0929-00905-00XF	BEZEL: SWITCH
2	AE38-00007-0000	FLOOR ASSY.
3	AE38-00009-0000	CABINET MOUNTING PLATE ASSY.
	0E38-00108-0000	PLATE: CABINET MOUNTING
	0017-00103-0013	NUT 10-32 WELD (2 REQ'D.)
4	AE38-00014-0000	BAG & HARDWARE ASSY.
	0017-00101-0760	10-32 X 16 PHILLIPS ROUND WASHER HEAD SCREW (2 REQ'D.)
	0017-00101-0807	5/16-18 X 12 UNSLOTTED HEX HD. STOVE BOLT (2 REQ'D.)
	0017-00102-0045	3/8-16 X 12 UNSLOTTED HEX HD. STOVE BOLT (2 REQ'D.)
	0017-00104-0103	WASHER: FLAT .390 I.D., .625 O.D., .031 TH. (2 REQ'D.)
5	AE38-00300-0000	KIT INSTRUCTION ASSY.
	M051-00E38-A007	TAG: OPTION SWITCH SETTINGS
	M051-00C47-A019	MANUAL: CONVERSION KIT
6	AE38-00301-0000	GAME INFORMATION SHEET ASSEMBLY: STOMPIN' U.R.
	M051-00E38-A014	GAME REVIEW SHEET: STOMPIN'

KIT PARTS LIST: STOMPIN' U.R., CONT'D. PART NO. GE38-00001-0000

ITEM	DESCRIPTION					
	M051-00E38-A015	PARTS LIST: STOMPIN' U.R.				
	M051-00E38-A017	FLOOR-PLAY ASSY.: INSTALLATION PROCEDURE				
	M051-00E38-A007	OPTION SWITCH SETTINGS SHEET				
	M051-00E38-A018	FLOOR-PLAY ASSY.: PARTS ILLUSTRATION SHEET				
	M051-00E38-A019	PARTS LIST: FLOOR-PLAY ASSY.				
	M051-00E38-A017	FLOOR-PLAY ASSY.: INSTALLATION PROCEDURE				
	M051-00E38-A016	CONTROL PANEL & FLOOR PLAY ASSY. WIRING DIAGRAM: STOMPIN' U.R.				
	M051-00C47-A003	SAC 1A WIRING DIAGRAM				
	M051-00E19-B003	SAC 1B WIRING DIAGRAM				
	M051-00E23-A005	SAC-MAN WIRING DIAGRAM				
	M051-00114-A148	COMPONENT LAYOUT & PARTS LIST: 256K CARTRIDGE BD.				
	M051-00114-A149	SCHEMATIC: 256K CARTRIDGE BD.				
	M051-00E38-B012	COMPONENT LAYOUT & PARTS LIST: FLOOR-PLAY INTERFACE P.C.B.				
	M051-00E38-B013	SCHEMATIC: FLOOR-PLAY INTERFACE P.C.B.				
	M051-00E38-A010	PARTS LIST: FLOOR-PLAY LAMP BD.				
	M051-00E38-A011	SCHEMATIC: FLOOR-PLAY LAMP BD.				
7	A084-91834-AE38	PROGRAMMED 128K CARTRIDGE W/SECURE				
8	U858-00632-U802	6-32 X 8 SOC BUTTON HD. SCREW				
9	0E38-00900-0000	HEADER: GRAPHIC "STOMPIN'"				
10	0017-00103-0052	NUT 6-32 LOCKING (9 REQ'D.)				

MOUNTING PROCEDURE FOR FLOOR PLAY ASSEMBLY TO UPRIGHT GAME CABINET: SAC 1, SAC 1A, SAC 1B & SAC-MAN (PAC-MAN, GALAXIAN, MS. PAC-MAN, TRACK 'N' FIELD, & HYPERSPORT)

- For SAC 1A, SAC 1B, & SAC-MAN game cabinets: Remove rear door and lay cabinet on its side. Drill 2" hole in bottom of cabinet as shown in Figure 1.
 For SAC 1 game cabinet only: Remove rear door and notch it as shown in Figure 1A. Lay cabinet on its side.
- With cabinet still on its side, attach Cabinet Mounting Plate to front leg leveler mounting holes using two (2) hex bolts * and two (2) washers provided with kit (see Figure 2).
 * NOTE: For SAC 1: 5/16"-18 X 3/4" unslotted hex head stove bolt & for SAC 1A, SAC 1B & SAC-MAN: 3/8-16 X 3/4" unslotted hex head stove bolt.
- 3. Stand cabinet upright. Run cable of Floor Play Assembly thru slot in Cabinet Mounting Plate (see Figure 3). For SAC 1A, SAC 1B & SAC-MAN game cabinets: Feed Floor Play cable into cabinet thru 2" hole in cabinet bottom (see Figure 3). For SAC 1 game cabinet only: Run Floor Play Cable under cabinet to its rear and bring cable into cabinet thru rear opening where rear door notch is located (see Figure 2). For all game cabinets, position Floor Play Assembly over nuts welded on Cabinet Mounting Plate and fasten with two (2) 10-32 X 1" phillips round washer hd. screws provided with kit.
- 4. Run Floor Play cable up inside wall (either side) of cabinet. Secure Floor Play cable to wall using 3/4" wire harness clamps provided with kit. Connect Floor Play cable connector J1 to P2 connector of Control Interface P.C.B. mounted on Control Shelf Insert (see Figure 3).
- 5. Secure rear door to game cabinet.

M051-00E38-A017

MOUNTING PROCEDURE FOR FLOOR PLAY ASSEMBLY TO UPRIGHT GAME CABINET: SAC 1, SAC 1B & SAC-MAN (PAC-MAN, GALAXIAN, MS. PAC-MAN, TRACK 'N' FIELD & HYPERSPORT), CONTD.

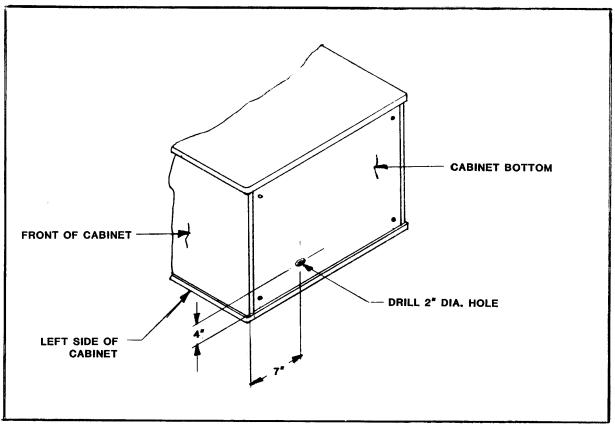


FIGURE 1

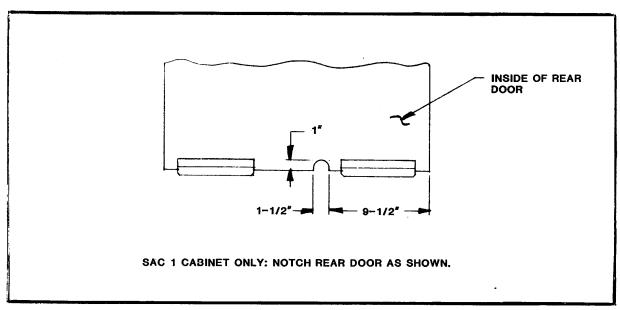


FIGURE 1A

MOUNTING PROCEDURE FOR FLOOR PLAY ASSEMBLY TO UPRIGHT GAME CABINET: SAC 1, SAC 1B & SAC-MAN (PAC-MAN, GALAXIAN, MS. PAC-MAN, TRACK 'N' FIELD & HYPERSPORT), CONTD.

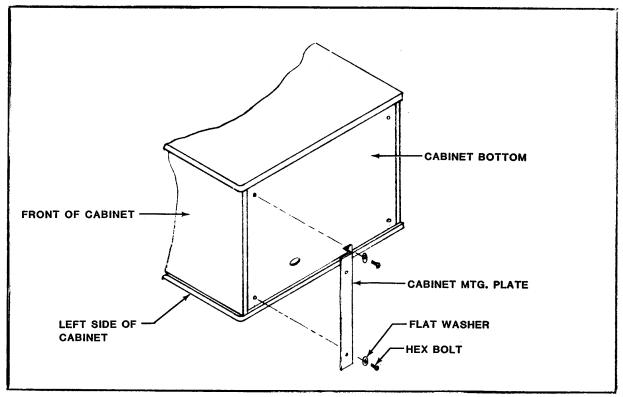


FIGURE 2


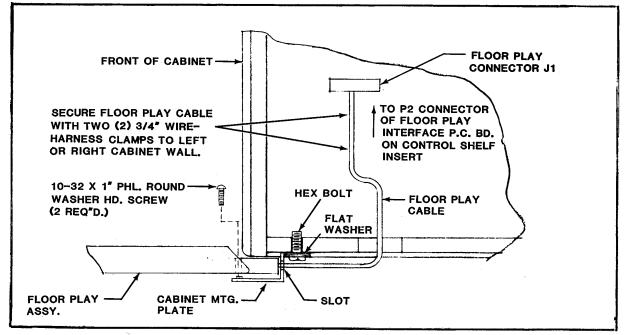


FIGURE 3

FLOOR-PLAY ASSEMBLY PART NO. AE38-00007-0000

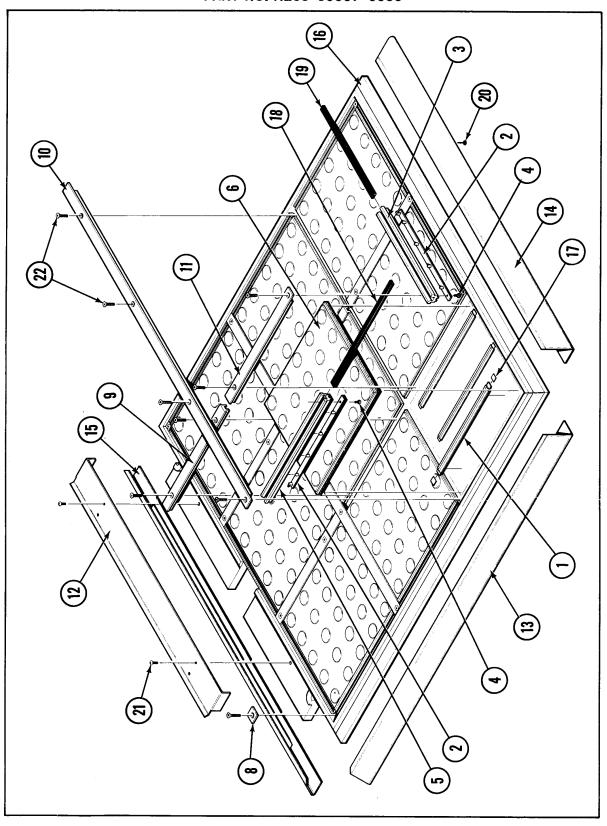



FLOOR-PLAY ASSEMBLY PARTS LIST AE38-00007-0000


ITEM	PART NO.	DESCRIPTION
1	AE38-00006-0000	TAPESWITCH ASSY. (27 REQ'D.)
	AE38-00011-0100	LENS, CHANNEL & LED 9-15/32 (6 REQ'D.) (INCLUDES ITEMS 2, 3 & 4)
2	U006-08028-010A	FLOOR CONTROL LAMP BD. ASSY.
	U007-08028-010A	FLOOR CONTROL LAMP P.C. BD.
	U550-00086-0100	CONNECTOR KK100 PCM MO2A: SQUARE TIP
	100E-00005-0035	120 OHM 1/4W RESISTOR
	119E-00001-0007	L.E.D.: RED MV5760 (4 REQ'D.)
3	0E38-00102-0100	CHANNEL: LENS
4	0017-00101-0518	5-40 X 5 PHILLIPS PAN HEAD M.S.
	AE38-00011-0200	LENS, CHANNEL & LED 10-23/32 (6 REQ'D.) (INCLUDES ITEMS 2, 4 & 5)
5	0E38-00102-0200	CHANNEL: LENS
6	AE38-00012-0000	PAD ASSY. W/TAPE ASSY. (9 REQ'D.)
7	AE38-00013-0000	FLOOR-PLAY CABLE ASSY. (NOT SHOWN)
8	0E38-00103-0000	WASHER: SQUARE (4 REQ'D.)
9	0E38-00104-0000	DIVIDER: CENTER (2 REQ'D.)
10	0E38-00105-0000	DIVIDER: HORIZONTAL (2 REQ'D.)
11	0E38-00106-0000	DIVIDER: END (4 REQ'D.)
12	0E38-00107-0000	COVER: END
13	0E38-00109-01XF	BASE-FRAME: L = 34.781 (2 REQ'D.)
14	0E38-00109-02XF	BASE-FRAME: L = 31.031
15	0E38-00110-00XF	BASE-FRAME: FRONT
16	0E38-00501-0000	BASE: FLOOR-PLAY ASSY.
17	0E38-00902-0000	INSULATOR: TAPESWITCH (54 REQ'D.)


FLOOR-PLAY ASSEMBLY PARTS LIST CONT'D. AE38-00007-0000


ITEM	PART NO.	DESCRIPTION				
18	0E38-00904-0100	LENS: L = 10.968 (6 REQ'D.)				
19	0E38-00904-0200	LENS: L = 9.718 (6 REQ'D.)				
20	0017-00101-0337	5 X 8 PHILLIPS PAN HEAD SCREW (16 REQ'D.)				
21	0017-00101-0117	8 X 10 PHILLIPS TRUSS HEAD SCREW (4 REQ'D.)				
22	0017-00101-0684	10 - 32 X 16 HEX SOCKET FLAT HEAD SCREW (24 REQ'D.)				

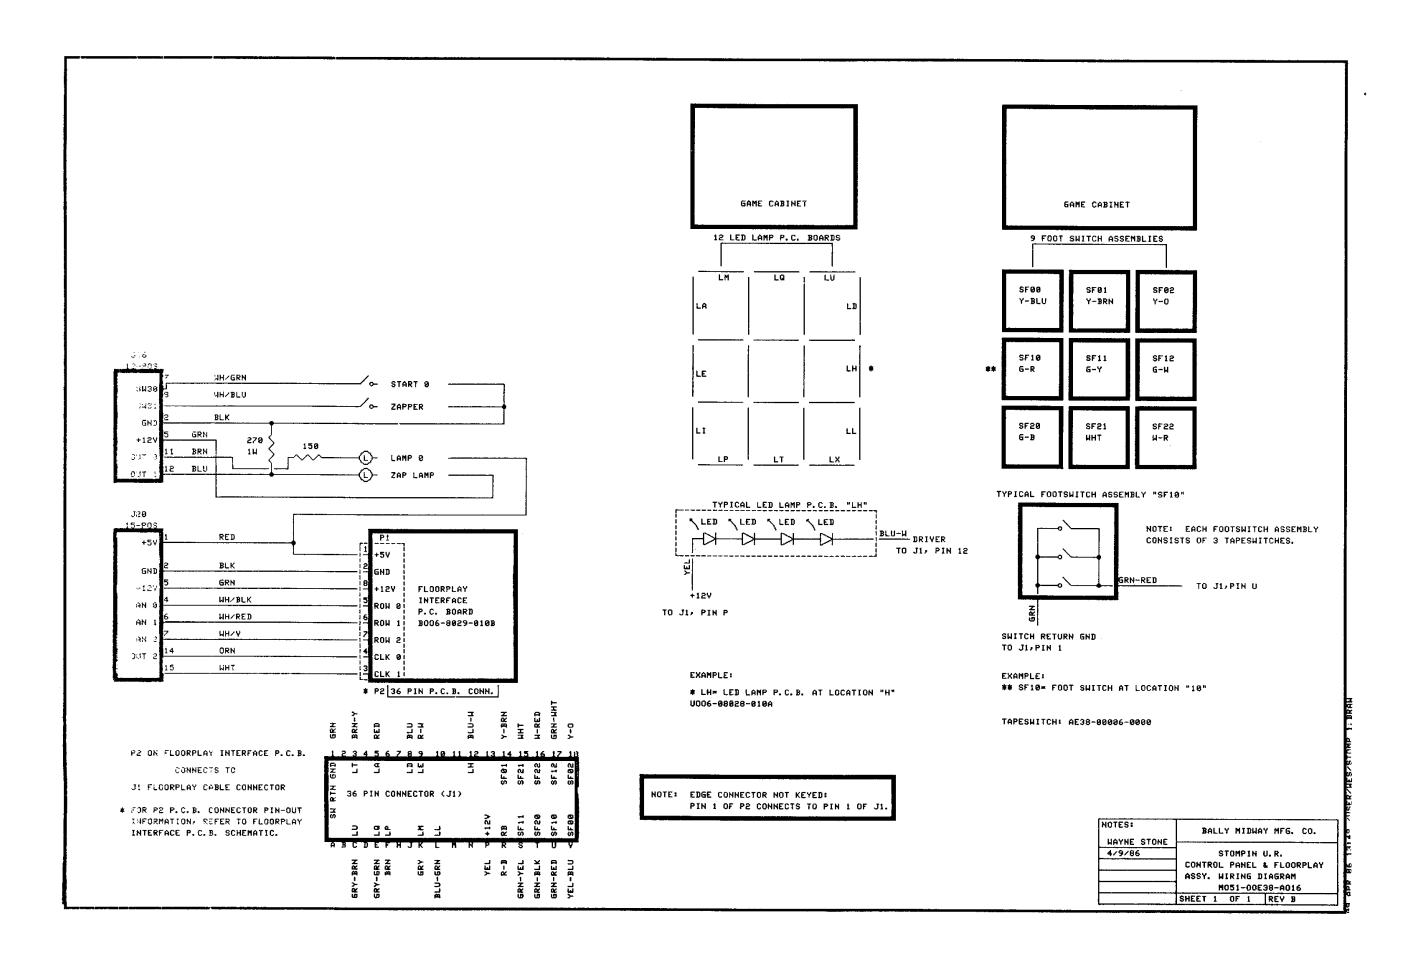

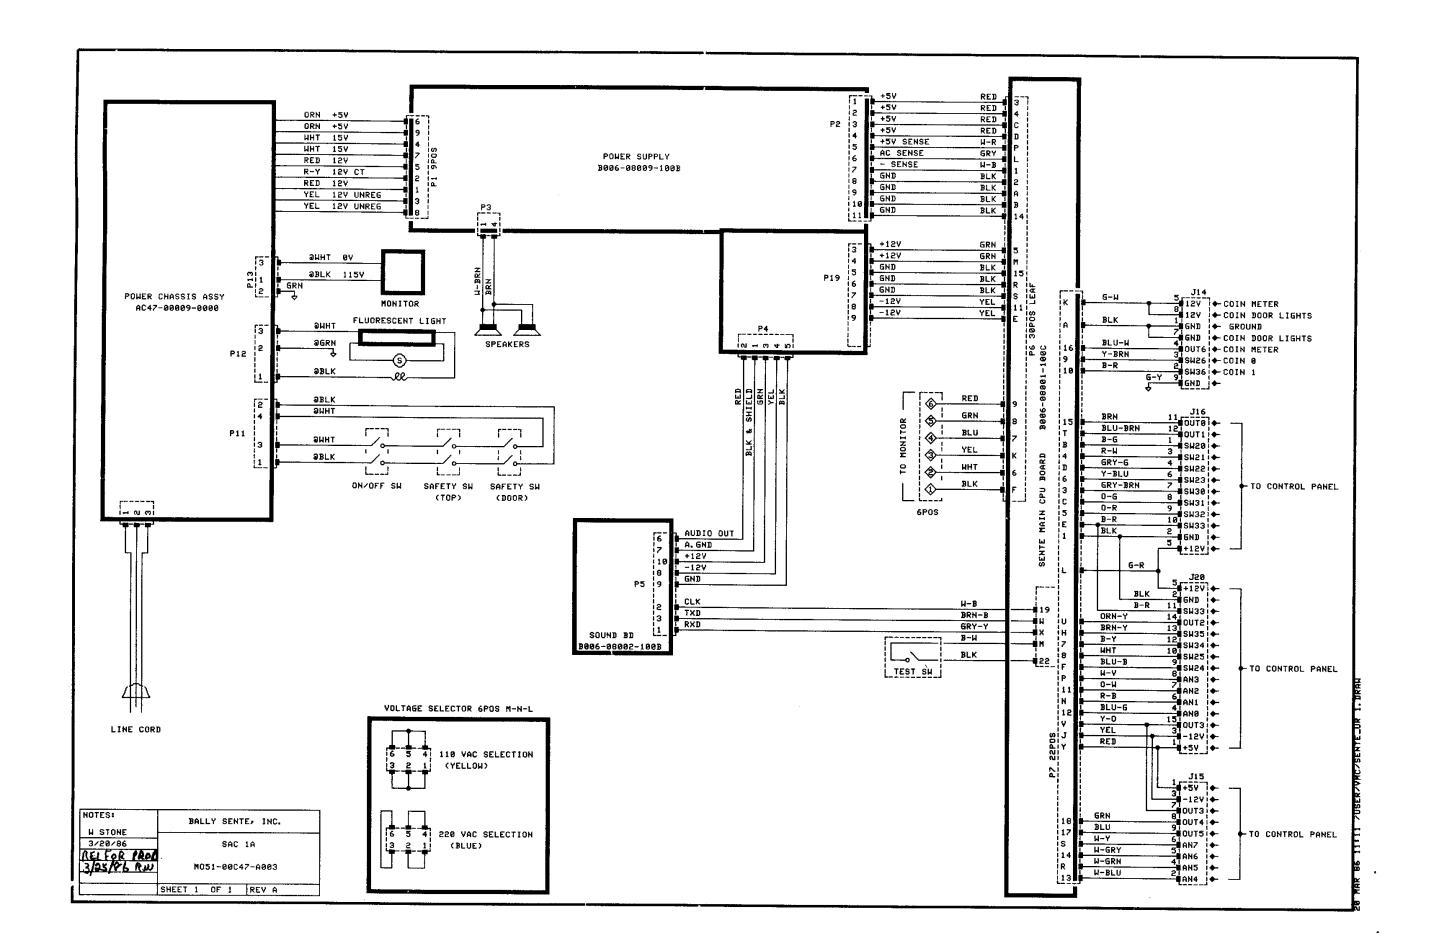

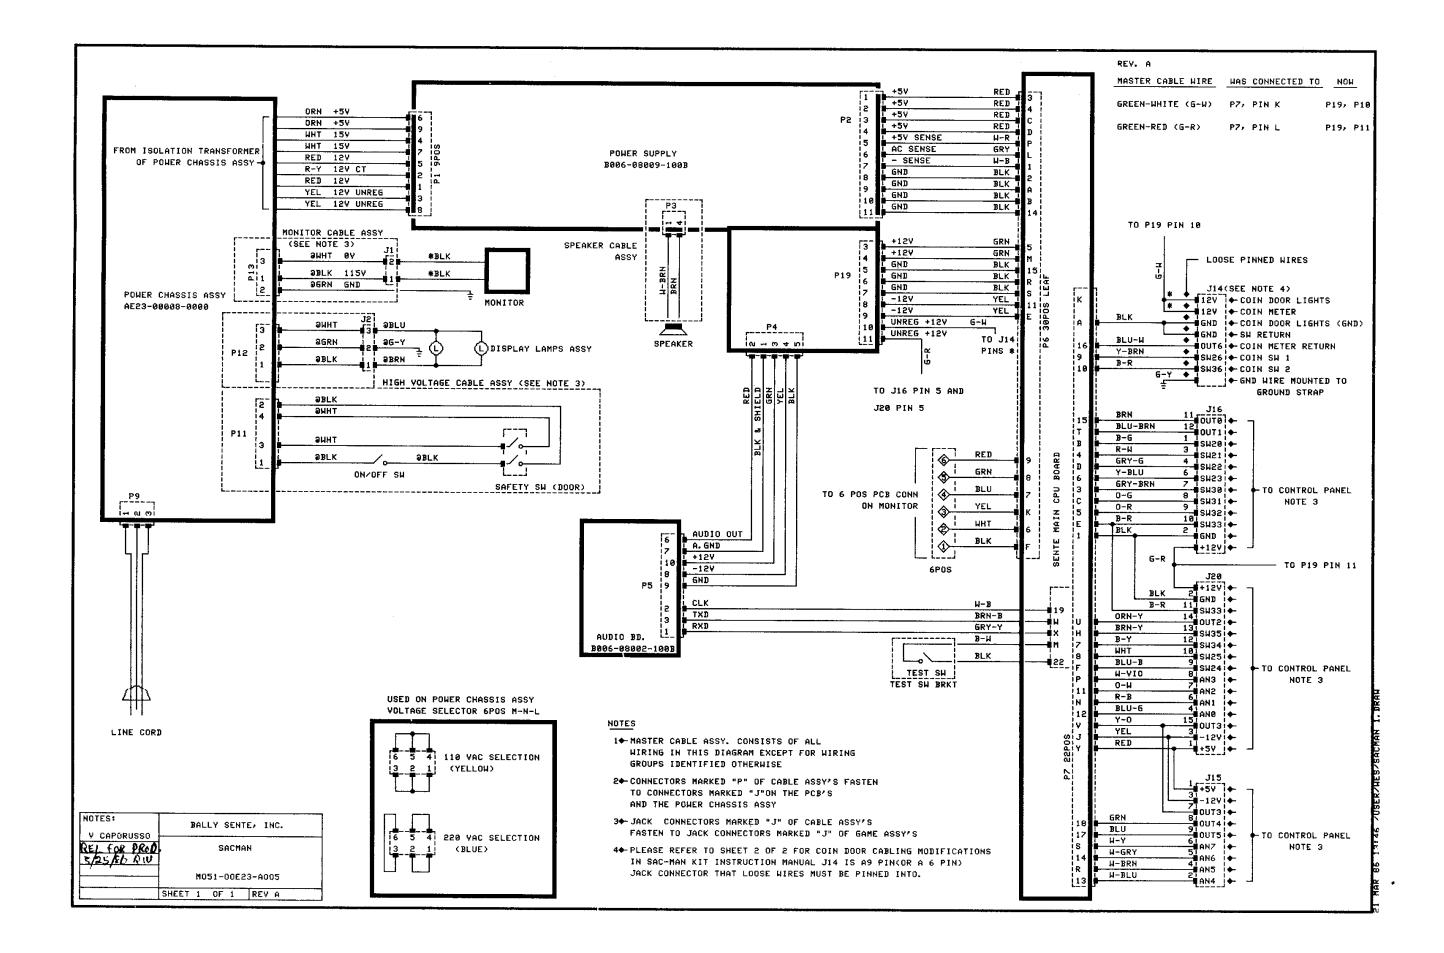

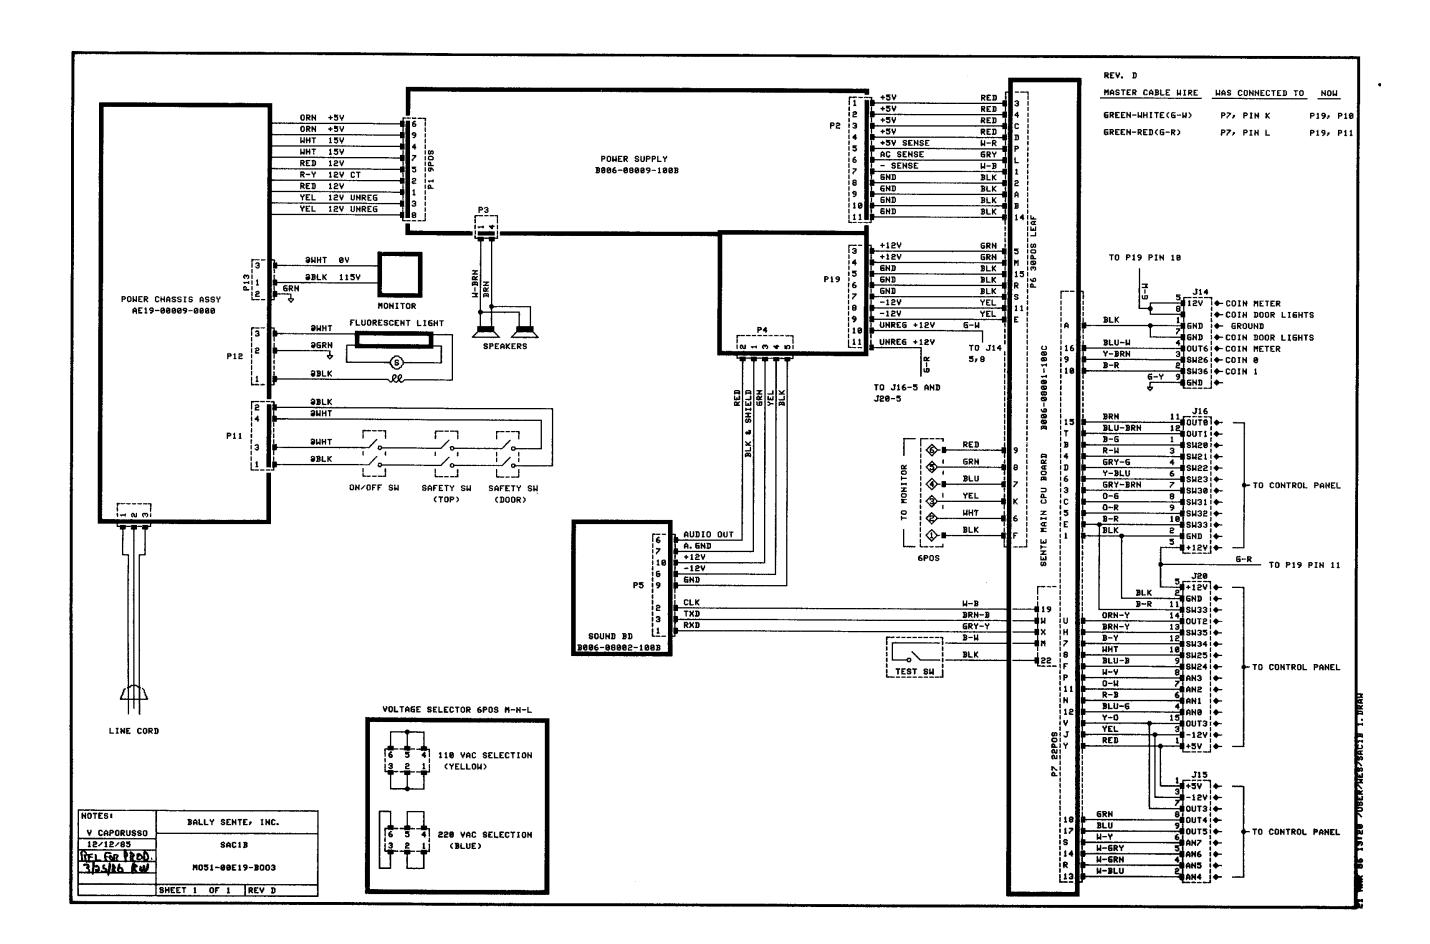

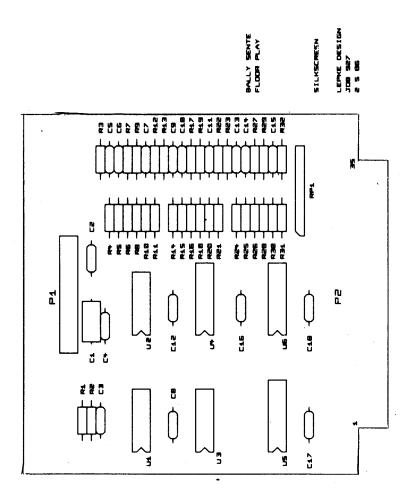



FLOOR PLAY INTERFACE P.C. U006-08029-010B M051-00E38-B012

CROSS REFERENCE LIST

DESCRIPTION	OTY.	DESIGNATION NO.	PART NOS.
UCN 4821 1/4W 5% CARBO	3	U 4, U5,U6	0066-352XX-XXLX
74HC14	1	U1	U210-00018-0100
LM324	1	U2	U260-00054-0100
74HC74	$\bar{1}$	U3	U210-00016-0100
20K 1/4W 1%	6	R26,R28,R16,R18 R6,R8	U450-02002-0100
80.6K 1/4W 1%	6	R31,R29,R21,R19 R11,R9	U450-08062-0100
39.2K 1/4W 1%	9	R24,R27,R30,R14 R17,R20,R4,R7,R10	U450-03922-0100
1K 1/4W 5%	11	R23,R25,R32,R13 R15,R22,R3,R5,R12 R1,R2	U400-01001-0100
10 POS. SIP 470 OHM	1	RPÍ	U460-00012-0100
.1UF 50V	17	C2 - C18	U300-00009-0100
2.2UF TANT. 10V	1	C 1	U310-00013-0100
8 PIN KK156 W/LOCKING TAB	1	P1	U550-00065-0100
P.C.B.	$\bar{f 1}$		U007-08029-010B

REV. A - 3/27/86 J.S.

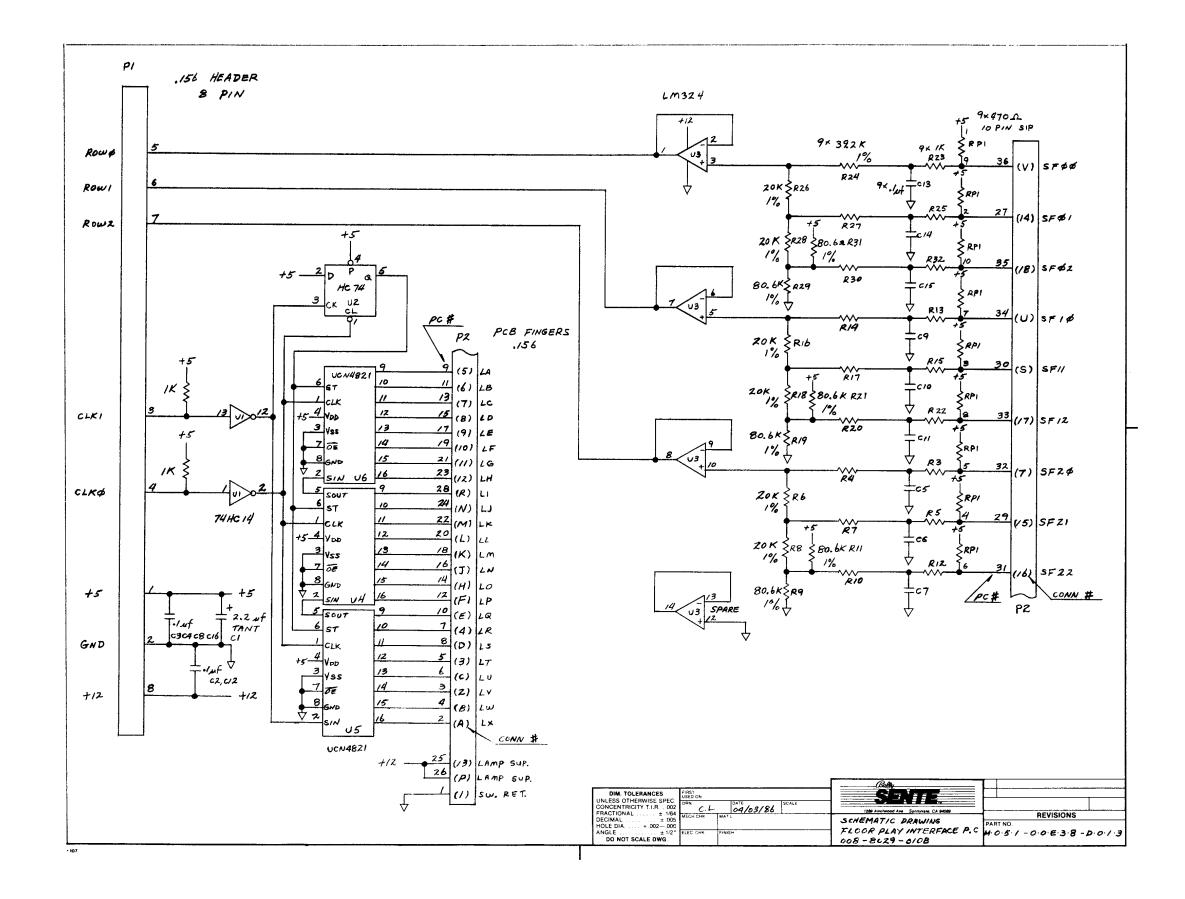

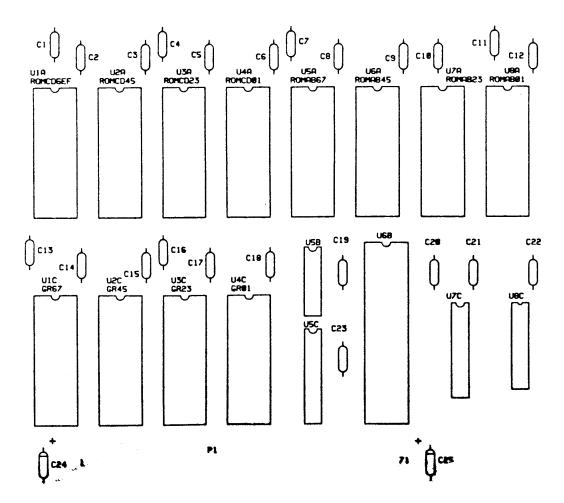

.


UN-PROG CARTRIDGE 128K W/SECURE CHIP A082-91834-A000 (SENTE BOARD NO. 006-8027-01-0B)

CROSS REFERENCE LIST

DESCRIPTION	OTY.	REFERENCE NO.	PART NOS.
PCB	1		A080-91834-A000
74LS139	1	U5B	U200-00049-0100
74LS245	1	U5C	U200-00056-0100
RAM NOV	1	USC	U230-00007-0100
ST 1002 SECURITY CHIP	1	U6R	U260-00050-010A
CAP CER1M 50V 20%	23	C1-C23	U300-00009-0100
CAP TANT. 2.2MF 10V 20%	2	C24,C25	U310-00013-0100
SOCKET 28 PIN	12	U1A-U8A,U1C-U4C	110E-00001-0010
SOCKET 20 PIN	1	U7C	U510-00017-0100
SOCKET 40 PIN	1	U6B	110E-00001-0011
CONNECTOR AMP 2-102584-0	1	P1	U550-00064-0100

REV: Revisions due to type errors on 1/17/86.

M051-00114-A144

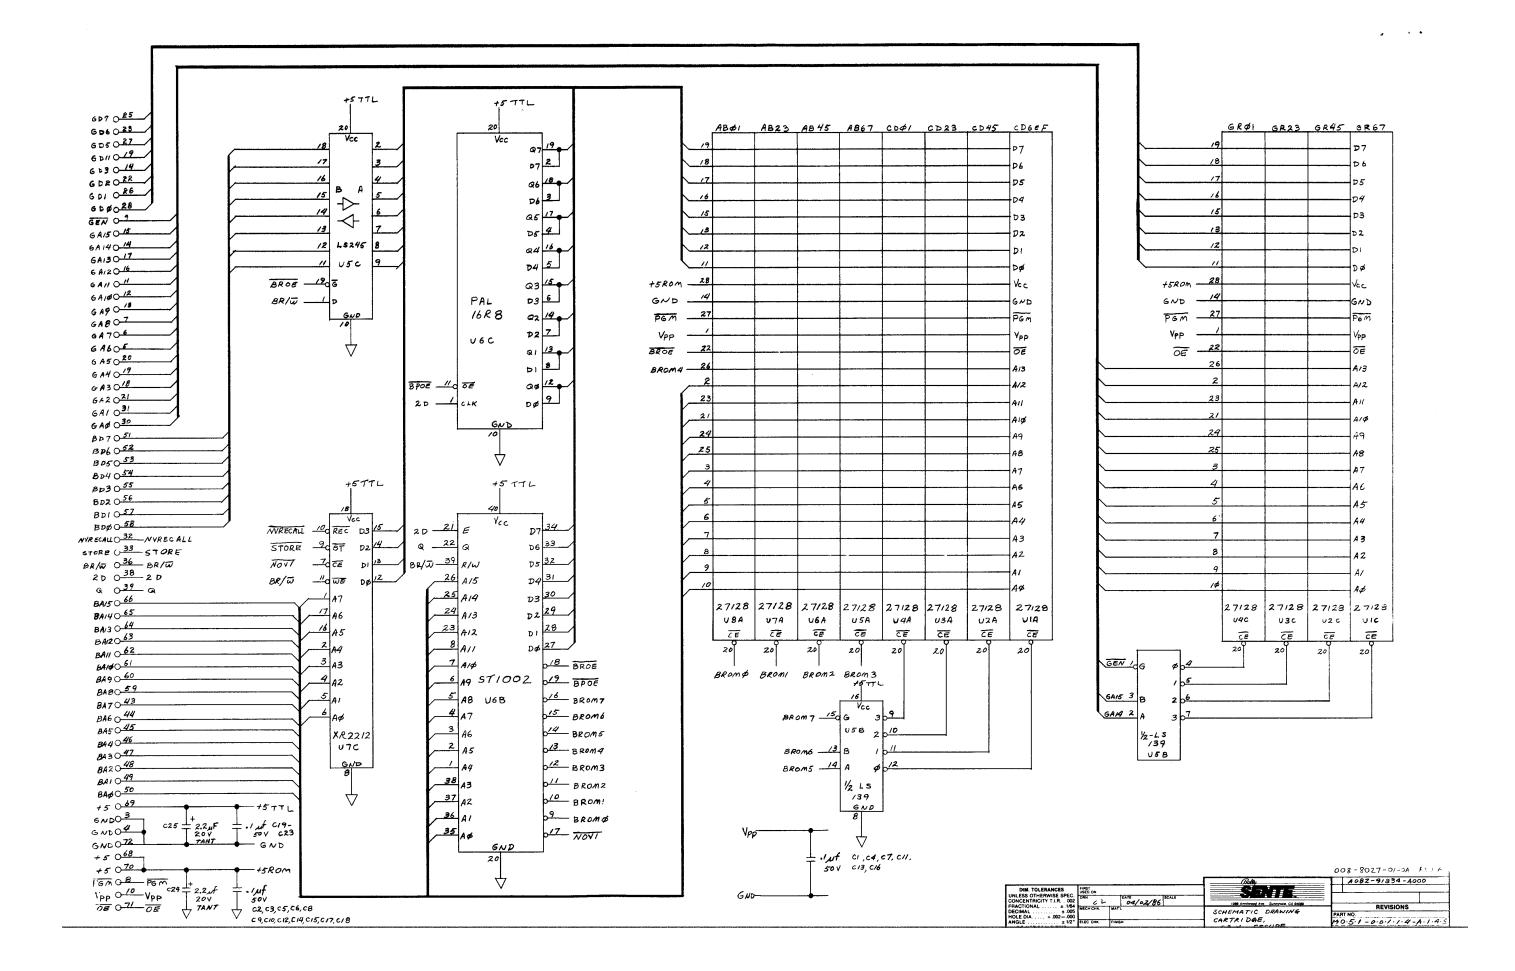

FLOOR-CONTROL LAMP BOARD ASSEMBLY PART NO. U006-08028-010A M051-00E38-A010

CROSS REFERENCE LIST

DESCRIPTION	QTY.	DESIGNATION NO.	PART NOS.	
FLOOR-CONTROL LAMP P.C. BD.	1		B007-08028-010A	
CONN KK100 PCM MOZA SQ. TIP	1	P1	U550-00086-0100	
120 OHM 1/4W 5% CARBON	1	R1	100E-00005-0035	
L.E.D.: RED MV5760	4	LED 1	119E-00001-0007	

