

## CHOPLIFTER (834 - 5795)


OPTION		1	2	3	4	5	6	7	8
1 COIN 1 CRE 1 COIN 2 CRE 1 COIN 3 CRE 1 COIN 4 CRE 1 COIN 5 CRE 1 COIN 5 CRE 2 COINS 1 CRE 3 COINS 1 CRE 4 COINS 1 CRE	DITS DITS DITS DITS DITS DIT DIT	OFF ON OFF ON OFF ON OFF	OFF OFF ON OFF OFF ON OFF OFF	OFF OFF OFF ON ON ON ON OFF	OFF OFF OFF OFF OFF OFF ON	OFF ON OFF ON OFF ON OFF ON	OFF ON ON OFF OFF ON OFF	OFF OFF OFF ON ON ON OFF OFF	OFF OFF OFF OFF OFF ON
2 COINS 3 CRE 2 COINS 1 CRE 4 COINS 2 CRE 5 COINS 3 CRE 8 COINS 4 CRE	DIT DITS DITS	OFF	ON	OFF	ON .	OFF	ON	OFF	ON
2 COINS 1 CRE 4 COINS 3 CRE		ON	ON	OFF	ON	ON	ON	OFF	ON
1 COIN 1 CRE 2 COINS 2 CRE 3 COINS 3 CRE 4 COINS 4 CRE 5 COINS & CRE	DITS DITS	OFF	OFF	ON	ON	OFF.	OFF	ON	ON
1 COIN 1 CRE 2 COINS 2 CRE 3 COINS 3 CRE 4 COINS 5 CRE	DITS	ON	OFF	ON	ON	ON	OFF	ON	ON
1 COIN 1 CRE 2 COINS 3 CRE	DIT	OFF	ON	ON	ON	OFF	ON	ON	ON
1 COIN 1 CRE	DIT	ON	ON	ON	ON	ON	ON	ON	ON


DIP SWITCH #A

OPTION .	1	1	3	4	5	6	7	8
TABLE UPRIGHT	OFF							
ADVER TISE OFF SOUND ON		OFF						
PLAYER 2 HELICOPTER 4			OFF ON OFF	OFF OFF			NOT	
FREE			ON	ON				
SCORE OF 20000, 70000					OFF			
ADDITIONAL 50000, 1000000 PLAYER 150000, 2000000	1		1		ON			
GAME EASY DIFFICULTY HARD		W		1		OFF		

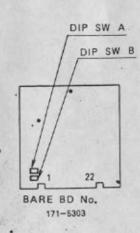

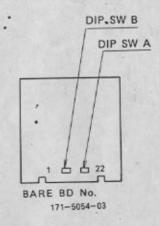

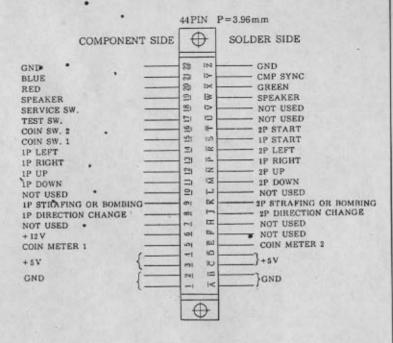



SUPPLY VOLTA	GES & CURRENT		
VOLTAGE	CURRENT		
DC5V	4.5 A		
DC12V	0.25 A		