

MIDI Captain MINI 6

MIDI command controller


Supports PC/CC/NOTE/SystemEx/
SystemCommon/RealTime commands (MTC
and MIDIClock not supported)

Unique time engine control function

Equipped with two-way communication of KPP
LEVEL1 and LEVEL3

FW5.0 Firmware


Ver 3.0 (2026-5)

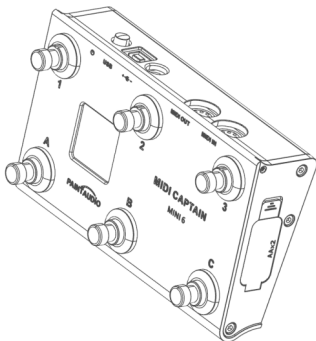


This manual is updated continuously with products, for reference only. Note: Contents may not fully match the internal firmware version.

PAINTAUDIO

1 Interface

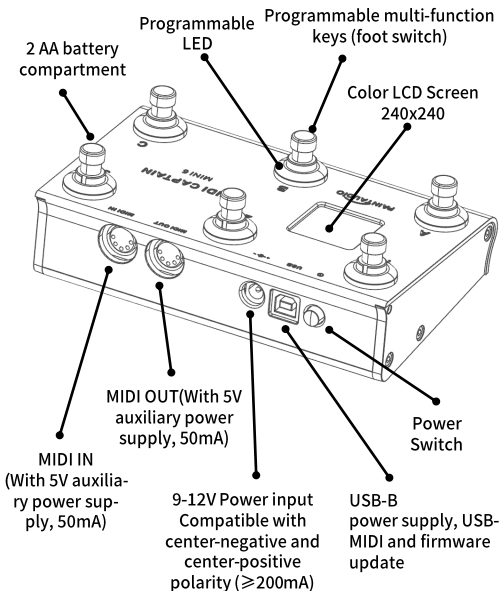


2 Special Reminder

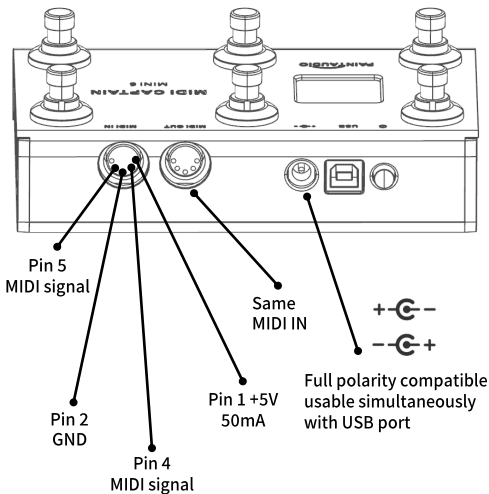

The auxiliary power supply of MIDI port is designed to power external devices including CME WIDI Bluetooth MIDI adapters. Some effectors ground the 5V auxiliary power pins. Connection with full-pin MIDI cables may burn out MIDI CAPTAIN. 2-pin or 3-pin MIDI cables are recommended, and a 3-pin cable is included as original accessory.

3 Mode Selection & Preset

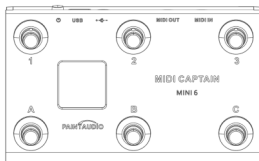


- Hold key 1 and power on to enter USB Setup mode for advanced settings via built-in storage.
- Hold key A and power on to enter SuperMode5.0.
- Hold key 3 and power on to activate KPP LEVEL1/2 two-way communication. Banks range from 1 to 10. Long press TAP to access tuner and display KPP tuner data with valid connection.
- Hold key C and power on to activate KPP LEVEL3 two-way communication. Banks range from 1 to 125. Long press TAP to access tuner and display KPP tuner data with valid connection.
- Factory default: Press and hold key 3/C to switch presets.

4 USBsetup

Connect the device to PC via USB, press and hold key 1 then power on to enter advanced USB configuration mode. For macOS, refrain from any operation including power-off for around 1 minute after initial access. The system may create hidden trash directories. Powering off during this process may corrupt system files and cause boot failure. The issue can be fixed via firmware update.

The icon on the right indicates successful entry into advanced USB configuration mode. A disk named MIDICAPTAIN will appear on your computer, as shown below .

Double-click the MIDI-CAPTAIN drive like opening a regular disk or folder to view the directory and file structure shown on the right. The folders kemperLVL1, kemperLVL3 and super-mode store configuration files for respective modes.

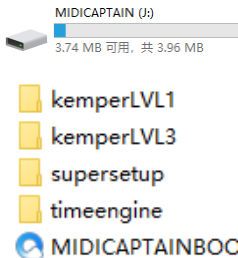

5 USBsetup Configuration

5.1 Configuration Page Creation Rules

 `page0.txt`

 `page1.txt`

 `page2.txt`

 `page3.txt`

 `page4.txt`

 `page5.txt`

 `page6.txt`

Enter the folder of the corresponding mode. PageX.txt stores settings of each configuration page.

Create pages sequentially starting from page0.txt. No skipped numbers or renamed files allowed, otherwise read errors and program crashes may occur. Maximum page number is 99.

5.2 Global Setting Keyword Analysis

- `page_name = [kemper]` Page name, maximum 6 characters
- `ledbright = [80]` LED brightness, range: 0-100
- `screenbright = [80]` Screen backlight brightness, range: 0-100
- `long_press_timing = [1]` Long press duration (second), value: 1/2/3
- `BATTERY_CHARGE = [off]` Battery charging switch: on/off
- `group_number = [6]` PC command group, range: 3-10

- display_number_ABC = [abc6]

PC command display, options: 123/abc3/abc4/abc5/abc6/abc7/abc8/abc9/abc10

123 displays commands in numeric form; abcX shows number plus letter. Number stands for group number, letter represents corresponding tone in current group.

- display_bank_offset = [1] PC display starts from 0/1
- pc_open_num = [0] Value: 0-127, power-on PC display value
- PC_Bank_Select = [4]

PC_group_0 = [1][CC][0][0]

If the effect pedal supports over 127 tones, fill total PC groups in PC_Bank_Select, and input group switch commands (usually CC commands) in PC_group_X. Refer to device manual or MIDI command list. Max 10 groups, up to 1280 tones ranging 0-1279.

- CC_value_gropnumber = [3][2] [10][10]

Set groups here to enable CCautoBank. Each group contains two values: the first is CC command code, the second stands for quantity per group.

- tapcountMIN = [20] Minimum TAP count value
- tapcountMAX = [200] Maximum TAP count value
- midithrough = [on] Value: on/off
- externalmidicontrol = [on] External MIDI command control switch: on/off
- externalmidicontrolch = [16] External MIDI response channel: 1-16

5.3 Button setting rules

- [key1][key2][key3] Top row buttons from left to right
- [keyA][keyB][keyC] Bottom row buttons from left to right
- keytimes = [1] Button cycle times, range: 1-10
- ledmode = [normal]

ledmode, normal/tap/select/select1/select2/select3/select4/select5

normal: Light up according to program settings and cycle status

tap: Flash based on TAP BPM

select: Only light active button in group, reset others' cycle count to 1

- ledcolor0 = [0x00FFFF][0x00FFFF][0x00FFFF]

Power-on light, color follows RGB888 encoding

- ledcolor1 = [0x00FFFF][0x00FFFF][0x00FFFF]

ledcolorX, Range: 1-10, corresponding cyclic light colors

- short_dw1_name = [XXXX] Cycle 1 press operation name
- short_dw1 = [1][PC][auto3][-] Cycle 1 press command, max 16 continuous commands
- Each cycle button has 4 states: Press, Long Press, Short Release, Long Release. Command keywords: short_dwX/longX/short_upX/long_upX. Corresponding operation names: short_dwX_name/longX_name/short_upX_name/long_upX_name
- To distinguish short and long press in one cycle, use short_upX and longX commands, no mutual interference.

```

[key1]
keytimes = [1]
ledmode = [select]
ledcolor0 = [0x00FFFF][0x00FFFF][0x00FFFF]

ledcolor1 = [0x00FFFF][0x00FFFF][0x00FFFF]
short_dw1_name = []
short_dw1 = [1][PC][auto3][-]

```

5.4 Editor

FW5.0 firmware comes with a dedicated editor, available for download at www.paintaudio.com/pages/surports. Compatible with FW5.0, applicable to MIDI Captain Blue/Gold/STD, MIDI Captain MINI6 and MIDI Captain Nano4.

After editing, click the download button to auto-generate page0.txt. Rename it to pageX.txt as needed, copy the file to the target folder, then restart MIDI Captain to apply changes.

The editor only supports basic command editing. SysEx and HID commands need manual editing in pageX.txt.



6 SuperMode Command Keyword Description

6.1 PC Command

6.1. 1 PC General Command

[1][PC][0][-] [MIDI Channel][PC][Command Parameter][-]

6. 1. 2 PC Extended Command

[1][PC][bank_inc][-] PC Command, Group Add

[1][PC][bank_dec][-] PC Command, Group Subtract

[1][PC][auto0][-] Range: auto0-auto9, in-group value

[1][PC][value_inc][-] PC Command, Value Add

[1][PC][value_dec][-] PC Command, Value Subtract

6. 2 CC Command

6. 2. 1 CC General Command

[1][CC][10][127] [MIDI Channel][CC][Code][Value]

6. 2. 2 CC Extended Command

[1][CC][43][bank_inc] CC Command, Group Add

[1][CC][43][bank_dec] CC Command, Group Subtract

[1][CC][43][auto0] Range: auto0-auto9, in-group value

[1][CC][43][value_inc] CC Command, Value Add

[1][CC][43][value_dec] CC Command, Value Subtract

6. 2. 2 CCautotap Command

[1][CC][43][autotap] Requires ledmode=[tap], tapcountMIN and tapcountMAX. The device automatically calculates the interval between two taps, converts it into corresponding CC value and transmits the command.

6. 3 Note Command

[1][NT][64][127] [MIDI Channel][NT][Pitch][Velocity]

6. 4 System Exclusive

[SysEX][01][00][11][20][30][33][127][END]

[SysEX][0x01][0x00][0x11][0x20][0x30][0x33][0xFF][END]

Single SysEx command max length: 50. Must end with [END].
Distinguish number bases: decimal input directly, hex prefix with 0x.

6. 5 preset Command

[preset][value_inc] Preset Page Value Add

[preset][value_dec] Preset Page Value Subtract

6. 6 timeengine Command

[timeengine][value_inc] Track Value Add

[timeengine][value_dec] Track Value Subtract

[timeengine][0] Jump to corresponding track

[timeengine][begin] Play

[timeengine][stop] Stop

[timeengine][record] Record

6. 7 HID Command (Keyboard Emulation)

6. 7. 1 Keyword Description

Operation Keyword: send/press/release/delay

[HID][send][A][END] send command

[HID][press][A][END] press command

[HID][release][A][END] release command

[HID][delay][50][END] delay millisecond

Command must end with [END]. Excluding modifier keys, single command max 6 entries.

6. 7. 2 Letters & Numbers

[A]-[Z] A-Z

[a]-[z] a-z

[0]-[9] 0-9

Only alphabetic commands support automatic case recognition. Example: [HID][send][P][a][i][n][t][END] outputs "Paint" .

6. 7. 3 Modifier key

[shift]、 [ctrl]、 [alt]、 [windows]、 [option]、 [command]

Letters are case-insensitive when modifier keys are included in commands

6. 7. 4 Function Keys

[tab]、 [backspace]、 [space]、 [esc]、 [enter]、 [delete]、
[home]、 [page_up]、 [page_down]、 [up]、 [down]、 [left]、
[right]、 [F1]、 [F2]、 [F3]、 [F4]、 [F5]、 [F6]、 [F7]、 [F8]、 [F9]、
[F10]、 [F11]、 [F12]、 [mouse_L]、 [mouse_R]

6. 7. 4 Multimedia Command

[vol_up]、 [vol_down] System Volume Up/Down

[play_pause]、 [stop] Play/Pause/Stop

[prev_track]、 [next_track] Previous/Next Track

6. 8 CCT Command

[1][CCT][12][127]

Send 127 on first press, 0 on second press

[1][CCT][12][0]

Send 0 on first press, 127 on second press.

Note: CCT command has single keytime only, no light change, value displayed on screen only.

6. 9 System Common

6. 9. 1 Song position pointer

[SysCmn][SongPP][100]	Jump to 100 MIDI Beat
[SysCmn][SongPPinc][-]	Song Beat Increase
[SysCmn][SongPPdec][-]	Song Beat Decrease
[SysCmn][SongPPreset][-]	Reset song position to zero

6. 9. 2 Song Select

[SysCmn][SongSelect][1]	Jump to Song 1
[SysCmn][SongSelectInc][-]	Auto increment song number
[SysCmn][SongSelectDec][-]	Auto decrement song number

6. 10 RealTime

[realtime][start]	start
[realtime][continue]	continue
[realtime][stop]	stop
[realtime][systemreset]	systemreset

7 External MIDI Command Control Table

7.1 External Key Trigger Command

If the keytimes loop is greater than 1, the command must include either long_up or short_up when sending. Additionally, the interval between short_down/long and long_up/short_up must be greater than 1 ms. Otherwise, the MIDI Captain will not accumulate or increment the key state count.

7. 1. 2 command

CC 1 1 key1 short_down

CC 1 2 key1 long

CC 1 3 key1 short_up

CC 1 4 key1 long_up

CC numbers 1-3 correspond to key1-key3, CC numbers 6-8 correspond to keyA-keyC

CC 16 127 TimeEngine begin

CC 17 127 TimeEngine stop

CC 18 127 TimeEngine record

CC 19 value TimeEngine Track jump (value range: 1 to maximum track number)

CC 20 value preset jump (value range: 1 to maximum track number)

CC 21 value key1 keytimes 跳转 (取值1-10)

CC numbers 21-23 correspond to key1-key3, CC numbers 26-28 correspond to keyA-keyC

7.1. 3 SysEx command: Change lighting color

[SysEx][0x00][0x04][0x10][Key (1-10)][LED1 Red][LED1 Green][LED1 Blue][LED2 Red][LED2 Green][LED2 Blue][LED3 Red][LED3 Green][LED3 Blue][END]

LED color adopts RGB888 encoding. Split 6-digit hexadecimal RRGGBB into RR, GG, BB components. Divide each value by 2 before filling in corresponding positions. MIDI data value shall not exceed 0x7F.

For example: Set 3 LEDs of Key1 to RGB888 color 0xDEB887.

[SysEx][0x00][0x04][0x10][0x01][0x6F][0x5E][0x43][0x6F][0x5E]
[0x43][0x6F][0x5E][0x43][END]

8 Factory Preset

8. 1 supermode

page0: DSPn1 (For DSPnano)

PC auto A	PC auto B	dw: BANK UP long: preset + 1
PC auto C	PC auto D	dw: BANK DW long: preset - 1

page1: DSPn2 (For DSPnano)

dw1: FX1 On CC 37 127 dw2: FX1 Off CC 37 0	dw1: FX2 On CC 38 127 dw2: FX2 Off CC 38 0	dw: PC + 1 long: preset + 1
dw1: FX3 On CC 39 127 dw2: FX3 Off CC 39 0	dw1: FX4 On CC 40 127 dw2: FX4 Off CC 40 0	dw: PC - 1 long: preset - 1

page2: DSPm1 (For DSPmini PCvalue up to 255)

PC auto A	PC auto B	dw: BANK UP long: preset + 1
PC auto C	PC auto D	dw: BANK DW long: preset - 1

page3: DSPm2 (For DSPmini)

dw:TAP CC 44 127 long: TUNER CC 43 127	dw1:Preset CC 47 0 dw2:Scene CC 47 1 dw3:Stomp CC 47 2	dw: PC + 1 long: preset + 1
dw1: Swap1 CC 64 0 dw2: Swap2 CC 64 127	dw1: Gig On CC 46 127 dw2: Gig Off CC 46 0	dw: PC - 1 long: preset - 1

page4: DSPs (For DSP Scene)

dw1:Scene1 CC 43 0 dw2: Scene5 CC 43 4	dw1:Scene2 CC 43 1 dw2: Scene6 CC 43 5	dw: PC + 1 long: preset + 1
dw1:Scene3 CC 43 2 dw2: Scene7 CC 43 6	dw1:Scene4 CC 43 3 dw2: Scene8 CC 43 7	dw: PC - 1 long: preset - 1

page5: HXSP (For Line6 HX Stomp)

dw:TAP CC 64 64 long: TUNER CC 68 127	PC auto C	dw: BANK UP long: preset + 1
PC auto A	PC auto B	dw: BANK DW long: preset - 1

page6: HXSP (For Line6 HX Stomp)

dw1:Snap1 CC 69 0 dw2:Snap2 CC 69 1 dw3:Snap3 CC 69 2	PC auto C	dw: BANK UP long: preset + 1
PC auto A	PC auto B	dw: BANK DW long: preset - 1

page7: FM3P (For FM3 PCvalue up to 511)

dw:TAP CC 15 1 long: TUNER CC 46 127	PC auto C	dw: BANK UP long: preset + 1
PC auto A	PC auto B	dw: BANK DW long: preset - 1

page8: FM3S (For FM3 Scene)

dw1:Scene1 CC 43 0 dw2: Scene5 CC 43 4	dw1:Scene2 CC 43 1 dw2: Scene6 CC 43 5	dw: PC + 1 long: preset + 1
dw1:Scene3 CC 43 2 dw2: Scene7 CC 43 6	dw1:Scene4 CC 43 3 dw2: Scene8 CC 43 7	dw: PC - 1 long: preset - 1

page9: AMPO (For Hotone Ampero Stomp)

dw:TAP CC 76 1 long: TUNER CC 60 127	PC auto C	dw: BANK UP long: preset + 1
PC auto A	PC auto B	dw: BANK DW long: preset - 1

page10: GT1K (For BOSS GT-1000)

dw:TAP CC 26 auto long: TUNER CC 22 127	PC auto D	dw: PC auto E long: preset + 1
PC auto A long: BANK DW	PC auto B long: BANK UP	dw: PC auto C long: preset - 1

page11: HRSc (For Head Rush Flex Prime)

dw1:Scene1 CC 21 127 dw2: Scene5 CC 25 127	dw1:Scene2 CC 22 127 dw2: Scene6 CC 26 127	dw: PC + 1 long: preset + 1
dw1:Scene3 CC 23 127 dw2: Scene7 CC 27 127	dw1:Scene4 CC 24 127 dw2: Scene8 CC 28 127	dw: PC - 1 long: preset - 1

page12: HRFP

dw:TAP CC 64 127 long:TUNER CC 92 127	PC auto D	dw: PC auto E long: preset + 1
PC auto A long:BANK DW	PC auto B long:BANK UP	dw: PC auto C long: preset - 1

page13: ToM1 (For Tone Master Pro)

PC auto D	PC auto E	dw: PC auto F long: preset + 1
PC auto A long:BANK DW	PC auto B long:BANK UP	dw: PC auto C long: preset - 1

page14: ToM2 (For Tone Master Pro)

dw1:TAP CC 64 127 dw2: TUNER CC 68 127	dw1:FS Mode CC 20 127	dw: PC + 1 long: preset + 1
dw1:FS 5 CC 25 127	dw1:FS 6 CC 26 127	dw: PC - 1 long: preset - 1

page15: ToneX

dw:TAP CC 90 127 long:TUNER CC 9 127	PC auto C	dw: BANK UP long: preset + 1
PC auto A	PC auto B	dw: BANK DW long: preset - 1

page16: JAMP (For JAMP or other PC software)

dw1: CC 21 127	dw1: CC 22 127	dw: PC + 1 long: preset + 1
dw1: CC 23 127	dw1: CC 24 127	dw: PC - 1 long: preset - 1

page17: BIAS (For BIAS or other PC software)

dw1: CC 80 127 dw2: CC 80 0	dw1: CC 81 127 dw2: CC 81 0	dw: PC + 1 long: preset + 1
dw1: CC 82 127 dw2: CC 82 0	dw1: CC 83 127 dw2: CC 83 0	dw: PC - 1 long: preset - 1

page18: PC18

dw1: PC 0 dw2: PC 6 dw3: PC 12	dw1: PC 1 dw2: PC 7 dw3: PC 13	dw1: PC 2 dw2: PC 8 dw3: PC 14 long: preset + 1
dw1: PC 3 dw2: PC 9 dw3: PC 15	dw1: PC 4 dw2: PC 10 dw3: PC 16	dw1: PC 5 dw2: PC 11 dw3: PC 17 long: preset - 1

page19: ALCC

dw1: CC 1 127	dw1: CC 2 127	dw: CC 3 127 long: preset + 1
dw1: CC 4 127	dw1: CC 5 127	dw: CC 6 127 long: preset - 1

page20: ALCT

dw1: CC 1 127 dw2: CC 1 0	dw1: CC 2 127 dw2: CC 2 0	dw1: CC 3 127 dw2: CC 3 0 long: preset + 1
dw1: CC 4 127 dw2: CC 4 0	dw1: CC 5 127 dw2: CC 5 0	dw1: CC 6 127 dw2: CC 6 0 long: preset - 1

page21: ALNT

dw: NT 60 80 up: NT 60 0	dw: NT 61 80 up: NT 61 0	dw1: NT 62 80 dw2: CC 62 0 long: preset + 1
dw: NT 63 80 up: NT 63 0	dw: NT 64 80 up: NT 64 0	dw1: NT 65 80 dw2: NT 65 0 long: preset - 1

page22: HID

dw: "PaintAudio"	dw: prev_track	dw1: vol_up long: preset + 1
dw: play/pause	dw: next_track	dw1: vol_down long: preset - 1

page23: SysM

dw: realtime start	dw: realtime continue	dw1: song + 1 long: preset + 1
dw: realtime stop	dw: realtime systemreset	dw1: song - 1 long: preset - 1

8. 2 KPP LVL1/2

page0: KPPLVL1/2(BANK:1-10)

dw:TAP CC 30 1 long: TUNER CC 31 127	short up: PC auto D long: slot B	short up: PC auto E long: BANK UP
short up: PC auto A long: Delay	short up: PC auto B long: Reverb	short up: PC auto C long: BANK DW

8. 3 KPP LVL3

page0: KPPLVL3(BANK:1-125)

dw:TAP CC 30 1 long: TUNER CC 31 127	short up: PC auto D long: slot B	short up: PC auto E long: BANK UP
short up: PC auto A long: Delay	short up: PC auto B long: Reverb	short up: PC auto C long: BANK DW

9 Backup & Restore

It is recommended to back up all data in the MIDI Captain drive immediately and store it safely on your local computer. Download FW 5.0 firmware package and editor from www.paintaudio.com/pages/surports.

The firmware update package consists of two parts:

- 1.Update Program : "MIDICaptainMINI6.uf2"
- 2.Configuration files are stored in the folder "MIDICAPTAIN 10S FS".


Connect the device to PC and power it on during update. Open MIDICAPTAINBOOT.HTML to activate RP-2 disk. Copy the XXX.uf2 file into the disk. Reboot the device after copying to finish firmware update.

Update configuration files: Connect the device to computer, hold Key1 while powering on. A removable disk named MIDI Captain will pop up, its name can be edited freely. Copy configuration files into the disk.

Refer to Update Procedure.pdf in the downloaded package for detailed illustrated instructions of firmware and configuration updates.



Program File

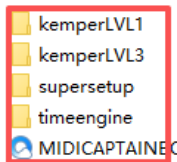


Configuration File

10 Other usage tips

If your demands for button functions and MIDI commands exceed the scope of default settings, such as sending multiple commands with a single press, or transmitting command types beyond PC, CC and Note including chords, pitch bend and USB HID control, the device can still meet your needs via customized firmware.

You may contact our technical team at yangyida@paintaudio.com to discuss your requirements and feasibility. We will strive to deliver customized solutions to expand application scenarios for better user experience. In addition to wireless operation via MIDI MATE 2.4G, this device can work with other wireless Bluetooth MIDI devices to control apps on mobile phones and tablets via Bluetooth, such as the CME WIDI Master (see: <https://www.cme-pro.com/widi-master/>). The MIDI CAPTAIN features a special power-out design from the MIDI port to support such usage. This function is not part of the standard MIDI hardware protocol. Please ensure the power capacity, polarity, and pin positions are compatible before use. PaintAudio shall not be liable for compatibility issues, operational errors, or damage caused by using any third-party devices other than its own MIDI MATE products.

The MIDI port of MIDI Captain is designed in full compliance with standard specifications and supports +5V auxiliary power supply. Some effectors ground the +5V power pin, which may damage MIDI Captain when connected via a 5-pin MIDI cable. Please use the original 3-pin MIDI cable of this device to avoid burnout risks.

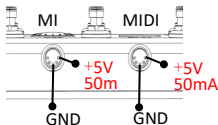

11 Indicator

Power supply voltage	5V (USB); 9V-12V (Adapter)
Power Supply Current	0.1A - 0.4A (Max LED brightness)
Power	0.5W - 5W (Max LED brightness)
Footswitch	6, fully customizable
Display	240x240 RGB 24bits LCD
Battery	2 AA batteries, Ni-MH or LR6, 6-12 hours endurance
Charging function	250mA automatic charging
MIDI Interface	IN / OUT with 5V 50mA external power output
CPU	200MHz Dual-core
Internal Flash Memory	8M bits
Weight	Net weight: 0.42 kg
Dimension	156mm x 90mm x 55mm

12 Safety information

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, damages, fire or other hazards. These precautions include, but are not limited to, the following:

- Do not connect the instrument during a thunder.
- Do not set up the cord or outlet to a humid place, unless the outlet is specially designed for humid places.
- If the instrument needs to be powered by AC, do not touch the bare part of the cord or the connector, when the power cord is connected to the AC outlet.
- Always follow the instructions carefully when setting up the instrument.
- Do not expose the instrument to rain or moisture, to avoid fire and/or electrical shock.
- Keep the instrument away from electrical interface sources, such as fluorescent light and electrical motors.
- Keep the instrument away from dust, heat and vibration.
- Do not expose the instrument to sunlight.
- Do not place heavy objects on the instrument; do not place containers with liquid on the instrument.
- Do not touch the connectors with wet hands.
- Caution to the sharp edges and corners of the metal box. Leave the device out of the reach of kids and children when no guardian.
- Take off the batteries when not using the device for more than 3 days.
- Remove the USB cable or adapter powering source when not using the device.

13 Contact Us

Email:

yangyida@paintaudio.com

contact@paintaudio.com

support@paintaudio.com

Web:

www.paintaudio.com

保修卡 Warranty

型号 Model	
用户签名 Signature	
日期 Date of Sales	
地址 Address	
序列号 SN	
经销商 Distributor	
发票号 Invoice No.	
其它备注 Others	

本产品自购买之日12个月内享受免费维保服务。以下情形除外: 不可抗力损坏; 人为损坏; 私自拆修; 法规约定的其它情形。

This product enjoys free maintenance service within 12 months from the date of purchase. Except for the following situations: force majeure damage; man-made damage; unauthorized dismantling and repair; other circumstances stipulated by laws and regulations.

PAINTAUDIO



合格证 QUALIFICATION

型号 MODEL	
检验 CHECKER	
日期 DATE	


PAINTAUDIO

THANK YOU