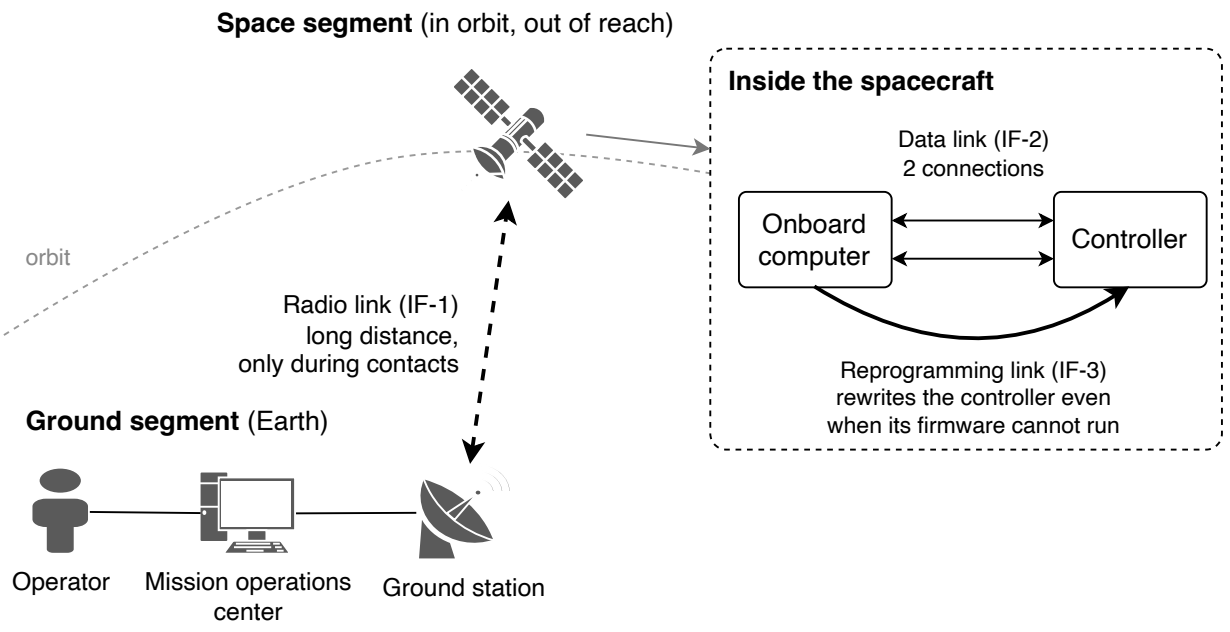
**Space segment** (in orbit, out of reach)
orbit
Radio link (IF-1)
long distance,
only during contacts
**Ground segment** (Earth)
Operator
Mission operations center
Ground station
**Inside the spacecraft**
Data link (IF-2)
2 connections
Onboard computer
Controller
Reprogramming link (IF-3)
rewrites the controller even
when its firmware cannot run