# Fail-Safe In-Orbit Reprogramming of a Spacecraft Controller

Concept of Operations

| | |
|---|---|
| Reference | TBD [**TBD-1**] |
| Issue / revision | Issue 1, Revision 1 — DRAFT |
| Date | 11 October 2026 |
| Author | Andrew Toma |
| Open items | 8 TBD (App. C) |

### Document change record

| Issue | Rev. | Date | Change |
|---|---|---|---|
| 1 | 0 | 2026-10-10 | First draft |
| 1 | 1 | 2026-10-11 | Gaps found by the hazard analysis: scope, objective O-6, assumption A-6, command checks, functions per mode, origin replaced in flight, and seven scenarios and one risk added or completed |

## Contents

**1.0 Introduction** **3**
1.1 Project Description . . . 3
1.2 Overview of the Envisioned System . . . 3

**2.0 Documents** **5**
2.1 Applicable Documents . . . 5
2.2 Reference Documents . . . 5

**3.0 Description of Envisioned System** **5**
3.1 Needs, Goals and Objectives . . . 5
3.2 Overview of System and Key Elements . . . 5
3.3 Interfaces . . . 6
3.4 Modes of Operations . . . 6
3.5 Proposed Capabilities . . . 7

**4.0 Physical Environment** **7**

**5.0 Support Environment** **8**

**6.0 Operational Scenarios** **8**
6.1 Nominal Conditions . . . 8
6.2 Off-Nominal Conditions . . . 9

**7.0 Impact Considerations** **11**
7.1 Environmental Impacts . . . 11
7.2 Organizational Impacts . . . 11
7.3 Technical Impacts . . . 11

**8.0 Risks and Potential Issues** **11**

**A Acronyms** **11**

**B Glossary** **12**

**C Open Items** **12**

# 1.0 Introduction

## 1.1 Project Description

### 1.1.1 Background

**Purpose:** The System lets an operator on the ground command, monitor, and update a controller in space that nobody can reach, and keeps that controller working between contacts.

**Need:** A controller that nobody can reach must stay operable, observable, and correctable for its whole life. Operation, observability, and maintenance including in-flight modification over the specified lifetime are three areas a space software specification must cover [3, Annex B, items 5.11–5.13, p. 113].

**Worst-Case Failure:** A failed update can leave the controller unable to run any firmware and unable to accept new firmware. Without physical access, that state is permanent.

**Rationale:** The loss has happened. NASA records a mission terminated after an in-flight software upload omitted a patch for a defective countdown timer; its recommendations include test-bed verification of in-flight software updates [4, Lesson 0559, p. 199].

### 1.1.2 Assumptions and Constraints

**C-1** The ground cannot talk to the controller directly. Every command, report, and firmware image passes through the onboard computer.

**C-2** All software is built to NASA's software engineering requirements. Rigor per part is set by its software class [5, Sec. 3.5.1, p. 24; App. C].

**C-3** One engineer builds and checks the System. No independent team reviews the work.

**C-4** The System runs on commercial development boards, not on spacecraft hardware. It can show how the System behaves, not that it would survive launch or space.

**A-1** Once launched, physical access to the onboard computer or controller is impossible; all fixes and updates must arrive by radio.

**A-2** The controller can lose power at any moment, even halfway through writing new firmware. The System must survive that without losing the controller [2, App. A, Table 2, p. 63].

**A-3** The ground can reach the spacecraft only during line-of-sight contact windows [**TBD-4**]. Between contacts the System must work on its own.

**A-4** One person operates the ground station. No second person checks a command before it is sent, so the System itself must refuse wrong commands.

**A-5** Radiation in space can flip single bits in memory, so stored firmware can change on its own. The System must not run firmware that has changed [2, App. A, Table 2, p. 63].

**A-6** The onboard computer's software can be corrected in flight by a system outside this project, so a defect in it is not permanent.

***Note.*** *A constraint (C) is a limit the System must work within; it is imposed, not chosen. An assumption (A) is a condition taken as true without proof; the design depends on it, and if it proves false the design may be wrong.* ***[TBD-****n****]*** *marks a value not yet known; all are listed in App. C.*

## 1.2 Overview of the Envisioned System

### 1.2.1 Overview

The System comprises two spatially separated operational segments. The **ground segment** on Earth includes the operator, the mission operations center running ground software, and

the ground station antenna [6, Sec. 11.2, p. 305]. The **space segment** in orbit consists of the onboard computer and the controller, which operate without physical access.

Communication between segments is strictly established via a radio link during line-of-sight contact windows [**TBD-4**]. Outside contact windows, the space segment operates autonomously. Within the spacecraft, the onboard computer communicates with the controller over the data link during normal operation. If the controller's main firmware fails to execute, the onboard computer utilizes the reprogramming link to restore functional firmware independently of the controller's primary software. Figure 1 illustrates this segment layout.

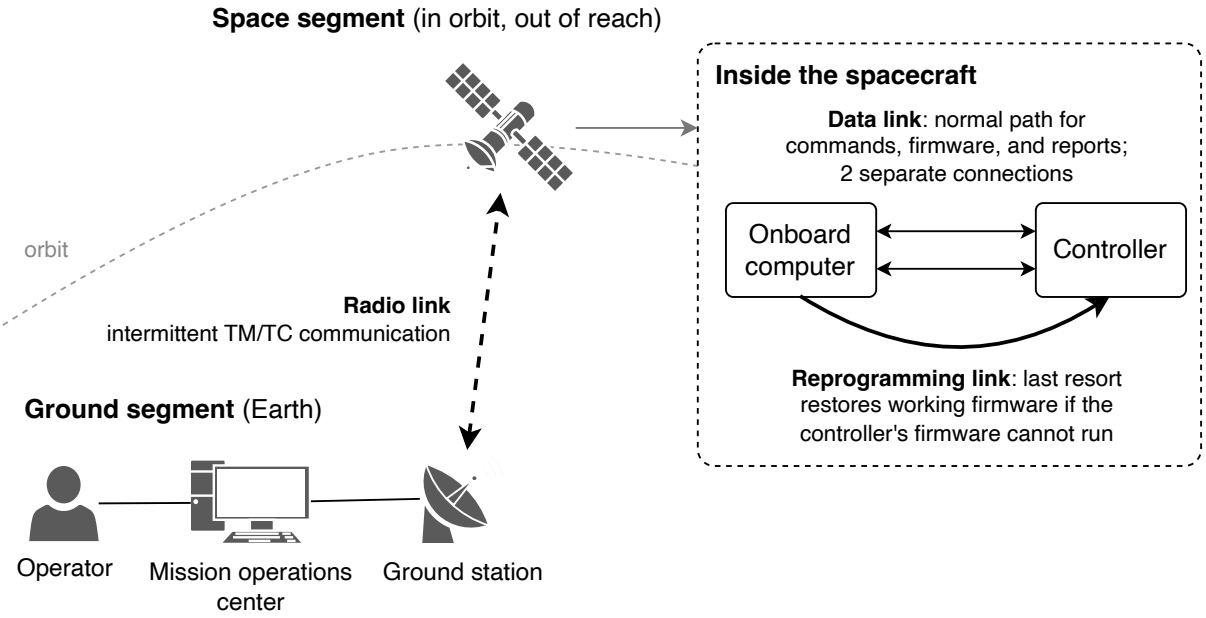



Figure 1: Ground and space segments, joined only by the radio link during contact windows. Inside the spacecraft, the data link handles normal communication, while the reprogramming link restores working firmware if the controller's firmware cannot run.

### 1.2.2 System Scope

The system context defines the boundary of the System: the system of interest, its users, and the external elements that interface with it [7, Sec. 8.3, p. 24].

| Context Element | System Boundary |
|---|---|
| System of Interest | Onboard computer, controller, ground software in the MOC |
| Users | Ground operator |
| External Elements | Radio equipment, spacecraft power supply |

- **Enabling systems:** firmware build tools and bench test setups required for development and verification, external to operational scope.
- **In scope:** commanding, telemetry, firmware updates, and autonomous fault handling between contact windows.
- **Out of scope:** onboard computer software updates; the equipment the controller drives, and its state while no firmware runs; and the radio equipment, which is used as given.

# 2.0 Documents

## 2.1 Applicable Documents

[1] NASA, *NASA Systems Engineering Handbook*, NASA/SP-2016-6105 Rev 2, 2016. This outline follows its App. S, pp. 251–253, tailored per its Sec. 3.11.1, p. 34: App. C added for open items per its App. C, pp. 197–198.

## 2.2 Reference Documents

[2] NASA, *Software Assurance and Software Safety Standard*, NASA-STD-8739.8B, 2022. Off-nominal scenarios cite App. A, Table 2.
[3] ESA, *Space engineering — Software*, ECSS-E-ST-40C Rev. 1, 30 April 2025.
[4] NASA, *Fault Management Handbook*, NASA-HDBK-1002, Draft 2, 2 April 2012. A draft, not a released standard.
[5] NASA, *NASA Software Engineering Requirements*, NPR 7150.2D.
[6] NASA, *State-of-the-Art of Small Spacecraft Technology*, Chapter 11, "Ground Data Systems and Mission Operations", 2026 edition. Ground system architecture in Sec. 11.2 and Fig. 11.2, pp. 305–306.
[7] NASA, *NASA Systems Modeling Handbook for Systems Engineering*, NASA-HDBK-1009A, 12 March 2025.

# 3.0 Description of Envisioned System

## 3.1 Needs, Goals and Objectives

**NEED** A controller that nobody can reach must stay operable, observable and correctable for its whole life.

**G-1** **Operability:** the controller keeps running and acts on the operator's commands.
- **O-1** Every valid operator command is executed. Valid means from the operator, allowed in the current state, with possible values, and not expired.
- **O-2** Firmware and commands not from the operator are never acted on.
- **O-3** With one data-link connection lost, commands, telemetry and updates continue.
- **O-4** No fault found between contacts goes unreported.

**G-2** **Observability:** the ground can know what the System is doing, how healthy it is, and what happened between contacts.
- **O-5** No report is lost without the ground being told.

**G-3** **Correctability:** the controller's firmware can be replaced for its whole life without losing the controller.
- **O-6** No update, however it is interrupted, leaves the controller without runnable firmware.

## 3.2 Overview of System and Key Elements

**Operator** The user. Decides and sends commands, releases new firmware, and reads the reports.

**Ground software** In the mission operations center. Turns the operator's decisions into commands and firmware ready to send, checks them before they leave, and keeps every report received.

**Onboard computer** Checks every firmware image, and the origin, newness and expiry of every command, and passes them to the controller. Stores the con-

| | |
|---|---|
| | troller's reports between contacts, watches the controller, and restores it when its firmware cannot run. |
| **Controller** | Checks every command against its current mode and possible values, runs its firmware, acts on commands, reports its state, and returns to working firmware on its own when new firmware fails. |

The ground station's radio equipment and the spacecraft power supply are outside the System; it uses them as given.

## 3.3 Interfaces

**External interfaces**

| | |
|---|---|
| **Operator interface** | Human. Ground software to operator. Allows the flight operator to issue telecommands, authorize firmware deployments, and monitor system telemetry. |
| **Radio link** | Radio frequency. Ground software to onboard computer via external radio equipment. Provides intermittent telemetry and telecommand (TM/TC) transfer exclusively during contact windows. |
| **Power** | Electrical. Spacecraft power subsystem to onboard computer and controller. Subject to unannounced power interruptions at any time (assumption A-2). |

**Interfaces between elements**

| | |
|---|---|
| **Data link** | Digital data. Onboard computer to controller. Nominal interface for commands, telemetry, and firmware updates while controller firmware is running. Uses two separate connections, so a single connection failure does not interrupt operations. |
| **Reprogramming link** | Digital data. Onboard computer to controller. Recovery interface used as a last resort to restore functional firmware independently of the controller's main software. |

## 3.4 Modes of Operations

**Life-cycle modes of the System**

| | |
|---|---|
| **Test** | Ground bench execution with simulated radio link degradation and intentional fault injection to demonstrate operational scenarios. |
| **Operation** | Active mission execution using the controller modes detailed below. |
| **Disposal** | Not applicable; limited to bench demonstration scope. |

**Controller modes during operation**

| | |
|---|---|
| **OPERATE** | Nominal state executing confirmed firmware. New firmware images can be staged in the background during execution. |
| **TRIAL** | Entered upon transitioning to updated firmware. Executes the new image for a bounded evaluation window [**TBD-5**]. If the new image is judged good, the update is committed and the controller returns to OPERATE; if not, it enters FALLBACK. |
| **FALLBACK** | Entered following a failed firmware trial or boot failure. Reverts execution to the previous known-good firmware image or the last-resort firmware. |
| **RECOVERY** | Entered when no operational firmware image can be executed. Controller software execution is halted while the onboard computer restores functional firmware via the reprogramming link. |

For each controller mode, the table below states whether the controller accepts commands, sends reports and can receive new firmware. During a trial, commands and reports continue so the new firmware can be judged, but further firmware is refused until the trial ends. In RECOVERY the controller's software is halted: the onboard computer reports for it, and the restore is the only way firmware arrives.

| Mode | Commands | Reports | New firmware received |
|---|---|---|---|
| OPERATE | YES | YES | YES |
| TRIAL | YES | YES | NO |
| FALLBACK | YES | YES | YES |
| RECOVERY | NO | NO | NO |

**Legend.** YES: available. NO: not available.

### 3.5 Proposed Capabilities

Each capability is shown in detail by the scenarios in Section 6.0.

**Capability-1** **Telemetry** (serves G-2): regular and event health reports, time-tagged, stored between contacts and sent down at the next one, with any loss reported.

**Capability-2** **Command handling** (serves G-1): accept only the operator's valid telecommands, answer and log every one, support arming and time-tagged execution, and replace in flight the means that proves a command comes from the operator.

**Capability-3** **Fault handling** (serves G-1): detect faults between contacts, respond without the ground, and record them.

**Capability-4** **Update** (serves G-3): receive, check, install and judge new firmware, and return to working firmware without outside help if it fails [**TBD-2**] [**TBD-3**].

**Capability-5** **Test** (verification only): degrade the radio link; cut power or break a data-link connection on command.

**Disposal** None; bench demonstration.

## 4.0 Physical Environment

This section specifies the environment the System encounters across its life cycle, encompassing simulated mission operations and laboratory integration and testing. For each environmental condition, the expected system response is defined as nominal operation, degraded performance tolerance, or survivability [1, App. S, p. 252].

| Phase | Environmental condition | Response | Shown on bench |
|---|---|---|---|
| Operation | Thermal range [**TBD-8**] | OPERATE | NO |
| Operation | Vacuum | OPERATE | NO |
| Operation | Radiation: single-event upset / memory bit errors | SURVIVE | SIMULATED |
| Operation | Electrical: power interruption at any instant | SURVIVE | YES |
| Launch | Mechanical: vibration and launch loads | OPERATE | NO |
| Integration and Test | Laboratory bench: ambient room temperature and pressure | OPERATE | YES |

**Legend: response**

| | |
|---|---|
| **OPERATE** | All functions continue normally. |
| **TOLERATE** | Partial functional degradation occurs, but no function is permanently lost. |
| **SURVIVE** | Operational functions temporarily halt and automatically recover upon removal of the condition. |

**Legend: shown on bench**

| | |
|---|---|
| **YES** | The condition itself is reproduced on the bench. |
| **SIMULATED** | The condition's effect is injected on purpose; the condition itself is not reproduced. |
| **NO** | Beyond what bench hardware can show (constraint C-4). |

**Transportation:** not applicable; system transportation is outside the scope of bench demonstration.

## 5.0 Support Environment

| | |
|---|---|
| **Operational planning** | The ground operator plans contact windows in advance, defining telecommand queues, firmware uploads, and telemetry retrieval profiles, with schedule timing derived from orbital parameters [**TBD-4**]. |
| **Commanding and uploads** | Ground software formats and validates operator telecommands for real-time execution or time-tagged scheduling, while verified firmware images are released from the ground segment and uploaded across one or multiple contact windows. |
| **Maintenance and repair** | Physical maintenance is excluded, as there is no physical access in orbit (assumption A-1); anomalies are managed by autonomous onboard fault protection or remotely through operator telecommands and firmware updates. |
| **Sparing** | Physical hardware spares are not available; the onboard computer retains a known-good firmware image and the controller maintains its last-resort firmware. |
| **Upgrades** | Controller firmware updates are the upgrade this System provides, at a release rate [**TBD-7**]. The onboard computer's software is corrected by a system outside this project (A-6). |
| **Continued support** | Engineering sustainment support remains allocated for firmware build, verification, and release throughout the active mission life cycle. |

## 6.0 Operational Scenarios

Each scenario follows one thread of events from trigger to outcome [1, App. S, pp. 252–253]. Every scenario below is demonstrated on hardware and recorded. Sources in brackets are items of NASA's list of software causes of hazards [2, App. A, Table 2].

### 6.1 Nominal Conditions

**Scenario-100 Firmware update.**

1. The operator releases new firmware; the ground software checks it and prepares the upload.
2. Over one or more contacts, the firmware goes up the radio link to the onboard computer.
3. The onboard computer checks that it is undamaged, from the operator, built for this controller, and not older than the minimum version.

4. The onboard computer delivers it to the controller over the data link; the controller keeps working meanwhile.
5. The controller switches to the new firmware and enters TRIAL [**TBD-2**].
6. The new firmware is judged good within the trial time [**TBD-5**] [**TBD-3**]; the update is committed and the controller returns to OPERATE.
7. The outcome is stored and sent down at the next contact.

**Scenario-110** **Telemetry between contacts.**

1. The controller sends regular health reports, and an event report as soon as something important happens.
2. The onboard computer time-tags and stores every report.
3. At the next contact, all stored reports go down the radio link.

**Scenario-120** **Command during a contact.**

1. The operator decides a command; the ground software prepares and checks it.
2. During a contact, the command goes up the radio link.
3. The onboard computer checks that it is from the operator, new and not expired; the controller checks that it is allowed in the current mode and has possible values. Commands added by new firmware are checked the same way. A dangerous command must first be armed by a separate command; the arm expires if the command does not follow within a set time.
4. The command is executed. The answers (received, then done with the result) go down, and the command and its answers are logged.

**Scenario-130** **Scheduled command.**

1. During a contact, the operator sends a command with a run time; the System answers "received".
2. At the run time, the command runs.
3. The "done" answer is stored and sent down at the next contact.

## 6.2 Off-Nominal Conditions

The off-nominal scenarios cover low performance, operator errors, failures, and unexpected environmental conditions [1, App. S, p. 253]. Each entry gives the trigger, then the expected outcome.

**Low performance of the radio link**

**Scenario-200** The radio link is lost during a firmware upload. The upload resumes at the next contact from where it stopped.

**Scenario-210** A long gap between contacts fills the report storage on the onboard computer. From then on, the System drops the oldest regular health reports to make room and keeps every event report. At the next contact, it sends what it stored and tells the ground how many health reports were dropped and the time span they covered.

**Operator errors and unauthorized commands**

**Scenario-300** A command not from the operator, or an old command sent again, arrives. It is refused and logged [2, p. 62].

**Scenario-310** A command not allowed in the current mode arrives, for example "switch" when no new firmware has arrived. It is refused with the reason [2, p. 63].

**Scenario-320** A command with impossible values arrives. It is refused with the reason [2, p. 62].

**Scenario-330** A dangerous command arrives without being armed. It is refused with the reason.

**Scenario-335** A dangerous command arrives after its arm has expired. It is refused with the reason; the operator must arm again.

**Scenario-340** A command arrives after its expiry. It is refused with the reason [2, p. 63].

**Scenario-350** An answer is lost and the operator sends the command again. It is not run a second time; the answer is "already done".

**Scenario-360** Firmware built for a different controller is uploaded. It is refused before it is installed [2, p. 63].

**Scenario-370** The operator replaces the means that proves commands and firmware come from the operator. The new means arrives in a command proven with the current one; from then on, only the new one is accepted [2, p. 67].

**Firmware update failures**

**Scenario-400** Firmware is damaged in transfer. The onboard computer refuses it before it reaches the controller [2, p. 63].

**Scenario-410** Firmware not released by the operator arrives. It is refused.

**Scenario-420** Firmware older than the minimum version arrives. It is refused.

**Scenario-425** New firmware arrives during a trial. It is refused with the reason until the trial ends [2, p. 63].

**Scenario-430** The new firmware hangs during TRIAL. The controller returns to its previous firmware without outside help.

**Scenario-440** The new firmware restarts over and over. After **[TBD-6]** failed starts, the controller returns to its previous firmware [2, p. 64].

**Scenario-450** The new firmware runs but is never judged good. After the trial time, the controller returns to its previous firmware.

**Scenario-460** The previous firmware is also unusable. The controller runs its last-resort firmware.

**Scenario-470** The operator cancels an update in progress. The update stops; working firmware is left running.

**Scenario-480** No firmware can run. The onboard computer restores the last-resort firmware through the reprogramming link and tells the ground at the next contact [2, p. 63].

In Scenario-430 to Scenario-460, the failed firmware is not started again unless the operator orders it, and the next reports tell the ground which firmware now runs.

**Equipment failures**

**Scenario-500** One data-link connection fails. Everything continues on the other, and the failure is reported.

**Scenario-505** A failed data-link connection works again. The System uses it again and reports it.

**Scenario-510** Both data-link connections fail. The controller keeps working on its current firmware, the loss is reported, and the reprogramming link is still usable.

**Scenario-520** The controller goes silent. The onboard computer notices, tries to bring it back, and records what it did.

**Scenario-530** A program on the onboard computer crashes. It restarts and resumes any update in progress; the controller is not affected.

**Scenario-535** The whole onboard computer restarts. The controller keeps working. When the onboard computer is back, it resumes any update in progress, and no report is lost without the ground being told.

**Unexpected environmental conditions** (from Section 4.0)

**Scenario-600** Power is lost while the controller's firmware is being written. When power returns, the controller runs its previous firmware, and the update can be repeated [2, p. 63].

**Scenario-605** Power is lost during the trial. When power returns, this counts as a failed start; after **[TBD-6]** failed starts, the controller returns to its previous firmware.

**Scenario-610** A radiation bit error changes stored firmware. The controller detects it before starting that firmware and does not run it [2, p. 63].

**Scenario-620** A radiation bit error hits the memory the controller is running from. The controller may crash; it restarts on its own and resumes operation [2, p. 63].

# 7.0 Impact Considerations

## 7.1 Environmental Impacts

None. A bench demonstration creates no orbital debris, contamination or hazardous waste.

## 7.2 Organizational Impacts

One engineer builds the System and supports it for its whole life. The operator must know the operating procedures: arming dangerous commands, scheduling commands, and reading the reports.

## 7.3 Technical Impacts

The System shows, with a recorded result for every scenario, that a controller nobody can reach can be updated, commanded and monitored without being lost. The service it provides is fail-safe in-orbit reprogramming of spacecraft controllers.

# 8.0 Risks and Potential Issues

**R-1** Operations: both data-link connections may share software at each end. One defect could cut both at once, leaving only the reprogramming link.

**R-2** Implementation approach: code drafted with an AI assistant may contain plausible but wrong behaviour. Each subsystem is reviewed and tested before it is accepted.

**R-3** Staffing: one engineer builds and supports the System. Losing that person stops new firmware for the rest of the mission.

**R-4** Operations: the System has one onboard computer. If it fails for good, the controller keeps running its current firmware but can no longer be commanded, observed or updated.

**Closeout:** at the end of the project, the documents and the recorded result of every scenario stay in the repository.

# A Acronyms

**ConOps** Concept of Operations
**MOC** Mission operations center
**TBD** To Be Determined
**TC** Telecommand
**TM** Telemetry

# B Glossary

| | |
|---|---|
| **Confirmed** | Firmware judged good after its trial; only confirmed firmware is known-good. |
| **Last-resort** | Known-good firmware that updates never replace (golden image). |
| **Switch** | The controller stops running old firmware and starts the new. |
| **Arm** | First step of a dangerous command; changes nothing alone and expires after a set time. |
| **Expiry** | Time after which a waiting command is refused. |

# C Open Items

All statements in this document were stated or accepted by the author on 9–11 October 2026. The values below are not yet known.

**TBD-1** Project name and document reference.
**TBD-2** Switch automatically on arrival, or only on operator command.
**TBD-3** Who judges new firmware good: controller or operator.
**TBD-4** Contact window length and gap (sourced, or a test parameter).
**TBD-5** Trial time limit (requirements).
**TBD-6** Failed starts before going back (requirements).
**TBD-7** Update rate.
**TBD-8** Temperature range.