



Version: V1.0

Lithium battery intelligent protection board

**JK-B1A8S-10P/JK-B1A8S-20P
JK-B2A8S-20P**

Wiring manual

Chengdu Jikong Technology Co., Ltd.


Table of contents

1.Connector and interface description.....	5
1.1Connector,ledDescription of Lamp Position.....	5
1.2Connector,ledDefinition Description	6
1.3size.....	6
2.Wiring and Activation Instructions.....	8
2.1Wiring Diagram.....	8
2.2.Activation Instructions.....	8

1. Connector and interface description

1.1 Connector, ledLight position description protection board connector, ledThe location

of the lamp is shown in the figure1shown.

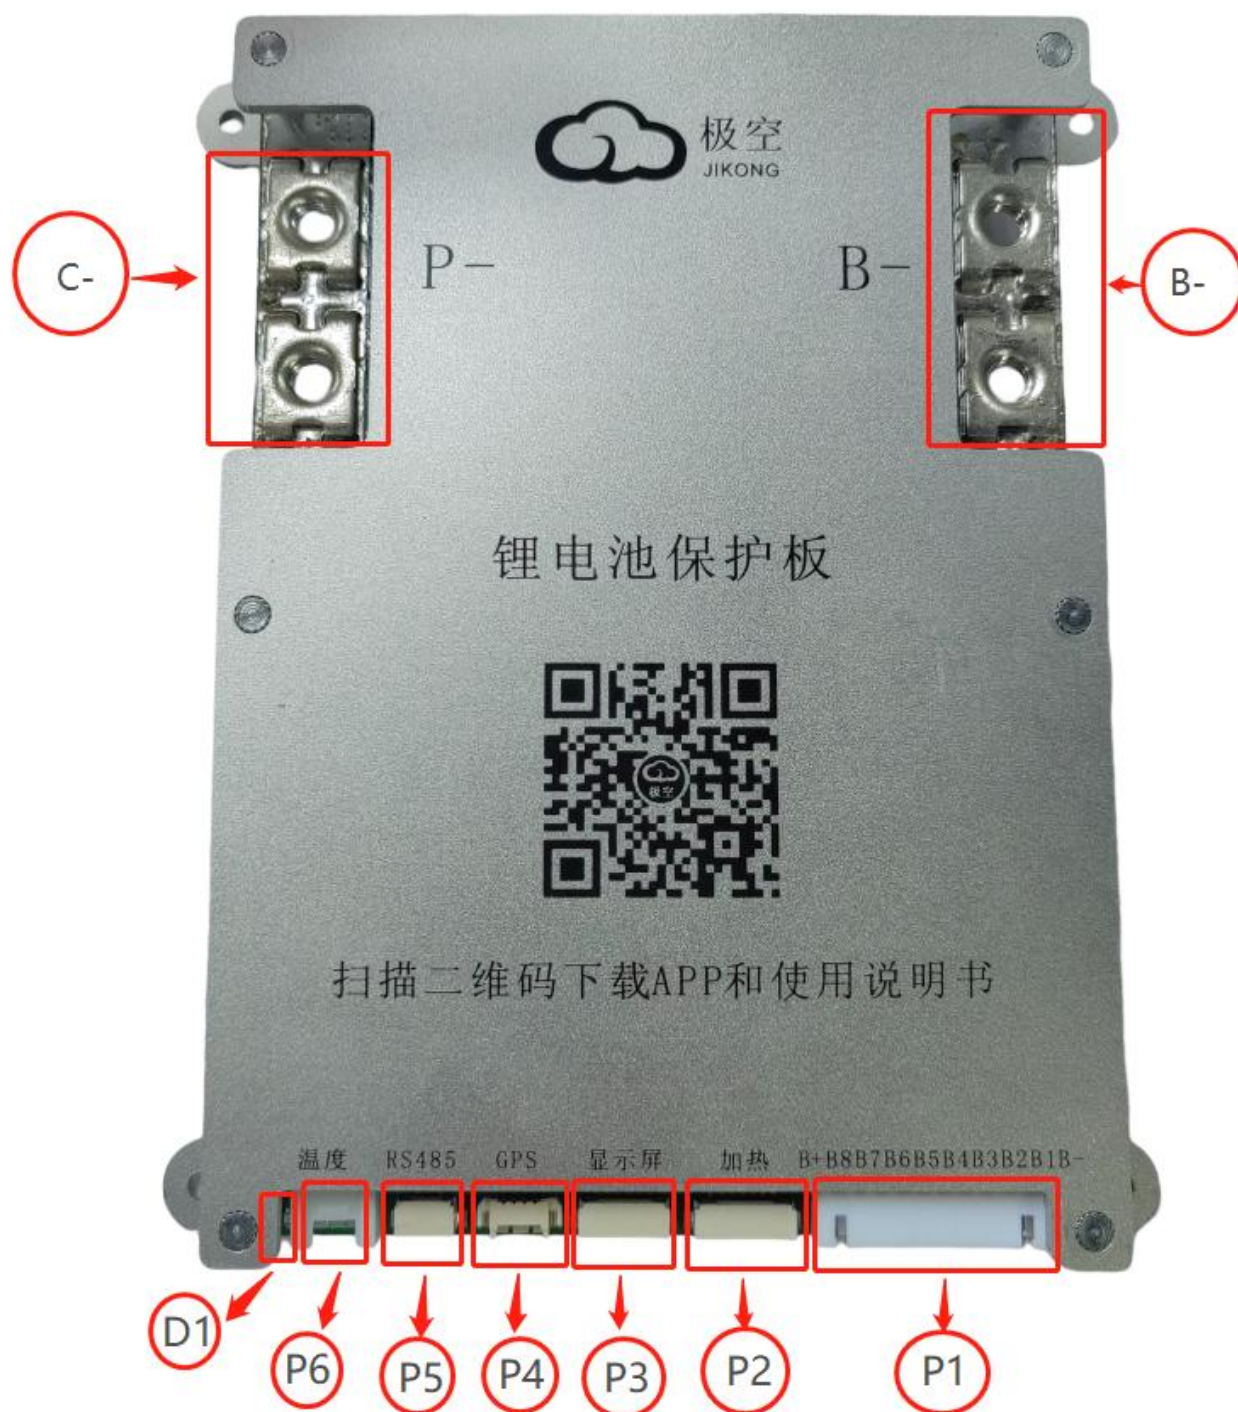

picture1 B2A8S20PConnector diagram

1.2 Connectors, ledDefinition description


BxA8S20PProtection board connector definition, ledLamp definition see table2.

surface2connector definition

Connector	interface name	pin number	name	definition
P1 XH-10AW	balanced interface	1	B-	Battery total negative
		2	B1	No.1String battery positive
		3	B2	No.2String battery positive
		4	B3	No.3String battery positive
		5	B4	No.4String battery positive
		6	B5	No.5String battery positive
		7	B6	No.6String battery positive
		8	B7	No.7String battery positive
		9	B8	No.8String battery positive
		10	B+	Protection board power supply
P5 1.25T-4PWT	GPS interface	1	VGPS	Power output, the voltage is close to B+
		2	TX	UART_TX, 3.3V
		3	RX	UART_RX, 3.3V
		4	GND	Power/signal ground
P3 GH-1.25-6P	show interface	1	VCC	Display power output
		2	A	Display RS485 signal positive
		3	B	Display RS485 signal negative
		4	GND	Negative pole of power supply
		5	K+	Activation signal positive
		6	K-	Activation signal negative
P2 GH-1.25-7P	heating interface (optional Function)	1~5	HT-	Heating the negative electrode
		6	CD+	Charging detection input positive pole, 2-hole charger can not be connected, charger with auxiliary 12V, connected to 12V positive pole
		7	CD-	Charging detection input negative pole, 2-hole charger can not be connected, charger with auxiliary 12V, connected to 12V negative pole
D1	The bluetooth connection indicator light is always on when the bluetooth is connected to the protection board, and the indicator light flashes when the connection is disconnected.			
C-	Connect to external load or negative pole of charger			
B-	Connect to the negative pole of the battery			

1.3 Dimensions

JK-BxA8S20P The protective plate size is 153mm×126mm×17.6mm, the dimensions are shown in Fig.2 shown.

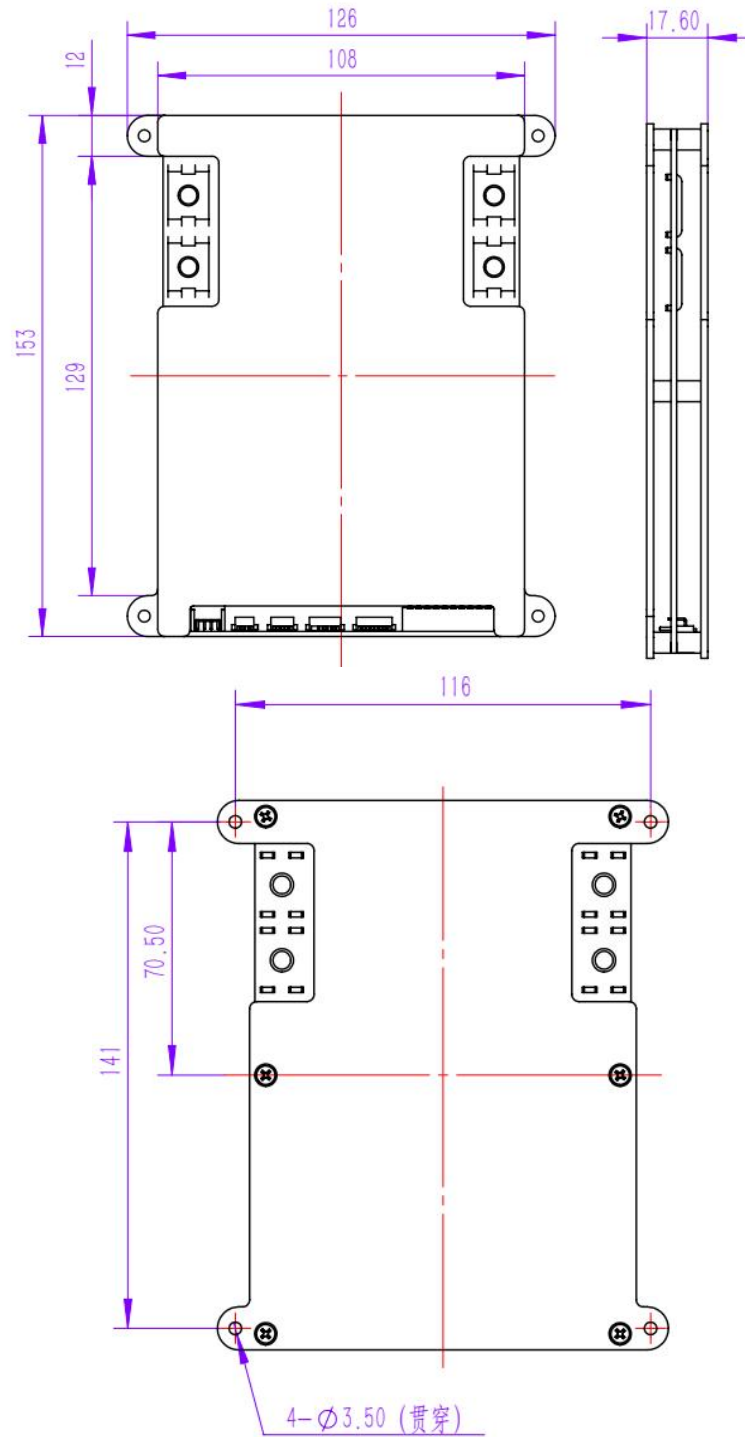


picture2 BxA8S20PDimensions

2. Wiring and Activation Instructions

2.1 wiring diagram

JK-BxA8SxxP The protective plate is suitable for 8The lithium battery pack with series cells, the installation and wiring method is as shown in the figure 3 shown.

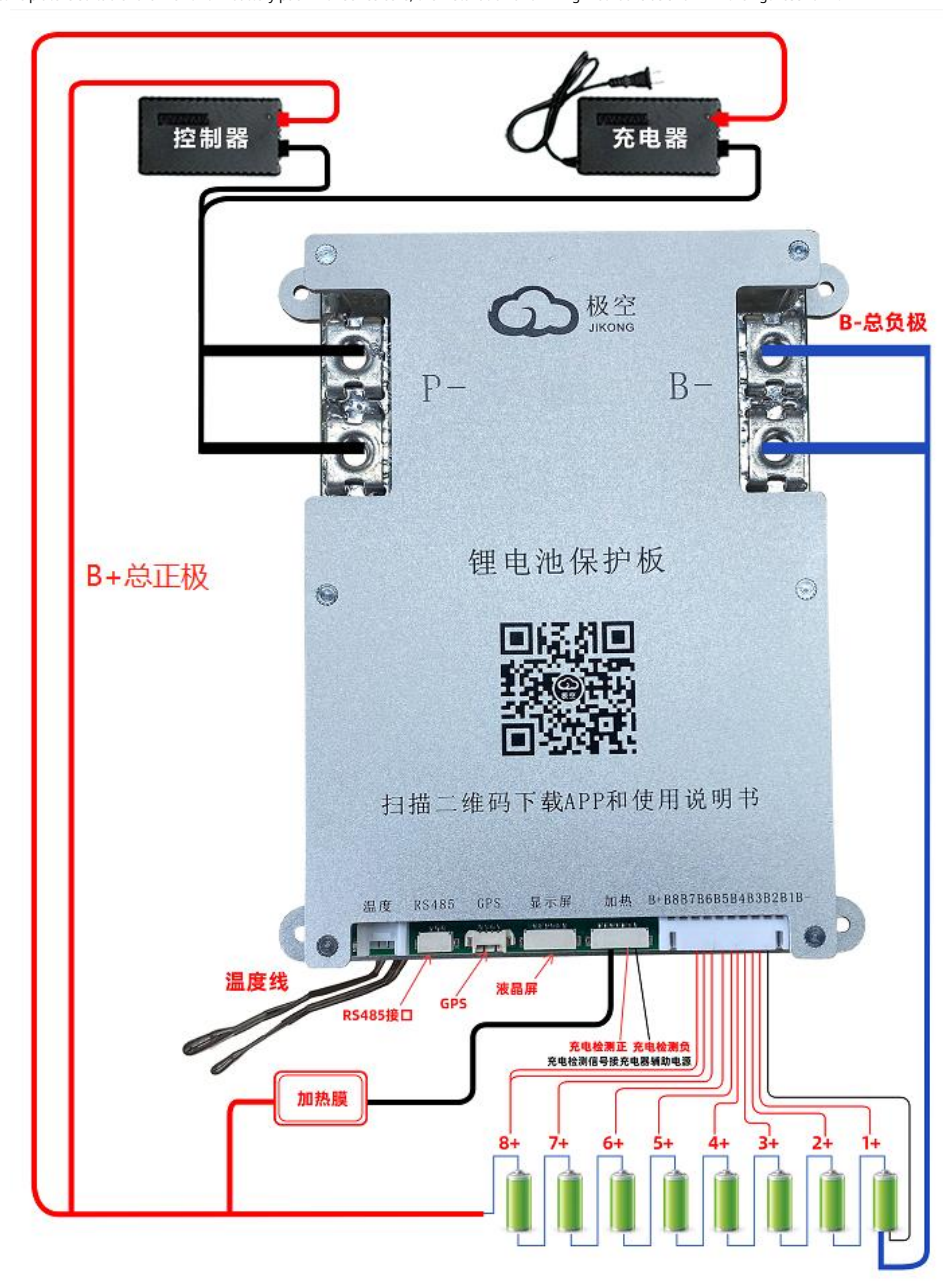

picture3 8String battery wiring diagram

2.2 Activation instructions

Activation instructions: Once the wiring is complete, connect the charger and plug in to activate.

Note: charger voltage - battery voltage > 2V