


Inncom



Room ID

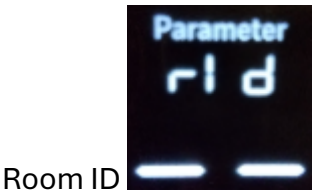


Mode



Highest digit



Fan

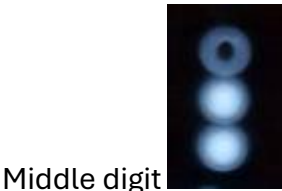


Middle digit



Lowest digit



Pan

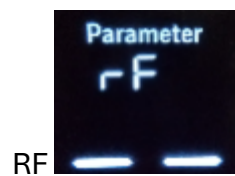


Verdant



SYSTEM MODE*

Cycle between

AUTO | HEAT | COOL | OFF

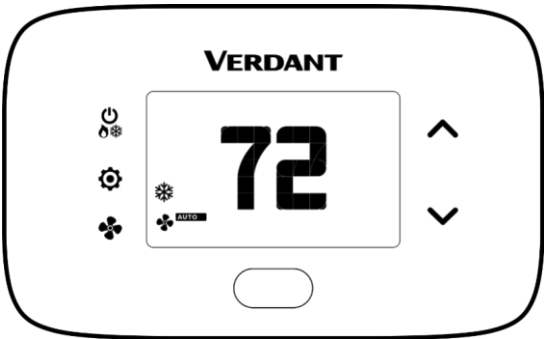

SETTINGS



Change F | C


Activate Scheduler




FAN MODE

UP | DOWN

Increase | Decrease values

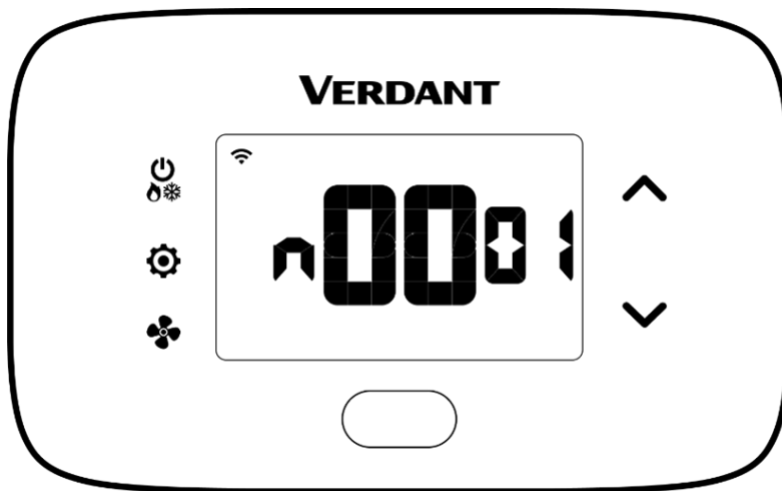

Mesh ID

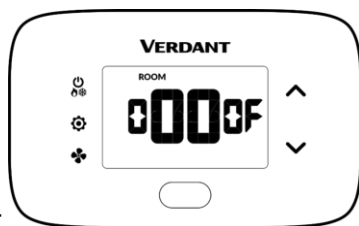


Room Number



Equipment code


Energy Saving Setting

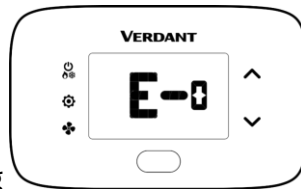


Senor




Occ

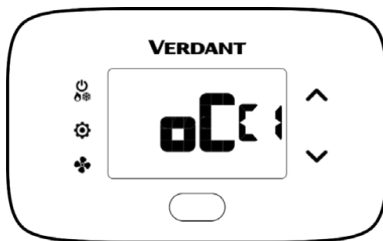

Door contact

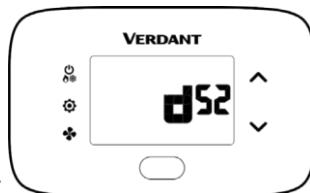


Remote sensor

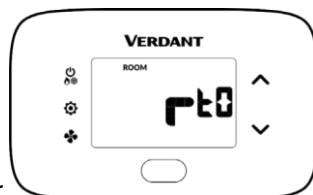

Door lock screens



Add door lock

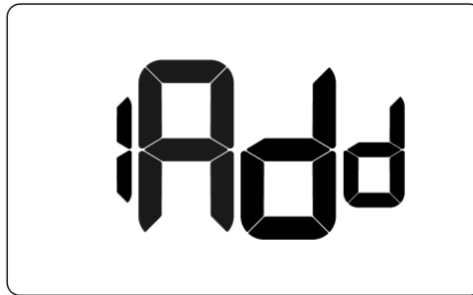


Mac add of lock





Found door lock




Door lock id

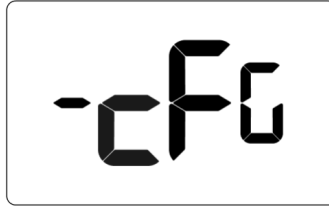


I tag

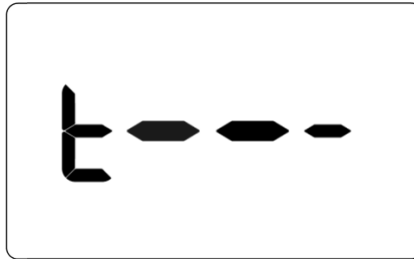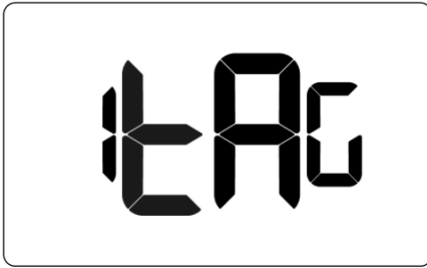


Tag number

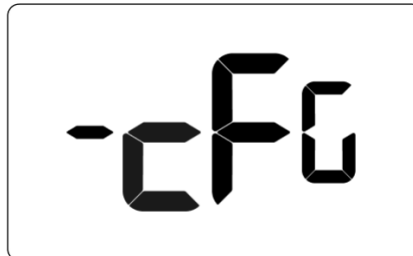


Acc

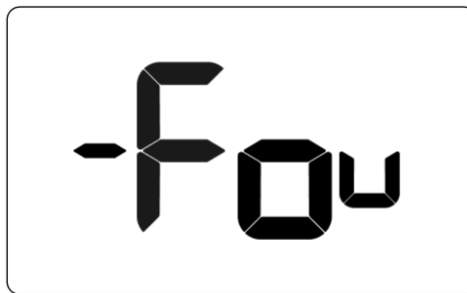


Telkonet

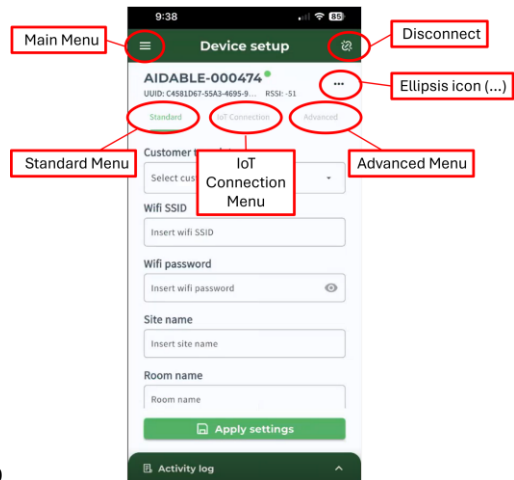


Rhapsody app

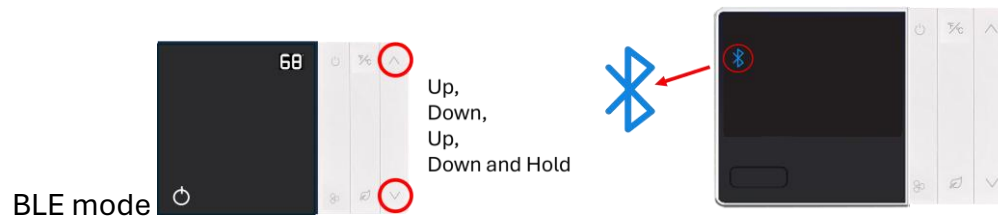


BLE mode

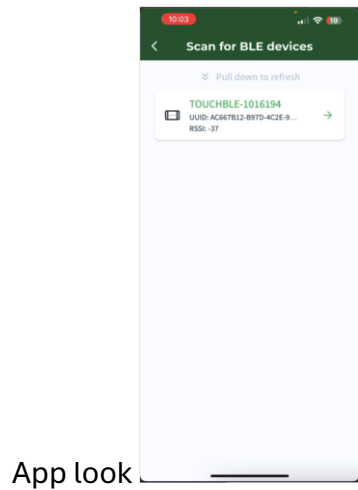

App look

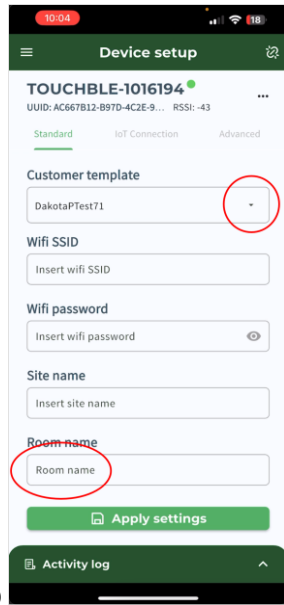

Device setup

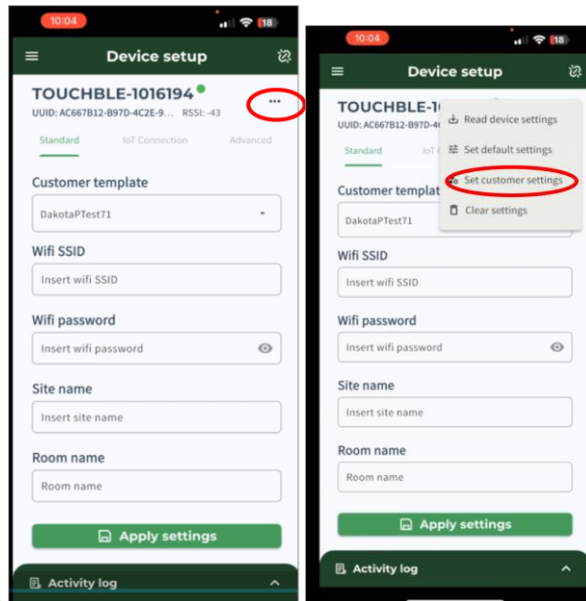

Set customer settings

Room numbers

Correct:	Incorrect:
321 KR	King Room 321
480 B1	Bedroom 1-480
1452A	1452 Elm Drive, Building A

Device setup

TOUCHBLE-1016194

UUID: AC687B12-B07D-4C2E-9... RSSI: -43

Standard IoT Connection Advanced

Wifi password

Site name

Room name

MQTT server

Time zone

Apply settings

Activity log

Pairing

Device setup

AIDABLE-000474

UUID: C4581D67-55A3-4695-9... RSSI: -51

Standard IoT Connection Advanced

Customer template

Wifi SSID

Wifi password

Site name

Room name

Apply settings

Activity log

Pairing

Misc/Settings

Esp CLI

Host CLI

Pairing

AIDABLE-000474

UUID: C4581D67-55A3-4695-9... RSSI: -49

ZigBee Networks Devices Dry Contacts

NETWORK STATUS 0 (secure)

MAC: N/A

EPID: N/A

PAN ID: N/A Node ID: N/A Channel: N/A

NETWORK STATUS 1 (non-secure)


MAC: N/A

EPID: N/A

PAN ID: N/A Node ID: N/A Channel: N/A







Form network


Activity log

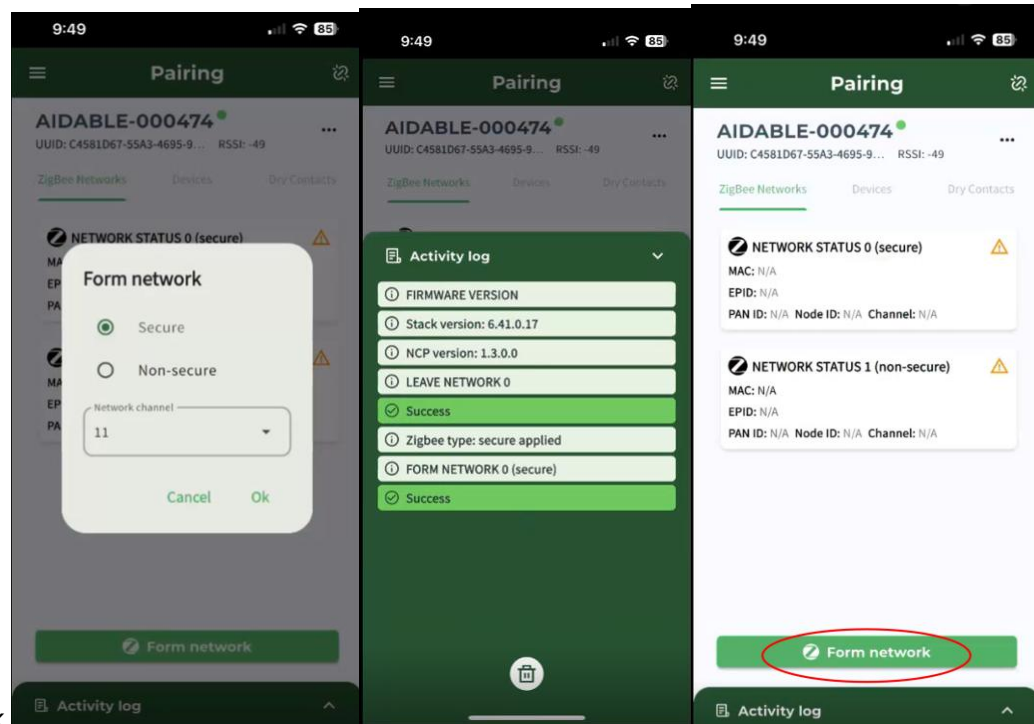




Form network


Join contact

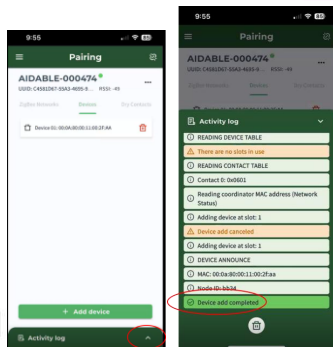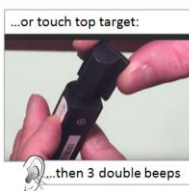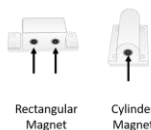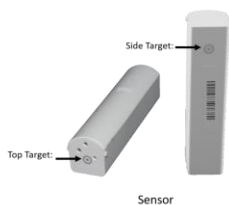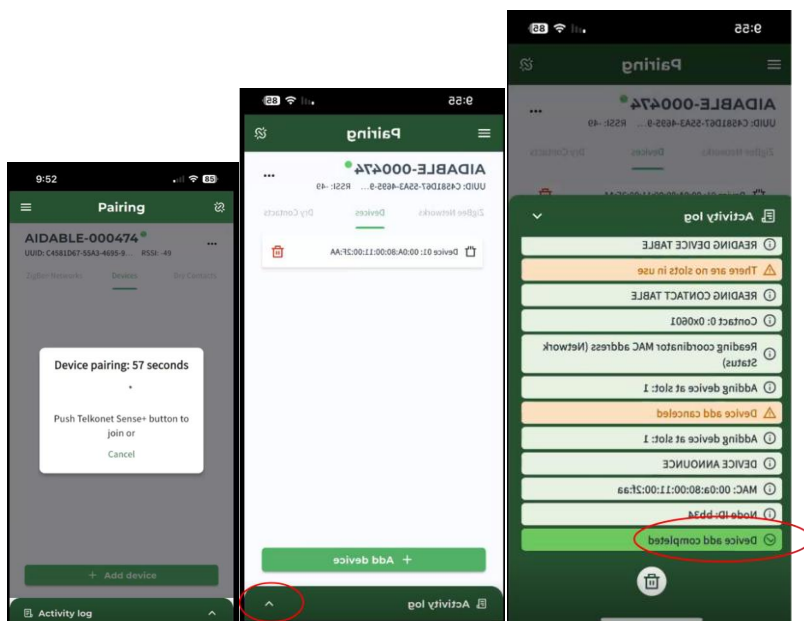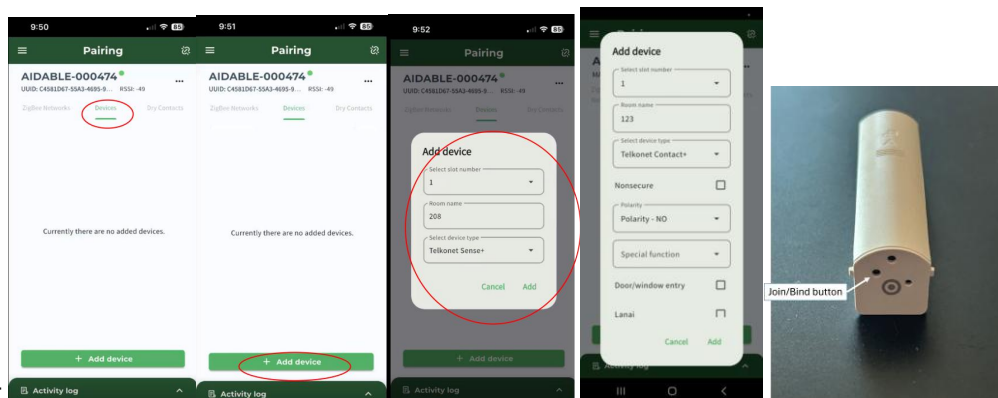

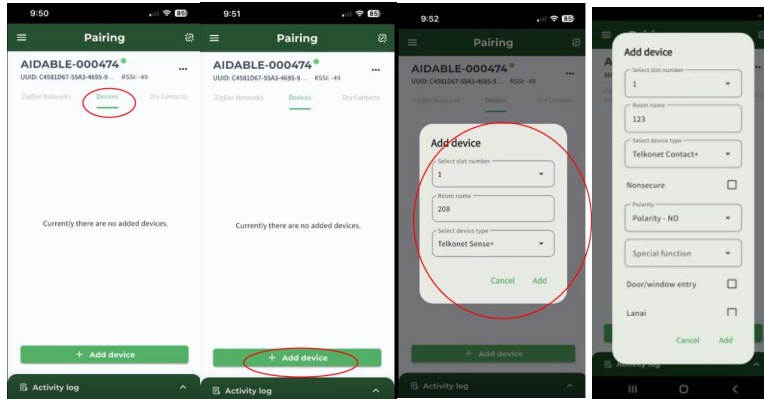

OccSense

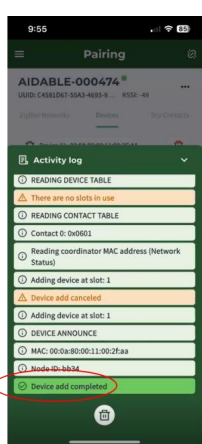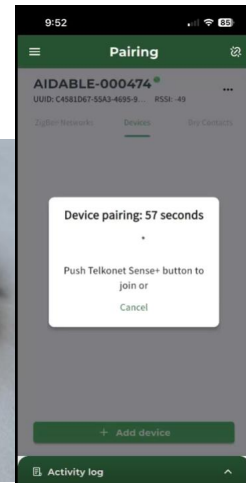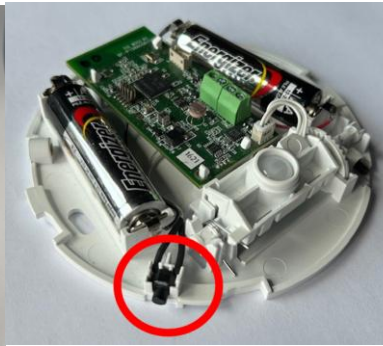

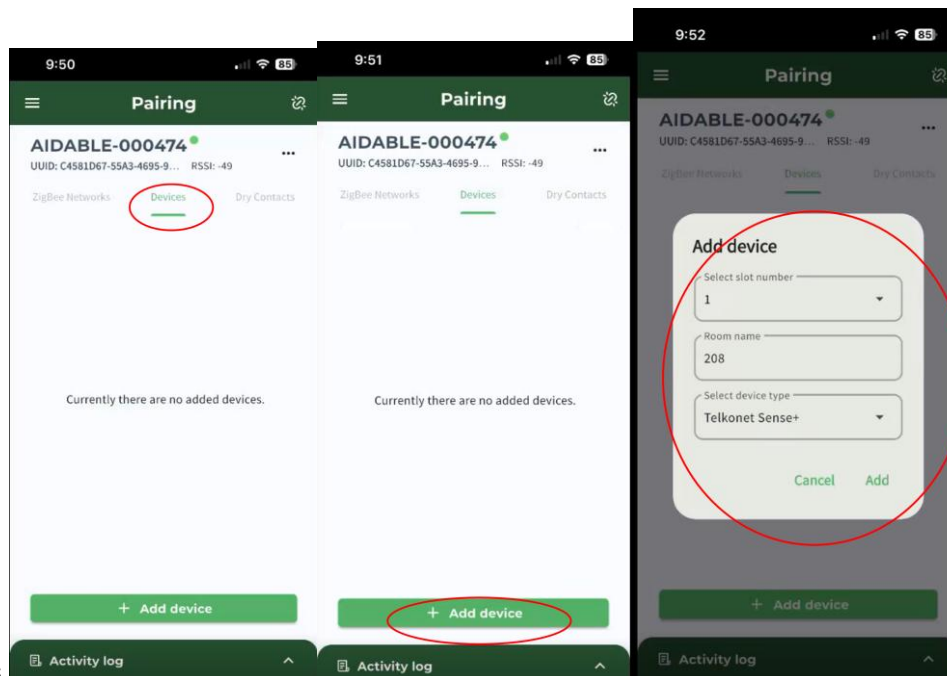

Ving Door Locks






Discover card




EMI card

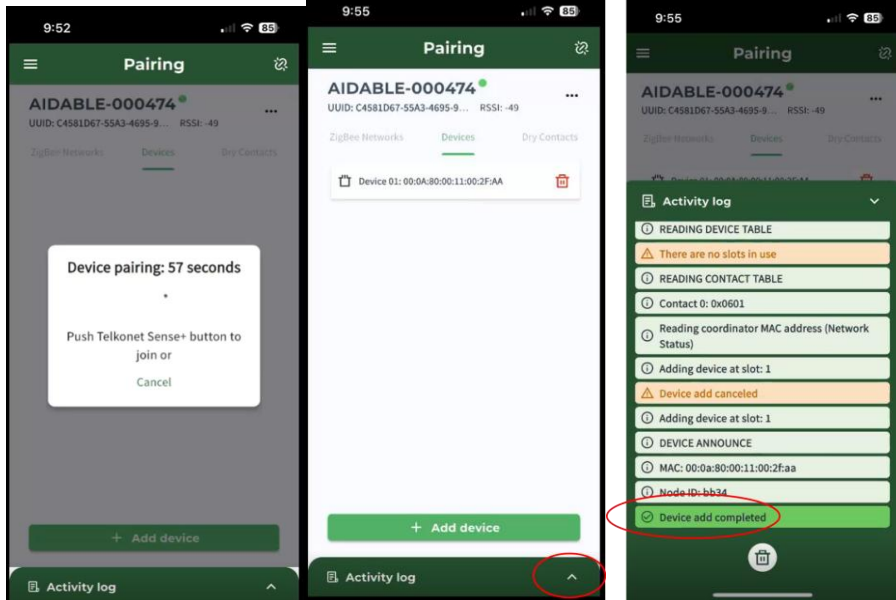


Complete



Testing door -ving debug 1

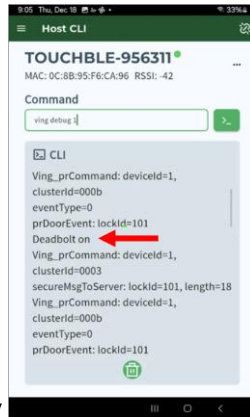

Toggle door with a staff key

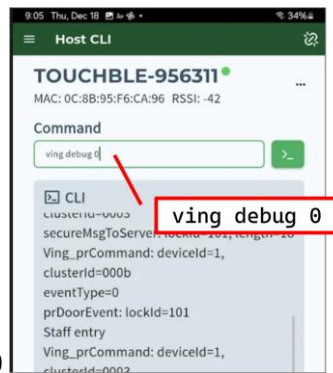


Close debug ving debug 0


Touch Combo



Three finger tap

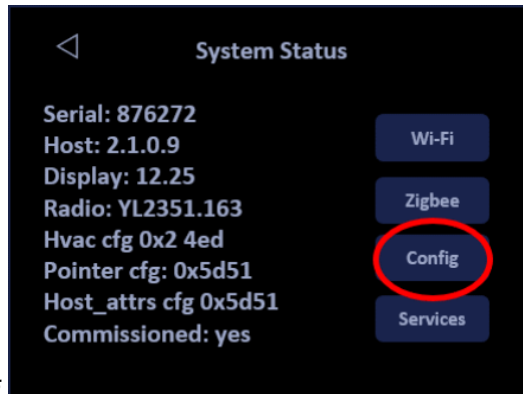


Tap config

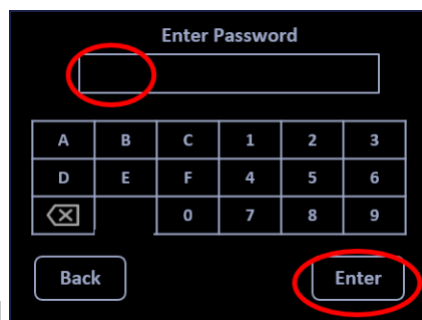


Password

B57A

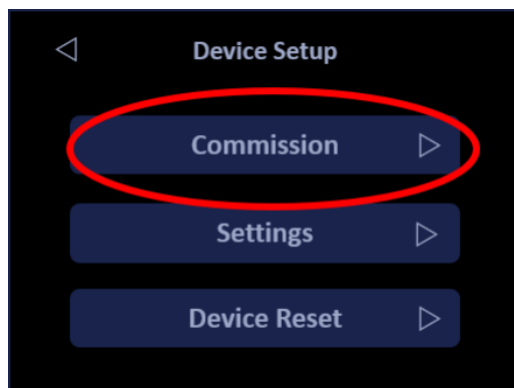

Commission

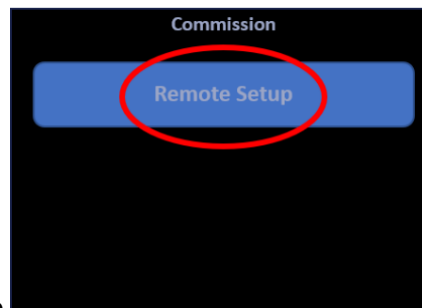

Remote Setup



Ready for BLE
connection.
SN: 874730

cancel

BLE

Interel

APP

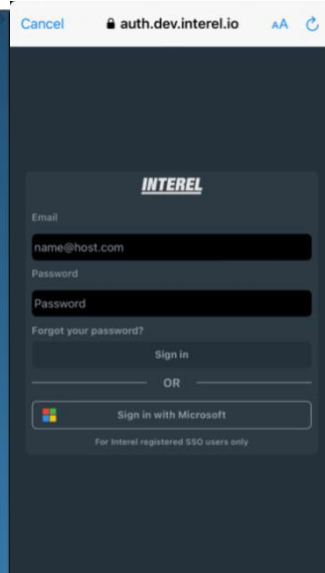
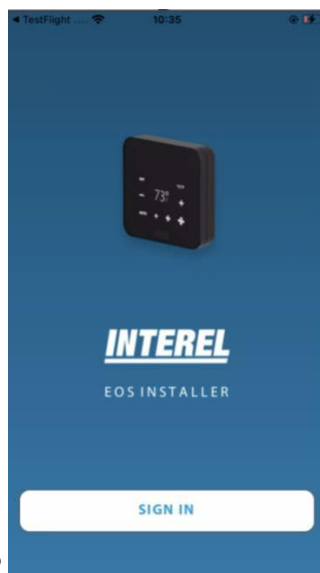


Select Organisation

Please select an organization for commissioning

Uyen org12
test test 1
Interel
Interel DRV

CONFIRM

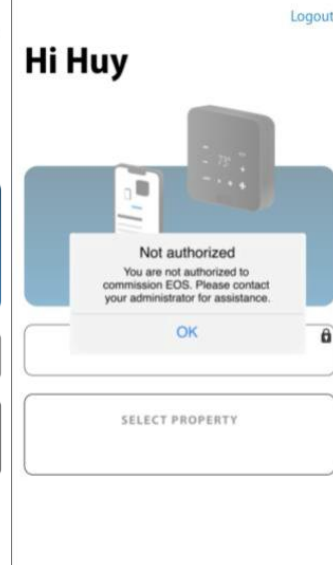
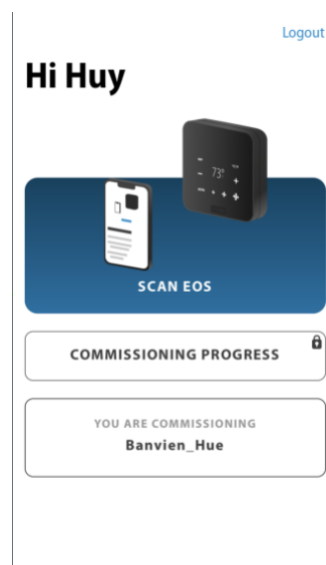


EOS powered on












Commission

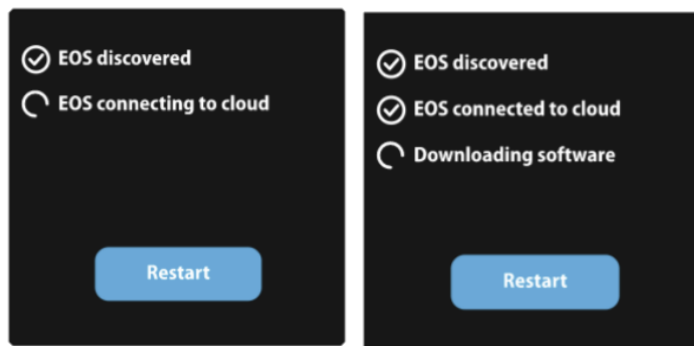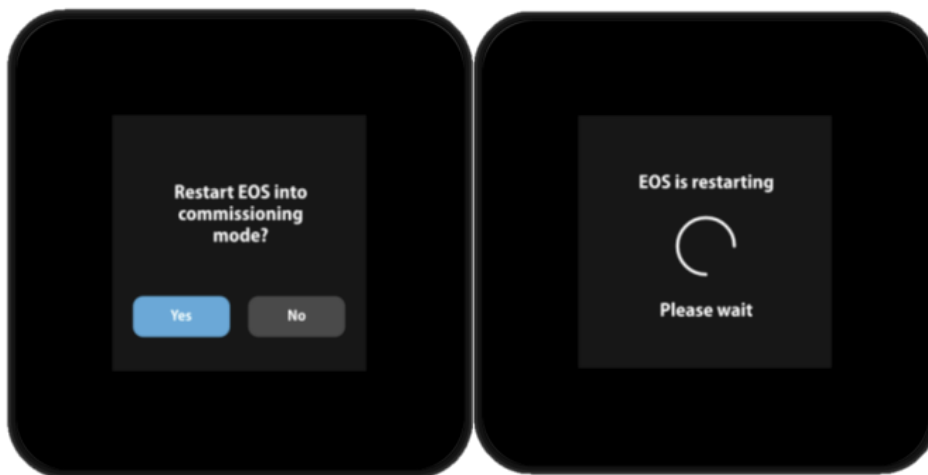


Commission

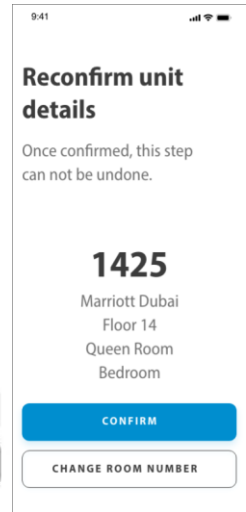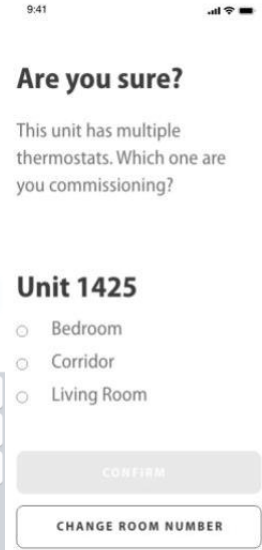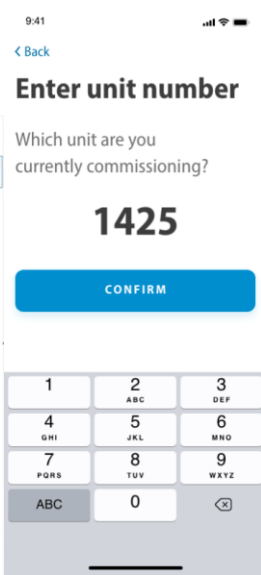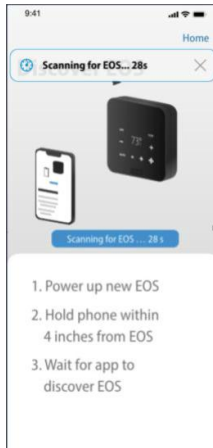


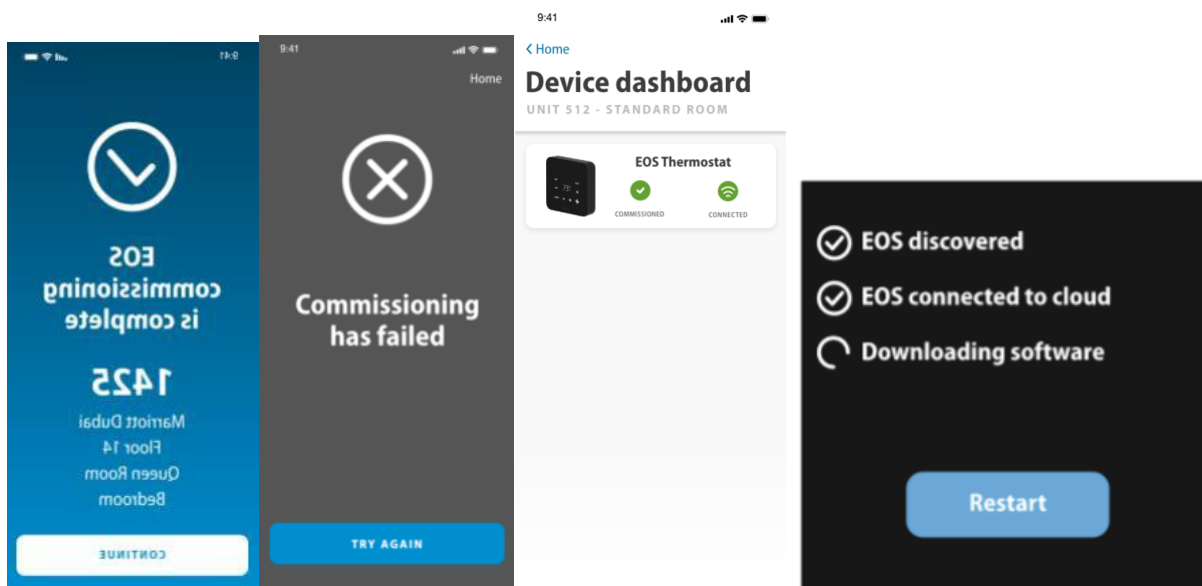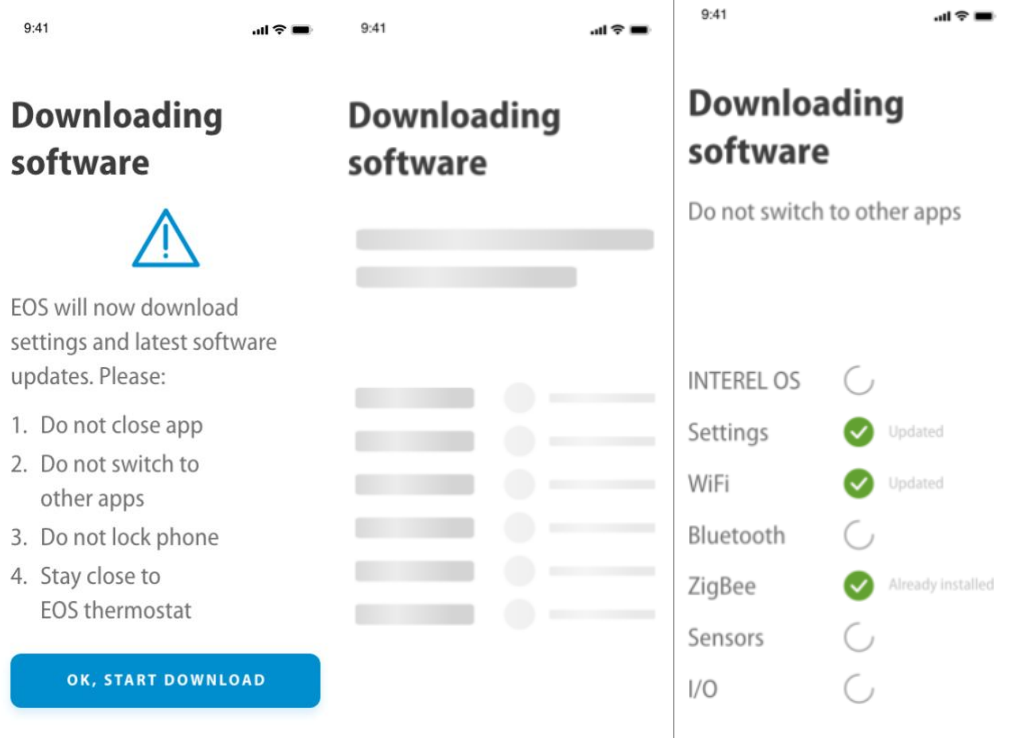

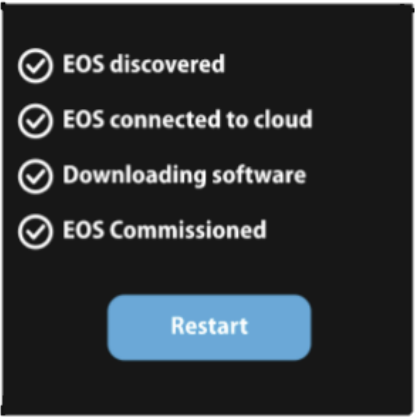


Other devices

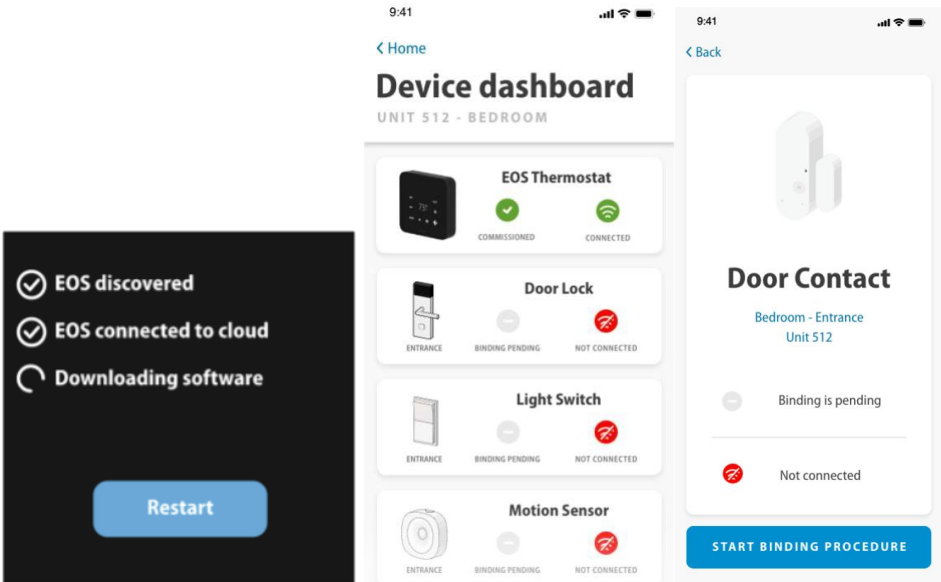


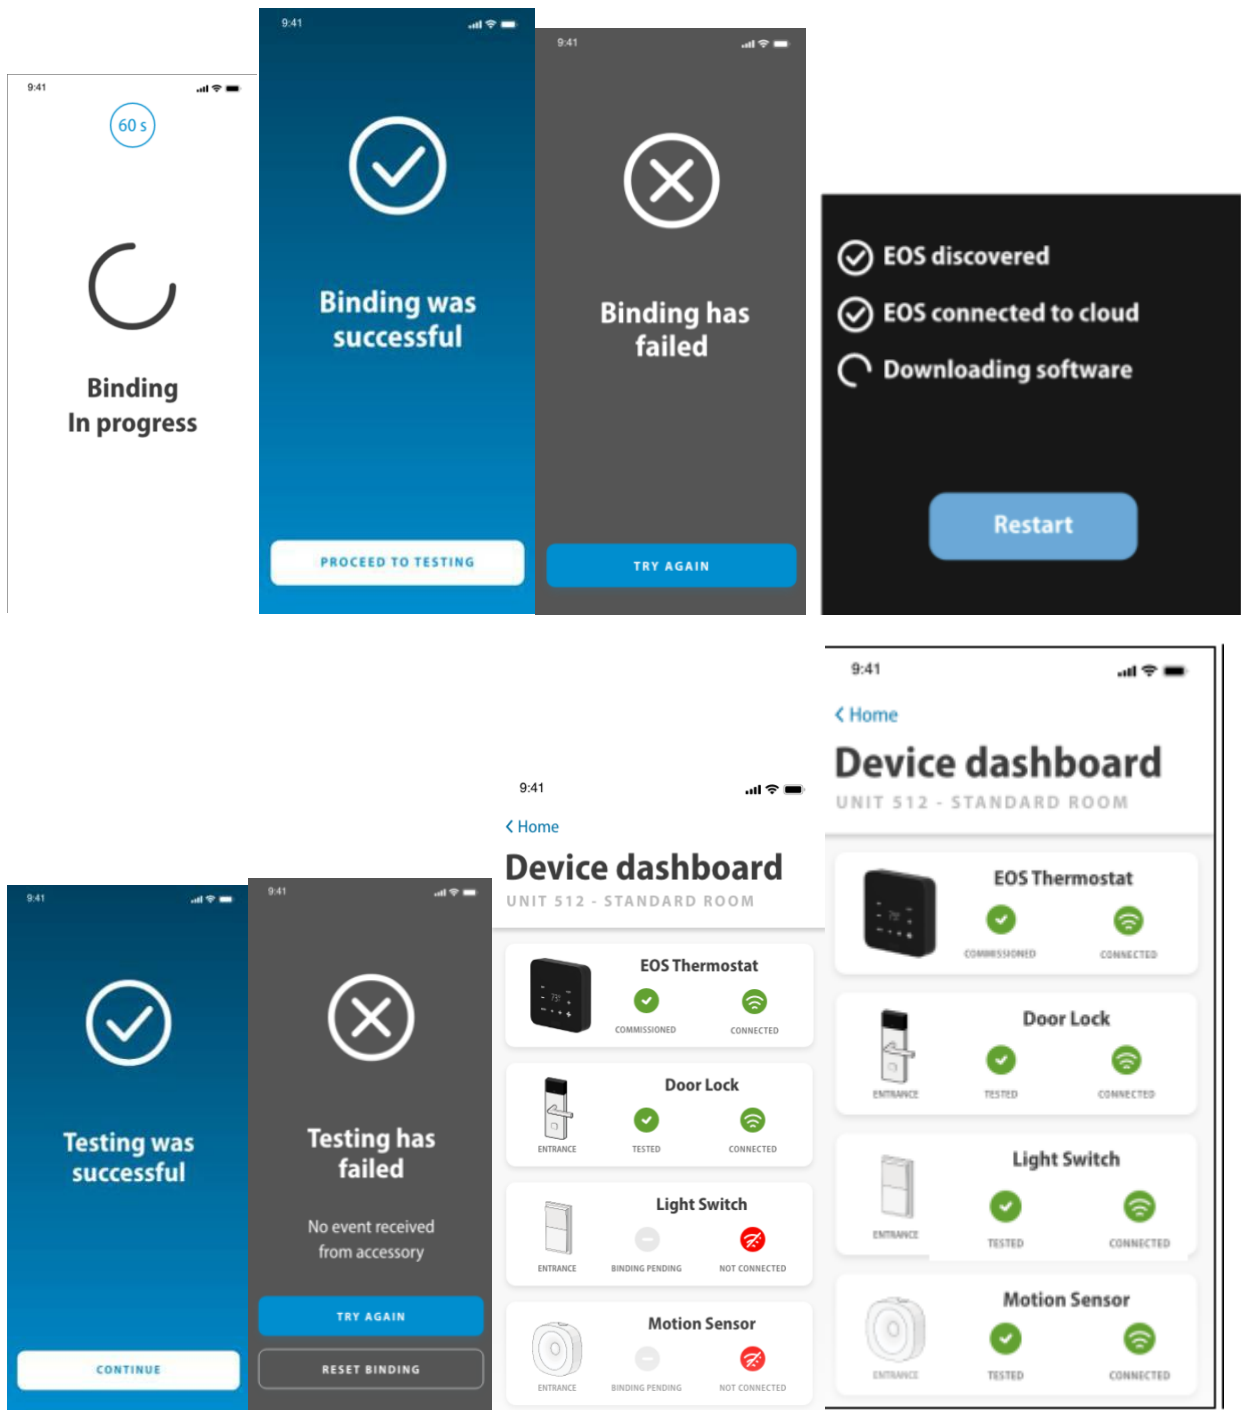

Door locks Ving

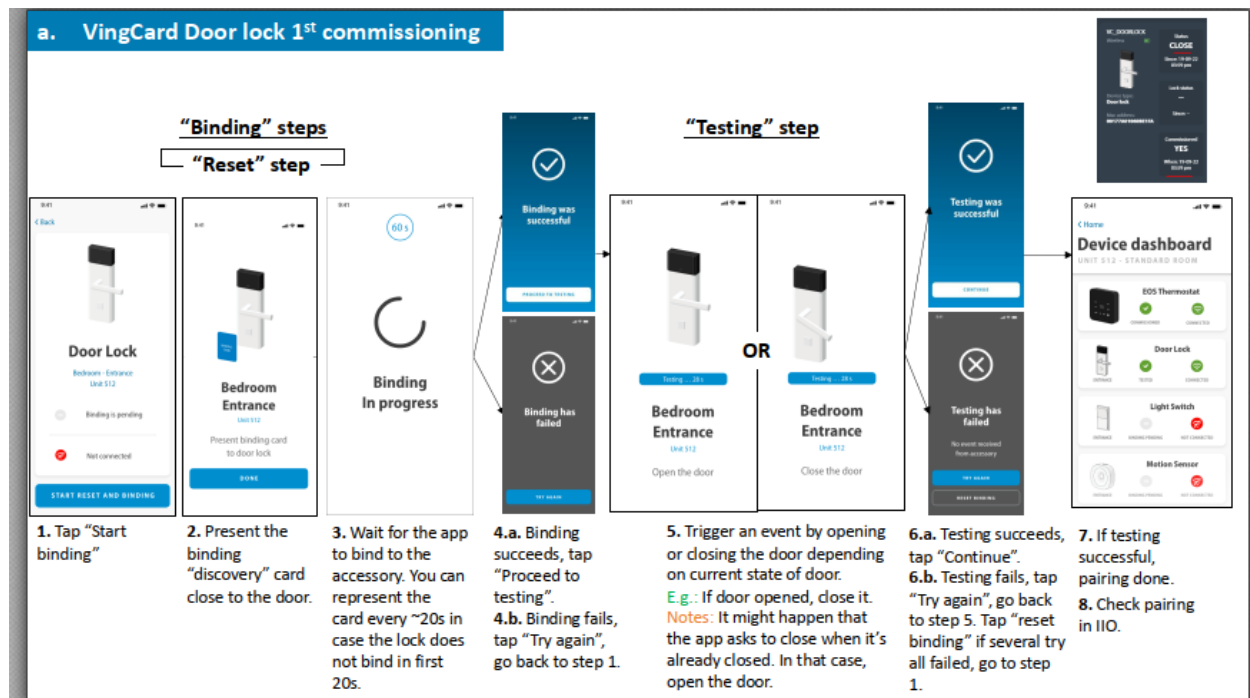

Dormakaba

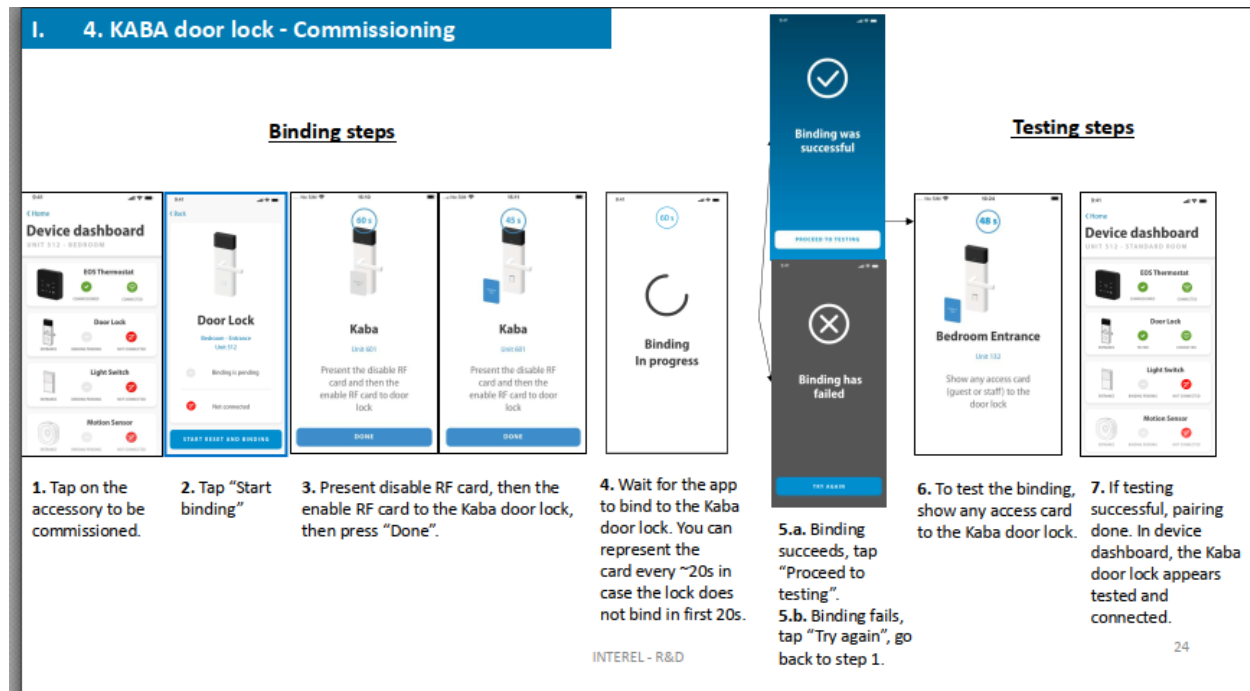

Telkonet Legacy

Gateway NT8000
coordinator



Note: if you have just plugged the CAT 5 or power cable into the NT8000, the LED will light (it takes about 90 seconds). At this point, wait four minutes for the Gateway to fully activate "join mode".

1. Press the Gateway button three times.

2. The Gateway is in join mode when:
a) the Telkonet logo blinks continuously, and
b) if logged into the device via WiFi, there is a "joining" countdown.

3. Join your devices to the Gateway as described in this guide.

Note: To disable the Join mode, press the Gateway button 3 times.



Insight

1. Ensure the coordinator's "Join" mode is enabled.

2. On the Ecolnsight+, use the 2 soft buttons, located in the lower middle of the faceplate; quickly press Left, Left, Right, Right.

3. Verify that 2 bars appear above room temperature. The Ecolnsight+ is requesting to join the coordinator.

4. Wait up to 60 seconds for the Ecolnsight+ to find the coordinator, then the bars will disappear.


5. Verify that the Ecolnsight+ shows zero bars above the room temperature. This means the Ecolnsight has properly joined the network.




L, L, R, R

Source


VRG

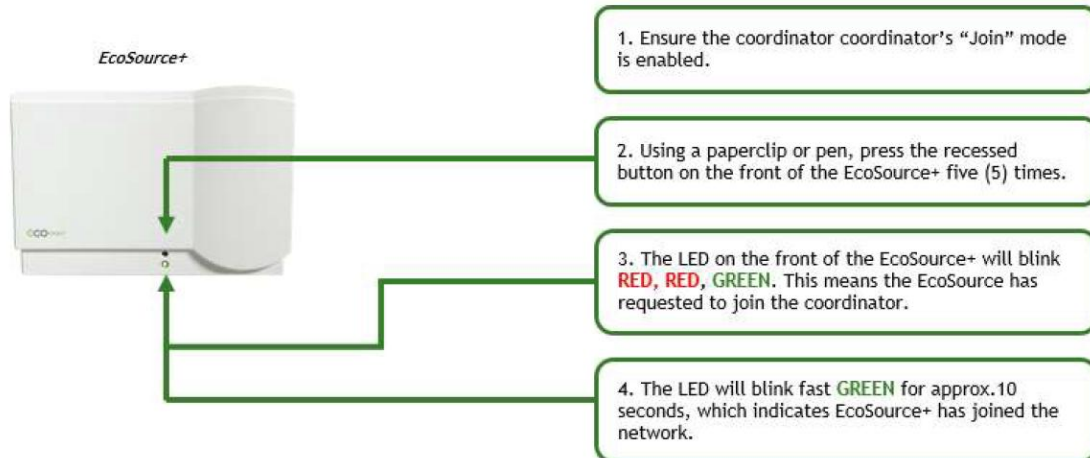

VRF

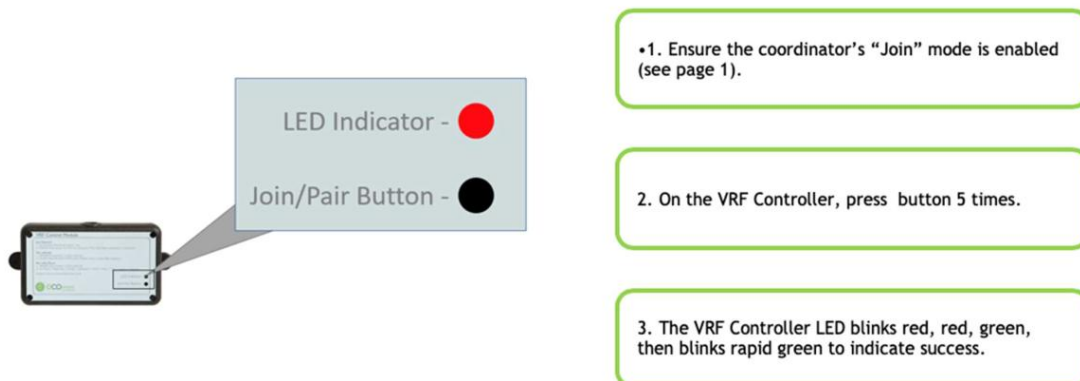

Insight to Contact

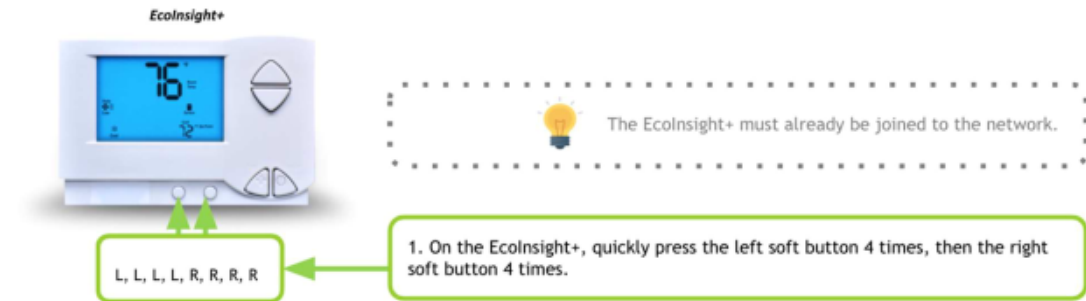

2. Using extractor or a paperclip, press the EcoContact+ Join/Bind button 4 times.*

3. LED will blink slowly while device tries to find the network, then turn off for a few seconds.

4. The LED will flash four times and you will hear 4 beeps. This signifies your EcoContact+ has joined the network and bound to the thermostat.


5. Using the extractor or a paperclip, press the EcoContact+ Join/Bind button 8 times. The LED will blink twice.

Identify which target sensor to be used:


6. Touch the correct sensor's target to the correct magnet's target. You will hear a series of beeps for one minute.

7. Keep magnets at least 8" away from sensor for 60 seconds, until the sensor stops "looking" for magnets to target.


Insight to OccSense

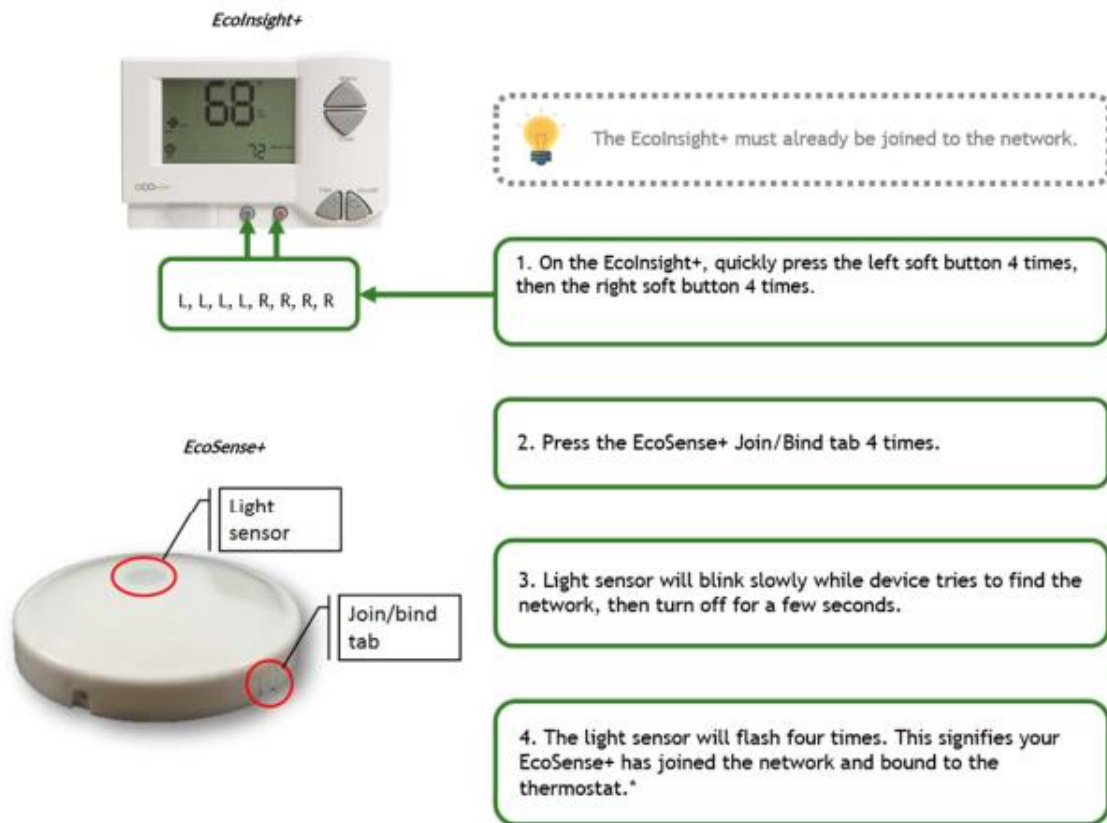

Source to Air

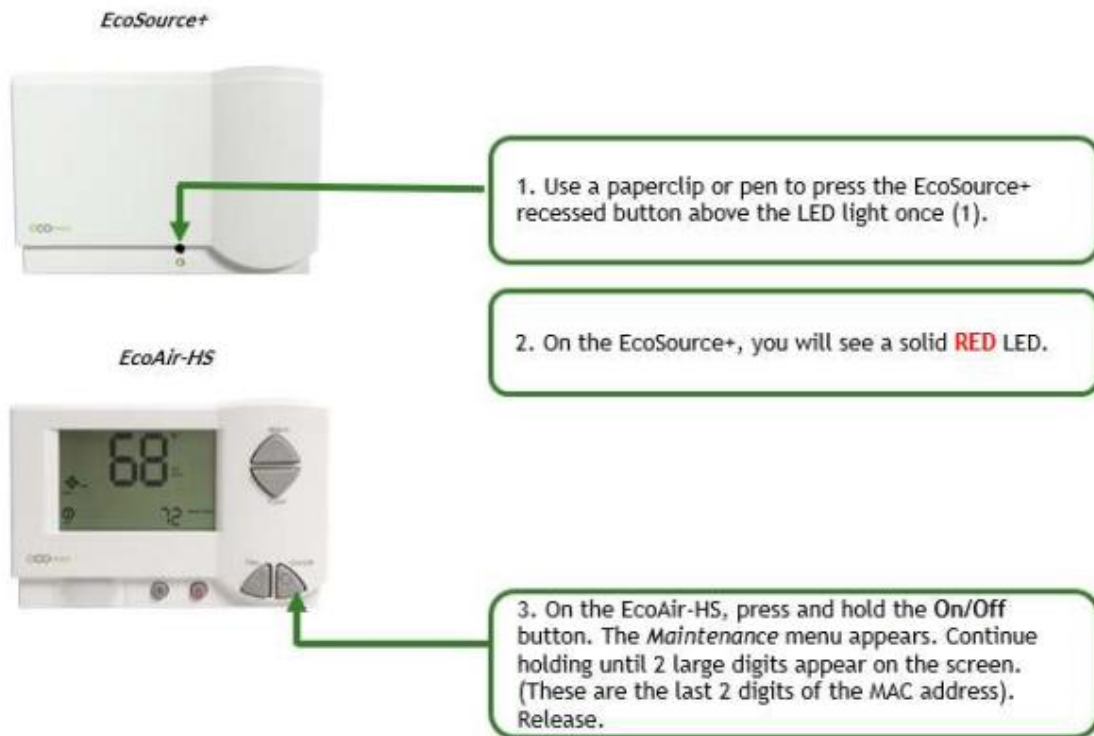

Source to Touch

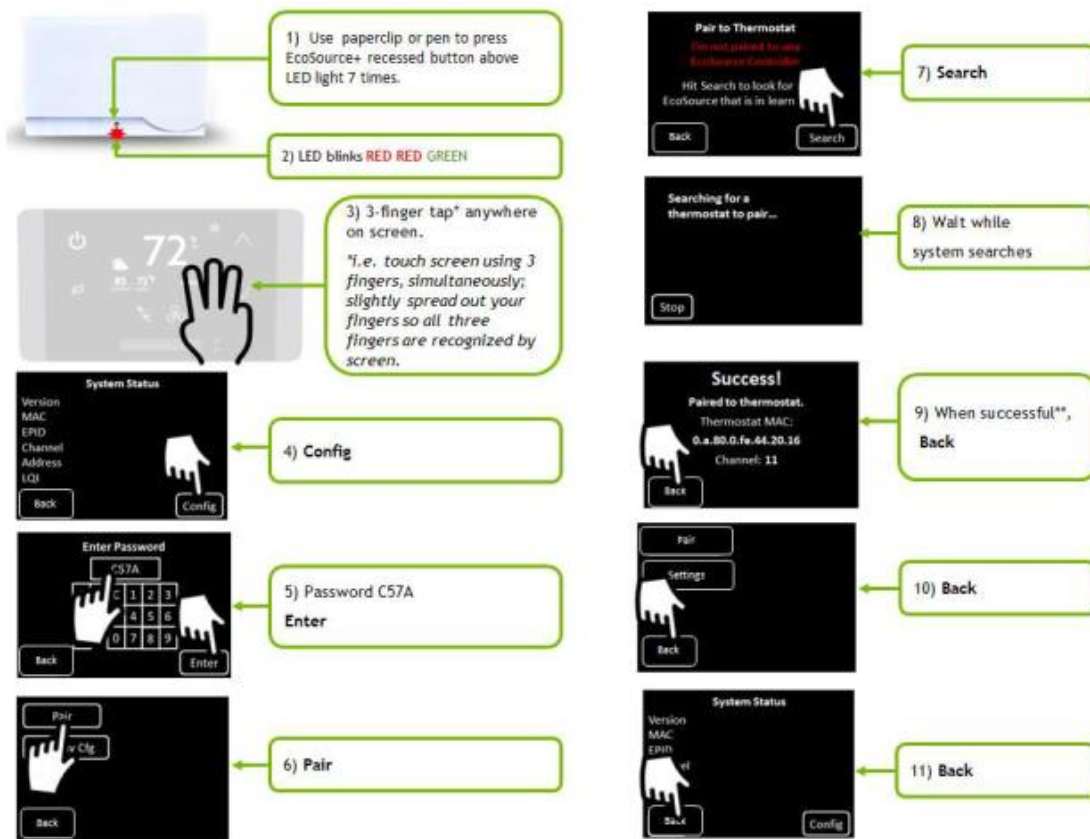

Source to Contact



EcoSource+



EcoContact+


 The EcoSource+ must already be joined to the network.

1. Use a paperclip or pen to press the EcoSource+ recessed button above the LED seven (7) times.
2. On the EcoSource+, you will see the LED flash **RED RED GREEN**.
3. Using extractor or a paperclip, press the EcoContact+ Join/Bind button 4 times.*
4. LED will blink slowly while device tries to find the network, then turn off for a few seconds.
5. The LED will flash four times and you will hear 4 beeps. This signifies your EcoContact+ has joined the network and bound to the thermostat.
6. Using the extractor or a paperclip, press the EcoContact+ Join/Bind button 8 times. The LED will blink twice.

Identify which target sensor to be used:

7. Touch the correct sensor's target to the correct magnet's target. You will hear a series of beeps for one minute.
8. Keep magnets at least 8" away from sensor for 60 seconds, until the sensor stops "looking" for magnets to target.

Source to OccSense

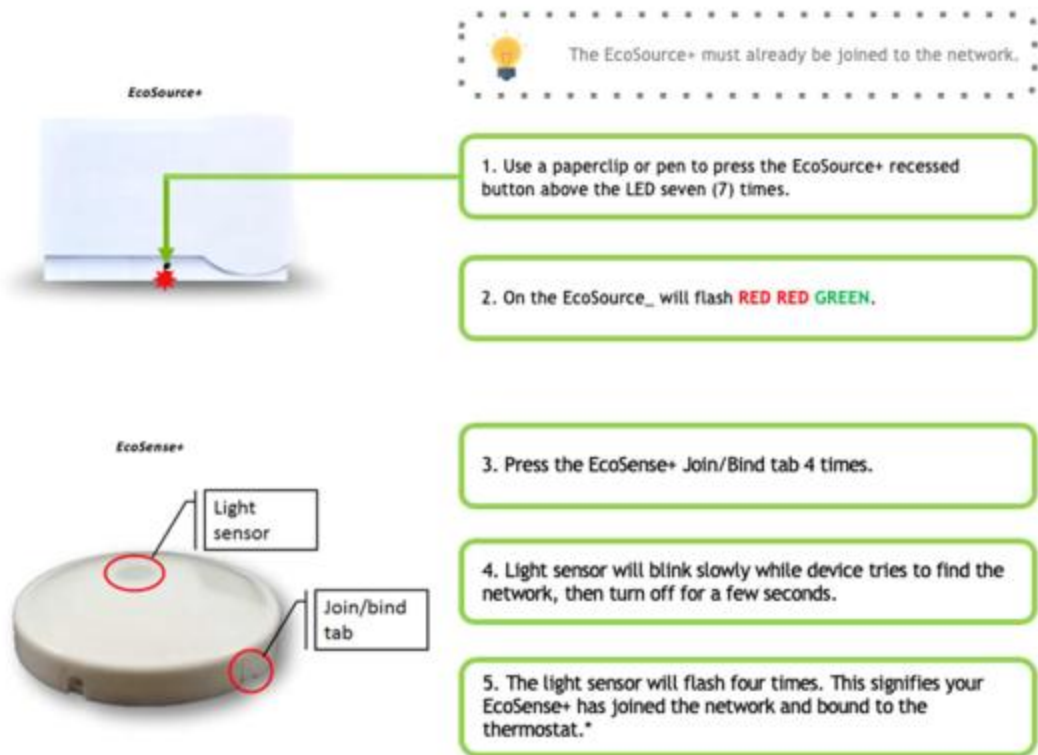

VRF to Air




1. On the EcoSource VRF Controller, press Join/Pair button 1 time...

...the LED will light as solid **RED**.



2. On the EcoAir-HS: press & hold Fan button until 2 large digits displayed on the EcoAir screen.

VRF to touch

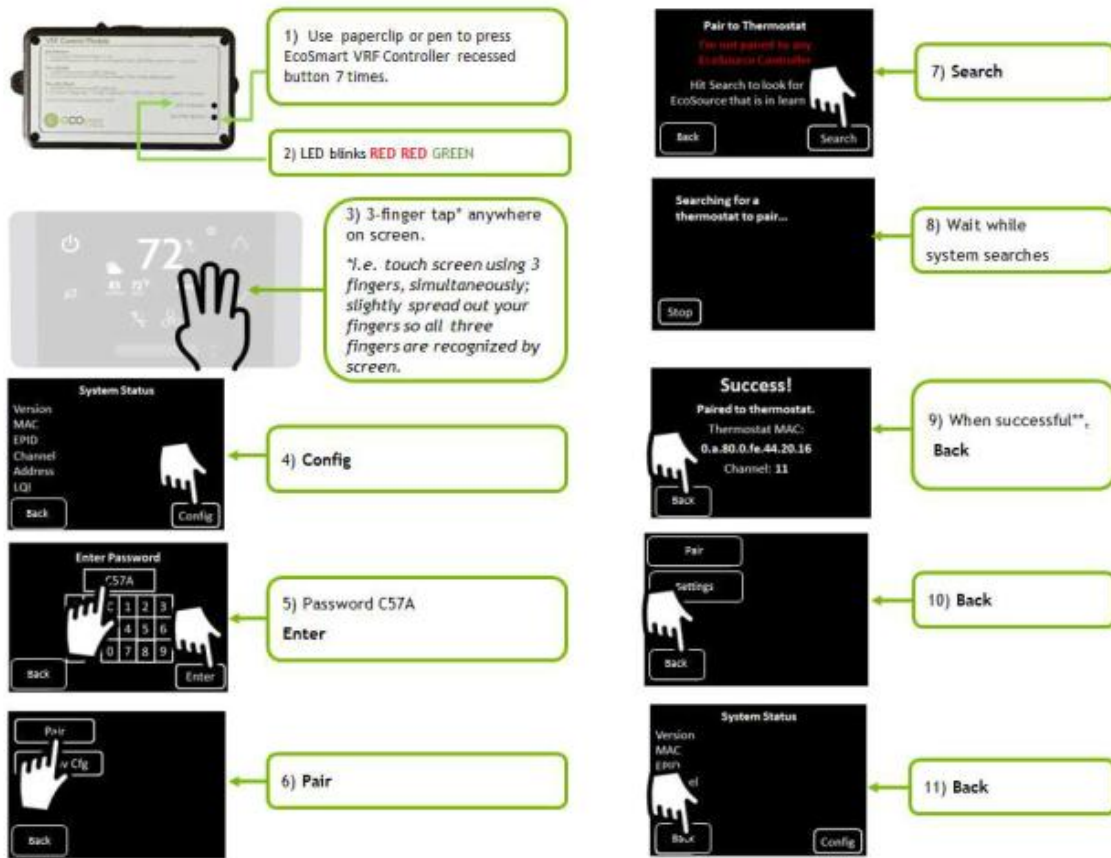

VRF to Contact



The VRF Controller must already be joined to the network.

1. On the EcoSource VRF Controller, press Join/Pair button 1 time...


...the LED will light as solid **RED**.

2. Using extractor or a paperclip, press the EcoContact+ Join/Bind button 4 times.*

3. LED will blink slowly while device tries to find the network, then turn off for a few seconds.

4. The LED will flash four times and you will hear 4 beeps. This signifies your EcoContact+ has joined the network and bound to the thermostat.

EcoContact+:

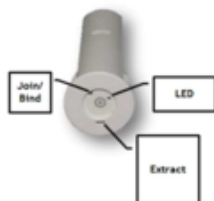


Identify which target sensor to be used:

5. Using the extractor or a paperclip, press the EcoContact+ Join/Bind button 8 times. The LED will blink twice.

6. Touch the correct sensor's target to the correct magnet's target. You will hear a series of beeps for one minute.

7. Keep magnets at least 8" away from sensor for 60 seconds, until the sensor stops "looking" for magnets to target.

VRF Occsense

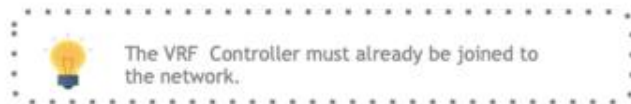

1. On the EcoSource VRF Controller, press Join/Pair button 1 time...

...the LED will light as solid **RED**.

2. Press the EcoSense+ Join/Bind tab 4 times.

3. Light sensor will blink slowly while device tries to find the network, then turn off for a few seconds.

4. The light sensor will flash four times. This signifies your EcoSense+ has joined the network and bound to the thermostat.*

