

The new version Crazybee F3 flight controller has released RX3 to use External receiver like PPM/SBUS/IBUS/DSMX .etc

1. Connect the external receiver (Support PPM/SBUS/IBUS/DSM2/DSMX) to Crazybee F3 flight controller like the bellowing picture.

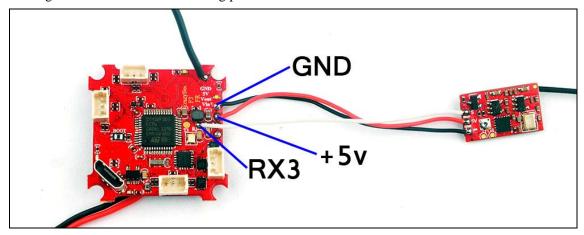

2. Enable Serial RX for UART3 if you use SBUS/IBUS/DSM2/DSMX protocol serial-based receiver (PPM receiver don't need to enable serial rx)

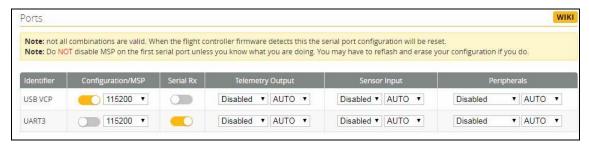

 Choose the same protocol for your receiver ,for example: Choose serial-based receiver and select SBUS for Frsky sbus receiver / Futaba Fasst, S-FHSS , Select IBUS for Flysky IBUS receiver , Select Specktrum1024 for DSM2 and Spektrum2048 for DSMX. PPM receiver please choose PPM RX input

