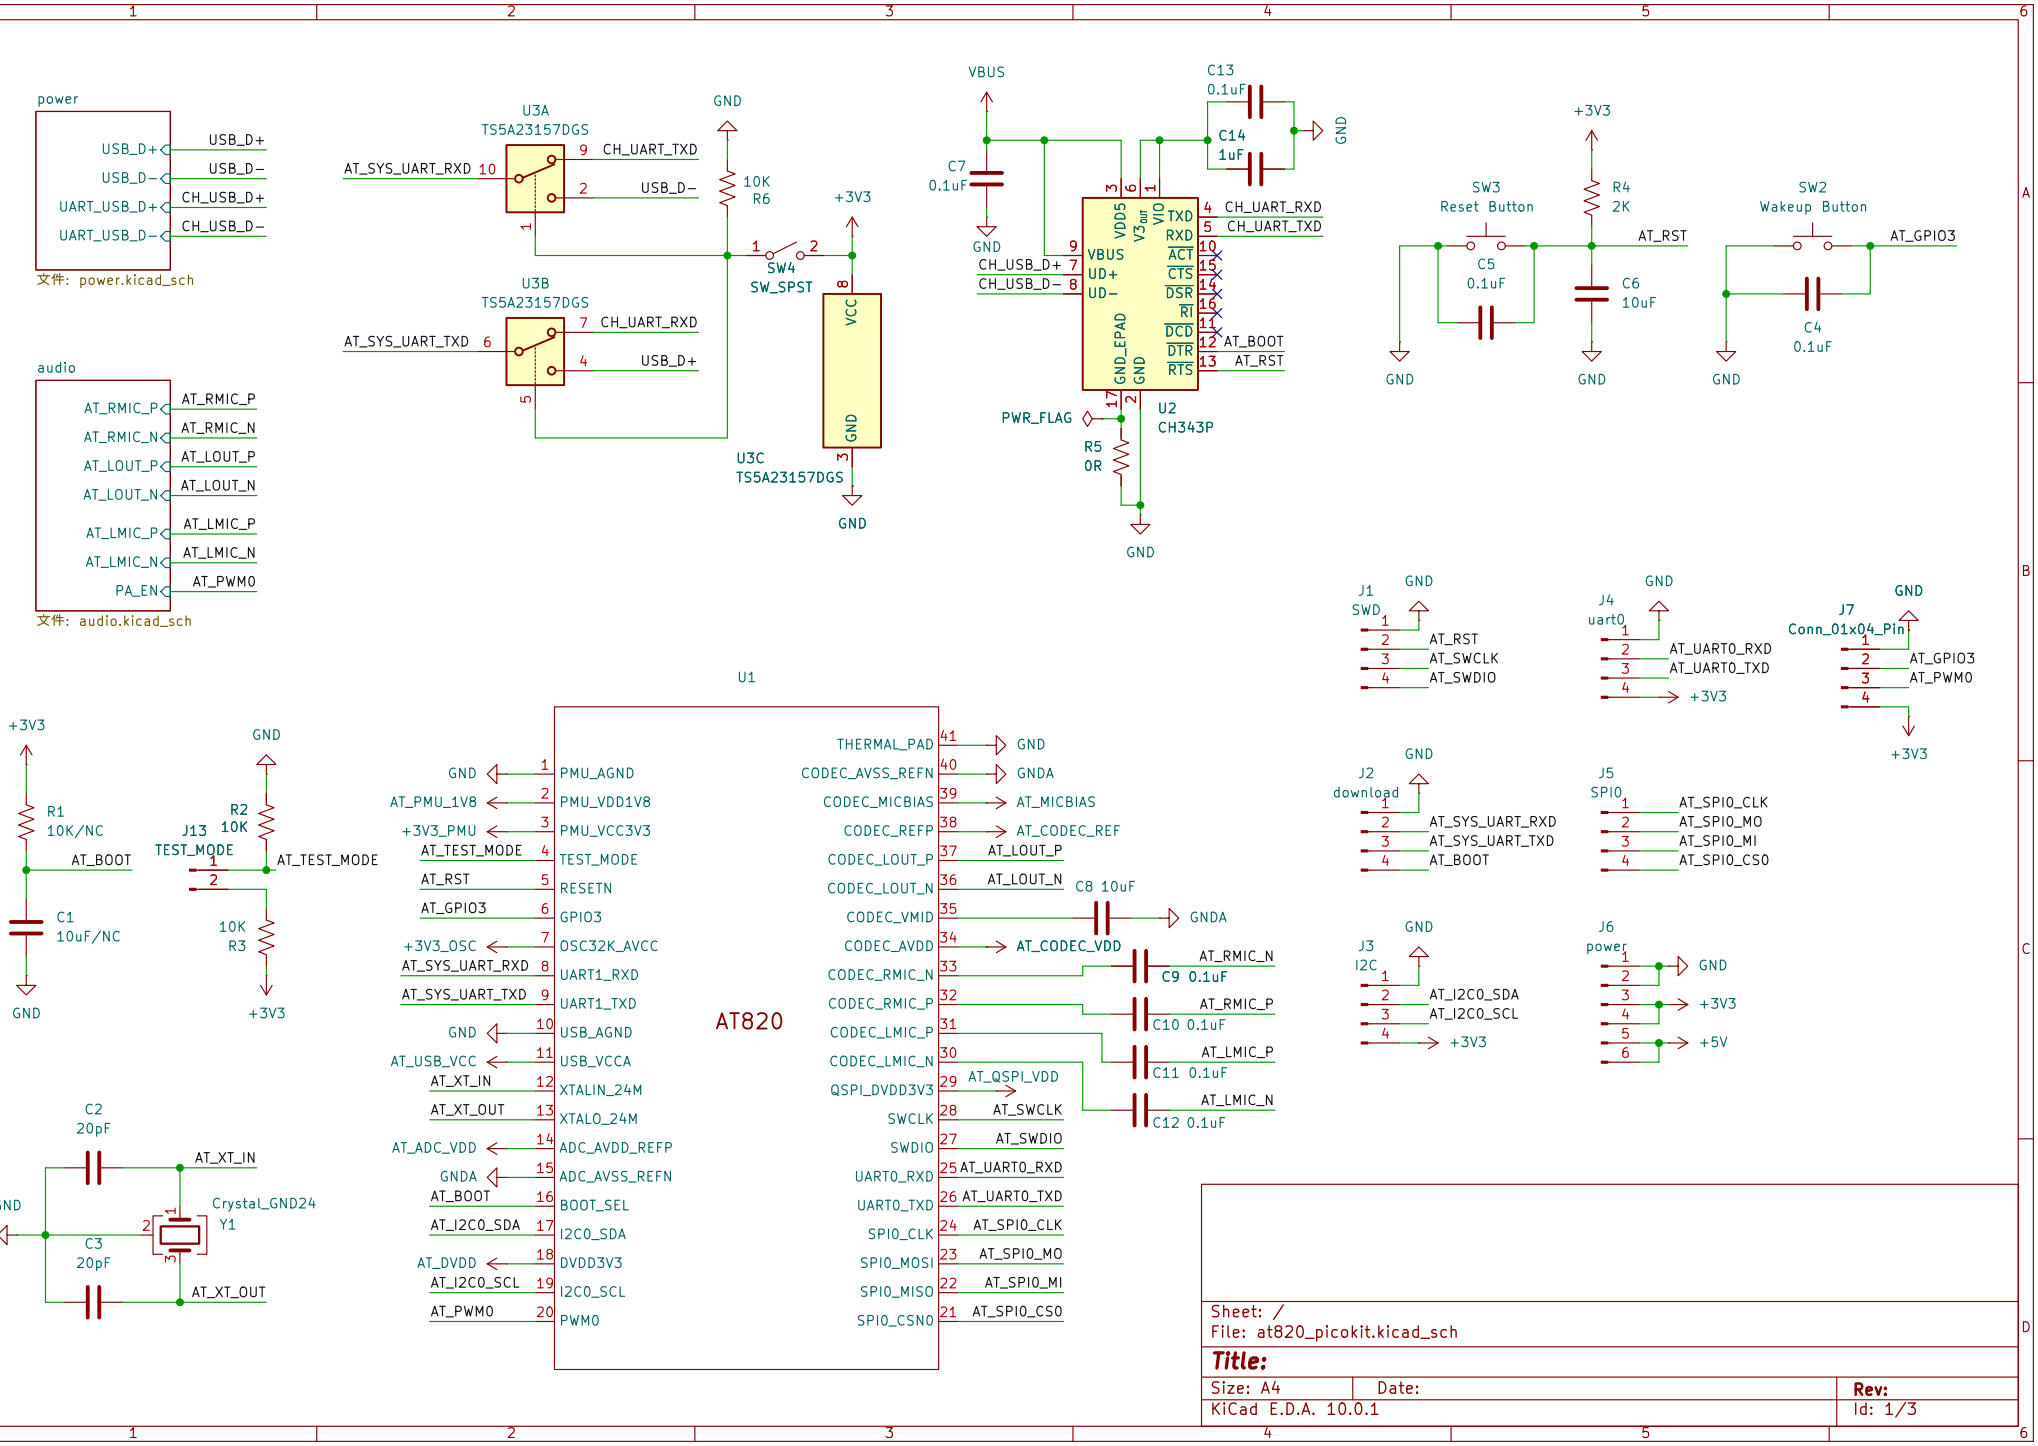
power
USB_D+
USB_D-
UART_USB_D+
UART_USB_D-
CH_USB_D+
CH_USB_D-
文件: power.kicad_sch
audio
AT_RMIC_P
AT_RMIC_N
AT_LOUT_P
AT_LOUT_N
AT_LMIC_P
AT_LMIC_N
PA_EN
AT_PWM0
文件: audio.kicad_sch
U3A
TS5A23157DGS
U3B
TS5A23157DGS
U3C
TS5A23157DGS
CH_UART_TXD
CH_UART_RXD
AT_SYS_UART_RXD
AT_SYS_UART_TXD
SW4
SW_SPST
R6
10K
VBUS
C7
0.1uF
C13
0.1uF
C14
1uF
U2
CH343P
PWR_FLAG
R5
0R
SW3
Reset Button
SW2
Wakeup Button
R4
2K
C5
0.1uF
C6
10uF
C4
0.1uF
AT_RST
AT_GPIO3
AT_BOOT
J1
SWD
AT_SWCLK
AT_SWDIO
J4
uart0
AT_UART0_RXD
AT_UART0_TXD
J7
Conn_01x04_Pin
J2
download
J5
SPI0
AT_SPI0_CLK
AT_SPI0_MO
AT_SPI0_MI
AT_SPI0_CS0
J3
I2C
AT_I2C0_SDA
AT_I2C0_SCL
J6
power
+5V
R1
10K/NC
C1
10uF/NC
R2
10K
J13
TEST_MODE
AT_TEST_MODE
R3
10K
U1
AT820
PMU_AGND
PMU_VDD1V8
PMU_VCC3V3
TEST_MODE
RESETN
GPIO3
OSC32K_AVCC
UART1_RXD
UART1_TXD
USB_AGND
USB_VCCA
XTALIN_24M
XTALO_24M
ADC_AVDD_REFP
ADC_AVSS_REFN
BOOT_SEL
I2C0_SDA
DVDD3V3
I2C0_SCL
PWM0
THERMAL_PAD
CODEC_AVSS_REFN
CODEC_MICBIAS
CODEC_REFP
CODEC_LOUT_P
CODEC_LOUT_N
CODEC_VMID
CODEC_AVDD
CODEC_RMIC_N
CODEC_RMIC_P
CODEC_LMIC_P
CODEC_LMIC_N
QSPI_DVDD3V3
SWCLK
SWDIO
UART0_RXD
UART0_TXD
SPI0_CLK
SPI0_MOSI
SPI0_MISO
SPI0_CSN0
C8 10uF
C9 0.1uF
C10 0.1uF
C11 0.1uF
C12 0.1uF
C2
20pF
C3
20pF
Crystal_GND24
Y1
Sheet: /
File: at820_picokit.kicad_sch
Title:
Size: A4
Date:
KiCad E.D.A. 10.0.1
Rev:
Id: 1/3

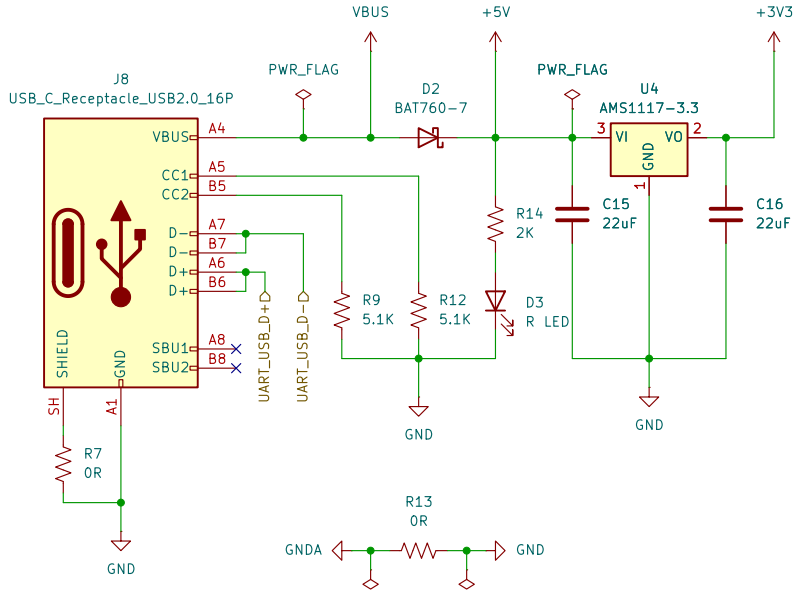

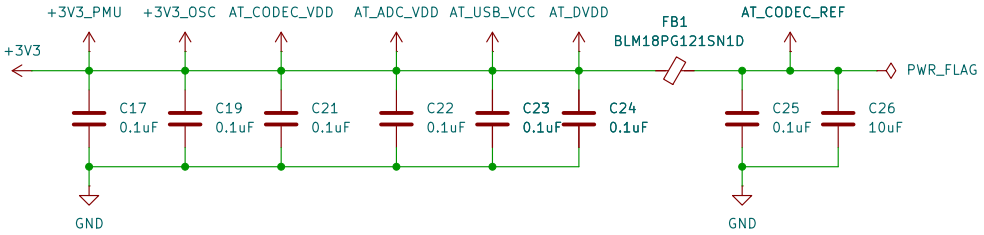

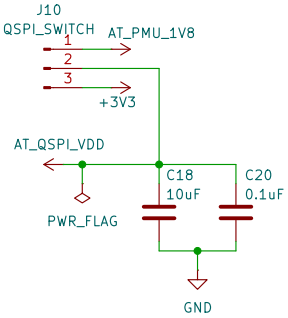

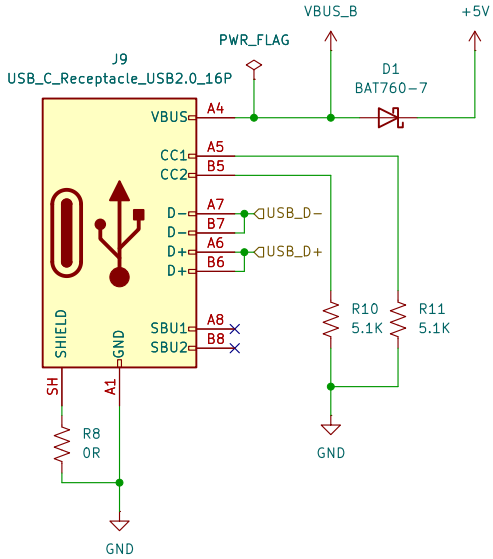

Sheet: /power/		
File: power.kicad_sch		
Title:		
Size: A4	Date:	**Rev:**
KiCad E.D.A. 10.0.1		Id: 2/3

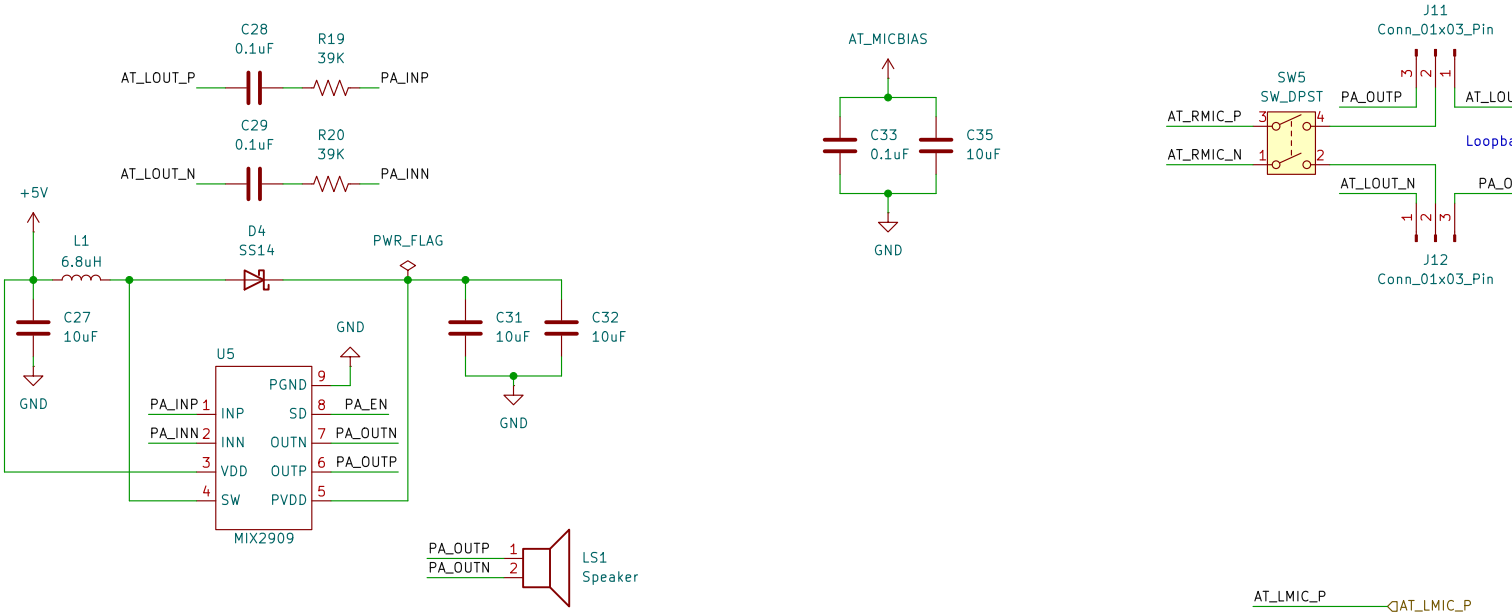

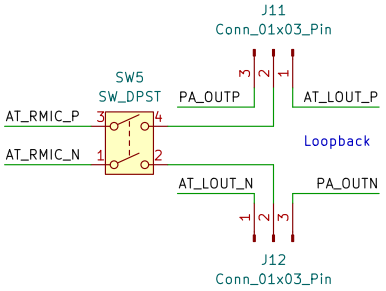

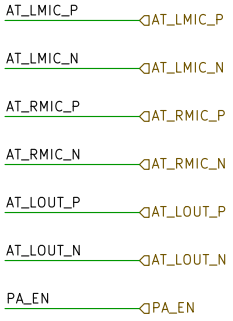

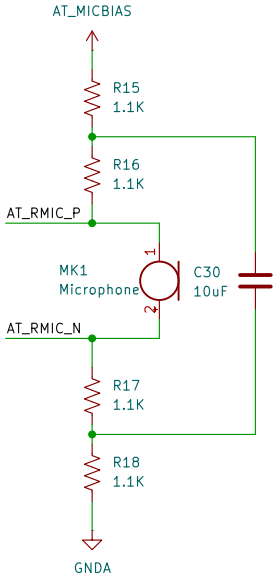

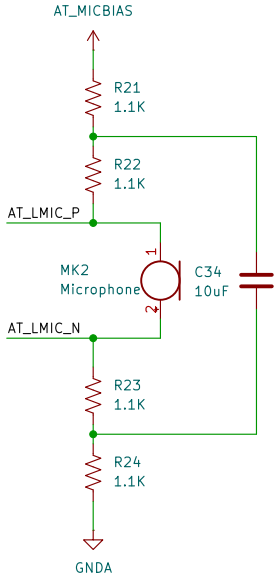

Sheet: /audio/
File: audio.kicad_sch

Title:

Size: A4 | Date: | **Rev:**

KiCad E.D.A. 10.0.1 | Id: 3/3