

MICROSAR Diagnostic Transformer

Technical Reference

Version 1.4.0

Authors	Christian Fischer
Status	Released



Document Information

History

Author	Date	Version	Remarks
Christian Fischer	2016-06-23	1.0.0	Initial version
Christian Fischer	2016-11-18	1.1.0	Version update only
Bernd Sigle	2017-03-20	1.2.0	Version update only
Christian Fischer	2017-06-06	1.3.0	Version update only
Christian Fischer	2017-08-17	1.4.0	Support of AUTOSAR 4.3.0

Reference Documents

No.	Source	Title	Version
[1]	AUTOSAR	AUTOSAR_BasicSoftwareModules.pdf	V1.0.0

Scope of the Document

This technical reference describes the general use of the MICROSAR Diagnostic Transformer.



Caution

We have configured the programs in accordance with your specifications in the questionnaire. Whereas the programs do support other configurations than the one specified in your questionnaire, Vector's release of the programs delivered to your company is expressly restricted to the configuration you have specified in the questionnaire.



Contents

1	Com	ponent His	story	5
2	Intro	duction		6
	2.1	Archited	cture Overview	6
3	Func	tional Des	scription	7
•	3.1		ation	
	3.2			
	3.3		unctions	
	3.4		andling	
	• • • • • • • • • • • • • • • • • • • •	3.4.1	Development Error Reporting	
		3.4.2		
4	Integ	ration		8
	4.1		of Delivery	
		4.1.1	Static Files	8
		4.1.2	Dynamic Files	8
5	API [Descriptio	n	9
	5.1	Service	es provided by DiagXf	9
		5.1.1	DiagXf_Init	9
		5.1.2	DiagXf_DeInit	9
		5.1.3	DiagXf_GetVersionInfo	10
		5.1.4	DiagXf_ <transformerid></transformerid>	10
		5.1.5	DiagXf_Inv_ <transformerid></transformerid>	11
6	Conf	iguration.		12
	6.1	Configu	uration Variants	12
7	Glos	sary and A	Abbreviations	13
	7.1	Glossar	ry	13
	7.2	Abbrevi	iations	13
8	Cont	act		14



Illustrations

Figure 2-1	AUTOSAR Architecture Overview	6
Tables		
Table 1-1	Component history	5
Table 4-1	Static files	
Table 4-2	Generated files	
Table 5-1	DiagXf Init	9
Table 5-2	DiagXf_DeInit	9
Table 5-3	DiagXf_GetVersionInfo	
Table 5-4	DiagXf_ <transformerid></transformerid>	
Table 5-5	DiagXf_Inv_ <transformerid></transformerid>	11
Table 7-1	Glossary	
Table 7-2	Abbreviations	



1 Component History

The component history gives an overview over the important milestones that are supported in the different versions of the component.

Component Version	New Features
1.0.0	Initial Creation
1.1.0	Version update for DiagXf 1.1.0 only
1.2.0	Version update only
1.3.0	Support UINT16_N, UINT32_N, SINT8_N, SINT16_N, SINT32_N arrays
1.4.0	Support of AUTOSAR 4.3.0

Table 1-1 Component history



2 Introduction

This document describes the functionality, API and configuration of the MICROSAR BSW module DiagXf.

Supported AUTOSAR Release*:	4	
Supported Configuration Variants:	pre-compile	
Vendor ID:	DIAGXF_VENDOR_ID	30 decimal
		(= Vector-Informatik, according to HIS)
Module ID:	DIAGXF_MODULE_ID	FF decimal
		(according to ref. [1])

^{*} For the detailed functional specification please also refer to the corresponding AUTOSAR SWS.

The DiagXf module provides the functionality to serialize complex data.

2.1 **Architecture Overview**

The following figure shows where the DiagXf is located in the AUTOSAR architecture.

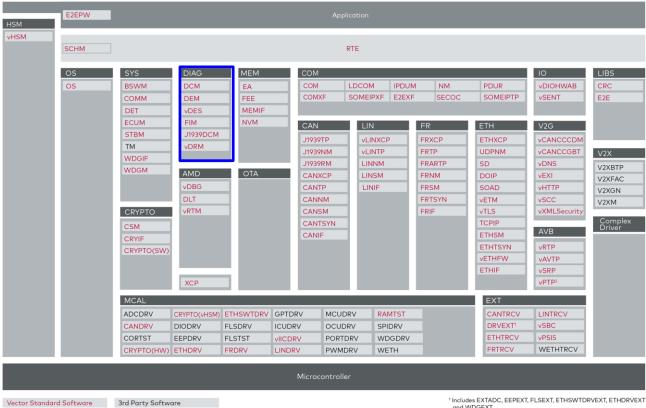


Figure 2-1 AUTOSAR Architecture Overview

and WDGEXT ² Functionality represented in ETHTSYN and STBM



3 Functional Description

3.1 Initialization

The DiagXf does not have to be initialized or deinitialized. Calls to DiagXf_Init() and DiagXf DeInit() can be omitted.

3.2 States

No internal states exist.

3.3 Main Functions

No main function exists because all functionality is performed within the called API.

3.4 Error Handling

3.4.1 Development Error Reporting

No development error reporting is currently supported by DiagXf.

3.4.2 Production Code Error Reporting

No production errors are specified for DiagXf.



4 Integration

This chapter gives necessary information for the integration of the MICROSAR DiagXf into an application environment of an ECU.

4.1 Scope of Delivery

The delivery of the DiagXf contains the files which are described in the chapters 4.1.1 and 4.1.2.

4.1.1 Static Files

File Name	Description
-	-

Table 4-1 Static files

4.1.2 Dynamic Files

The dynamic files are generated by the configuration tool DaVinci Configurator.

File Name	Description
DiagXf.c	Source file of the DiagXf module.
DiagXf.h	Main header file which shall be included by modules using the DiagXf module.
DiagXf_MemMap.h	Template contains DiagXf specific part of the memory mapping.
DiagXf_Compiler_Cfg.h	Template contains DiagXf specific part of the compiler abstraction.
DiagXf_rules.mak, DiagXf_defs.mak, DiagXf_check.mak, DiagXf_cfg.mak	Make files according to the AUTOSAR make environment proposal are generated into the mak subdirectory.

Table 4-2 Generated files



5 API Description

5.1 Services provided by DiagXf

5.1.1 DiagXf_Init

Prototype			
<pre>void DiagXf_Init (const DiagXf_ConfigType *config)</pre>			
Parameter			
config	Pointer to the transformer's configuration data.		
Return code			
void	none		
Functional Description	Functional Description		
Initialization function.			
Particularities and Limitations			
none			
Expected Caller Context			
This function can be called in any context.			

Table 5-1 DiagXf_Init

5.1.2 DiagXf_Delnit

Prototype			
void DiagXf_DeInit (vo	pid)		
Parameter			
void	none		
Return code			
void	none		
Functional Description	Functional Description		
Deinitialization function.			
Particularities and Limitations			
none			
Expected Caller Context			
This function can be called in any context.			

Table 5-2 DiagXf_DeInit



5.1.3 DiagXf_GetVersionInfo

Prototype			
void DiagXf_GetVersion	<pre>void DiagXf_GetVersionInfo (Std_VersionInfoType *versionInfo)</pre>		
Parameter			
versioninfo	Pointer to where to store the version information of this module.		
Return code			
void	none		
Functional Description			
This API returns version information, vendor ID and AUTOSAR module ID of the called transformer module.			
Particularities and Limitations			
This API is only available if enabled by the configuration parameter XfrmVersionInfoApi.			
Expected Caller Context			

Table 5-3 DiagXf_GetVersionInfo

5.1.4 DiagXf_<transformerId>

This function can be called in any context.

Prototype		
Std_ReturnType DiagXf_ <transformerid> (uint8 *buffer, uint16 *bufferLength, const <type> *dataElement)</type></transformerid>		
Parameter		
buffer	Buffer allocated by the RTE, where the transformed data has to be stored by the transformer.	
bufferLength	Used length of the buffer.	
dataElement	Data element which shall be transformed.	
Return code		
E_OK	Serialization successful.	
Functional Description		
Serialization of the dataElement when communicating from the DataPrototypeMapping.firstDataPrototype to the DataPrototypeMapping.secondDataPrototype.		
Particularities and Limitations		
none		
Expected Caller Context		
This function can be called in any context.		

Table 5-4 DiagXf_<transformerId>



5.1.5 DiagXf_Inv_<transformerId>

Prototype

Std_ReturnType DiagXf_Inv_<transformerId> (const uint8 *buffer, uint16
bufferLength, <type> *dataElement)

Parameter	
buffer	Buffer allocated by the RTE, where the serialized data is stored by the Rte.
bufferLength	Used length of the buffer.
dataElement	Data element which is the result of the transformation and contains the deserialized data element.
Return code	
E_OK	Deserialization successful.

Functional Description

Descrialization of the buffer when communicating from the DataPrototypeMapping.secondDataPrototype to the DataPrototypeMapping.firstDataPrototype.

Particularities and Limitations

none

Expected Caller Context

This function can be called in any context.

Table 5-5 DiagXf_Inv_<transformerId>



6 Configuration

In the DiagXf the attributes can be configured with the following tools:

> Configuration in DaVinci Configurator

Currently, only the GetVersionInfo API can be enabled / disabled in the DiagXf Ecu configuration.

The serialization / describing described in the Diagnostic Data Element described in the Diagnostic Extract. The BitOffset, Base Type Size and Byte Order are considered for each Diagnostic Data Element. It is assumed that the Diagnostic Data Elements are aligned to a byte boundary.

If two incompatible ports are connected using a DataPrototypeMapping which references a diagnostic transformer through firstToSecondDataTransformation, the DiagXf implementation shall be generated.

6.1 Configuration Variants

The DiagXf supports the configuration variants

> VARIANT-PRE-COMPILE

The configuration classes of the DiagXf parameters depend on the supported configuration variants. For their definitions please see the DiagXf bswmd.arxml file.



7 Glossary and Abbreviations

7.1 Glossary

Term	Description
DaVinci Configurator	Configuration and generation tool for MICROSAR components

Table 7-1 Glossary

7.2 Abbreviations

Abbreviation	Description
API	Application Programming Interface
AUTOSAR	Automotive Open System Architecture
BSW	Basis Software
DEM	Diagnostic Event Manager
DET	Development Error Tracer
ECU	Electronic Control Unit
MICROSAR	Microcontroller Open System Architecture (the Vector AUTOSAR solution)
RTE	Runtime Environment
SRS	Software Requirement Specification
SWC	Software Component
SWS	Software Specification

Table 7-2 Abbreviations



8 Contact

Visit our website for more information on

- > News
- > Products
- > Demo software
- > Support
- > Training data
- > Addresses

www.vector.com