


Basic Service Set Configuration

1. Set up LAN


- a. First get your wireless router out. Plug the power cord in, screw the antennas onto the little tabs and plug an ethernet cord connected to a wall switch into the yellow port on the back with the globe looking symbol under it.




- b. Plug the cable that came in the box into the back of the router in the number 1 slot. Plug the other end into the back of the custom PC.
- c. Turn on the router and make sure the lights on the front are blinking for the slots that are plugged in.
- d. Confirm that the router has assigned an IP address to the computer by going into command prompt and putting in the ipconfig command and make sure that there is an IP address and the default gateway is 192.168.10.1
- e. Go into a web browser and type into the search bar 192.168.10.1 which will take you to a window like this

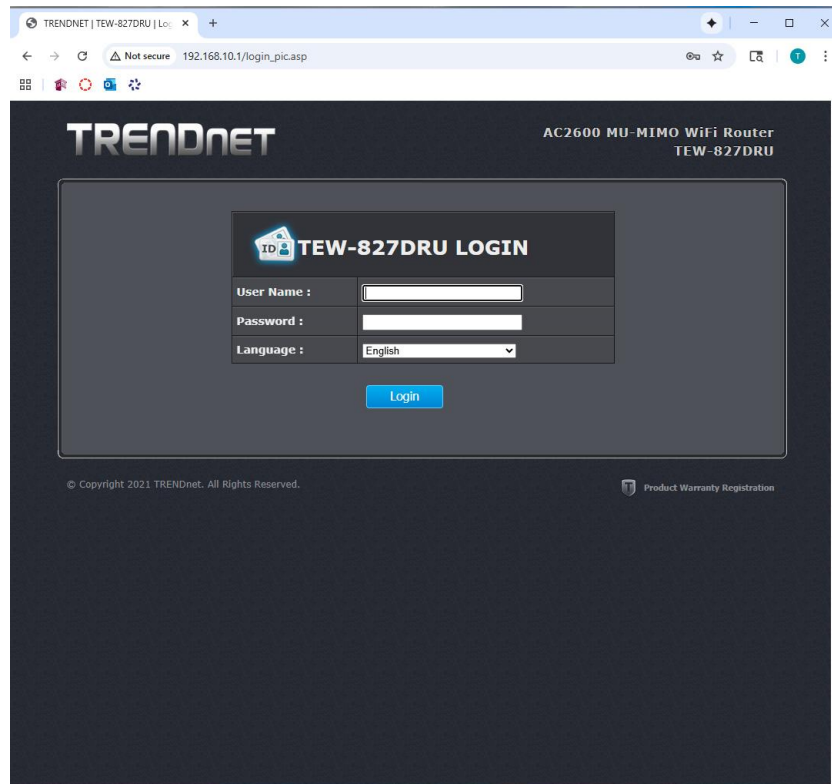


- f. The user name and password should both be on a sticker on the bottom of the router.
- g. Once you sign in you will be on this screen, where you should click on wireless in the tab on the left

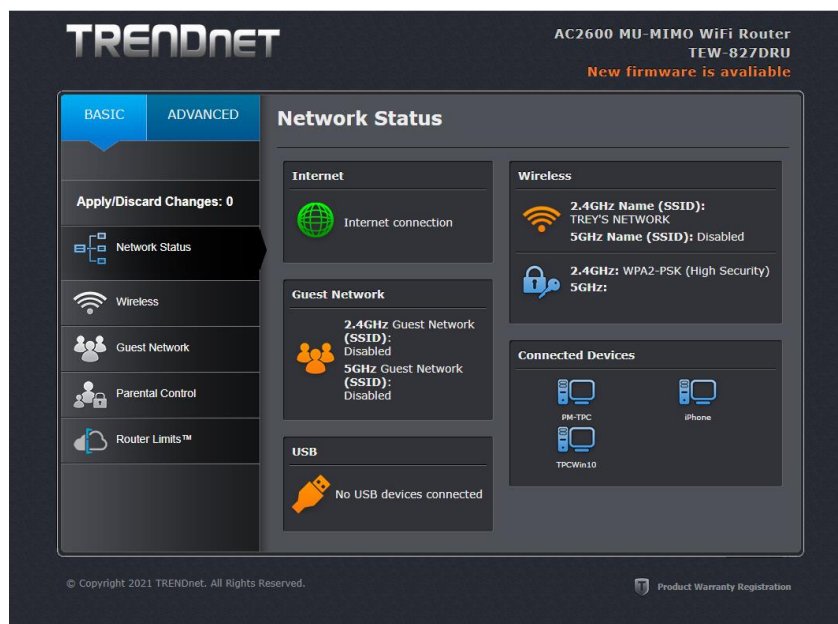

- h. That will take you to this screen. In red circle 1 you must first have this box checked. Then in circle 2 you have to name your network to whatever you want to appear. In circle three you set your network's password and in circle 4 you press save. This process looks the same whether you're setting 2.4 or 5ghz. After that click on where 5 points to.

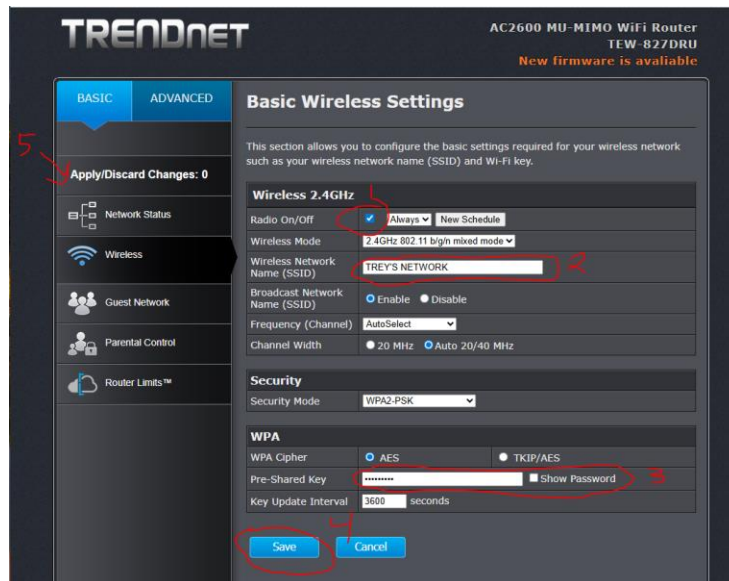

- i. This will take you to this screen, where you must apply changes. Any unapplied changes will show up within the blue box, and you will click apply on reboot which will install the changes and then restart the router.

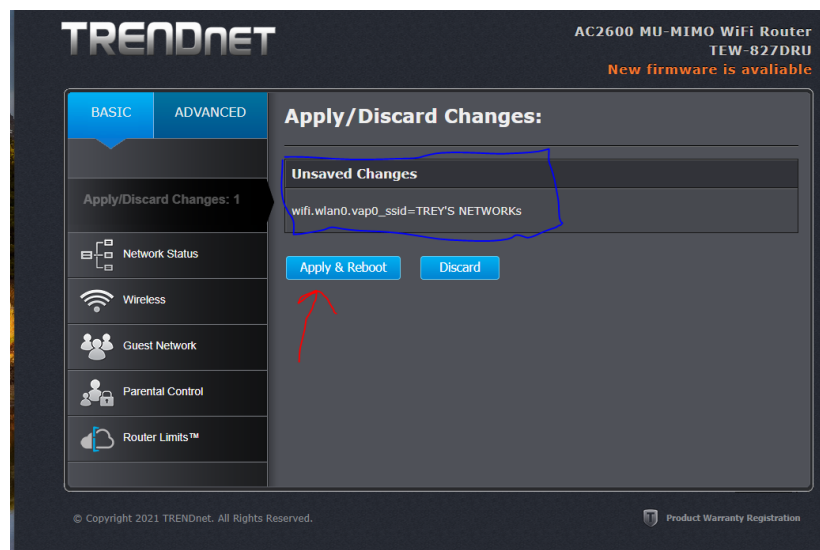

- j. Once it reboots your wireless network should be set up. I recommend testing that it is by connecting a phone or laptop that you know has wireless capabilities.
2. Connecting dell PC wirelessly
- To connect your Dell, you first have to make it able to connect wirelessly by putting a nic into a PCIe slot.
 - First get a nic from the closet and turn off and open up your Dell. Plug the nic into a pcie or pci slot and connect it's antennas
 - Once it's plugged in go online to <https://www.tp-link.com/us/support/download/> In that tab put into the model number search bar 'Archer TX55E', and click on the name when it pops up, which will take you to this screen

Download for Archer TX55E V4.60

Please choose hardware version:

V4.60

> How to find the hardware version on a TP-Link device

IMPORTANT: Model and hardware version availability varies by region. Please refer to your TP-Link regional website to determine product availability.

Vx.0=Vx.6/Vx.8 (eg V1.0=V1.6/V1.8)

Vx.x0=Vx.x6/Vx.x8 (eg V1.20=V1.26/V1.28)

Vx.30=Vx.32 (eg V3.30=V3.32)

Product Overview

Archer TX55E(US)_V4.6_Datasheet [↗](#)

Manual

Archer TX55E(US)_V4.6_User Guide [↗](#)

Archer TX55E(US)_V4.6_Quick Installation Guide [↗](#)

Driver

FAQ

Driver

Archer TX55E(US)_V4.6_00.034_240620_Win10_Win11

Download


Published Date: 2024-11-04

Language: Multi-language

File Size: 36.49 MB

- On that screen click on the download button which will download a zip file for you. In the zip folder click on the autorun program and when prompted click extract all
- Extract the folder to your documents folder then click autorun again which will open this window in which you should click on the option with the wifi logo above it.

Install the following drivers.

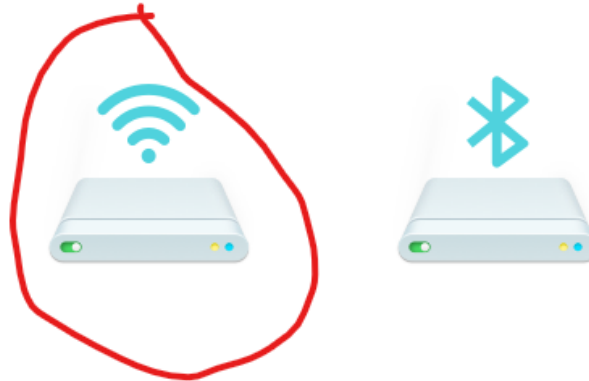

Copyright © 2024 TP-LINK CORPORATION PTE. LTD. All rights reserved.

- f. Once the drivers are installed, unplug your dell's ethernet and go into the wifi settings. Then click show available networks and find your network. Type in the password that you have set and connect to the network. If it works then you're done as you have made a network and connected your dell to it.