

DR2500D Rear Helper Spring Kit Installation Manual

Model: DR2500D (Rear Suspension Package)

Please read these instructions carefully before starting the installation. Ensure all standard safety precautions are observed while working underneath the vehicle.

1. Parts List

Before beginning, verify that all components listed below are present in your kit.

Ref #	Description / Specifications	Qty
1	Weldment Bracket (Left-Hand & Right-Hand)	1L - 1R
2	Rubber Spacer (4" O.D. x 1" Thick with AH Bushing)	2
3	Hollow Rubber Spring	2
4	Hex Cap Screw (HCS) M10 x 40 x 1.5, Grade 8.8, Zinc Plated	2
5	Hex Cap Screw (HCS) M10 x 65 x 1.5, Grade 8.8, Zinc Plated	2

Assembly / Installation Diagram

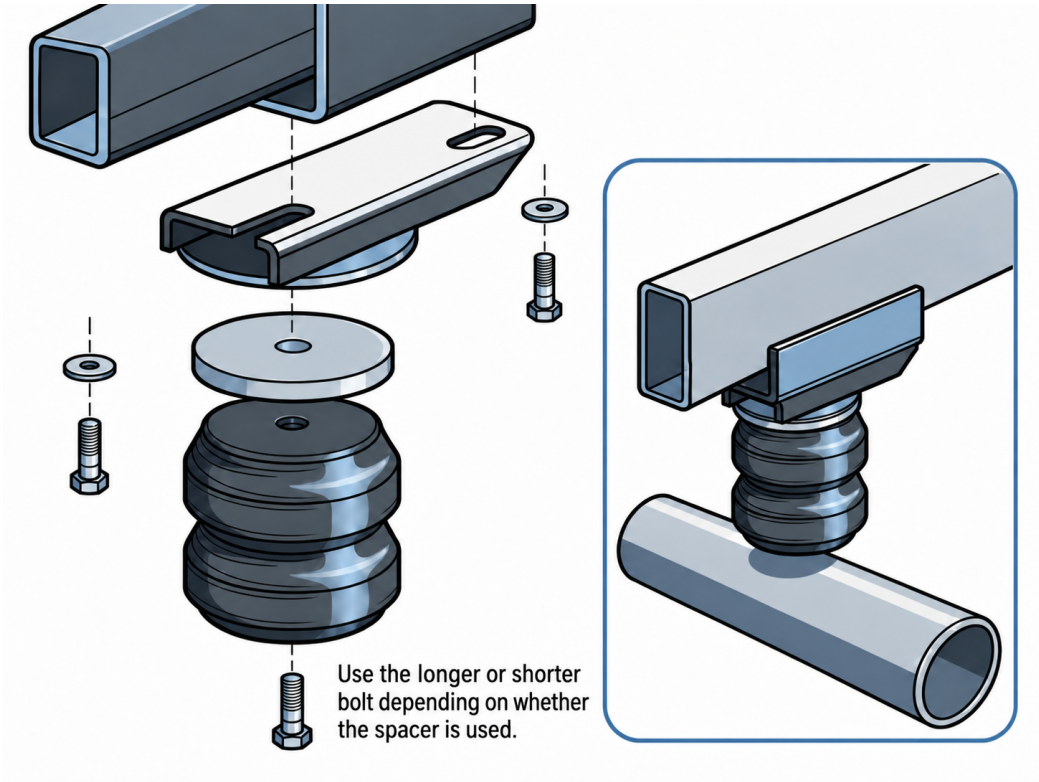


Illustration is for installation reference. Use the longer or shorter bolt depending on whether the spacer is installed.

2. Installation Instructions

- 1. Raise Vehicle:** Elevate the vehicle using an appropriate lifting device, allowing the rear axle to hang freely. Ensure the chassis is securely supported before proceeding.
- 2. Remove Bump Stop:** Locate and remove the existing OEM bump stop from the vehicle frame.
- 3. Assemble Components:** Assemble the hollow rubber spring with the weldment bracket. Use the spacer only when necessary for proper fitment or clearance.
- 4. Mount Assembly:** Secure the assembled helper spring unit to the vehicle frame using the original equipment manufacturer (OEM) fasteners.
- 5. Lower Vehicle:** Carefully lower the vehicle back to the ground.

Installation Notes:

- When removing OEM fasteners, the application of penetrating fluid is recommended to facilitate removal.
- Confirm that all hardware is properly seated and that the spring does not interfere with nearby vehicle components.

3. Clearance Instructions & Fitting Guidance

- **Clearance Gap:** With the vehicle unloaded, maintain approximately **1/2" to 1-1/2" of clearance** between the rubber spring and its contact surface.
- **Ride Comfort:** Maintaining the recommended clearance helps preserve unloaded ride comfort. If little or no clearance is present on an application intended to have a gap, the ride may feel **firmer or harsher**.
- **Load Effects:** A partial load, cargo, or aftermarket vehicle accessories may reduce or eliminate the clearance gap.
- **Spacer Use:** Use the spacer only when necessary to achieve proper fitment or the recommended clearance. **Use the longer bolt when the spacer is installed, and the shorter bolt when the spacer is not used.**

Important Safety Warnings

- Do not exceed the vehicle manufacturer's recommended axle weight rating.
- Inspect for potential interference between the hollow rubber spring and adjacent vehicle components. Under load, the rubber spring will expand in diameter.
- Support the vehicle securely before working underneath it. Follow appropriate shop safety procedures and verify the installation before driving.

Note: Illustrations are for reference only. Vehicle configuration and actual component appearance may vary. Install according to the vehicle-specific mounting points and standard mechanical practices.