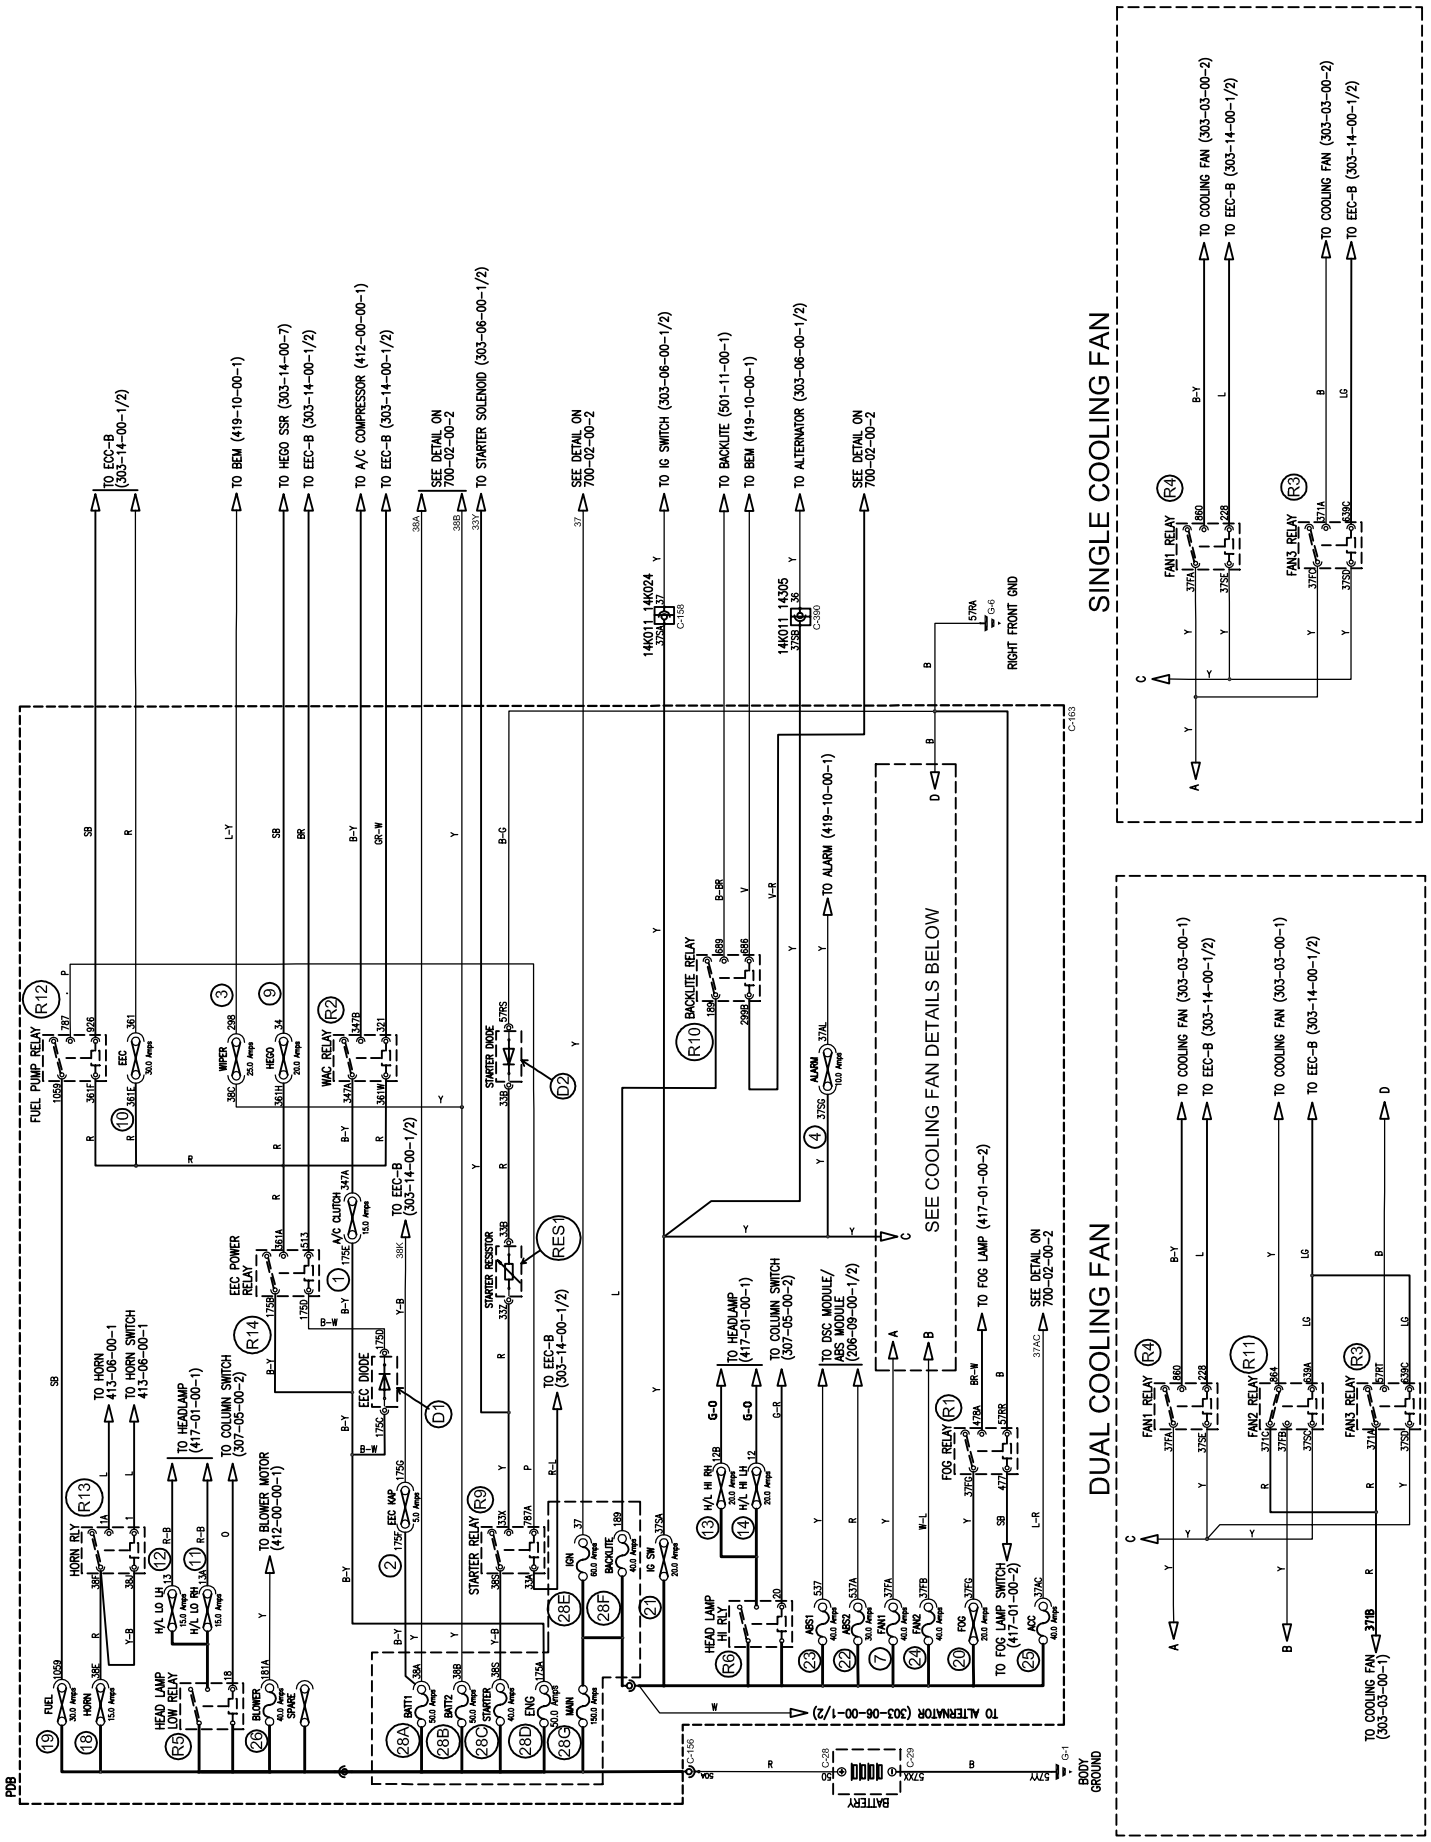
SINGLE COOLING FAN
DUAL COOLING FAN
SEE COOLING FAN DETAILS BELOW
FUEL PUMP RELAY
HORN RLY
HEAD LAMP LOW RELAY
EEC POWER RELAY
WAC RELAY
STARTER RELAY
HEAD LAMP HI RLY
FOG RELAY
FAN1 RELAY
FAN2 RELAY
FAN3 RELAY
BACKLITE RELAY
STARTER DIODE
STARTER RESISTOR
EEC DIODE
A/C CLUTCH
TO HORN 413-06-00-1
TO HORN SWITCH 413-06-00-1
TO HEADLAMP (417-01-00-1)
TO COLUMN SWITCH (307-05-00-2)
TO BLOWER MOTOR (412-00-00-1)
TO EEC-B (303-14-00-1/2)
TO HEADLAMP (417-01-00-1)
TO COLUMN SWITCH (307-05-00-2)
TO DSC MODULE/ ABS MODULE (206-09-00-1/2)
TO FOG LAMP (417-01-00-2)
TO FOG LAMP SWITCH (417-01-00-2)
TO ALARM (419-10-00-1)
SEE DETAIL ON 700-02-00-2
TO ALTERNATOR (303-06-00-1/2)
TO COOLING FAN (303-03-00-2)
TO EEC-B (303-14-00-1/2)
TO COOLING FAN (303-03-00-1)
TO EEC-B (303-14-00-1/2)
TO COOLING FAN (303-03-00-1)
TO EEC-B (303-14-00-1/2)
TO EEC-B (303-14-00-1/2)
TO BEM (419-10-00-1)
TO HEGO SSR (303-14-00-7)
TO EEC-B (303-14-00-1/2)
TO A/C COMPRESSOR (412-00-00-1)
TO EEC-B (303-14-00-1/2)
TO STARTER SOLENOID (303-06-00-1/2)
TO IG SWITCH (303-06-00-1/2)
TO BACKLITE (501-11-00-1)
TO BEM (419-10-00-1)
TO ALTERNATOR (303-06-00-1/2)
RIGHT FRONT GND
BODY GROUND
BATTERY
PDB

Power Distribution - JB

700-02-00-2

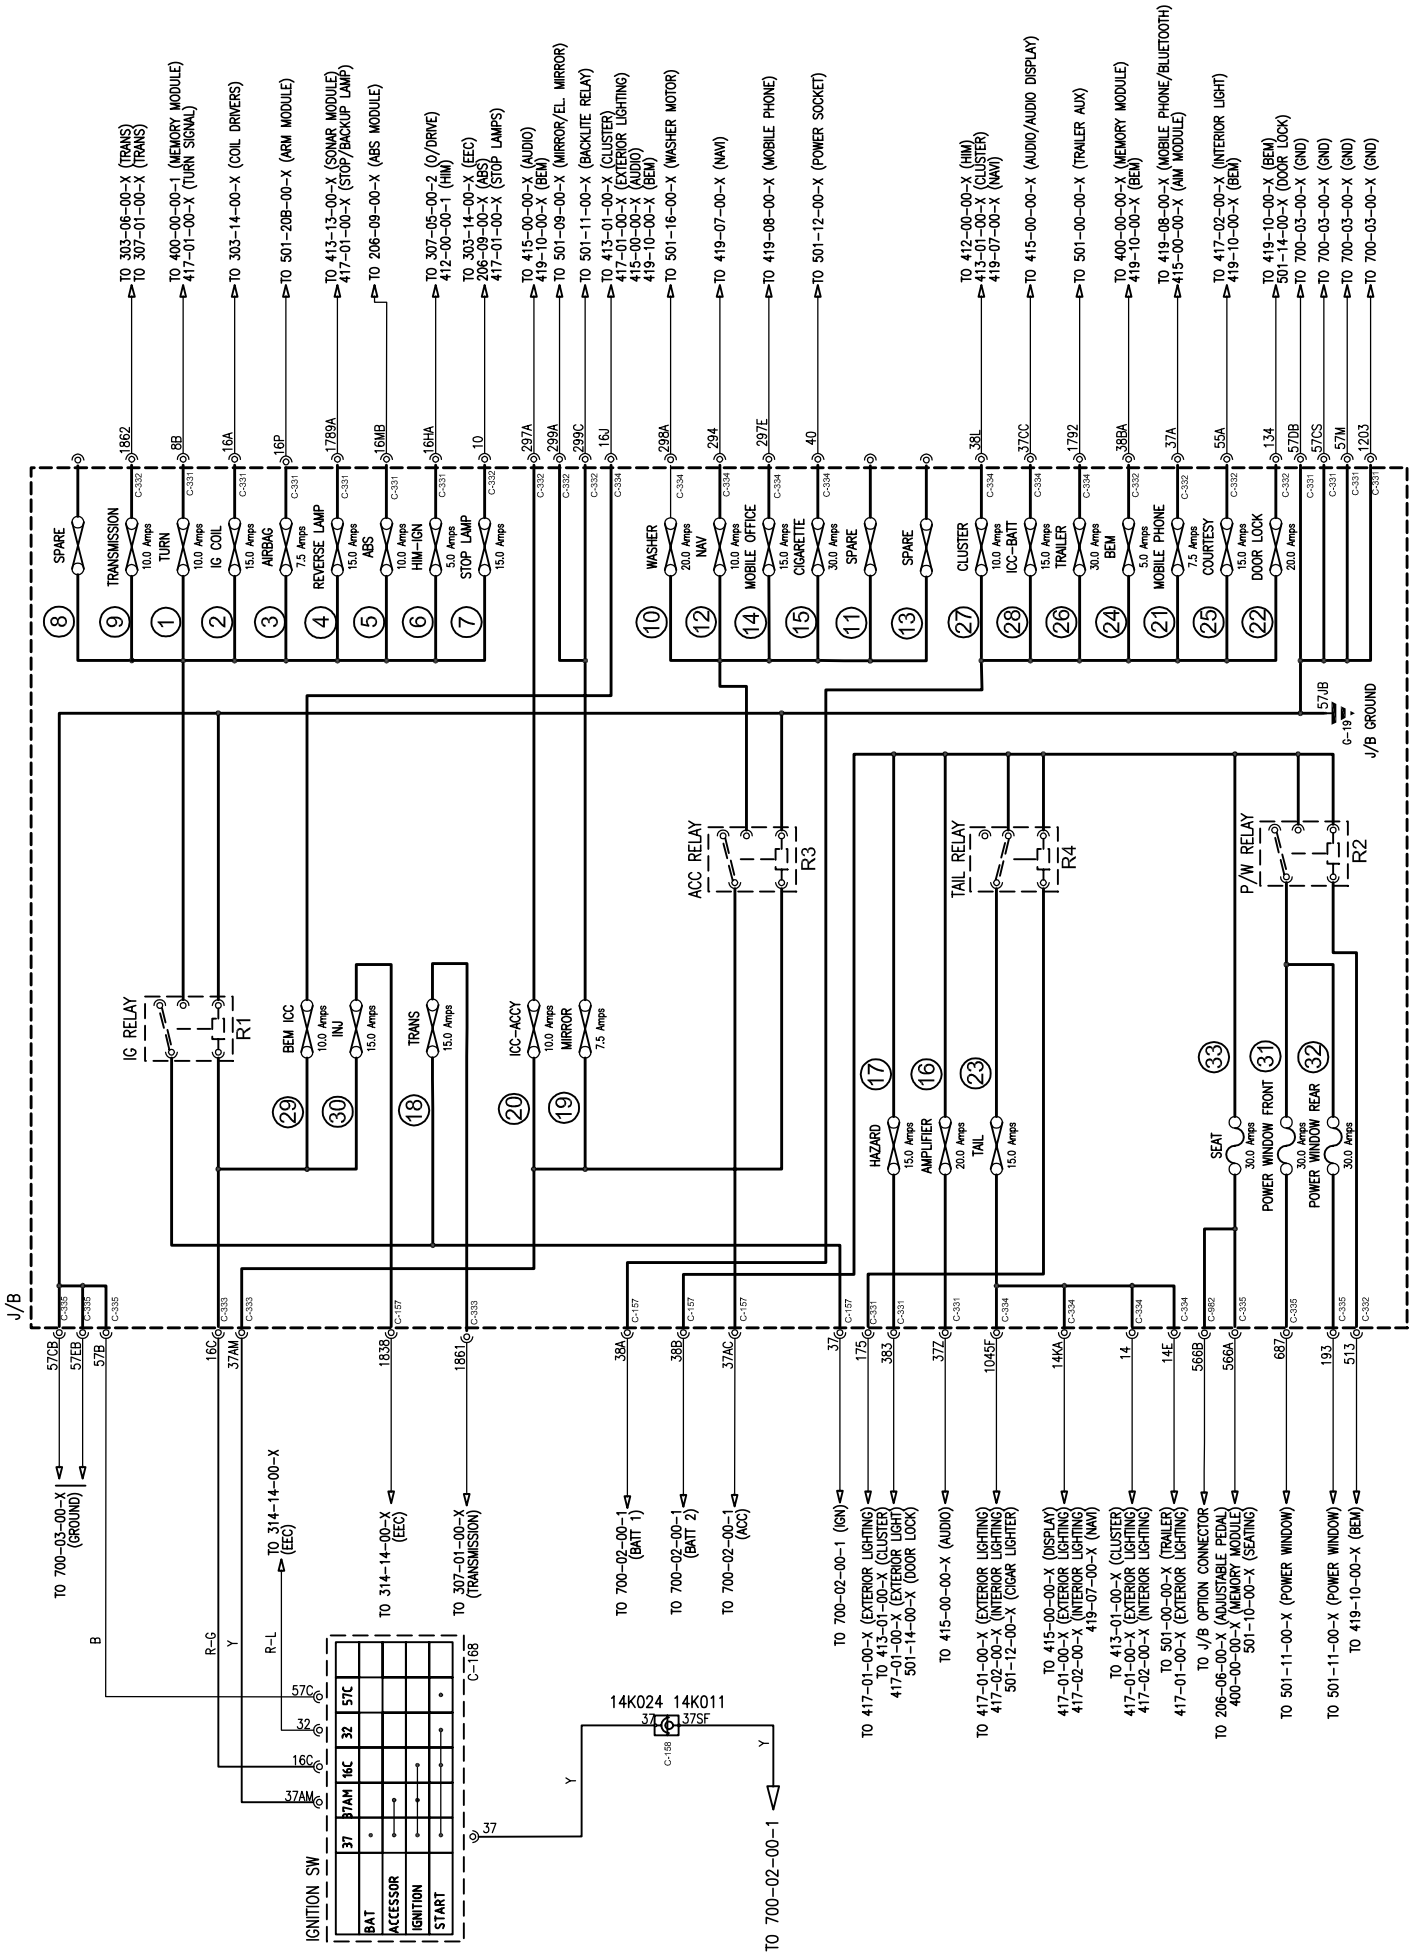

Login Tracking Code

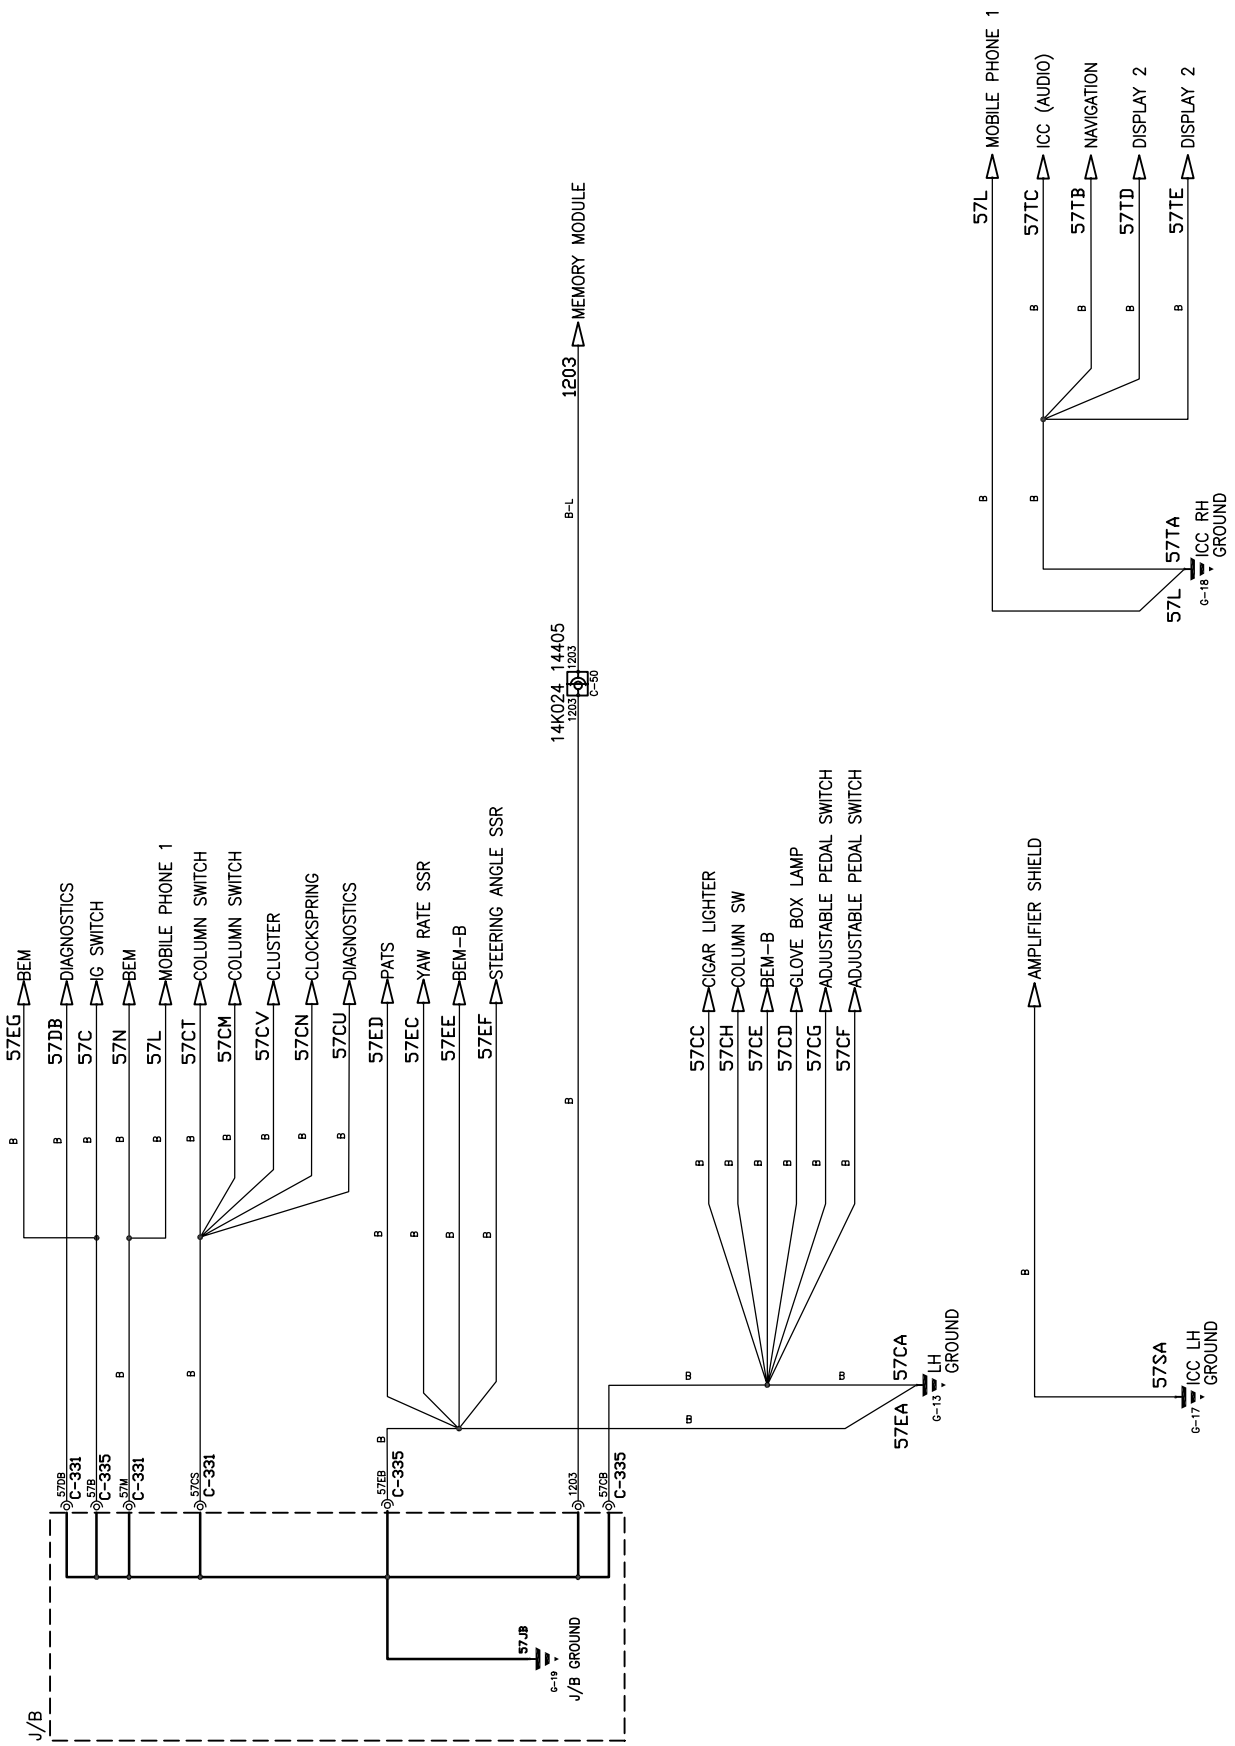
57EG
BEM
57DB
DIAGNOSTICS
57C
IG SWITCH
57N
BEM
57L
MOBILE PHONE 1
57CT
COLUMN SWITCH
57CM
COLUMN SWITCH
57CV
CLUSTER
57CN
CLOCKSPRING
57CU
DIAGNOSTICS
57ED
PATS
57EC
YAW RATE SSR
57EE
BEM-B
57EF
STEERING ANGLE SSR
1203
MEMORY MODULE
14K024 14405
C-50
57CC
CIGAR LIGHTER
57CH
COLUMN SW
57CE
BEM-B
57CD
GLOVE BOX LAMP
57CG
ADJUSTABLE PEDAL SWITCH
57CF
ADJUSTABLE PEDAL SWITCH
57CA
57EA
LH GROUND
G-13
AMPLIFIER SHIELD
57SA
ICC LH GROUND
G-17
57L
MOBILE PHONE 1
57TC
ICC (AUDIO)
57TB
NAVIGATION
57TD
DISPLAY 2
57TE
DISPLAY 2
57TA
ICC RH GROUND
G-18
57L
C-331
C-335
C-331
C-331
C-335
C-335
57JB
J/B GROUND
G-19
J/B

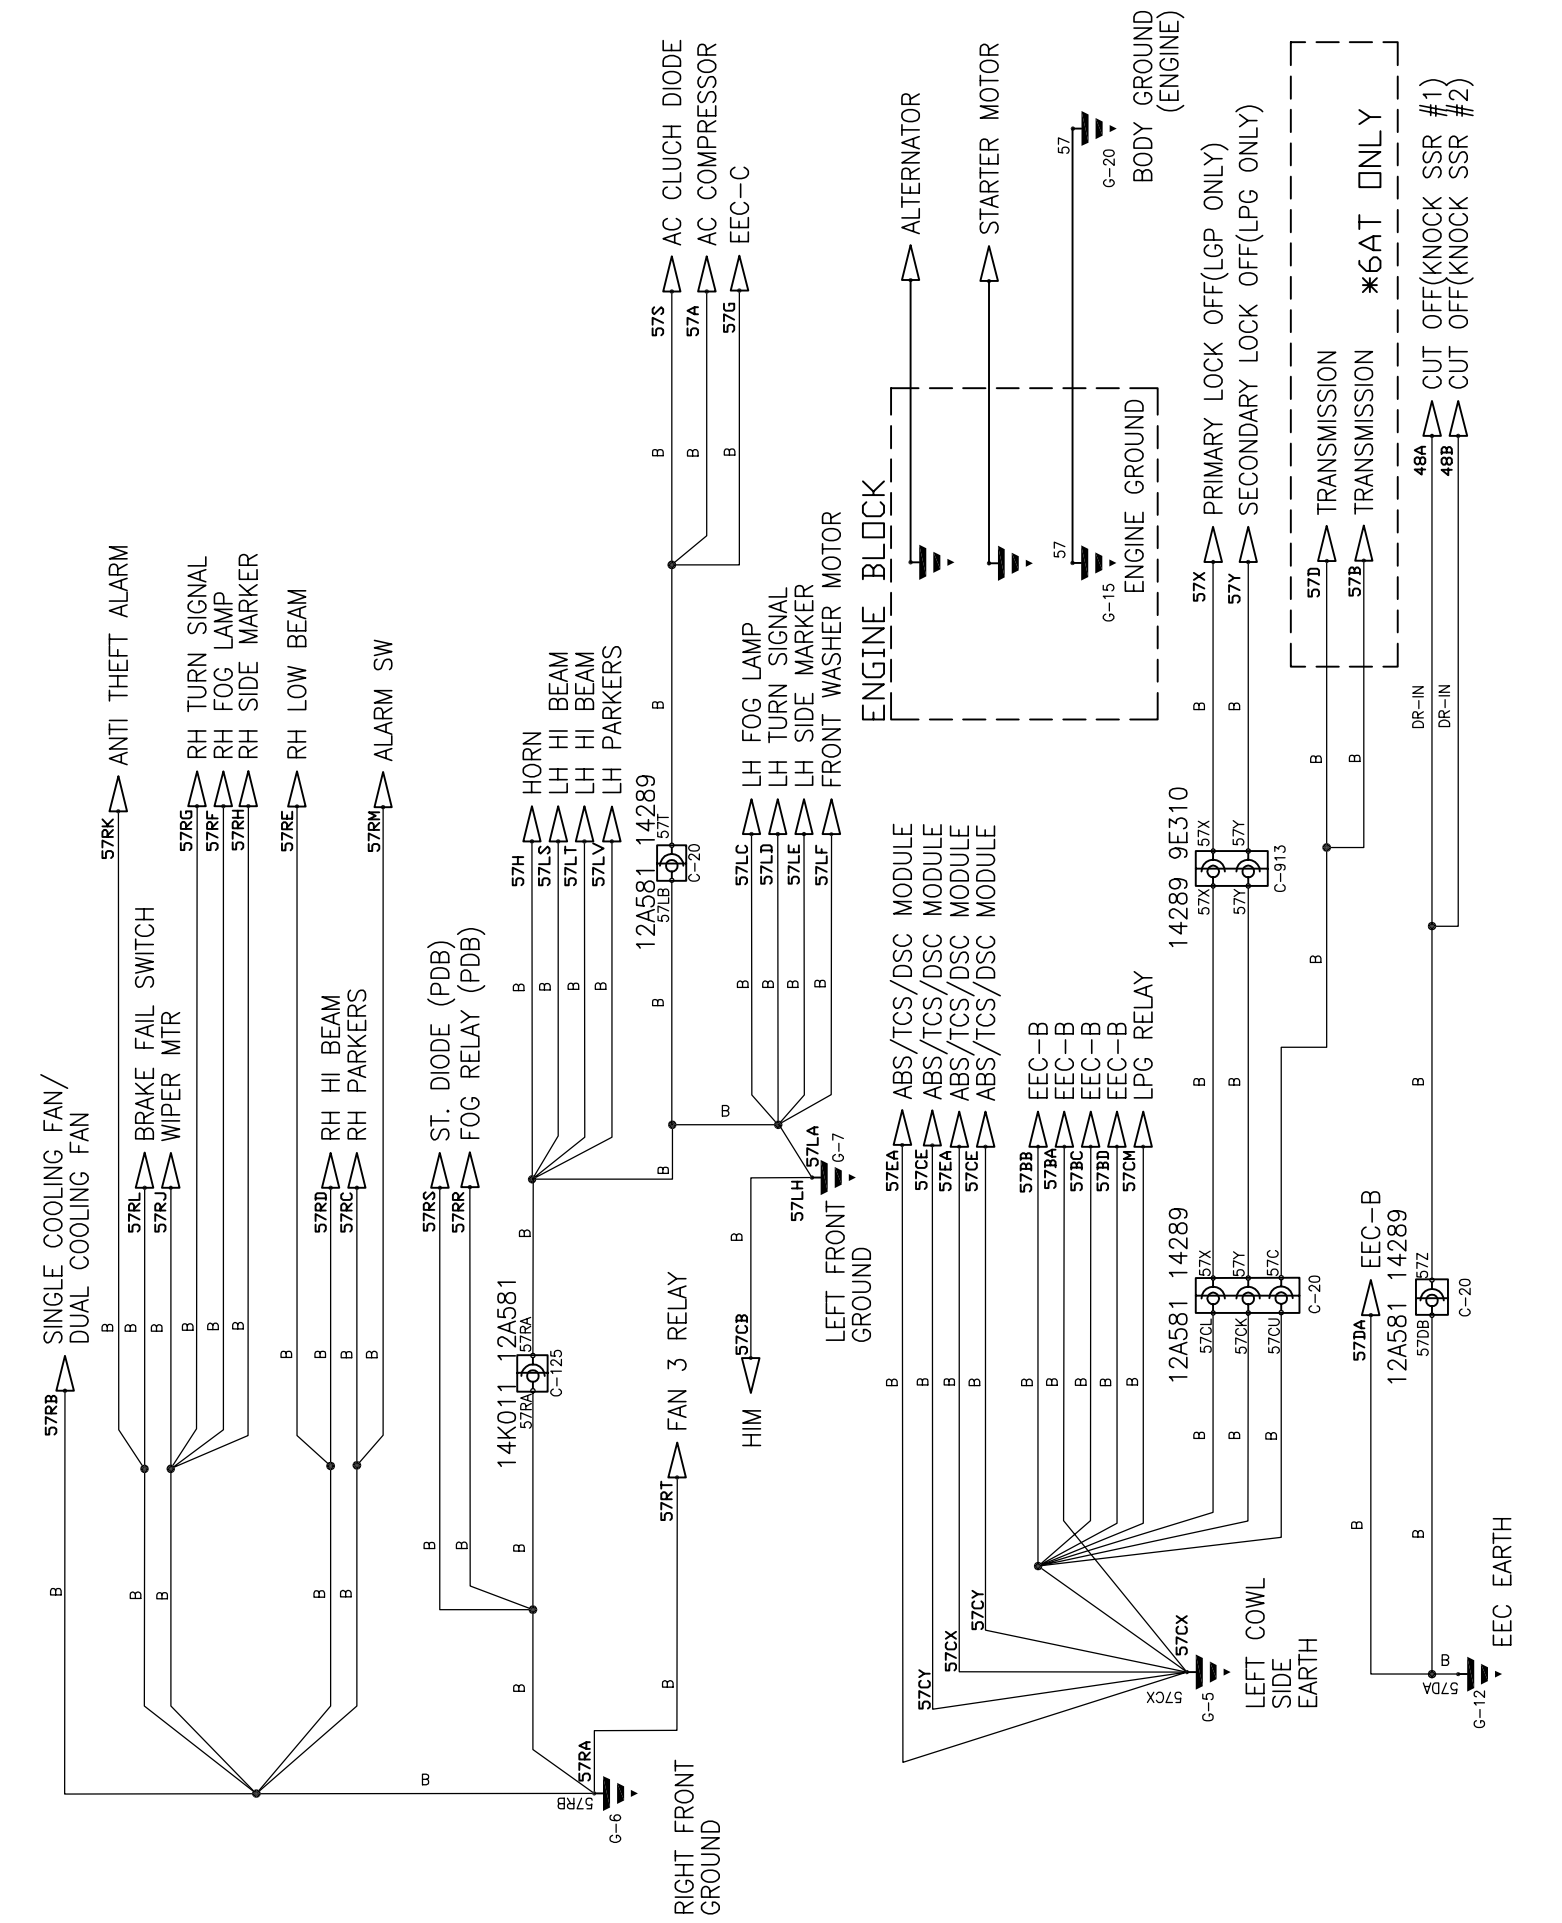
SINGLE COOLING FAN/
DUAL COOLING FAN
BRAKE FAIL SWITCH
WIPER MTR
RH HI BEAM
RH PARKERS
ST. DIODE (PDB)
FOG RELAY (PDB)
14K011 12A581
FAN 3 RELAY
RIGHT FRONT GROUND
ANTI THEFT ALARM
RH TURN SIGNAL
RH FOG LAMP
RH SIDE MARKER
RH LOW BEAM
ALARM SW
HORN
LH HI BEAM
LH HI BEAM
LH PARKERS
12A581 14289
HIM
LEFT FRONT GROUND
LH FOG LAMP
LH TURN SIGNAL
LH SIDE MARKER
FRONT WASHER MOTOR
AC CLUCH DIODE
AC COMPRESSOR
EEC-C
ENGINE BLOCK
ALTERNATOR
STARTER MOTOR
ENGINE GROUND
BODY GROUND (ENGINE)
ABS/TCS/DSC MODULE
ABS/TCS/DSC MODULE
ABS/TCS/DSC MODULE
ABS/TCS/DSC MODULE
EEC-B
EEC-B
EEC-B
EEC-B
LPG RELAY
12A581 14289
LEFT COWL SIDE EARTH
14289 9E310
PRIMARY LOCK OFF(LGP ONLY)
SECONDARY LOCK OFF(LPG ONLY)
TRANSMISSION
TRANSMISSION
*6AT ONLY
CUT OFF(KNOCK SSR #1)
CUT OFF(KNOCK SSR #2)
EEC-B
12A581 14289
EEC EARTH

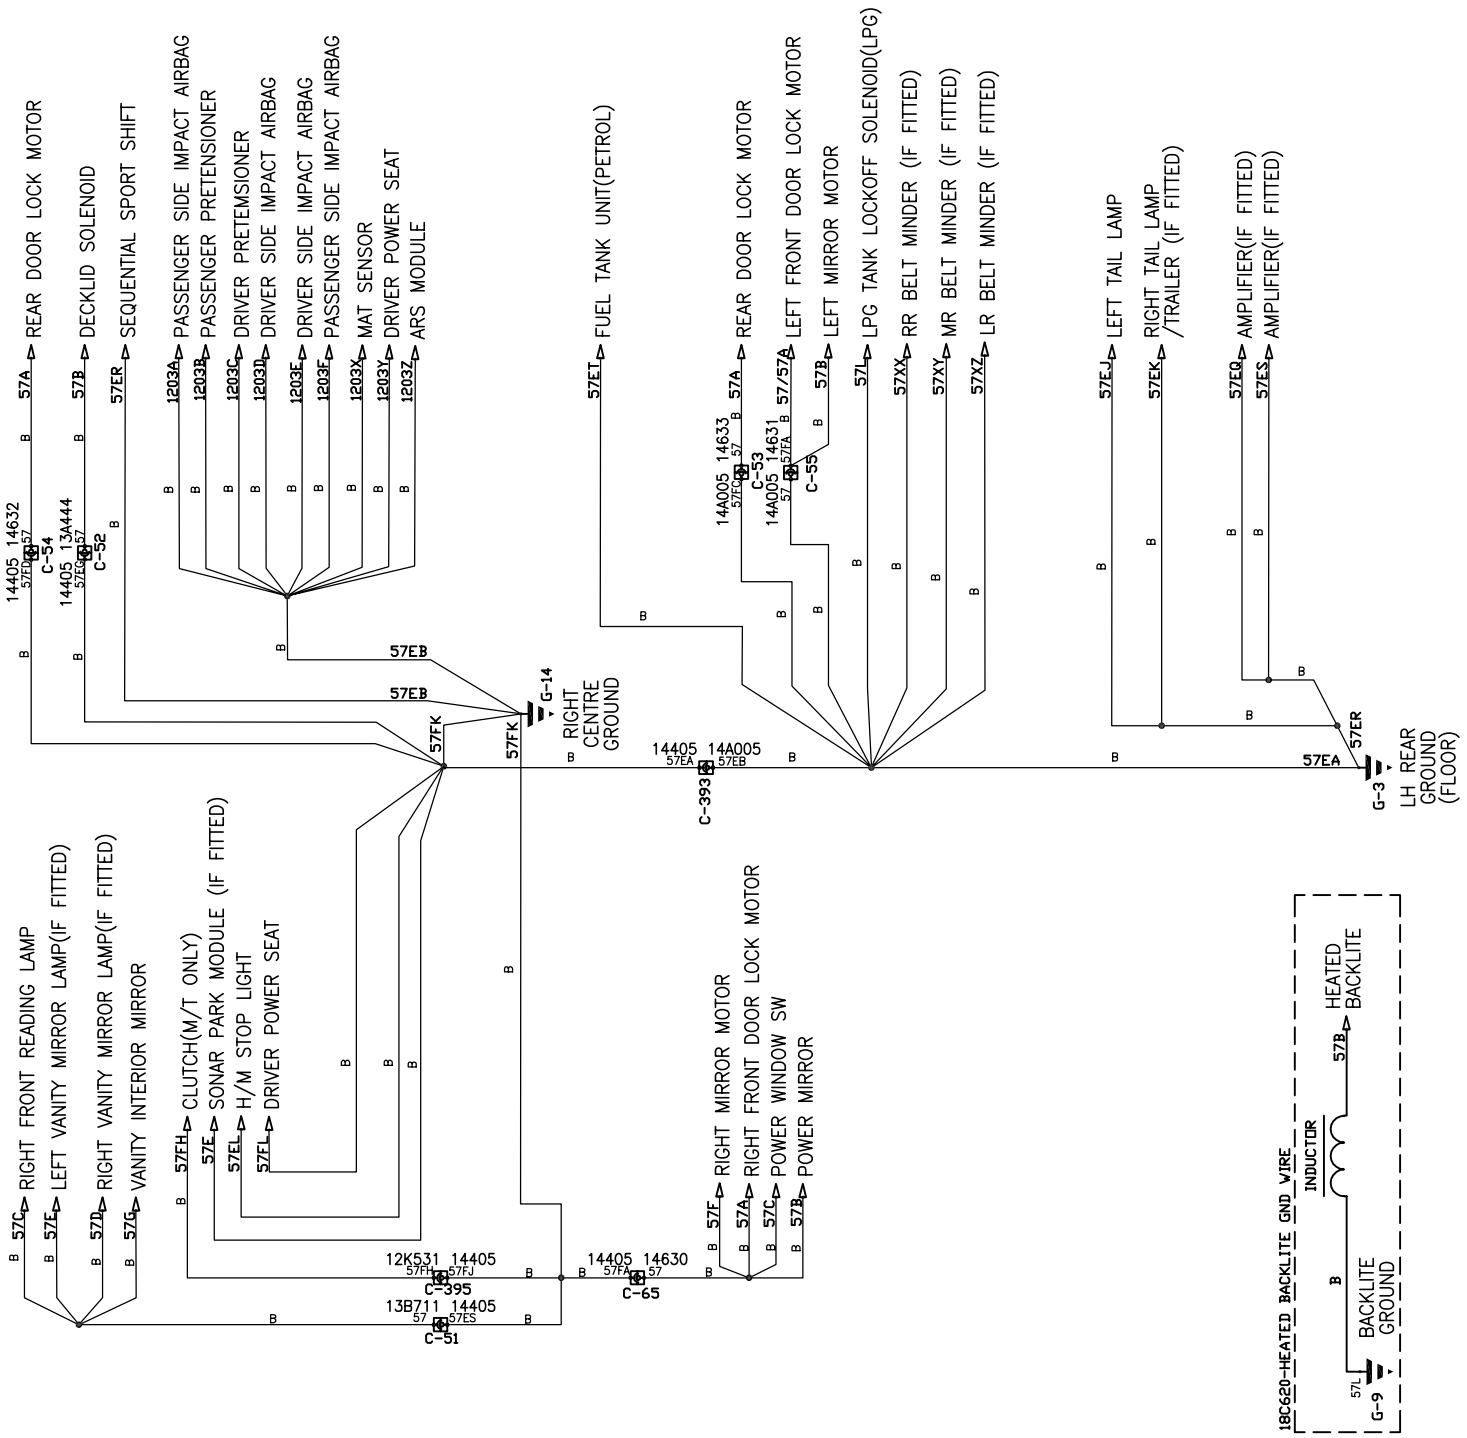

Login Tracking Code

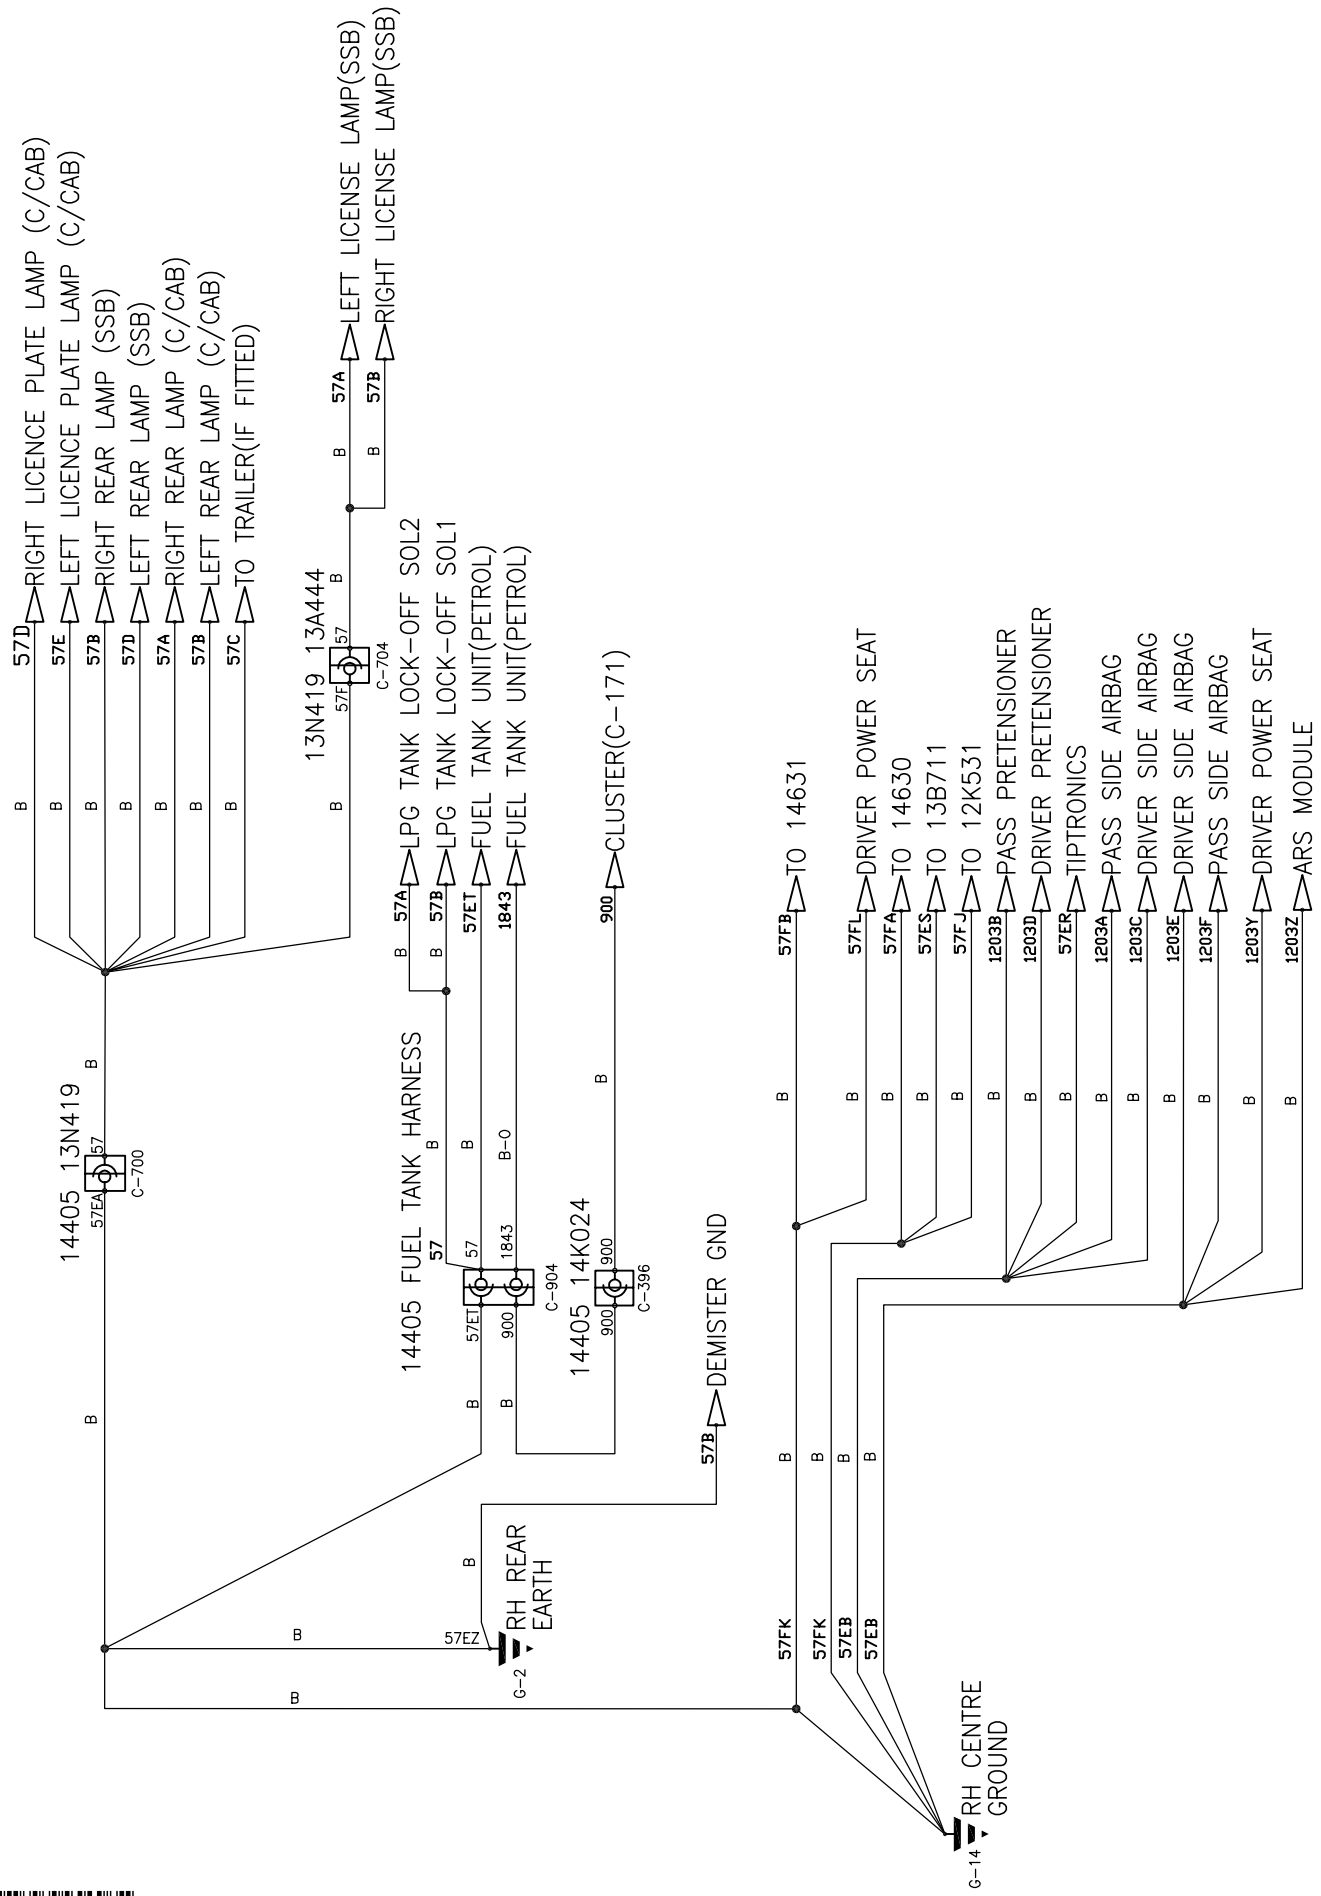
RIGHT LICENCE PLATE LAMP (C/CAB)
LEFT LICENCE PLATE LAMP (C/CAB)
RIGHT REAR LAMP (SSB)
LEFT REAR LAMP (SSB)
RIGHT REAR LAMP (C/CAB)
LEFT REAR LAMP (C/CAB)
TO TRAILER(IF FITTED)
LEFT LICENSE LAMP(SSB)
RIGHT LICENSE LAMP(SSB)
13N419 13A444
C-704
LPG TANK LOCK-OFF SOL2
LPG TANK LOCK-OFF SOL1
FUEL TANK UNIT(PETROL)
FUEL TANK UNIT(PETROL)
CLUSTER(C-171)
14405 13N419
C-700
14405 FUEL TANK HARNESS
C-904
14405 14K024
C-396
DEMISTER GND
RH REAR EARTH
G-2
TO 14631
DRIVER POWER SEAT
TO 14630
TO 13B711
TO 12K531
PASS PRETENSIONER
DRIVER PRETENSIONER
TIPTRONICS
PASS SIDE AIRBAG
DRIVER SIDE AIRBAG
DRIVER SIDE AIRBAG
PASS SIDE AIRBAG
DRIVER POWER SEAT
ARS MODULE
RH CENTRE GROUND
G-14

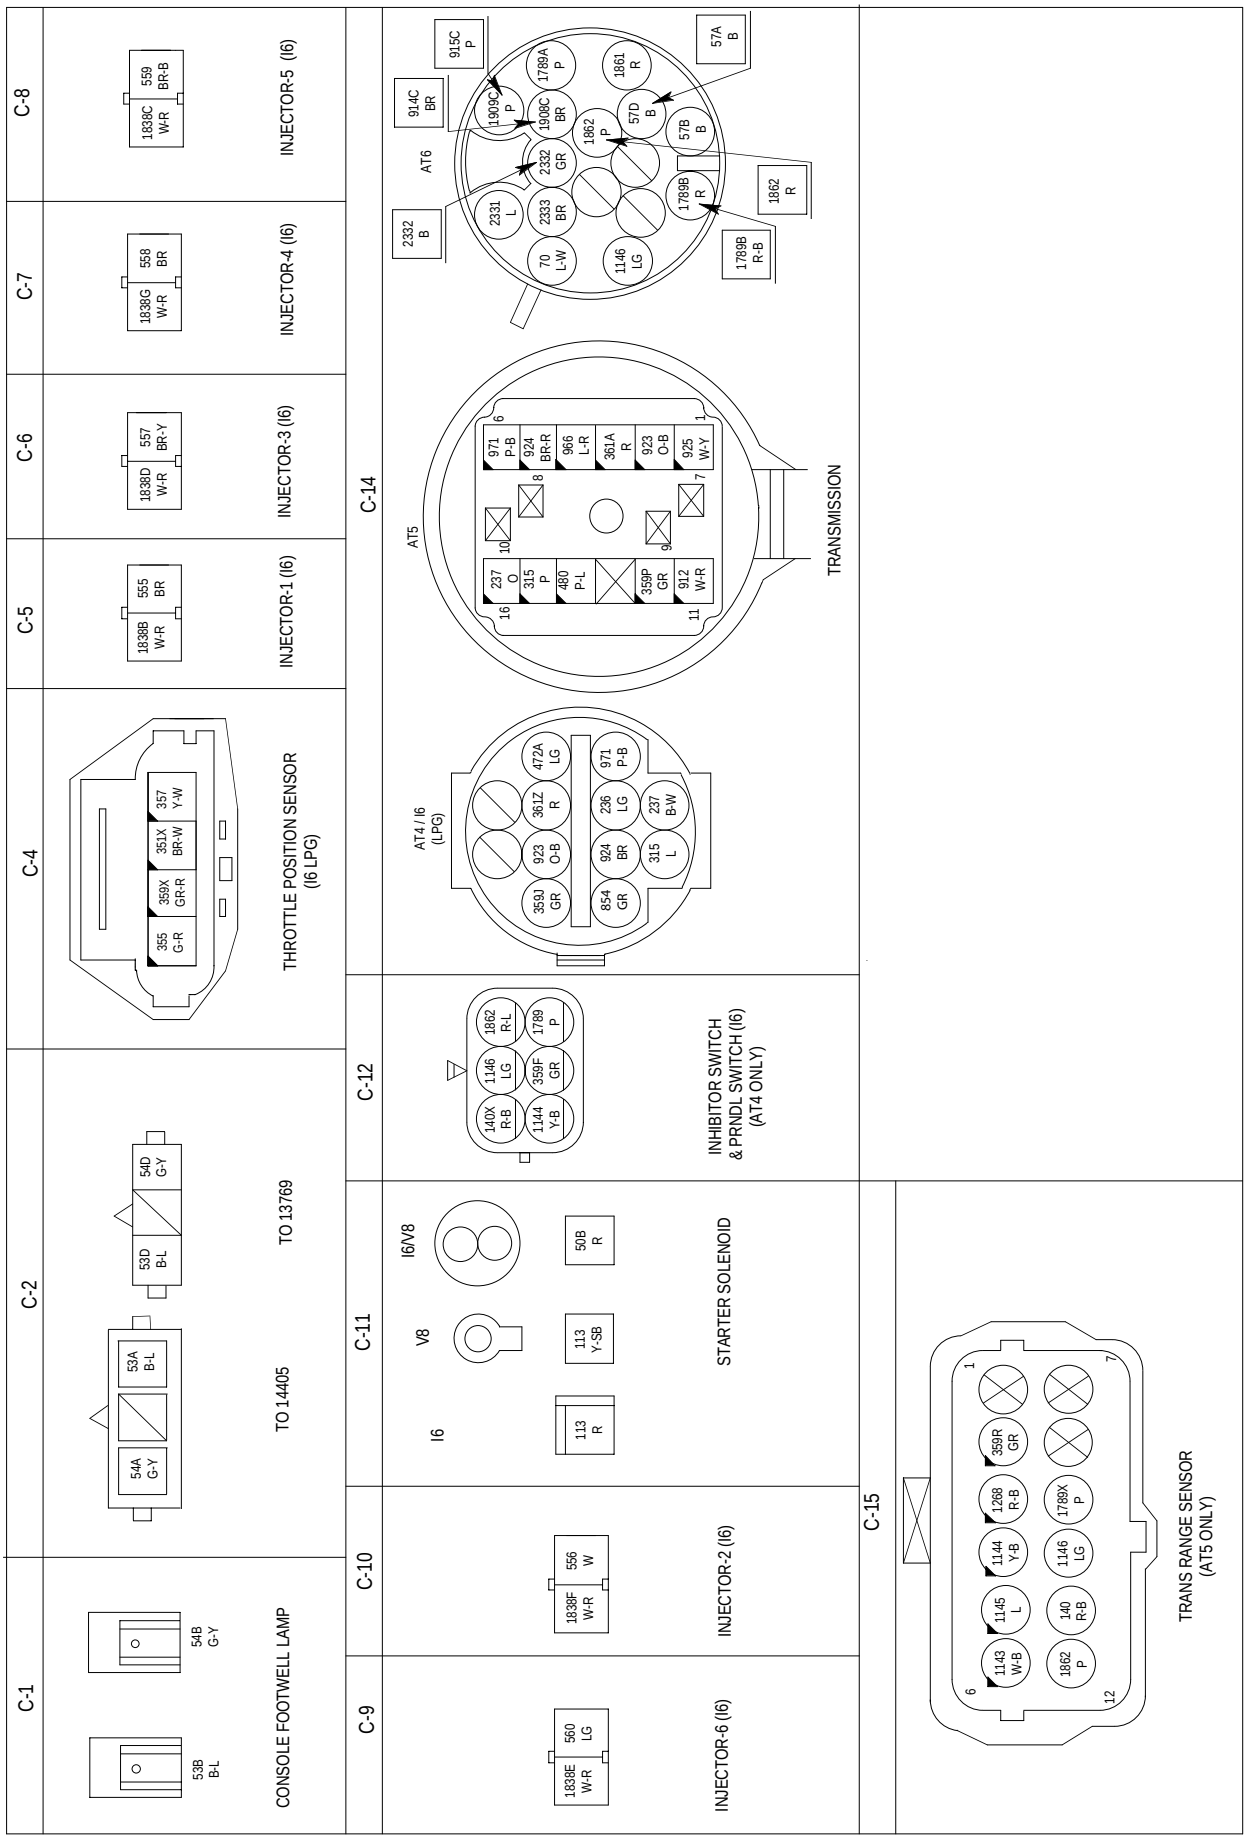

Login Tracking Code

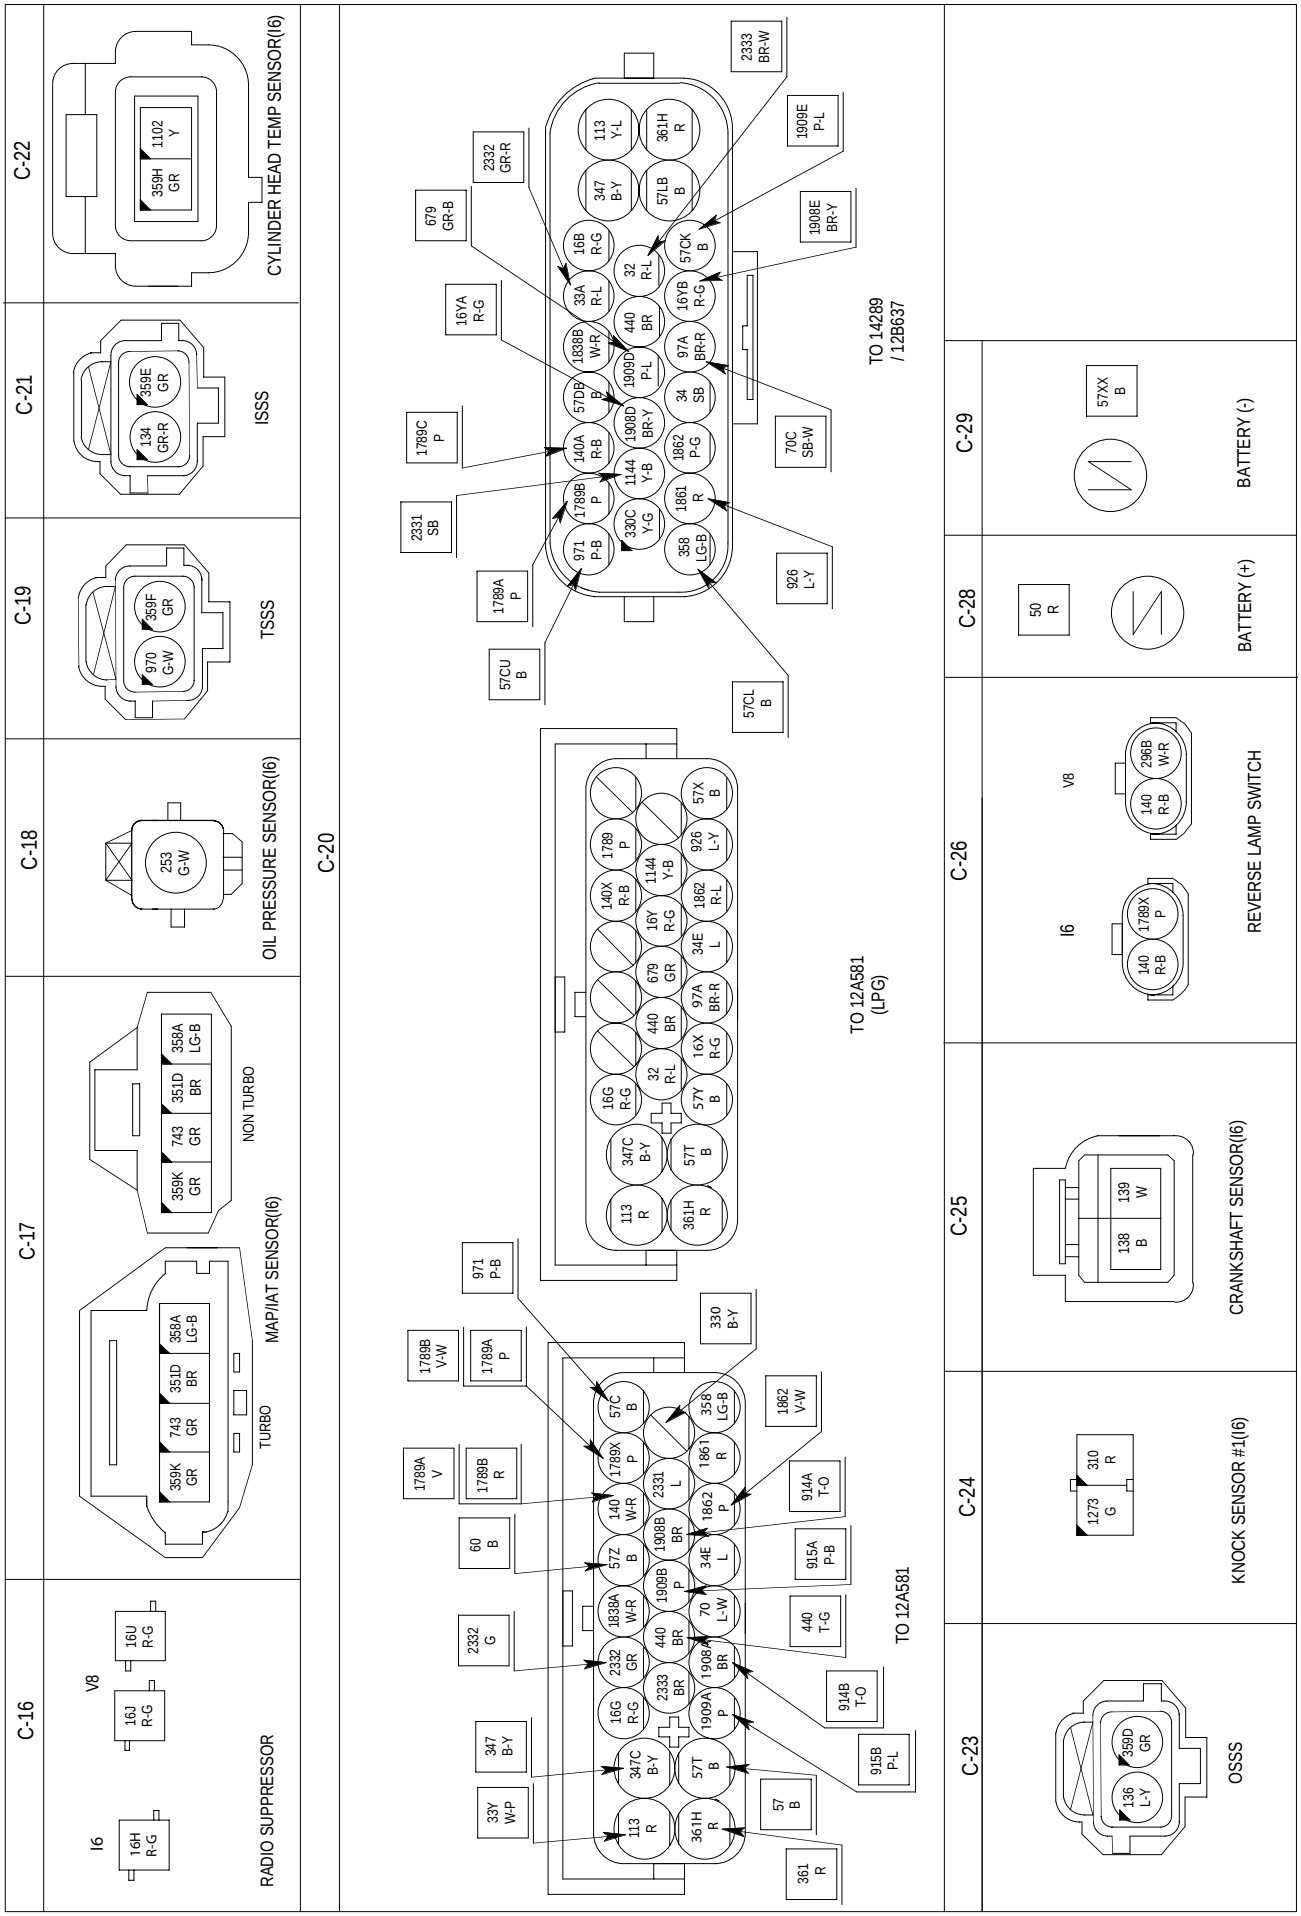

Login Tracking Code

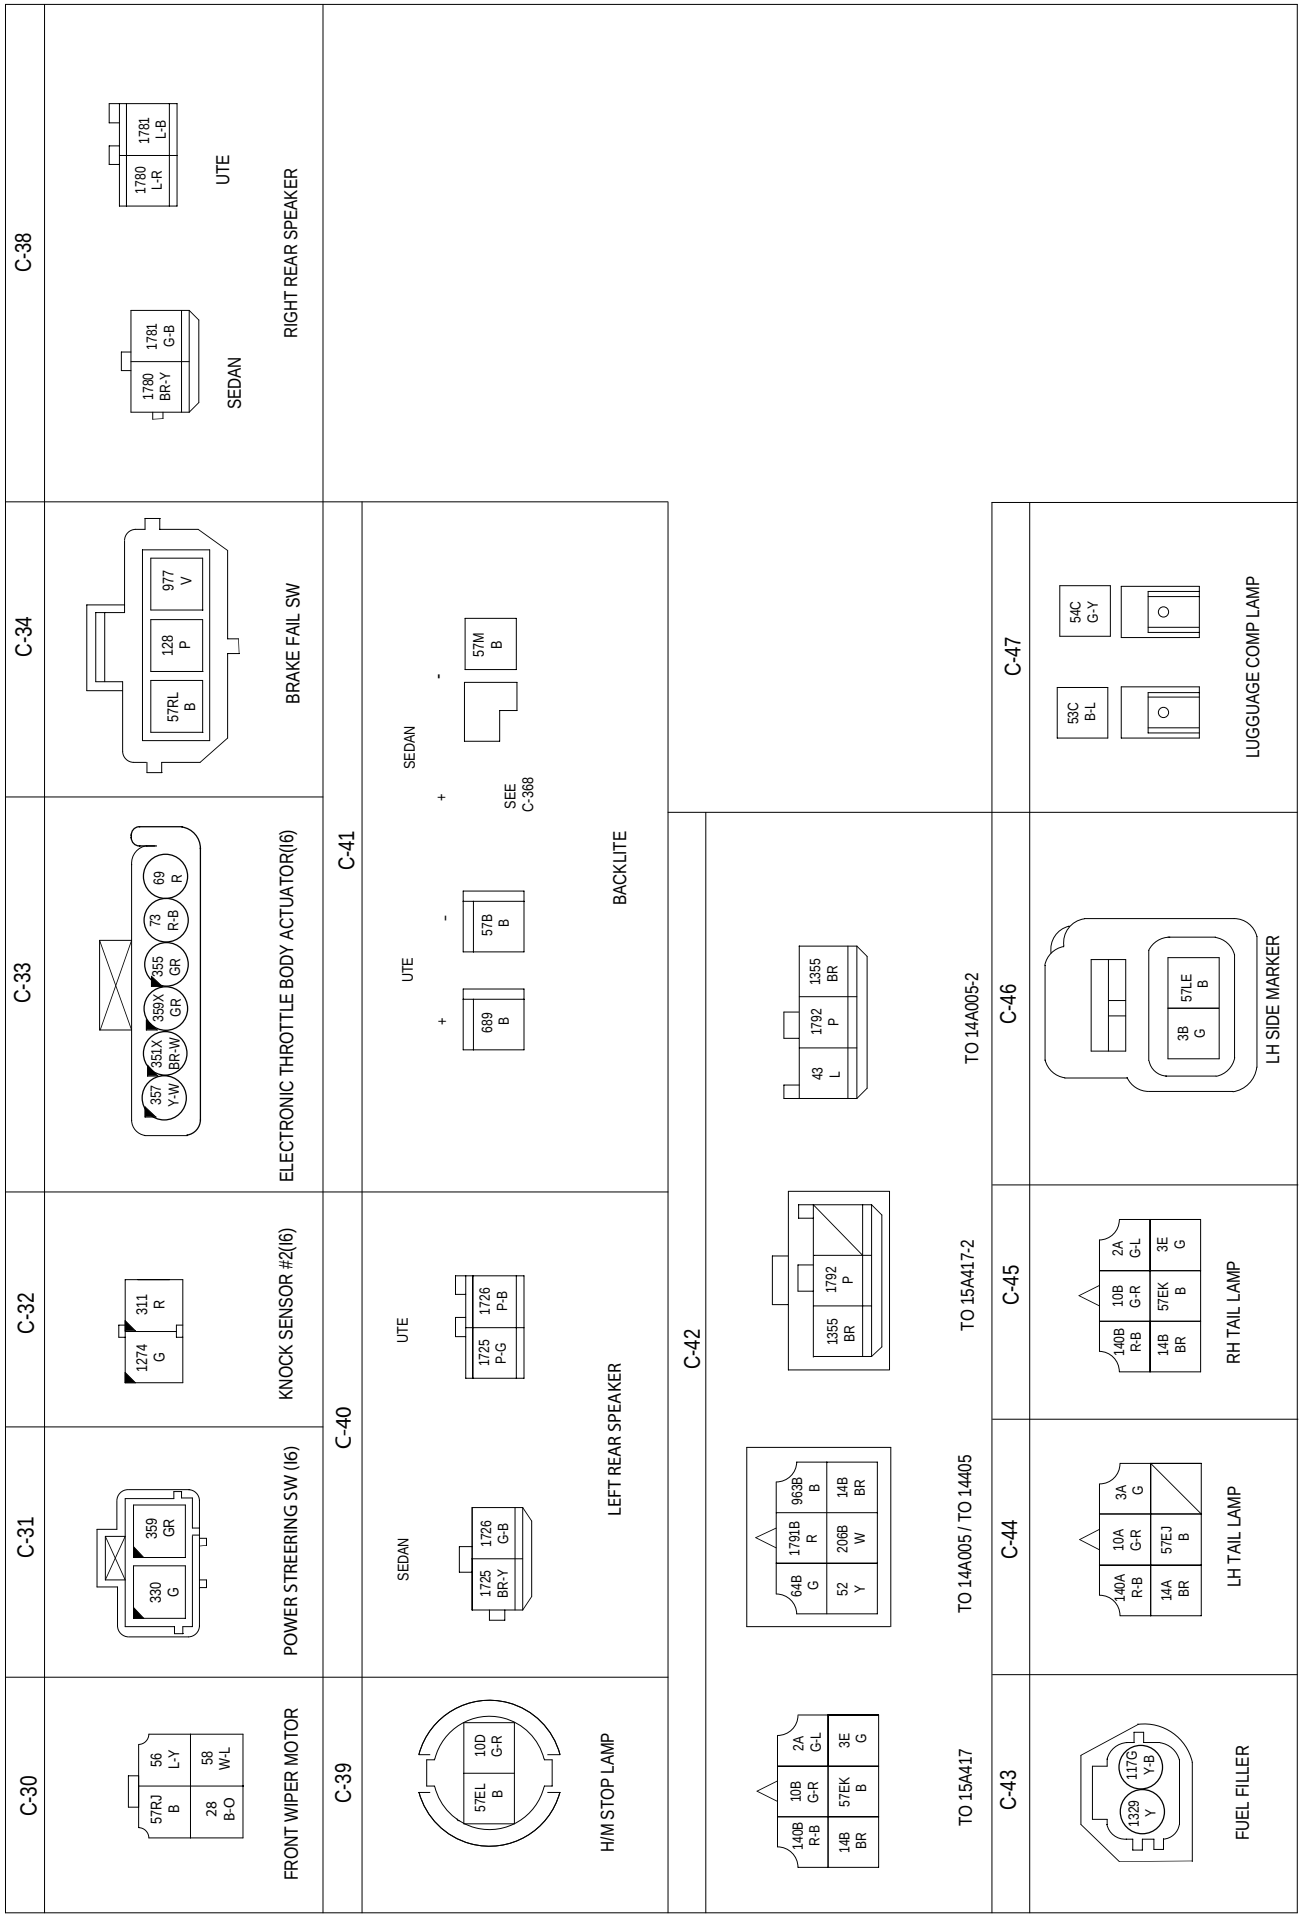
C-30
FRONT WIPER MOTOR
57RJ B
56 L-Y
28 B-O
58 W-L
C-31
POWER STREERING SW (I6)
330 G
359 GR
C-32
KNOCK SENSOR #2(I6)
1274 G
311 R
C-33
ELECTRONIC THROTTLE BODY ACTUATOR(I6)
357 Y-W
351X BR-W
359X GR
355 GR
73 R-B
69 R
C-34
BRAKE FAIL SW
57RL B
128 P
977 V
C-38
RIGHT REAR SPEAKER
SEDAN
1780 BR-Y
1781 G-B
UTE
1780 L-R
1781 L-B
C-39
H/M STOP LAMP
57EL B
10D G-R
C-40
LEFT REAR SPEAKER
SEDAN
1725 BR-Y
1726 G-B
UTE
1725 P-G
1726 P-B
C-41
BACKLITE
UTE
+
689 B
-
57B B
SEDAN
+
SEE C-368
-
57M B
C-42
TO 15A417
140B R-B
10B G-R
2A G-L
14B BR
57EK B
3E G
TO 14A005 / TO 14405
64B G
1791B R
963B B
52 Y
206B W
14B BR
TO 15A417-2
1355 BR
1792 P
TO 14A005-2
43 L
1792 P
1355 BR
C-43
FUEL FILLER
1329 Y
117G Y-B
C-44
LH TAIL LAMP
140A R-B
10A G-R
3A G
14A BR
57EJ B
C-45
RH TAIL LAMP
140B R-B
10B G-R
2A G-L
14B BR
57EK B
3E G
C-46
LH SIDE MARKER
3B G
57LE B
C-47
LUGGUAGE COMP LAMP
53C B-L
54C G-Y

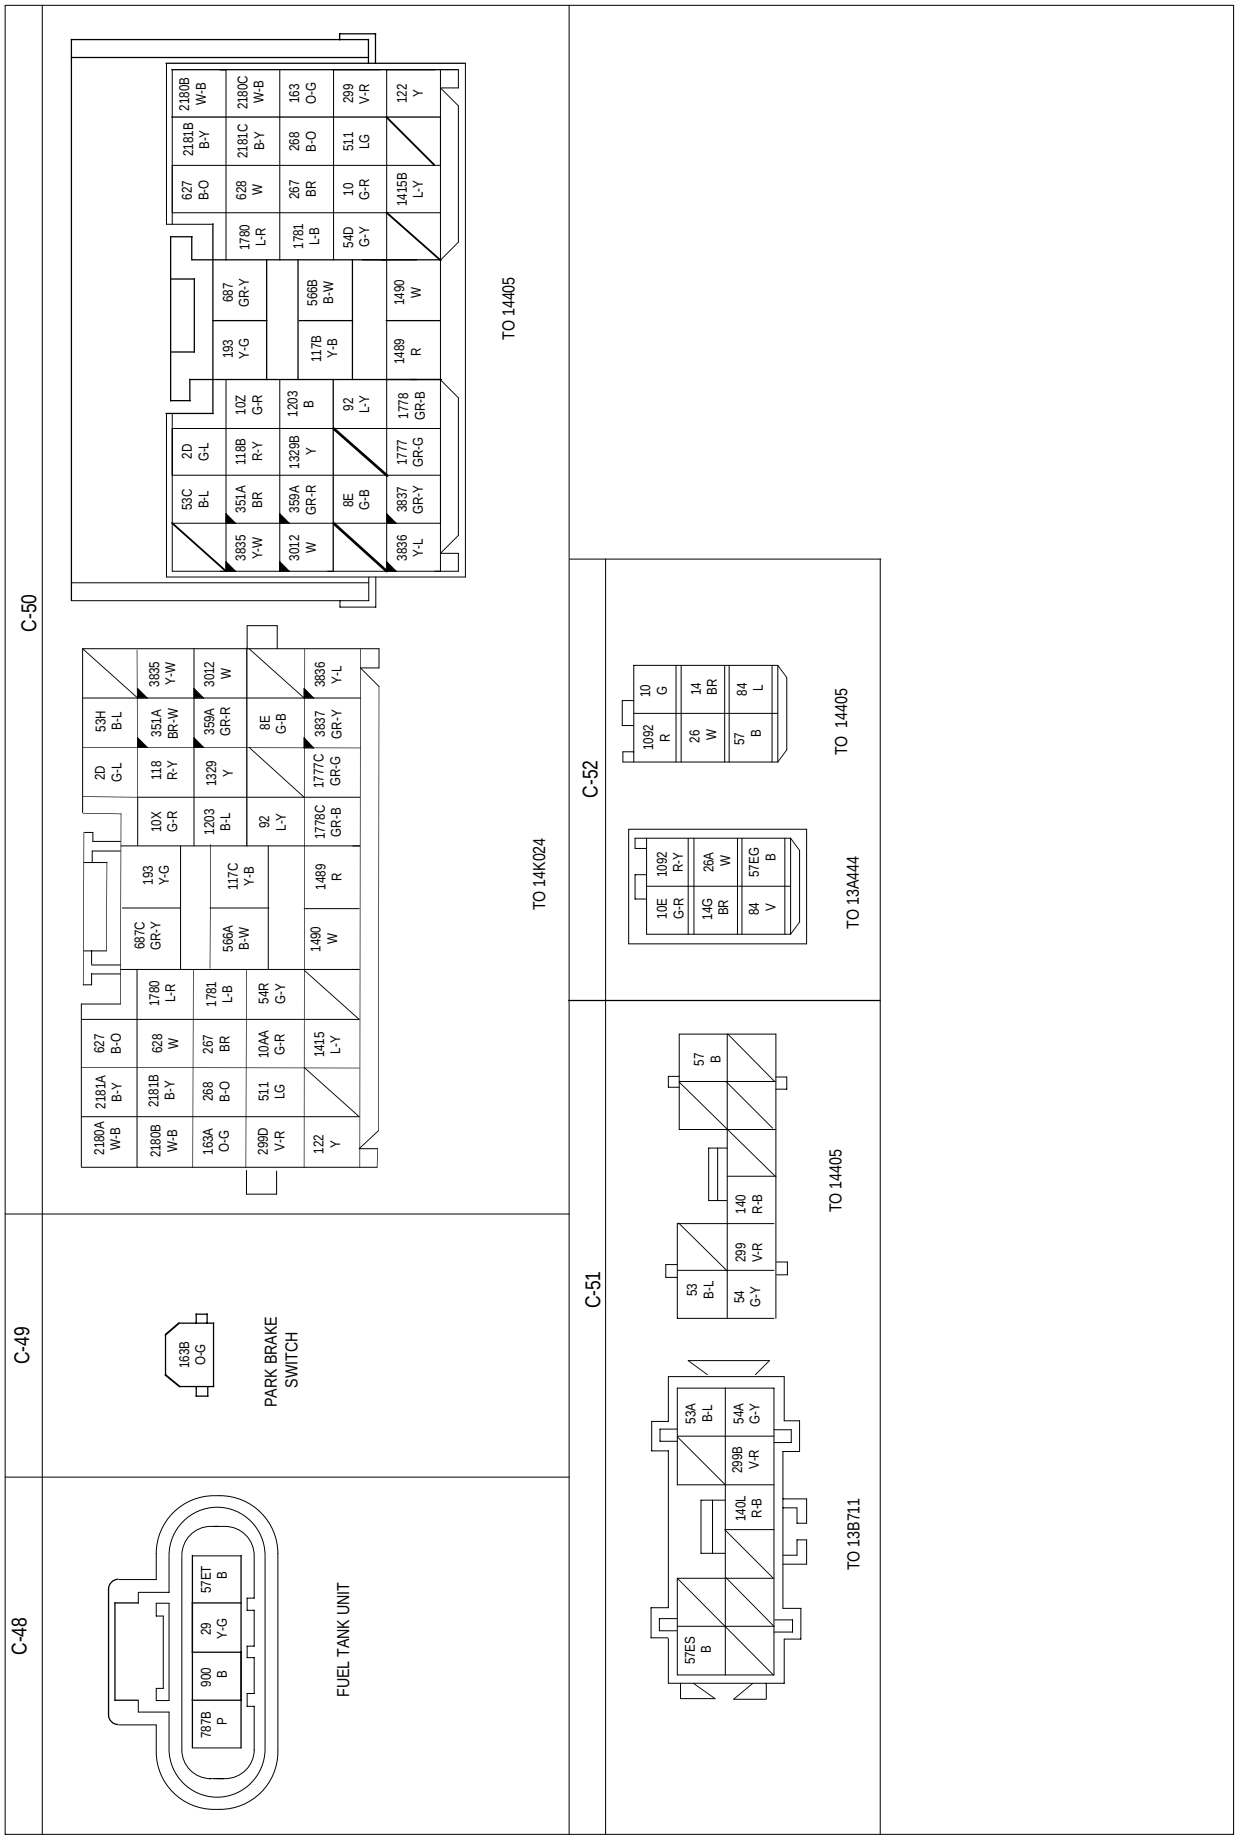

Login Tracking Code

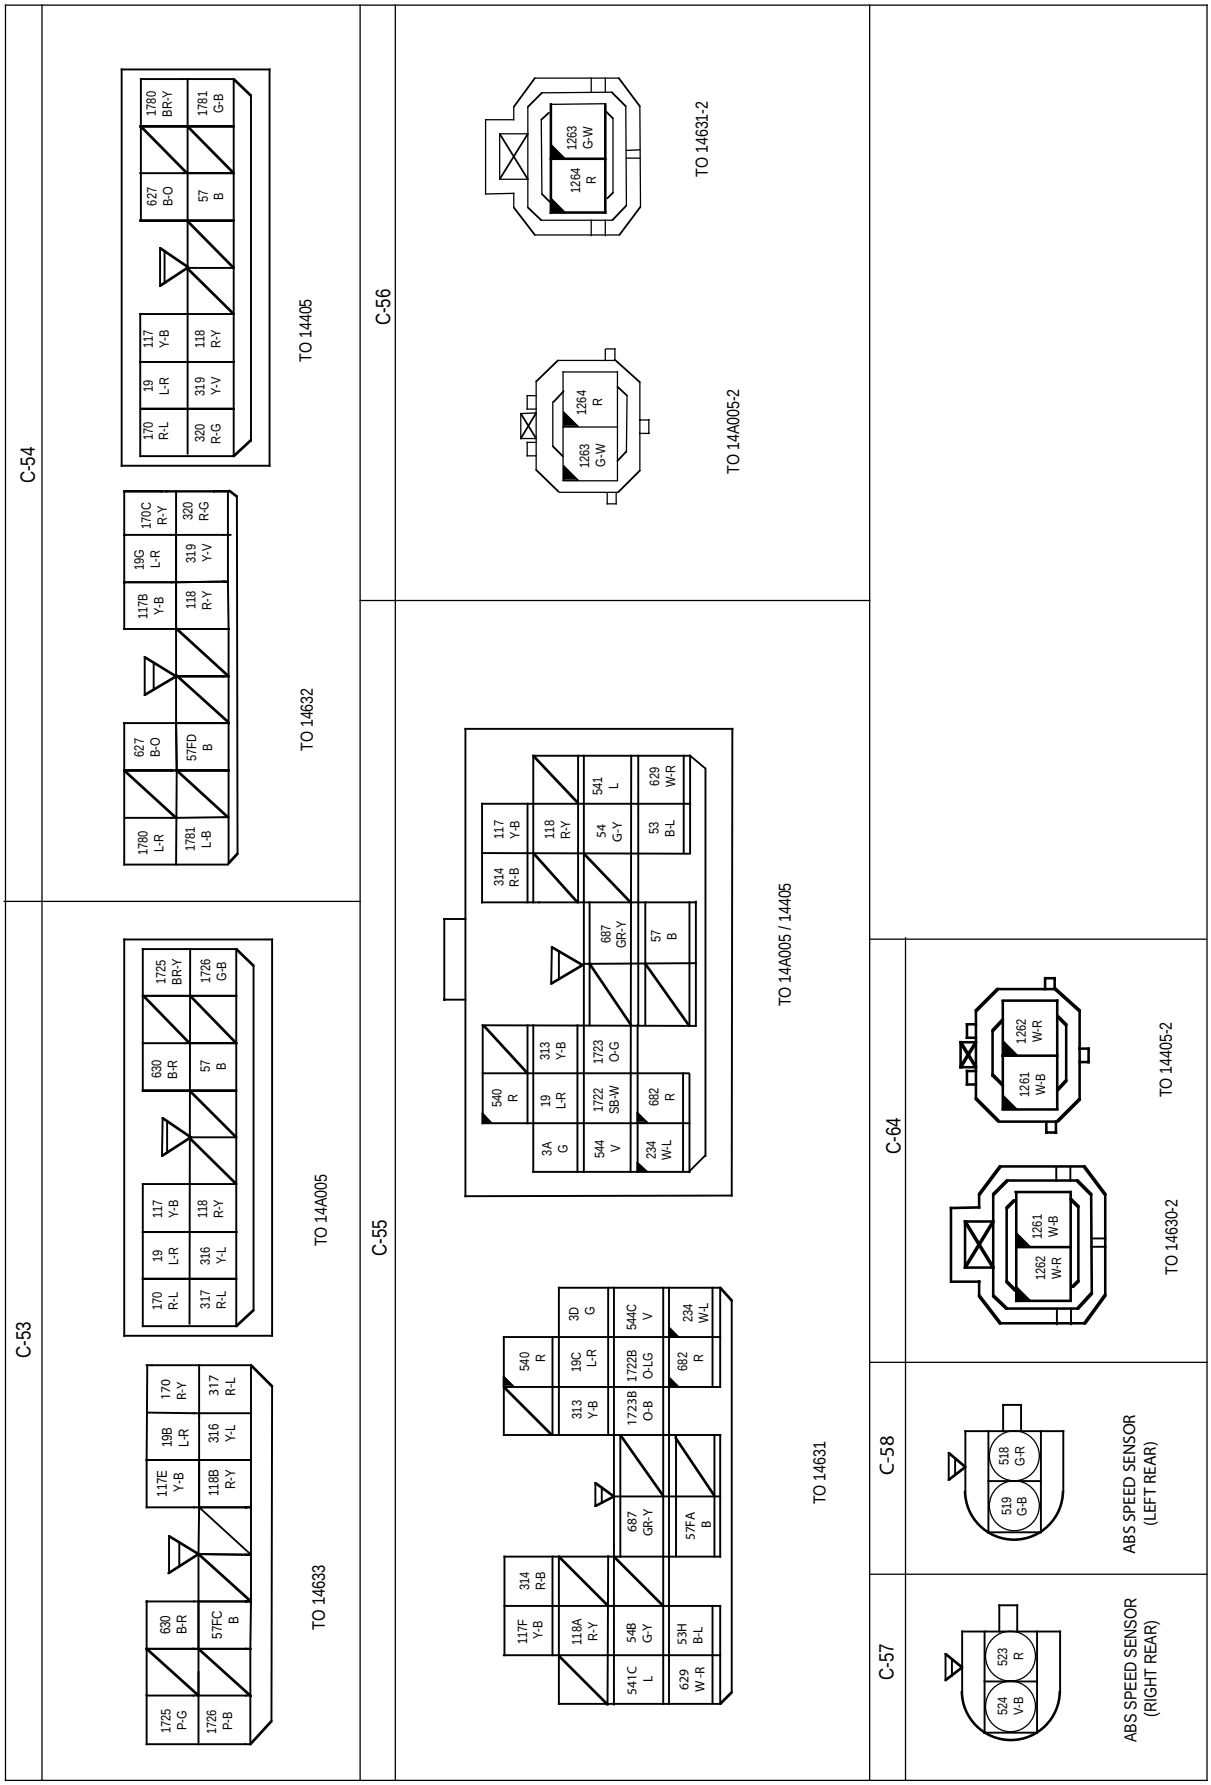

Login Tracking Code

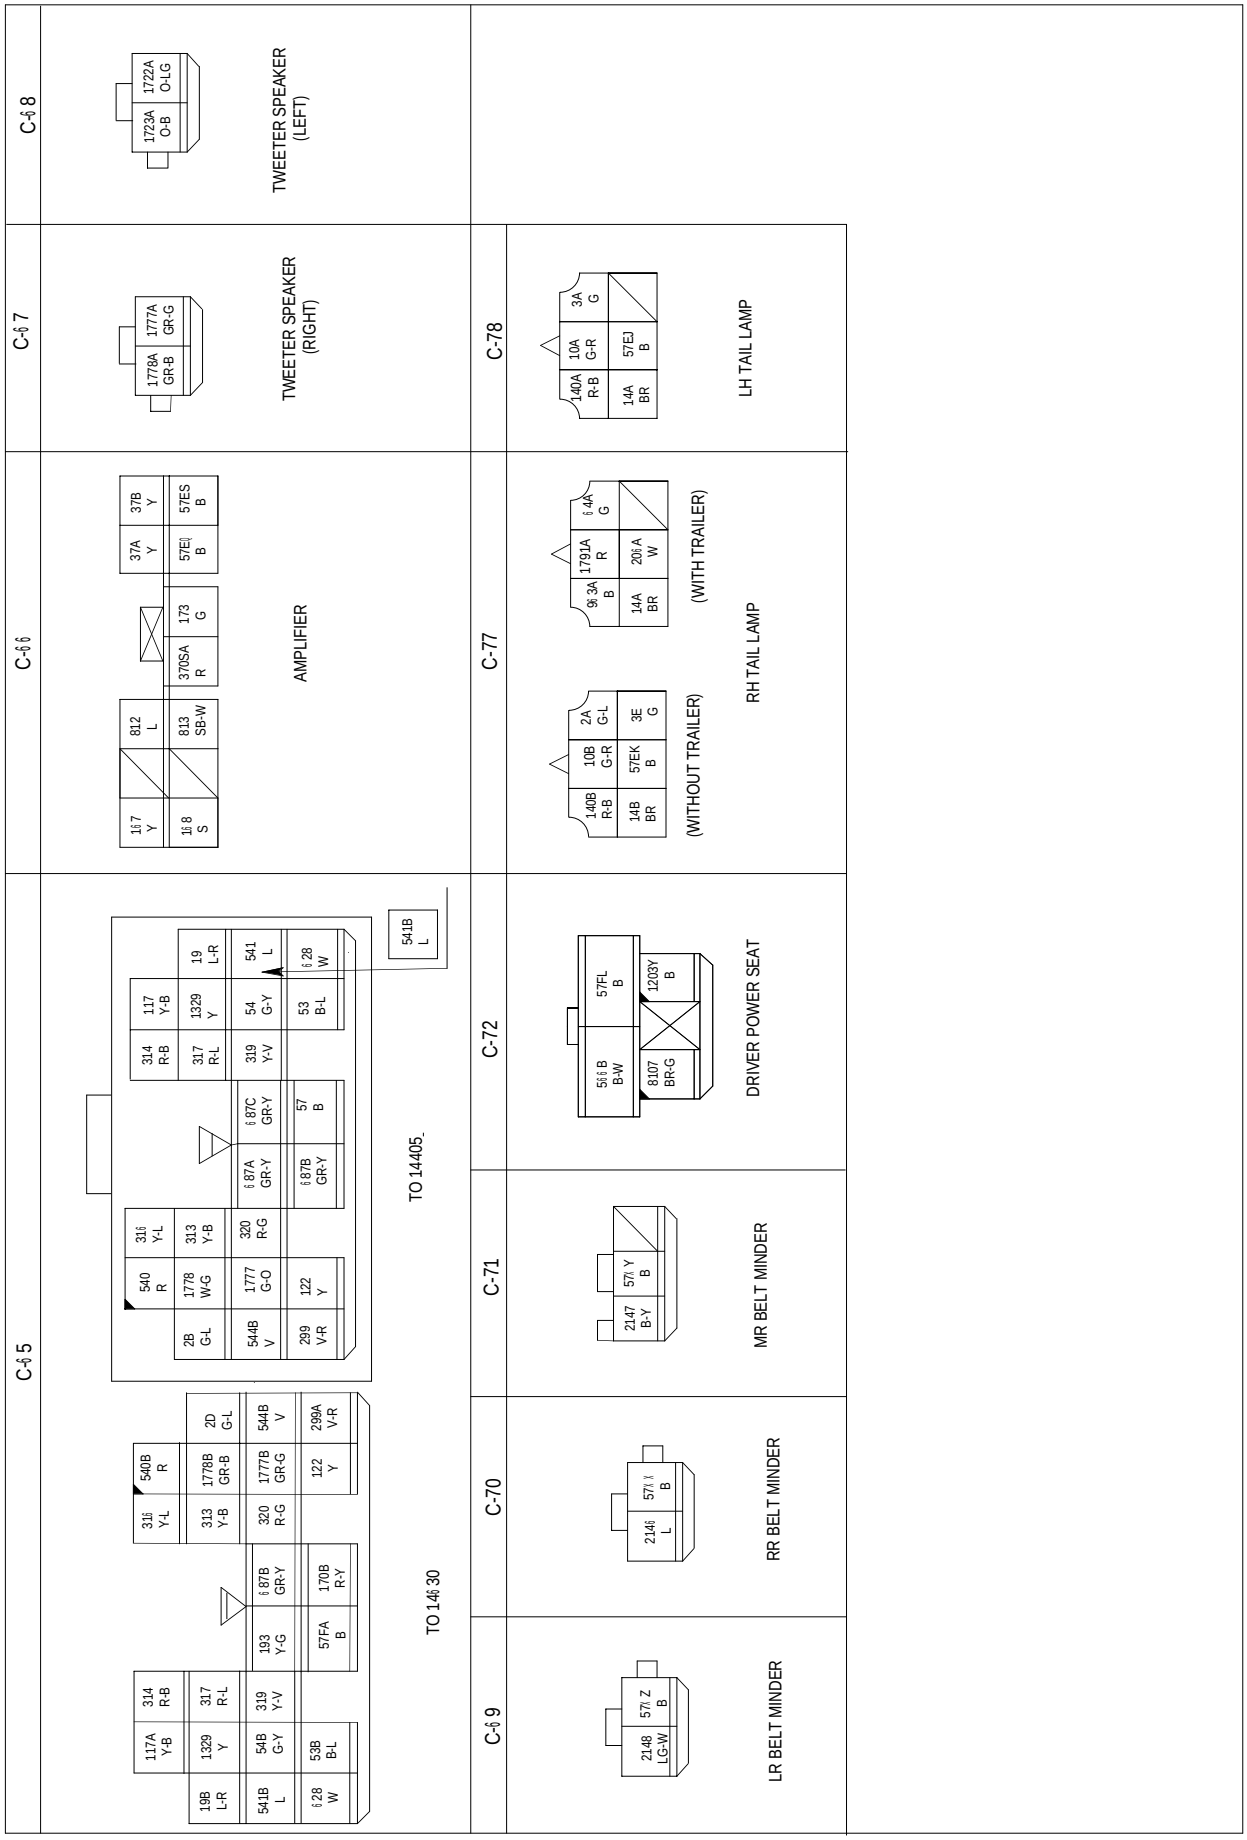

Login Tracking Code

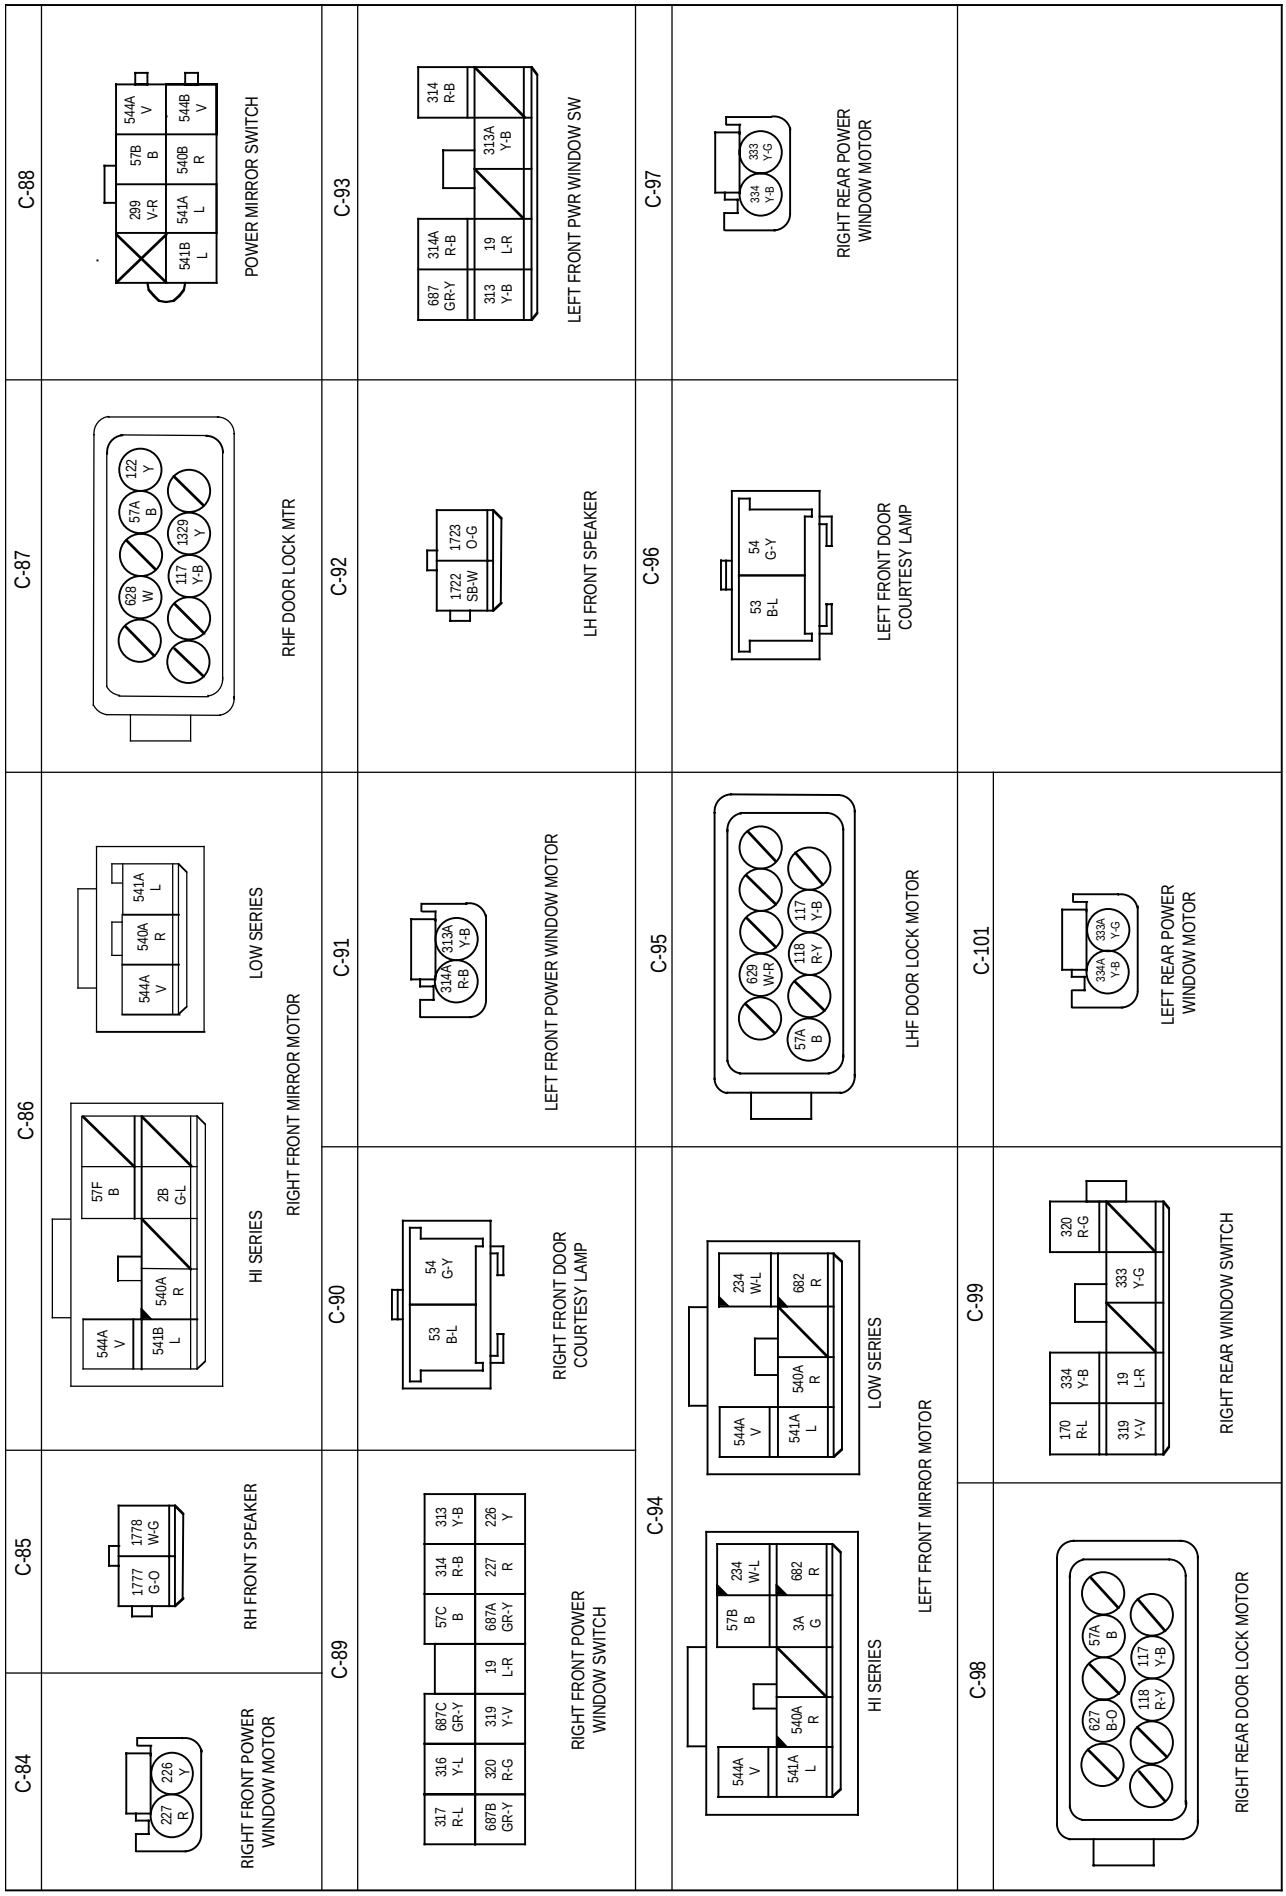

Login Tracking Code

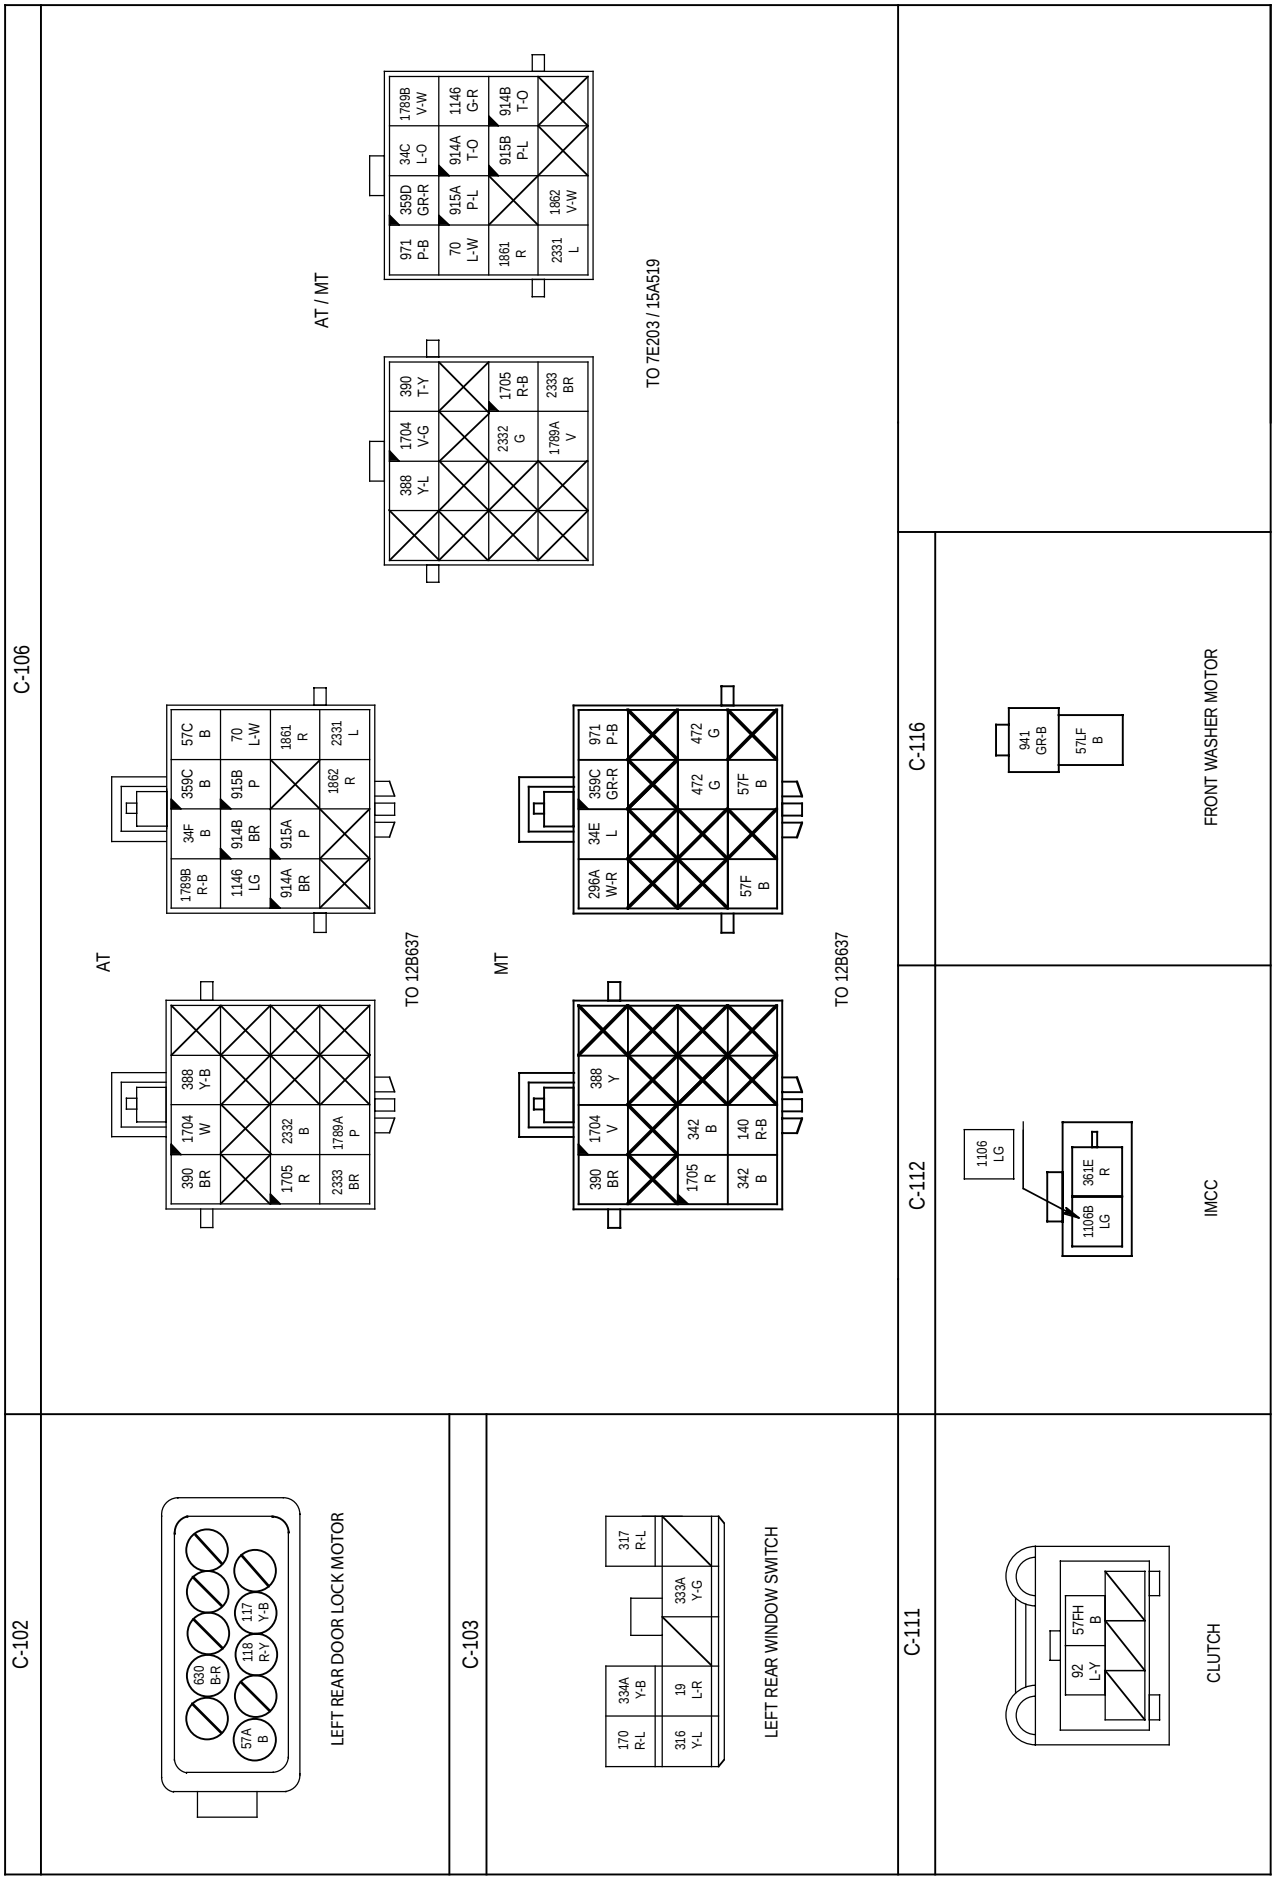

Login Tracking Code

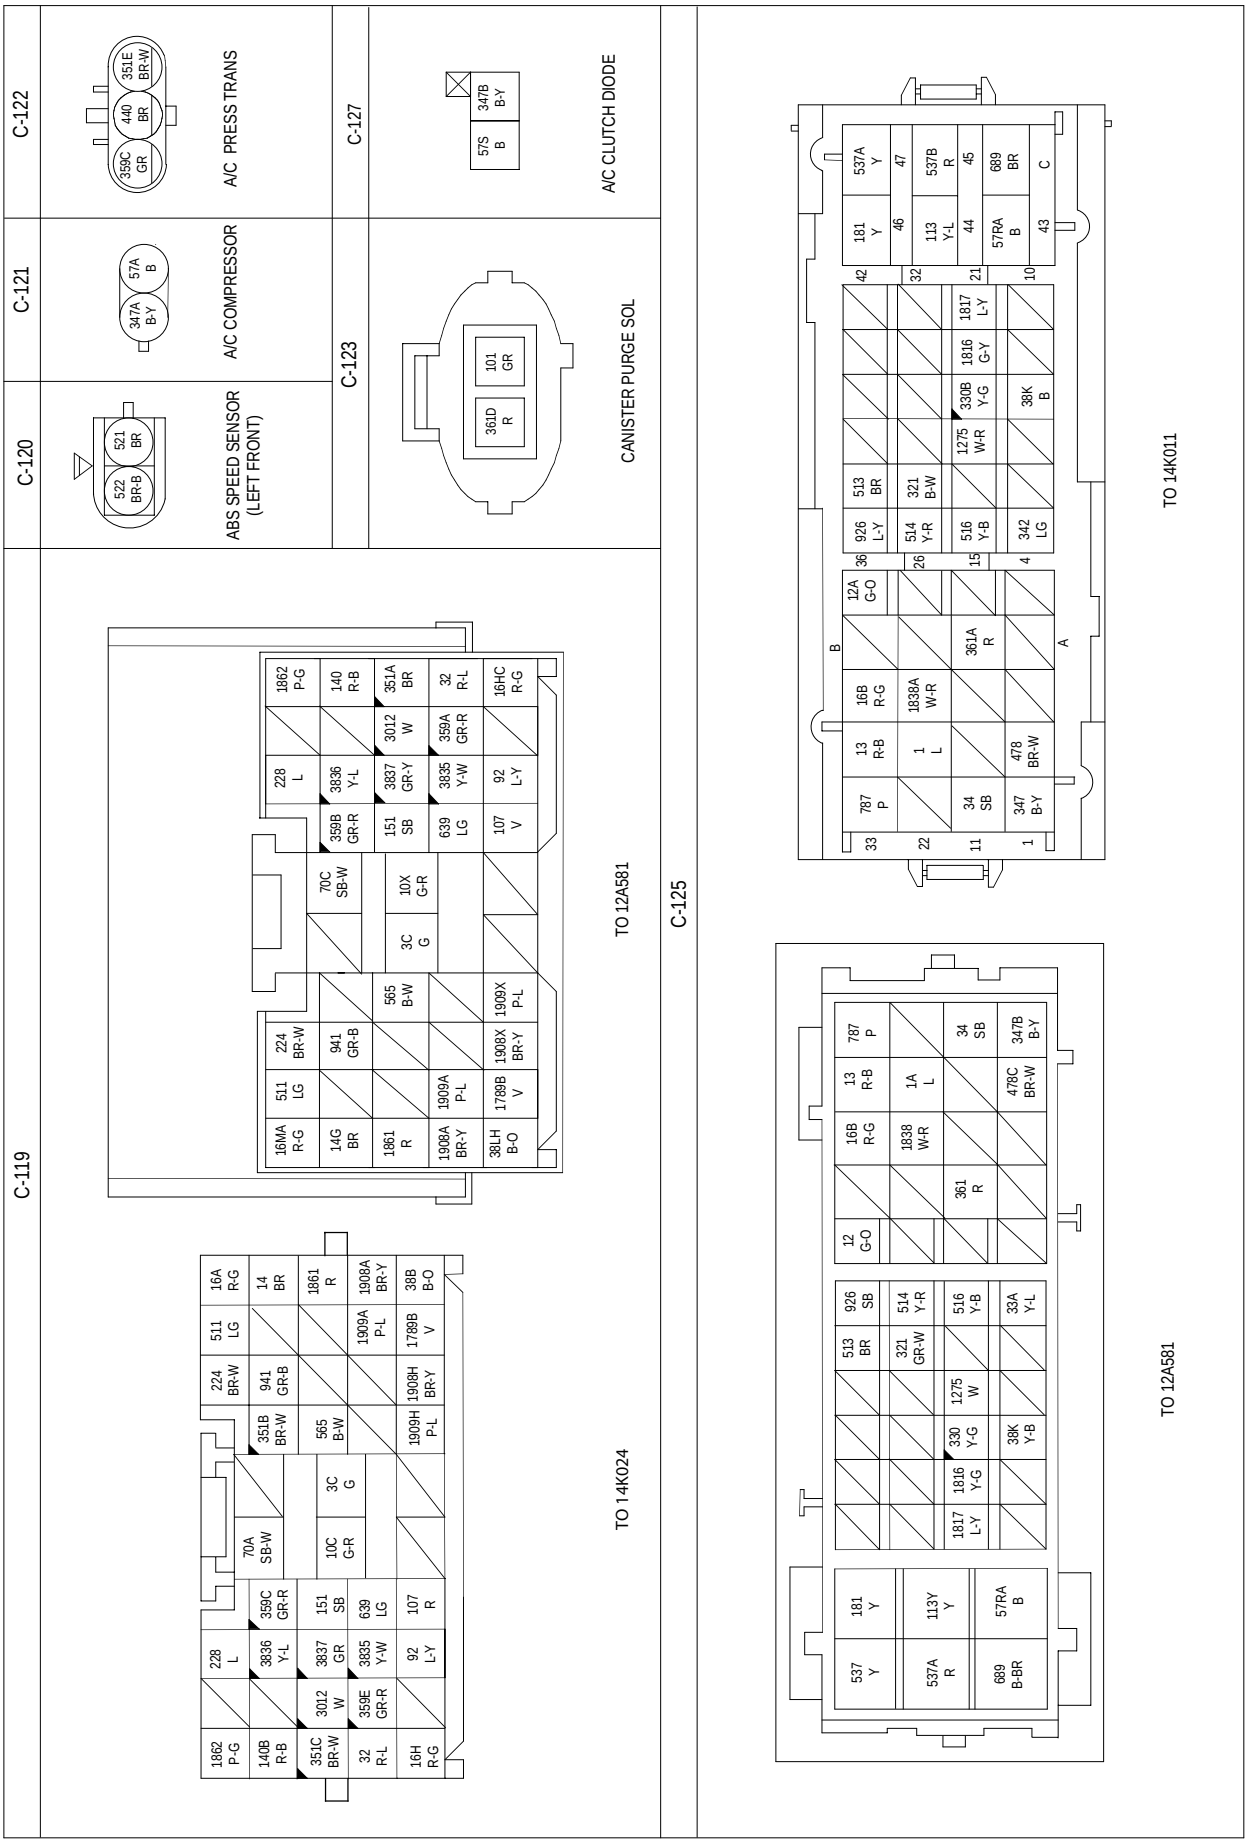

Login Tracking Code

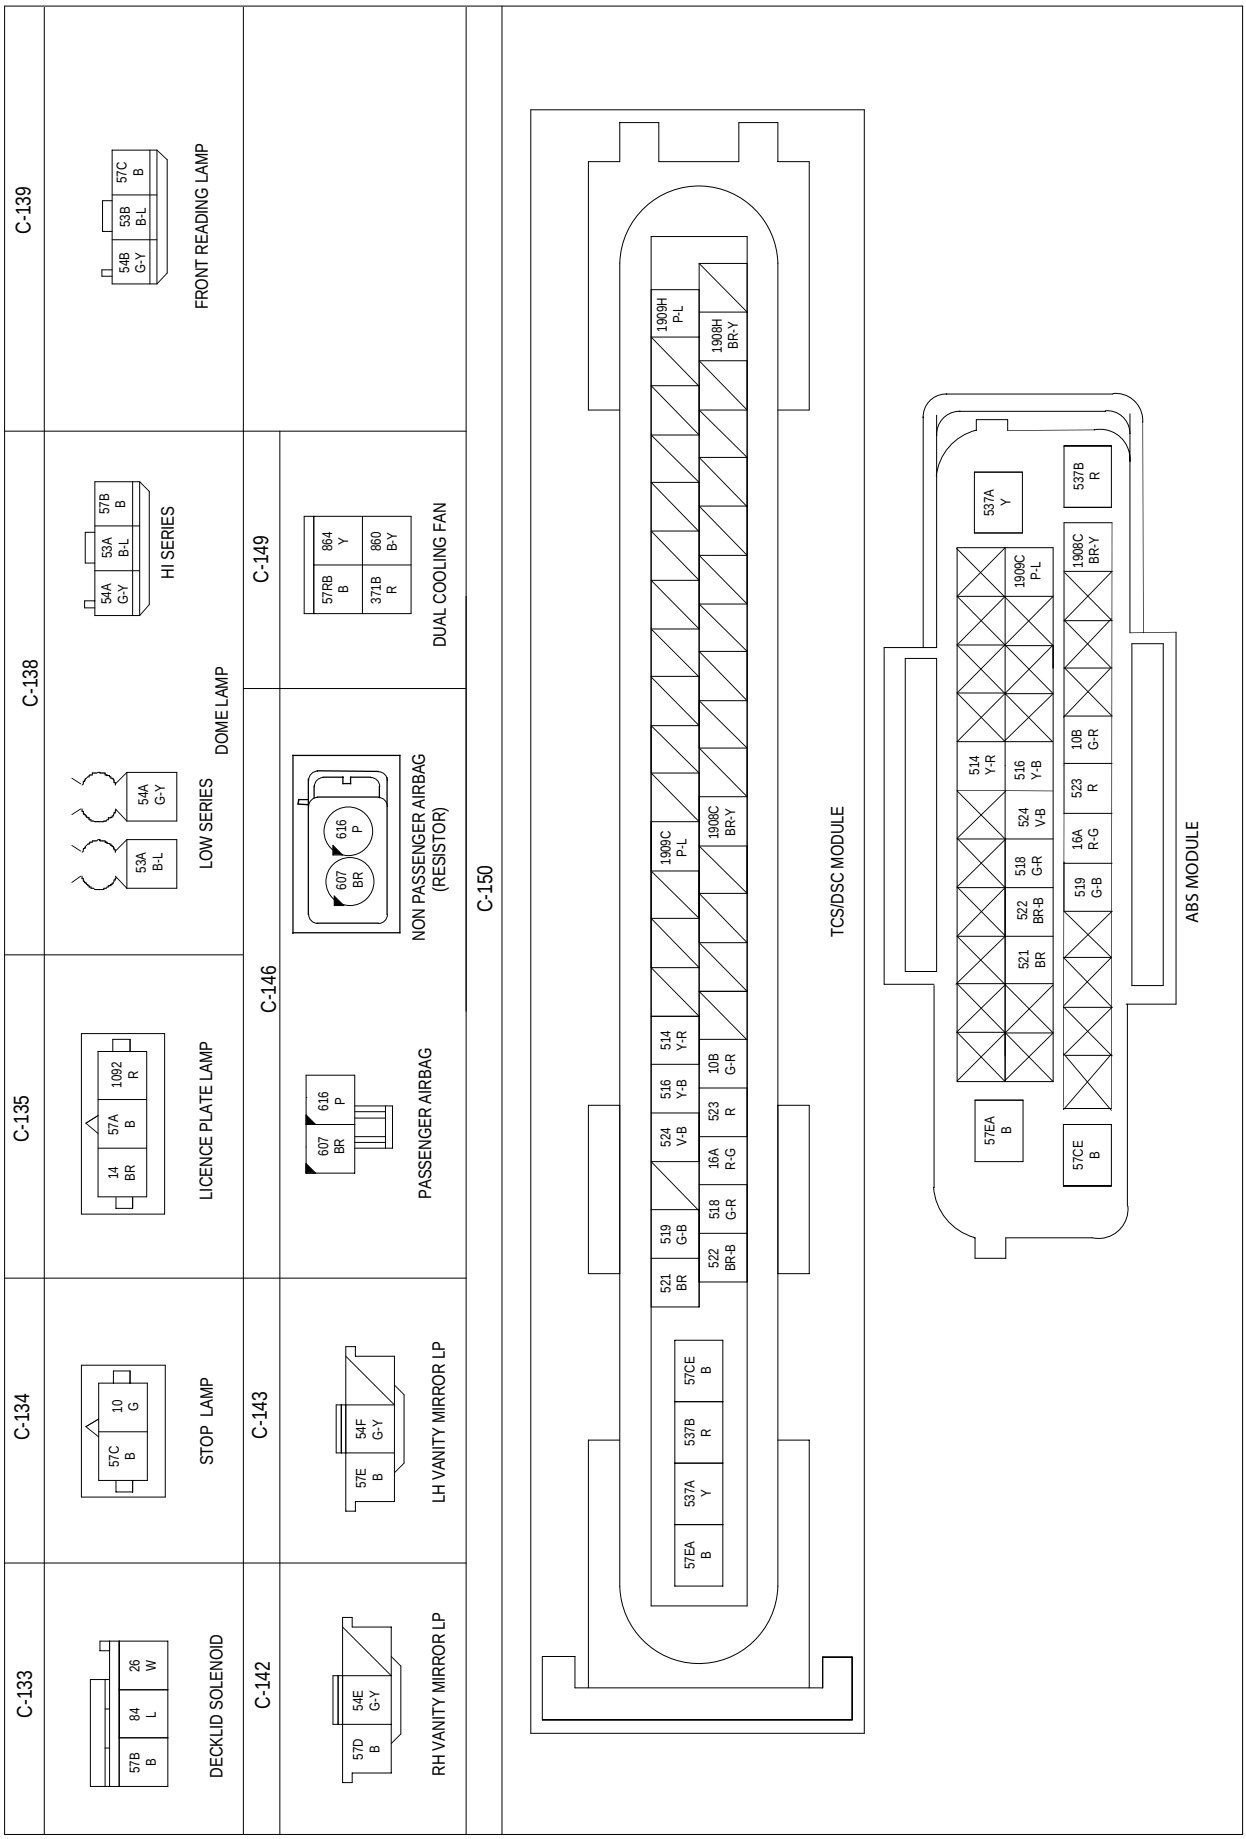

Login Tracking Code

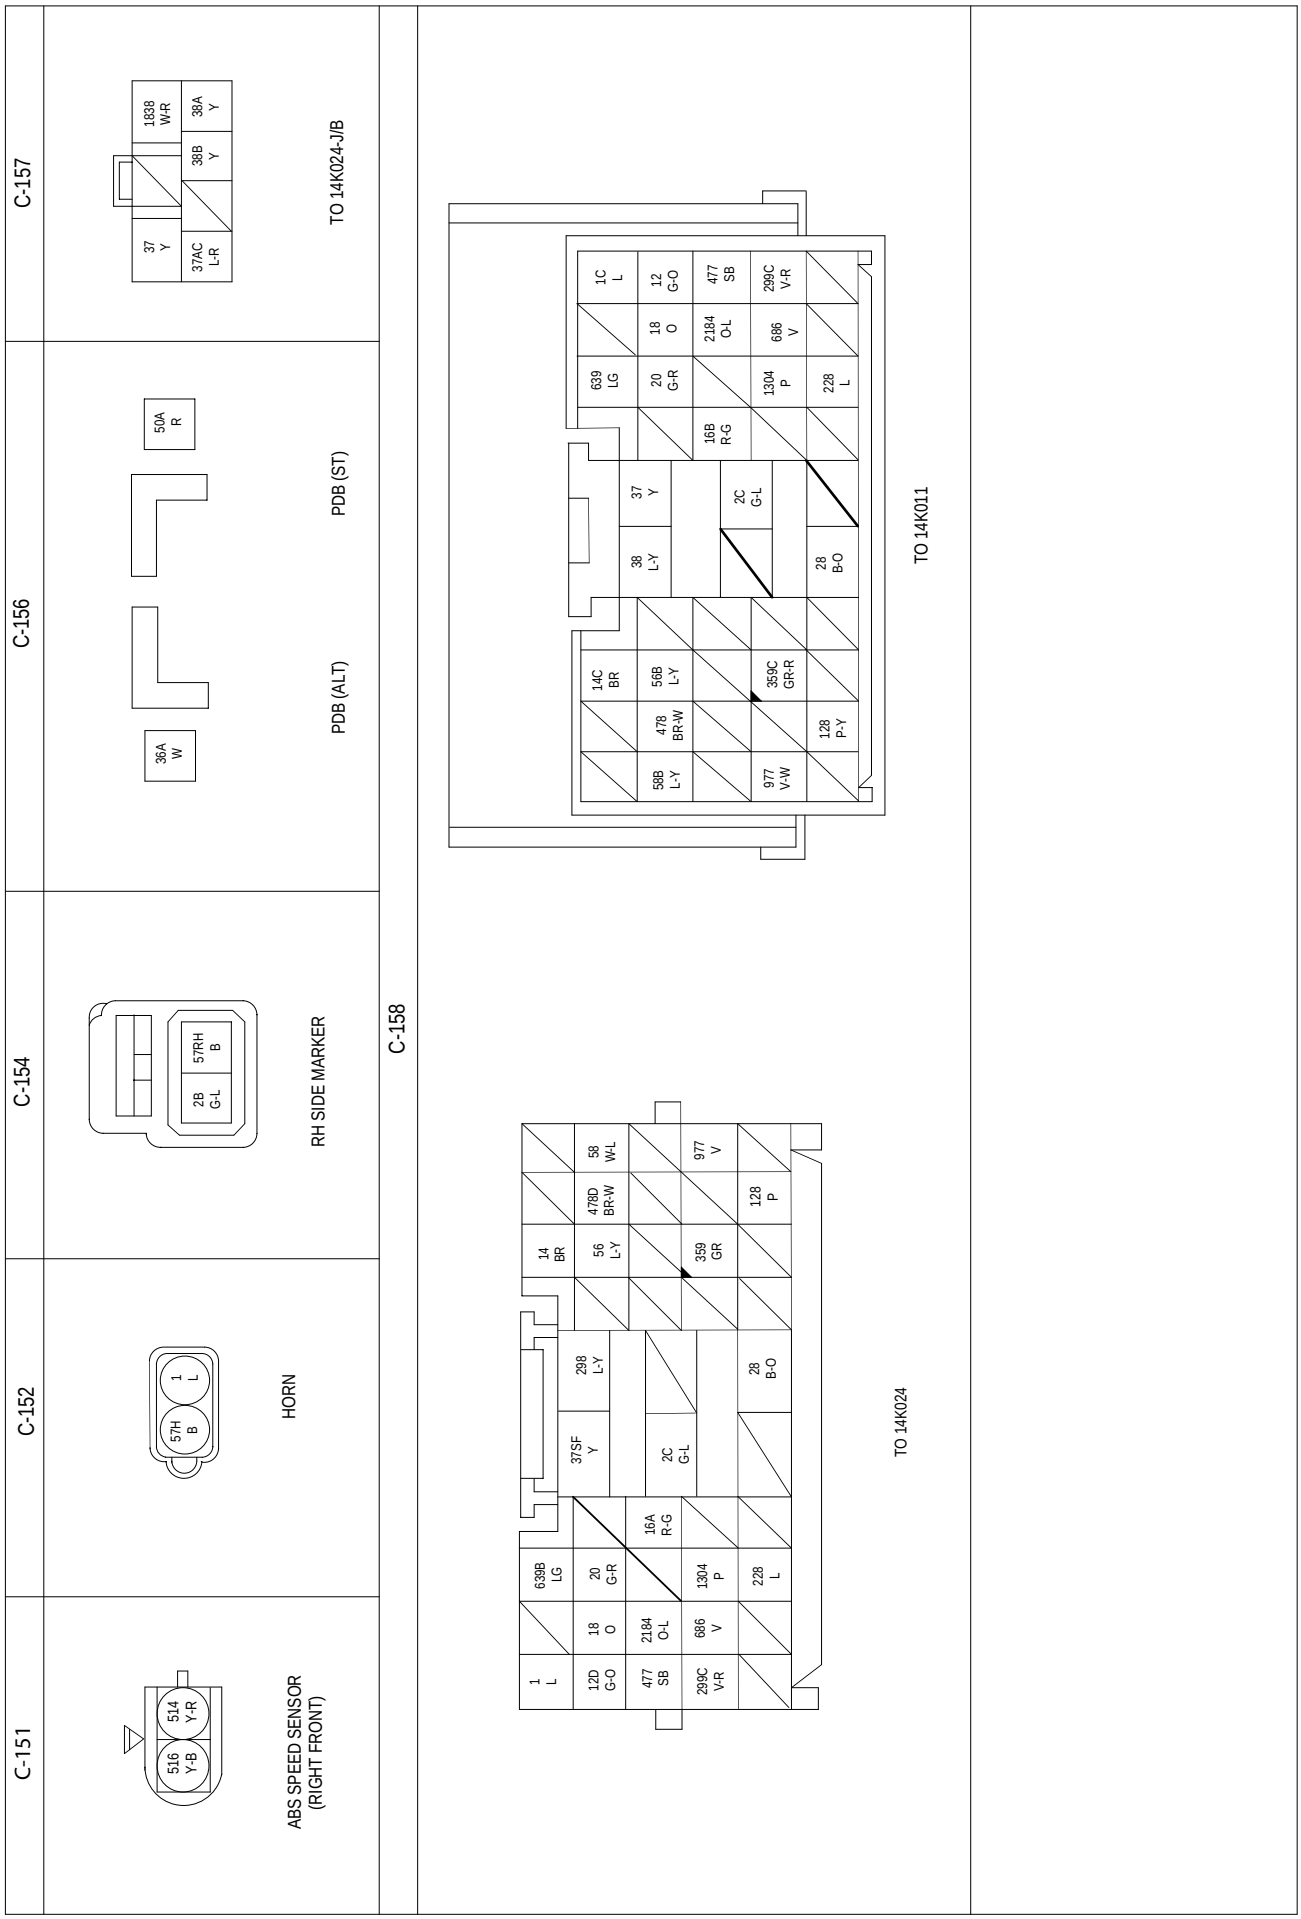
C-157
1838 W-R
38A Y
38B Y
37 Y
37AC L-R
TO 14K024-J/B
C-156
50A R
PDB (ST)
PDB (ALT)
36A W
C-154
57RH B
2B G-L
RH SIDE MARKER
C-158
C-152
57H B
1 L
HORN
C-151
514 Y-R
516 Y-B
ABS SPEED SENSOR (RIGHT FRONT)
1C L
12 G-O
477 SB
299C V-R
639 LG
18 O
2184 O-L
686 V
20 G-R
1304 P
228 L
16B R-G
37 Y
2C G-L
38 L-Y
28 B-O
14C BR
56B L-Y
359C GR-R
478 BR-W
128 P-Y
58B L-Y
977 V-W
TO 14K011
58 W-L
977 V
478D BR-W
128 P
14 BR
56 L-Y
359 GR
298 L-Y
28 B-O
37SF Y
2C G-L
16A R-G
639B LG
20 G-R
1304 P
228 L
1 L
12D G-O
477 SB
299C V-R
18 O
2184 O-L
686 V
TO 14K024

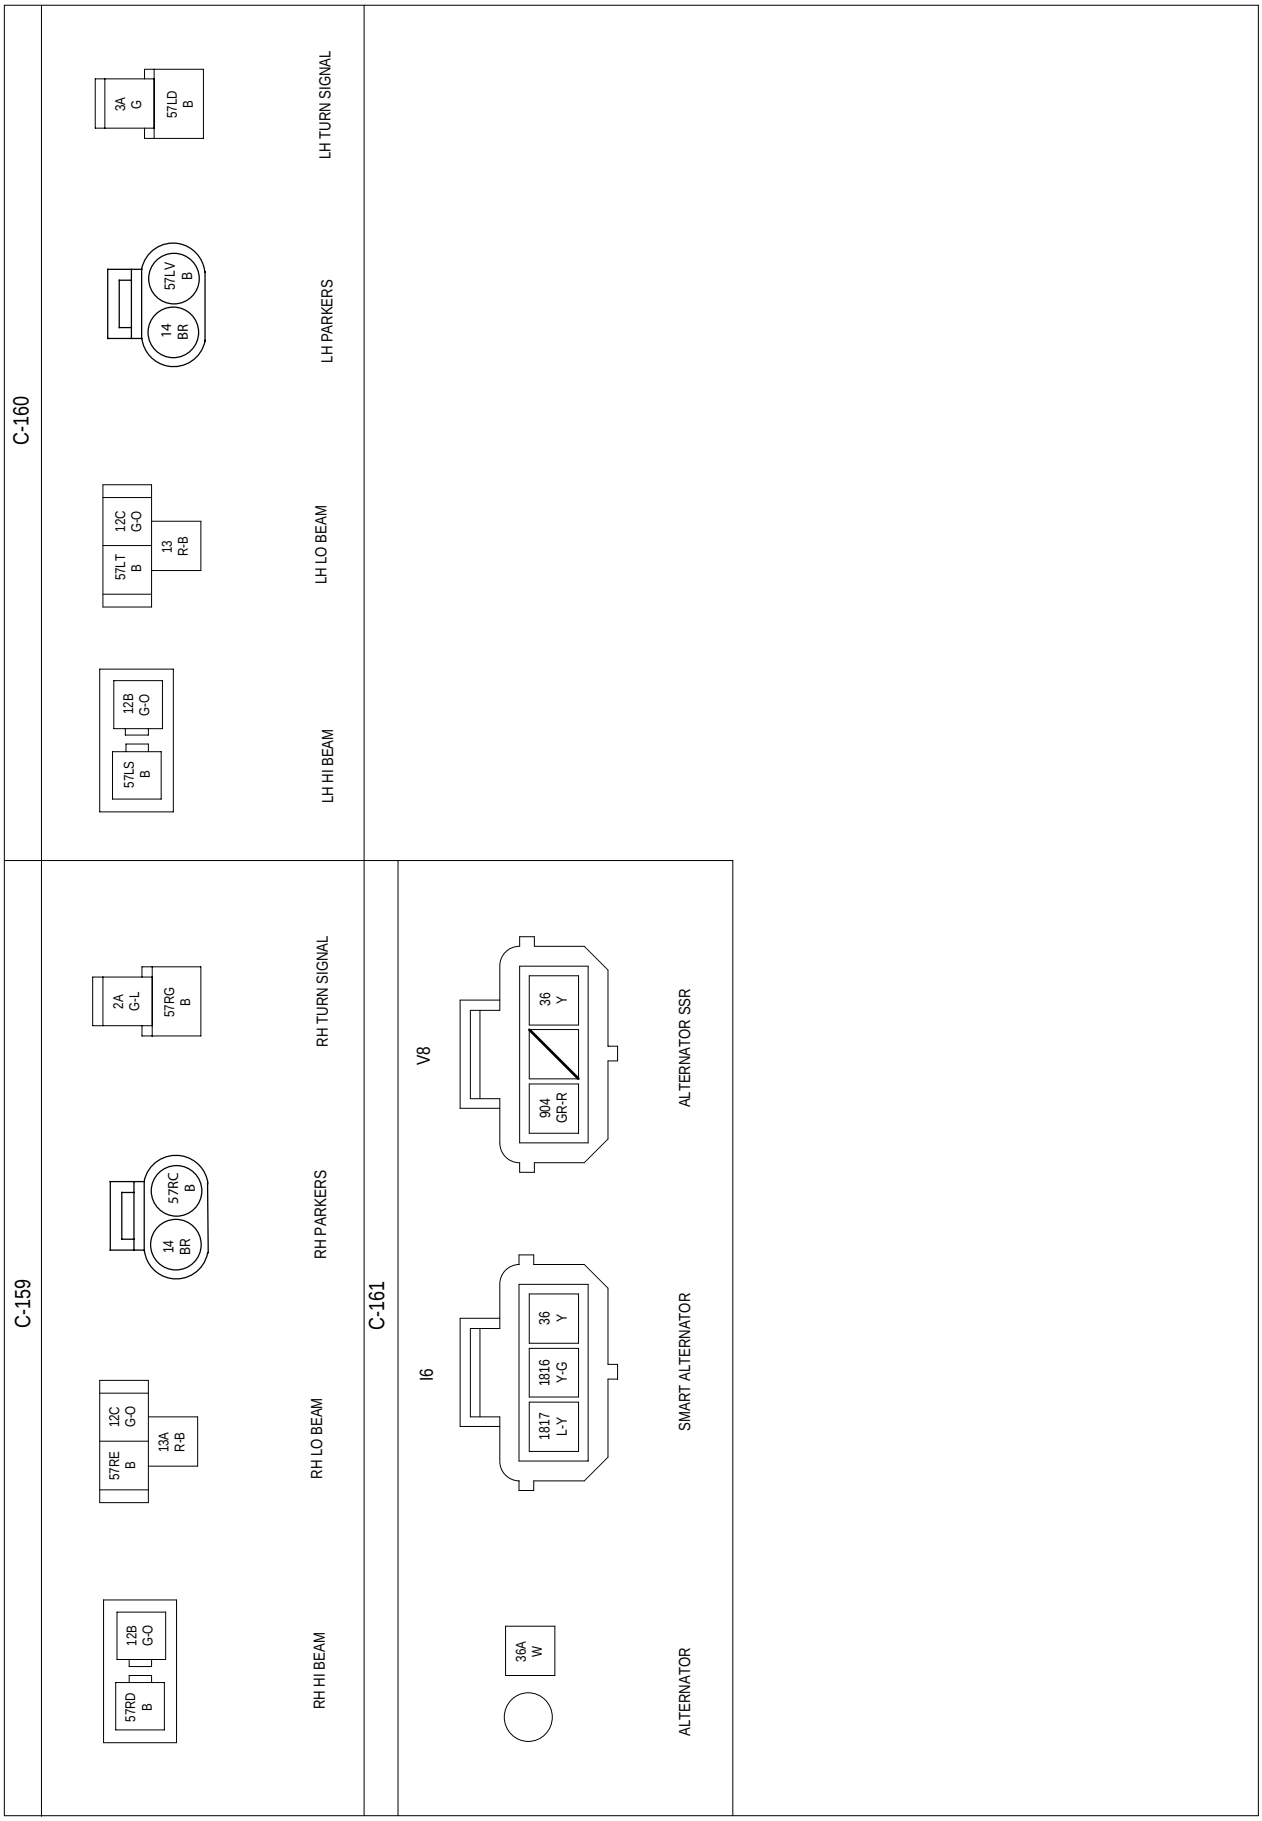

Login Tracking Code

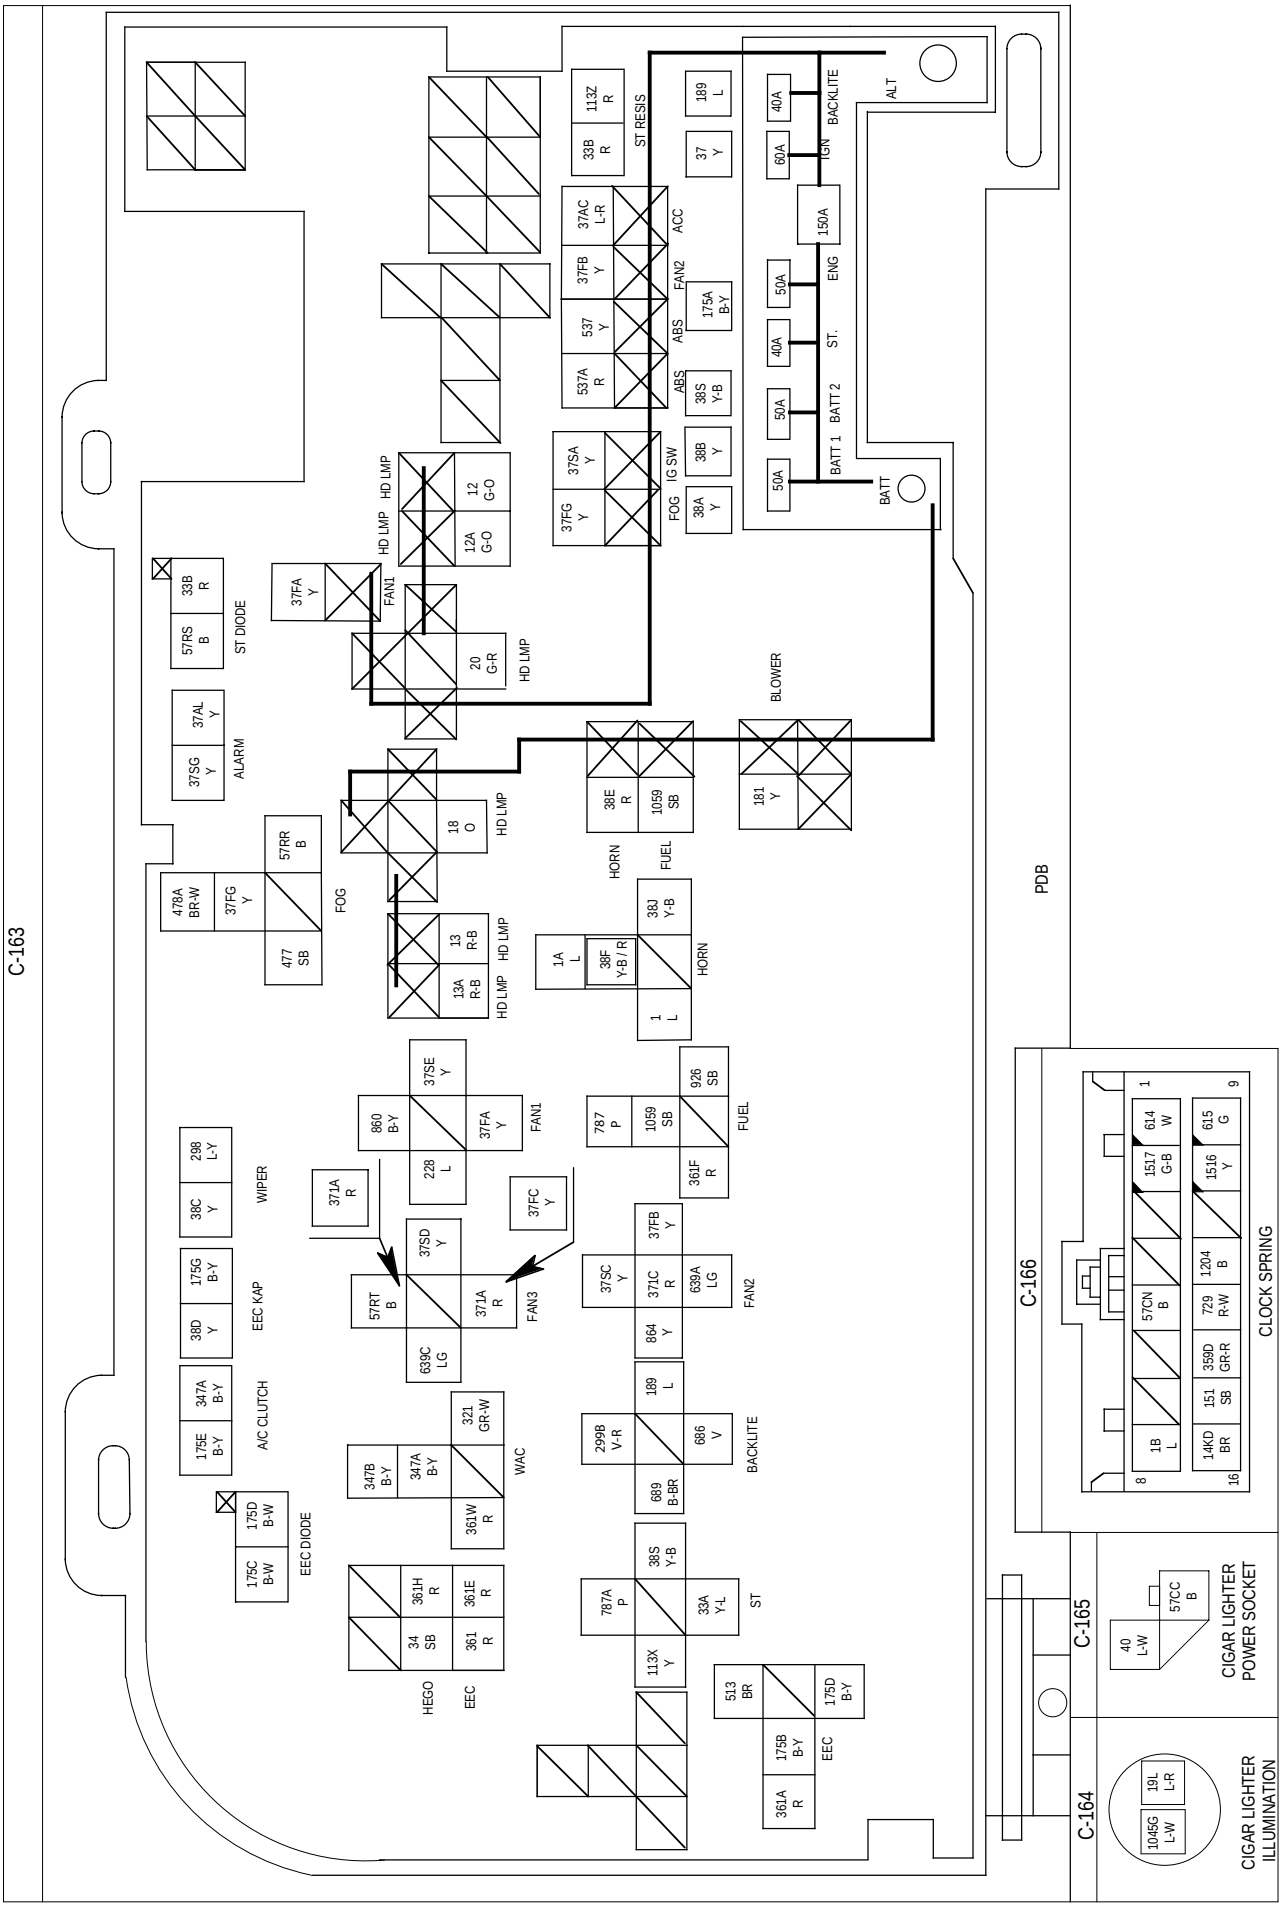
C-163
C-166
C-165
C-164
PDB
CLOCK SPRING
CIGAR LIGHTER POWER SOCKET
CIGAR LIGHTER ILLUMINATION
ST RESIS
ACC
FAN2
ABS
IG SW
FOG
BATT 1
BATT 2
ST.
ENG
IGN
BACKLITE
ALT
BATT
HD LMP
FAN1
ST DIODE
ALARM
BLOWER
HORN
FUEL
WIPER
EEC KAP
A/C CLUTCH
EEC DIODE
FAN3
WAC
HEGO
EEC
ST

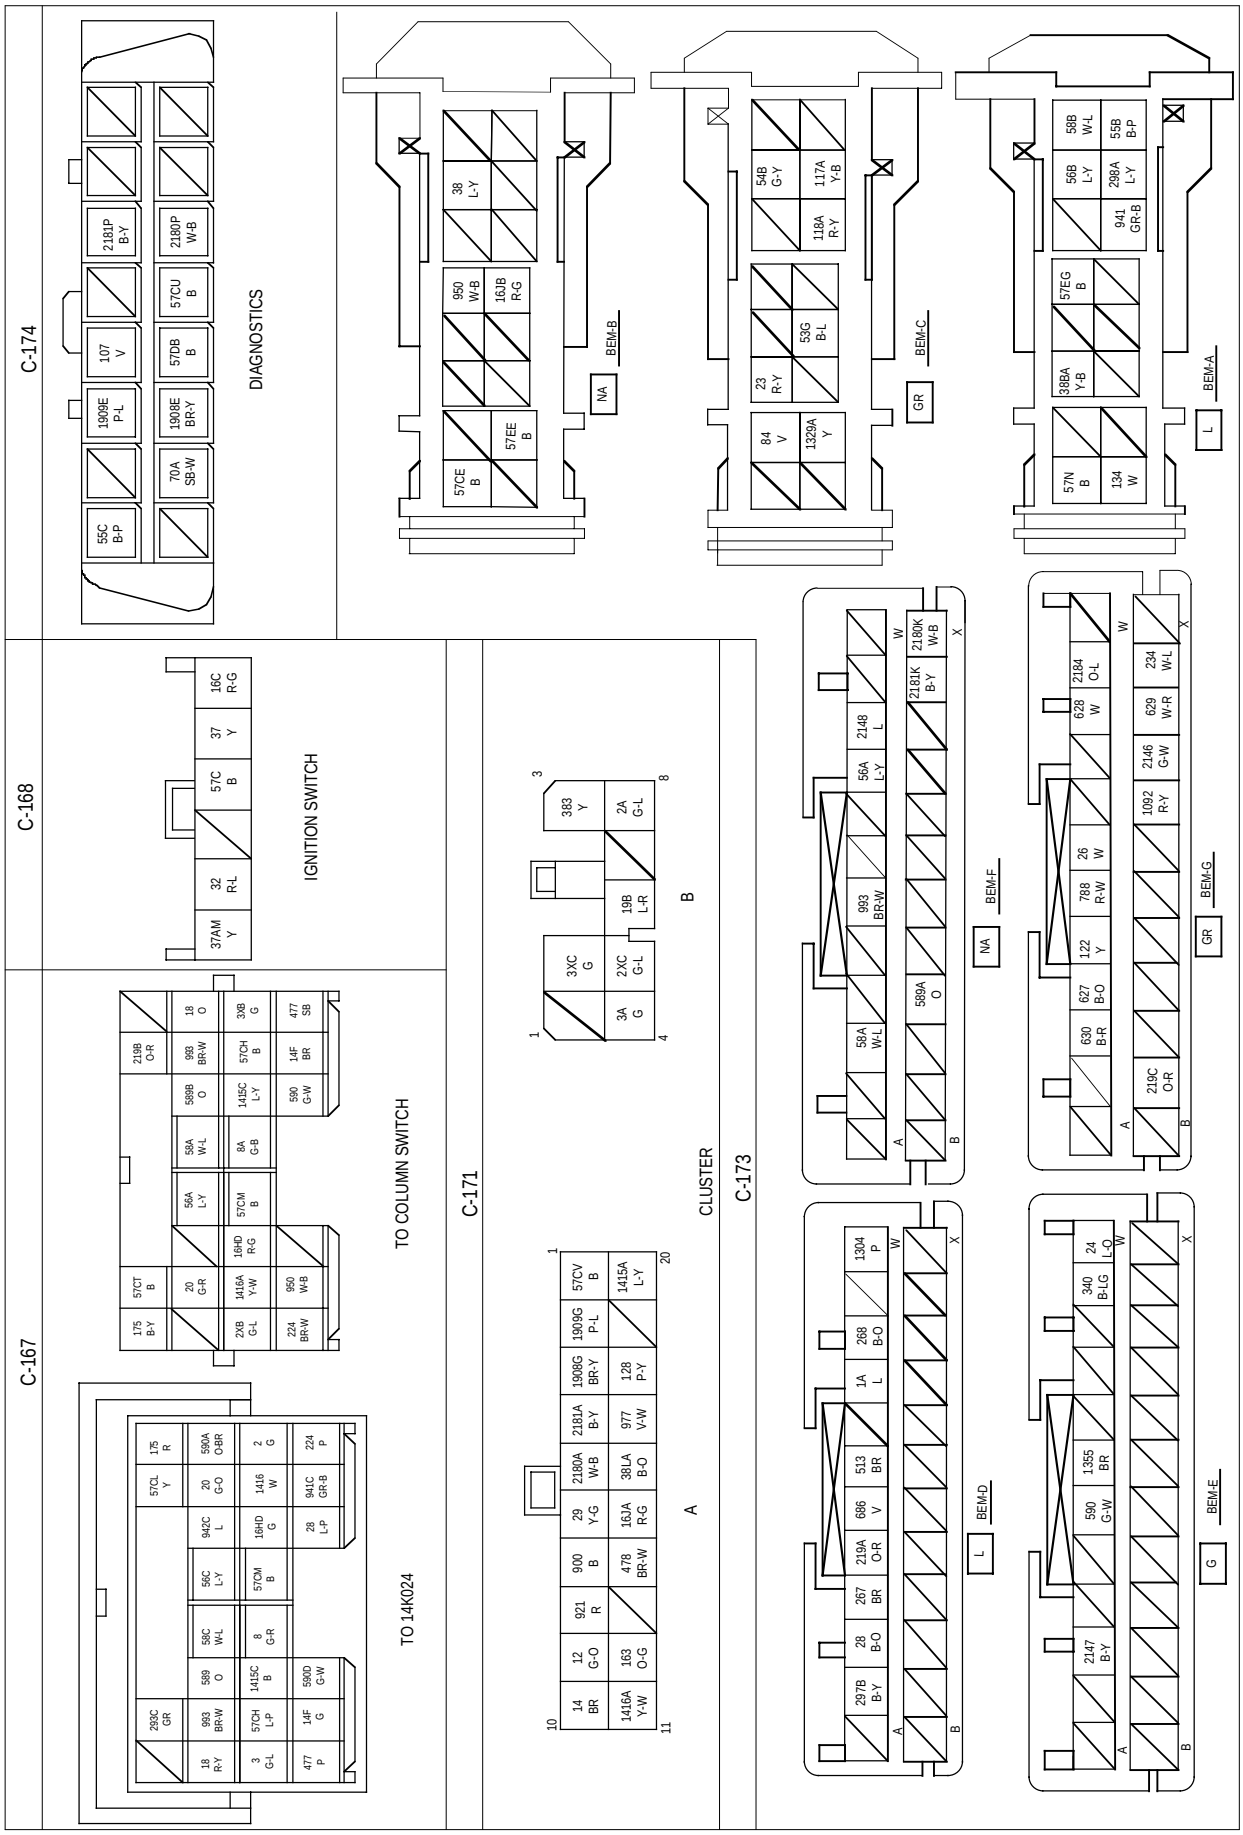

Login Tracking Code

C-184



DECKLID SWITCH

C-188



GLOVE BOX LAMP

C-189

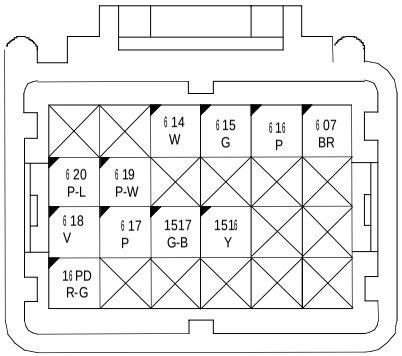

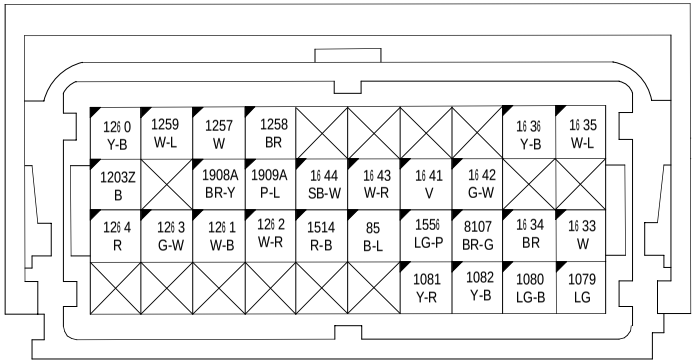

ARS MODULE

C-190

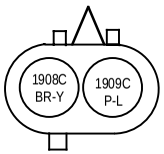

TO 14405 ARS

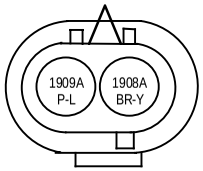

TO I/P CAN

C-191

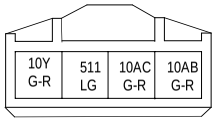

BRAKE SWITCH

C-192



MOBILE PHONE 1
(IP)

(NO AIM FITTED)



TO 14K024
(BLUETOOTH)

(WITH AIM FITTED)

C-199

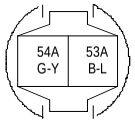

PASSENGER FOOTWELL LAMP

C-200

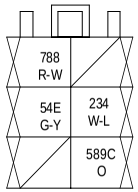

SO LAR SENSOR

C-202

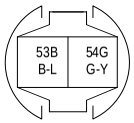

DRIVER FOOTWELL LAMP

C-204

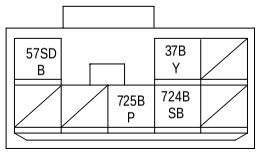

MOBILE PHONE 2
(IP /H)

(NO AIM FITTED)

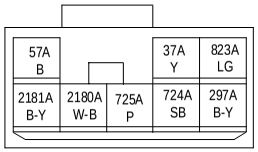

T 14K024
(WITH AIM FITTED)

Login Tracking Code

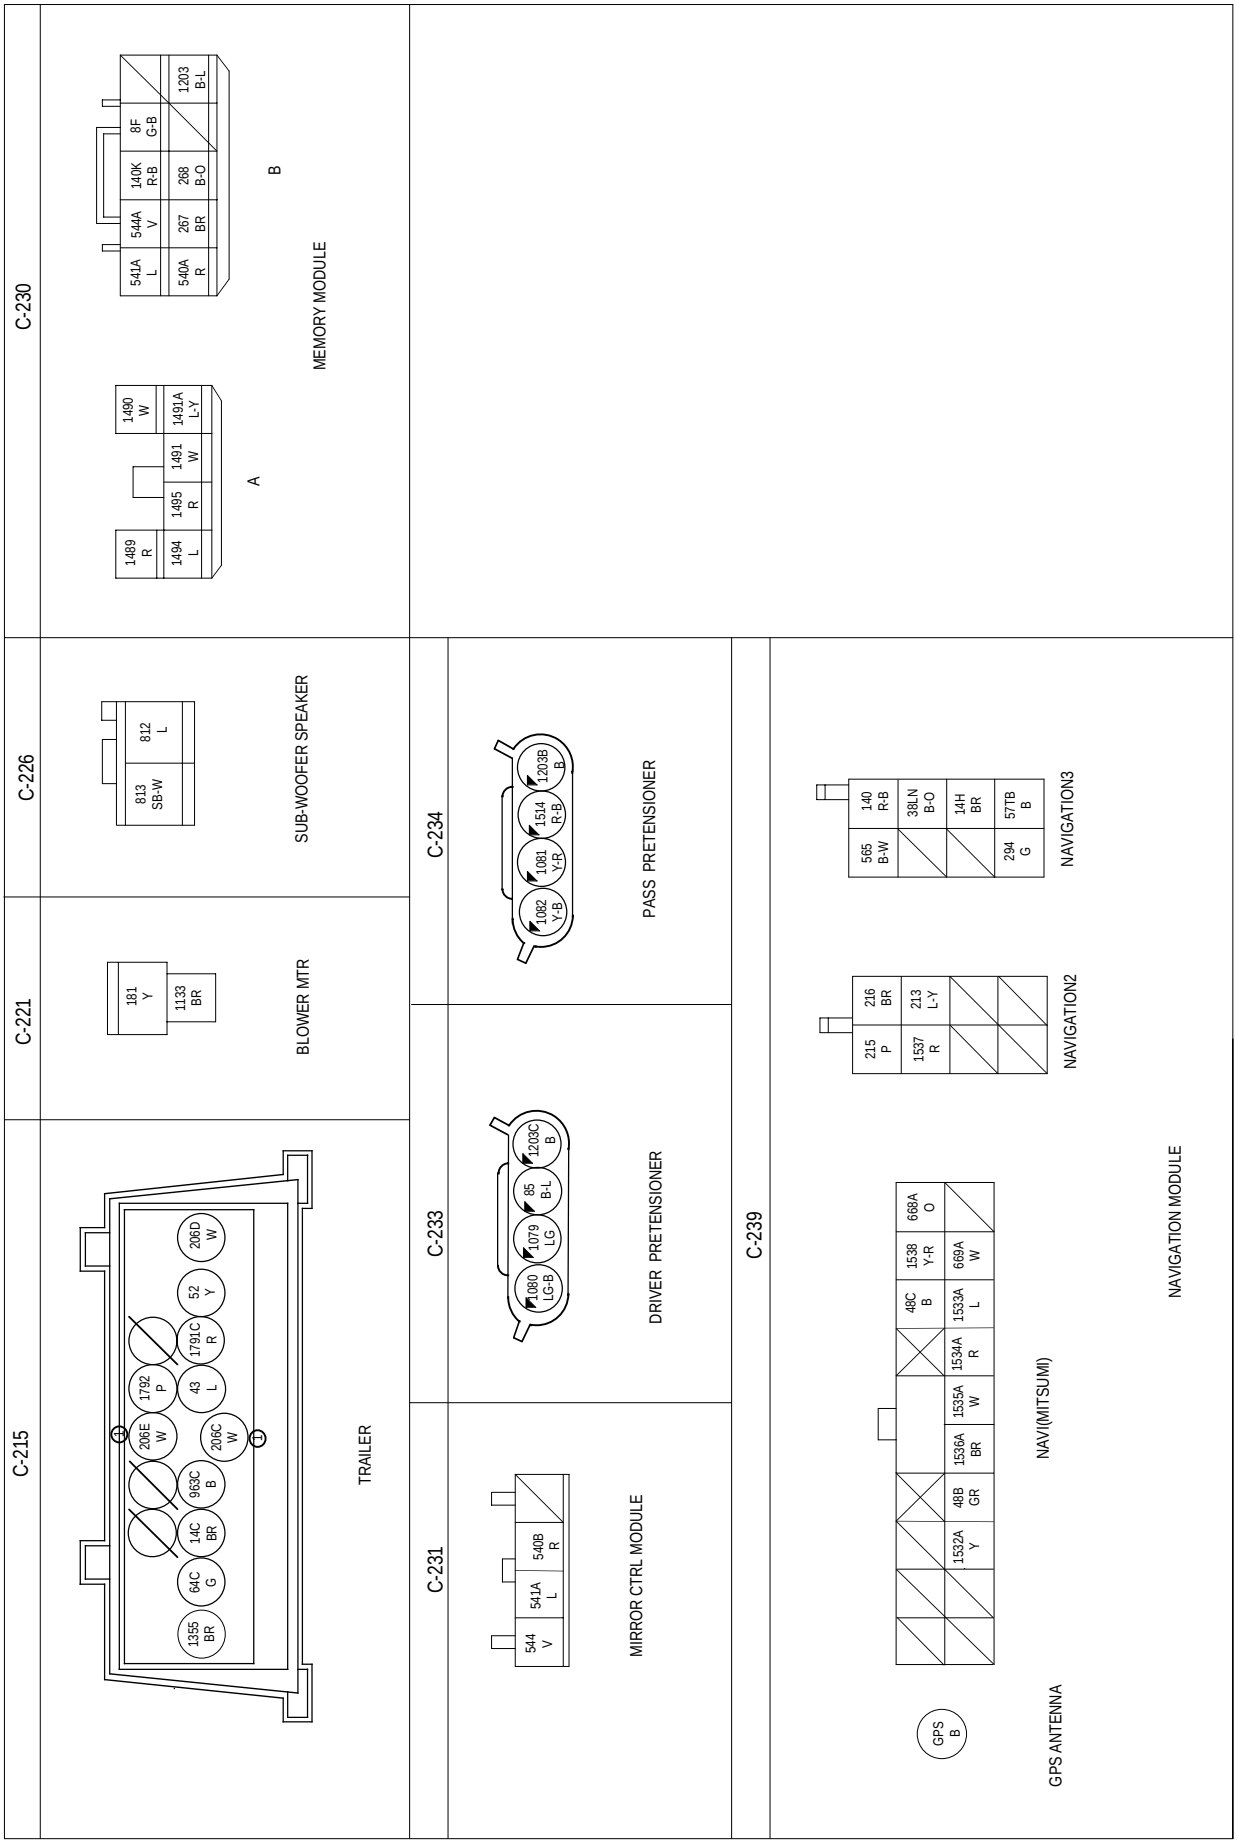

Login Tracking Code

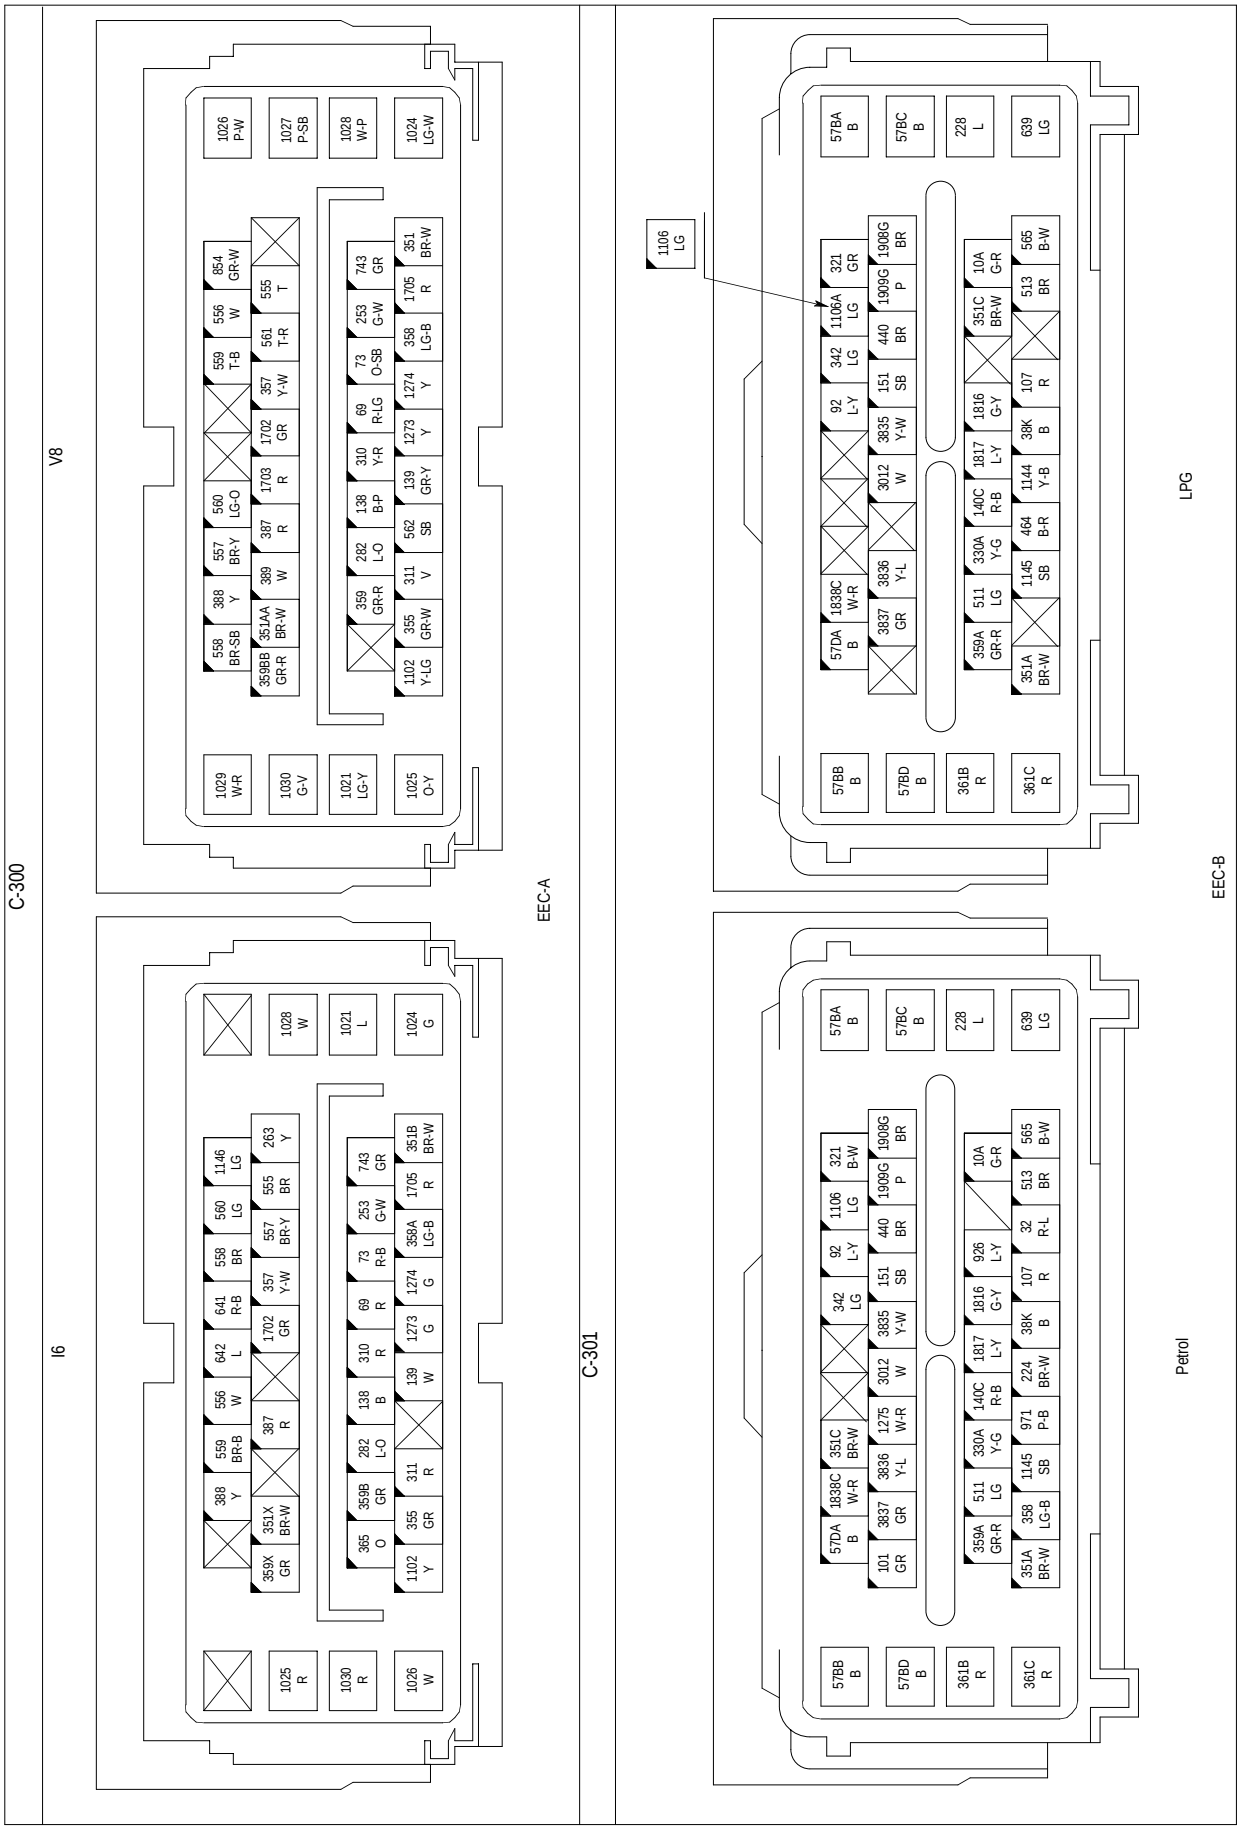

Login Tracking Code

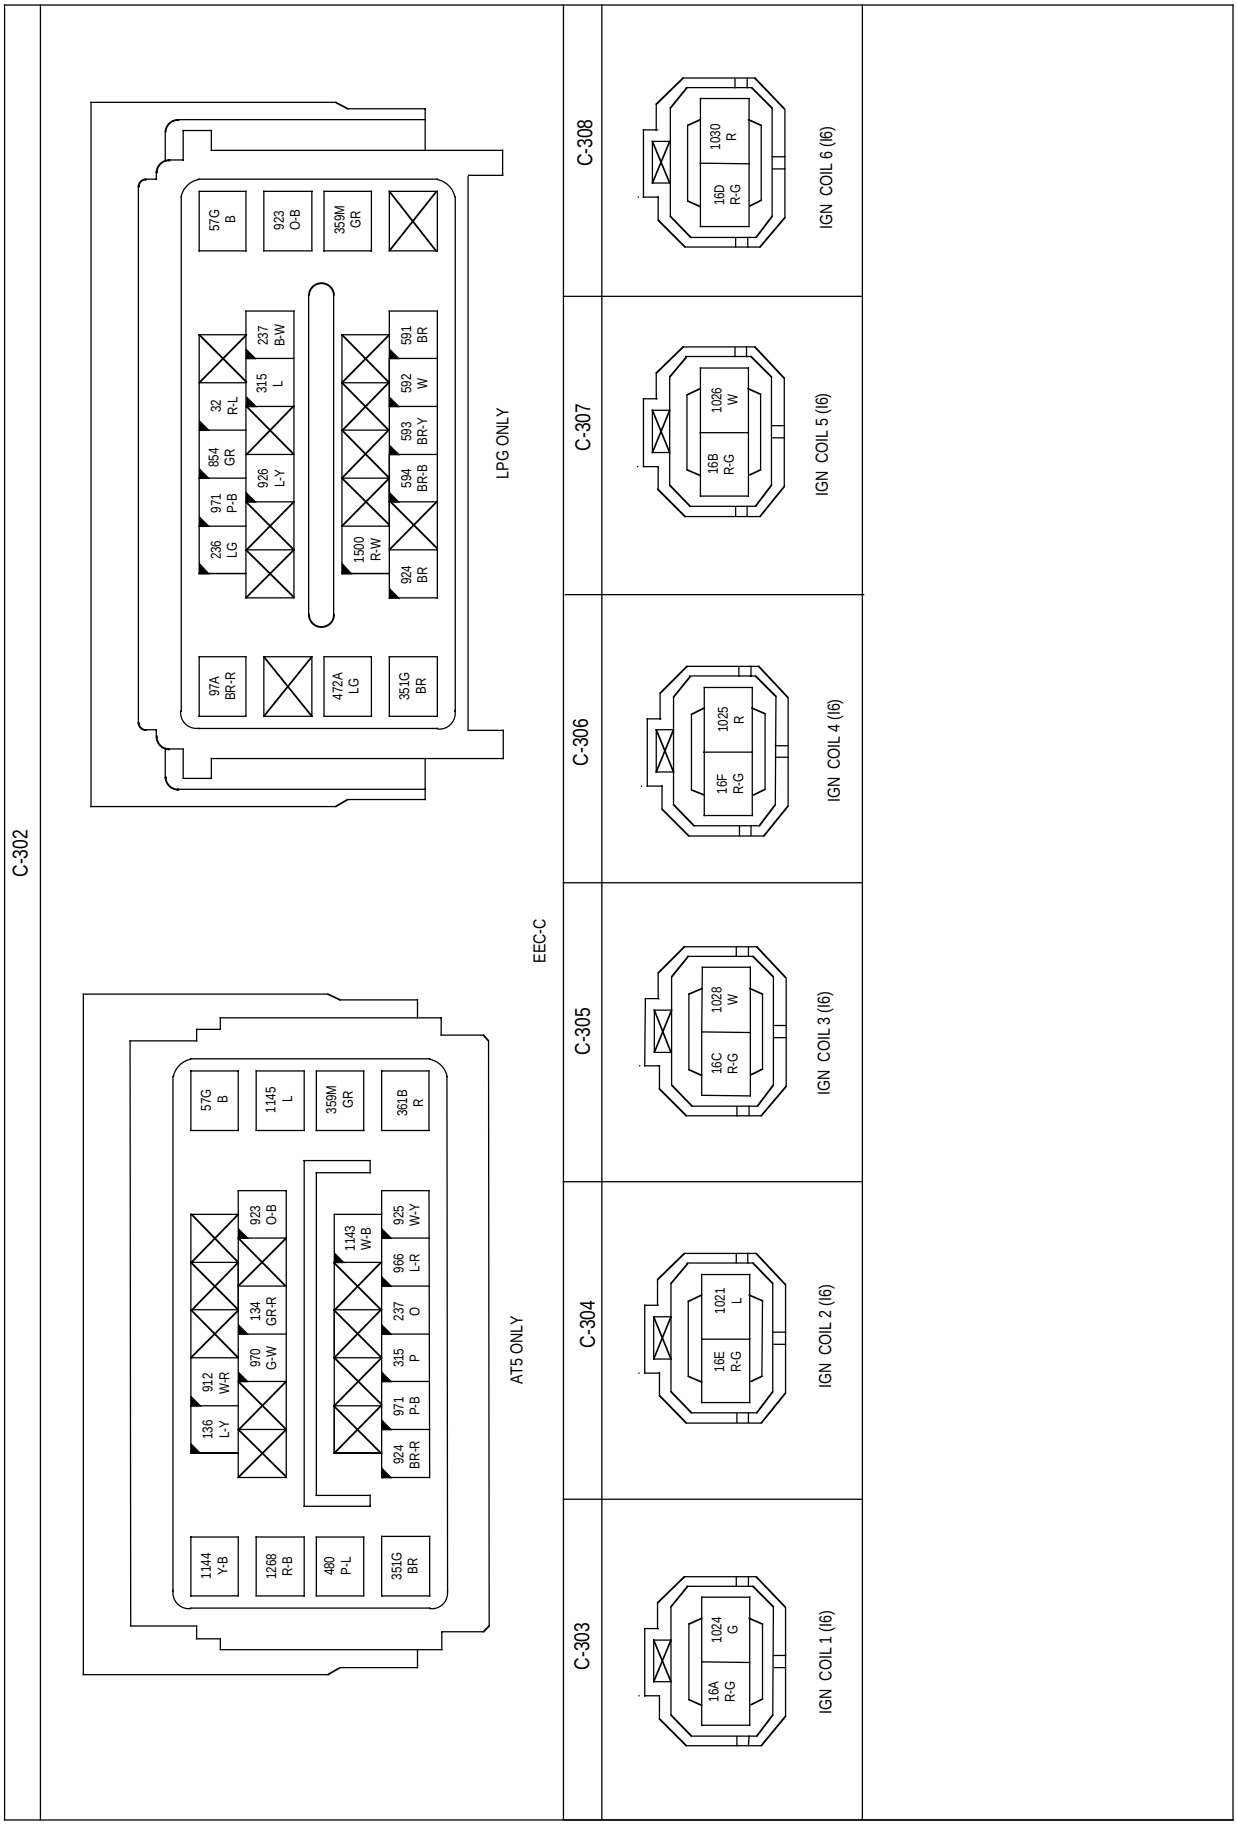

Login Tracking Code

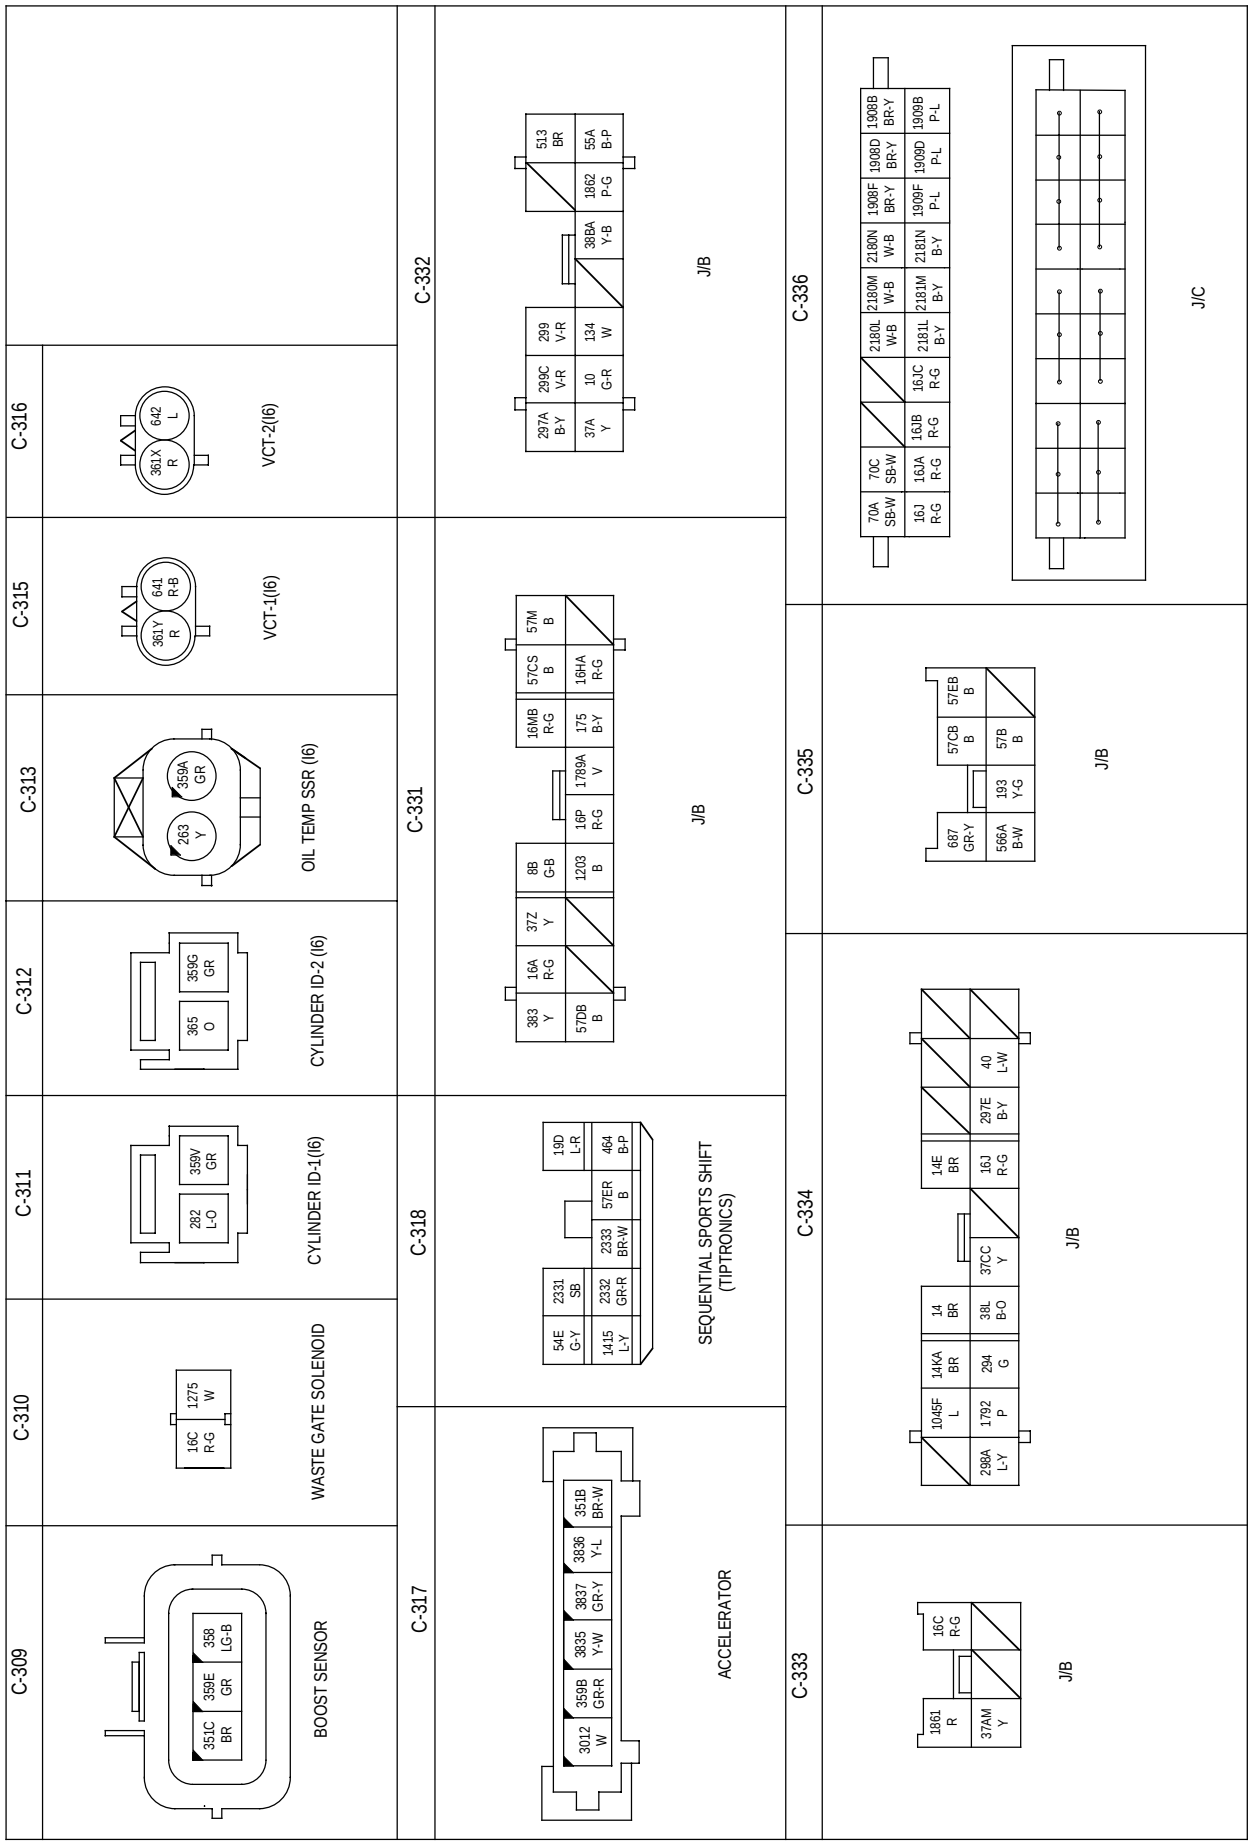

Login Tracking Code

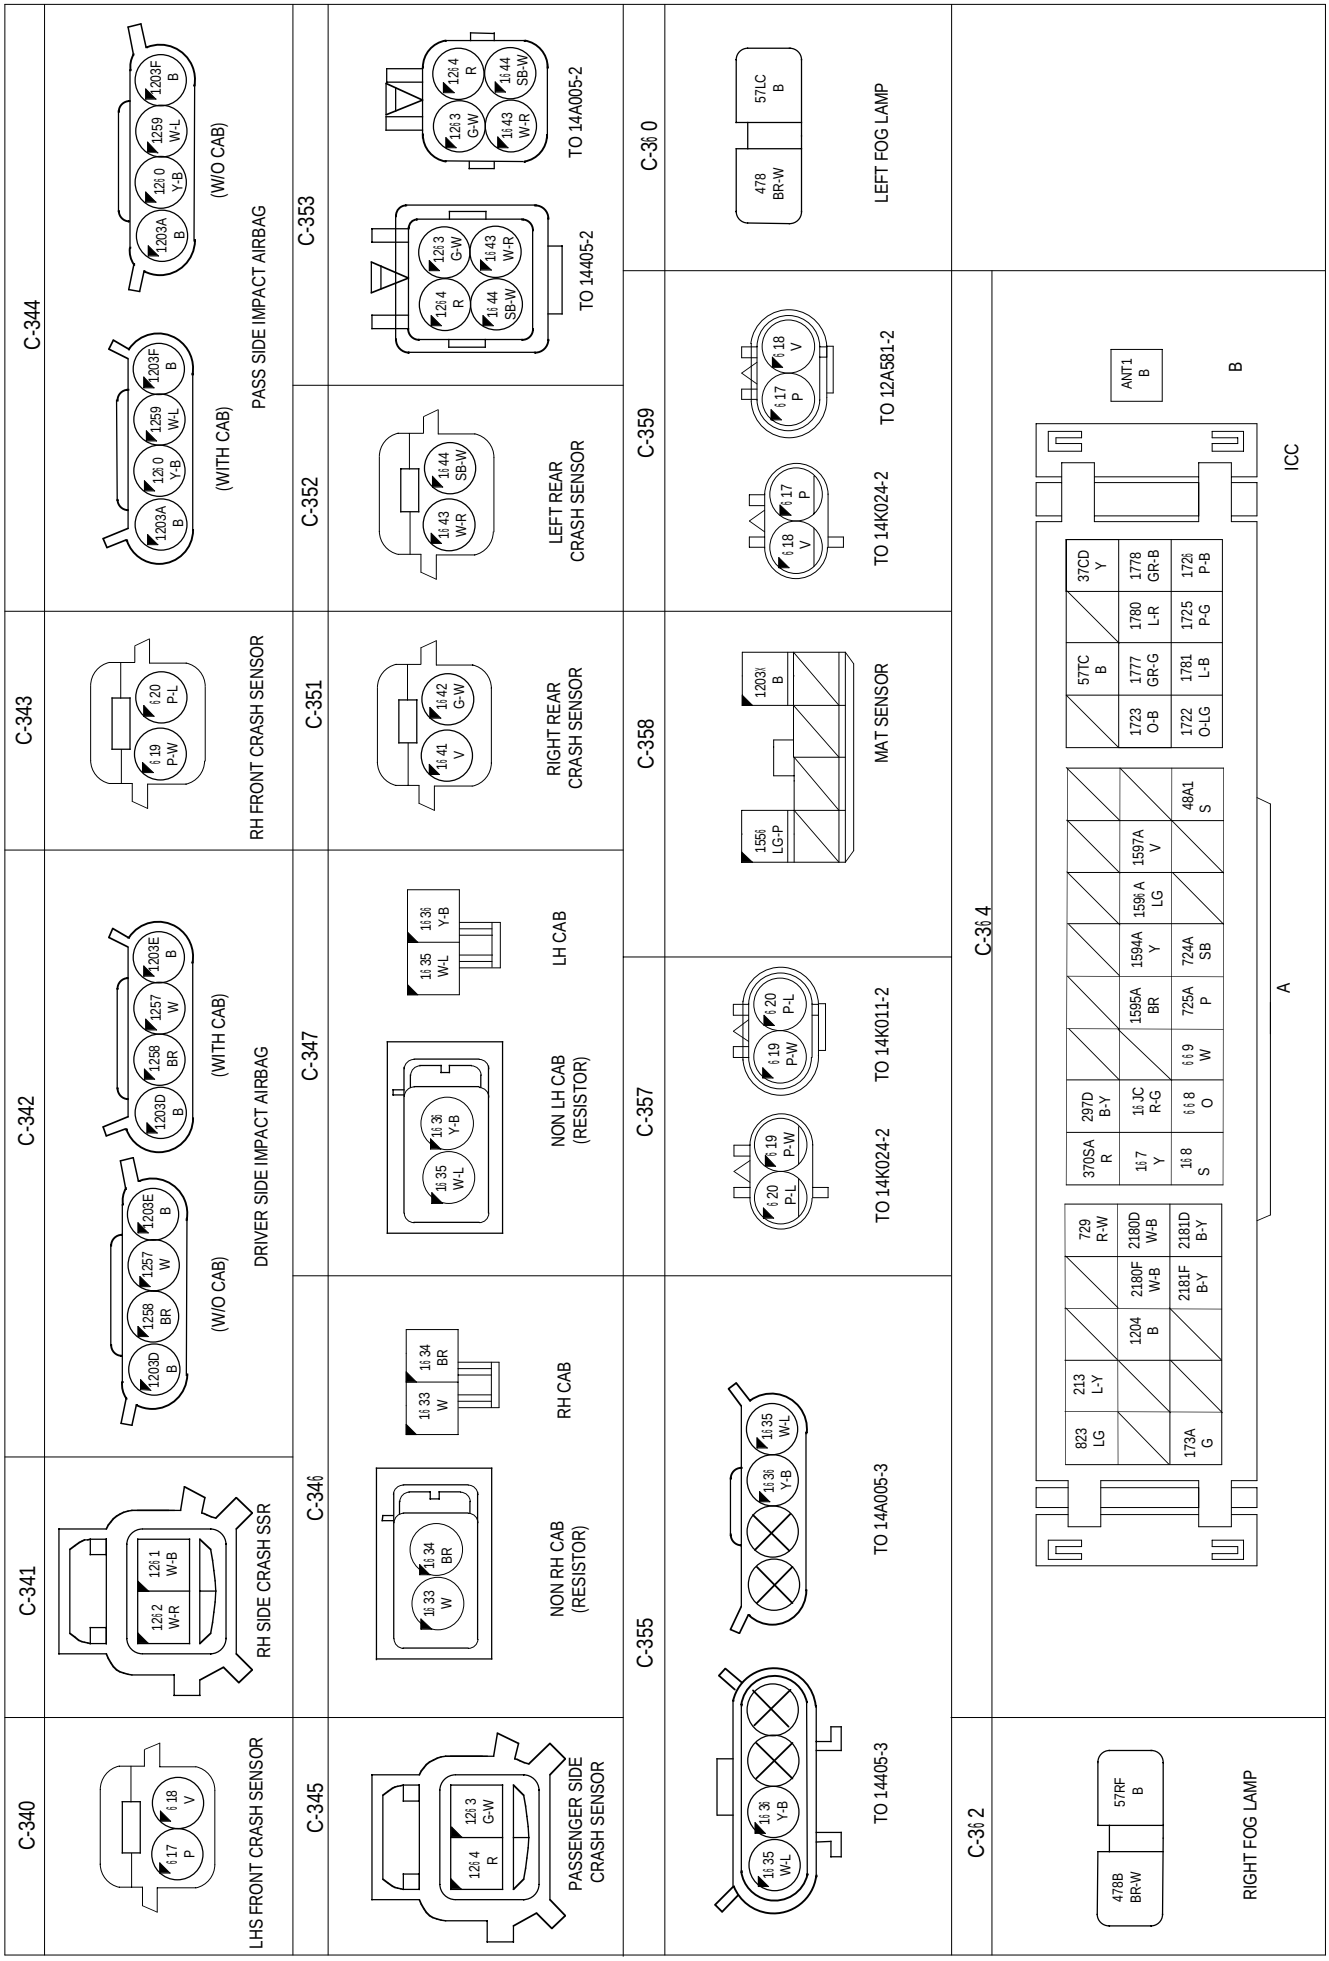
C-340
LHS FRONT CRASH SENSOR
C-341
RH SIDE CRASH SSR
C-342
DRIVER SIDE IMPACT AIRBAG
(W/O CAB)
(WITH CAB)
C-343
RH FRONT CRASH SENSOR
C-344
PASS SIDE IMPACT AIRBAG
(WITH CAB)
(W/O CAB)
C-345
PASSENGER SIDE CRASH SENSOR
C-346
NON RH CAB (RESISTOR)
RH CAB
C-347
NON LH CAB (RESISTOR)
LH CAB
C-351
RIGHT REAR CRASH SENSOR
C-352
LEFT REAR CRASH SENSOR
C-353
TO 14405-2
TO 14A005-2
C-355
TO 14405-3
TO 14A005-3
C-357
TO 14K024-2
TO 14K011-2
C-358
MAT SENSOR
C-359
TO 14K024-2
TO 12A581-2
C-360
LEFT FOG LAMP
C-362
RIGHT FOG LAMP
C-364
ICC
A
B
ANT1

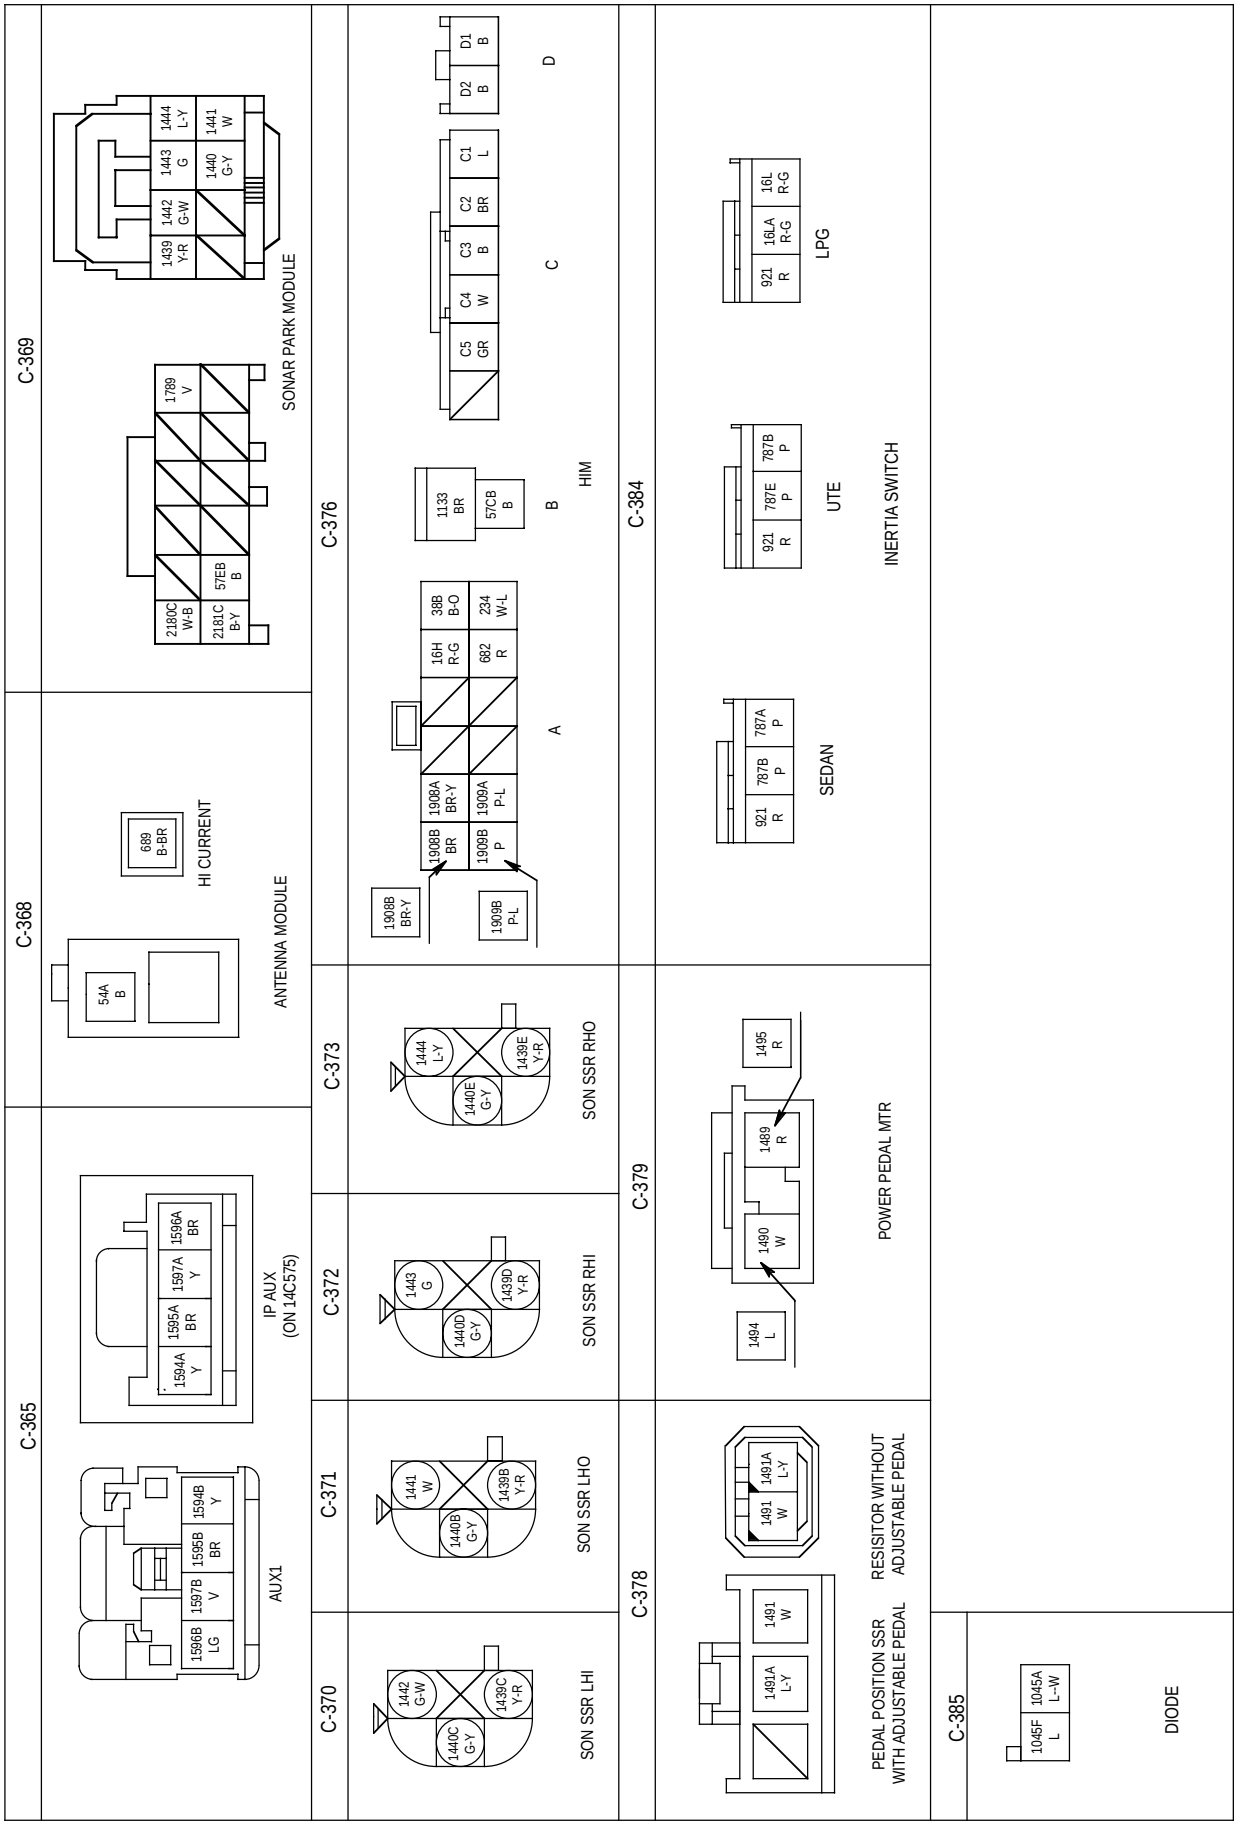

Login Tracking Code

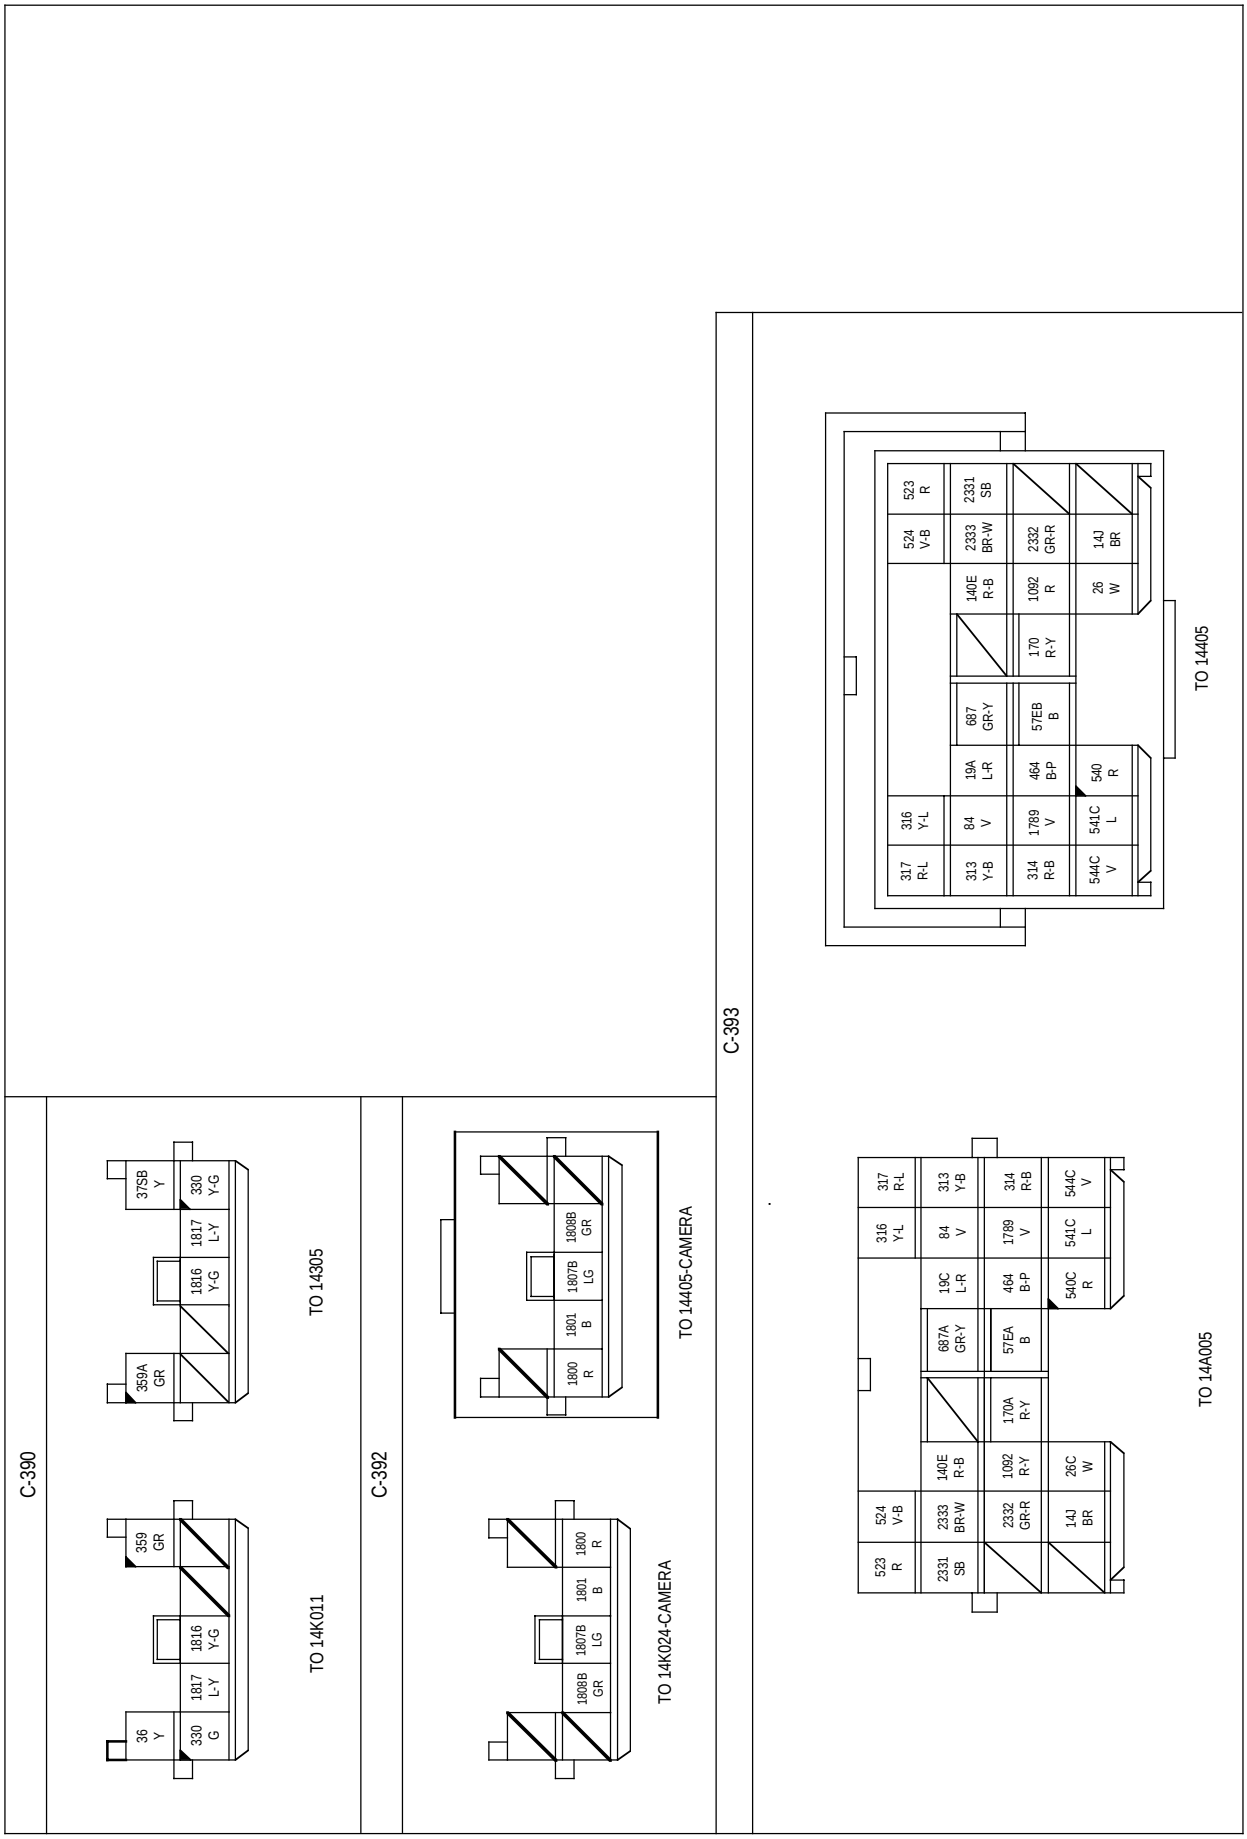

Login Tracking Code

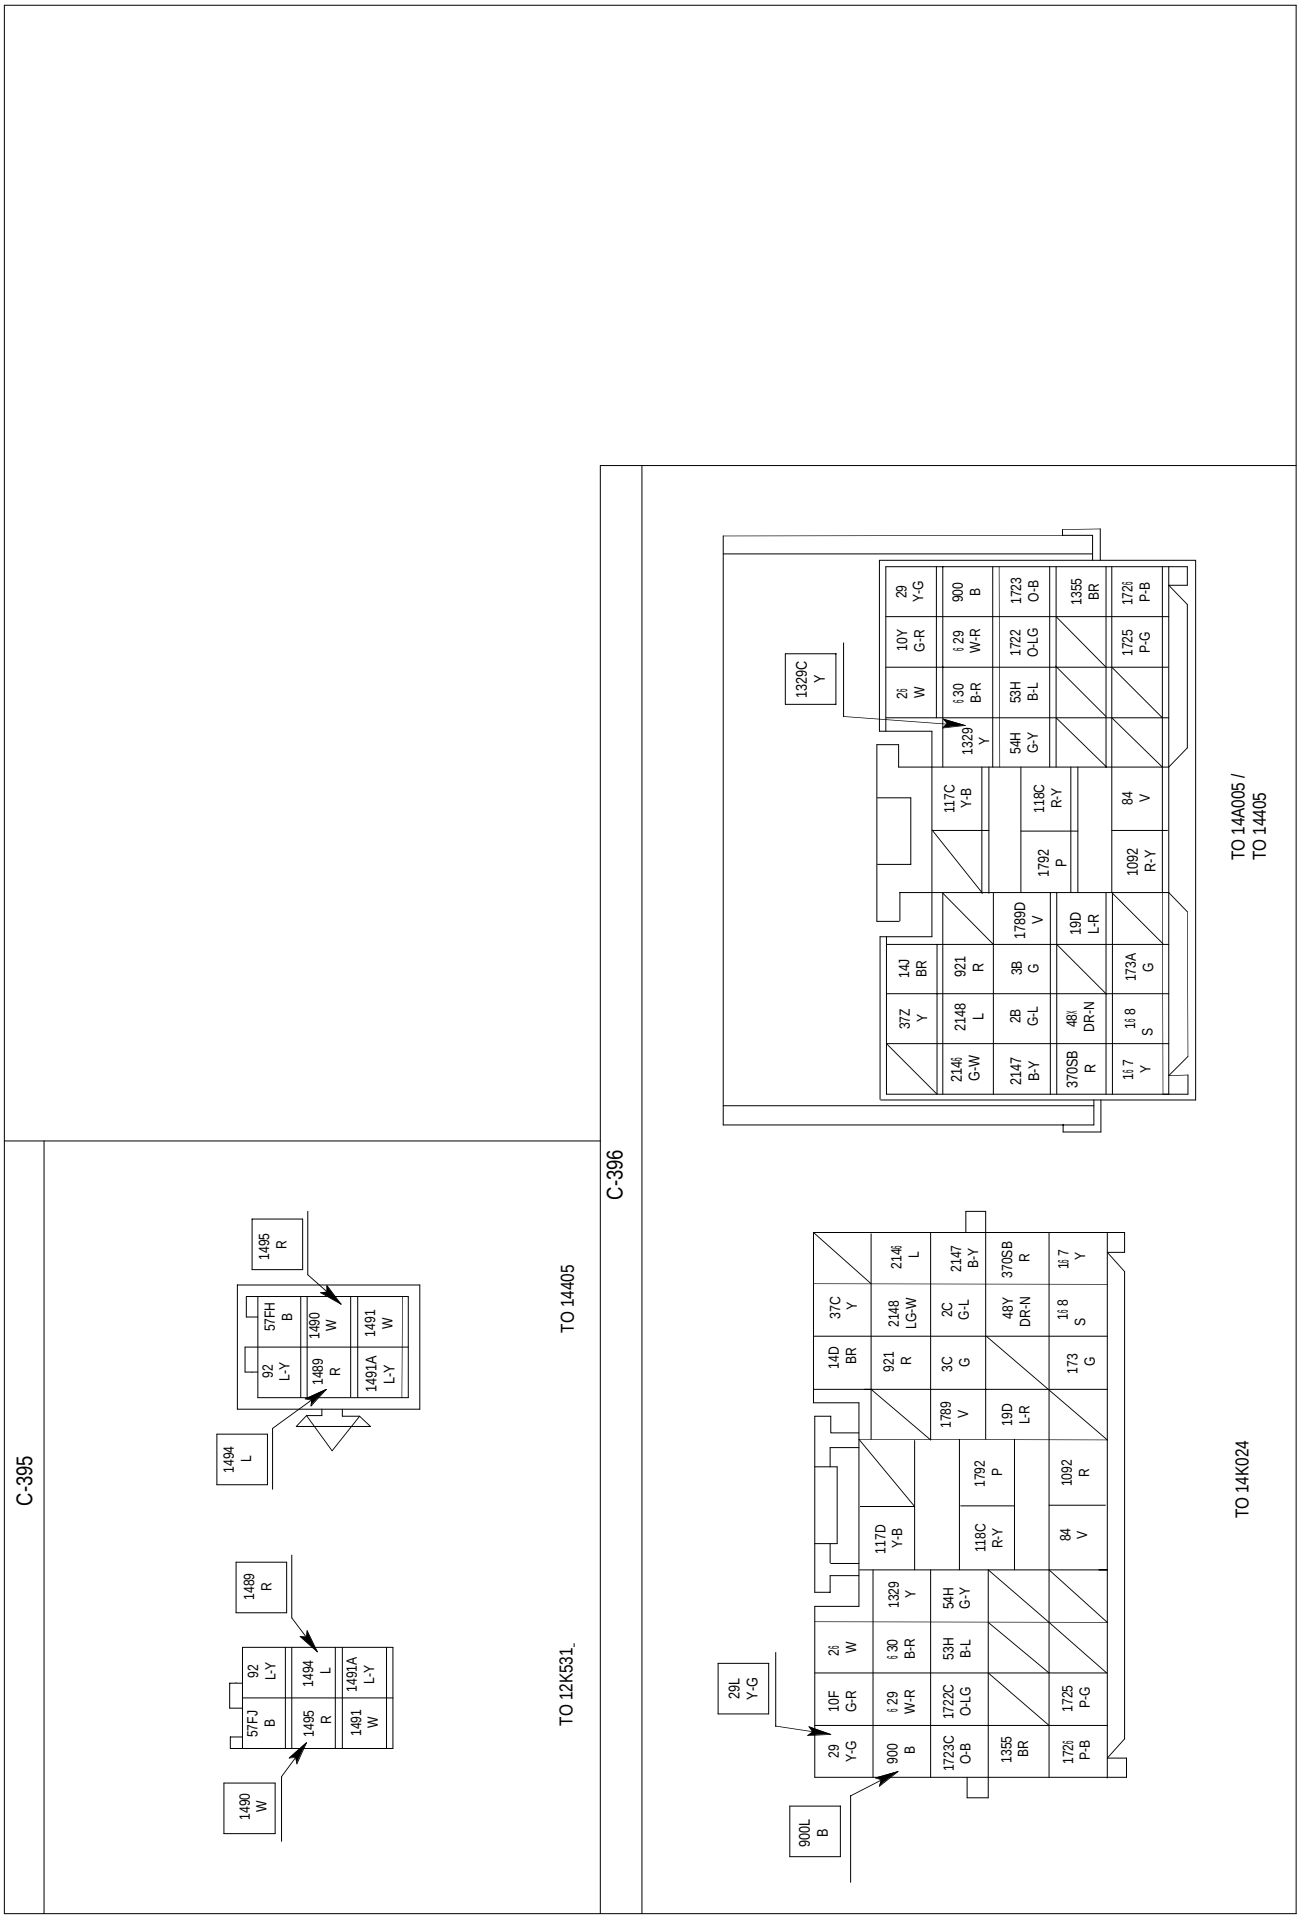
C-395
1495 R
57FH B
1490 W
1491 W
92 L-Y
1489 R
1491A L-Y
1494 L
TO 14405
1489 R
57FJ B
1494 L
1491A L-Y
92 L-Y
1495 R
1491 W
1490 W
TO 12K531_
C-396
1329C Y
29 Y-G
900 B
1723 O-B
1355 BR
10Y G-R
1722 O-LG
1725 P-G
53H B-L
54H G-Y
1329 Y
117C Y-B
118C R-Y
84 V
1792 P
1092 R-Y
TO 14A005 / TO 14405
14J BR
921 R
3B G
1789D V
19D L-R
173A G
37Z Y
2148 L
2B G-L
370SB R
37C Y
2148 LG-W
2C G-L
48Y DR-N
14D BR
921 R
3C G
1789 V
19D L-R
173 G
117D Y-B
118C R-Y
1092 R
84 V
1329 Y
54H G-Y
53H B-L
1722C O-LG
1725 P-G
29L Y-G
29 Y-G
900 B
1723C O-B
1355 BR
900L B
TO 14K024

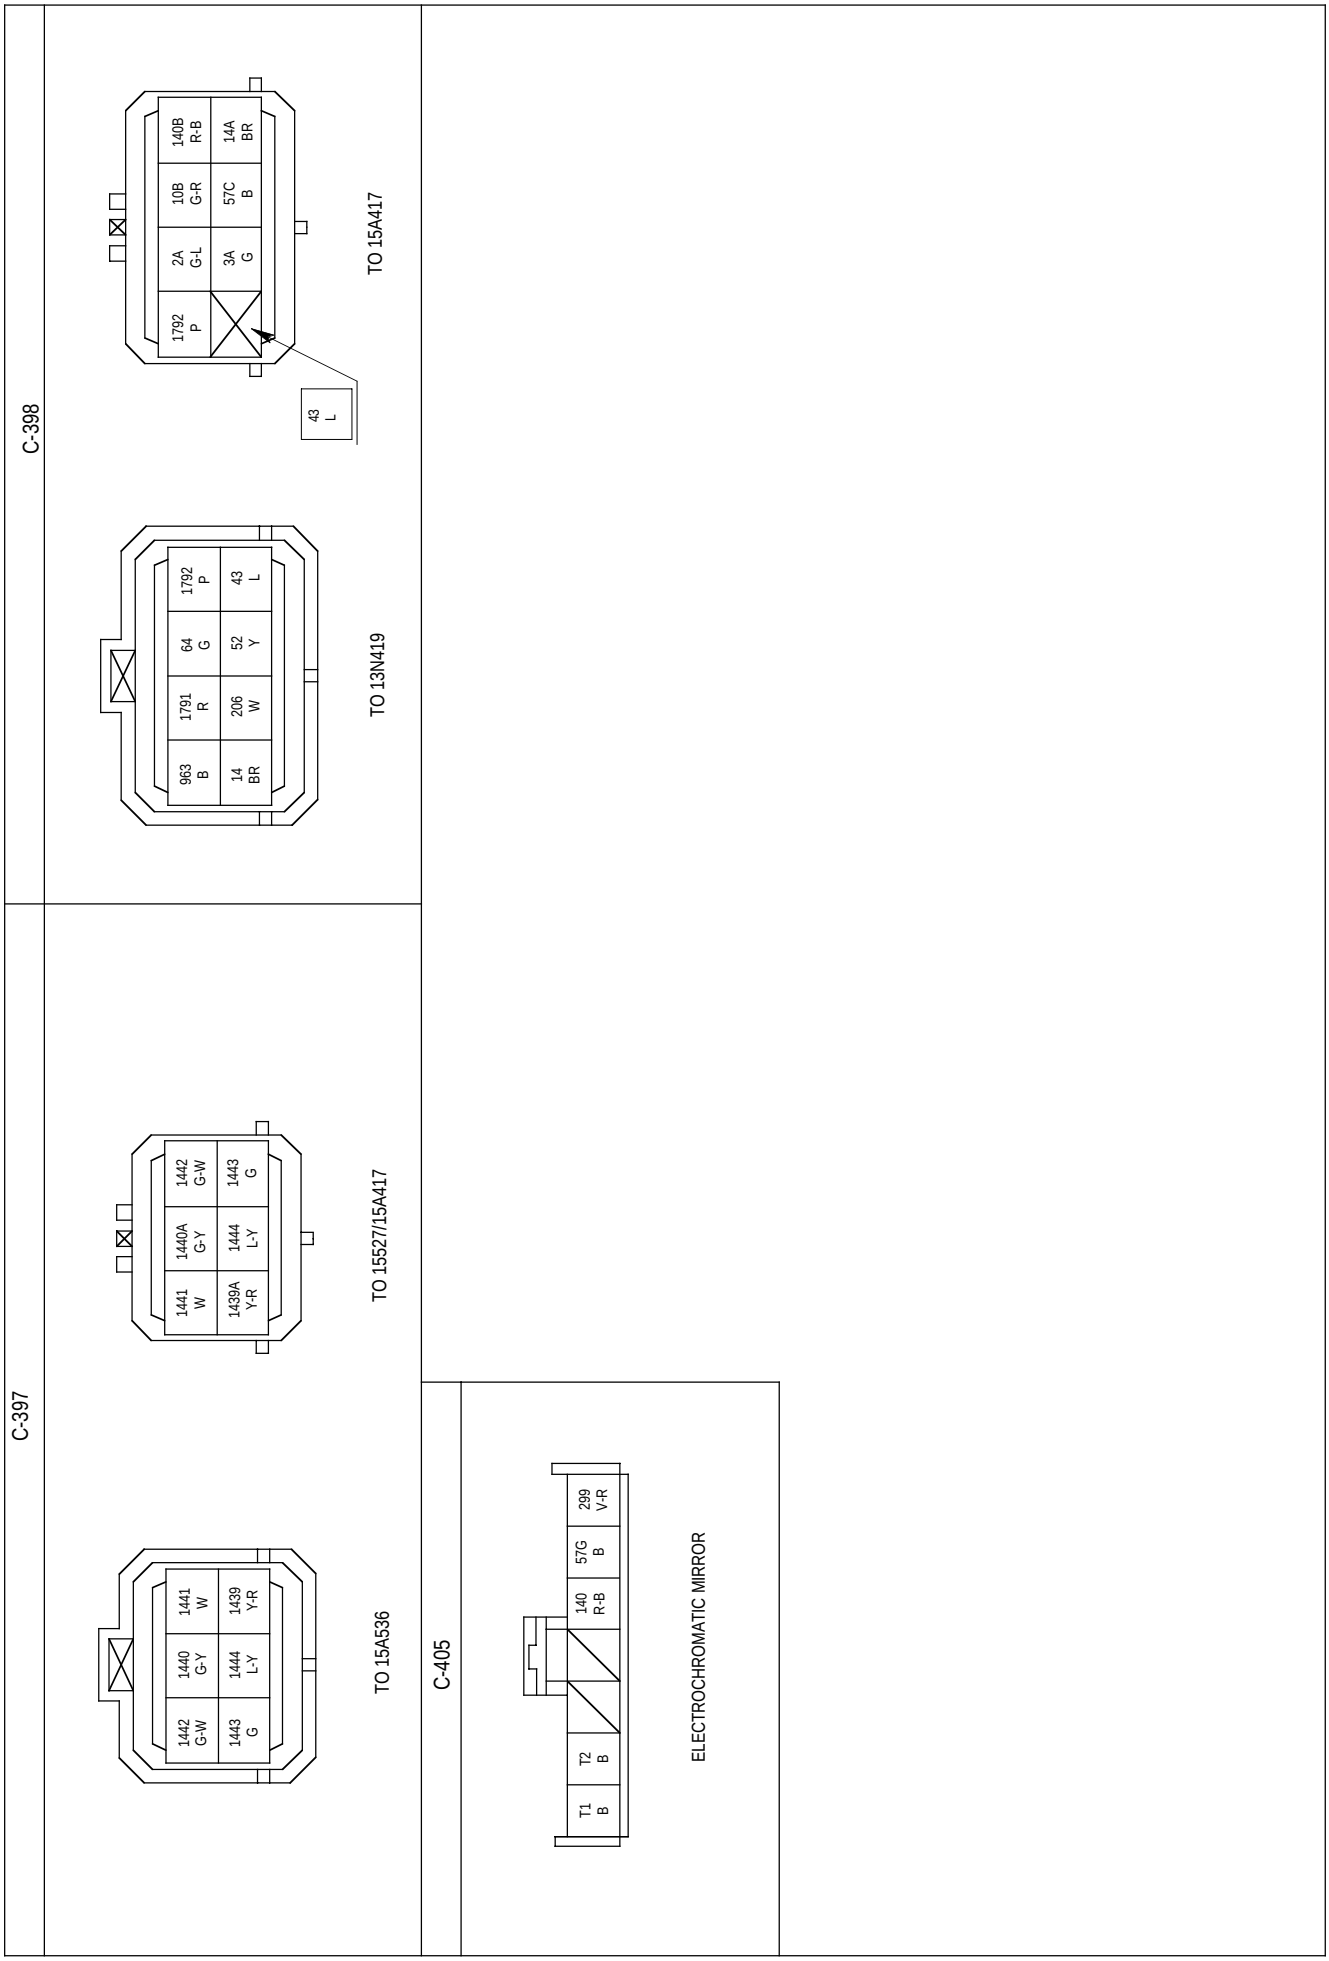
C-398
1792 P
2A G-L
10B G-R
140B R-B
3A G
57C B
14A BR
43 L
TO 15A417
963 B
1791 R
64 G
1792 P
14 BR
206 W
52 Y
43 L
TO 13N419
C-397
1442 G-W
1440 G-Y
1441 W
1443 G
1444 L-Y
1439 Y-R
TO 15A536
1441 W
1440A G-Y
1442 G-W
1439A Y-R
1444 L-Y
1443 G
TO 15527/15A417
C-405
T1 B
T2 B
140 R-B
57G B
299 V-R
ELECTROCHROMATIC MIRROR

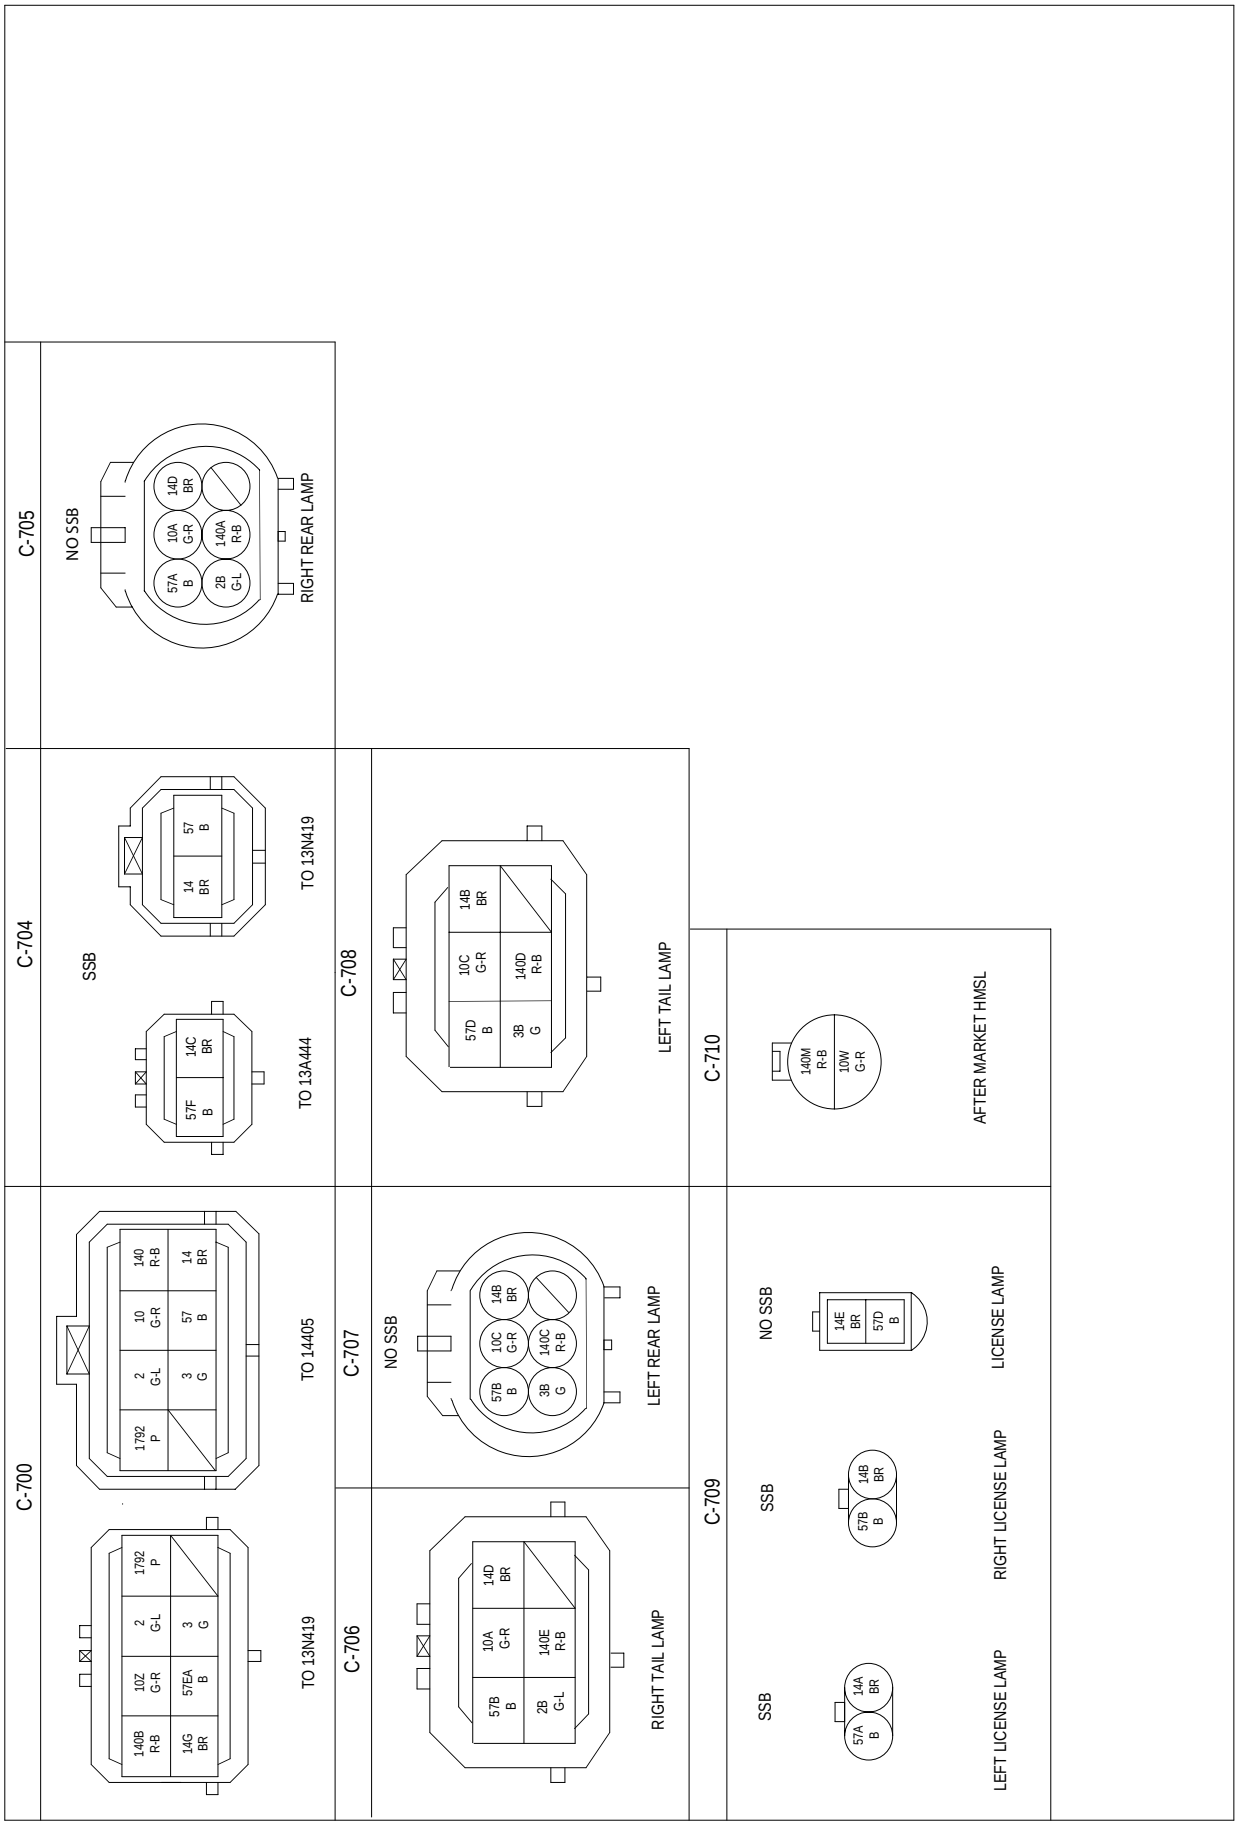

Login Tracking Code

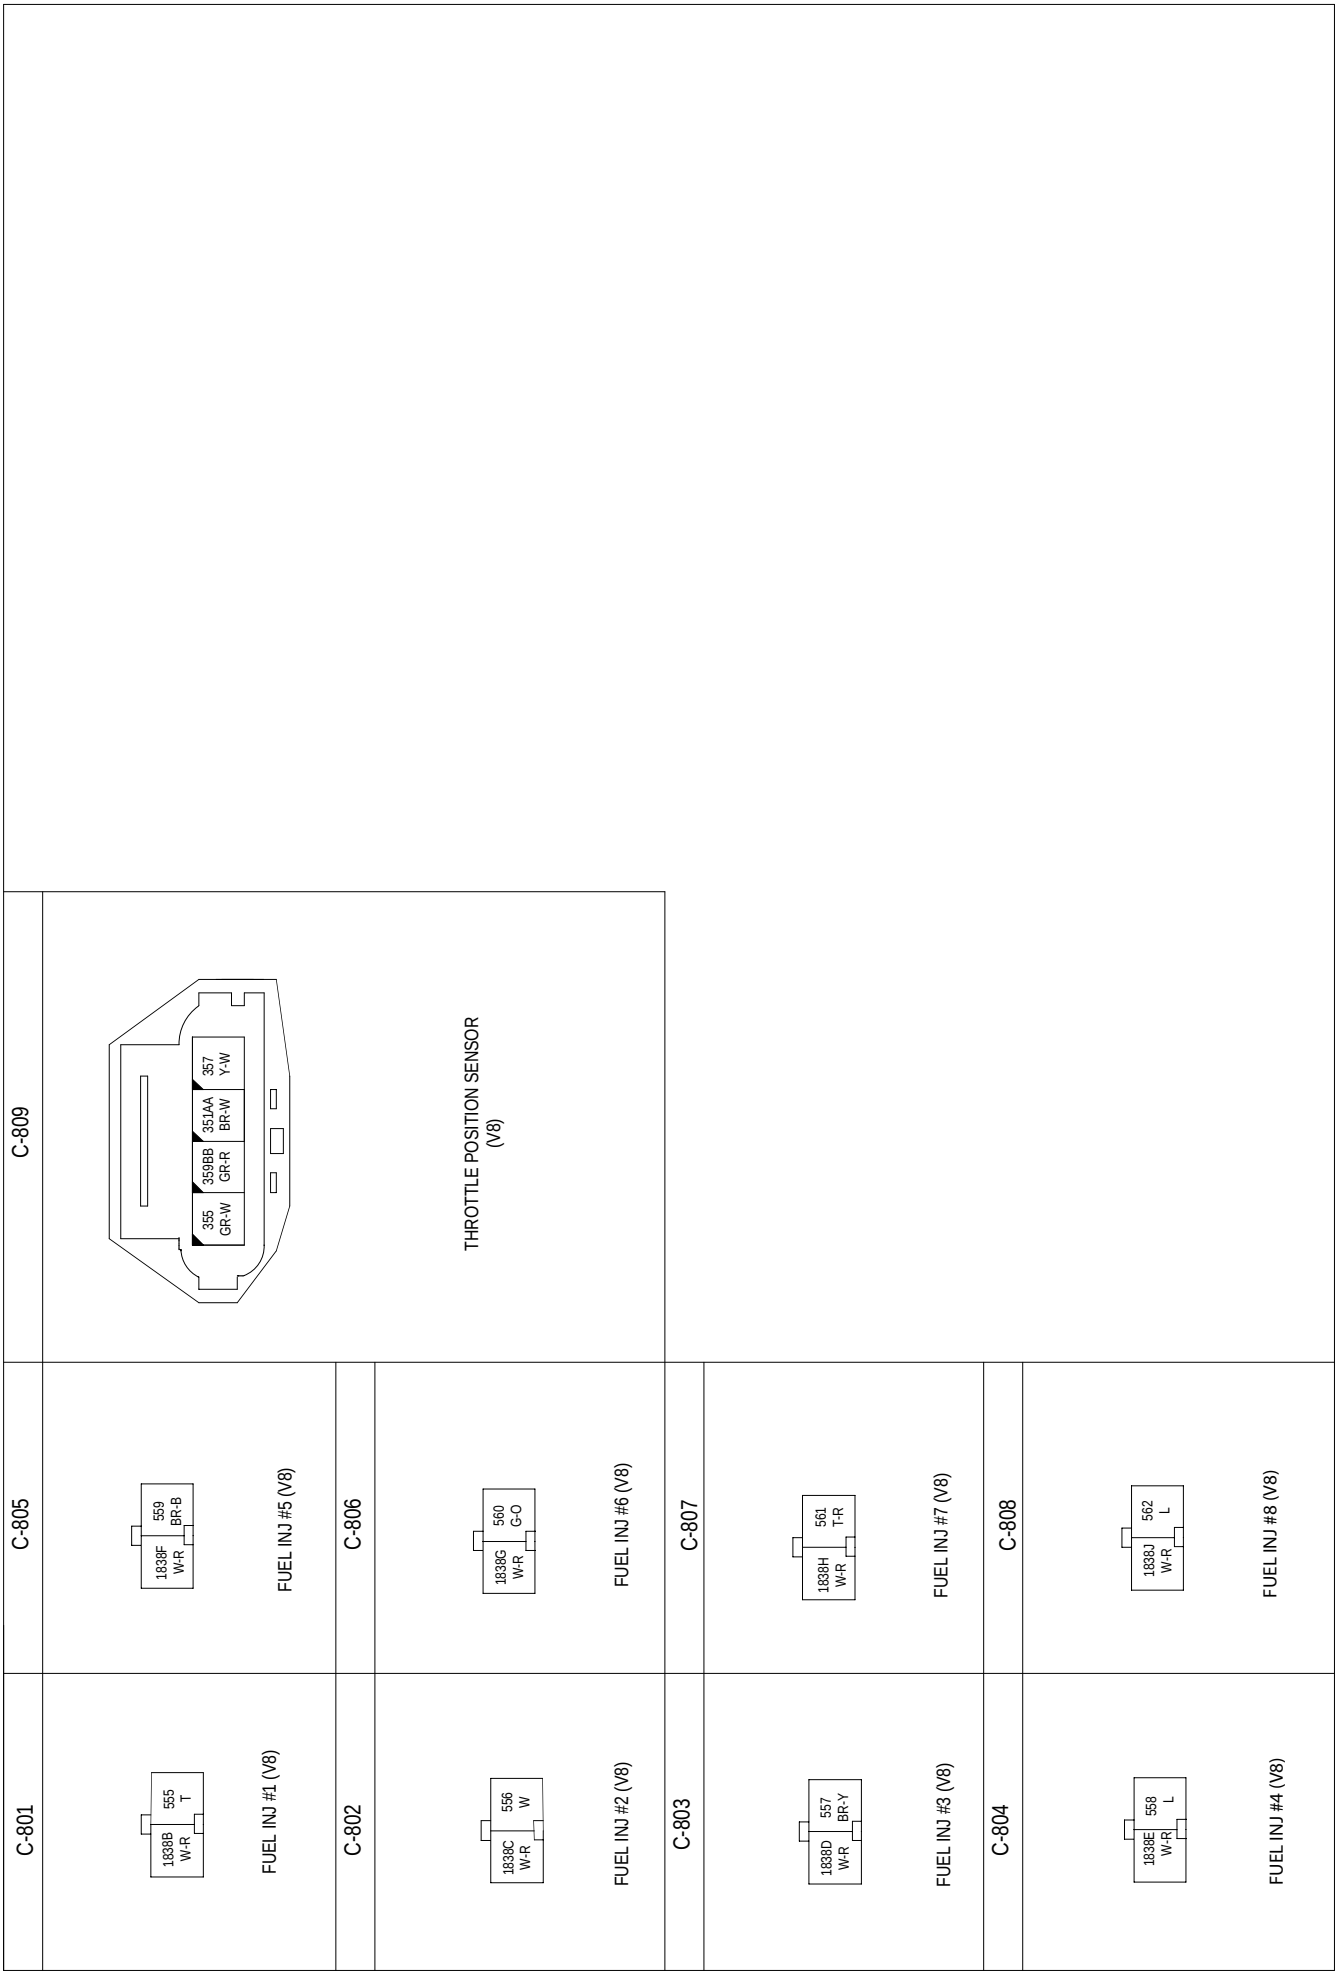
C-801
1838B W-R
555 T
FUEL INJ #1 (V8)
C-802
1838C W-R
556 W
FUEL INJ #2 (V8)
C-803
1838D W-R
557 BR-Y
FUEL INJ #3 (V8)
C-804
1838E W-R
558 L
FUEL INJ #4 (V8)
C-805
1838F W-R
559 BR-B
FUEL INJ #5 (V8)
C-806
1838G W-R
560 G-O
FUEL INJ #6 (V8)
C-807
1838H W-R
561 T-R
FUEL INJ #7 (V8)
C-808
1838J W-R
562 L
FUEL INJ #8 (V8)
C-809
355 GR-W
359BB GR-R
351AA BR-W
357 Y-W
THROTTLE POSITION SENSOR (V8)

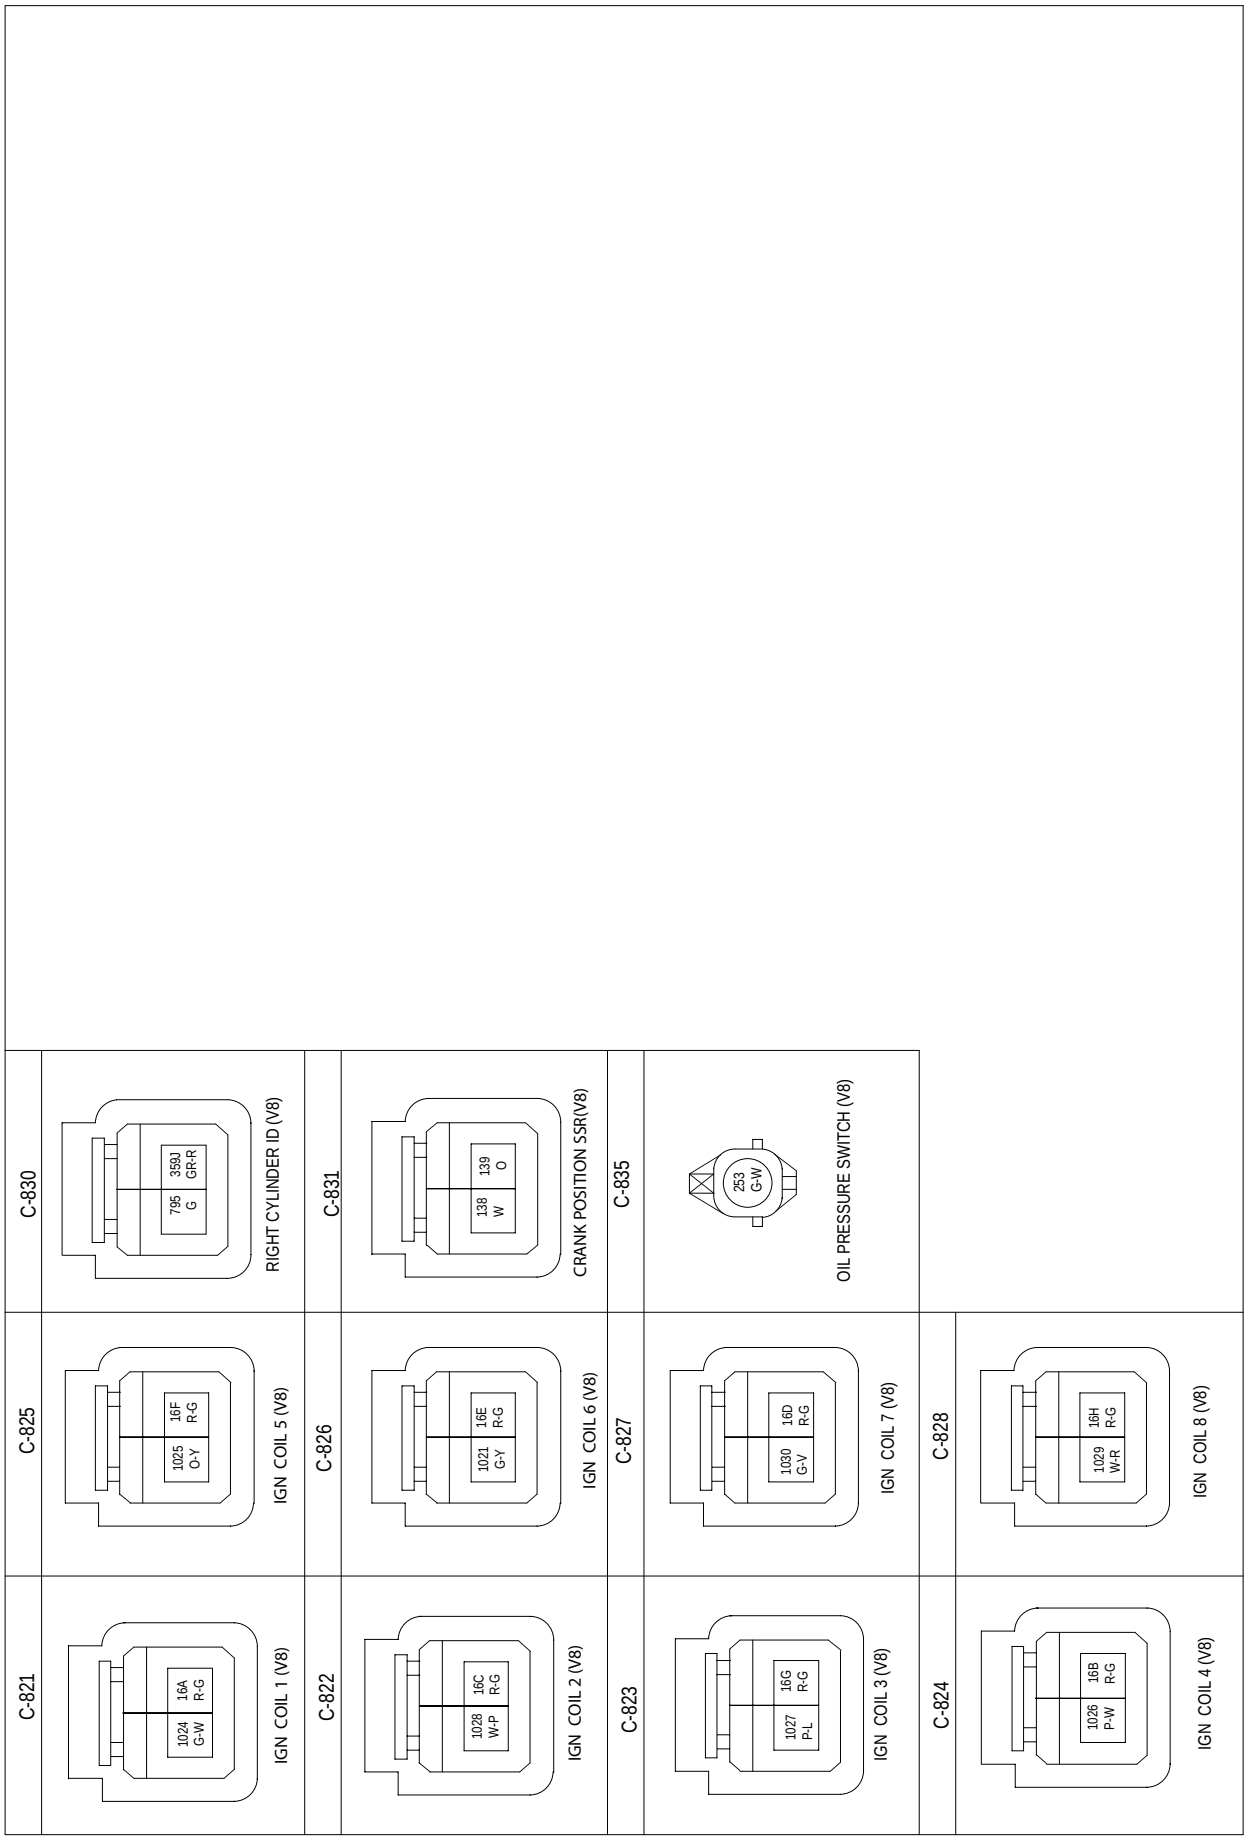

Login Tracking Code

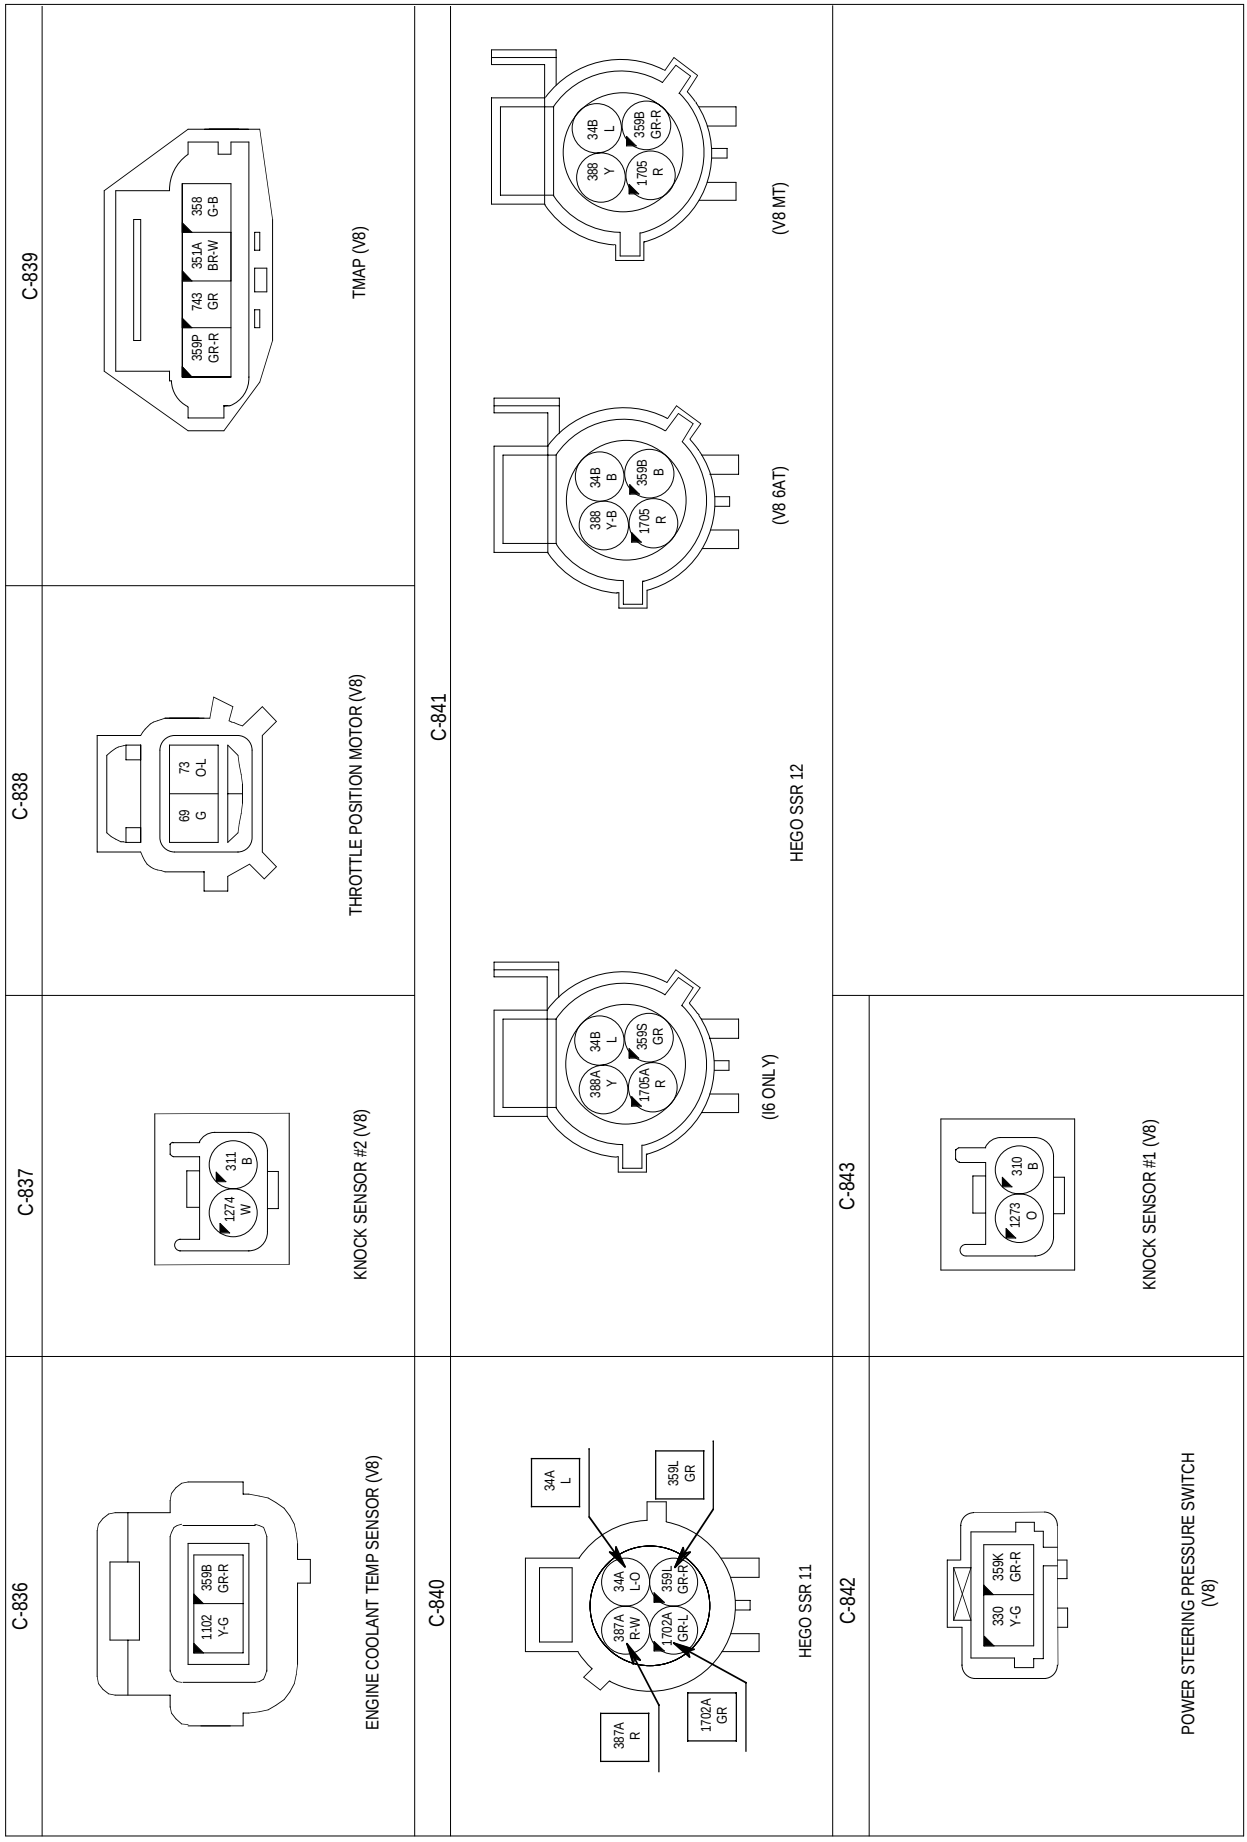

Login Tracking Code

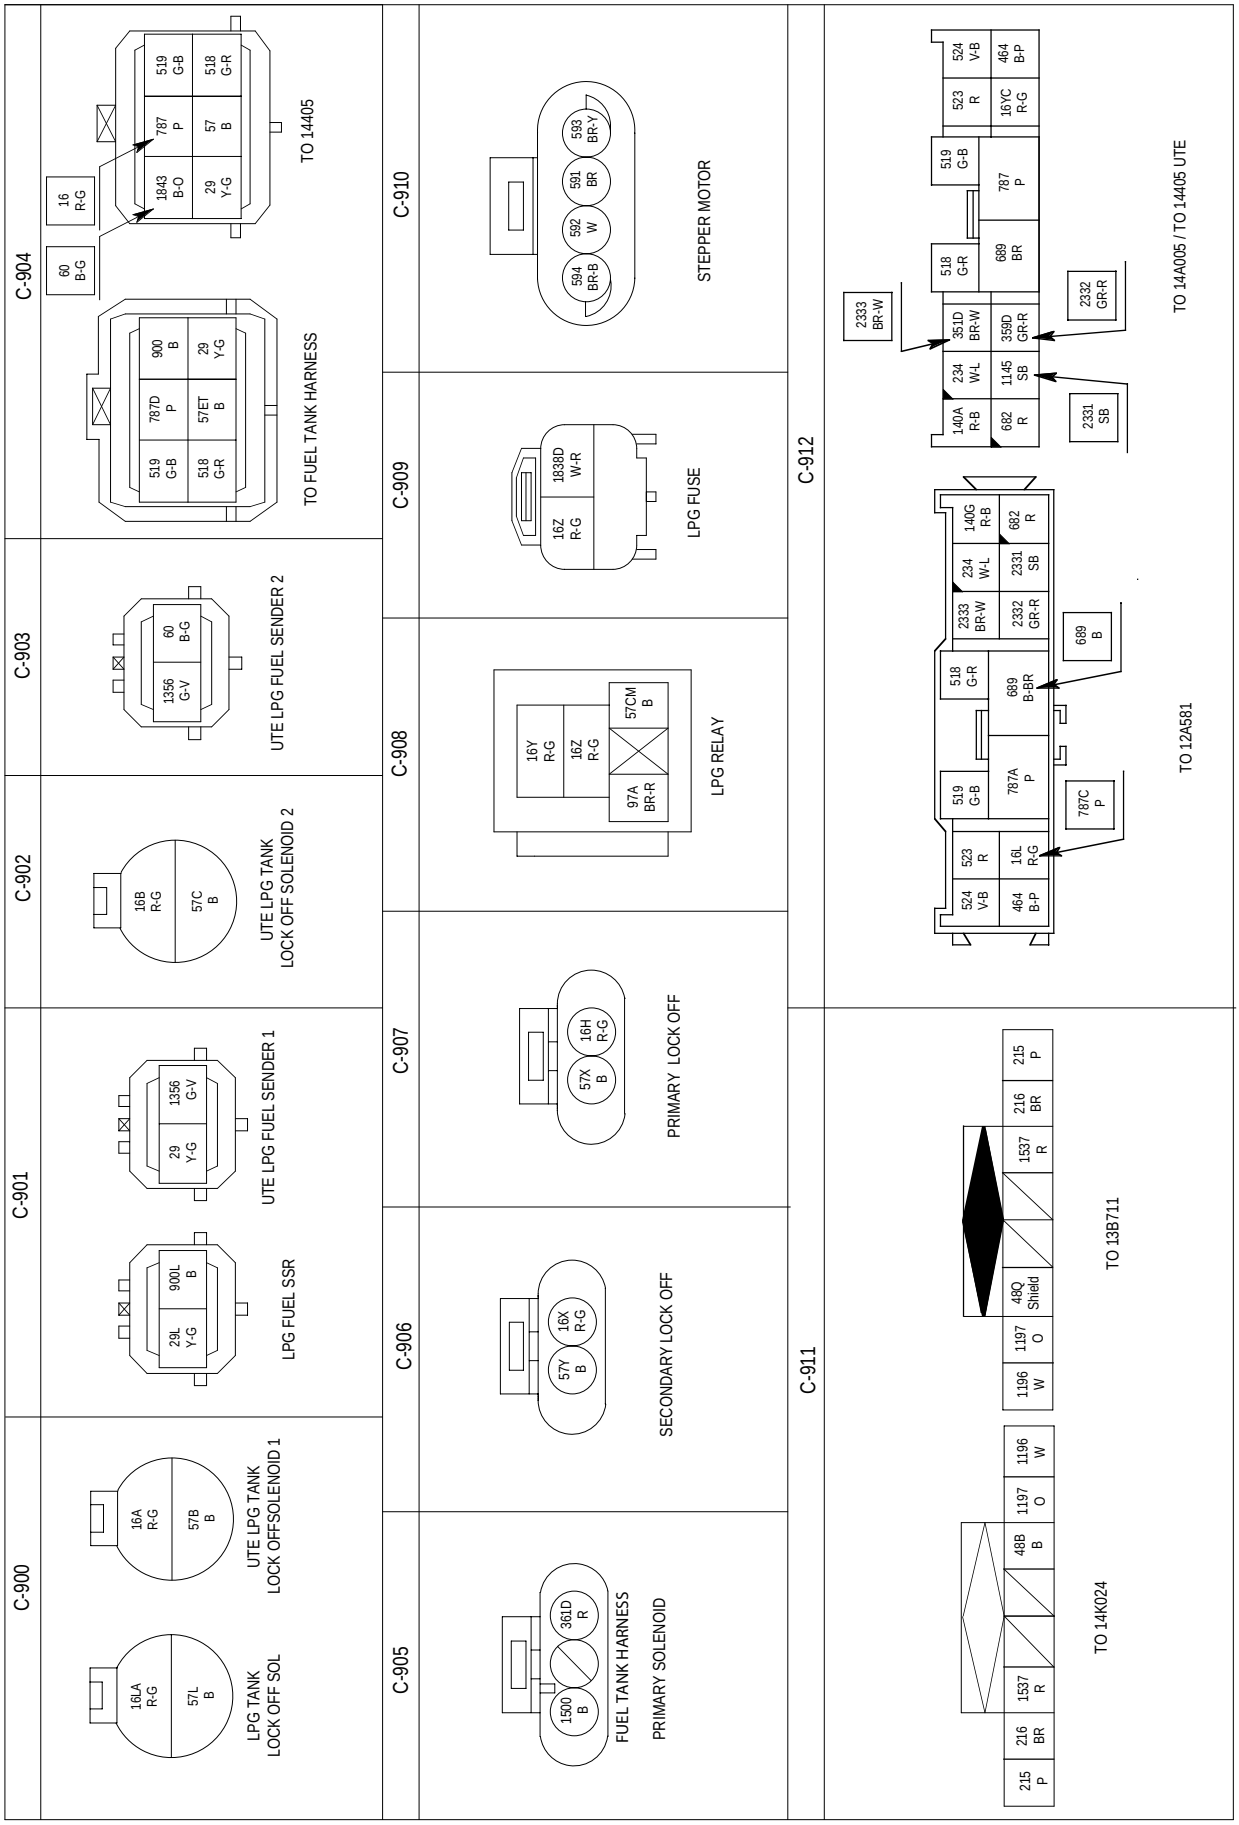

Login Tracking Code

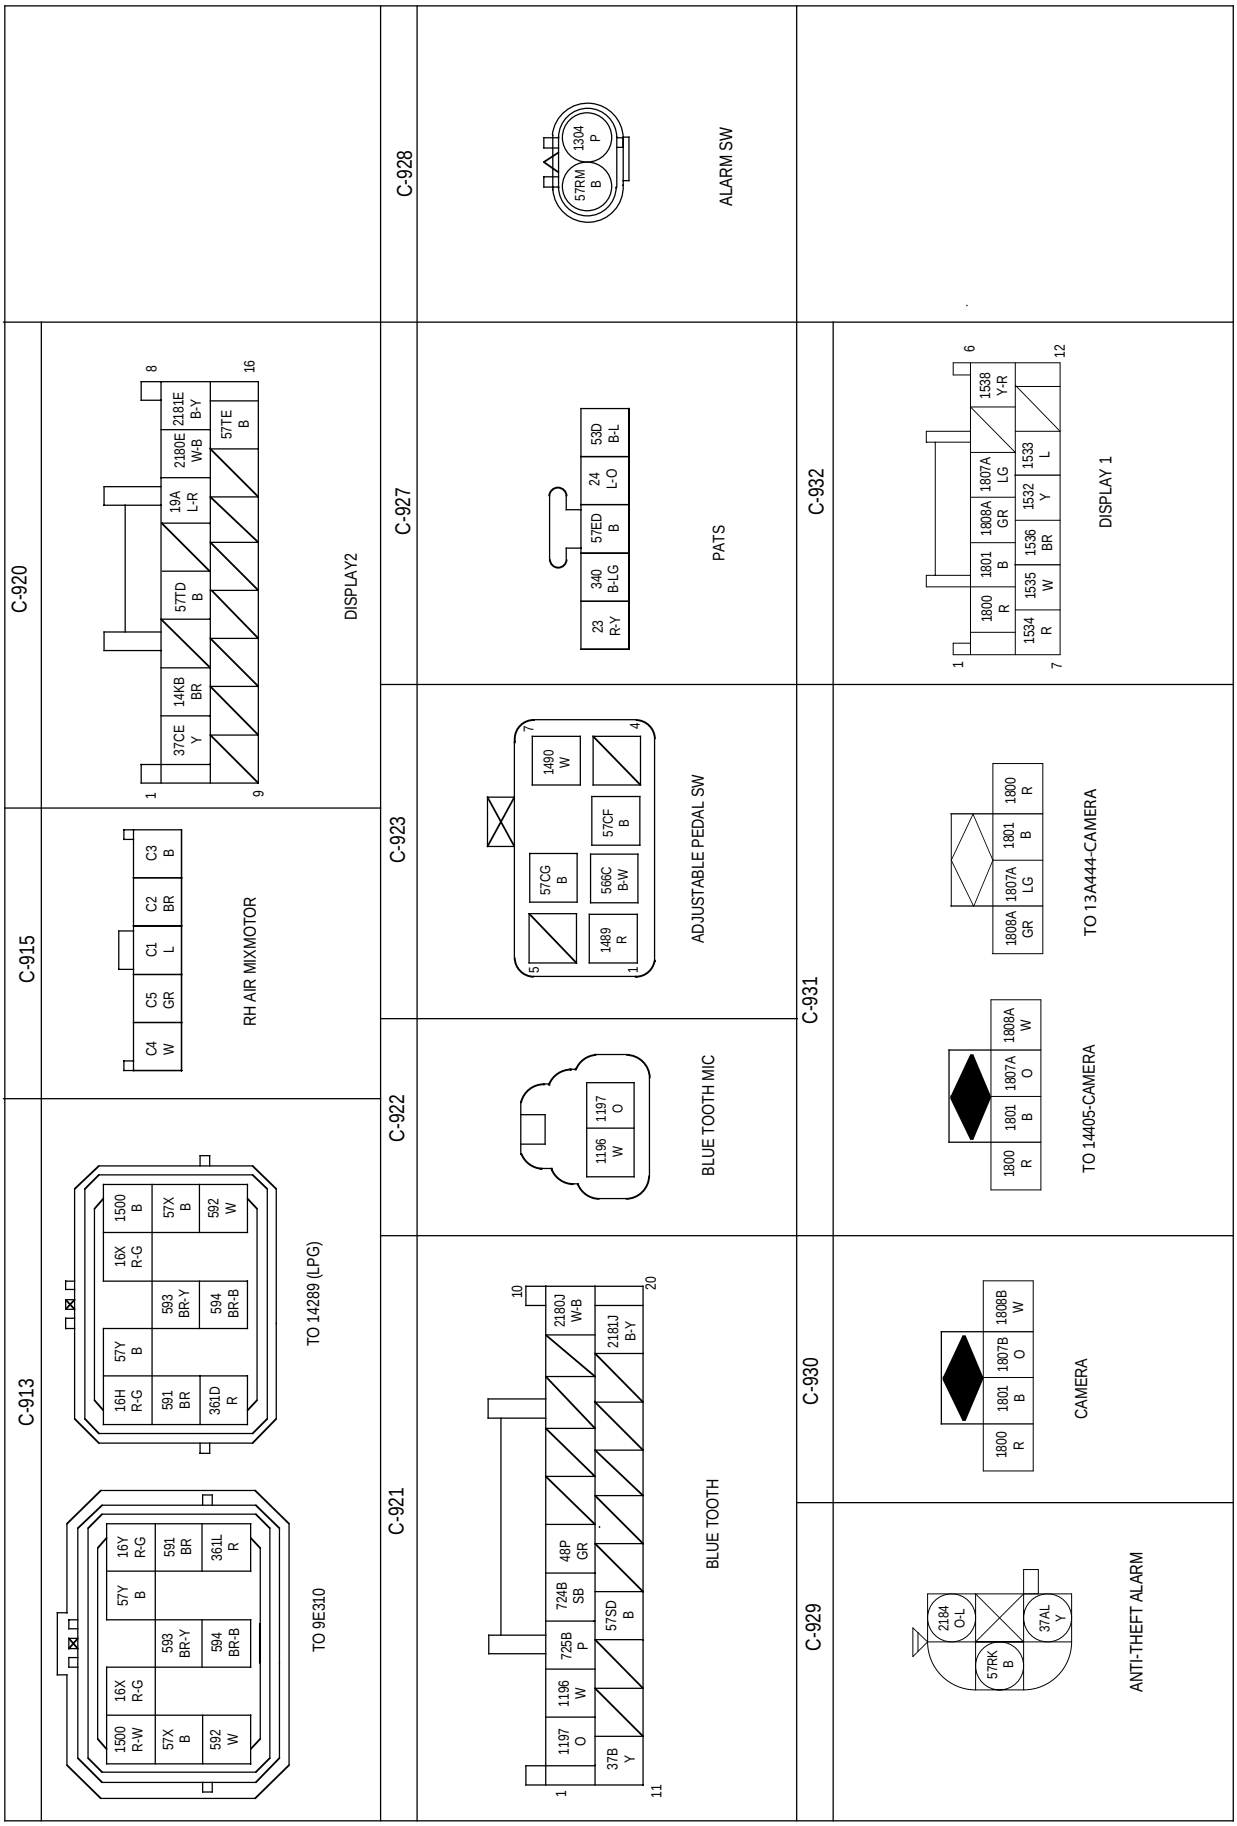

Login Tracking Code

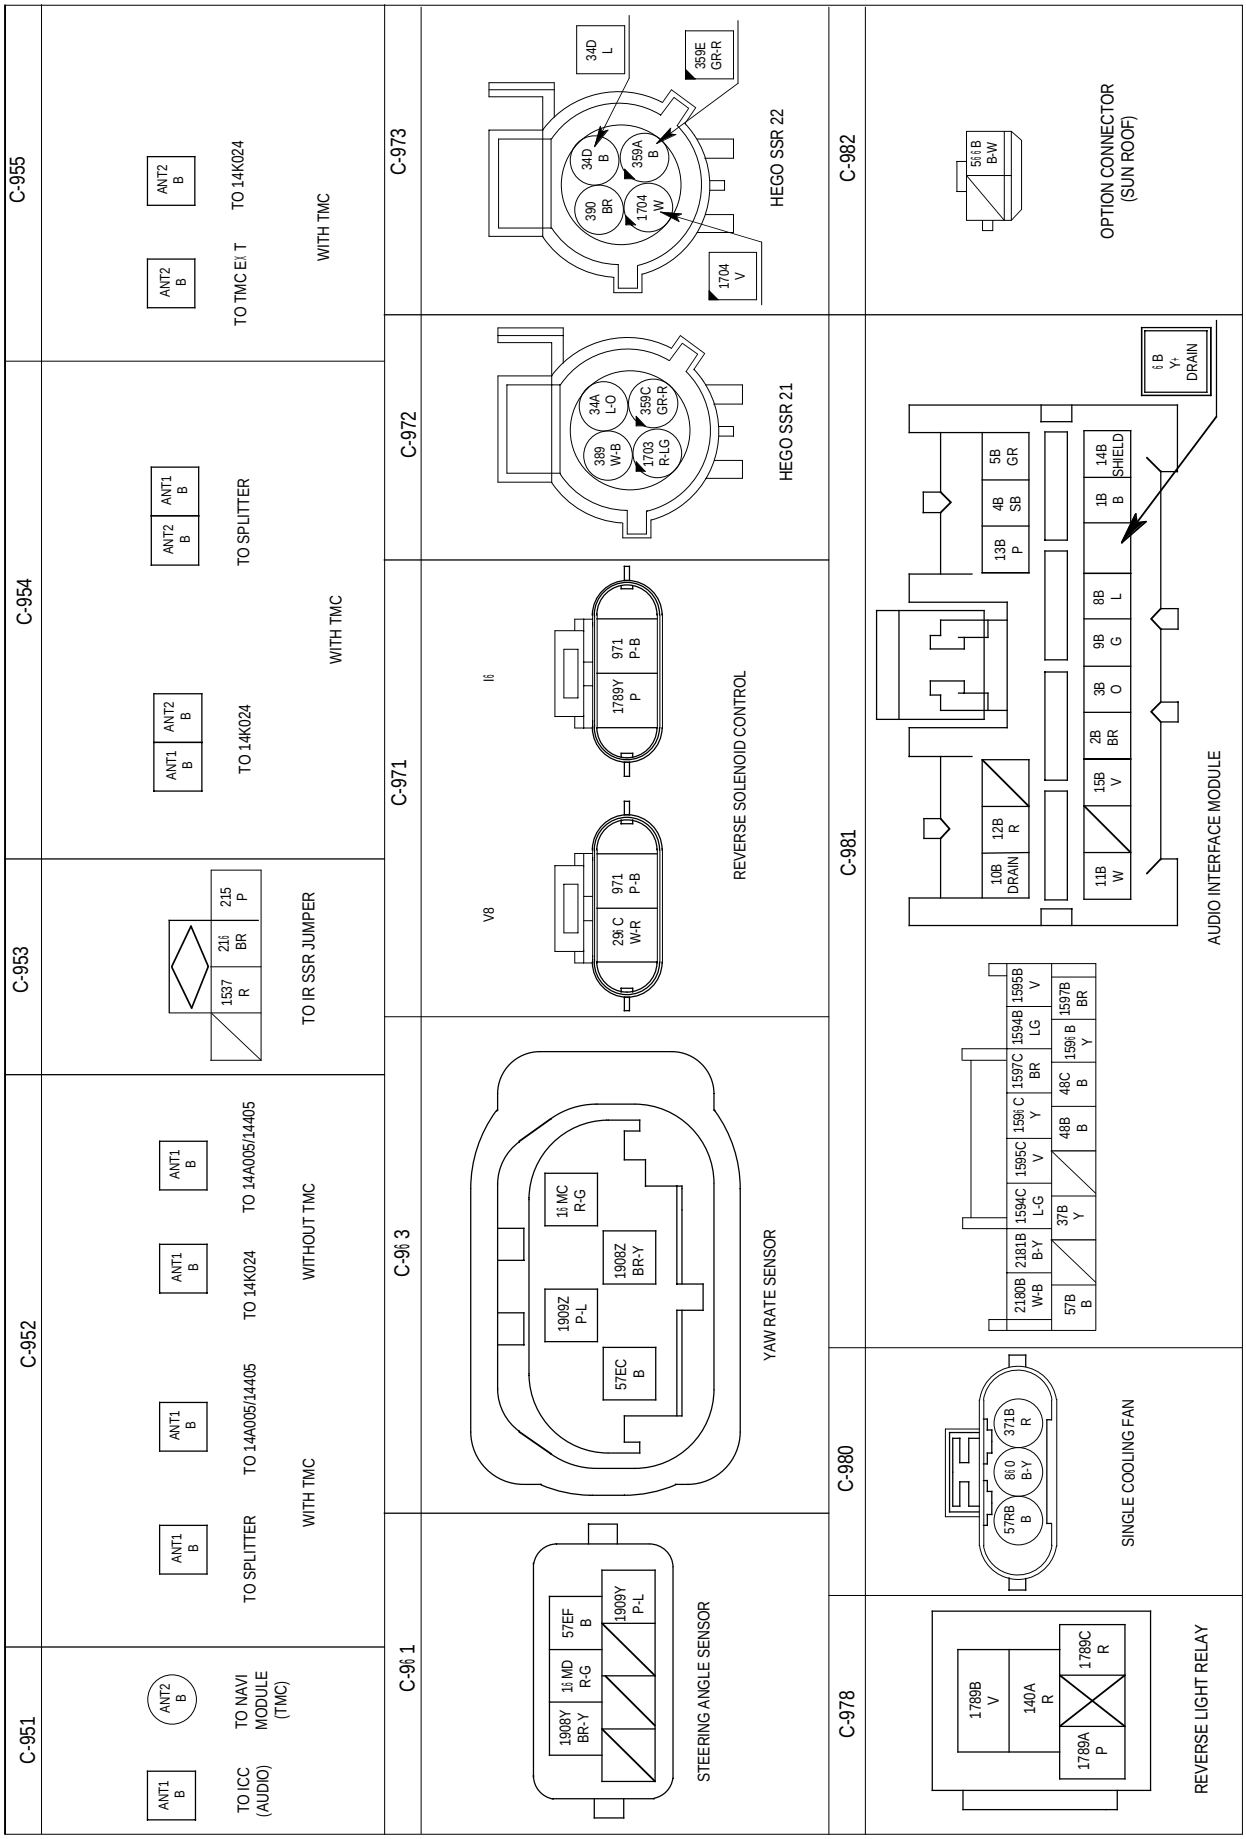

Login Tracking Code

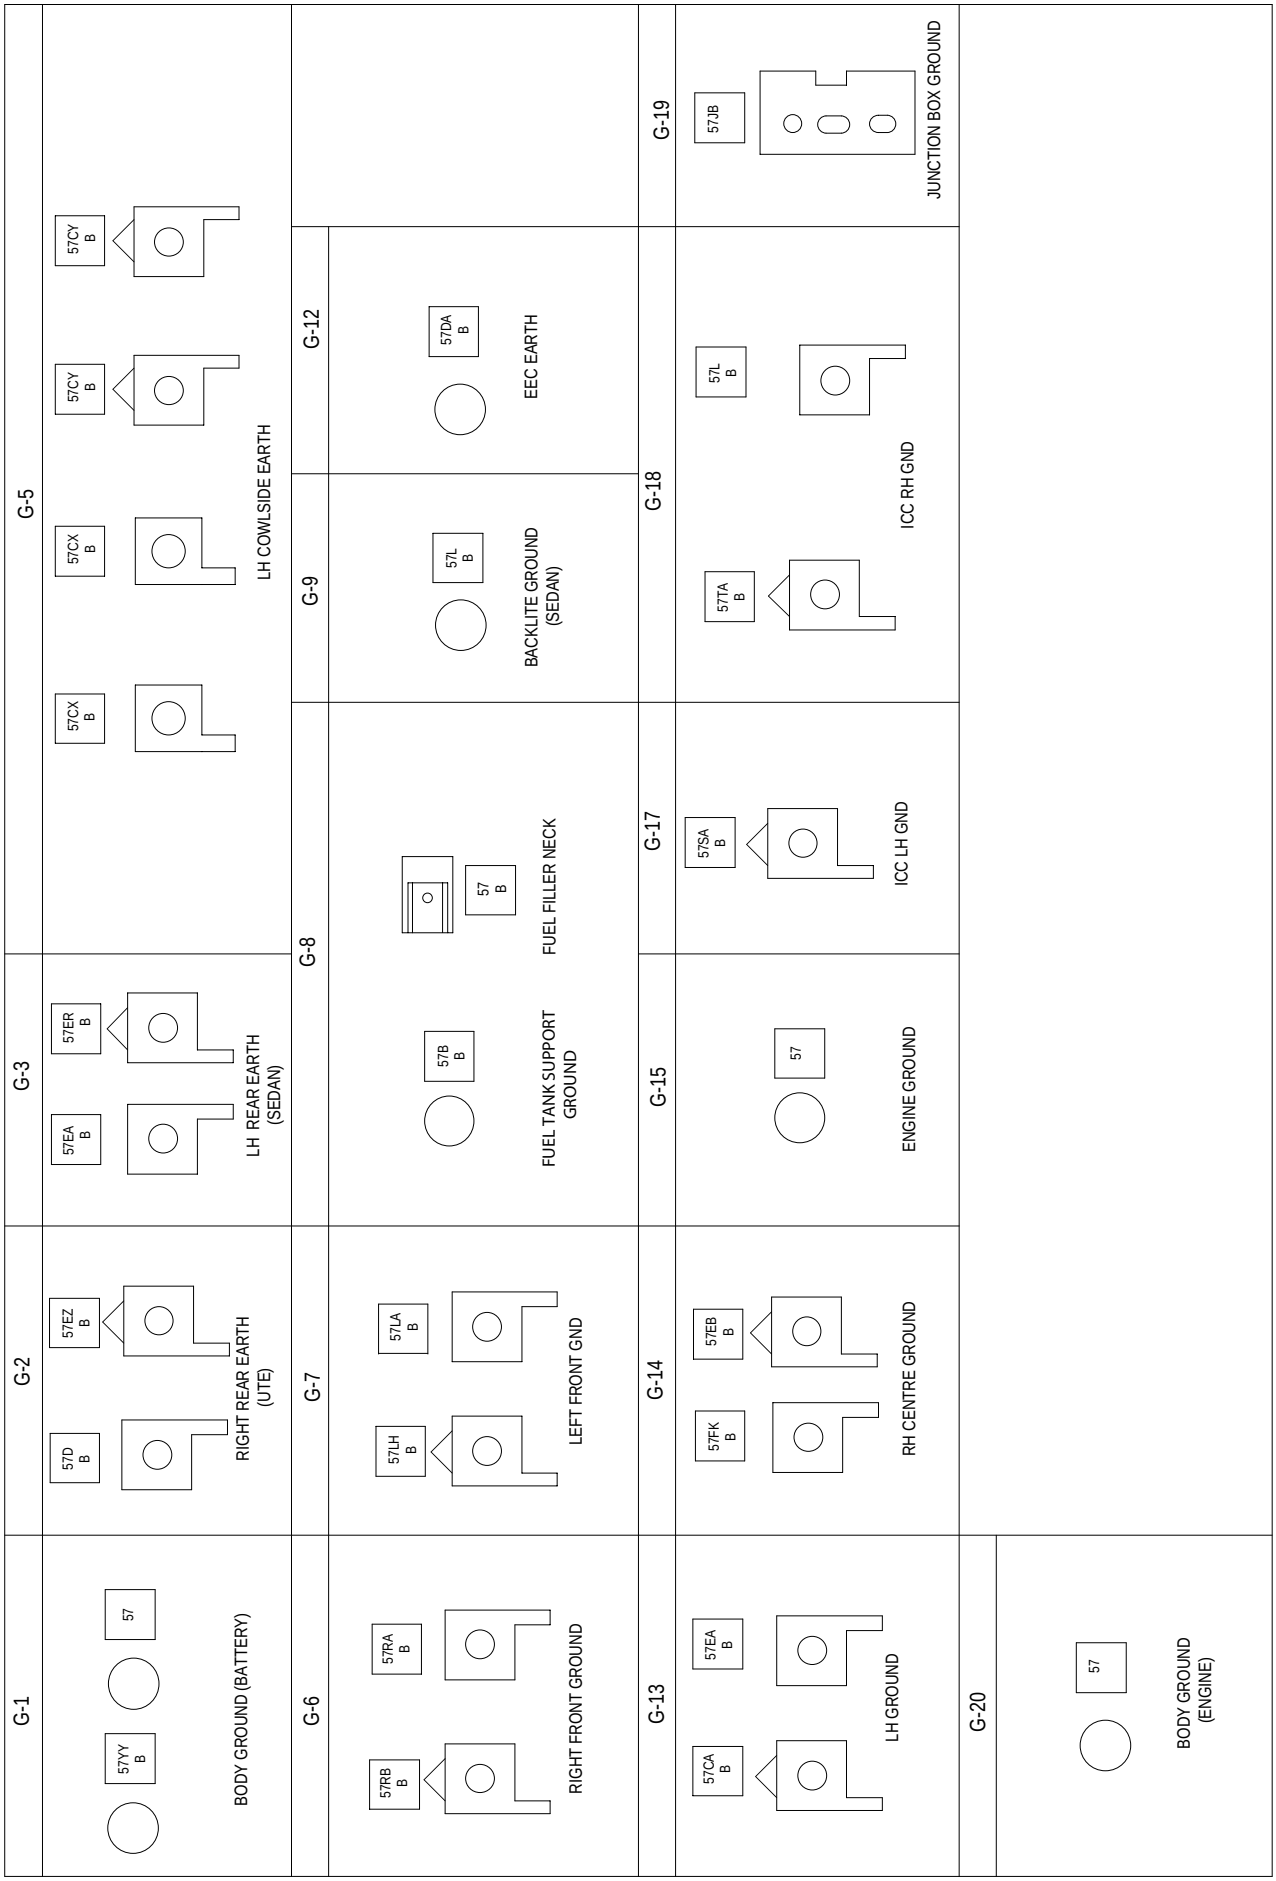

Login Tracking Code