



645Ci

Congratulations, and thank you for choosing a BMW.

Thorough familiarity with your vehicle will provide you with enhanced control and security when you drive it. We therefore have this request:

Please take the time to read this Owner's Manual and familiarize yourself with the information that we have compiled for you before starting off in your new vehicle. It contains important data and instructions intended to assist you in gaining maximum use and satisfaction from your BMW's unique range of technical features. The manual also contains information on maintenance designed to enhance operating safety and contribute to maintaining the value of your BMW throughout an extended service life.

This Owner's Manual should be considered a permanent part of this vehicle. It should stay with the vehicle when sold to provide the next owner with important operating, safety and maintenance information.

This manual is supplemented by a Service and Warranty Information Booklet for US models or a Warranty and Service Guide Booklet for Canadian models.

We wish you an enjoyable driving experience.

BMW AG

© 2003 Bayerische Motoren Werke
Aktiengesellschaft
Munich, Germany
Reprinting, including excerpts, only with the
written consent of BMW AG, Munich.
Order No. 01 41 0 157 683
US English IX/03, 5 10
Printed in Germany
Printed on environmentally friendly paper,
bleached without chlorine, suitable for recycling.

Contents

The fastest way to find specific topics is to use the index, refer to page 183.

Using this Owner's Manual

- 4** Notes
- 7** Reporting safety defects

At a glance

- 11** Cockpit
- 17** Control Center
- 21** Voice command system

Controls

- 26** Opening and closing
- 36** Adjustments
- 43** Transporting children safely
- 46** Driving
- 62** Everything under control
- 73** Technology for comfort, convenience and safety
- 82** Lamps
- 85** A congenial climate
- 91** Practical interior accessories

Driving tips

- 98** Things to remember when driving

Navigation

- 104** Starting navigation system
- 106** Destination entry
- 113** Destination guidance
- 117** What to do if ...

Entertainment

- 120** On/off, tone
- 124** Radio
- 128** CD Compact Disc
- 131** CD changer

Communications

- 136** Telephoning
- 147** TeleService, BMW Assist

Mobility

- 154** Refueling
- 156** Wheels and tires
- 162** Under the hood
- 166** Maintenance
- 168** Rules and regulations
- 169** Replacing components
- 173** Giving and receiving assistance

Reference

- 180** Technical data
- 183** Everything from A to Z

Notes

Using this Owner's Manual

We have made every effort to ensure that you are able to find what you need in this Owner's Manual as quickly as possible. The fastest way to find specific topics is to use the detailed index at the back of the manual. If you wish to gain an initial overview of your vehicle, you will find this in the first chapter.

Should you want to sell your BMW some day, please remember to hand over the Owner's Manual as well; it is an important component of your vehicle.

Additional sources of information

Should you have any other questions, your BMW center will be glad to advise you at any time.

You can find information on BMW, e.g. technology, on the Internet at www.bmwusa.com.

Symbols used

 Indicates precautions that must be followed precisely in order to avoid the possibility of personal injury and serious damage to the vehicle.

 Marks the end of a specific item of information.

 Contains information that will assist you in gaining the optimum benefit from your vehicle and enable you to care more effectively for your vehicle.

 Refers to measures that can be taken to help protect the environment.

* Indicates special equipment, country-specific equipment and optional extras subject to availability.

"..." Identifies Control Display texts used to select individual functions.

Symbols on vehicle components

 Indicates that you should consult the relevant section of this Owner's Manual for information on a particular part or assembly.

The individual vehicle

On purchasing your BMW, you have decided in favor of a model with individualized equipment and features. This Owner's Manual describes the entire array of options and equipment available with a specific BMW model.

Please bear in mind that the manual may contain information on accessories and equipment that you have not specified for your own vehicle. Sections describing options and special equipment are marked by asterisks * to assist you in identifying possible differences between the descriptions in this manual and your own vehicle's equipment.

Should your BMW be equipped with features or accessories not described in this manual, please consult the enclosed Supplementary Owner's Manual(s).

Editorial notice

BMW pursues a policy of continuous, ongoing development that is conceived to ensure that our vehicles continue to embody the highest quality and safety standards combined with advanced, state-of-the-art technology. For this reason, it is possible that the features described in this Owner's Manual could differ from those on your vehicle. Nor can errors and omissions be entirely ruled out. You are therefore asked to appreciate that no legal claims can be entertained on the basis of the data, illustrations or descriptions in this Owner's Manual.

For your own safety

Fuels

 Use unleaded gasoline only. Fuels containing up to and including 10% ethanol or other oxygenates with up to 2.8% oxygen by weight – that is, 15% MTBE or 3% methanol plus an equivalent amount of co-solvent – will not void the applicable warranties with respect to defects in materials or workmanship. Field experience has indicated significant differences in fuel quality – volatility, composition, additives, etc. – among gasolines offered for sale in the United States and Canada. The use of poor-quality fuels may result in drivability, starting and stalling problems, especially under certain environmental conditions such as high ambient temperature and high altitude. Should you encounter drivability problems which you suspect could be related to the fuel you are using, we recommend that you respond by switching to a recognized high-quality brand. Failure to comply with these recommendations may result in unscheduled maintenance. Follow the relevant safety rules when you are handling gasoline.◀

Maintenance and repair

 Advanced technology, e.g. the use of modern materials and high-performance electronics, requires specially adapted maintenance and repair methods. Therefore, only have corresponding work on your BMW carried out by a BMW center or a workshop that works according to BMW repair procedures with correspondingly trained personnel. If work is carried out improperly there is a danger of consequential damage and the related safety risks.◀

Parts and accessories

 For your own safety, use genuine parts and accessories approved by BMW.

When you purchase accessories tested and approved by BMW and Genuine BMW Parts, you simultaneously acquire the assurance that they have been thoroughly tested by BMW to ensure optimum performance when installed on your vehicle. BMW warrants these parts to be free from defects in material and workmanship. BMW will not accept any liability for damage resulting from installation of parts and accessories not approved by BMW. BMW cannot test every product made by other manufacturers to verify if it can be used on a BMW safely and without risk to either the vehicle, its operation, or its occupants.

Genuine BMW Parts, BMW Accessories and other products approved by BMW, together with professional advice on using these items, are available from all BMW centers.

Installation and operation of non-BMW approved accessories such as alarms, radios, amplifiers, radar detectors, wheels, suspension components, brake dust shields, telephones – including operation of any portable phone from within the vehicle without using an externally mounted antenna – or transceiver equipment, for instance, CBs, walkie-talkie, ham radio or similar accessories, may cause extensive damage to the vehicle, compromise its safety, interfere with the vehicle's electrical system or affect the validity of the BMW Limited Warranty. See your BMW center for additional information.◀

 Maintenance, replacement, or repair of the emission control devices and systems may be performed by any automotive repair establishment or individual using any certified automotive part.◀

Service and warranty

We recommend that you read this publication thoroughly.

Your BMW is covered by the following warranties:

- ▷ New Vehicle Limited Warranty
- ▷ Rust Perforation Limited Warranty
- ▷ Federal Emissions System Defect Warranty
- ▷ Federal Emissions Performance Warranty
- ▷ California Emission Control System Limited Warranty.

Detailed information about these warranties is listed in the Service and Warranty Information Booklet for US models or in the Warranty and Service Guide Booklet for Canadian models.

Reporting safety defects

The following only applies to vehicles owned and operated in the US.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying BMW of North America, LLC, P.O. Box 1227, Westwood, New Jersey 07675-1227, Telephone (800) 831-1117.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or BMW of North America, LLC.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.





At a glance

This overview of buttons, switches and displays is intended to serve as a source of orientation in your vehicle's operating environment. The section will also assist you in becoming acquainted with the control concepts and options available for operating the various systems.

Cockpit

All around the steering wheel: controls and displays



- 1 Exterior mirrors 40
2 Electric power windows 33

3 Turn signal indicators 53

High-beams,
headlight flasher 83

Standing lamps 83

CHECK Check Control 65

BC Computer 67

4 Buttons on steering wheel



Portable phone*:

- ▷ Accepting a call
- ▷ Start dialing
- ▷ Ending call



Volume



Voice command system



- ▷ Fast forward/reverse:
Press briefly: change station
Press longer: manual tuning or automatic station-search function scan
- ▷ CD
Press briefly: select track
Press longer: fast forward/reverse.



Individually programmable, refer to page 42.



- ▷ Individually programmable, refer to page 42.
- ▷ Voice instructions for navigation

5 Instrument cluster 13

6



Windshield wipers 54



Rain sensor 54

7 Ignition lock 46

8 Horn: the entire surface

9



Steering wheel heater 42



Steering wheel adjustment 41

10



Cruise control 55



Active cruise control 56

11 Unlocking the engine hood 162

12 Unlocking luggage compartment lid 30

13 Parking lamps and low beams 82

14



Instrument lighting 83



Front fog lamps 84

Instrument cluster



- 1** Indicator lamps for turn signal indicators [14](#)
- 2** Speedometer with display of speed for
 - ▷ Cruise control [55](#)
 - or
 - ▷ Active cruise control [56](#)
- 3** Indicator and warning lamps [14](#)
- 4** Display for active cruise control [57](#)
- 5** Tachometer with variable advance warning field and engine oil thermometer [62, 63](#)
- 6** Indicator for
 - ▷ Indicator and warning lamps of the Check Control [65](#)
 - ▷ Speed of the cruise control [55](#)
 - ▷ Desired speed for active cruise control [57](#)
 - ▷ Clock/date [62](#)
 - ▷ Outside temperature [62](#)
- 7** Indicator for
 - ▷ Automatic transmission [51](#)
 - ▷ Sequential manual transmission [50](#)
 - ▷ Computer [67](#)
 - ▷ Date and remaining distance for service requirement [63](#)
 - ▷ Trip odometer/odometer [62](#)
 - ▷ Check Control message present [65](#)
- 8** Fuel gauge [63](#)
- 9** To set trip odometer to zero and reset for service requirement display [62](#)

Indicator and warning lamps

Technology that monitors itself

The indicator and warning lamps identified by the ● symbol are subjected to an operation check each time you switch on the ignition or start the engine. They each light up once for different periods of time.

When a malfunction occurs in a monitored system, the corresponding lamp will either fail to go out when the engine is started, or it will come on again during normal driving. For information on how you should respond when this happens, please refer to the pages indicated.



Turn signal indicators [53](#)



Active steering ● [79](#)



Handbrake/break fluid, brake hydraulics/DBC Dynamic Brake Control ● [47/ 165/ 77](#)



Handbrake/break fluid, brake hydraulics/DBC Dynamic Brake Control for Canadian models.



Airbags ● [80](#)



Service Engine Soon ● [168](#)

If the indicator lamp comes on either continuously or intermittently, this indicates a fault in the emissions-related electronic systems.

Although the vehicle remains operational, you should have the systems checked by your BMW center at the earliest possible opportunity.

Service Engine Soon indicator lamp for Canadian models.



Front fog lamps [84](#)



ABS Antilock Brake System ● [74](#)



DTC Dynamic Traction Control [76](#)



High beams/headlamp flasher [83](#)



Please fasten safety belt ● [40](#)



DSC Dynamic Stability Control ● [75](#)



Check Gas Cap [154](#)
Lamp for US models

Colors


The indicator and warning lamps can light up in different colors and combinations. The following section explains the significance of the individual colors as well as how you should respond when they appear.

- ▷ Red:
Stop immediately
or
important reminder
- ▷ Red and yellow:
Continue to drive cautiously
- ▷ Yellow:
Have the system inspected at the earliest opportunity
or
for your information
- ▷ Green or blue:
For your information.

Indicator and warning lamps of the Check Control

Other indicator and warning lamps appear in display 6 of the instrument cluster as necessary, accompanied by supplementary text on the Control Display. Refer to Check Control, page [65](#).

Comfort area: controls and displays

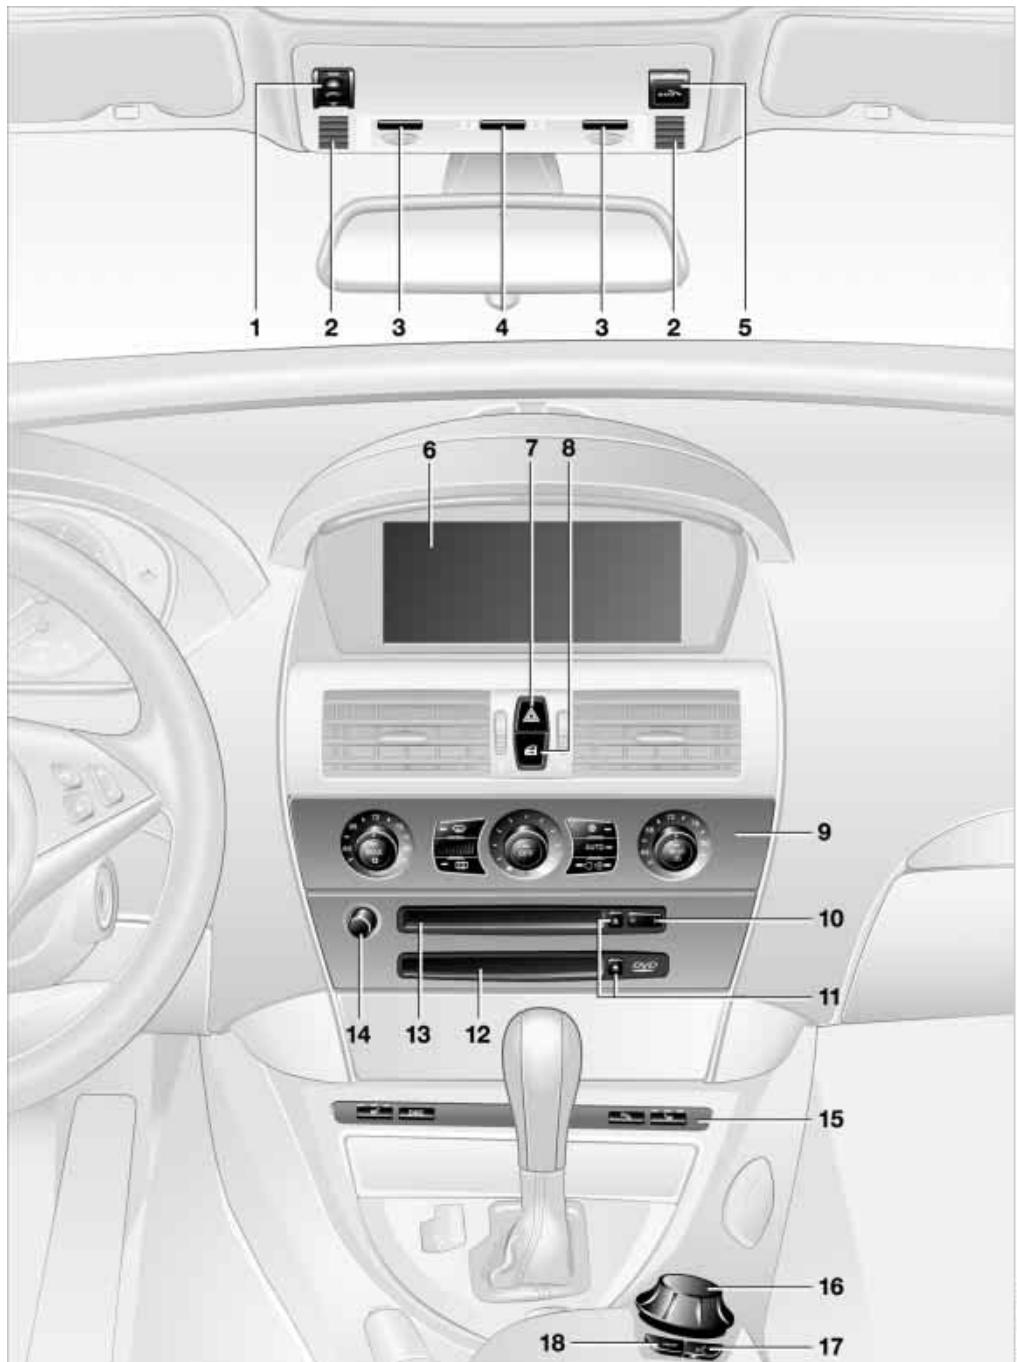

VWCG162019

- 1** Glass roof, electrical with raise function [34](#)
- 2** Microphone for
- ▷ Phone/portable phone
 - ▷ Voice command system [21](#)
- 3** Reading lamps [84](#)
- 4** Interior lamps [84](#)
- 5** Starting emergency call [173](#)
- 6** Control Display [17](#)
Displays for menu guidance
- 7** Hazard warning flashers
- 8** Central locking system [30](#)
- 9** Automatic climate control [85](#)
-  TEMP Temperature setting, left/right [86](#)
-  AUTO Automatic air distribution and volume [86](#)
-  Cooling function [86](#)
-  AUC Automatic recirculated-air control [87](#)
-  MAX Maximum cooling [86](#)
-  REST Residual heat mode [87](#)
-  OFF Switching off automatic climate control [87](#)
-  Air volume [86](#)
-  Defrost windows [86](#)
-  Rear window defroster [86](#)
- 10** Button for
- ▷ Station scan/track search [120](#)
 - ▷ CD player [128](#)
 - ▷ CD changer [132](#)
- 11** Ejecting
- ▷ Navigation CD/DVD* [104](#)
 - ▷ Audio CD [120](#)
- 12** Drive for navigation CD/DVD* [104](#)
- 13** Drive for audio CD [120](#)
- 14** Switching audio sources on/off and adjusting the volume
- 15** Center console switching center
-  Heated seats [40](#)
-  PDC Park Distance Control [73](#)
-  DSC Dynamic Stability Control [75](#)
- 16** Controller [17](#)
Movement in four directions, turn or press
- 17** Activating voice command system [21](#)
- 18** Calling up start menu [18](#)

Control Center

The Control Center groups the functions of a large number of switches. This means that these functions can be operated from a central position. The following section provides an introduction to the principle of the menu guidance. How you control the individual functions is described in the context of the relevant equipment.

Controls



- 1 Controller: you navigate through the menus of the Control Center and make adjustments by turning, pressing and moving it to the left, right, forwards or backwards
- 2 Open the start menu from any menu item
- 3 Control Display

When you turn controller, you feel a clicking. This helps you to select the desired menu item.



To avoid posing an unnecessary hazard due to inattention, both to your own vehicle's occupants and to other road users: never attempt to use the controls or make entries unless traffic and road conditions allow.◀

Menu overview

You can call up all the functions in the Control Center using five menu items.

Communication

- ▷ Portable phone*
- ▷ BMW Assist* or TeleService*.

Navigation or onboard information

- ▷ Navigation system*
- ▷ Onboard information, e.g. for display of the average fuel consumption.

Entertainment

- ▷ Radio
- ▷ CD.

Climate


- ▷ Air distribution
- ▷ Independent ventilation.

Menu item i

- ▷ Switching off the Control Display
- ▷ Traffic information
- ▷ Sound and display settings
- ▷ Settings for your vehicle, e.g. Key Memory
- ▷ Display of the maintenance requirement and dates for statutory emission and vehicle inspections.


Menu guidance

As of ignition key position 1, the following message appears on the Control Display:

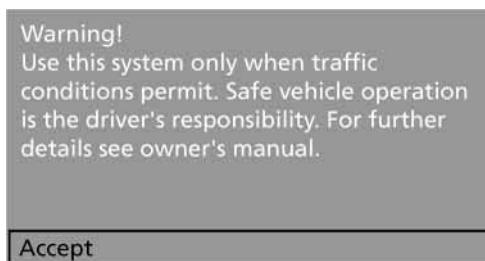

Confirm the message by pressing the controller; the start menu is opened.

Start menu

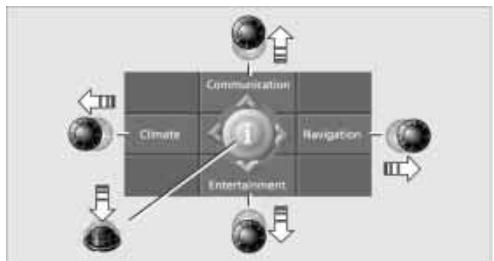

In ignition key position 2:

Via the start menu, you can call up four menus by moving the controller to the left, right, forwards or backwards. Pressing the controller opens the **i** menu.

To call up the start menu:

MENU

Press button.


To open the start menu from the **i** menu:

MENU


Press the button twice.

Displays on the Control Display


A menu

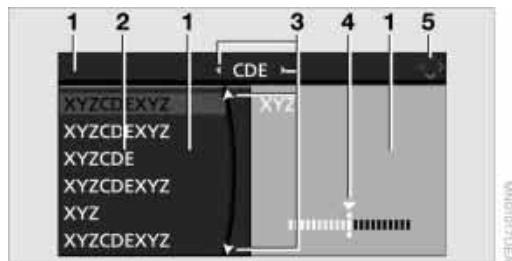

- 1 In menus, you can change fields to select the menu items they contain or to make adjustments. The active field is brighter than the others
- 2 Menu items are usually grouped in horizontal or vertical lists
- 3 Arrows indicates that other menu items can be selected in lists, but these are not visible at the moment
- 4 Adjustments are displayed in diagrams or as numbers
- 5 A symbol indicates the last selected menu item of the start menu

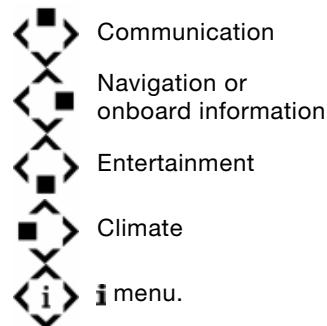

Status information

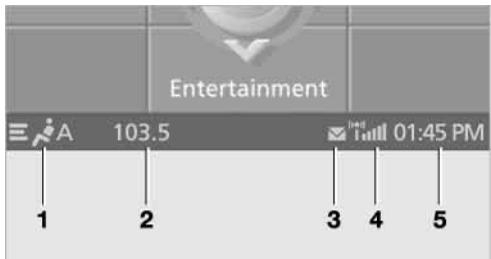

- 1 Manual or automatic air distribution for driver and passenger side
- 2 Display for Entertainment:
Radio and CD or
 Entertainment off
Display for telephone:
Name of the network operator with display for roaming:
 Roaming active
- 3 SMS received
- 4 Reception of the mobile telephone network and emergency call possible
SOS: emergency call possible
No display: emergency call not possible
- 5 Current time

If information is issued by the Check Control or inputs are made using the voice command system, a text message appears here on the Control Display.

Assistance window*



While you are operating whatever functions you like using the Control Center, you can obtain the following additional information in the assistance window:

- ▷ Short help and supplementary information texts for selected menu entries

- ▷ The computer or trip computer
- ▷ The travel route in vehicles with navigation systems
- ▷ The current position.

To select the display in the assistance window:

1. Move the controller to the right to change to the assistance window and press the controller



2. Select the menu item and press the controller.

Switch Control Display on/off

To switch off the Control Display:

1. Open start menu
2. Open the menu by pressing the controller




3. Select "Display off" and press the controller.
The status information continues to be displayed.

To switch on the Control Display:

Press the controller.

Selecting menu items and making adjustments

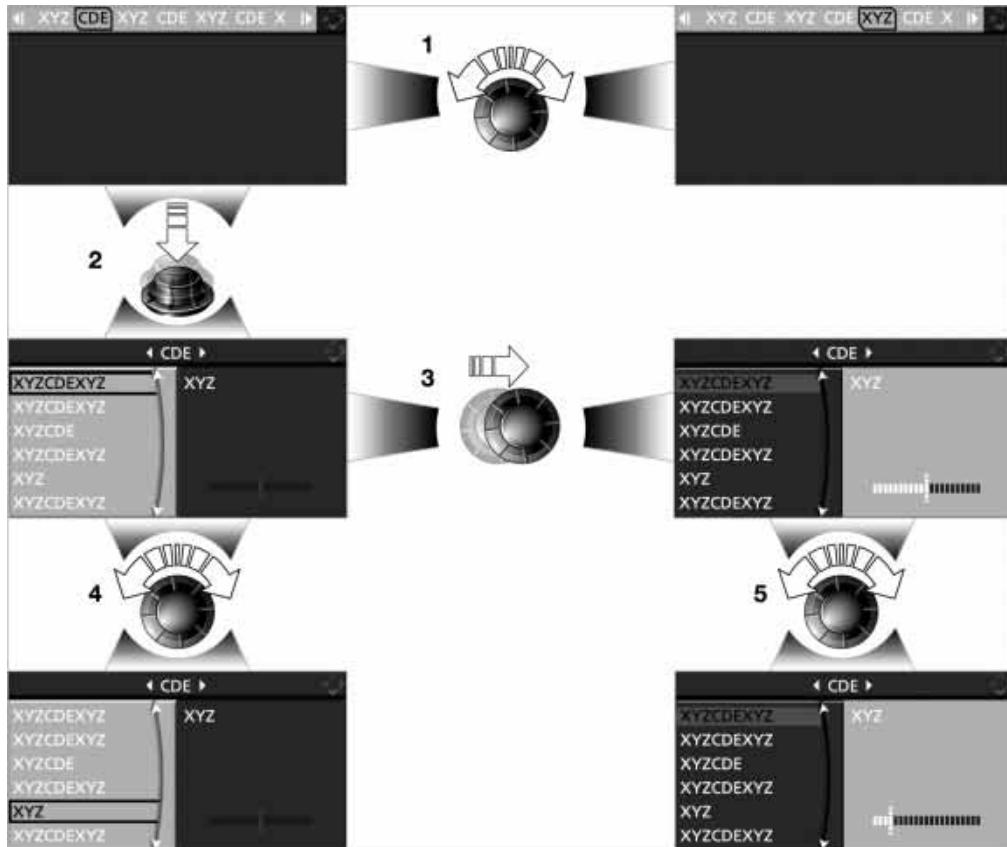

- 1 To select individual menu items: turn the controller. The marking moves. Menu items shown in white can be selected
 - 2 To activate menu items selected with the marking: press the controller. In the current field, new menu items are displayed or a function is executed
 - 3 To change the current field: move the controller to the left, right, forwards or backwards and let go

 If you hold the controller for longer than approx. 2 seconds in one position, the menu that lies in that direction will be opened. ◀

- 4 To select menu items, cf. 1: turn the controller. The marking moves
 - 5 To make adjustments: turn the controller. A graphical display, numerical values or text displays change. The adjustment is applied if you change to another field or into another menu

Voice command system*

The concept

The voice command system allows you to control operation of various vehicle systems without ever removing your hands from the steering wheel.

The menu items on the Control Display serve as voice commands for the equipment that can be operated using the voice command system. This means you can open these menu items using the voice command system instead of with the controller.

The voice command system transforms your oral commands into control signals for the selected systems and provides support in the form of instructions or questions.

Precondition

If the language of the voice input and Control Display do not match, change the language of the Control Display, refer to page 71.

Symbols used

-  '...(' indicates voice commands.
-  '...(' indicates instructions of the system.

Voice commands


Activating voice command system



Briefly press the  button on the steering wheel or in the center console.

If voice input is to come from the passenger's side:

Press the button in the center console for a longer period.

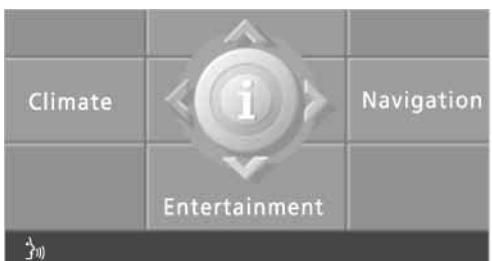

 This symbol on the Control Display and an acoustic message indicate that you can enter voice commands.



The text or numbers that the voice command system has registered will appear at this position on the Control Display.

 This symbol appears on the Control Display when you can enter additional voice commands.

If there are no other voice commands, operate the equipment using the Control Center.

Canceling voice command system

Press the  button on the steering wheel or in the center console

or

 'Cancel'.

While notes are being recorded, canceling is only possible using one of the  buttons.

Voice commands

You can have the system list the possible voice commands:

►Options►.

In addition to the commands described in this Owner's Manual, alternative commands are often possible for the same functions, e.g.:

►Radio on or ►Switch on radio.

You can use short commands to make it easier to run certain functions.

An example: station selection

1. Switch on radio
2. Press the ► button on the steering wheel or in the center console.

► 3. ►Entertainment►.
The system issues:
»Entertainment«.




MNU034UEB

- 4. ►AM►.
The system issues:
»AM«.



MNU034UEB

- 5. Select the station, e.g.:
► Frequency 95 Point 5►.
The system issues:
»95.5«.

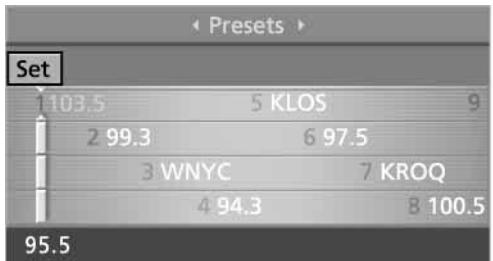

MNU034UEB

Notes

 Do not use the voice command system in emergency situations. In stress situations, voice and pitch can change. Instead, use the emergency call button near the interior rearview mirror.◀

 At the time of going to press, the voice command system was available in English. Other languages are currently not available.

The telephone can also be operated using voice, refer to page 143.◀

Important for voice input

Issue the commands fluently and at normal volume, avoiding excessing emphasis and pauses.

The voice command system uses a special hands-free microphone located in the front of your vehicle's headliner. On vehicles with telephone, two vehicle microphones are fitted. Although the system is designed to filter out ambient noise, you can help ensure that your commands will be understood by observing the following instructions:

- ▷ Keep the doors, windows and glass roof closed to prevent interference from ambient noise
- ▷ Avoid other sources of noise in the vehicle while speaking, and ask other vehicle occupants to refrain from talking while you are using the system
- ▷ Without a telephone, the vehicle microphone is directed at the driver. This means that the system might not be able to register the voices of other vehicle occupants properly.






Controls

This chapter is intended to provide you with information for complete control of your vehicle. Its extensive array of features and accessories, both for driving and for your own safety, comfort and convenience, are described here.

Opening and closing

The key set

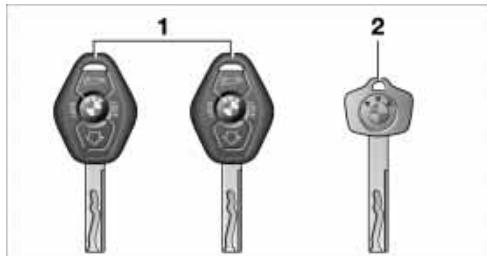

- 1 Central key with remote control. They specify the functions of the key memory. In the process individual functions of your vehicle can behave differently depending on the key used, see further below.

You can mark the keys with remote control using the color-coded decals you received on taking delivery of the vehicle

 Each central key with remote control contains a long-life battery.

The battery is automatically charged in the ignition lock while the vehicle is being driven.

If you have any central keys with remote control that are not used on a regular basis, you should therefore remember to recharge these units by using them to drive the vehicle for an extended period at least once a year, refer to page 29.◀

- 2 Spare key for storage in a safe place, such as in your wallet.

This key cannot be used to open the locks for the luggage compartment lid and glove compartment. This is an advantage in a hotel, for example. The key is not intended for constant use

Key Memory

How the system functions


Doubtless you have often reflected on how great it would be if you could configure your vehicle's various adjustment settings to meet your own personal requirements. BMW has designed several freely selectable options into the vehicle during its development. You can set these as desired via the Control Center.

You can have up to four different basic settings adjusted for four different persons for the specific keys. The only requirement is that each person uses his or her own central key with remote control.

Additional keys are available at your BMW center.

When your vehicle is unlocked with the remote control, the vehicle recognizes the individual user by means of a data exchange with the key, and makes adjustments accordingly.

To differentiate

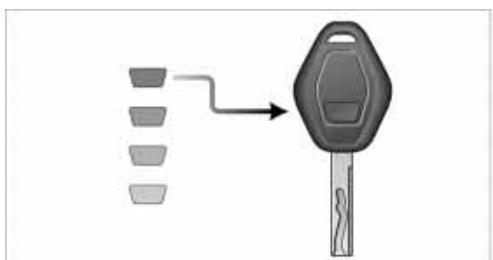

Color-coded decals are provided to help you distinguish the individual central keys with remote control with their different settings.

Examples of Key Memory functions

- ▷ Automatic adjustment of the electric driver's seat
- ▷ Locking the vehicle after moving off
- ▷ When unlocking with the remote control, either unlock only the driver's door or the entire vehicle
- ▷ Activating optical warning for PDC Park Distance Control
- ▷ Displaying the volume.

Central locking system

The concept

The central locking system is ready for operation whenever the driver's door is closed. This simultaneously engages and releases the locks on the following:

- ▷ Doors
- ▷ Compartment in the front center console
- ▷ Luggage compartment lid
- ▷ Fuel filler door.

The central locking system can be operated from the outside

- ▷ via the remote control
- ▷ via the driver's door lock

and from inside via the button for the central locking system.

When the system is locked from inside, the fuel filler door remains unlocked, refer to page 30.

The anti-theft system is automatically activated whenever you activate the central locking system from outside the vehicle. It prevents the doors from being unlocked using the safety lock buttons or door handles. The alarm system is armed/disarmed at the same time.

In the event of an accident, the central locking system unlocks automatically. The hazard warning flashers and interior lamps also switch on.

Opening and closing: from outside

Using the remote control

The remote control provides two additional functions for the central locking system:

- ▷ Switching on the interior lamps, refer to page 28.
You can also use this function to locate your vehicle in parking garages etc.
- ▷ Opening the luggage compartment lid, refer to page 28.
The luggage compartment lid opens, regardless of whether it was previously locked or unlocked.

In addition, the remote control offers you another function:

- ▷ Panic mode
In case of danger, you can trigger an alarm.

When you lock/unlock the vehicle, you simultaneously activate/deactivate the anti-theft system, arm/disarm the alarm system, and switch the interior lamps on/off.

 Protect the remote control against unauthorized use by handing over only the spare key, for example when using hotel valet parking. ◀

 Because any persons or animals left unattended in a parked vehicle could lock the doors from the inside, you should always keep the central key with remote control with you; this precaution ensures that you will remain able to unlock the vehicle from the outside at all times. ◀

Unlocking


Press the  button.

You can set how the vehicle is to be unlocked for each specific key:

Control Center, for principle details, refer to page 17:

1. Open the  menu
2. Select "Vehicle settings" and press the controller

3. Select "Door locks" and press the controller
4. Select "Central locking" and press the controller

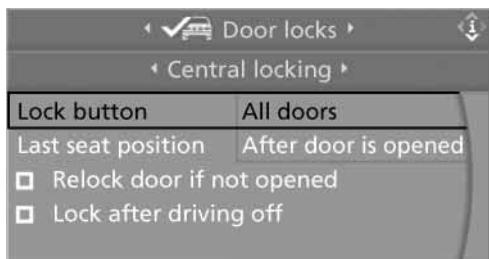

5. Select "Lock button" and press the controller
 6. Select the function and press the controller:
 - ▷ "All doors"
 - ▷ "Driver's door only"
 - Press the button twice to unlock the entire vehicle after the driver's door
 - ▷ "Convenience"
 - Press the button twice to unlock and lower the side window as soon as the door is operated.
- displays the selected function.

Convenience opening mode

Press and hold the button. The windows are opened, the glass roof is raised, and the sliding panel moves back approx. 2 in/5 cm.

Locking and securing

Press the button.

Switching on the interior lamps

If the vehicle is locked, press the button.

Switching off the tilt alarm sensor and interior motion sensor

Press the button once again directly after locking.

For more detailed information, refer to page 32.

Panic mode

By pressing and holding the button for more than approx. two seconds, you can trigger the alarm system in response to any impending danger.

To switch off the alarm: press any of the buttons.

Opening the luggage compartment lid

Press the button.

The luggage compartment lid opens slightly, regardless of whether it was previously locked or unlocked.


Before and after a trip, ensure that the luggage compartment lid has not been opened unintentionally. A locked luggage compartment lid is also locked after closing. ◀

Setting the confirmation signals

You can have various confirmation signals programmed into the system to verify that the vehicle has been unlocked or locked securely.

Control Center, for principle details, refer to page 17:

1. Open the menu
2. Select "Vehicle settings" and press the controller
3. Select "Door locks" and press the controller
4. Select "Confirmation" and press the controller

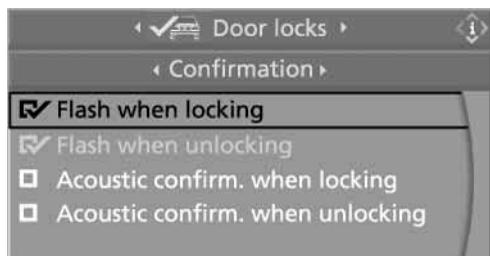

5. Select the desired signal and press the controller.

 indicates the signals that are switched on.

Malfunctions

External systems or devices may cause local interference in the functions of the remote control. Should the remote control fail to operate owing to interference of this kind, you can respond by using the central key to unlock your vehicle at one of the doors.

In the event of a system malfunction, please contact your BMW center, which is also your source for replacement keys.

When it is no longer possible to lock the vehicle via the remote control, the battery is discharged. Use this remote control during an extended drive; this will recharge the battery, refer to page 26.

For US owners only

The transmitter and receiver units comply with part 15 of the FCC/Federal Communication Commission regulations. Operation is governed by the following:

FCC ID: LX8766S
 LX8766E
 LX8CAS


Compliance statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- ▷ This device may not cause harmful interference, and
- ▷ this device must accept any interference received, including interference that may cause undesired operation.

 Any unauthorized modifications or changes to these devices could void the user's authority to operate this equipment.◀

Using the door lock

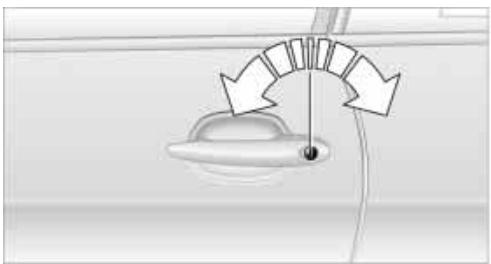

Vehicle view

 Do not lock the vehicle with persons inside, as it cannot be unlocked from the inside.◀

One turn of the key in the driver's door lock unlocks the driver's door only.

Turning the key a second time unlocks all of the remaining doors, the luggage compartment lid and the fuel filler door.

Convenience operation

You also have the option of operating the windows and the glass roof from the door lock.

- ▷ To open:
With the door closed, turn the key to the Unlock position and hold it there
- ▷ To close:
With the door closed, turn the key to the Lock position and hold it there.


 Watch during the closing process to be sure that no one is injured. Releasing the key stops the operation.◀

Manual operation

in the event of an electrical malfunction

You can turn the key all the way to the right or left in the door lock to unlock or lock the driver's door.

Opening and closing: from inside

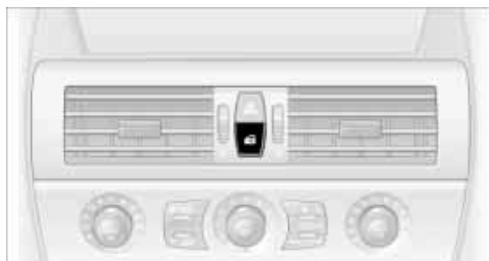


You can operate the central locking system with this button when the doors are closed. This only unlocks or locks the doors and luggage compartment lid, but the anti-theft system is not activated. The fuel filler door remains unlocked to enable refueling.

You can also make the following settings for each specific key:

- ▷ The central locking system automatically locks the vehicle as soon as you drive off
- ▷ The central locking system automatically locks the vehicle after a short time when no door has been opened.

Control Center, for principle details, refer to page 17:

1. Open the menu
2. Select "Vehicle settings" and press the controller
3. Select "Door locks" and press the controller
4. Select "Central locking" and press the controller

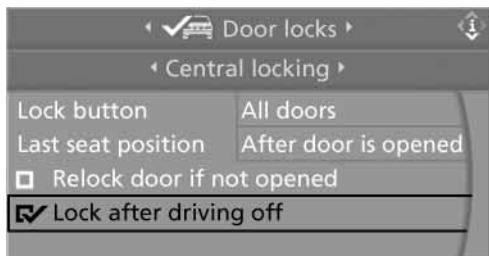

5. Select "Lock after driving off" or "Relock door if not opened" and press

the controller.

displays the selected setting.

Unlocking and opening the doors

- ▷ Either unlock both doors together with the button for the central locking system and then pull the door handle above the armrest or
- ▷ pull the door handle for each door twice: the first pull unlocks the door, and the second one opens it.

Locking

- ▷ Use the central locking button to lock both of the doors simultaneously, or
- ▷ press down the individual safety lock buttons. To prevent you from being locked out, the open driver's door cannot be locked using the safety lock button.

Because any persons or animals left unattended in a parked vehicle could lock the doors from the inside, you should always keep the central key with remote control with you; this precaution ensures that you will remain able to unlock the vehicle from the outside at all times. ◀


Luggage compartment lid

Opening from inside



Press the button: the luggage compartment lid opens slightly.

Opening from outside

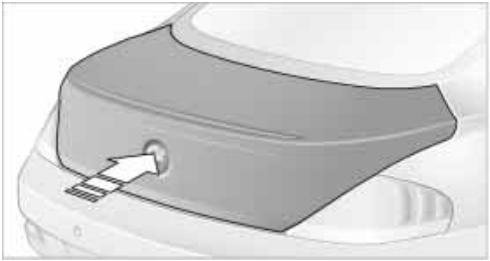

Press the upper half of the BMW emblem; the luggage compartment lid opens.



The luggage compartment lock is located under the BMW emblem. Only the central keys with remote control, refer to page 26, match the luggage compartment lock.

Hotel function



Turn the key to the right and remove. This locks the luggage compartment lid and the compartment of the front center console and disconnects them from the central locking system.

If you then only hand over the spare key, refer to page 26, no access is possible via the luggage compartment lid or to the compartment of the front center console.

Opening using the key

in the event of an electrical malfunction

Turn the central key to the right as far as it will go: the luggage compartment lid opens and the compartment in the front center console is unlocked.

If you use the key to unlock the luggage compartment lid while the alarm system is armed, the alarm will be triggered. Switching off the alarm, refer to page 32. ◀

Emergency release



This lever releases the luggage compartment lid from inside the luggage compartment.

Closing



The handle recesses on the interior trim of the luggage compartment lid make it easier to pull down.

To avoid injuries, be sure that the travel path of the luggage compartment lid is clear when it is closed, as with all closing procedures. ◀

Operate the vehicle only when the luggage compartment lid is completely closed. Otherwise, exhaust fumes could penetrate the interior of the vehicle. ◀

If special circumstances should make it absolutely necessary to operate the vehicle with the compartment open:

1. Close both windows as well as the glass roof
2. Adjust the automatic climate control to supply a high air volume, refer to page 86.

Alarm system

The concept

The vehicle alarm system responds:

- ▷ When a door, the hood, or the luggage compartment lid is opened
- ▷ To movement in the vehicle interior: interior motion sensor
- ▷ To changing the vehicle's tilt if someone attempts to steal the wheels or tow the vehicle
- ▷ To interruption of battery voltage.

The system responds to unauthorized vehicle entry and attempted theft by simultaneously activating:

- ▷ An acoustic alarm, which lasts for a period of approx. 30 seconds
- ▷ The hazard warning flashers for approx. 5 minutes
- ▷ The high beams, which flash on and off in the same rhythm.

Arming and disarming the alarm system

When you lock or unlock the vehicle, either with the remote control or at the door lock, the alarm system is armed or disarmed at the same time.

The system indicates that it has been correctly armed by switching on the hazard warning flashers for a single cycle and by emitting an acoustic signal.

You can also open the luggage compartment lid with the system armed using the  button on the remote control, refer to page 28. When you close the lid, it is secured again.

Switching off the alarm

- ▷ Unlock the vehicle using the remote control, refer to page 27
- ▷ or turn the ignition key to position 1.

Indicator lamp displays



- ▷ The indicator lamp below the interior rearview mirror flashes continuously: the system is armed
- ▷ The indicator lamp flashes when the system is armed: door(s), the hood or luggage compartment lid are not completely closed. Even if you do not close the alerted area, the system begins to monitor the remaining areas, and the indicator lamp flashes continuously after approx. 10 seconds. However, the interior motion sensor is not activated
- ▷ The indicator lamp goes out when the system is disarmed: no manipulation or attempted intrusions have been detected in the period since the system was armed
- ▷ The indicator lamp flashes when you disarm the system before the remote control is inserted in the ignition lock, but for no more than roughly 5 minutes: an attempted entry has been detected in the period since the system was armed.

Following triggering of an alarm, the indicator lamp will flash continuously.

Avoiding unintentional alarms

The tilt alarm sensor and interior motion sensor may be switched off at the same time. You can do this to prevent a false alarm from being triggered in garages with

elevator ramps, for instance, or when the vehicle is transported by trailer or train:

Lock, i.e. arm twice. Press the  **LOCK** button on the remote control twice in succession, refer to page 27, or lock twice with the key, refer to page 30. The indicator lamp lights up briefly and then flashes continuously. The tilt alarm sensor and the interior motion sensor are switched off as long as the system is armed.

Interior motion sensor

In order for the interior motion sensor to function properly, the windows and glass roof must be completely closed.

However, switch the interior motion sensor off, refer to Avoiding unintentional alarms, if

- ▷ children or animals are to remain in the vehicle
- ▷ the windows or glass roof are to remain open.

Windows

Opening and closing windows



WILHELMSTEIN

As of ignition key position 1:

- ▷ Press the switch up to the resistance point:
The window continues to move downwards as long as you continue to hold the switch
- ▷ Briefly press the switch beyond the resistance point:
The window moves downwards automatically. Briefly press the switch again to stop the opening movement.

You can close the windows in the same manner by pulling the switch.

After switching off the ignition

You can still operate the windows:

- ▷ In ignition key position 1 for a longer time
- ▷ In position 0 or with the ignition key removed for approx. 1 minute, as long as a door has not been opened.

To open, press the switch beyond the resistance point.

 When leaving the vehicle parked, always remove the central key with remote control from the ignition lock and close the doors; this precaution prevents children from operating the windows and injuring themselves, for example. ◀

For information on using the convenience operation mode at the door lock or with the remote control, refer to page 27 or 29.

Safety feature

If the closing force rises beyond a pre-defined threshold during closing, the system will immediately stop moving the window prior to lowering it slightly.

 Despite this safety feature you should always inspect the window's travel path prior to closing it, as the safety system might fail to detect certain kinds of obstructions, such as very thin objects, and the window would continue closing.

Pulling the switch beyond the resistance point and holding it limits the response of the safety feature. Under these conditions, the window will respond to forces beyond a defined threshold by only opening a few inches/millimeters.

If you again pull the switch past the resistance point and hold it in position within a period of roughly 4 seconds, the safety feature will be deactivated. ◀

Accessories in the window area

After installing any accessory – such as a clamp-on antenna for a portable phone – within the window's travel range, you will

need to have the system reinitialized for use under the new conditions. Please contact your BMW center for assistance.

Glass roof, electrical with raise function*

! To prevent injuries, exercise care when closing the glass roof and keep it in your field of vision until it is shut. When leaving the vehicle, always remove the ignition key and close the doors to prevent children from operating the sunroof and injuring themselves, for example.◀

Raising and closing the glass roof



As of ignition key position 1, press the switch to raise the roof.

To close the roof, push the switch towards Close.

Ventilation setting

Briefly press the switch for raising the roof: the roof opens and the sliding panel moves back approx. 2 in/5 cm.

To close, push the switch beyond the resistance point towards Close: the roof and sliding panel close.

After switching off the ignition

You can still operate the roof:

- ▷ In ignition key position 1 for a longer time
- ▷ In position 0 or with the ignition key removed for approx. 1 minute, as long as a door has not been opened.

When the roof is raised, the sliding panel is pushed back approx. 2 in/5 cm.



Do not use force to close the sliding panel with the glass roof in its raised position, as damage to the mechanism could result.◀

For information on using the convenience operation mode at the door lock or with the remote control, refer to page 28 or 29.

Opening and closing the sliding panel

Push the switch towards Open or Close: the sliding panel continues to move as long as you continue to hold the switch.

Opening and closing the sliding panel automatically

Push the switch beyond the resistance point towards Open or Close: the sliding panel moves automatically.

Press the switch again in any direction to stop the movement.

Safety feature

If the glass roof encounters resistance when closing from the raised position, the closing action is interrupted and the glass roof opens.

If the sliding panel encounters resistance when closing within approx. 8 in/20 cm, the closing action is interrupted and the sliding panel opens approx. 8 in/20 cm.



Despite this safety feature, you should always inspect the roof's travel range prior to closing it, as the safety feature might fail to detect certain kinds of obstructions, such as very thin objects, and the roof would continue closing.

The safety feature for closing the glass roof is deactivated if the switch is pressed beyond the resistance point and held there. The closing action is immediately interrupted when you release the switch.◀

Following interruptions in electrical power supply


After disconnecting the battery, it can occur that the glass roof does not move. A message appears on the Control Display. Should this occur, please have the roof reinitialized at your BMW center.

Manual operation

In the event of an electrical malfunction, you can operate the glass roof manually:



1. Fold the cover downwards

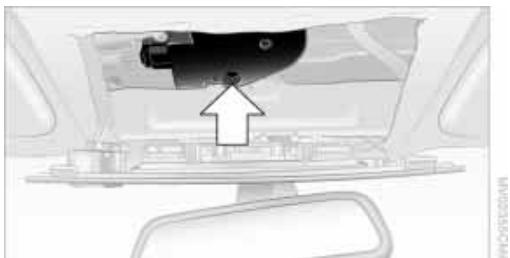

2. Insert the Allen wrench supplied with the onboard tool kit, refer to page 169, in the opening provided. Turn to slide the glass roof in the desired direction.

Adjustments

Sitting safely

The ideal sitting position can make a vital contribution to relaxed, fatigue-free driving. The sitting position also plays an important role together with the safety belts and airbags in providing occupants with maximum levels of passive safety in an accident. To ensure that the safety systems operate with optimal efficiency, we strongly urge you to observe the instructions contained in the following section.

For additional information on Transporting children safely, refer to page 43.

Sitting safely with airbags

 Always maintain an adequate distance between yourself and the airbags. Always hold the steering wheel by its rim with hands at the 9 o'clock and 3 o'clock positions, to minimize the risk of injuries to your hands and arms in the event of airbag deployment.

No one and nothing is to come between the airbags and the seat occupant.

Do not use the cover of the front airbag on the front passenger side as a storage area. Make sure that the front passenger is sitting correctly and does not rest feet or legs on the instrument panel, otherwise leg injuries can occur if the knee and front airbag are triggered.

Never let an occupant's head rest near or on a side airbag because the inflating airbag could cause a serious or fatal injury. ◀

Even if you adhere to all the instructions injuries resulting from contact with airbags cannot be fully excluded, depending on the circumstances. The ignition and inflation noise may provoke a mild hearing loss in extremely sensitive individuals. This effect is usually only temporary.

For airbag locations and additional information on airbags, refer to page 80.

Safe sitting position with safety belts

Fasten your safety belt before starting any trip. Airbags complement the safety belt as an additional safety device, but they do not represent a substitute.

 At all times, occupants should sit upright and be properly restrained – infants and small children in appropriate child-restraint systems; larger children and adults using the safety belts.

Expectant mothers should always wear their safety belts, taking care to position the lap belt against the lower hips, where it will not exert pressure against the abdominal area.

Never allow more than one person to wear a single safety belt. Never allow infants or small children to ride in a passenger's lap. Do not route the belt across your neck, or run it across sharp edges. Be sure that the belt does not become caught or jammed. Avoid twisting the belt while routing it firmly across the hips and shoulder. Do not allow the belt to rest against hard or fragile objects. Otherwise, in the event of a frontal impact, a loose lap belt could slide over your hips, leading to abdominal injury. Avoid wearing clothing that prevents the belt from fitting properly and pull the lap belt periodically to readjust the tension across your shoulder in order to avoid a reduction in the retention effect of the safety belt. ◀

For instructions on operating safety belts, refer to page 40.

Seats

Note before adjusting

 Never attempt to adjust your seat while operating the vehicle. The seat could respond with unexpected movement, and the ensuing loss of vehicle control could lead to an accident.

On the front passenger side as well, do not

tilt the backrest too far toward the rear while driving. Failure to observe this precaution can prevent the belt from providing effective protection against injury, as the passenger could slide under the belt in an accident.

Make sure that the footwell behind the driver's and front passenger's seat is empty and unobstructed. If you fail to do so, any persons or objects behind the seat could be injured or damaged by a rearward movement of the seat.◀

Also observe the instructions regarding damage to the safety belt on page 40.


Seat adjustment

! To ensure that the safety systems continue to provide optimized protection, please observe the adjustment instructions above.◀



- 1 Seat angle
- 2 Longitudinal direction
- 3 Height
- 4 Backrest

With the sports seat*, you can also set the thigh support manually:

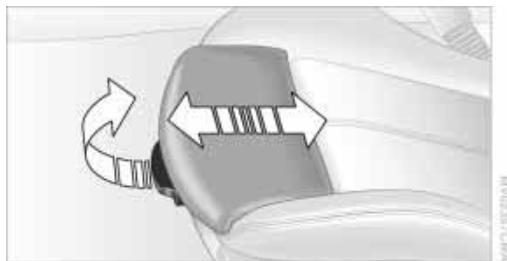

Pull the lever and adapt the position of the thigh support to your needs.

Lumbar support* adjusting




You can also adjust the contours of the backrest to obtain additional support in the lumbar region.

The upper hips and spinal column receive supplementary support to help you maintain a relaxed, upright sitting position.

- ▷ Press the front/rear of the switch: increase or decrease curvature
- ▷ Press the upper/lower end of the switch: increase curvature at top or bottom.

Seat, mirror and steering wheel memory

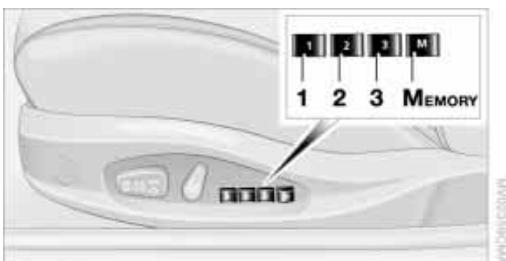

You can store and select three different adjustment settings for the driver's seat, exterior mirrors and steering wheel.

The adjustment of the lumbar support is not stored in the memory.

Storing

1. Turn the ignition key to position 1 or 2
2. Set the desired seat, door mirror and steering-wheel positions

3. Press **MEMORY** button:
The indicator lamp in the button lights up
4. Press the desired memory button **1, 2 or 3**:
The indicator lamp goes out.

Selecting a stored setting

 Do not call up a position from the memory while the vehicle is moving. There is a risk of accident from unexpected movement of the seat or steering wheel.◀

Convenience mode


1. Open the driver's door after unlocking or turn the ignition key to position **1**
2. Briefly press the desired memory button **1, 2 or 3**.

The system immediately cancels the adjustment procedure when you press one of the seat adjustment buttons or use one of the memory buttons.

When the respective last driver's seat, door mirror and steering wheel position is called up can be set for each key.

Control Center, for principle details, refer to page **17**:

1. Open the  menu
2. Select "Vehicle settings" and press the controller
3. Select "Door locks" and press the controller
4. Select "Central locking" and press the controller
5. Select "Last seat position" and press the controller

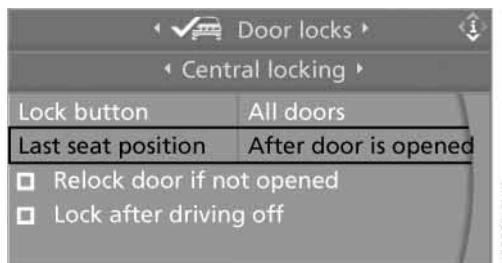

6. Select "After unlocking" or "After door is opened" and press the controller.
 displays the selected setting.

 When using this Key Memory feature, always make sure that the footwell behind the driver's seat is empty and unobstructed. If you fail to do so, any persons or objects behind the seat could be injured or damaged by a rearward movement of the seat.◀

Safety feature


1. Close the driver's door and turn the ignition key to position **0 or 2**
2. Press the desired memory button **1, 2 or 3** and maintain pressure until the adjustment process has been completed.

If you press the **MEMORY** button accidentally:

Press the button again; the indicator lamp goes out.

Passenger-side exterior mirror tilt function

Automatic curb monitor

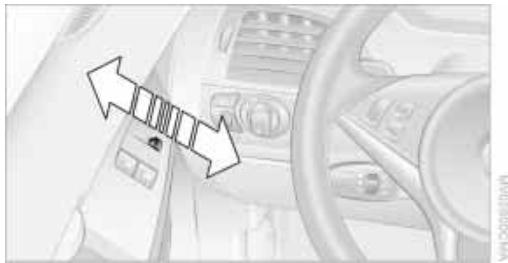


1. Select the driver's exterior mirror with the switch
2. When you engage reverse gear or selector-lever position R, the exterior mirror glass on the front passenger side tilts downward slightly. This allows the driver to see the area immediately adjacent to the vehicle – such as a curb – when parking, etc.

You can deactivate this automatic feature: slide the mirror selection switch to the passenger's side position.

Head restraints

! Head restraints reduce the risk of spinal injury in the event of an accident. Adjust the head restraints so that they are centered roughly at the level of your ears. ◀

Front seats: height adjustment

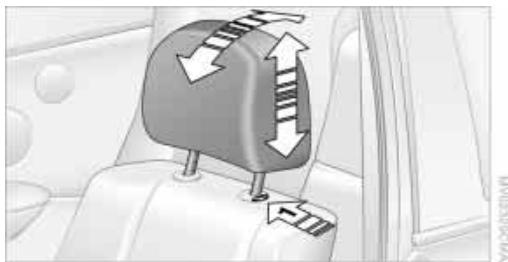

To raise: pull

To lower: press

► To reach the lowest position, press the button, refer to arrow 1. ◀

Adjusting the tilt angle

Swivel the front head restraints.

Removal

1. Pull the head restraint upwards to the stop
2. Press the button, arrow 1, and remove the head restraint.

Installation

Push the head restraint into the supports.

Entry to the rear

Releasing the backrest



Pull the lever upwards and fold the backrest forwards.

On the lever is a symbol that shows you how the safety belt is caught by the lever when not in use. This enables you to fasten the safety belt more conveniently.

! Lock both seat backrests while the vehicle is moving. Otherwise, there is a risk of accident from unexpected movement. ◀



Locking

Make sure you hear the latch plate engage in the belt buckle.



Please fasten safety belt warning lamp:

Lights up until the driver and front passenger have fastened their safety belts. Depending on the model, a signal* sounds or a message* appears on the Control Display at the same time.

The warning is also issued when the driver or front passenger removes his or her safety belt while driving.

Unlocking

1. Press the red button in the belt buckle
2. Hold the belt firmly
3. Guide the belt buckle into its reel.

The shoulder strap's anchorage point will be in the correct position for seat occupants of every build if the seat is correctly adjusted, refer to page 36.

The two rear safety belt buckles integrated in the rear seat are for passengers sitting on the left and right.

Damage to safety belts

⚠ If the safety belts are damaged or stretched in an accident: have the entire belt system, including the tensioning mechanisms, replaced at your BMW center. Have the belt anchorage points inspected for damage at the same time. Failure to observe this precaution may prevent the safety belts from effectively providing optimal protection when needed. ◀

Seat heating



The system regulates the temperatures of the seat cushion and backrest.

The temperature setting progresses one step through its control sequence each time you press the button.

To switch off:

Maintain pressure on the button for several seconds.

Mirrors

Adjusting exterior mirrors



Armrest in the driver's door:

1 4-way adjustment

2 To select mirror for adjustment

! To prevent the exterior mirrors on this vehicle from being damaged, always fold them in by hand before entering an automatic car wash. ◀

You can also adjust the mirrors manually by pressing against the outer edges of their lenses.


Storing the mirror positions, refer to Seat, mirror and steering wheel memory, page 37.

! The mirror on the passenger's side features a lens with a more convex surface than the mirror installed on the driver's side. When estimating the distance between yourself and other traffic, bear in mind that the objects reflected in the mirror are closer than they appear. This means that estimations of the distance to following traffic should not be regarded as precise. ◀

Self-defrosting mirrors

Both exterior mirrors are automatically heated in ignition key position 2.

Interior and exterior mirrors, automatic dimming feature

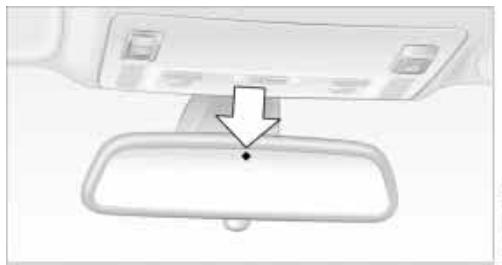


These mirrors automatically respond to ambient light and headlamp glare from following vehicles by automatically dimming through an infinitely-variable range. There are two photocells located in the interior rearview mirror for this purpose. One is integrated within the mirror's lens, while the other is located at an offset position on the rear of the mirror housing.

The mirrors automatically revert to their clear, undimmed mode whenever you engage reverse gear or place the selector lever into position R.

! For trouble-free operation, keep the photocells clean and do not cover the area between the interior rearview mirror and the windshield. Do not attach any kind of stickers on the windshield in front of the mirror, either. ◀

Steering wheel adjustment

! Do not adjust the steering wheel while the vehicle is moving. There is a risk of accident from unexpected movement. ◀

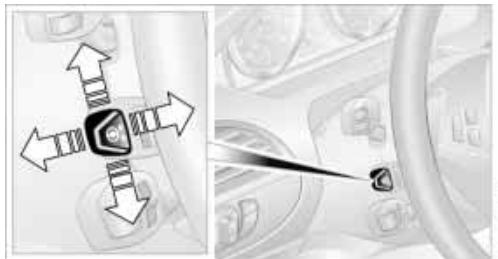

The steering wheel can be adjusted in any of four directions by pressing the appropriate end of the button.

Storing the steering-wheel position, refer to Seat, mirror and steering wheel memory, page 37.

Automatic steering wheel adjustment

In conjunction with seat, mirror and steering wheel memory.

The steering wheel automatically moves as high up and far forward as possible to ease driver entry and exit before then returning to the standard position or stored memory setting.

This automatic feature is governed by the driver's door and the ignition lock.

Steering wheel heater*



The steering wheel's heater operates when the ignition is on.

Press the button to activate or deactivate this system.

The indicator lamp within the button lights up when the steering wheel heater is in operation.

Programming button function



Depending on your vehicle's equipment, you can assign an individual function to each of the two programmable function buttons* on the steering wheel for each specific key. This feature then provides you with quick access to this function, allowing you to control it without undue distraction from road and traffic conditions.

Control Center, for principle details, refer to page 17:

1. Open the menu
2. Select "Vehicle settings" and press the controller
3. Select "Steering wheel buttons" and press the controller

Navigation
Air recirculation on / off
Mute on / off
Screen on / off
Next entertainment source
Horn

A list with different functions is displayed:

- ▷ "Navigation"
Switching voice instructions on/off
- ▷ "Air recirculation on / off"
In this mode, you can block the supply of outside air, refer to AUC Automatic recirculated-air control on page 87
- ▷ "Mute on / off"
Mutes the audio sources
- ▷ "Screen on / off"
Switches the Control Display on/off
- ▷ "Next entertainment source"
Next audio source
- ▷ "Horn"*

4. Select the desired function and press the controller

◆ Star button
◆ Diamond button
Air recirculation on / off
Mute on / off
Screen on / off
Next entertainment source
Horn

5. If appropriate, select a button and press the controller.

You can select the displayed function using the button.

Transporting children safely

The right place for children

Children always in the rear

Accident research shows that the safest place for children in a vehicle is in the rear seat.

Older children should be tightly secured with a safety belt, after they have outgrown a booster seat that is appropriate for their age, height and weight.

Child-restraint system in the rear

 Children under 13 years of age and children less than 5 ft/150 cm tall should always ride in the rear and the restraint systems should be secured with the vehicle's safety belts. ◀

Younger children should be secured in an appropriate forward-facing child-restraint system that has first been properly secured. We strongly urge you to carefully read and comply with the instructions for installation and use provided by the child-restraint's manufacturer whenever you use such a device.

All rear sitting positions in your vehicle meet the recommendations of SAE J1819, an industry-recommended practice for securing child-restraint systems in motor vehicles.

Exception for the front passenger seat

 Should it become necessary to use a child-restraint system on the front passenger seat, the airbags on the passenger's side must be deactivated. Your BMW center will be glad to advise you. ◀

 Never install a rearward-facing child-restraint system in the front passenger seat of this vehicle if the passenger airbag is not deactivated. If you do so, the child could be severely injured when the airbag is triggered.

Your vehicle is equipped with an airbag

supplemental restraint system for the front passenger. Because the backrest on any rearward-facing child-restraint system – of the kind designed for infants under 1 year and 20 lbs./9 kg – would be within the airbag's deployment range, you should never mount such a system in the front passenger seat, since the impact of the airbag against the child restraint's backrest could lead to serious or fatal injuries. ◀

Installing child-restraint systems


Before installing any child-restraint system or child seat, read the following:

 Observe the child-restraint system manufacturer's instructions for installation and use. Otherwise the degree of protection can be reduced.

Following an accident, have all parts of the affected vehicle safety-belt system checked and, if necessary, replaced by a BMW center. ◀

Commercially-available child-restraint systems are designed to be secured with a lap belt or with the lap belt portion of a combination lap/shoulder belt. Improperly or inadequately installed restraint systems can increase the risk of injury to children. Always read and follow the instructions that come with the system.

Child seat security

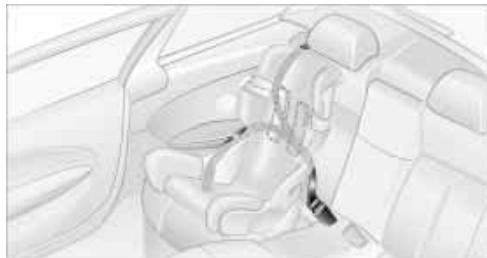

All of the rear belt retractors and the front passenger's safety belt can be locked for mounting and securing child-restraint systems.

Information regarding this is located near the buckle latch of each safety belt.


Locking the safety belt

Pull the entire length of the belt from the belt retractor. Allow the reel to retract the belt somewhat and engage the buckle, then tighten the belt against the child-restraint system. The retraction mechanism is now locked.

Unlocking the safety belt


Release the buckle, remove the child-restraint system and allow the belt retractor to reel the belt completely in.

Child-restraint system with tether strap

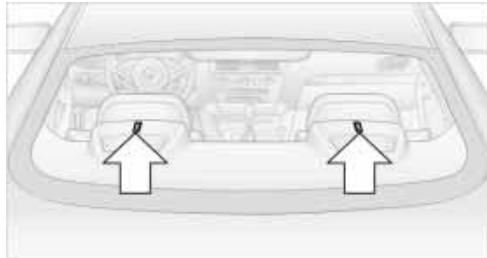

If you use a child-restraint system with a tether strap, two additional tether anchorage points have been provided – refer to the arrows in the illustration. Depending on the location selected for sitting in the rear passenger area, attach the tether strap to

the corresponding anchorage point to secure the child-restraint system, as shown in the illustration below.

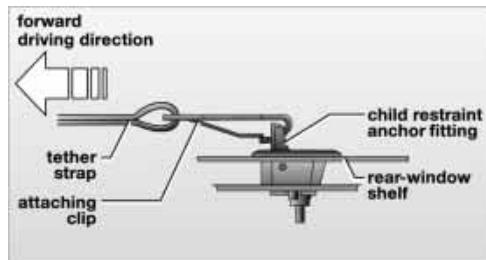

Each sitting position is fitted with a head restraint.

The head restraint must be adjusted into the lowest possible position. Pass the tether strap over the head restraint.

- ▶ Adjust the tether strap according to the child-restraint manufacturer's instructions.◀


LATCH child-restraint fixing

LATCH: Lower Anchor and Tethers for Children.

The rear outer sitting positions are provided with anchors for a LATCH child-restraint fixing.

- ⚠ To fit the LATCH child-restraint fixing, follow the operating and safety instructions of the manufacturer.◀

Access to anchorage points

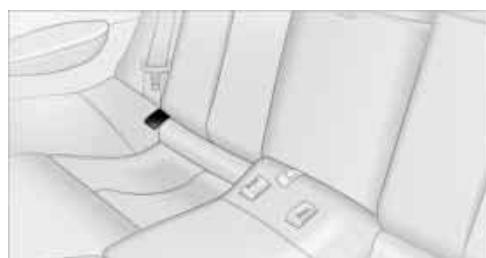

The illustrations show the right rear seat as an example. The outer anchorage points for the LATCH child-restraint fixing are identified by flags.



Canadian models only:

The anchorage points for the LATCH child-restraint fixing are identified by buttons.

Installation guide

The installation guide makes it easier to fit the LATCH child-restraint fixing and at the same time protects the surface of the seats.

The installation guide is available at your BMW center. Always observe all instructions for installation and use provided by the child-restraint's manufacturer.◀

1. Pull the belt away from the area of the child-restraint fixing




2. Firmly press the installation guide into the gap between the upholstery on seat and backrest, continuing until the two funnel-shaped guides snap into place in the LATCH support braces in the seat.

Pull the installation guides to remove.

Driving

Ignition lock

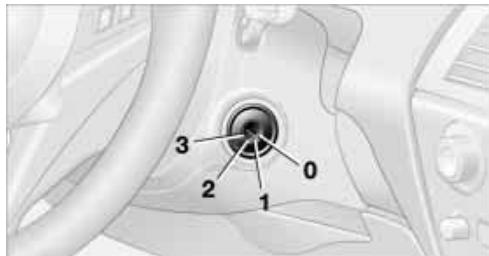

0 Steering locked

The key can only be inserted or removed in this position.

After removing the key, turn the steering wheel slightly until it locks.

Vehicles with automatic transmission:
Only move the selector lever from position P with the engine running. To turn the key back to position 0 or to remove it, first place the selector lever in position P: interlock.◀

1 Steering unlocked

A slight steering wheel movement often makes it easier to turn the key from 0 to 1. Individual current consumers are ready for operation.

2 Ignition switched on

All vehicle systems are ready for operation.

3 Engine start

Starting the engine

Do not run the engine in closed rooms, as otherwise the inhaling of toxic exhaust gases can cause unconsciousness and death. The exhaust gases contain carbon monoxide, an odorless and colorless, but highly toxic gas. Never leave an unattended vehicle with the engine run-

ning, as such a vehicle represents a potential safety hazard.◀

Do not allow the engine to warm up by leaving it running while the vehicle remains stationary. Instead, begin to drive immediately at a moderate engine speed.

When starting the engine, do not press the accelerator pedal.

Your BMW is equipped with the convenience starting feature. Here, it is sufficient to turn the ignition key only briefly to position 3 Start engine and to let go of it right away. The system responds by automatically engaging the starter for a certain period and allowing it to run until the engine starts, after which it then disengages automatically. The automatic starting mode will not operate or will be canceled if the battery voltage is low. The engine can be started by jump-starting, refer to page 174.◀

Press the accelerator pedal halfway down when starting if

- ▷ the engine fails to start on the first attempt, for instance, if it is very hot or cold
- ▷ the engine is started at very low temperatures, as of approx. +5 °F / -15 °C, at high altitudes over approx. 3,300 ft / 1,000 m.

Avoid frequent starting in quick succession or repeated start attempts in which the engine does not start. Otherwise, the fuel is not burned or inadequately burned and there is a danger of overheating and damaging the catalytic converter.◀

Manual transmission

1. Apply the handbrake
2. Gearshift lever in idle position
3. Press the clutch pedal
4. Start the engine.

! Before leaving the vehicle with the engine running, place the gearshift lever in idle position and apply the handbrake.

Never leave an unattended vehicle with the engine running, as such a vehicle represents a potential safety hazard.◀

Automatic transmission

1. Press the brake pedal
2. Place the selector lever in position P or N
3. Start the engine.

! To prevent the vehicle from rolling, always select position P and apply the handbrake before leaving the vehicle with the engine running.

Never leave an unattended vehicle with the engine running, as such a vehicle represents a potential safety hazard.◀

SMG Sequential manual transmission

1. Press the brake pedal
2. Place the selector lever in the idle position N
3. Start the engine.

! If the engine does not start, engage the last gear selected, refer to Instrument cluster display, and return the selector lever to the idle position N.◀

! Before leaving the vehicle with the engine running, place the selector lever in position N and apply the handbrake.

Never leave an unattended vehicle with the engine running, as such a vehicle represents a potential safety hazard.◀

Switching off engine

! Do not remove the ignition key while the vehicle is rolling, as otherwise the steering wheel lock would engage while steering.

When leaving the vehicle, always remove the ignition key and lock the steering.

When parking on downward inclines, apply the handbrake.◀

Manual transmission

Turn the ignition key to position 1 or 0.

Automatic transmission

1. Engage selector-lever position P
2. Turn the ignition key to position 1 or 0.

SMG Sequential manual transmission

If the selector lever is in position R or in the sequential mode and you turn the ignition key to position 1 or 0, the gear remains engaged automatically.

If the selector lever is in the idle position N and you turn the ignition key to position 1 or 0, an acoustic signal and the flashing gear indicator in the display reminds you that the vehicle is not secured against rolling away.

The warning stops sounding after approx. 9 seconds.

! When parking on downward inclines, apply the handbrake. Engaging a gear is not sufficient to secure the vehicle from rolling away under certain circumstances.◀

Handbrake

The handbrake is primarily intended to prevent the vehicle from rolling while parked; it brakes the rear wheels.


Indicator lamp

BRAKE The indicator lamp lights up with the handbrake applied, and an acoustic signal also sounds when starting off.

(O) Indicator lamp for Canadian models.

Applying

The lever locks into place automatically; the indicator lamp in the instrument cluster lights up in ignition key position 2.

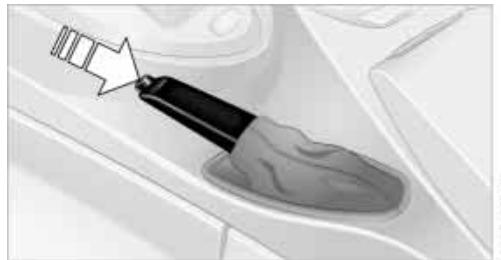

Releasing

Pull slightly upwards, press the button and lower the lever.

⚠ If exceptional circumstances should make it necessary to engage the handbrake while the vehicle is in motion, do not pull it too strongly. In doing so, continuously press the button of the handbrake lever.

Strong application of the handbrake can lead to overbraking of the rear axle and associated fishtailing of the vehicle rear end.

The brake lamps do not light up when the handbrake is applied.

Vehicles with manual or SMG transmission:
When parking on inclines, apply the handbrake, as even engaging the first or reverse gear might not under certain circumstances secure the vehicle against moving.

Vehicles with automatic transmission:
Engage selector-lever position P. ◀

▶ To prevent corrosion and one-sided braking action, occasionally apply the handbrake lightly when the vehicle is slowly coming to a standstill if the traffic conditions are suitable. ◀

Manual transmission



⚠ While shifting gear in the 5th/6th gear level, make sure that you press the gearshift lever to the right to prevent inadvertently selecting a gear in the 3rd/4th gear level. On inclines, do not hold the vehicle with the clutch; use the handbrake. Holding with the clutch causes high clutch wear. ◀

Reverse gear

Select R only when the vehicle is completely stopped. When pressing the gear lever to the left, overcome some resistance.

The backup lamps automatically switch on in ignition key position 2.

SMG Sequential manual transmission*

The concept

The SMG sequential manual transmission is an automated manual transmission in which an electro-hydraulic system handles the clutching and gear changes.

You operate the SMG using the selector lever in the center console and two shift paddles on the steering wheel.

It provides you with the following functions:

- ▷ Sequential mode: manual mode
- ▷ Drive mode: automated mode
- ▷ Options of two drive programs: normal, sport, refer to page 51
- ▷ Operating reliability with protection against incorrect gearshifts

- ▷ Automatic upshifts and downshifts in the Drive mode
- ▷ Automatic downshifts with minimum engine speed
- ▷ Kickdown function in the Drive mode
- ▷ Acceleration assistant, refer to page 51.

Selector-lever positions



The current selector-lever position is displayed on the center console.

R: Reverse gear

N: Neutral, idle

Position for forward driving with one-touch functions:

Sequential mode

+: manual upshifts

-: manual downshifts

D: Drive mode.

The SMG is operational in ignition key position 2.

 Idle is automatically engaged if the driver's door is opened with the engine running and neither pedals, shift paddles nor the selector lever are operated.

This is signaled by an acoustic signal and the flashing gear indicator. The gear display N appears in the instrument cluster.

A driving position can only be selected with the driver's door closed.

When the vehicle is unlocked, a buzzing sound in the area of the transmission signals that the system is ready for operation.◀

Shiftlock

For your safety a driving position can only be engaged from the selector-lever position N with the vehicle stationary with the brake pedal depressed.

Observe the following when driving

 Start off quickly on slopes. Do not hold the vehicle on a hill by applying the throttle, but apply the handbrake instead. Otherwise overheating can occur in the area of the transmission.◀

R Reverse

Select R only when the vehicle is completely stopped.

N Neutral, idle

Engage prior to every engine start, refer also to page 47.

Sequential mode

After every engine start, as soon as the selector lever is brought into a forward gear position and the brake pedal is pressed, the sequential mode is activated.

The gear is changed using the shift paddles or selector lever.

Driving off is also possible in second gear, e.g. when there is snow on the roadway.

D Drive mode

In the Drive mode, all forward gears are shifted automatically.

To switch from sequential to Drive mode: briefly press the selector lever to the right towards D.

For rapid acceleration, e.g. overtaking, press the accelerator pedal as far down as it will go: kickdown.

Kickdown:

The kickdown mode provides maximum acceleration.

Press the accelerator pedal beyond the full-throttle resistance point.

To switch back to the sequential mode: Briefly press the selector lever back to the


right towards D or change the current gear using the shift paddles or selector lever.

Gear changes

Using selector lever

- ▷ To shift up, briefly press the selector lever towards +
- ▷ To shift down, briefly press towards -.

Using shift paddles on steering wheel

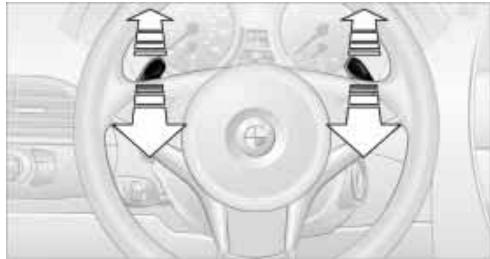

- ▷ To shift up, pull one of the shift paddles
- ▷ To shift down, press.

You accelerate from higher gears, e.g. when overtaking, by shifting down manually.

In the following situations, the SMG in the sequential mode assists you:

- ▷ Upshifts and downshifts are executed only when they will result in a plausible combination of engine and vehicle speed; thus, for example, a downshift that would cause the engine to overrev will not be executed by the system
- ▷ When the vehicle is stopped, the transmission automatically downshifts into first gear
- ▷ Shortly before dropping below a gear-dependent minimum speed, the transmission downshifts automatically even without your intervention.

Display in the instrument cluster

Gear display



R N 1 2 3 4 5 6

D1 D2 D3 D4 D5 D6

The gear currently selected, the selected shifting mode and, if applicable, malfunctions are displayed in the instrument cluster.

Malfunctions

Indicator lamp



If the indicator lamp lights up, a malfunction has occurred in the transmission system.

While it will remain still possible to move the selector lever to any desired position, the transmission will revert to operation in its default mode with only a limited number of forward gears.

If this happens, avoid extreme engine loads and consult the nearest BMW center.

Overheating



In case of overheating in the area of the transmission, this symbol and an acoustic signal indicate that you should stop or start off quickly if possible so that the system can cool down again. Here as well, please note any supplementary information that appears on the Control Display.

Information on jump-starting, tow-starting and towing begins on page [174](#).

Dynamic Driving Control

With Dynamic Driving Control, you can choose between a standard and a sport program.

Sport program

- ▷ The engine responds more spontaneously to accelerator pedal movements
- ▷ The steering becomes more direct and provides even better road contact.

In addition, with SMG and an automatic transmission:

- ▷ The shifting times are shorter
- ▷ The engine speed range is used optimally in the Drive mode.



Do not use the acceleration assistant too often, as otherwise components will wear prematurely. ◀

1. Activate the Sport program
2. Press the DSC button, refer to page 76, for longer than three seconds
3. Press the accelerator pedal down fully – kickdown. The ideal starting-off engine speed is set.



To maintain driving stability, drive with the DSC on whenever possible. ◀

Information on jump-starting, tow-starting and towing begins on page 174.

Automatic transmission with Steptronic

While you can drive as with any conventional automatic transmission, you also enjoy the option of shifting manually, refer to page 52.

If you move the selector lever from position D to the left into gearshift gate M/S, this activates the sports-style shift programs of the automatic transmission. As soon as you move the selector lever briefly towards + or -, the Steptronic shifts gear and manual operation is activated. If you wish to use the automatic function again, move the selector lever to the right into position D.

Activating the Sport program

In ignition key position 2

Press the SPORT button.

The LED in the button lights up and SPORT is displayed in the instrument cluster.

- ▷ With automatic transmission:
Activating the Dynamic Driving Control activates the Sport program of the automatic transmission. This makes moving the selector lever from D to M/S unnecessary. ◀

Deactivating the Sport program

Press the SPORT button again.

The LED in the button lights up and SPORT goes out in the instrument cluster.

Acceleration assistant with SMG

The acceleration assistant enables optimized vehicle acceleration at racing car level on road surfaces with good adhesion.

Selector-lever positions

P R N D M/S + -

Possible displays



P R N D DS M1 M2 M3 M4 M5 M6

Changing the selector-lever positions



Under normal operating conditions, fuel consumption is lowest when driving in position D.

Kickdown

A kickdown provides you with maximum acceleration and the maximum road speed in position D.

Press the accelerator pedal beyond the full-throttle resistance point.

M/S manual operation and Sport program



Shifting from D into M/S activates the Sport program and this is indicated with DS in the gear display. This position is recommended if a performance-oriented driving style is desired.

The first time the selector lever is even briefly touched, the automatic transmission shifts from the Sport program into manual operation.

If you briefly move the selector lever towards +, the transmission shifts upwards; moving it towards - shifts downwards. The gear display shows M1 through M6.

Upshifts and downshifts are executed only when they will result in a plausible combination of engine and vehicle speed; thus, for example, a downshift that would cause the engine to overrev will not be executed by the system. The selected gear appears briefly in the instrument cluster, followed by the current gear.

To obtain maximum acceleration, for passing maneuvers, etc., during operation in the manual mode, use the kickdown or downshift manually. ◀

An interlock prevents inadvertent gear-shifts into selector-lever positions R and P. To cancel the interlock, press the button on the front of the selector lever knob, refer to arrow.

Press the brake pedal before shifting out of P or N; the shift command will not be executed unless the brake is applied: shiftlock.

To prevent the vehicle from creeping after you select a range, maintain pressure on the brake pedal until you are ready to start. ◀

To prevent the vehicle from rolling, always select position P and apply the handbrake before leaving the vehicle with the engine running.

Never leave an unattended vehicle with the engine running, as such a vehicle represents a potential safety hazard. ◀

P Parking

Select P only when the vehicle is completely stopped. The transmission interlock blocks the driven wheels.

R Reverse

Select R only when the vehicle is completely stopped.

N Neutral

Select N only if your journey is interrupted for a long period.

D Drive – automatic driving position

Position for normal vehicle operation. All forward gears are available.

Shifting from M/S to the selector-lever positions P, R and N is only possible by going through D.

Malfunctions

Indicator lamp




If the indicator lamp lights up, a malfunction has occurred in the transmission system.

While it will remain still possible to move the selector lever to any desired position, the transmission will revert to operation in its default mode with only a limited number of forward gears.

If this happens, avoid extreme engine loads and consult the nearest BMW center.

Information on jump-starting, tow-starting and towing begins on page 174.

Turn signal indicators/ headlamp flasher

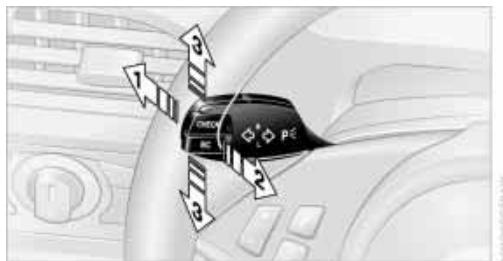

- 1 High beams: blue indicator lamp
- 2 Headlamp flasher: blue indicator lamp
- 3 Turn signal indicators: green indicator lamps, accompanied by a periodic ticking from the turn signal indicator relay

Using turn signal indicators

Move the lever beyond the resistance point. It then returns to the center position when released. Press the lever as far as the resistance point to switch off the turn signal indicators.

If the flashing indicator lamp and the ticking from the relay are both faster than normal, this indicates that one of the turn signal indicator bulbs is defective. ◀

Signaling briefly


Press the lever up to but not beyond the resistance point. It then returns to the center position when released.

Triple turn signal activation

Press the lever as far as the resistance point; the turn signal flashes three times. You can activate or deactivate this function.

Control Center, for principle details, refer to page 17:

1. Open the menu
2. Select "Vehicle settings" and press the controller
3. Select "Lighting" and press the controller

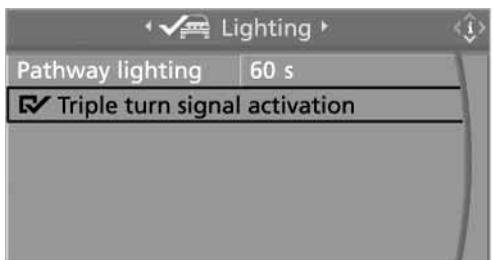

4. Select "Triple turn signal activation" and press the controller.

is displayed when triple turn signal is activated.

Wiper system



- 1 Standard wiper speed: briefly press once.
The system automatically reverts to operation in the intermittent mode whenever the vehicle stops.
- 2 To switch off wipers or for brief wipe
- 3 To activate/deactivate rain sensor
- 4 To clean windshield and headlamps
- 5 To adjust rain sensor sensitivity level
The lever automatically returns to its initial position when released.

Cleaning windshield and headlamps

The system sprays washer fluid against the windshield and activates the wipers for a brief period.

When the vehicle lighting system is switched on, the headlamps are also cleaned at regular and appropriate intervals.


⚠ Do not use the washers if there is any danger that the fluid will freeze on the windshield. If you do so, your vision could be obscured. To avoid freezing, use a washer fluid antifreeze, see Washer fluid. Avoid activating the washer when the reservoir is empty, as damage to the pump could result.◀

Windshield washer nozzles

The windshield washer nozzles are automatically heated as of ignition key position 2.

Rain sensor

The rain sensor controls windshield wipe operation depending on the amount of rain. The rain sensor is located on the windshield, directly in front of the interior rear-view mirror.

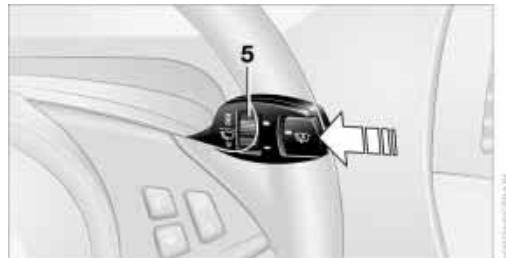

Activating the rain sensor

As of ignition key position 1, briefly press the button. The indicator lamp in the button lights up. The wipers will always respond by completing at least one sweep of the windshield.

Adjusting rain sensor sensitivity level

Turn the serrated dial 5.

Deactivating the rain sensor

Press the button again. The indicator lamp goes out.

The rain sensor is automatically deactivated when you switch off the ignition.

⚠ Deactivate the rain sensor when passing through an automatic car wash. Failure to do so could result in damage caused by undesired wiper activation.◀

Washer fluid

⚠ Washer fluid antifreeze is flammable. Always keep it well away from sparks and open flames, and store it in tightly closed containers well out of the reach of children. Always observe the instructions for use provided on the container. ◀

Washer fluid reservoir



Capacity approx. 5.3 US quarts/5 liters.

Fill with water and – if required – with a washer antifreeze, according to manufacturer's recommendations.

► In order to keep to the mixture ratio, mix the washer fluid before filling. ◀


Cruise control

The concept

The cruise control is available for use at speeds of approx. 20 mph/30 km/h and higher. The vehicle maintains and stores the speed that you set using the lever mounted on the steering column.

⚠ Do not use the cruise control when driving on winding roads, in heavy traffic or in poor road conditions – e.g. snow, rain, ice, loose road surface – that do not permit a constant speed. ◀

One lever for all functions

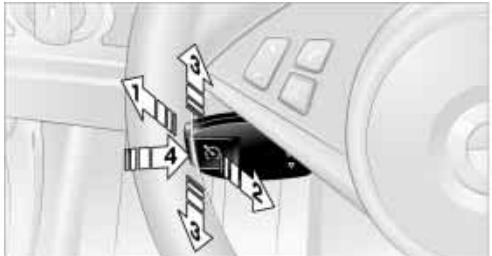

1 Maintaining and storing speed, accelerating

Press the lever as far as the resistance point:

The system maintains and stores the current vehicle speed. The display 1 in the speedometer indicates this regulated speed, refer to page 56. Every time you briefly press the lever, the vehicle's speed increases by roughly 1 mph/1 km/h.

Press the lever longer:

The vehicle accelerates without pressure on the accelerator pedal. The system maintains and stores your current speed as soon as you release the lever.

Move the lever beyond the resistance point:

Increases the speed by 5 mph/10 km/h.

The vehicle may accelerate beyond the regulated speed on steep downhill stretches where the engine's braking effect alone may not be sufficient to slow the car. Speed can drop on uphill grades if the engine output is insufficient.

2 Maintaining and storing speed, decelerating

Pull lever back to the resistance point:

Functions are the same as 1, only the vehicle speed is reduced.

3 Interrupting cruise control

With the cruise control active, briefly press the lever up or down.

In addition, cruise control is interrupted automatically:

- ▷ When you apply pressure to the brake pedal
- ▷ When you press the clutch or select position N of the automatic transmission
- ▷ When the DSC system, Dynamic Stability Control, is in active operation.

4 Recalling stored speed

Briefly press button 4: the vehicle accelerates to and maintains the last speed stored.

Deactivating system

When the ignition is switched off, the system is deactivated and the stored speed is deleted.

Displays in the instrument cluster



- 1 Stored desired speed display
- 2 Digital speed display.
Appears briefly when you select your desired speed

Active cruise control*

The concept

With active cruise control you can select a desired speed which is not only automatically maintained when driving on open roadways, but also varied to maintain a selected distance setting as slower traffic is encountered.

Active cruise control is a technological advance over the familiar cruise control and is a welcome relief from the constant

adjustment of speed that can accompany driving in traffic on freeways or other high-speed thoroughfares. Especially on longer trips, the system can reduce fatigue and tension, while increasing your enjoyment of driving. Please use it safely and responsibly.

In addition to holding a steady cruising speed, if you do encounter slower vehicles ahead, active cruise control will, within the scope of given possibilities, adjust your vehicle's speed automatically so that you can flow with the traffic without frequent intervention by the driver. If, for example, while cruising at the selected speed, you begin to approach a slower vehicle ahead of you in the same lane, the system will reduce your vehicle's speed to the same as that of the vehicle ahead to maintain your selected distance setting between your vehicle and the vehicle ahead. There are four settings for distance, which is additionally speed-dependent. Based on your selected distance setting, the system automatically decreases the throttle setting and lightly applies the brakes if necessary. The vehicle brake lamps will automatically illuminate to signal a following driver to take action. In addition, it may be necessary for the vehicle to downshift to maintain the distance setting selected. If the vehicle ahead speeds up or when the lane ahead becomes clear, your vehicle will accelerate to the speed you have selected by increasing the throttle setting and shifting gears as needed.

⚠ Active cruise control is not and must not be used as a collision avoidance/warning system.◀

⚠ Since this active cruise control system is a new technology and operates differently from conventional cruise control systems which you may be accustomed, you are strongly urged to read all of the pages relating to this system before use. Pay special attention to the information contained in the Things to know about active cruise control section in this manual beginning on page 59.◀

Displays in the instrument cluster



- 1 Stored desired speed display
- 2 Detected vehicle display. Lights up when vehicle driving ahead is detected
- 3 Selected distance to vehicle driving ahead
- 4 Digital speed display.
Appears briefly when you select your desired speed



The system is activated.
The display **2** appears as soon as you activate the system and no vehicle is detected driving ahead.



Vehicle detected.
The display **2** lights up yellow when a vehicle is detected driving ahead.




The system requests you to intervene by braking or with an evasive maneuver. The display **2** flashes red and a signal sounds. The active cruise control cannot automatically restore the distance to the vehicle driving ahead. You will find more detailed information on page 61.



Automatic intervention by ABS or DSC, or you actuate the handbrake while driving. The display **2** flashes yellow. The active cruise control now only intervenes by braking.

Operating the active cruise control

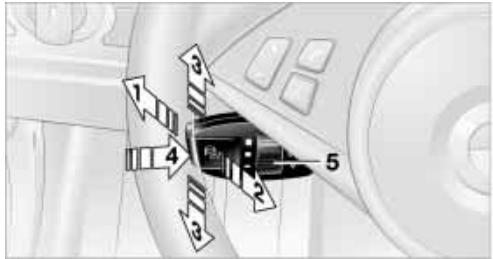

- 1 Activate system, store and increase desired speed
- 2 Activate system, store and decrease desired speed
- 3 Deactivate system
- 4 With system deactivated:
Briefly press the button to recall the stored speed and distance.
With system activated:
Increase desired speed by 5 mph/10 km/h with each press of the button
- 5 Select distance to vehicle driving ahead. You can choose from four available distance settings. You will find more detailed information on page 59

 Adjust your desired speed to the traffic conditions and remain ready to brake at all times. Great differences in speed to the vehicles driving ahead, e.g. when quickly approaching a truck or when another vehicle swerves into your lane, cannot be compensated for by the system.◀

Activate system



From approx. 20 mph/30 km/h you can activate the system by pressing the lever forward or pulling it back:

The current driving speed is stored as a desired speed and briefly displayed in the instrument cluster, see below.

1 Store and increase desired speed



Press the lever forward:

The system adopts and stores your current speed as a desired speed. The speedometer indicates this speed.

Subsequently pressing forward increases the desired speed to the next 5-mile place/10 km/h.

Each time the lever is pressed forward again, the desired speed is increased by another 5 mph/10 km/h until a maximum of 110 mph/180 km/h is reached. The speed then displayed is stored and reached on a clear road.

If the system cannot be activated, the display ACC --- mph/km/h briefly appears in the instrument cluster. The system may have been automatically deactivated, refer to Deactivate system, or a malfunction has occurred.

To call up Check Control messages, refer to page 65.◀

2 Store and decrease desired speed

Pull back the lever:

The current driving speed is rounded off to the next 5-mile place/10 km/h, displayed and stored.

Each time the lever is pulled back again, the desired speed is decreased by another 5 mph/10 km/h until the minimum speed of 20 mph/30 km/h is reached. The speed then displayed is stored and reached on a clear road.

3 Deactivate system

Press the lever up or down while the system is active. The displays in the instrument cluster disappear. You can use the system again as required.

In addition, the system is deactivated automatically:

- ▷ When you apply pressure to the brake pedal
- ▷ When you select the automatic transmission's/SMG's neutral range N
- ▷ With the manual transmission idling
- ▷ When you deactivate the DSC Dynamic Stability Control
- ▷ When you apply the parking brake during driving
- ▷ When the system reduces the speed to below 20 mph/30 km/h due to a traffic situation.

The system deactivates automatically when the speed is set to below 20 mph/30 km/h. A gong sounds and a message appears on the Control Display. The active intervention of the driver is required.◀

When you switch off the ignition, the stored desired speed is deleted.

4 Resume stored desired speed and distance setting


Press button 4:

The displays appear in the instrument cluster. The system is reactivated and uses the last stored desired speed and distance setting.

4 Fine adjustment of desired speed

In the activated state, the desired speed increases by 1 mph/1 km/h each time button 4 is pressed briefly.

5 Select distance

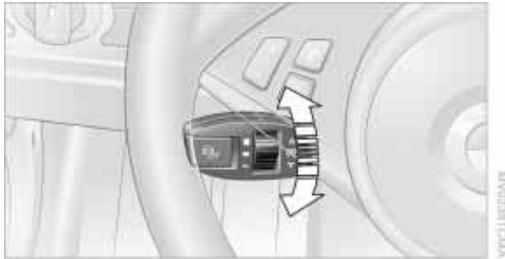

You can choose from four distance steps.

- ▷ Rotary switch downward:
Decrease distance.
- ▷ Rotary switch upward:
Increase distance

The selected distance is displayed in the instrument cluster.



Distance 1



Distance 2



Distance 3

This distance is always set when the system is used for the first time after starting the engine.




Distance 4



Use good judgment to select the appropriate following distance given road conditions, traffic, applicable laws and driving recommendations for safe following distance.◀

Things to know about active cruise control

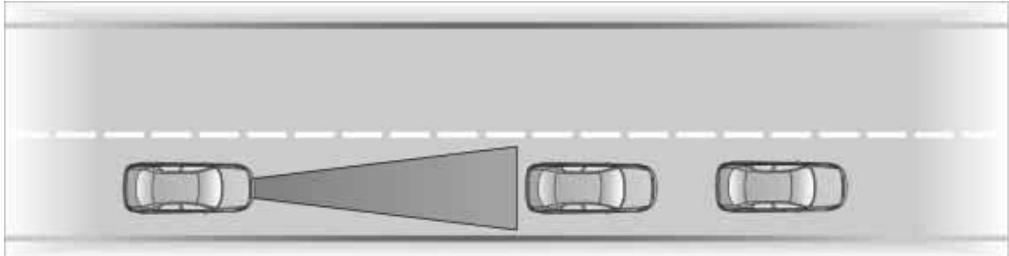

⚠ As with conventional cruise control systems, active cruise control in no way diminishes or substitutes for the driver's own personal responsibility, alertness and awareness in adjusting speed, braking or otherwise controlling the vehicle. The driver should decide when to use the system on the basis of road, traffic, visibility, and weather conditions. Active cruise control is intended for use on highway-type roadways where traffic is moving relatively smoothly. Do not use this system in city driving; heavy traffic such as during rush hour; on curvy, winding roads, slip-

pery roads or roads with sharp curves such as highway off-ramps; during inclement weather such as snow, strong rain or fog; or when entering interchanges, service/parking areas or toll booths. It is also important to regulate your vehicle's speed and distance setting within applicable legal limits. Always be ready to take action or apply the brakes if necessary, especially when the system is actively following a vehicle in front of you.◀



Always remember that the range and ability of the system does have physical limitations. It will not apply the brakes

or decelerate your vehicle when there is a slow-moving vehicle, stopped vehicle or stationary object ahead of you, as for example, at a traffic light or a parked vehicle. Also, the system does not react to oncoming traffic, pedestrians or other type of potential traffic such as a rider on horseback. It is also possible that the system may not detect smaller moving objects such as motorcycles or bicycles. Be especially alert when encountering any of these situations as the system will neither automatically brake, nor provide a warning to you. Also, be aware that every decrease in the distance setting allows your vehicle to come closer to a vehicle in front of you and requires a heightened amount of alertness.◀

If while your vehicle is actively following a vehicle in front of you and the vehicle ahead speeds up or the lane ahead becomes clear, then your vehicle will accelerate to the speed you have selected. Be aware that changing to a clear, unobstructed lane will also result in your vehicle accelerating.

⚠ Be certain to deactivate the system when you pull into an exit lane for a highway off-ramp.◀

Also, vehicles traveling in a staggered manner on a highway may cause a delay in the system's reaction to a vehicle in front of you or may cause the system to react to a vehicle actually in the lane next to you. Always be ready to take action or apply the brakes if necessary.

Active cruise control can only decelerate the vehicle to approx. 20 mph/30 km/h. If the system reduces vehicle speed below 20 mph/30 km/h or if DSC/ABS is engaged while driving, the system will automatically deactivate.


⚠ Remember, the system cannot stop your vehicle. In addition, the system is deactivated whenever the driver applies the vehicle brakes, shifts the transmission from drive/D to neutral/N, or deactivates DSC. After any deactivation, the system will no longer automatically activate the vehicle brakes, which means the driver

must intervene and resume manual braking. You should then reactivate the system only when you are fully aware of the prior speed and distance settings.◀

Active cruise control may brake when you reduce the stored desired speed; however, the driver must constantly monitor traffic and intervene if necessary.

When you switch off the engine or ignition, active cruise control is fully switched off, too, and any settings you have selected are canceled.

Behavior in curves

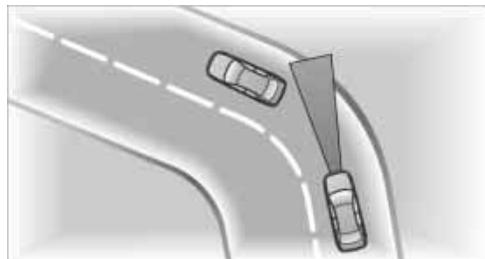

MANUFACTURER

Because of the limited range of the system, it is possible that in curves or on the peaks and valleys of hilly roads, a vehicle ahead may be recognized late, or not at all. Therefore, it is up to the driver to select a speed that is prudent in view of the curves and terrain of the roadway.



MANUFACTURER

In approaching a curve, it is possible that active cruise control would react briefly to a vehicle in the adjacent lane. In addition, the system can sense if your vehicle is in a curve and may not accelerate. If your vehicle decelerates in either case, you can choose to overcome the deceleration by briefly pressing the accelerator pedal.

Driver interventions


 Anytime the driver presses down on the accelerator pedal, any automatic braking action by the system is interrupted until the pedal is fully released. After doing this, release the accelerator and the system again controls your cruising speed and distance setting. While driving with activated system, resting your foot on the accelerator pedal will cause the system not to brake even if necessary. Be certain that floor mats or other objects on the vehicle floor do not interfere with movement of the accelerator pedal. ◀

 While active cruise control is capable of braking your vehicle automatically when you approach a slower vehicle ahead, it is important to be aware that the ability of the system to apply the brakes is also limited, if you are driving down a steep grade or when you reduce your desired speed sharply. The system cannot stop your vehicle. It uses only a portion of braking system capacity and does not utilize the full capacity of the vehicle braking system. Therefore, the system cannot decrease your speed for large differences in speed between your vehicle and the vehicle ahead. Examples: during emergency braking, when you approach a vehicle traveling at a much lower speed than your own speed such as approaching a toll booth or when a much slower vehicle cuts in front of you at close range. ◀



Whenever active cruise control recognizes a situation that requires driver braking because the system capacity has been reached or has been exceeded, the system alerts the driver by flashing this symbol in the instrument cluster and sounding a signal.

Swerving vehicles

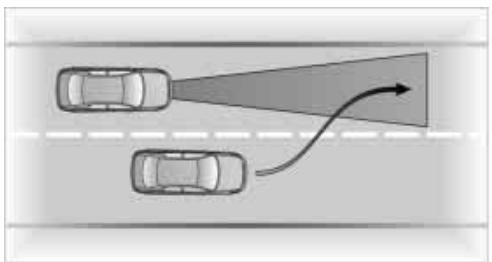

When a vehicle moves from an adjacent lane into your lane, active cruise control will not recognize this vehicle until it is fully in your lane ahead of your vehicle.

Malfunctions



If there is a malfunction, the indicator lamp symbol is displayed in the instrument cluster. Please note any supplementary information that appears on the Control Display.

The buildup of foreign material, e.g., snow, ice, dirt, road debris, etc., can lead to reduced detection performance of active cruise control. You should check the sensor under the front bumper and clean it as necessary prior to driving your vehicle. If the sensor becomes covered by foreign material or has a malfunction, it is possible that the sensor will no longer be able to detect vehicles in front of you. After the system recognizes that the sensor is no longer functional, a message is displayed on the Control Display and an acoustic signal is emitted.

Everything under control

Odometer, outside temperature display, clock



When the ignition is switched off you can briefly activate the time, outside temperature and odometer displays by pressing the knob at the lower left of the instrument cluster.

1 Outside temperature display, clock, date

The outside temperature and the time are displayed as of ignition key position 1.

You can change the measurement unit °F/°C in the menu, refer to Measurement units on page 70.

To call up the date:

Briefly press the Check button on the turn signal indicator lever, refer to page 67.

Setting the time and date, refer to page 71.

Ice warning

A warning signal sounds when the outside temperature falls to roughly +37.5 °F/+3 °C; this is accompanied by a message.

Please bear in mind that the ice warning does nothing to alter the fact that black ice may be present on roads at temperatures higher than +37.5 °F/+3 °C e.g. on bridges and shaded roads. ◀

2 Odometer and trip odometer

To reset the trip odometer to zero:
Press the knob at the lower left of the instrument cluster.

Tachometer



The white-striped advance warning field, arrow 1, changes depending on the engine temperature. The segments disappear in sequence as the engine warms to its normal operating temperature.

Avoid allowing the engine speed to rise as far as the advance warning field whenever possible.

Engine speeds in the red warning field, arrow 2, must be avoided.

In this range, the fuel supply is interrupted to protect the engine.

Engine oil thermometer



The engine oil temperature in normal operating mode is between 158 °F/70 °C and 338 °F/170 °C.

If the engine oil temperature is too high, a message appears on the Control Display.

Fuel gauge



After the reserve quantity has been reached, a message appears for a short time on the Control Display; the range is shown in the computer. Below a range of approx. 30 miles/50 km, the message remains on the Control Display, and the range is displayed.

Tank capacity: approx. 18.5 US gallons/70 liters, including the reserve capacity of approx. 2.1 gallons/8 liters. You can find information on refueling on page 154.

If the tilt of the vehicle varies for a longer period, when you are driving in mountainous areas, for example, the indicator may fluctuate slightly.

⚠ Refuel well before the tank is empty, as otherwise engine functions will not be ensured and damage can occur if you drive down to the last drop. ◀

Service requirement display and display of legally prescribed inspections

In the instrument cluster



The remaining distance to be driven, the date for the next maintenance as well as the date entered for the state emission or vehicle inspection are displayed briefly as of ignition key position 2, if the date is imminent.


▶ Your Service Advisor will determine your vehicle's current service requirements by reading out the data stored in the vehicle key.

On the Control Display

You can view additional information on service and maintenance procedures using the Control Center.

Control Center, for principle details, refer to page 17:

1. Open the **i** menu
2. Select "Service" and press the controller
3. Select "Service requirements" and press the controller
4. Select "Status" and press the controller.

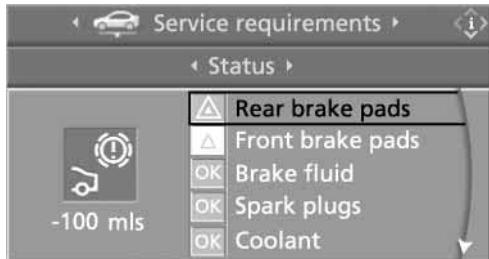

The display shows a list of selected service and maintenance procedures, as well as legally prescribed official inspections.

Symbols


The service deadline has already passed.

The deadline for service or an official inspection is approaching. Please contact your BMW center for an appointment.

No service is currently required. If you desire, certain maintenance operations can be carried out at the next service at the customer's request.

You can request more detailed information on every entry.

Select the entry and press the controller.

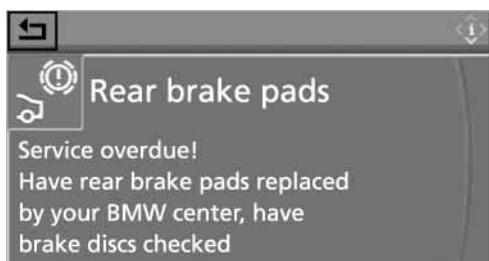

To close the menu:


Select and press the controller.

Entering dates for state emission and vehicle inspections

Make sure the date in the Control Center is always set correctly, refer to page 71, as otherwise the effectiveness of CBS Condition Based Service is not ensured.◀

Control Center, for principle details, refer to page 17:

1. Open the menu
2. Select "Service" and press the controller
3. Select "Service requirements" and press the controller
4. Select "Status" and press the controller

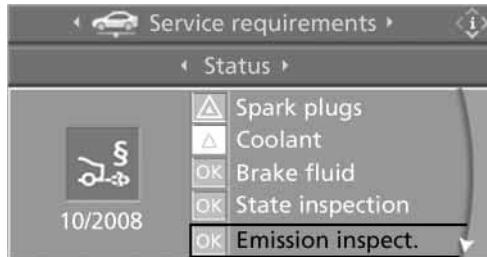

5. Select "Emission inspect." or "State inspection" and press the controller
6. Select "Set service date" and press the controller. The month is highlighted



7. Turn the controller to make the adjustment
8. Press the controller to accept the setting. The year is highlighted
9. Turn the controller to make the adjustment
10. Press the controller to accept the setting. The date entry is stored.

To close the menu:

Select and press the controller.

Check Control

Display of a message



- 1 means that a Check Control message is present
- 2 Information and malfunction reports on systems are indicated by an illuminated indicator or warning lamp symbol




At the same time, a gong sounds and a text message appears on the Control Display.

Messages are assigned one of two priority ratings:

Priority 1

These messages and malfunction reports are signaled by a gong. If a number of malfunctions occur simultaneously, they are displayed in succession. These messages cannot be deleted, and they remain in the display until the problem is corrected. Supplementary information can also appear on the Control Display.

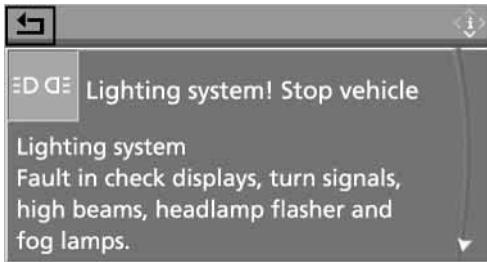


These supplementary messages are intended to assist you in assessing the severity of malfunctions; they provide you with the information you need to decide on the best way to respond.

To close the menu:
Select and press the controller.

Priority 2

These status messages and malfunction reports are indicated by the gong and displayed for approx. 20 seconds.

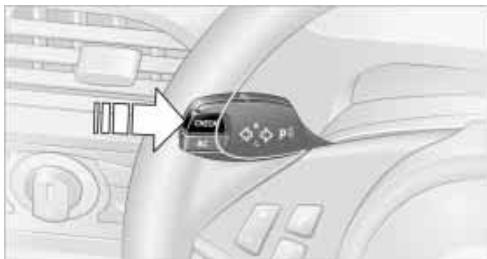

To hide a displayed message: briefly press the CHECK button on the turn signal indicator lever.

Check Control symbol and information on the Control Display


Depending on the status of the monitored systems, various symbols are displayed on the Control Display:

- No malfunctions are present in the monitored systems.
- One or several faults have occurred in the monitored systems.
- Depending upon how serious the problem is, a supplementary message may also appear on the Control Display.

The symbols also indicate the status of the service requirement display, refer to page 64.

Calling up stored messages on the Control Display

Using the CHECK button

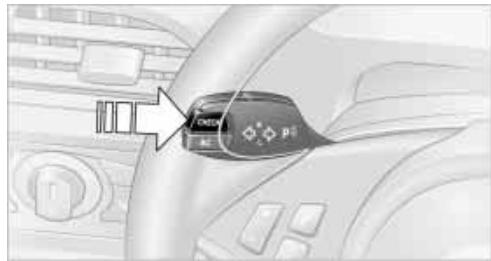

1. Maintain pressure on the button for several seconds:
The first stored message is displayed
2. Briefly press the button:
A new message appears each time you briefly press the button.

Using the Control Center


Control Center, for principle details, refer to page 17:

MENU

1. Open the start menu by pressing the button



2. Open the **i** menu by pressing the controller
3. Select "Service" and press the controller
4. Select "Check Control messages" and press the controller The stored messages appear in the display

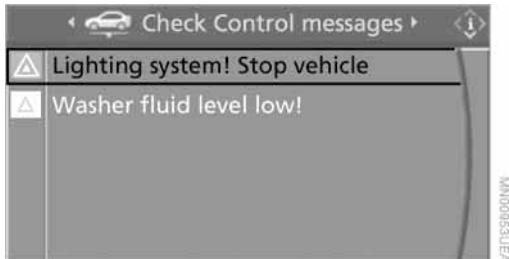

5. Select the desired message and press the controller.

The display disappears automatically after a short time.

To close the menu immediately:
Select and press the controller.

Displays after completion of trip

Malfunction reports generated during the trip are shown consecutively when you switch off the ignition.

If applicable, a message appears when you open the driver's door after parking: "Parking lamps on!".


A supplementary gong is also heard.

Before the display disappears, you can display the messages once again. Press the CHECK button for approx. 2 seconds. If several messages are present, you can continue to briefly press the CHECK button to view them in succession.

The Check Control function

- ▷ cancels itself automatically after a brief period
- ▷ can be canceled by again pressing the CHECK button for approx. 2 seconds.

Computer

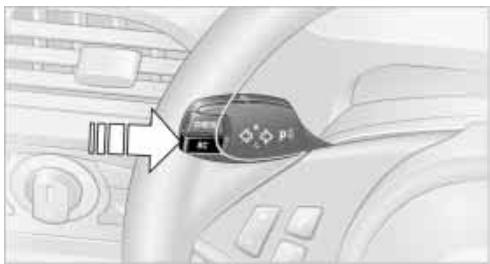

To select functions:

As of ignition key position 1, you can use the BC button in the turn signal indicator lever to open computer information in the instrument cluster.

A new function appears each time you briefly press the BC button.

Displays in the instrument cluster



The display sequence:

- ▷ Cruising range
- ▷ Average speed
- ▷ Average fuel consumption.

Cruising range

Displays the estimated cruising range available with the remaining fuel. The system calculates the cruising range based on operating conditions and the amount of fuel remaining in the tank. The basis for the calculations is the average fuel consumption over the preceding 20 miles/30 km.

⚠ Always refuel as soon as possible once your cruising range falls to below 30 miles/50 kilometers, as other-

wise engine functions are not ensured and damage can occur.◀

Refueling is only registered by the computer for fuel amounts above approx. 1.3 gallons/5 liters.

Average fuel consumption

The average fuel consumption is calculated for the time during which the engine is running.

You can use the Control Display to view your fuel consumption rate over two different distances, refer to Computer or Trip computer.

To reset the average fuel consumption to zero: press the BC button in the turn signal indicator lever for approx. 2 seconds.

Average speed

Periods with the vehicle parked and the engine switched off are not included in the calculations of average speed.

To reset the average speed to zero: press the BC button in the turn signal indicator lever for approx. 2 seconds.

Displays on the Control Display

You can also open the computer via the Control Center, for principle details, refer to page 17:

MENU

1. Open the start menu by pressing the button



2. Move the controller to the right to open "Navigation".
On vehicles without navigation: open "Car Data"

- Select "Car Data" and press the controller.


You have two possibilities to display information of the computer:

- Computer
- Trip computer

It is best to use this for driving on vacation, as when you reset the values to zero, all the functions are reset together and then restart.

Computer

Select "Onboard info" and press the controller.

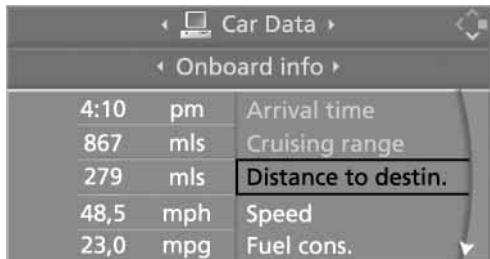


The screenshot shows the "Car Data" menu with the "Onboard info" option highlighted. Below it is a table with five rows of data:

4:10	pm	Arrival time
867	mls	Cruising range
279	mls	Distance to destin.
48,5	mph	Speed
23,0	mpg	Fuel cons.

- Estimated time of arrival at destination. Enter a distance or a destination in the computer or navigation system manually, see below or refer to page 106
- Cruising range
- Distance to destination. Enter a distance or a destination in the computer or navigation system manually, see below or refer to page 106
- Average speed
- Average fuel consumption.

Trip computer

Select "Trip computer" and press the controller.

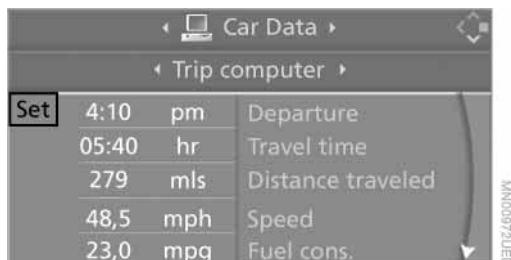

The screenshot shows the "Trip computer" menu with several items listed:

Set	4:10 pm	Departure
	05:40 hr	Travel time
	279 mls	Distance traveled
	48,5 mph	Speed
	23,0 mpg	Fuel cons.

- Departure time
- Driving time
- Elapsed distance
- Average speed
- Average fuel consumption.


To switch the trip computer on/off and reset values to zero:

- Select "Set" and press the controller
- Select the desired menu item and press the controller.

Entering a distance manually

Control Center, for principle details, refer to page 17:

- Open "Navigation".
On vehicles without navigation: open "Car Data"
- Select "Car Data" and press the controller
- Select "Onboard info" and press the controller

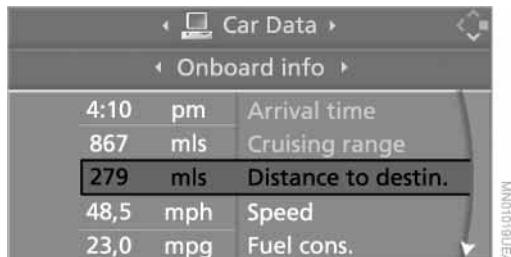

The screenshot shows the "Onboard info" menu with the "Distance to destin." option highlighted. Below it is a table with five rows of data:

4:10	pm	Arrival time
867	mls	Cruising range
279	mls	Distance to destin.
48,5	mph	Speed
23,0	mpg	Fuel cons.

- Select "Distance to destin." and press the controller
- Turn the controller to select the distance to your destination
- Press the controller to accept the setting.


 With the destination guidance switched on, the distance is entered automatically.◀

Assistance window for computer and trip computer


You can display the computer or the trip computer in the assistance window.

Control Center, for principle details, refer to page 17:

1. Move the controller to the right to change to the assistance window and press the controller

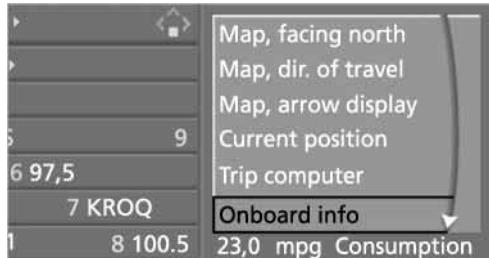

2. Select the menu item and press the controller:
▷ "Onboard info"
▷ "Trip computer".

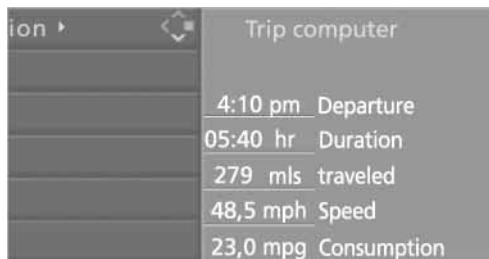

Speed limit


You can enter a speed and a Check Control message indicates when you have reached this speed. This enables you, for example, to receive warnings if you exceed a speed limit in an urban area.

You are only warned of reaching this speed a second time if you again drive at least 3 mph/5 km/h slower.

Adjusting, changing

Control Center, for principle details, refer to page 17:

1. Open "Navigation".
On vehicles without navigation: open "Car Data"
2. Select "Car Data" and press the controller
3. Select "Limit" and press the controller

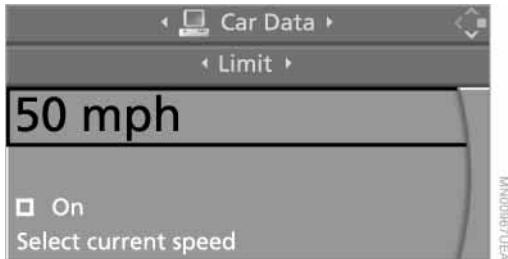

4. Select the speed and press the controller
5. Turn the controller to select the desired speed
6. Press the controller to apply the setting.

Switching on or off

Control Center, for principle details, refer to page 17:

1. Open "Navigation".
On vehicles without navigation: open "Car Data"
2. Select "Car Data" and press the controller
3. Select "Limit" and press the controller
4. Select "On" and press the controller.
 is displayed with the speed limit switched on.

Adopting your current speed as the limit

Control Center, for principle details, refer to page 17:


1. Open "Navigation".
On vehicles without navigation: open "Car Data"
2. Select "Car Data" and press the controller

3. Select "Limit" and press the controller
4. Select "Select current speed" and press the controller. The system adopts your current speed as the limit.

Stopwatch

Control Center, for principle details, refer to page 17:

1. Open "Navigation".
On vehicles without navigation: open "Car Data"
2. Select "Car Data" and press the controller
3. Select "Stopwatch" and press the controller.

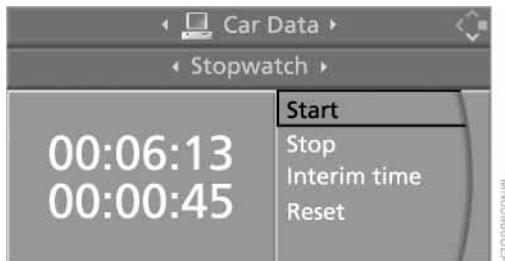

Starting and stopping

- ▷ Select "Start" and press the controller. The stopwatch starts at the displayed time
- ▷ Select "Reset" and press the controller. The stopwatch is reset to 0 and starts
- ▷ Select "Stop" and press the controller. This stops the timer.

Taking an intermediate time reading

Select "Interim time" and press the controller. This intermediate time appears below the ongoing primary stopwatch count.

- All of the remaining functions remain available at all times while the stopwatch is running. The stopwatch continues operation in the background.◀

Changing settings

Brightness

The brightness of the display is automatically adapted to the ambient lighting conditions. However, you can change the base setting for each specific key.

Control Center, for principle details, refer to page 17:

MENU

1. Open the start menu by pressing the button



2. Open the **i** menu by pressing the controller
3. Select "Display settings" and press the controller
4. Select "Brightness" and press the controller




5. Turn the controller to make the adjustment
6. Move the controller forwards to apply the set value.

Measurement units

You can change the measurement units for consumption, distances, temperature and pressure for each specific key.

1. Open the  menu
2. Select "Display settings" and press the controller
3. Select "Units" and press the controller

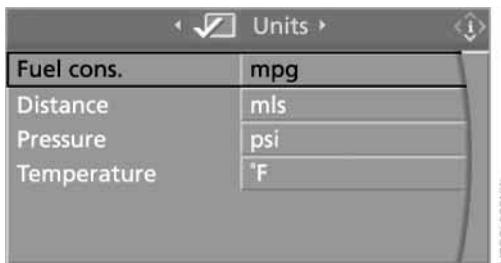


4. Select the menu item to be adjusted and press the controller
5. Select the desired measurement unit and press the controller.

Language

The language on the Control Center can be set for each specific key.

Control Center, for principle details, refer to page 17:

1. Open the  menu
2. Select "Display settings" and press the controller
3. Select "Languages" and press the controller
4. Select "Text language" and press the controller. You can select a different language for the text displays

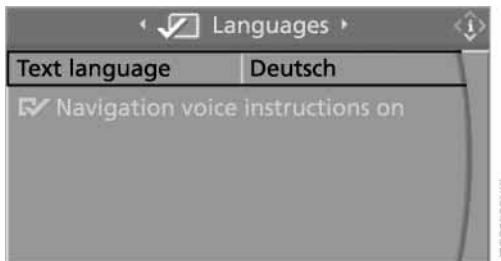


5. Select and activate the desired language by pressing the controller.

Setting the time

Control Center, for principle details, refer to page 17:

1. Open the  menu
2. Select "Display settings" and press the controller
3. Select "Time" and press the controller

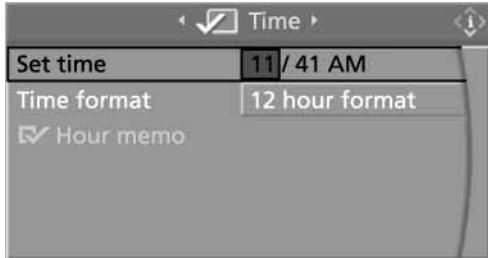

4. Select "Set time" and press the controller. The first time setting is highlighted
5. Turn the controller to make the adjustment
6. Press the controller to accept the setting. The next adjustment is highlighted
7. Make the remaining adjustments. After the last adjustment, the time is stored.

Changing the display form

The display form of the clock can be set for each specific key.

1. Select "Time format" and press the controller
2. Select the desired format and press the controller.

Switching on the reminder function*

Select "Hour memo" and press the controller.

 is displayed with the reminder function switched on.

You will hear three tones just before each full hour.

Setting the date

Control Center, for principle details, refer to page 17:

1. Open the  menu
2. Select "Display settings" and press the controller
3. Select "Date" and press the controller



4. Select "Set date" and press the controller. The first section of the date display is highlighted, here the day
5. Turn the controller to make the adjustment
6. Press the controller to accept the setting. The next adjustment is highlighted
7. Make the remaining adjustments. After the last adjustment, the date is stored.

Changing the display form

The display form of the date can be set for each specific key.

1. Select "Date format" and press the controller
2. Select the desired format and press the controller.

Technology for comfort, convenience and safety

PDC Park Distance Control*

The concept

The PDC assists you when you are parking. Signal tones indicate the current distance to an object behind or in front of your vehicle. You also enjoy the option of having the system show distances to objects on the Control Display. Four ultrasonic sensors in both the bumpers monitor the distance to the nearest object. The sensors at the front and at the two rear corners have a range of approx. 1.64 ft/50 cm; the rear middle sensors have approx. 5 ft/1.50 m.

! PDC is a parking aid that can indicate objects when they are approached slowly, as is usually the case when parking. Avoid approaching an object at high speed, as otherwise the physical circumstances would mean that the system warning was too late.◀

Automatic function

As of ignition key position 2, the system automatically assumes operational status after a few seconds each time you engage reverse gear or selector-lever position R.

 Wait this short period before reversing.◀

Switching on manually

Press the button, the indicator lamp lights up.



Switching off manually

Press the button again; the indicator lamp goes out.

Automatic deactivation

The system is automatically deactivated once the vehicle travels approx. 165 ft/50 m or exceeds a speed of roughly 20 mph/30 km/h; the indicator lamp goes out. You can switch on the system manually as needed.

Acoustic signals

The signal indicating the distance to the nearest obstacle is directional. Thus, an object detected to the left rear of the vehicle will be indicated by a signal tone from the left rear speaker, etc. As the distance between vehicle and object decreases, the intervals between the tones become shorter. The signal tone becomes continuous once the distance to the nearest object falls to below roughly 1 ft/30 cm.

The warning signal is canceled after approx. 3 seconds when the distance to an object remains constant during this time, if you are moving parallel to a wall, for instance.

Malfunctions

The indicator lamp within the button flashes and a message appears on the

Control Display. Please note any supplementary information that appears there. Switch the system off and have the cause of the malfunction corrected by your BMW center.

Display on the Control Display

You also enjoy the option of having the system show distances to objects on the Control Display. The Control Display will also indicate the presence of objects in green before they are close enough to generate a signal tone.


Control Center, for principle details, refer to page 17:

MENU

1. Open the start menu by pressing the button



2. Open the **i** menu by pressing the controller
3. Select "Vehicle settings" and press the controller
4. Select "PDC" and press the controller

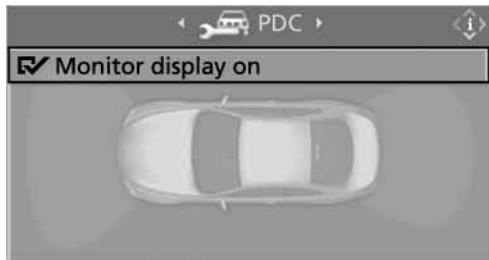

5. Select "Monitor display on" and press the controller.

is displayed with the PDC image switched on.

The display then appears on the Control Display as soon as PDC is automatically activated.

The previous display automatically reappears after the system is switched off.

Limits of the system

Even with PDC, final responsibility for estimating the distance between the vehicle and any obstructions always remains with the driver. Even when sensors are involved, there is a blind spot in which objects cannot be detected. The system is also subject to the physical limits that apply to all forms of ultrasonic measurement, such as those encountered with thin and wedge-shaped objects, etc. Low objects already displayed, e.g. a curb, can also disappear from the detection area of the sensors again before a continuous tone sounds.

Loud noises from outside and inside your vehicle may prevent you from hearing the PDC signal tone.◀

Keep the sensors clean and free of ice or snow in order to ensure that they will continue to operate effectively. Do not apply high pressure spray to the sensors for a prolonged period of time. Always keep the spray at least 4 in/10 cm away from the sensors.◀

Driving stability control/ ABS Antilock Brake System

Your BMW is equipped with an extended array of systems designed to enhance and maintain vehicle stability under extreme conditions. The following section describes these functions based on DSC and ABS.

The concept

ABS enhances active safety by preventing the wheels from locking under braking.

The ABS is operational every time you start the engine. ABS includes the functions CBC Cornering Brake Control and EBV Electronic Brake Force Distribution.

In case of malfunction



If the indicator lamp lights up in yellow, this indicates that ABS has been deactivated in response to a system malfunction. Conventional braking efficiency remains available without limitations. Please have the system inspected at your BMW center.

CBC Cornering Brake Control

CBC is a supplement to ABS. It provides further enhancements in vehicle stability and steering response during lane changes and cornering at high rates of lateral acceleration.

EBV Electronic brake-force distribution

EBV controls the brake system's application pressure at the rear wheels to ensure stable deceleration.

In case of malfunction



If the brake system warning lamp lights up in red, appearing together with the yellow indicator lamps for ABS and DSC: the driving stability control is no longer operational.



If all three lamps light up in yellow: malfunction in the driving stability control systems. The EBV Electronic Brake Force Distribution is active.

While you may continue, you should remember to proceed cautiously and drive defensively while avoiding full brake applications.

Please have the system checked at the nearest BMW center.

If a message appears on the Control Display, please note the supplementary information.

You can find more information on the Check Control starting on page 65.



Indicator and warning lamps for Canadian models.

Driving stability control/ DSC Dynamic Stability Control

The concept

DSC maintains vehicle stability, even in critical driving situations.

The DSC is operational every time you start the engine. DSC includes the functionality of the DTC Dynamic Traction Control and DBC Dynamic Brake Control, see below.

The system optimizes vehicle stability during acceleration and when starting from a full stop, as well as optimizing traction. The system recognizes any tendency for the vehicle to assume an unstable attitude such as oversteer or understeer; it then counteracts this tendency with a combination of graduated reductions in engine torque and selective braking intervention at individual wheels. DSC provides optimal stability within the limits defined by the laws of physics.

Indicator lamps




The indicator lamp in the instrument cluster goes out soon after you start the engine.

The indicator lamp flashes:

DSC controls the drive and braking forces.

The indicator lamp stays lit:

DSC has been switched off via the button.



The indicator lamp and the brake warning lamp remain on continuously:

DSC, DTC and DBC have a malfunction.

When the system is off, the stability maintenance functions described above are no longer available. The vehicle will remain completely operational, however, without DSC.

Please respond to any malfunctions by referring the problem to your BMW center.



Indicator and warning lamps for Canadian models.

DTC Dynamic Traction Control

In special driving states, e.g. in deep snow, DTC ensures maximum forward momentum. The gain in forward momentum also involves a reduction in driving stability. DTC is active up to 45 mph/70 km/h.

Activating DTC



Press the DSC button briefly; the DTC indicator lamp in the instrument cluster lights up permanently.

You may find it useful to briefly activate DTC under the following special circumstances:

- ▷ When rocking the vehicle and starting off in deep snow or on loose road surfaces
- ▷ When ascending snow-covered hills, and when driving in deep or on hard-packed snow
- ▷ When driving with snow chains.

When DTC is active, DSC provides only limited system response up to a speed of approx. 45 mph/70 km/h. Intervention for stability-enhancement is reduced.◀

Deactivating DSC again

Press the DSC button again; the DTC indicator lamp in the instrument cluster goes out. DSC is available once again without restriction.

Switching off DSC

Press the DSC button for at least 3 seconds; the DSC indicator lamp in the instrument cluster lights up permanently. DSC is deactivated.



Deactivating DSC automatically deactivates DTC as well. The systems for enhancing stability and traction are deactivated, and there is no active braking intervention or torque control.

A message appears on the Control Display. Please note any supplementary information that appears there.



To maintain optimal stability, drive with the system on whenever possible.◀

Reactivating DSC

Press the DSC button again briefly; the indicator lamp in the instrument cluster goes out. DSC is now activated.

⚠ The laws of physics cannot be repealed, even with DSC. An appropriate driving style always remains the responsibility of the driver. Therefore, do not reduce the additional safety margin again by taking risks.

Do not make any modifications to the DSC system. Never allow anyone other than authorized professional technicians to carry out service or repairs on the DSC system.◀

DBC Dynamic Brake Control

When you apply the brakes rapidly, this system automatically produces the maximum braking force boost and thus helps to achieve the shortest possible braking distance during panic stops. This system exploits all of the benefits provided by ABS.

Do not reduce the pressure on the brake pedal for the duration of the brake application. When the brake pedal is released, the DBC is deactivated.

 In the event of a malfunction, the warning lamp in the instrument cluster comes on with a yellow light. Have the system checked and repaired at your BMW center as soon as possible. Please note any information that appears on the Control Display.

 Warning lamp for Canadian models.

Active roll stabilization*

The concept

Active roll stabilization minimizes body roll and optimizes vehicle stability during cornering and evasive maneuvers.

Active roll stabilization at the front and rear axles form the basis for active roll stabilization. Suspension compliance adapts to suit driving conditions, varying from performance-oriented during cornering to smooth and comfort-oriented when the vehicle is proceeding in a straight line.

The system assumes operational status each time you start the engine.

Driving with active roll stabilization

During vehicle operation, the system continuously runs through closed-loop control cycles lasting only fractions of a second.

In case of malfunction

 The symbol in the instrument cluster lights up and a message appears on the Control Display.

Please note any supplementary information that appears there.

You can find more information on the Check Control starting on page 65.

 If the active roll stabilization system switches off in response to malfunction, please remember to adapt your speed accordingly, especially in curves.

The suspension will be noticeably softer and the vehicle will display a greater tendency to tilt during cornering and in cross-winds.

If a message stating that you should stop appears on the Control Display in addition to the red symbol, stop immediately and switch off the engine. In this case the oil level in the reservoir may have dropped below the minimum, possibly owing to a leak in the hydraulic system.

Please note any supplementary information that appears on the Control Display.◀

Flat Tire Monitor

The concept

The Flat Tire Monitor keeps track of the inflation pressures in the four fitted tires as you drive. The system provides an alert whenever the inflation pressure drops significantly in relation to the pressure in another tire.

The check of the tire inflation pressure is based on monitoring the relative speeds of the wheels. A flat is detected and reported on the basis of a deviation in certain speed ratios.

Functional requirement

So that the Flat Tire Monitor can learn the correct inflation pressure, please perform the following:

1. Check the inflation pressures in all tires
2. Compare with the inflation pressure table on page 156 and correct if necessary
3. Initialize the system.

Limits of the system

 The Flat Tire Monitor cannot indicate sudden severe tire damage caused by outside factors and does not detect a natural, even pressure drop in all four tires. ◀

In the following situations, on the other hand, there can be delays in detecting tire pressure losses, and even system failure:


- ▷ When you are driving on snow-covered or slippery road surfaces
- ▷ In the case of performance-oriented driving: slip on the drive wheels, high lateral acceleration
- ▷ False alarms and undetected loss of pressure may occur when you are driving with snow chains fitted.

Initializing the system

 Perform the initialization immediately after correcting the inflation pressure, after changing a tire or changing a wheel or all wheels. A drive is necessary for this purpose. ◀

Control Center, for principle details, refer to page 17:

1. Start the engine, but do not drive off
2. Open the  menu
3. Select "Vehicle settings" and press the controller
4. Select "FTM" and press the controller

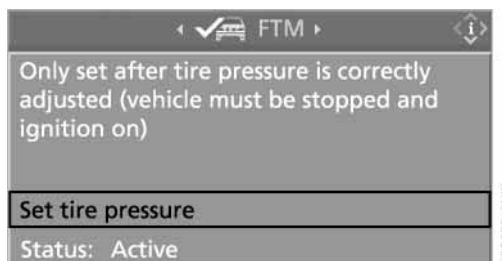

5. Select "Set tire pressure" and press the controller
6. Select "Yes" and press the controller
7. Drive off.

The message "Initializing" is displayed.

It takes a few minutes before the Flat Tire Monitor can detect and report a flat tire. After the initialization is completed, the message "Active" is displayed.

If a flat tire is detected during initialization, a message appears on the Control Display.

 When driving with snow chains, do not initialize the system. ◀

Flat tire

Indicator lamp

 The symbol in the instrument cluster lights up in red and a simultaneous message appears on the Control Display. In addition, an acoustic signal sounds.

Please note any supplementary information that appears on the Control Display. You can find more information on the Check Control starting on page 65.

1. Cautiously reduce the vehicle speed to below 50 mph/80 km/h. Avoid sudden braking and steering maneuvers. Do not exceed a vehicle speed of 50 mph/80 km/h

 Due to the reinforcement on the side walls of the run-flat tires, inflation pressure loss can not usually be recognized from the outside, refer to Run-flat tires on page 158. ◀

- To continue driving, comply with the instructions for driving with damaged tires on page 161.

System malfunctions

Indicator lamp



The symbol in the instrument cluster lights up yellow and a message appears on the Control Display.

Please contact your BMW center for assistance.

Please note any supplementary information that appears on the Control Display.

Active steering*

The concept

The active steering is a system that actively varies the steering angle of the front wheels in relation to the steering wheel movements.

When you are driving in the low road speed range, e.g. in a town or when parking, the steering angle is reinforced, i.e. the steering becomes very direct and significantly improves the handling capability of your BMW.

In the higher road speed range, on the other hand, the steering angle is reduced, also optimizing the handling capability.

In critical situations, the system can make targeted changes to the steering angle provided by the driver and thus stabilize the vehicle before the driver intervenes.

Indicator lamp



The indicator lamp stays lit: system malfunction.

Please have the system inspected at your BMW center.

Conventional steering efficiency remains available without limitations.

Brake force display


The Brake force display indicates the intensity with which you are applying your brakes to drivers of following vehicles.



The display consists of two stages:

- ▷ Normal braking:
The brake lamps in the tail assemblies and the high-mount brake lamp on top of the rear window light up during braking
- ▷ Heavy braking and braking with ABS:
Additional brake lamps light up with the same intensity as the standard brake lamp units to enhance the warning effect of the brake lamps.

Airbags

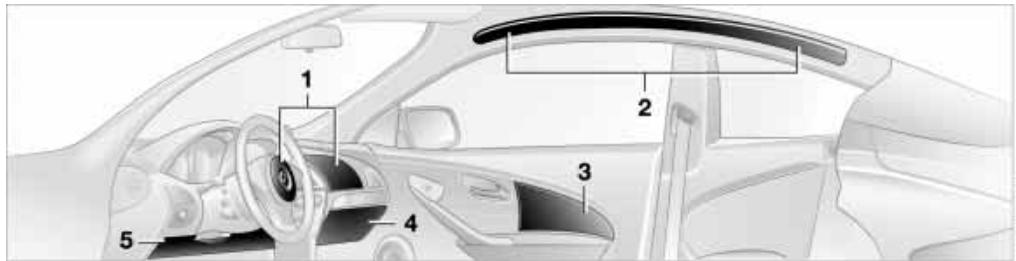

- 1 Front airbags for driver and front passenger
- 2 Head airbags
- 3 Front side airbags
- 4 Knee airbag for front passenger
- 5 Knee airbag for driver

Protective effect

The front airbags help protect the driver and front passenger by responding to frontal impacts in which safety belts alone cannot provide adequate restraint. When needed, the head and side airbags help provide protection in the event of side impact. The side airbags help restrain the side of the occupant's upper torso, and the head airbags help support the head while also helping provide protection against any objects penetrating into the passenger compartment.

The airbags are deliberately not triggered in every impact situation, e.g. less severe accidents, certain rollover conditions, or rear-end collisions.

Even if you adhere to all the instructions injuries resulting from contact with airbags cannot be fully excluded, depending on the circumstances. The ignition and inflation noise may provoke a mild hearing loss in extremely sensitive individuals. This effect is usually only temporary.

For information on the correct sitting position, refer to page 36.



Do not apply adhesive materials to the cover panels of the airbags, cover them or modify them in any other way. Do not attempt to remove the airbag retention system from the vehicle. Never modify or tamper with either the wiring or the individual components in the airbag system. This category includes the upholstery in the center of the steering wheel, on the instrument cluster, the side trim panels on the doors and the roof pillars along with the sides of the headliner. Do not attempt to remove or dismantle the steering wheel. Do not touch the individual components directly after the system has been triggered, because there is a danger of burns. If you note any indication of system malfunction, if you desire to have an airbag deactivated, or if the airbag retention system is triggered in response to an accident, you should always entrust all inspection, repair and dismantling operations to your BMW center.


Unprofessional attempts to service the system could lead to failure in an emergency or undesired airbag activation, either of which could result in personal injury.

To ensure compliance with official safety regulations, please also entrust disposal of airbag generators to a BMW center.◀

Airbag warning information is also provided on the sun visors.

Indicator lamp

Operational readiness of airbag system

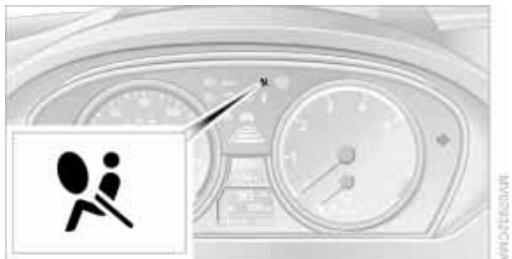

The airbag warning lamp in the instrument cluster indicates the operational readiness of the entire airbag system and the safety belt tensioners as of ignition key position 1.

The indicator lamp goes out after a few seconds.

Airbag system malfunction

! A system malfunction could prevent the system from responding in the expected manner to an impact occurring within its normal response range. Please have the airbag system inspected immediately at a BMW center. ◀

There is a fault in the airbag system if the airbag warning lamp in the instrument cluster behaves as follows:


- ▷ Indicator lamp does not light up as of ignition key position 1
- ▷ Indicator lamp remains on continuously
- ▷ Indicator lamp lights up while the vehicle is being driven.

Lamps

Parking lamps/low beams



VWID0000000000000000000000000000

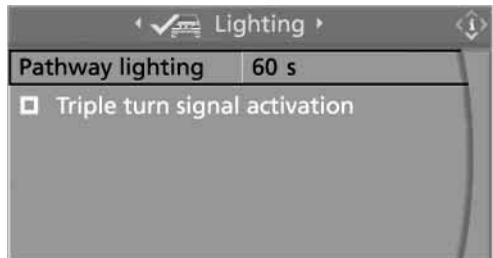

VWID0000000000000000000000000000

Parking lamps/side marker lamps



With the switch in this position, the front, rear and side vehicle lighting is switched on. You can use the parking lamps for parking. For lighting on one side for parking as an additional feature, refer to page 83.

Low beams



When you switch off the ignition with the headlamps on, the headlamps go out, and only the parking lamps remain on.

Pathway lighting

After parking the vehicle and switching off the headlamps, operating the headlamp flasher activates the low beams. You can set the duration using the Control Center or deactivate the function.

Control Center, for principle details, refer to page 17:

1. Open the menu
2. Select "Vehicle settings" and press the controller
3. Select "Lighting" and press the controller

4. Select "Pathway lighting" and press the controller
5. Turn the controller to select the corresponding duration
6. Press the controller to accept the setting.

Lights on warning

If you turn the ignition key to position 0, an acoustic signal sounds when you open the driver's door for a few seconds to remind you that the lamps have not yet been switched off. At the same time a message appears on the Control Display.

Daytime driving lamps*

If you wish, you can leave the light switch in the low-beam position:

All external lamps go out when you switch off the ignition.

Always observe all applicable laws governing the use of daytime driving lamps.

You can switch on the parking lamps when needed using the standard procedure described under Parking lamps.

Automatic headlamp control



When you set the switch to this position, the system activates and switches on and off the low beams in response to changes in ambient light conditions, for instance, in a tunnel, at dawn and dusk, and in rain and snow. The LED next to the symbol is illuminated when the low beams are on.

 Following automatic activation, the vehicle's external lighting remains on when you switch on the fog lamps.◀

 The automatic headlamp control cannot serve as a substitute for your personal judgment in determining when the lamps should be switched on in response to ambient lighting conditions. For example, the system cannot detect fog. To avoid safety risks, you should always switch on the lamps manually under these conditions.◀

Adaptive Head Light*

The concept

Adaptive Head Light is a variable headlamp control system that enables dynamic illumination of the road surface. Depending on the steering angle and other assumptions, the light from the headlamp follows the course of the road.

Activating the Adaptive Head Light

 In ignition key position 2, turn the light switch to the position Automatic headlamp control, refer to page 82.

 When the vehicle is backing up, the Adaptive Head Light is inactive; when the vehicle is at a standstill, it is only active in one direction.◀

In case of malfunction

The LED above the symbol for automatic headlamp control flashes, refer to page 82. Please have the system inspected at your BMW center.


Instrument lighting



VW02012014N

Turn the serrated dial to adjust the illumination intensity.

High beams/standing lamps

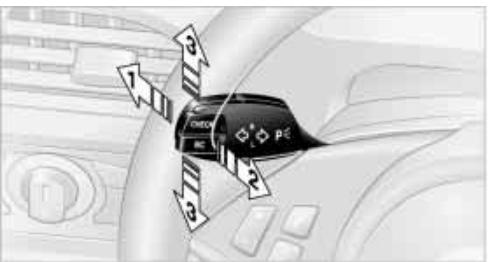

VW02012014N

- 1 High beams: blue indicator lamp
- 2 Headlamp flasher: blue indicator lamp
- 3 Standing lamps

Standing lamps, left and right*

You also enjoy the option of lighting up just one side of your vehicle when parking. When using this function, comply with national regulations:

With the ignition off, press the lever in the desired direction 3, past the resistance point.

Fog lamps



Always observe all applicable laws governing the use of fog lamps.

To disconnect, briefly press the button again.

 The parking lamps or low beams must be switched on for the fog lamps to operate. The green indicator lamp in the instrument cluster lights up whenever the fog lamps are on.

The fog lamps are switched off whenever the high beams are switched on.

 If the automatic headlamp control is activated, the low beams will come on automatically when you switch on the fog lamps.◀

To revert to normal operation, briefly press the button.

Control of the footwell lamps, door entry lighting and courtesy lamps* is also automatic.

Reading lamps

The reading lamps are beside the interior lamp. You can turn them on and off using the buttons **2** located next to the lamps.


 To avoid discharging the battery, all of the vehicle's interior lamps are automatically extinguished approx. 15 minutes after the ignition is switched off.◀

Light-emitting diodes LEDs

Light-emitting diodes installed behind translucent lenses serve as the light source for many of the controls and displays in your vehicle. These light-emitting diodes, which operate using a concept similar to that applied in conventional lasers, are officially designated as Class 1 light-emitting diodes.

 Do not remove the covers, and never stare into the unfiltered light several hours, as irritation of the retina could result.◀

Interior lamps

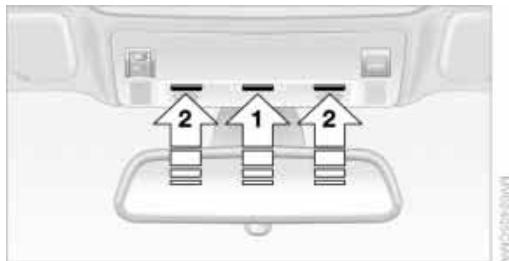


The interior lamps operate automatically.

Switching the interior lamps on and off

Briefly press button **1**.

If you want the interior lamps to remain off continuously, maintain pressure on the button for approx. 3 seconds.

A congenial climate

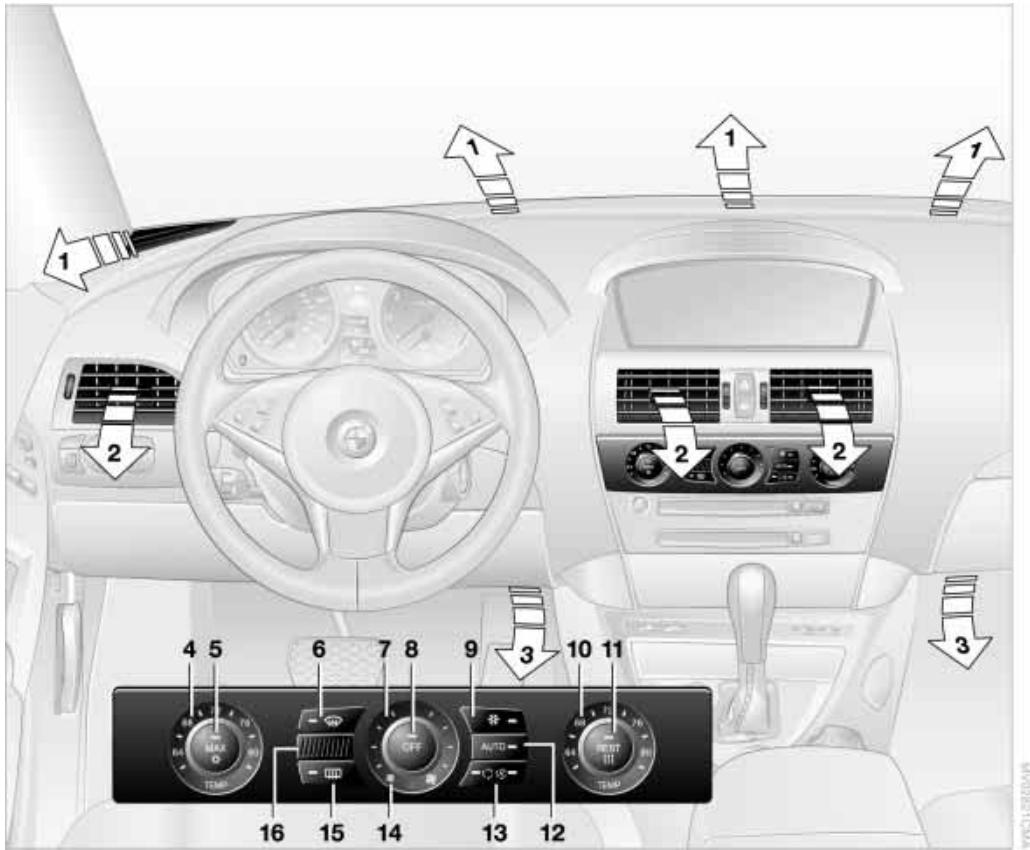

- 1** Airflow directed toward the windshield and side windows
- 2** Air to the upper body. The serrated dials allow you to open and close the air supply vent outlets through an infinitely-variable range. The levers change the direction of the air flow. You can find more information on adjusting for draft-free ventilation on page 89
- 3** Air to footwell
- 4** Temperature, left side of passenger compartment
- 5** Maximum cooling
- 6** Defrosting windows and removing condensation
- 7** Air volume
- 8** Switching off automatic climate control
- 9** Switching cooling function on and off manually
- 10** Temperature, right side of passenger compartment
- 11** Residual heat mode
- 12** Automatic air distribution and volume
- 13** Outside air/AUC Automatic recirculated-air control/Recirculated air

14 Indicator lamp for independent ventilation

- ▷ Activation time set: the indicator lamp  comes on
- ▷ Independent ventilation switched on: the indicator lamp  flashes

15 Rear window defroster

16 Air grill for interior temperature sensor – please keep clear and unobstructed

All other setting options for the automatic climate control can be found at "Climate" and in the  menu on the Control Display, as of page 87.

The current setting for air distribution is displayed on the Control Display.

A congenial climate

To use the automatic function, press the AUTO button. Select an interior temperature you find pleasant.

The following section contains more detailed information on the available setting options.

The cooling function is only possible with the engine running.

Automatic air distribution and volume

 The AUTO program adjusts the air distribution to the windshield and side windows, towards the upper body and footwell as well as the air volume, while also using your preselected temperature setting as the basis for adjusting the interior climate to adapt to external influences: summer, winter.

The cooling function comes on automatically when you select the AUTO program. At the same time, a condensation sensor controls the program in such a way that window condensation is prevented as far as possible.

Temperature adjustment



You can turn to select the desired temperatures for the driver and passenger sides. The figures in the display provide a general indication of interior temperature. A pleasant adjustment is 72 °F/22 °C. When you start the vehicle, this system ensures that the selected temperature is achieved as quickly as possible. It then maintains this temperature, regardless of the season.

Darfrosting windows and removing condensation



This program quickly removes ice and condensation from the windshield and front door windows.

Adjusting the air volume manually



You can adjust the air volume by turning. You can reactivate the automatic mode for the air volume with the AUTO button.

Switching cooling function on and off manually



The cooling function cools and dehumidifies the incoming air before also reheating it as required, according to the temperature setting. Depending on the weather, the windshield may fog over briefly when the engine is started.

The cooling function comes on automatically when you select the AUTO program.

Maximum cooling



This program quickly provides maximum cooling.

The system switches to the recirculated-air mode and the air flows at maximum air volume only from the vent outlets for the upper body area. For this reason you should ensure that these vent outlets are open before selecting this program.

Outside air/AUC Automatic recirculated-air control/ Recirculated air

 You can respond to unpleasant odors or pollutants in the immediate environment by temporarily suspending the supply of outside air. The system then recirculates the air currently within the vehicle. AUC executes this function automatically.

Press the button repeatedly to run through the following control sequence:

- ▷ Indicator lamps off: outside air flows into the vehicle
- ▷ Right indicator lamp on, AUC mode: the system detects pollutants in the outside air and responds by blocking the supply of outside air when required. The system then recirculates the air currently within the vehicle.
- Depending upon air quality requirements, in the automatic mode the system alternates between its outside-air and recirculated-air modes
- ▷ Left indicator lamp on, recirculated-air mode: the supply of outside air into the vehicle is permanently blocked. The system then recirculates the air currently within the vehicle.

 If condensation starts to form on the inside window surfaces during operation in the recirculated-air mode, you should switch it off while also increasing the air volume as required.

The recirculated-air mode should not be used over a sustained longer period of time, as the air quality inside the vehicle deteriorates continuously.◀

Residual heat mode

 The system uses the warmth stored in the engine to heat the interior when the ignition is off, for instance, while the vehicle is stopped at a school to pick up a child.

You can adjust the automatic climate control settings in ignition key position 1.

 Provided that the engine has warmed to its normal operating temperature and the battery is charged, you can use this function for up to 15 minutes after switching off the ignition. The LED within the button lights up to confirm compliance with both of these conditions.◀

Switching automatic climate control off



The air volume, the heater and the cooling function are all switched off. You can restart the automatic climate control by pressing any of its buttons except the REST button.

Settings using the Control Center

Control Center, for principle details, refer to page 17:

1. Turn the ignition key to position 2
-  MENU
2. Open the start menu by pressing the button



3. Move the controller to the left to open "Climate".

You can set the following:

- ▷ Air distribution, separate settings for driver and front passenger
- ▷ Addition of cooler air for the upper body area.

Automatic air distribution

1. Select "Vent settings" and press the controller
2. Select "AUTO" and press the controller.

A congenial climate



is displayed with automatic air distribution.

The program handles adjustment of the air distribution, separately for the driver and passenger side.

To switch on the automatic air distribution for the front passenger:

Move the controller to the right.

Manual air distribution

You can combine your air distribution yourself and also set the air temperature for the upper body area individually.

1. Select "Vent settings" and press the controller
2. Select "AUTO" and press the controller. is displayed with manual air distribution
3. Select the desired field by moving the controller and turn the controller to adjust the air distribution.



- 1 Airflow directed toward the windshield and side windows, driver's side only
- 2 Air to the upper body. You can also individually adjust the air temperature of the vent outlets for the upper body area
- 3 Air to footwell

To select the front passenger area:
Move the controller to the right.

Adjusting temperature for the upper body




- 4 Setting the addition of cool air from the vent outlets for the upper body area

Setting the intensity of the AUTO program


To meet your individual needs, you can weaken or strengthen the intensity of the automatic climate control.

1. Turn the ignition key to position 1 Control Center, for principle details, refer to page 17:
2. Open the menu
3. Select "Vehicle settings" and press the controller
4. Select "Climate control" and press the controller
5. "Automatic programs"

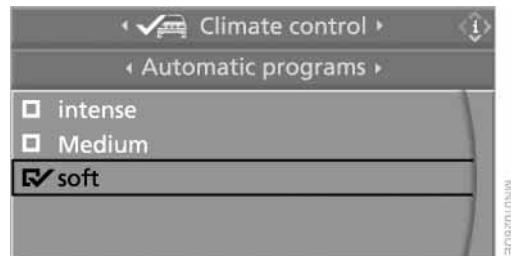

6. Select the desired intensity and press the controller.

Ventilation

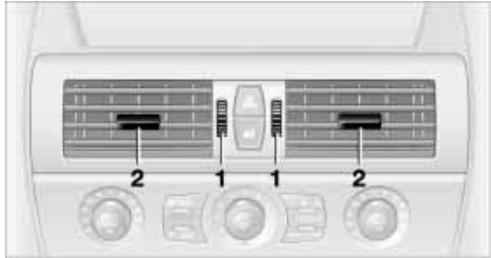

You can adjust the vent outlets for the upper body to suit your personal requirements.

You can use the serrated dials **1** to open and close the vent outlets through an infinitely-variable range, while the levers **2** allow you to adjust the airflow direction.

Ventilation for cooling

Adjust the vent outlets to direct the flow of cool air in your direction, for instance, if the interior has become too warm, etc.

Draft-free ventilation

Set the vent outlets so that the air flows past you and is not directed straight at you.

You can also individually adjust the air temperature of the vent outlets for the upper body area using the Control Center.

Independent ventilation

The independent ventilation blows air into the passenger compartment to lower interior temperatures.

System operation is controlled using the Control Center. You can set two different times for the system to start.


The system remains on for 30 minutes. It can also be switched on and off directly. Since the system uses a substantial amount of electrical current, you should refrain from activating it twice in succession without allowing the battery to be recharged in normal operation between use.

The independent ventilation system is available for preprogrammed operation and for direct activation at any temperature, but is not operational when the vehicle is underway.

The air enters the passenger compartment through the vent outlets in the instrument panel, which can be adjusted for both direction and air flow. These vent outlets must be open for the system to operate.

Switching on and off directly

- Turn the ignition key to position 1 Control Center, for principle details, refer to page 17:
- Open "Climate"
- Select "Independent ventilation" and press the controller
- Select "Automatic venting" and press the controller

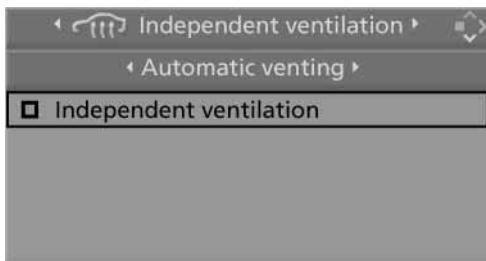

- Select "Independent ventilation" and press the controller.
When the independent ventilation is switched on, is displayed.

Entering switch-on time

- Turn the ignition key to position 1 Control Center, for principle details, refer to page 17:
- Open "Climate"
- Select "Independent ventilation" and press the controller
- Select "Activation time" and press the controller



is displayed with activated switch-on time.


The independent ventilation is only available for activation within the subsequent 24 hours. Thereafter, the time must be reactivated.◀

You can preselect two activation times.

- The two preselected activation times should differ by at least 31 minutes.◀
- 5. Move the controller to the left or right to select "Time 1" or "Time 2"
- 6. Select the time and press the controller. The first time setting is highlighted
- 7. Turn the controller to make the adjustment
- 8. Press the controller to accept the setting. The next adjustment is highlighted
- 9. Make the remaining adjustments. After the last adjustment, the time is stored.

Activating the timer

1. Turn the ignition key to position 1
- Control Center, for principle details, refer to page 17:
2. Open "Climate"
3. Select "Independent ventilation" and press the controller
4. Select "Activation time" and press the controller

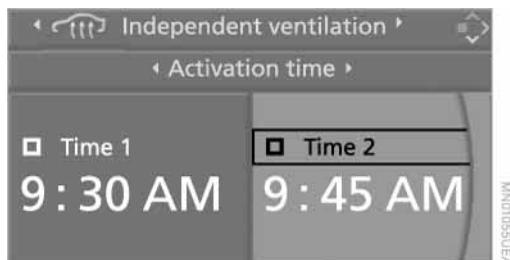

5. Move the controller to the left or right to select "Time 1" or "Time 2" and press the controller.

Practical interior accessories

Integrated universal remote control*

The concept

The integrated universal remote control replaces up to three different hand-held transmitters for various items of radio-controlled equipment such as door openers and house alarm systems. The integrated universal remote control registers and stores signals from the original hand-held transmitters.

The signal of an original hand-held transmitter can be programmed on one of the three memory buttons **1**. Following that, each of the devices can be actuated with the appropriately programmed memory button **1**. The indicator lamp **2** flashes to confirm transmission of the signal.

If the vehicle is sold, the memory of the buttons **1** should be cleared, refer to page 92.

⚠ To prevent possible damage or injury, before programming or using the integrated universal remote control, always inspect the immediate area to make certain that no people, animals or objects are within the travel range of the device. Also, comply with the safety precautions of the original hand-held transmitter. ◀

Checking the compatibility

 If you see this symbol on the packaging or in the manual supplied with the original hand-held transmitter, it is safe to assume that it is compatible with the integrated universal remote control.

 If you have additional questions, please consult your BMW center or call 1-800-355-3515.


You can also visit these websites:

www.bmwusa.com or

www.homelink.com.

HomeLink is a registered trademark owned by Johnson Controls, Inc. ◀

Programming

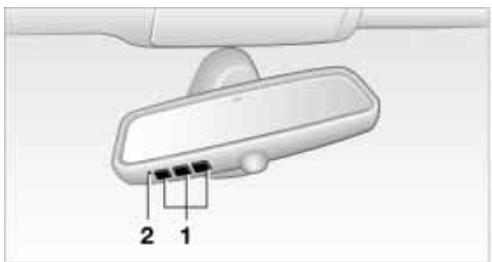

1 Memory buttons

2 Indicator lamp

Fixed-code hand-held transmitter

- Turn the ignition key to position 2
- When using for the first time: press both outer buttons **1** for approx. 20 seconds, maintaining pressure until the indicator lamp **2** starts to flash. The three memory buttons **1** are cleared
- Hold the original hand-held transmitter at a distance of approx. 2 in/5 cm to 8 in/20 cm to the memory buttons **1**
 -  The required distance between the hand-held transmitter and the memory buttons **1** depends on the relevant system of the original hand-held transmitter used. ◀
- Simultaneously press the transmit button on the original hand-held transmitter and the desired memory button **1** on the integrated universal remote control. Initially, the indicator lamp **2** flashes slowly. Release both buttons as soon as the indicator lamp **2** flashes rapidly. If the indicator lamp **2** does not flash rapidly after approx. 15 seconds, change the distance
- To program other original hand-held transmitters, repeat steps 3 and 4.

The corresponding memory button **1** is now programmed with the signal of the original hand-held transmitter.

The equipment can be used as of ignition key position 2.

-  If the device cannot be operated after repeated programming, check whether the original hand-held transmitter uses an alternating-code system. Here, either read the instructions for the original hand-held transmitter or hold down the programmed memory button **1** of the integrated universal remote control. If the indicator lamp **2** on the integrated universal remote control flashes rapidly for a short time then lights up for approx. 2 seconds, this indicates that the original hand-held transmitter uses an alternating-code system. In the case of an alternating-code system, program the memory buttons **1** as described at Alternating-code hand-held transmitters.◀

Alternating-code hand-held transmitters

To program the integrated universal remote control, consult the operating instructions for the equipment to be set. You will find information there on the possibilities for synchronization.

When programming hand-held transmitters that employ an alternating code, please observe the following supplementary instructions:

-  Programming will be easier with the aid of a second person.◀
- 1. Park your vehicle within the range of the remote-controlled equipment
- 2. Program the integrated universal remote control as described above at Fixed-code hand-held transmitters
- 3. Locate the button at the receiver of the equipment to be set, e.g. on the drive
- 4. Press the button on the receiver of the equipment to be set. After step 4, you have approx. 30 seconds for step 5
- 5. Press the programmed memory button **1** of the integrated universal remote control three times.

The corresponding memory button **1** is now programmed with the signal of the original hand-held transmitter.

-  If you have any additional questions, please contact your BMW center.◀


Clearing the memory buttons

Press both outer buttons **1** of the integrated universal remote control for approx. 20 seconds, maintaining pressure until the indicator lamp **2** starts to flash. All three memory buttons are cleared

The memory of individual memory buttons **1** cannot be cleared.

Glove compartment

Opening

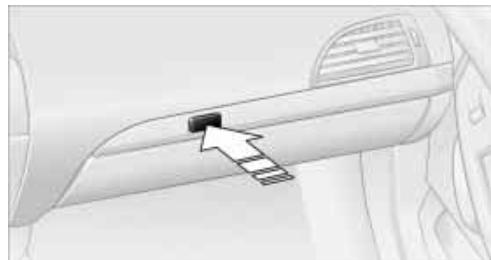

Press button. The glove compartment opens automatically and the lamps come on.

Closing

Fold the cover up.

-  To prevent injury in the event of an accident, close the glove box immediately after use.◀


Rechargeable flashlight

The flashlight is located on the left side of the glove compartment.

It features integral overload protection, so it can be left in its holder continuously.

-  Be sure that the flashlight is switched off when it is inserted into its holder. Failure to comply with this precaution could lead to overcharging and damage.◀

Center armrest

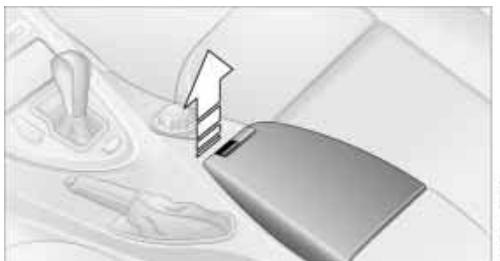

A storage compartment is located in the armrest between the front seats. This compartment is integrated in the central-locking system and can also be locked separately using the hotel function, refer to page 31.

To open the cover:

Pull the left button. The cover opens and can be folded upwards.

Depending on the version, the storage compartment can contain a telephone cradle*.

Height adjustment

The center armrest can be set in 2 stages.




To raise: pull the right button.

To lower: pull the right button.

Storage compartments

Storage compartment in center console between the front seats

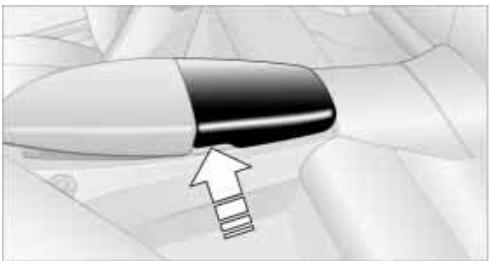

To open, raise the cover at the left or right edge. The compartment contains the beverage holder and the lock for the hotel function, refer to page 31.

Other compartments and nets


Other compartments are in the doors, including a coin tray, as well as in the front center console*.

Ticket pockets are located in the sun visors.

Storage nets are located on the backrests of the front seats and in the passenger footwell*.

Another storage option is located in the luggage compartment in the right side panel. If you wish, this is also suitable for storing the onboard documentation.

Clothes hooks

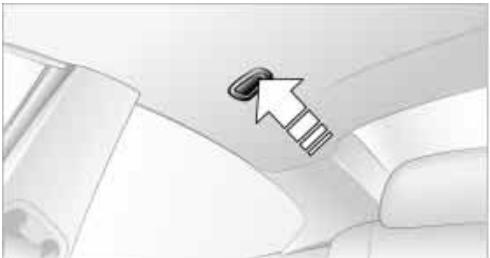

To fold down, press at the top edge.

⚠ When suspending clothing from the hooks, ensure that it will not obstruct the driver's vision. Do not hang heavy objects on the hooks. If you do so, they

could cause personal injury to occupants during braking or evasive maneuvers.◀

Beverage holders



The beverage holder can be clipped to the side of the center console in the compartment and can be stowed in the rear center console where it can still be used.

Another beverage holder is located in the compartment of the rear center console.

⚠ Do not place containers made of glass in the beverage holders. This would lead to an increased risk of injury in the event of an accident.◀

Ashtray, front

Opening

Press the cover.

Emptying



Press the edge of the opened cover: the ashtray rises for removal.

On vehicles with the non-smoking package, the insert is removed in the same way.

Cigarette lighter, front



In ignition key position 2, press in the lighter.

The lighter can be removed as soon as it jumps back out.

⚠ Hold or touch the hot cigarette lighter by the knob only. Holding or touching it in other areas could result in burns. Always remove the ignition key when you leave the vehicle so that, e.g., children are unable to use the lighter and burn themselves.◀

Lighter socket

The socket can be used to plug in hand flashlights, car vacuum cleaners, etc., with power ratings of up to approx. 200 W at 12 V. Avoid damaging the socket due to inserting plugs of different shapes or sizes.

Socket

In front passenger footwell




Access to the socket:
Fold the cover upwards.

Ski bag


Designed for safe, convenient transport of up to 2 pairs of standard skis or one snowboard.

The ski bags themselves plus the additional capacity provided by the luggage compartment make it possible to transport skis with a length of up to 6.9 ft/2.10 m. When skis of 6.9 ft/2.10 m in length are loaded the ski bag will tend to contract, reducing its overall capacity.

Loading

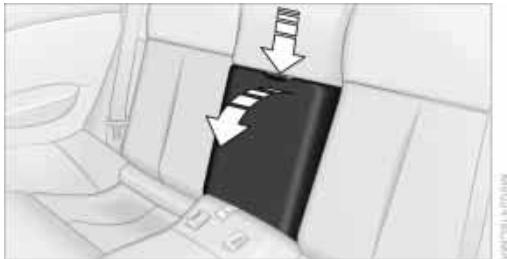

1. Press the button downwards and pull the filler element forwards
2. Extend the ski bag between the front seats. The zipper allows more convenient access to stored objects and can also be left open to allow the ski bag to dry

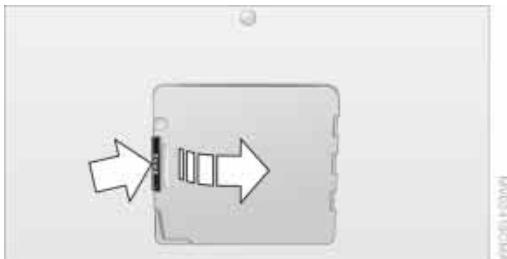

3. Press the button in the luggage compartment
4. Use the magnetic holder to secure the loading flap to the rear panel.

To store the ski bag, perform the above steps in reverse order.

Ensure that the skis are clean before loading them into the bag. Take care to avoid damage from sharp edges.◀

Securing the load

Secure the bag's contents by tightening down the strap at the buckle.

Secure the ski bag in this way. If you fail to do so, it could move around and endanger occupants during braking or evasive maneuvers.◀

To refit the filler element, insert the two steps in the strip and press back the filler element. Make sure that you do not damage the rear seat upholstery.◀



Driving tips

This section is designed to provide you with extra support by supplying information useful in dealing with specific driving and operating conditions.

Things to remember when driving

Break-in procedures

To ensure that your vehicle continues to provide optimized economy of operation throughout an extended service life, we request that you devote careful attention to the following section.

Engine and differential

Up to 1,200 miles/2,000 km:

You should attempt to vary both vehicle and engine speeds. Until the break-in period has been completed you should also refrain from exceeding an engine speed of 4500 rpm or a driving speed of 100 mph/160 km/h.

Always obey all official speed limits.

Avoid full-throttle operation and use of the transmission's kickdown mode during these initial miles.

Once you have driven 1,200 miles/2,000 km, the engine and vehicle speeds can be gradually increased.

You should also comply with these break-in procedures should the engine or differential need to be replaced at a later point.

SMG Sequential manual transmission

Do not use the acceleration assistant during the break-in period.

Tires

Due to technical factors associated with their manufacture, tires do not achieve their full traction potential until after an initial break-in period. Therefore, drive reservedly during the first 200 miles/300 km.

Brake system

Brakes require an initial break-in period of approx. 300 miles/500 km to achieve optimized contact and wear patterns between brake pads and rotors.

Clutch

The function of the clutch is only at its optimized level after a distance driven of approx. 300 miles/500 km. During this break-in period, engage the clutch gently.

General driving notes

High temperatures



Extreme temperatures occur at the catalytic converter on this and every catalyst-equipped vehicle. Do not remove the heat shields installed adjacent to various sections of the exhaust system, and never apply undercoating to them. When driving, standing at idle and while parking take care to avoid possible contact between the hot exhaust system and any highly flammable materials such as hay, leaves, grass, etc. Such contact could lead to a fire, and with it the risk of serious property damage as well as personal injury. ◀

Parking the vehicle

Condensation forms in the air conditioner system during operation, and then exits under the vehicle. Traces of condensed water under the vehicle are thus normal.

Before driving into the car wash

Fold in the exterior mirrors, refer to page 40, as otherwise they could be damaged due to the width of the vehicle.

Hydroplaning



When driving on wet or slushy roads, reduce road speed. If you do not, a wedge of water can form between tires and road surface. This phenomenon is referred to as hydroplaning, and is characterized by a partial or complete loss of contact between the tires and the road surface, ultimately undermining your ability to steer and brake the vehicle. ◀

The risk of hydroplaning increases as the tread depth of the tires decreases, refer also to Tire tread on page 158.

Driving through water

 Do not drive through water on the road if it is deeper than 1 ft/30 cm, and then only at walking speed at the most. Otherwise, the vehicle's engine, the electrical systems and the transmission may be damaged.◀

Brakes

Your BMW is equipped with ABS as standard. The best way to achieve optimized response from the ABS is to apply maximum pressure to the brake pedal in situations where this is required: emergency stops. Since the vehicle maintains steering responsiveness, you can nevertheless avoid possible obstacles with a minimum of steering effort.

Pulsation at the brake pedal combines with sounds from the hydraulic circuits to indicate to the driver that ABS is in its active mode.

 Do not drive with your foot resting on the brake pedal. Even light but consistent pedal pressure can lead to high temperatures, brake wear and possibly even brake failure.◀

Driving in wet conditions

While driving in wet conditions and in heavy rain, it is a good idea to apply light pressure to the brake pedal every few miles. Monitor traffic conditions to ensure that this maneuver does not endanger other road users. The heat generated in this process helps dry the pads and rotors to ensure that full braking efficiency will then be available when you need it.

Hills

You can retain full and unimpaired braking efficiency by downshifting to a gear in which only minimal brake applications are needed when descending long or steep downhill stretches.

You can further enhance the engine's braking effect by selecting a lower gear in the automatic transmission's manual mode, downshifting as far as first gear on extremely steep stretches, refer to pages 47 and 52. This strategy helps you avoid placing excessive loads on the brake system.

 Never drive with the clutch pressed or allow the vehicle to coast with the transmission in Neutral – or with the engine switched off – there is no engine braking when the transmission is in Neutral, and no power assist for brakes and steering when the engine is not running. Never allow floor mats, carpets or any other objects to protrude into the area around the accelerator and brake pedals and obstruct their movement.◀

Corrosion on the brake rotors

When the vehicle is driven only occasionally, during extended periods when the vehicle is not used at all, and in operating conditions where brake applications are less frequent, there is an increased tendency for corrosion to form on rotors, while contaminants accumulate on the brake pads. This occurs because the minimum pressure which must be exerted by the pads during brake applications to clean the rotors is not reached.

Should corrosion form on the brake rotors, the brakes will tend to respond with a pulsating effect that even extended application will fail to cure.

Brake pads



The brake pad wear warning lamp lights up and a message appears in the Check Control. Please note any supplementary information that appears there.



Warning lamp for Canadian models.

The brake pads have reached their minimum pad thickness. Have them replaced at your BMW center as soon as possible.

! For your own safety: use only brake pads that BMW has released for your particular vehicle model. As BMW cannot assess the suitability of other brake pads for use on your vehicle, we are unable to assume continued responsibility for the vehicle's operating safety if non-approved pads are installed.◀

Portable phone in the vehicle

BMW recommends using mobile communication devices, e.g. portable phones, in the interior of the vehicle with a suitable external antenna. Otherwise, the vehicle electronics and mobile communication device can influence one another.

Loading

! To avoid loading the tires beyond their approved carrying capacity, never overload the vehicle. Overloading can lead to overheating and increases the rate at which damage develops inside the tires. The ultimate result can assume the form of a sudden air loss.◀

Determining loading limit




1. Locate the following statement on your vehicle's placard*:


! The combined weight of occupants and cargo should never exceed XXX lbs. or YYY kg, as otherwise the vehicle may be damaged and unstable driving conditions may result.◀
2. Determine the combined weight of the driver and passengers that will be riding in your vehicle

3. Subtract the combined weight of the driver and passengers from XXX lbs. or YYY kg
4. The resulting figure equals the available amount of cargo and luggage load capacity.
For example, if the XXX amount equals 1,400 lbs./635 kg and there will be five 150 lbs./70 kg passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs./295 kg:
$$1,400 \text{ lbs.}/635 \text{ kg} \text{ minus } 750 \text{ lbs.}/340 \text{ kg} = 650 \text{ lbs.}/295 \text{ kg}$$
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4
6. If your vehicle will be towing a trailer, part of the load from your trailer will be transferred to your vehicle. Consult the manual for transporting a trailer to determine how this may reduce the available cargo and luggage load capacity of your vehicle.

Load

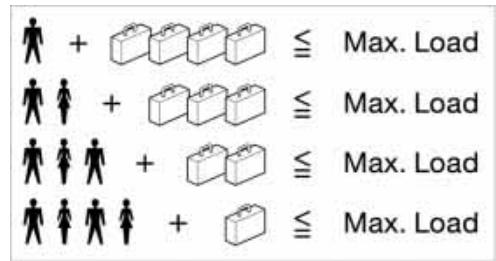

Stowing cargo

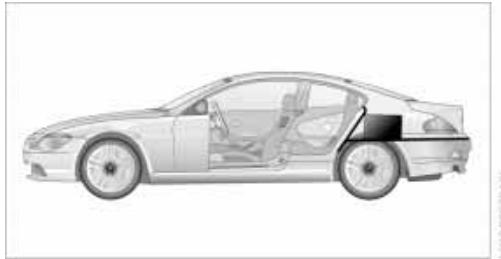

- ▷ Load heavy cargo as far forward and as low as possible, placing it directly behind the bulkhead behind the rear seats
- ▷ Cover sharp edges and corners.

Securing cargo



- ▷ Use the luggage net* or securing straps to hold down small and lightweight luggage and cargo
- ▷ Heavy-duty cargo straps* for securing larger and heavier objects are available at your BMW center. The lashing points indicated are used to secure these heavy-duty cargo straps. Two more lashing eyes are located on the backward inner wall of the luggage compartment
- ▷ Please observe the special instructions supplied with the heavy-duty cargo straps.

! Always position and secure the load correctly. If you do not, it can even endanger the passengers during braking or evasive maneuvers.

Never exceed either the approved gross vehicle weight or either of the approved axle loads, refer to page 182, as excessive

loads can pose a safety hazard, and may also place you in violation of freeway safety laws.

You should never transport heavy or hard objects unsecured in the passenger compartment, as they could fly around and even pose a safety hazard to the vehicle's occupants during abrupt braking or evasive maneuvers. ▲

Floor cover

If required, you can use the floor cover e.g. to transport dirty or soiled objects. The rubberized side is washable and has an anti-slip effect.



Navigation

This section contains various examples that illustrate how the navigation system provides you with reliable guidance to your destination.

Starting navigation system*

Your navigation system can use satellites to ascertain the precise position of your vehicle and guide you reliably to any destination you enter.

Navigation CD/DVD

In your navigation computer, you can use special navigation CDs and DVDs.

To ensure that your vehicle's navigation system has access to the latest highway network information, always load the most recent CD/DVD version.

Navigation CDs/DVDs are available at your BMW center.

Inserting the navigation CD/DVD



1. Insert the navigation CD/DVD with the labeled side up
2. Allow eight 8 seconds for the system to scan the data from the CD/DVD.

Removing the navigation CD/DVD

In the center console:

1. Press the button



The CD/DVD is ejected from the navigation computer

2. Remove the CD/DVD.

Opening the navigation



Enter data only when the vehicle is stationary, and always obey the traffic regulations and road signs in the event of any contradiction between traffic and road conditions and the instructions issued by the navigation system. If you do not observe this precaution, you may be in violation of the law, and can endanger vehicle occupants and other road users.◀


Control Center, for principle details, refer to page 17:

MENU

1. Open the start menu by pressing the button



2. Move the controller to the right to open "Navigation"

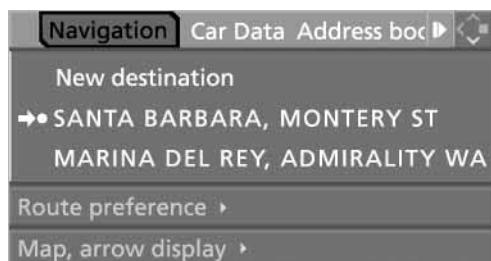

3. Select "Navigation" and press the controller.

Display in assistance window

You can have the route or current position displayed in the assistance window in such a way that it remains visible even if you change to another menu.

1. Move the controller to the right to change to the assistance window and press the controller




2. Select the desired view of the route and press the controller:
 - ▷ "Map, facing north"
 - ▷ "Map, dir. of travel"
 - ▷ "Map, arrow display"
 - ▷ "Current position".

The contents of the assistance window is continually updated as you drive.


Displaying the position

Control Center, for principle details, refer to page 17:

1. Select "Navigation" and press the controller

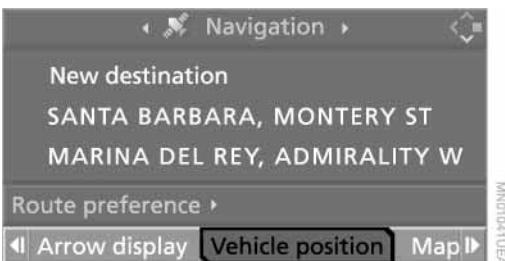

2. Select "Vehicle position" and press the controller.

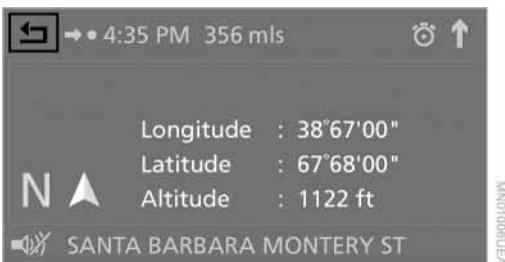

You can call up the current position of your BMW. If the navigation system is unable to identify a town or city, your current map coordinates will appear.

To close the menu:
Select and press the controller.

Destination entry

In entering your destination you can select from among the following options:

- ▷ Manual entry of destination, refer to below
- ▷ Select destination via information, refer to page 108
- ▷ Select from among recent destinations, refer to page 109
- ▷ Select destination from address book, refer to page 110.

After selecting your destination you can proceed to start the destination guidance, refer to page 113.

 Enter data only when the vehicle is stationary, and always obey the traffic regulations and road signs in the event of any contradiction between traffic and road conditions and the instructions issued by the navigation system. If you do not observe this precaution, you may be in violation of the law, and can endanger vehicle occupants and other road users. ◀

Entering a destination manually

The system supports the wordmatch principle to make it easier for you to enter the names of streets or towns. This enables input of different spellings and supplements your input automatically so that stored names can be adopted as destinations as quickly as possible, refer to page 112.

Control Center, for principle details, refer to page 17:

1. Select "Navigation" and press the controller



2. Select "New destination" and press the controller
- ▷ Select "Enter address" and press the controller.

Note the following special features:

- ▷ If you do not enter a street, the system will guide you to the downtown area of a town or city
- ▷ Depending on the data stored on your navigation CD/DVD, you can also enter the house or building number on some streets
- ▷ You can skip the entry of country and locality if the current entries are being retained for your new destination
- ▷ Destination entry using the Control Center differs from destination entry using the voice command system.

Select the country of the destination

When the name of a country appears in white letters on the Control Display, this indicates that data for more than one country is stored on the map CD/DVD.



1. Select "Country" or the displayed country and press the controller.
A list of available countries appears in the display
2. Select the country of destination and press the controller.

Entering city of destination or zip code

In order to be able to start the destination guidance, at least the city of destination or its zip code must be entered.

1. Select "City" or the displayed city and press the controller



2. To enter the zip code:
Select the individual digits and press the controller.
The corresponding city of destination is supplemented.

To enter the city of destination:
Select the first letter and press the controller.
A list of all towns/cities starting with this letter appears on the Control Display

3. If necessary, enter other letters.

The list gradually grows smaller each time you enter a new letter.

To enter blanks:

Select _ and press the controller.


To delete the last letter:

Select ⬅ and press the controller

4. Select the city name from the list and press the controller.

Entering street, house number and intersection

1. Select "Street" or the displayed street and press the controller

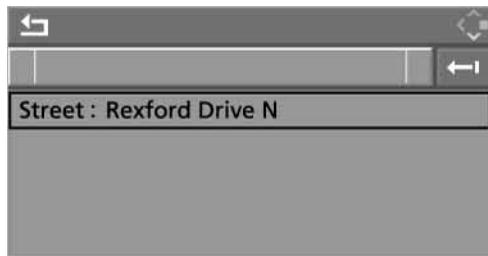

2. For instructions on entry, refer to Entering city of destination.

After the street you can also enter the intersection or the house number.

The procedure for entering intersections is basically the same as that used for streets.

Enter house number, e.g. "194":

1. Select "House number" and press the controller
2. To enter "194":
Select the individual digits and press the controller.

To delete the last digit or last letter:
Select ⬅ and press the controller

3. Select the house number shown on the Control Display and press the controller.

If all of the house numbers on a street are not stored on the navigation CD/DVD, a selection list with number ranges is displayed. The option for entering house numbers will not be offered if no house numbers are stored for the selected street on your navigation CD/DVD.

If destination guidance is not to be started immediately, the destination can be accepted as one of the last destinations, refer to [109](#):
Select "Add to destination list" and press the controller.

Starting destination guidance with manual destination entry


Select "Start guidance" and press the controller.
Destination guidance starts immediately.

Map-guided destination selection

Assume that you only know the general position of your destination's street or locality. Then the system offers you maps in which you can use the target cursor to limit the destination and then adopt it into the destination guidance.

Control Center, for principle details, refer to page [17](#):

1. Select "Navigation" and press the controller
2. Select "New destination" and press the controller
3. Select "Input map" and press the controller.

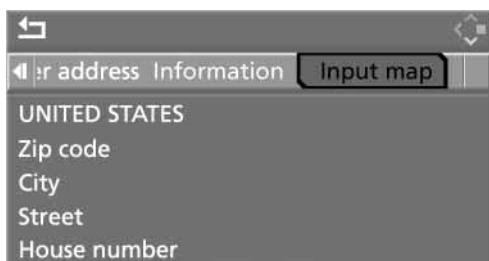

A map section is displayed on the Control Display around the first destination from the destination list, even if the destination guidance is switched off


4. Move the controller in the desired direction to localize your destination.
The controller can be moved to the left,

right, forwards, backwards and also diagonally.

To adjust the scale:
Turn the controller.

The destination is detected for scales under 0.5 miles/1 km

5. Press the controller to display the selected city of destination and a list of additional menu items:

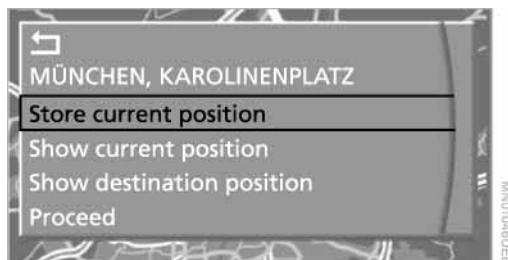

6. Select the desired menu item and press the controller:

- ▷ closes "Input map"
- ▷ "Start route guidance" switches the destination guidance on
- ▷ "Show current position" places the location back in the center of the map
- ▷ "Show destination position" places a selected city of destination in the center of the map
- ▷ "Proceed" switches back to "Input map".


Selecting destination using information

You can obtain a display of selected destinations for certain cities or countries and adopt them into the destination guidance, e.g. hotels, sights or hospitals.

Control Center, for principle details, refer to page [17](#):

1. Select "Navigation" and press the controller
2. Select "New destination" and press the controller

3. Select "Information" and press the controller

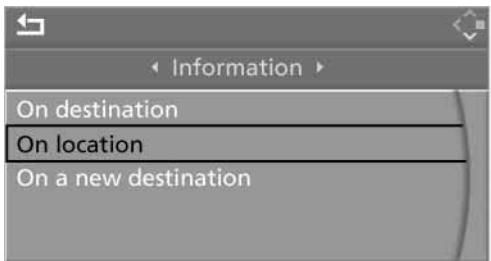

4. Select the city or country and press the controller:

- ▷ "On destination"
 - ▷ "On location"
 - ▷ "On a new destination"
- The display for entering a city appears on the Control Display. Select the desired city and press the controller

5. Select the desired type of destination, such as "Hotels and restaurants" and press the controller.

The Control Display shows

- ▷ an alphabetical list of all entries in the selected destination category
- ▷ for the location, a list sorted by distance with a maximum of ten destinations

6. Select a destination and press the controller

7. Select a menu item:

- ▷ To adopt the address into the destination list:
Select "Select as destination" and press the controller.
The destination guidance is switched on
- ▷ To set up a telephone connection:
Select "Call" and press the controller.

To close the menu:

Select and press the controller.

Recent destinations


The system stores the last 20 destinations entered.

Control Center, for principle details, refer to page 17:



indicates the current destination.

1. Select a destination and press the controller
2. The selected destination can be edited:

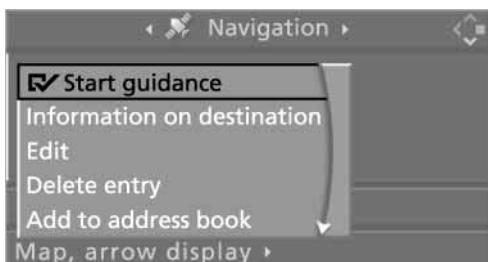

- ▷ To switch on the destination guidance:
Select "Start guidance" and press the controller. is displayed with the destination guidance switched on

- ▷ To display information on the destination:
Select "Information on destination" and press the controller

- ▷ To edit the entry:
Select "Edit" and press the controller, for operation refer to Entering city of destination or zip code, page 107


- ▷ To delete the entry:
Select "Delete entry" and press the controller

- ▷ To delete all entries:
Select "Delete list" and press the controller; the destination guidance is switched off
- ▷ To store the entry:
Select "Add to address book" and press the controller.

Address book

Opening the address book

Control Center, for principle details, refer to page 17:

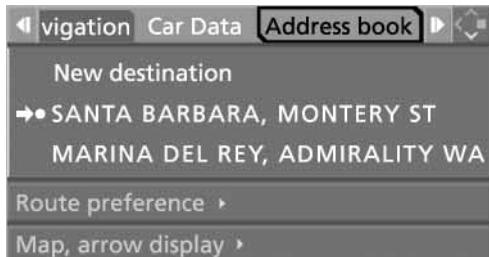


Select "Address book" and press the controller.

Storing destinations in the address book

To make it even easier to enter frequently required destinations, the system lets you store approx. 100 destinations in the address book.

Control Center, for principle details, refer to page 17:

1. Enter the destination manually, refer to page 106, and press the controller

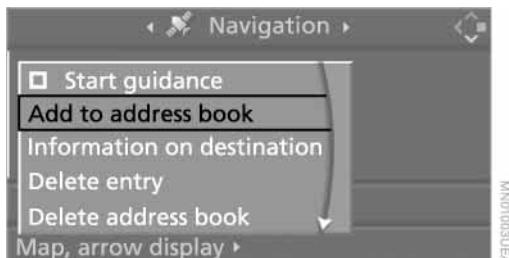

2. Select "Add to address book" and press the controller.


The entry is assigned to a name that can be changed. For operation, refer to Entering a destination manually, page 106

3. Select "Store address" and press the controller.
The entry is stored in the address book.

Selecting destinations from the address book

Control Center, for principle details, refer to page 17:

1. Select "Address book" and press the controller.

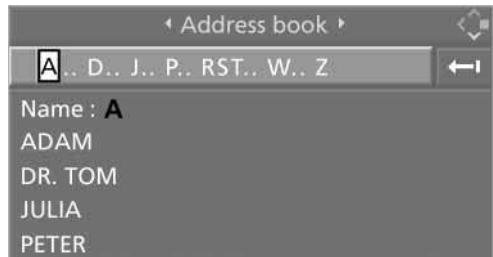

The stored entries are listed on the Control Display

2. Select the entry and press the controller.

To start destination guidance:
Select "Start guidance" and press the controller.

Editing destinations from the address book

You can change the name of an entry.

Control Center, for principle details, refer to page 17:

1. Select "Address book" and press the controller
2. Select the entry and press the controller
3. Select "Edit address" and press the controller.

The given name can be changed. For operation, refer to Entering a destination manually, page 106.

Deleting individual destinations from the address book

Control Center, for principle details, refer to page 17:

1. Select "Address book" and press the controller
2. Select the entry and press the controller
3. Select "Delete address" and press the controller.

Deleting all destinations from the address book

Control Center, for principle details, refer to page 17:

1. Open the  menu
2. Select "Vehicle settings" and press the controller
3. Select "Delete data" and press the controller
4. Select "Delete address book" and press the controller
5. Select "Yes" and press the controller.


Route selection

You can specify your route more precisely by choosing certain route criteria.


Changing route criteria

Control Center, for principle details, refer to page 17:

1. Select "Navigation" and press the controller
2. Select "Route preference" and press the controller.

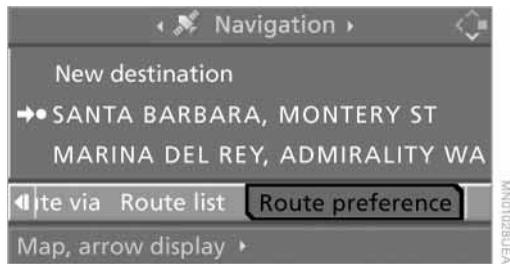

The various possibilities are listed on the Control Display

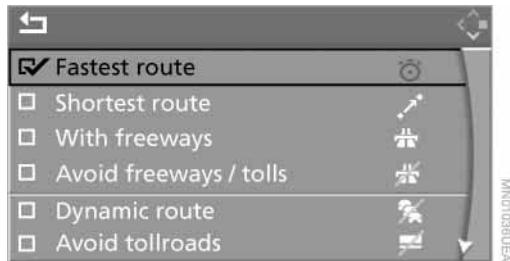

3. Select the route criteria and press the controller:
 - ▷ "Fastest route"
Shortest time using combination of smallest possible distance and sections where fast driving is possible
 - ▷ "Shortest route"
Shortest distance without consideration of the time
 - ▷ "Avoid freeways / tolls"
Freeways are avoided where possible
 - ▷ "With freeways"
Freeways and major traffic arteries are given priority
4. If necessary, select an additional route criterion and press the controller:
 - ▷ "Avoid tollroads"
Tollroads are avoided where possible
 - ▷ "Avoid ferries"
Ferries are avoided where possible
 - ▷ "Dynamic route"
The route is planned around or through traffic obstructions.

 displays the selected route criteria.

To exit from the list:

Select  and press the controller.

The navigation system relies on specific rules to determine your route. These vary according to the different kinds of roads stored on the map CD/DVD. As a result, the routes recommended by the navigation system may not always be the same ones that you would choose based on personal experience.

You can change the selected route as often as you like, both when entering your destination and at any time while the system is guiding you to it – the system revises its travel recommendations accordingly.

Wordmatch principle

The system supports the wordmatch principle to make it easier for you to enter the names of streets or towns. The system runs ongoing checks, comparing your destination entries with the data stored on the navigation CD/DVD as the basis for instant response. The user benefits include:

- ▷ Names of specific locations can also vary from the official versions provided that the spelling of the entry corresponds to a standard form used in another country.

Example:

Instead of 'München', you can also enter the English spelling 'Munich' or the Italian spelling 'Monaco'

- ▷ When you are entering the names of cities and streets the system will complete them automatically as soon as enough letters are available to ensure unambiguous identification
- ▷ The system only accepts name entries beginning with letters that are stored on the navigation CD/DVD. The system will not accept nonexistent names and addresses.

Destination guidance


Starting the destination guidance

Control Center, for principle details, refer to page 17:

1. Select "Navigation" and press the controller




2. Select a destination and press the controller

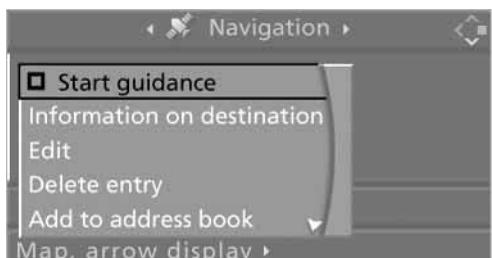

3. Select "Start guidance" and press the controller. is displayed with the destination guidance switched on.

indicates the current destination.

After the route has been calculated, destination guidance is indicated by arrows or a route map on the Control Display.

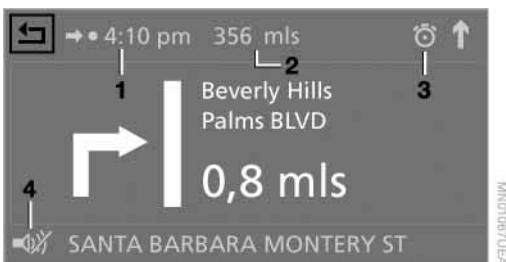

- 1 Time of arrival
- 2 Distance to destination
- 3 Route criteria
- 4 Switch voice instructions on/off

During destination guidance, you can operate other equipment using the Control Center at any time. You are informed of a required change in direction by means of spoken announcements in good time prior to every intersection.

To close the menu:
Select and press the controller.


Displaying route

You have the option of displaying various views of the route.

Switching to directional arrow mode

To change to directional arrow mode:

1. Select "Navigation" and press the controller

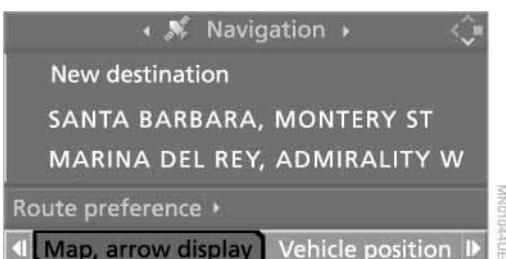


2. Select "Map, arrow display" and press the controller.

Selecting display of route map

You can also select a map showing your travel route while the system is guiding you to your destination.

1. Select "Navigation" and press the controller

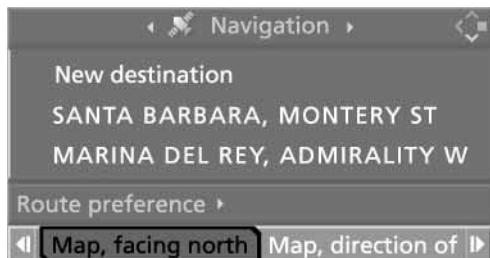

2. Select "Map, facing north" and press the controller.

Changing scale

Turn the controller.

The map scale appears on the Control Display.

Altering display direction

At scales of less than 300 miles/500 km, you enjoy the option of deciding whether to orient the map to north or toward your current direction of travel. From 300 miles/500 km, the map always points toward north.


Select "Map, facing north" or "Map, direction of travel" and press the controller.

Displaying towns and streets of the route

You can have streets and towns on your route displayed whenever the destination guidance is active.

The distances remaining to be traveled on each individual road, directional arrows and traffic congestion reports are also displayed.

Control Center, for principle details, refer to page 17:

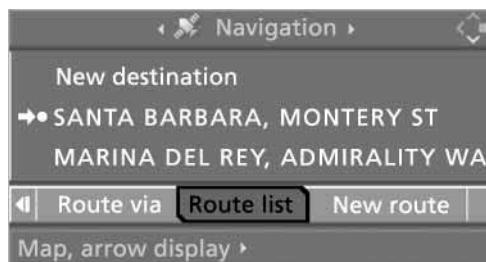

Select "Route list" and press the controller. If the system has not yet completely defined the travel route, "..." will appear in the list.

To close the menu:

Select and press the controller.


Destination guidance through voice instructions

Switching voice instructions on/off

The setting is made in dependence on a specific key.

Control Center, for principle details, refer to page 17:

1. Open the menu
2. Select "Display settings" and press the controller
3. Select "Languages" and press the controller

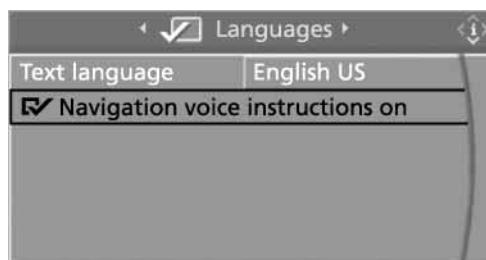

4. Select "Navigation voice instructions on" and press the controller. With the voice instructions switched on, is displayed

or press



or



on the steering wheel for a longer period.

Programing button functions, refer to page 42.

Repeating an instruction

To repeat the last voice instruction:



or press



on the steering wheel briefly.

Programing button functions, refer to page 42.

Suppressing voice instructions

To prevent the navigation system from interrupting other audio sources, such as a news program or traffic bulletin, you can deactivate the voice instructions.

During an instruction, press



or press



on the steering wheel briefly.

Programing button functions, refer to page 42.

Adjusting volume

You can adjust the volume of the voice instructions for each specific key:

1. To repeat the last voice instruction, if required:

Press



or



on the steering wheel briefly




2. Turn the knob during an instruction to select the desired volume.

The navigation system's voice guidance will continue to issue instructions at this volume level, even if the radio is set to minimum volume.

Blocking sections of a route

During destination guidance you can revise the navigation system's route recommendations to avoid particular stretches of road. Enter the number of miles/kilometers that you want to travel before returning to the original route.

Control Center, for principle details, refer to page 17:

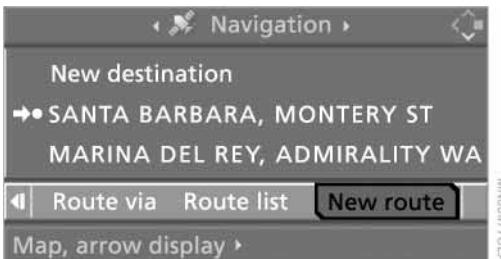

1. Select "New route" and press the controller
2. Turn the controller to enter the desired number of miles/kilometers and press the controller.

To exit from the menu without changing the route:


Select and press the controller

3. "Calculate" is used to recalculate the route.

Traffic information

Opening traffic information

Control Center, for principle details, refer to page 17:

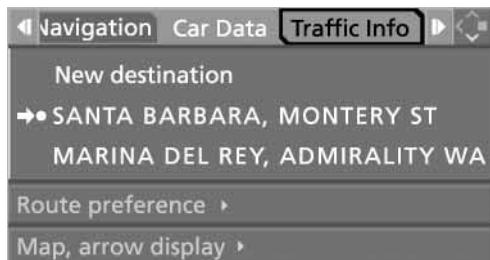

1. Select "Traffic Info" and press the controller.
A list of the current traffic obstructions appears on the Control Display
2. If appropriate, select an entry and press the controller.
Detailed information on the traffic obstruction is listed.

To close the menu:

Select and press the controller.

Bypassing traffic congestion

1. Select "Detour" and press the controller
2. Select "Yes" and press the controller.

The navigation system determines a new route that bypasses the traffic congestion and then returns to the original route.

Terminating/continuing destination guidance

Control Center, for principle details, refer to page 17:



→• indicates the current destination.

1. Select the current destination and press the controller
2. Select "Start guidance" and press the controller. is displayed when the destination guidance is terminated.

The system suspends active destination guidance, including voice instructions, until reactivated.

When you park the vehicle before reaching the entered destination, upon restarting you will see the question "Continue guidance to dest.?". "Yes" switches the destination guidance on again.

This menu item cannot be selected using the voice command system.

What to do if ...

What to do if ...

- ▷ you request the current position of your vehicle, but do not receive a precise display?

The system is unable to receive enough GPS signals at your current position owing to obstructions, your location is not yet available on your navigation CD/DVD, or the system is in the process of calculating your location. As a rule, cell communications GSM/GPS reception is guaranteed under a clear sky

- ▷ the destination guidance does not adopt a destination?

The data of the destination is not stored on the navigation CD/DVD that is loaded. Select a destination that is as close as possible to the original

- ▷ the destination guidance does not adopt an address without the street name?

On the navigation CD/DVD, no downtown area can be determined for the city or town entered. Enter any street, or a destination such as the railway station etc., then start the destination guidance

- ▷ you want to enter a destination for the destination guidance, but it is not possible to select the letters for your desired entry?


The destination data is not recorded on the navigation CD/DVD that is loaded. In this case, the system will not offer you any letters to choose from. Select a destination that is as close as possible to the original

- ▷ the system stops furnishing directions on which way to turn as you approach intersections?

You are driving in an area that has not yet been completely recorded on the navigation CD/DVD. Instead of an arrow indicating a turn, you will see an arrow which indicates the general direction of your planned route. Or you have left the recommended route and the system requires a few seconds to calculate a new recommended route

- ▷ the battery has been disconnected? It will take approx. 15 minutes for the system to resume operation.



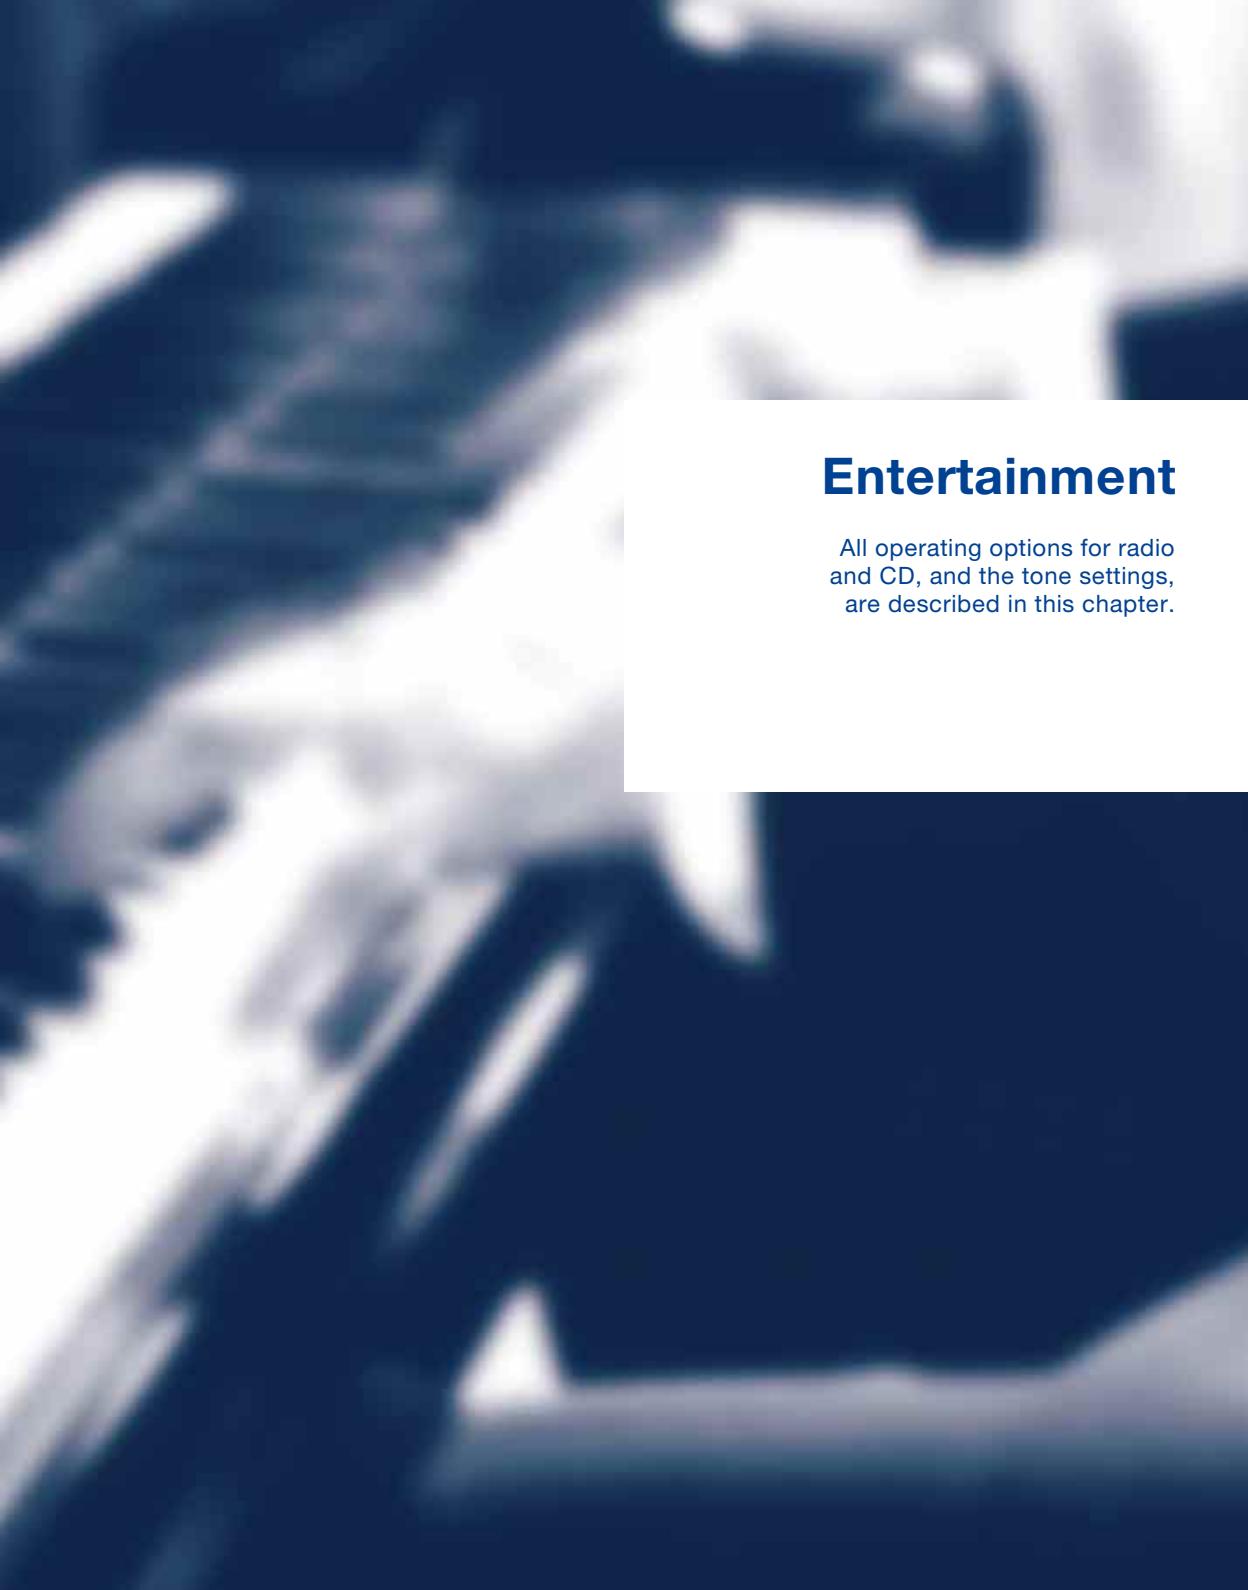

Entertainment

All operating options for radio and CD, and the tone settings, are described in this chapter.

On/off, tone

Depending on the equipment options you have chosen, the following audio sources are available:

- ▷ Radio Business
- ▷ CD player
- ▷ CD changer.

The following section summarizes the common controls and setting options for the audio sources. Thereafter, the individual audio sources are described in detail.

Controls

The audio sources can be operated using:

- ▷ The center console
- ▷ The Control Center
- ▷ Buttons on the steering wheel, refer to page 12.

Operation using the center console

The layout of the buttons can vary depending on your vehicle's equipment.



- 1** To operate audio sources
 - ▷ Press: to switch on/off
The system selects the last audio source used, radio or CD
 - ▷ Turn: adjusting volume
- 2** Drive for audio CD
- 3** Eject CD
- 4** Station scan/track search
 - ▷ Change the station
 - ▷ Select music track for CD.

Operation using the Control Center

Control Center, for principle details, refer to page 17:

MENU

1. Open the start menu by pressing the button



2. Move the controller backwards to open "Entertainment"



- ▷ "FM" and "AM"
Selecting waveband, storing and calling up stations
- ▷ "WB"
Calling up Weather Band station
- ▷ "CD"
Selecting CD player or CD changer
- ▷ "Set"
Updating stations with best reception, storing stations, setting the tone, playing stations or tracks.

Operating temperatures

 The system is configured for operating temperatures of 5 °F / -15 °C to 140 °F / +60 °C. Outside this temperature range, malfunctions can occur.

Care instructions

You can find everything you need to know on this topic by consulting the Caring for your vehicle brochure.

Switching on/off

Press button **1**, refer to page 120.

Adjusting the volume

Adjusting the volume for audio sources

The setting is made depending on a specific key.

Turn button **1** until the desired volume has been reached.

Tone control

You can change the following tone settings in dependence on a specific key:

- ▷ Treble
- ▷ Bass
- ▷ Balance:
Right/left volume balance
- ▷ Fader:
Front-to-rear volume balance
- ▷ Speed volume:
Raises the volume with increasing speed
- ▷ LOGIC7 spatial sound*:
Improvement in spatial acoustics in all frequency ranges

- ▷ Equalizer*:
Setting individual frequency ranges to improve spatial acoustics
- ▷ Reset:
Resets the tone settings to their standard default settings.

Tone adjustment


Control Center, for principle details, refer to page 17:

MENU

1. Open the start menu by pressing the button



2. Open the i menu by pressing the controller

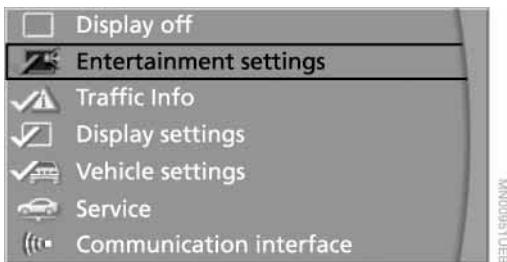

3. Select "Entertainment settings" and press the controller

4. Select "Audio" and press the controller.

The tone settings can also be selected if you have opened "Entertainment": Select "Set" or "Audio" and press the controller.

Treble and bass

1. Select "Treble / Bass" and press the controller



2. Move the controller to the left or right to select "Treble" or "Bass"
3. Turn the controller. The adjustment is applied; the field can be changed.

Balance and fader


1. Select "Balance / Fader" and press the controller



2. Move the controller to the left or right to select "Balance" or "Fader"
3. Turn the controller. The adjustment is applied; the field can be changed.

Speed-dependent volume

1. Select "Speed volume" and press the controller

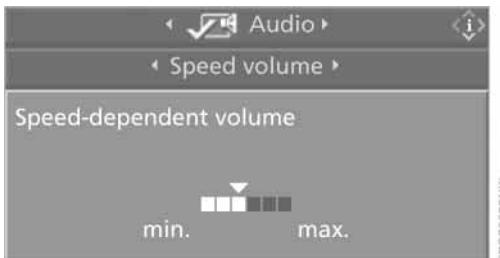

2. Turn the controller to make the adjustment
3. Turn the controller. The adjustment is applied; the field can be changed.

Spatial sound effect Professional LOGIC7*

1. Select "LOGIC7" and press the controller



2. Select "Audio" and press the controller. LOGIC7 spatial sound is switched on.

To switch off LOGIC7 spatial sound:
Select "Off" and press the controller.

LOGIC7 and the LOGIC7 logo are registered trade marks of Lexicon, Inc., a company of the Harman International Group.

Equalizer*

1. Select "Equalizer" and press the controller



2. Move the controller to the left or right to select the desired frequency range
3. Turn the controller. The adjustment is applied; the field can be changed.

Resetting the tone settings

You can reset all tone settings except "Speed volume" to the standard default settings.

1. Open the menu
2. Select "Entertainment settings" and press the controller
3. Select "Audio" and press the controller




4. Select "Reset" and press the controller.

Radio

Your radio provides reception of the FM and AM wavebands.

Listening to the radio

To switch on the radio:

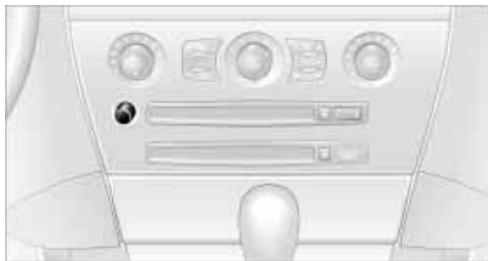

Press the button.

Control Center, for principle details, refer to page 17:

MENU

1. Open the start menu by pressing the button



2. Move the controller backwards to call up "Entertainment"



3. Select "FM" or "AM" and press the controller.
Stations are shown on the Control Display on the basis of various selection criteria, e.g. "Presets"




4. Switch stations by turning the controller.
If no station is displayed, update the stations with the best reception, refer to page 125.

You can choose from the following selection criteria:

- ▷ Autostore:
The six strongest stations, refer to page 125
- ▷ "Presets":
Twelve stations you have stored, refer to page 126.

To switch between the different selection criteria of stations:

- Move the controller forwards to change fields

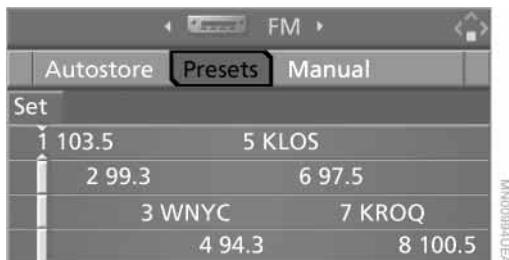

- Choose the selection criterion and press the controller.

Changing stations using buttons in the center console



Press to the desired direction briefly.

The system switched to the next station.

Scanning and selecting stations

The scan search feature automatically plays a brief sample from each station in the selected waveband.

Control Center, for principle details, refer to page 17:

- Select "FM" or "AM" and press the controller
- Press the controller to display a list of additional menu items



- Select "Scan" and press the controller. The scan search starts

- To select a station:

Press the controller again, select "Scan" and press the controller. This cancels the scan search, and the radio remains on the current station.

Buttons in the center console:

- To start scan:



Extended pressure.
The scan search starts.

- To select a station:



Press.

Manual station selection

You look for a certain frequency.

Control Center, for principle details, refer to page 17:

- Select "FM" or "AM" and press the controller
- Move the controller forwards to change fields
- Select "Manual" and press the controller



- Turn the controller until the desired frequency is selected.

Updating the stations with the best reception

If you are on a longer journey and leave the transmission range of the stations originally set, you can update the list of stations with the best reception from the AM or FM waveband.

Control Center, for principle details, refer to page 17:

1. Select "FM" or "AM" and press the controller
2. Move the controller forwards to change fields
3. Select Autostore of the desired waveband and press the controller
4. Press the controller to display a list of additional menu items



5. Select "Autostore" and press the controller.

The list of stations with the best reception is updated; the frequencies of the stations are displayed.

Manual tuning

You can listen to stations that are received in addition to those displayed.

Control Center, for principle details, refer to page 17:

1. Select "FM" or "AM" and press the controller
2. Move the controller forwards to change fields
3. Select "Manual" and press the controller



Buttons in the center console:

4. To start scan:



Maintain pressure on the button for several seconds.

The scan mode begins with the currently selected frequency.

The system plays a brief sample from each radio station.

To stop the station scan at the desired frequency or station:



Press button.

Storing stations

The setting is made depending on a specific key.

Control Center, for principle details, refer to page 17:

1. Select "FM" or "AM" and press the controller
2. Move the controller forwards to change fields
3. Select the selection criterion and press the controller:
 - ▷ "Manual"
 - ▷ Autostore of the waveband
4. Select the desired station
5. Press the controller to display a list of additional menu items



6. Select "Store" and press the controller. "Presets" is displayed

7. Turn the controller until the desired memory location is selected.
The number of the memory location appears beside the name or frequency of the station.
- Press the controller to store the station.



The previous selection criterion is displayed again after a short time.

Radio Data System RDS

The Radio Data System RDS broadcasts additional information in the FM waveband. RDS stations have the following properties:

- ▷ In the case of broadcasting networks that transmit over a number of frequencies, there is an automatic switch to the frequency with the best reception quality
- ▷ If the reception conditions are good, the station names are shown on the Control Display. If the reception is weak or disrupted, it can take some time before the station names appear.

Weather Band*

Weather Radio is a service of the National Oceanic and Atmospheric Administration – NOAA – of the U.S. Department of Commerce. Weather messages are repeated every four to six minutes and are routinely revised every one to three hours, or more frequently if needed. Most of the stations operate 24 hours daily. During severe weather, National Weather Service forecasters can interrupt the routine weather broadcasts and substitute special warning messages. If you have a question concerning NOAA Weather Radio, please contact your nearest National Weather Service Office, or write to National Weather Service – Attn: W/OM11 –, National Oceanic and Atmospheric Administration, 1325 East-West Highway, Silver Spring, MD. 20910.

Calling up Weather Band

Control Center, for principle details, refer to page 17:

1. Select "WB" and press the controller



2. Select the Weather Band station and press the controller.

It can occur that the Weather Band station is not available in some regions.

CD Compact Disc

Listening to CDs



Insert the CD.

Playback starts automatically.

Hold CDs by the edges; do not touch the reflecting CD memory surface.

To start playback when there is already a CD in the drive:

Control Center, for principle details, refer to page 17:

MENU

1. Open the start menu by pressing the button



2. Move the controller backwards to call up "Entertainment"
3. Select "CD" and press the controller
4. On vehicles with a CD changer, select "CD" and press the controller.



To eject the CD:



Press the button in the center console.

The CD/DVD emerges slightly from the drive.

Selecting a track

Buttons in the center console:

Select the direction:



Press the button repeatedly, continuing until you reach the desired track.

The CD will start play at the track selected. The track is displayed on the Control Display.

Control Center, for principle details, refer to page 17:



Select a track by turning the controller.

Repeating a track

Control Center, for principle details, refer to page 17:



1. Select "Set" and press the controller to display a list of additional menu items
2. Select "Repeat" and press the controller.

The selected track on the CD is repeated.

To cancel the repetition:

- ▷ Press the controller, select "Repeat" and press the controller
- ▷ Select another function using the Control Center.

Playing and selecting tracks, scan

The system automatically plays a brief sample from each of the tracks on the CD.

Control Center, for principle details, refer to page 17:

1. Select "Set" and press the controller to display a list of additional menu items
2. Select "Scan" and press the controller
3. To select a track:

Press the controller again, select "Scan" and press the controller.

The Scan function is interrupted and the track continues playing from the point at which it was interrupted.

Random play sequence

The music tracks on the CD are played in a random sequence.

Control Center, for principle details, refer to page 17:

1. Select "Set" and press the controller to display a list of additional menu items
2. Select "Random" and press the controller.

To cancel the random mode:

- ▷ Press the controller, select "Random" and press the controller
- ▷ Select another function using the Control Center.

Fast forward/reverse

Buttons in the center console:

1. Select the direction:



Press and hold the button. The tracks can be heard, but the sound is distorted

2. To interrupt the fast forward/reverse function, release the button.
The CD will start play at the point selected.

The track is displayed on the Control Display, refer to page 19.

Malfunctions

 The BMW CD player is a Class 1 laser product. Do not operate the system if the cover is damaged, otherwise severe eye damage can result.

Always refer repair and maintenance operations to qualified technicians.

With self-recorded CDs, labels applied later can become detached during playback due to the development of heat and cause irreparable damage to the device.◀

 CDs with copy protection devices cannot be played on your CD player or only with certain restrictions. These CDs differ from the CD Audio Standard Red Book, on the basis of which all CD players and changers are designed. In this case, please contact the CD dealer or manufacturer.


You may experience playback problems, such as skips, when using CDs that you have copied at home.

If the display fails to detect a CD that you have loaded in the drive, check to ensure that the CD has been inserted correctly and inspect it for signs of defects.

High levels of humidity inside the system can condense on the laser's scan lens and temporarily prevent it from reading the CD.◀

CD changer*

CD magazine

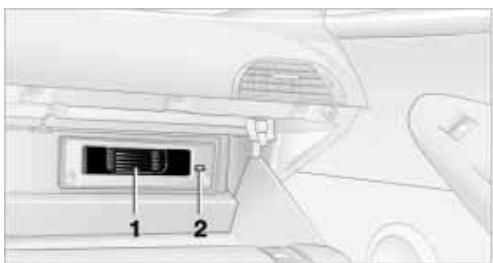

The BMW CD changer for six CDs is installed in the glove compartment.

Removing the CD magazine

To insert or remove CDs from the storage magazine you must first remove it from the CD changer:

1. Press button **2**
2. The CD magazine **1** is ejected and can be removed.

Loading/removing CDs from the CD magazine



When loading or removing CDs, remember to grasp them on the edge, taking care to avoid touching the reflecting CD memory surface.


To load:

Load the CD in a CD slot with the desired number with the label side on top.

To remove:

Pull out the desired drawer, refer to arrow, and remove the corresponding CD.

Inserting the CD magazine

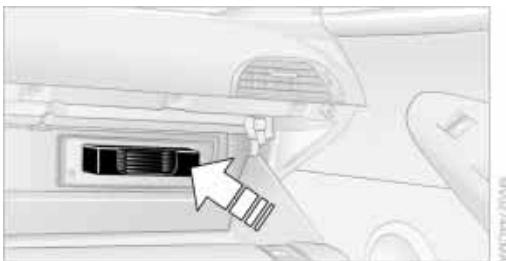

Ensure that the arrow symbol is pointing upwards toward the CD changer and slide the magazine all the way in.

The CD changer automatically reads in the loaded CDs and is then ready for operation.

Listening to CDs

1. Insert the CD magazine

Control Center, for principle details, refer to page [17](#):


MENU

2. Open the start menu by pressing the button



3. Move the controller backwards to call up "Entertainment"

4. Select "CD" and press the controller. The CD magazine's load status is indicated on the Control Display

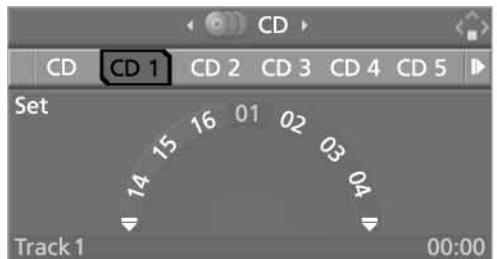

5. Select the CD and press the controller.

The system will continue play at the point on the CD at which play was interrupted. At the end of the last track, the next CD will be selected.

If new CDs have been loaded in the CD magazine, playback starts with the lowest CD, e.g. CD 1, track 1.

Selecting a track

Buttons in the center console:

Select the direction:



Press the button repeatedly, continuing until you reach the desired track on the current CD.

The CD will start play at the track selected. The track is displayed on the Control Display.

Control Center, for principle details, refer to page 17:



Select a track by turning the controller.

Repeating a track

Control Center, for principle details, refer to page 17:



1. Select "Set" and press the controller to display a list of additional menu items
2. Select "Repeat" and press the controller.

The current track on the CD is repeated.

To cancel the repetition:

- ▷ Press the controller, select "Repeat" and press the controller
- ▷ Select another function using the Control Center.

Playing and selecting tracks, scan

The system automatically plays a brief sample from each of the tracks on the current CD.

Control Center, for principle details, refer to page 17:

1. Select "Set" and press the controller to display a list of additional menu items
2. Select "Scan" and press the controller
3. To select a track:
Press the controller again, select "Scan" and press the controller.
The Scan function is interrupted and the track continues playing from the point at which it was interrupted.

Random play sequence

In this mode, the music tracks on the current CD are played in a random sequence. Control Center, for principle details, refer to page 17:

1. Select "Set" and press the controller to display a list of additional menu items
2. Select "Random" and press the controller.

To cancel the random mode:

- ▷ Press the controller, select "Random" and press the controller
- ▷ Select another function using the Control Center.

Fast forward/reverse

Buttons in the center console:

1. Select the direction:



Press and hold the button. The tracks can be heard, but the sound is distorted

2. To interrupt the fast forward/reverse function, release the button.
The system will continue play at the point on the CD at which the button was released.

The track is displayed on the Control Display, refer to page 19.

Malfunctions

 The BMW CD changer is a Class 1 laser product. Do not operate the system if the cover is damaged, otherwise severe eye damage can result.

Always refer repair and maintenance operations to qualified technicians.

With self-recorded CDs, labels applied later can become detached during playback due to the development of heat and cause irreparable damage to the device.◀

 CDs with copy protection devices cannot be played on your CD changer or only with certain restrictions. These CDs differ from the CD Audio Standard Red Book, on the basis of which all CD players and changers are designed. In this case, please contact the CD dealer or manufacturer.

You may experience playback problems, such as skips, when using CDs that you have copied at home.

If the display fails to detect a CD that you have loaded in the magazine, check to ensure that the CD has been inserted correctly and inspect it for signs of defects. High levels of humidity inside the system can condense on the laser's scan lens and temporarily prevent it from reading the CD.◀



Communications

This chapter summarizes how you operate your BMW portable phone via the Control Center or voice control and how you use BMW Assist or TeleService.

Telephoning

Safety notice

For your own safety

Your car phone makes life more convenient in many ways, and can even save lives in an emergency. While you should consult your portable phone's separate Owner's Manual for a detailed description of safety precautions and information, we request that you direct your particular attention to the following:

Adjustments

 To avoid posing a danger to yourself and other road users, never adjust the system settings unless your vehicle is completely stationary.◀

Using the phone in your vehicle

 Using a portable phone to make and receive calls while driving is now illegal in virtually every country in the world. Always use your hands-free unit, or stop your vehicle in an area where you will not pose a safety hazard to other road users.◀

Vehicles and portable phones

 Do not use your phone from within a garage, or near an open hood. The air in these areas could contain fuel vapors, and the portable phone might generate sparks that could result in burns. This same precaution applies to open luggage compartment lids on vehicles equipped for operation using natural gas or hydrogen, and to all vehicles with luggage compartment-mounted batteries.◀

Antenna

 When using the phone, ensure that all persons in the area are at least 20 in/50 cm from the antenna. Never use your BMW portable phone if the antenna is damaged. Contact between your skin and a

damaged antenna can result in minor burns.

If the antenna is damaged, have it replaced immediately.◀

Special environmental conditions

 Always switch off your BMW portable phone in areas where blasting work is being conducted with explosives. The phone signals could potentially act as a high-frequency transmitter and set off explosions.

Always switch off your BMW portable phone in areas where an increased explosion danger is present. This category includes filling stations along with fuel and chemical storage depots, etc., and all areas in which the air can contain fuel, chemicals or metal particles. Under these conditions, your BMW portable phone could conceivably generate sparks that could lead to a fire or explosion. Always observe all legal regulations governing the use of mobile phones in the vicinity of filling stations, chemical factories and other areas where an explosion potential exists. Never use the BMW portable phone in aircraft; do not use this portable phone in hospitals, care centers or at other locations where medical equipment may be in operation, such as accident sites, etc. Your service provider can furnish you with more detailed information on legal regulations governing the use of your phone.◀

Medical equipment

 Portable phones can generate interference capable of preventing hearing aids and cardiac pacemakers from operating correctly. If you or any occupant of the vehicle will be using such equipment, consult a physician or the manufacturer of the equipment to determine whether it is adequately shielded against high-frequency energy.◀

Batteries

⚠ Never attempt to dismantle your BMW portable phone or its battery. Use only approved battery types – the wrong battery can destroy your portable phone.
To avoid possible short circuits, after removing a battery you should never allow it to come into contact with metallic surfaces of any kind.◀

Disposing of used batteries

 Return used batteries to a recycling collection point or to your BMW center.◀

Care instructions

You can find what you need to know about caring for your portable phone in the portable phone's separate Owner's Manual and in our supplementary Caring for your vehicle brochure.

Controls

You can operate the car phone or the BMW portable phone* using:

- ▷ Buttons on the steering wheel, refer to page 12
- ▷ The Control Center, refer to page 138
- ▷ Voice, refer to page 143.

If there is not a BMW portable phone in the cradle, you can use the car phone via the hands-free unit for BMW Assist calls.

The Control Display indicates which telephone you are using to establish a connection.

Telephoning with the car phone

In preparation

If there is not a BMW portable phone in the cradle, you can use the car phone via the hands-free unit for BMW Assist calls.

 The car phone must be enabled prior to initial use. In this connection, please consult your BMW center.◀

Commissioning the BMW portable phone*

Before starting off, place the BMW portable phone in the cradle. If you are making a call using the car phone, you can only use the BMW portable phone once you have terminated this call.

Inserting the portable phone



1. Press button 1
2. If necessary, remove the protective cap from the antenna connector on the back of the portable phone
3. Insert the portable phone with the antenna completely inserted
4. Press the cradle downwards.

Removing the portable phone

Press button 1.

 For information on operating your portable phone, please consult the separate Owner's Manual.◀

Hands-free unit



The hands-free microphones are located on the headliner.

The hands-free unit is activated whenever you establish or receive a call using:

- ▷ The button on the steering wheel
- ▷ The Control Center
- ▷ Voice.

To continue a call on the portable phone via the hands-free unit:

Insert the portable phone with opened flap in the cradle.


To continue a call via the hands-free unit using the portable phone:

Take the portable phone with opened flap from the cradle.

The connection is disconnected as soon as you take the phone from the cradle with a closed lid.

Volume adjustment

You can adjust the volume for the hands-free unit for each individual key:

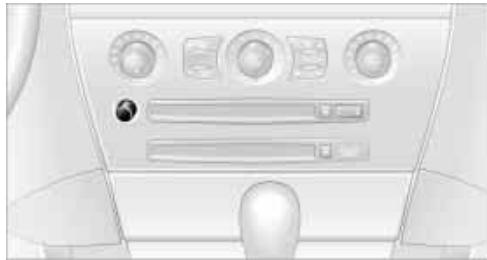

Turn the button during a call to select the desired volume.

The hands-free unit will remain at this volume level, even if the other audio sources are set to minimum volume.

Operation using the Control Center

You can use the following functions via the Control Center:

- ▷ Enter unlock code with portable phone inserted
- ▷ Dial phone number
- ▷ Phone book with portable phone inserted
- ▷ Top-8 with portable phone inserted
- ▷ Redialing
- ▷ Display accepted calls
- ▷ Display missed calls
- ▷ Text messages/SMS with portable phone inserted.

Control Center, for principle details, refer to page 17:

1. Turn the ignition key to position 2

MENU

2. Open the start menu by pressing the button



3. Move the controller forwards to open "Communication".

Entering unlock code

If, after inserting the BMW portable phone in the cradle, you are requested by a message from the Control Display to enter the unlock code:



1. Select "Phone" and press the controller
2. To enter the unlock code: select letters and digits individually and press the controller.

Each letter or digit of the unlock code is displayed on the Control Display with an asterisk.

To delete the last digit:

Move the controller to the right to select and press the controller



3. Select "Confirm unlock code" and press the controller.

Receiving calls

If you have the phone number of the caller stored in the phone book and the phone number is transmitted, the name of the entry is displayed.

Accepting a call



Select "Accept" and press the controller.

Rejecting a call

Select "Reject" and press the controller. The caller is diverted to your mailbox if this has been activated.

Calling

Dial phone number



1. Select "Phone" and press the controller
2. Select "Dial" and press the controller
3. To enter the phone number: select digits individually and press the controller. Always enter the complete phone number consisting of national dialing code, area code, and phone number.

To delete the last digit:

Move the controller to the right to select and press the controller



4. Select "Dial number" and press the controller.

Ending call

1. Select the phone number and press the controller



2. Select "End call" and press the controller.

Phone book

After inserting the portable phone in the cradle, the phone book is transferred from the portable phone into the vehicle. Loading the phone book can take several minutes. The phone book is available as long as the portable phone is inserted.

Selecting from the phone book

1. Select "Phone" and press the controller



2. Select "A - Z" and press the controller. An alphabetical listing of all the entries in the phone book appears on the Control Display.

To run a targeted search for an entry, select the first letter of the entry and press the controller.

The first entry that starts with this letter is displayed



3. Select the desired entry and press the controller

4. Select "Call" and press the controller. The system dials the number.

If different phone numbers are stored in the portable phone under one name, e.g. office and home, the name is shown once for each phone number.

To display the phone numbers:

1. Select "Edit" and press the controller
2. ← and press the controller.

Adding digits to phone numbers

You can add other digits to a phone number stored in the phone book, e.g. to call a specific extension:

1. Select "Phone" and press the controller
2. Select "A - Z" and press the controller
3. Select the desired entry and press the controller
4. Select "Edit" and press the controller
5. To supplement the phone number:
Select digits individually and press the controller
6. Select "Dial number" and press the controller.

Lists

Your phone can store phone numbers you have dialed and missed calls in lists. If the caller is entered in the telephone book, the name of the entry is displayed instead of the phone number.

You can select the desired subscriber from the list and establish the connection.

Four lists are available:

- ▷ "Top 8".
The eight numbers that you call most frequently are automatically stored in the list "A - Z". The number called most often appears at the top of the list
- ▷ "Redial".
The last eight phone numbers you have dialed are automatically stored. The last number dialed is at the top of the list
- ▷ "Received calls".
The phone numbers of the eight calls last accepted are stored if the phone number of the caller is transmitted
- ▷ "Missed calls".
The phone numbers of the last eight calls not accepted are stored if the phone number of the caller is transmitted.

Dialing from a list

To select an entry and establish a connection:

1. Select "Phone" and press the controller



2. Select the list and press the controller:

- ▷ "Top 8", with the portable phone inserted
- ▷ "Redial"
- ▷ "Received calls"
- ▷ "Missed calls"



3. Select the desired entry and press the controller

4. Select "Call" and press the controller.
The system dials the number.

Deleting individual entries

- Select the desired entry from the list and press the controller



- Select "Delete" and press the controller.

The entry is deleted.

Deleting the entire list

- Select an entry from the list and press the controller



- Select "Delete all numbers" and press the controller.

The list is deleted.

Touch tone dialing

Touch tone numbers are required for access to network services or to control devices, e.g. remote querying on an answering machine.

This function can only be used during an existing connection.

- Establish a connection



- Press the controller

- Select "Keypad" and press the controller



- Select the desired digits and press the controller.

Each digit is sent immediately.

Text messages/SMS

Text messages/SMS are displayed as long as the portable phone is inserted.

The symbol on the Control Display shows that you have received a new text message. It goes out as soon as there are no longer any unread text messages.

The number of text messages that can be stored depends on the memory capacity of your BMW portable phone.


Displaying text messages/SMS

- Select "SMS" and press the controller. The list of received text messages is displayed on the Control Display.

The symbol indicates unread text messages

- Select the desired text message and press the controller.

The text message is displayed

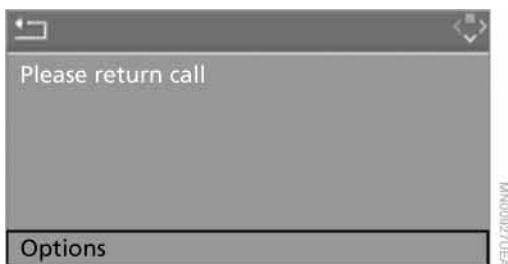

To close the text message:

Move the controller forwards to select and press the controller.

Calling the sender

1. Select the desired text message and press the controller.
The text message is displayed
2. Select "Options" and press the controller
3. Select "Call sender" and press the controller.
The selected sender is called.

Deleting text messages/SMS

1. Select the desired text message and press the controller.
The text message is displayed
2. Select "Options" and press the controller
3. Select "Delete" and press the controller.
The text message of the portable phone is deleted.

Operation with voice*

The concept

You can operate your phone without having to remove your hands from the steering wheel. The system operates on the basis of voice commands that you will learn easily after using them a few times. In addition, you are also supported by instructions or questions.

Symbols used

- ... indicates voice commands.
- ... indicates instructions of the system.

Voice commands

In ignition key position 2:

1. Briefly press the button on the steering wheel.
A sound signal indicates operating readiness
2. Speak voice commands.

To have the system list the voice commands possible in each case:

>Help<.

Cancelling operation via voice

Briefly press the button on the steering wheel or

>Cancel<.

In dialogs where text of any kind can be spoken, e.g. a name, canceling is only possible using the button. This is automatically interrupted when an incoming call is received.

Voice commands

In addition to the commands described in this Owner's Manual, alternative commands are often possible for the same functions, e.g.:

>Dial name< or >Name<.

Digits from zero to nine are understood.

You can say each digit individually or group them into a sequence of three to five digits to accelerate the input.

An example: dial phone number

Start the dialog:

Briefly press the  button on the steering wheel.

Voice command	Response
›Dial number‹	»Please say the number«
e.g. ›201 12 34 56 7‹	»201 12 34 56 7. Continue?«
›Dial‹	»Dialing number«

Volume adjustment

You can adjust the volume for the voice instructions for each specific key:



Turn the button during an instruction to select the desired volume.

This volume for the instructions is maintained, even if the other audio sources are set to minimum volume.

First steps

Switching on portable phone

 ›Switch on phone‹.

Entering unlock code

You can protect your BMW portable phone against misuse with a four-digit unlock code.

-  1. ›Input Unlock Code‹.
The dialog for entering the unlock code is opened
2. Speak unlock code
3. ›Send Unlock Code‹.

Correcting unlock code

After the sequence of digits has been repeated by the system, the unlock code can be corrected.

-  1. ›Correct number‹.
The block of digits is deleted
2. Speak the new unlock code on request
3. ›Send Unlock Code‹.

Deleting unlock code

 ›Delete number‹.

Canceling the operation

 ›Cancel‹.

Calling

Dialing phone number

-  1. ›Dial number‹.
The dialog for establishing a telephone connection is called up
2. Say the phone number.
For telephone calls abroad, say ›Plus‹ and then the country code
3. ›Dial‹.
The connection to the desired subscriber is established.

Correcting the phone number

After the last spoken sequence of digits has been repeated by the system, you can delete this sequence of digits.

 ›Correct number‹.
The digits are deleted.

The command 'Correct number' can be repeated as often as you like.

Deleting input

'Delete' is used to delete all the digits entered so far.

Voice phone book

You can create a voice phone book with up to 50 phone numbers and names. The names and phone numbers in the voice phone book are independent of the memory of your BMW portable phone.

Storing an entry

An entry always consists of a name and phone number.

1. 'Save name'.
The dialog for storing a name is called up
2. Speak name and repeat entry upon request.
The duration of the name in the phone book must not exceed approx. 2 seconds
3. Speak the phone number upon request
4. To save the phone number:
'Save'.

Selecting an entry

The connection to the phone number of the selected entry is established

1. 'Dial name'.
The dialog for selecting an entry is called up
2. Speak the name on request
3. Confirm the prompt with 'Yes'.

Reading out and selecting entries

You can have all the entries of your voice phone book read out in the order of input and select a certain entry to establish a connection:

1. 'Read phonebook'.
The dialog for reading the phone book is called up
2. 'Dial number' when the desired entry is read out.

Redialing

'Redial' dials the last phone number dialed.

Deleting an entry

You can delete any entry from the voice phone book.

1. 'Delete name'.
The dialog for deleting an entry is called up
2. Speak the name on request
3. Confirm the prompt with 'Yes'.

Deleting all entries

'Delete phonebook' deletes all entries in the phone book.

1. 'Delete phonebook'.
The dialog for deleting phone book is called up
2. Confirm the prompt with 'Yes'
3. Confirm the repeated prompt with 'Yes'.

Notes

 The voice commands were available in English on going to print. Other languages are currently not available. To operate the phone via the voice command system, refer to page 21.◀

Important for voice input

Issue the commands fluently and at normal volume, avoiding excessing emphasis and pauses.

On vehicles with a phone, two microphones are installed near the inside rear-view mirror of your vehicle. Although the system is designed to filter out ambient noise, you can help ensure that your commands will be understood by observing the following instructions:

- ▷ Keep the doors, windows and glass roof closed to prevent interference from ambient noise
- ▷ Avoid other sources of noise in the vehicle while speaking, and ask other vehicle occupants to refrain from talking while you are using the system.

TeleService*, BMW Assist*

TeleService

TeleService opens up a new dimension for communication with BMW Service. The car phone can be used to transmit data on the service status of your vehicle or on legally prescribed inspections directly to your BMW center. This is the same data that is stored for CBS Condition Based Service in the ignition key. Your BMW center can then contact you, and you can make an appointment that suits you while you are still on the road. Your advantage here is that your BMW center can prepare in advance for the required maintenance work. The functions of TeleService are country-specific: the data on the service status of your vehicle or on legally prescribed inspections is transmitted on a country-specific basis either automatically before they fall due or simultaneously when you call any service partner you have chosen. Your BMW center will be glad to provide more detailed information.

BMW Assist

BMW Assist is available to you if you have ordered this option at your BMW center or BMW Customer Relations. This provides you with other services in addition to TeleService.

Many functions of BMW Assist depend on the individually agreed contract.

The subscriber agreement must be completed successfully before using the BMW Assist services.

Requirements

The portable phone is registered in a portable phone network that can transmit the services.

To transmit position data, the navigation system must be able to determine the position. In order to enable and update TeleService or BMW Assist, a GPS signal must be present.

 To avoid posing an unnecessary hazard, both to your own vehicle's occupants and to other road users, only make entries with the vehicle stationary. ▶

Enabling TeleService or BMW Assist

For you to be able to use the services of TeleService or BMW Assist, these must be enabled:


Control Center, for principle details, refer to page 17:

MENU


1. Open the start menu by pressing the button



2. Open the **i** menu by pressing the controller
3. Select "Communication interface" and press the controller
4. Select "BMW Service settings" and press the controller
5. Move the controller forwards to switch fields

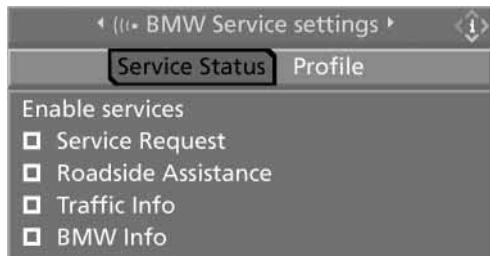

6. Select "Service Status" and press the controller
7. Select "Enable services" and press the controller.

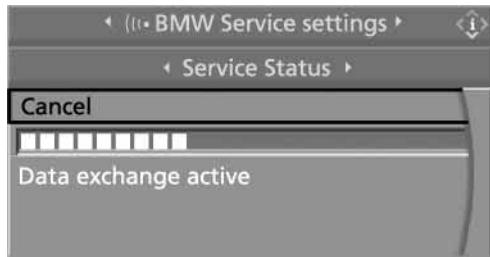

TeleService and, if applicable, BMW Assist is enabled; data exchange with the service center starts.

Leave the ignition switched on.

Enabling takes a few minutes. The status is displayed on the Control Display. If you call up another menu, the enable process continues to run in the background.

displays the registered services.

Services offered


Automatic Service Notification*

The data on the service status of your vehicle or on legally prescribed inspections is transmitted automatically directly to your BMW center prior to the due date.

You can check the current status of the Automatic Service Notification.

Control Center, for principle details, refer to page 17:

1. Open the menu
2. Select "Service" and press the controller
3. Select "Service requirements" and press the controller

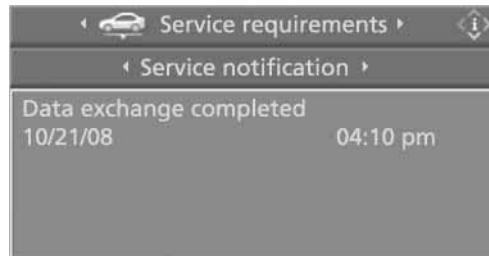


4. Select "Service notification" and press the controller.

Setting up contact to Roadside Assistance of the BMW Group


You can call Roadside Assistance of the BMW Group should you require help in the event of a breakdown.

Control Center, for principle details, refer to page 17:

1. Open the menu
2. Select "Service" and press the controller
3. Select "BMW Service" and press the controller
4. Move the controller forwards to change fields

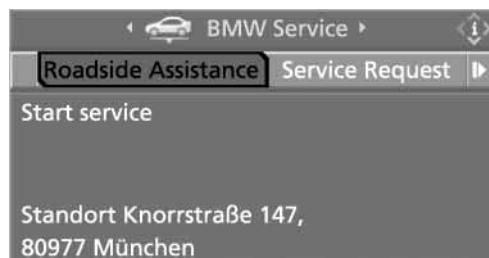

5. Select "Roadside Assistance" and press the controller.
The current vehicle position is displayed

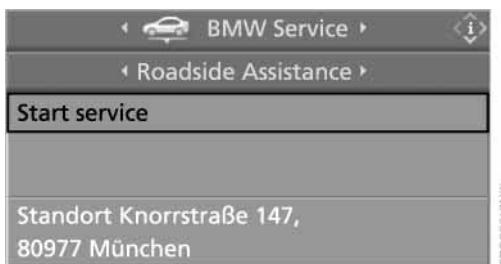

6. Select "Start service" and press the controller.

In some countries, with BMW Assist enabled, the data of the CBS Condition Based Service and your position are transmitted simultaneously.

Voice communication to the Roadside Assistance service is set up.


Setting up contact to your BMW center or the BMW Customer Relations

You can contact your BMW center, e.g. to arrange a service appointment.

For information related to your vehicle, call BMW Customer Relation.

Control Center, for principle details, refer to page 17:

1. Open the menu
2. Select "Service" and press the controller
3. Select "BMW Service" and press the controller
4. Move the controller forwards to change fields

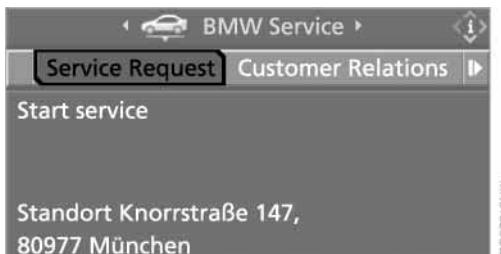

5. Select the desired service and press the controller

- ▷ To establish contact to BMW Service:
"Service Request"
BMW Service will call you back at the specified phone number, e.g. to make an appointment for service
- ▷ To establish voice contact to the BMW Hotline:
"Customer Relations"

6. Select "Start service" and press the controller.

Contact to the desired after-sales service organization will be established.

In some countries, with TeleService or BMW Assist enabled, the data of the CBS Condition Based Service are transmitted simultaneously.

BMW Info*

You can obtain information on important and useful new services and features.

Control Center, for principle details, refer to page 17:

1. Call up "Communication"
2. Select "BMW Assist" and press the controller
3. Move the controller forwards to change fields
4. Select "BMW Info" and press the controller



5. To display new messages:
Select "Update status reports" and press the controller. The messages are transferred
6. Select the desired message and press the controller.

If you have received a message with a telephone number or an address, you can forward this to your portable phone or navigation system.

New messages are announced via SMS. For more detailed information, refer to page 142.

Info Plus*

This information service supplies you with a whole range of current, interesting information on request.


You can have telephone numbers and addresses transferred and directly dial the telephone number or copy the address to the destination guidance of the navigation system.

This option provides you with a current information service, e.g. in the following areas:

- ▷ Information on businesses
e.g. florist, doctor
- ▷ Accommodations
e.g. hotels, motels
- ▷ Mobility
e.g. filling stations, airports, car rental, BMW dealers
- ▷ Eating and drinking
e.g. restaurants, cafés, bars
- ▷ Current information
e.g. movies playing, events.

Control Center, for principle details, refer to page 17:

1. Call up "Communication"
2. Select "BMW Assist" and press the controller
3. Move the controller forwards to change fields
4. Select "Where to go?" and press the controller

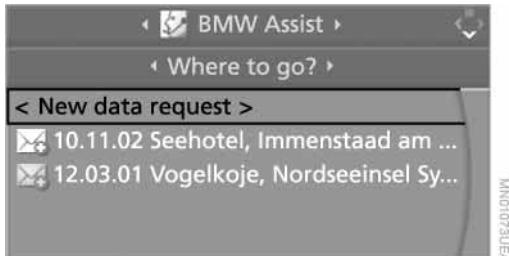

5. If appropriate, select a message and press the controller.

Displaying new message

Select "New data request" and press the controller.

You will be connected with an employee of the BMW Information Service. The desired information and the corresponding address can be requested by phone. These will be shown on the Control Display and can be copied to the portable phone or navigation system, e.g. telephone number or address of a hotel. Reservations can be made at many hotels directly by the BMW Information Service.

Adapting TeleService or BMW Assist

Displaying and updating services

If one of the following conditions is met, you should update the services of the TeleService or BMW Assist:

- ▷ You have changed the scope of the contractually agreed services
- ▷ The range of services of the offered services has been extended.


To update the services:

Control Center, for principle details, refer to page 17:

1. Open the menu
2. Select "Communication interface" and press the controller
3. Select "BMW Service settings" and press the controller

4. Move the controller forwards to change fields
5. Select "Service Status" and press the controller.

You will be informed about the current scope of TeleService or BMW Assist.  displays the registered services.

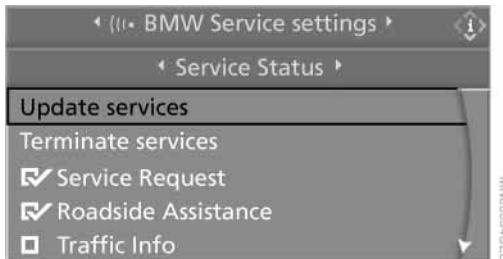

6. Select "Update services" and press the controller.

Roaming

To align the services supported by home and foreign providers automatically, enable roaming:

1. Open the  menu
2. Select "Communication interface" and press the controller
3. Select "BMW Service settings" and press the controller
4. Move the controller forwards to change fields
5. Select "Profile" and press the controller
6. Select "Roaming" and press the controller.  is displayed when roaming is enabled.

Please note that additional costs can arise if you are located abroad.

Terminating services

If you terminate the services, your vehicle will not be equipped to contact the BMW Assist call center. When an emergency call is started, the telephone connection to the general emergency number is established.

Control Center, for principle details, refer to page 17:

1. Open the  menu
2. Select "Communication interface" and press the controller
3. Select "BMW Service settings" and press the controller
4. Move the controller forwards to change fields
5. Select "Service Status" and press the controller
6. Select "Terminate services" and press the controller.

TeleService or BMW Assist is disabled in the vehicle. This does not involve any contractual termination.

Automatic Service Notification can be disabled separately; consult your BMW center.


Enable TeleService and, if applicable, BMW Assist once again to log on again.

Displaying vehicle data

You can obtain a display of some of the selected data of your individual vehicle.

Control Center, for principle details, refer to page 17:

1. Open the  menu
2. Select "Communication interface" and press the controller
3. Select "BMW Service settings" and press the controller
4. Move the controller forwards to change fields

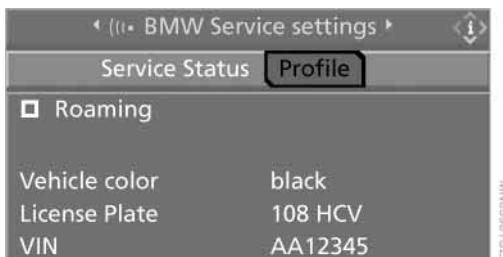

5. Select "Profile" and press the controller.



Mobility

This section helps you maintain your mobility by supplying important information on vital topics including fuels and lubricants, wheels and tires, service, maintenance and how to deal with any problems that may occur.

Refueling

Fuel filler door



Simple and environmentally friendly




Vehicle shown

⚠ Always switch off the engine before refueling. If you do not, fuel cannot be filled into the tank and a message on the Control Display will appear.◀

To open and close: briefly press the rear edge of the fuel filler door.

Manual release

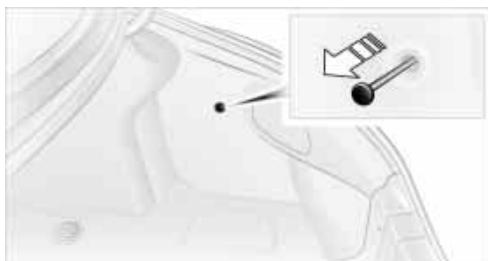

Vehicle shown

In the event of an electrical defect in the system, you can release the fuel filler door manually:

In the luggage compartment, pull the button with the gas pump symbol on the right side panel.

⚠ Always observe all applicable precautions and regulations when handling fuels. Never carry spare fuel containers in your vehicle. Whether empty or full, these containers can leak, cause an explosion, and lead to fire in the event of a collision.◀

⚠ When handling fuels always observe any safety guidelines posted at the filling station.◀

Put the filler cap in the bracket attached to the fuel filler door.

When refueling, insert the filler nozzle completely into the filler pipe. Lifting the filler nozzle during refueling

- ▷ results in premature pump shutoff
- ▷ can lead to reduced efficiency in the fuel-vapor recovery system.

The fuel tank is full when the filler nozzle clicks off the first time.

To close the fuel tank cap:

Fit the cap and turn it clockwise until you clearly hear a click.

⚠ Close the filler cap carefully after refueling, continuing until a click is heard. While closing, be sure not to squeeze the strap which is fastened to the cap. A loose or missing cap will activate the message Check Gas Cap on the Control Display.◀

Fuel tank capacity: approx. 18.5 US gallons/70 liters, including the reserve capacity of approx. 2.1 gallons/8 liters.

⚠ Never attempt to continue driving until the tank is completely empty, as engine functions could be affected, and the vehicle could sustain damage as a result.◀

Fuel specifications

The engine uses lead-free fuel only.

Required fuel:

Premium Unleaded Gasoline,
min. 91 AKI.

AKI = Anti-Knock Index.

 Do not use leaded fuels. The use of leaded fuels will cause permanent damage to the system's oxygen sensor and the catalytic converter.◀

Wheels and tires

Tire inflation pressure

Information for your safety

It is not merely the tire's service life, but also driving comfort and – to a great extent – driving safety that depend on the condition of the tires and the maintenance of the specified tire pressure.



Check the tire inflation pressure regularly and correct it if necessary: at least every two weeks and before beginning a longer trip. If you fail to observe this precaution, you may be driving on tires with incorrect tire pressures, a condition that can not only compromise your vehicle's stability, but also lead to tire damage and the risk of an accident.◀

Checking the pressure

Only check tire inflation pressure when the tires are cold. This means after a maximum of 1.25 miles/2 km driving or when the vehicle has been parked for at least 2 hours. When tires are warm, the tire inflation pressure increases.

After correcting the inflation pressure(s), always reinitialize the Flat Tire Monitor, refer to page [78](#).

Inflation pressure for original tires



VINODEC0001

The inflation pressures for your standard tires are visible on the door post when you open the driver's door.

Inflation pressure for other tire sizes

The table below provides all the correct inflation pressures for the specified tire sizes at ambient temperature.




For correct identification of the right tire inflation pressure for your tires, observe the specifications for the corresponding tire size.◀

Tire size

Pressure specifications in psi/kPa

All pressure specifications in the table are indicated in psi/kilopascal with cold tires; cold = ambient temperature



245/45 R 18 96 V, H M+S	29/200	32/220	32/220	38/260
Front: 245/45 R 18 96 W	29/200	-	32/220	-
Rear: 275/40 R 18 99 W	-	32/220	-	38/260
Front: 245/40 R 19 94 W	29/200	-	32/220	-
Rear: 275/35 R 19 96 W	-	32/220	-	38/260
Front: 245/35 R 20 91 Y	29/200	-	32/220	-
Rear: 275/30 R 20 93 Y	-	32/220	-	38/260

More details on the permitted load and weights can be found on page 182.

Tire identification marks

Knowledge of the labeling on the side of the tire makes it easier to identify and choose the right tires.

Tire size

e.g. 205/60 R 15 91 W
 Nominal width in mm _____
 Aspect ratio in % _____
 Radial type _____
 Rim diameter in inches _____
 Load rating (not on ZR tires) _____
 Speed rating (before R on ZR tires) _____

Speed letter

T = up to 118 mph (190 km/h)
 H = up to 131 mph (210 km/h)
 V = up to 150 mph (240 km/h)
 W = up to 167 mph (270 km/h)
 Y = up to 186 mph (300 km/h)

Tire Identification Number

Tires with DOT codes meet the guidelines of the U.S. Department of Transport.

DOT code:

e.g. DOT xxxx xxx 4003
 Manufacturer code for tire make _____
 Tire size and tire design _____
 Tire age _____

Tire age

The tire's date of manufacture is indicated on the sidewall:

DOT ... 4003 indicates that a tire was manufactured in week 40 of the year 2003.

BMW recommends that you replace all tires after 6 years at the latest, independently of the fact that tires can reach an age of 10 years.

Uniform Tire Quality Grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width. For example:

Treadwear 200 Traction AA 2

Temperature A

DOT Quality Grades

Treadwear

Traction AA A B C

Temperature A B C

 All passenger car tires must conform to Federal Safety Requirements in addition to these grades.◀

Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and one-half – 1½ – times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction

The traction grades, from highest to lowest, are AA, A, B, and C.

These grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

 The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.◀

Temperature

The temperature grades are A – the highest –, B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

 The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.◀

RSC – Run-flat tires

You will recognize run-flat tires by a circular symbol containing the letters RSC on the side of the tire, refer to page 160.

M+S

Winter and all-season tires.

These have better winter properties than summer tires.

Tire condition


Inspect your tires frequently for tread wear, signs of damage and for foreign objects lodged in the tread. Check the tread depth.

Tire tread

The tread depth should not drop below 0.12 in/3 mm, although, for example, European legislation only specifies a minimum tread depth of 0.063 in/1.6 mm. At tread depths below 0.12 in/3 mm there is an increased risk of high-speed hydroplaning,

even when only small amounts of water are present on the road surface.

As winter tires display a noticeable loss in their ability to cope with cold-weather driving conditions once the tread wears to below 0.16 in/4 mm, to ensure continued safety you should always have such tires replaced.

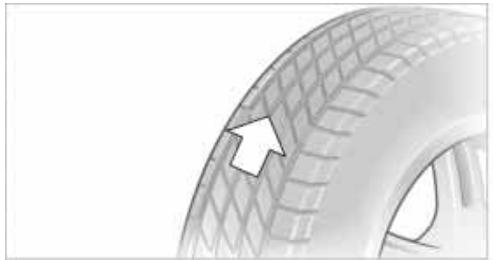

Wear indicators at the tread-groove base, refer to arrow, are distributed over the tire's circumference and are marked on the side of the tire with TWI – Tread Wear Indicator. These indicators signal at a tread depth of 0.06 in/1.6 mm that the legal wear limit has been reached.

Tire damage

⚠ Unusual vibrations encountered during normal vehicle operation can indicate tire failure or some other vehicle defect. This can, for example, be caused by driving over curbs. These kinds of problems may also be signaled by other changes in vehicle response, such as a strong tendency to pull to the left or right. Should this occur, respond by immediately reducing your speed. Carefully proceed – or have your vehicle towed – to the nearest BMW center or tire dealer to have the wheels or tires inspected.

Tire damage, extending to sudden and complete loss of pressure in extreme cases, can pose a potentially lethal safety hazard for the vehicle's occupants and other road users alike. ◀

Replacing wheels/tires

⚠ Unprofessional attempts by laymen to service tires can lead to damage and accidents.

Have this work performed by skilled professionals only. The technicians at your BMW center will be glad to assist you with the required professional knowledge and specialized equipment. ◀

The correct combination of wheels and tires is another vital factor in ensuring reliable operation of various vehicle systems such as ABS and DSC.

Have the wheel and tire assemblies balanced every time either a wheel or a tire is replaced.

⚠ BMW does not recommend the use of retread tires, as otherwise driving safety may be reduced. Possible variations in the design and the age – which could be substantial – of the carcasses can lead to unusually rapid wear. ◀

The right wheels and tires

⚠ BMW recommends that you use only wheel and tire combinations that BMW has tested and approved for your particular vehicle. Variations in factors such as manufacturing tolerances mean that even wheels and tires with identical official size ratings could actually have different dimensions than the approved units – these differences could lead to body contact, and with it the risk of severe accidents. If non-approved wheels and tires are used, BMW cannot evaluate their suitability, and therefore cannot be held liable for driving safety. ◀

To maintain good handling and vehicle response, use only tires of a single tread configuration from a single manufacturer. After a flat tire, always remember to have the specified wheel and tire combination remounted on the vehicle as soon as possible.

Recommended tire brands

BMW tests certain tire brands for each tire size, classifies them as road-safe and approves them. You can find out about these at specialized dealers or at your BMW center. Observe any country-specific regulations, e.g. on making a corresponding entry in the vehicle documents.

The factory-mounted tires have been specially selected to provide optimized performance when installed on your vehicle; if properly cared for, they will provide a combination of safety and excellent ride comfort.

Run-flat tires

In the event of replacement, use run-flat tires, as there is no spare wheel available for flats.

Special characteristics of winter tires

BMW recommends winter tires for use in cold winter driving conditions. Although all-season M+S tires provide better winter traction than summer tires, they generally fail to provide the same levels of cold-weather performance as winter tires.

When switching to winter tires, observe the descriptions at Tire condition and Replacing wheels/tires, page [159](#).

Run-flat tires

Your BMW is equipped with run-flat tires. Your BMW center will advise you if you wish to replace the tires of your BMW or wish to switch from summer to winter tires or vice versa.

If you switch from summer to winter tires, or vice versa, use run-flat tires, as in the event of a flat there is no spare wheel available.


Observing speed ratings

 Never exceed the maximum speed for which the winter tires are rated. Unprofessional attempts by laymen to service tires can lead to damage and accidents. Have this work performed by skilled professionals only. The technicians at your BMW center will be glad to assist you with the required professional knowledge and specialized equipment.◀

Storage

Always store wheels and tires in a cool, dry place with as little exposure to light as possible. Always protect tires against all contact with oil, grease and fuels. Do not exceed the maximum tire inflation pressure indicated on the side wall of the tire.

Run-flat tires

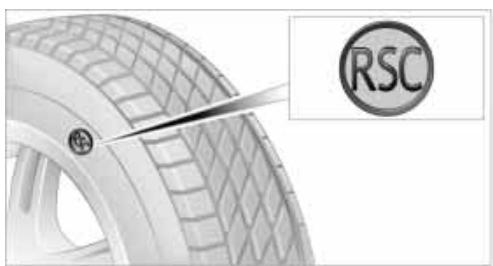

You will recognize run-flat tires by a circular symbol containing the letters RSC on the side of the tire. Run-flat tires consist of self-contained tires and special rims. The tire reinforcement ensures that the tire retains some residual safety in the event of pressure drop and driving remains possible to a restricted degree.

 If you switch from summer to winter tires, or vice versa, use run-flat tires, as in the event of a breakdown there is no spare wheel available. In this case, BMW recommends that you consult your BMW center. Your BMW center is qualified to handle run-flat tires and equipped with the necessary special tools.◀

Continuing driving with a damaged tire

Driving on run-flat tires can continue, depending on the vehicle load and the severity of the tire damage, at a maximum speed of 50 mph/80 km/h.

In the case of complete tire pressure loss, 0 psi/0 kPa, or obvious tire damage, you can estimate the possible distance for continued driving on the basis of the following guide values:

- ▷ With low load:
1 to 2 persons without luggage:
Approx. 155 miles/250 km
- ▷ With medium load:
2 persons, luggage compartment full, or
4 persons without luggage:
Approx. 90 miles/150 km
- ▷ With full load:
4 persons, luggage compartment full:
Approx. 30 miles/50 km.

 Drive reservedly and do not exceed a speed of 50 mph/80 km/h. With inflation pressure loss, the driving characteristics change, for example reduced track stability on braking, extended braking distance, and altered self-steering characteristics.

For safety reasons, BMW recommends that you do not have damaged run-flat tires repaired and that you consult your BMW center in this case.◀

Snow chains*

BMW only tests certain snow chains, classifies them as road-safe and approves them. Consult your BMW center for more information. BMW recommends only using these approved, narrow-link snow chains. These snow chains are approved exclusively for use on summer or winter tires in pairs on the rear wheels.

Observe the manufacturer's instructions when installing snow chains.

Do not exceed a vehicle speed of 30 mph/50 km/h with the chains mounted.

It is not possible to fit snow chains to the following tires:

275/40 R 18

275/35 R 19

275/30 R 20

 After mounting snow chains, do not activate the Flat Tire Monitor.

When you are driving with snow chains, it can be beneficial to switch off DSC briefly, refer to page 76.◀

Under the hood

Hood


Unlocking



Pull the lever located under the left side of the instrument panel.


⚠ Never attempt to perform any service or repair operations on your vehicle without the required, professional technical training. If you are unfamiliar with the service procedures and precautions, always have any required work carried out at your BMW center. Unprofessional attempts at service and repair, and the incorrect handling of parts and materials that can occur during such attempts, constitute a potential safety hazard, both for the vehicle's occupants and for other road users.◀

Opening

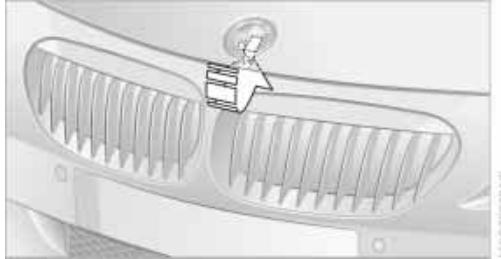

Press the release handle and open the engine hood.

Closing

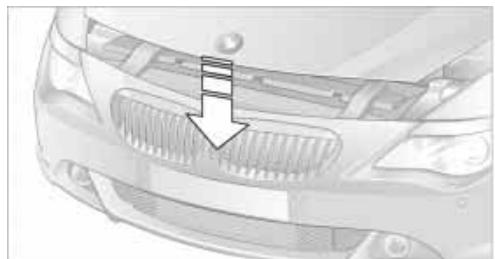


Close the hood from a height of approx. 16 in/40 cm with momentum. It must be clearly heard to engage.

⚠ Observe the same precautions that apply to all closing operations by ensuring that the hood's travel range is clear and unobstructed before allowing the hood to fall into position.

If you see any signs that the hood is not completely closed while driving your vehicle, you should stop at once and close it securely.◀


Engine compartment

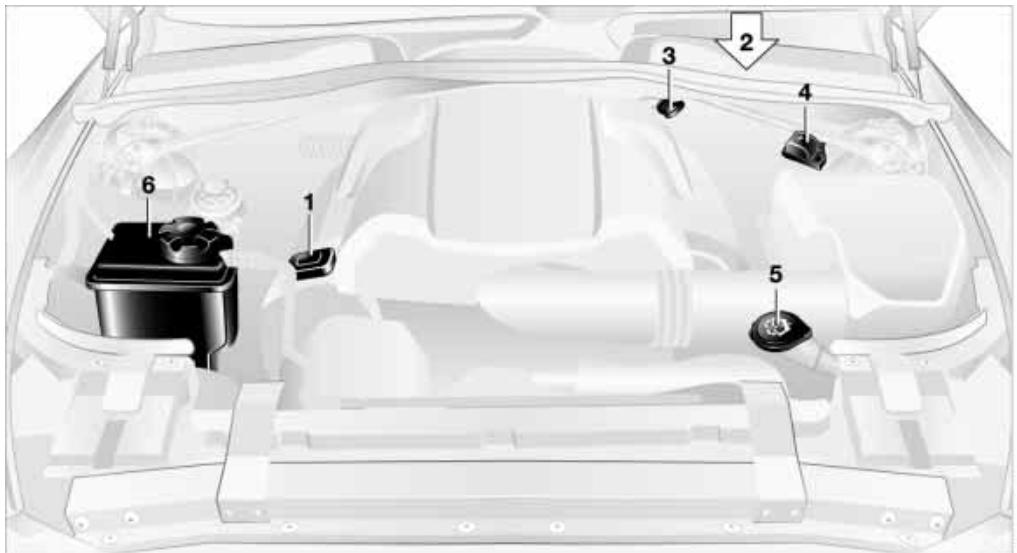

- Filler neck for engine oil, refer to [Topping up engine oil](#)
- Brake fluid reservoir, located beneath the microfilter cover, refer to page [165](#)
- Dipstick for engine oil, refer to [Checking the oil level](#)
- Starting-aid terminal, refer to page [174](#)
- Washer fluid reservoir of the headlamp and windshield cleaning systems, refer to page [55](#)
- Expansion tank for coolant, refer to page [164](#)

- Carefully push the dipstick all the way into the guide tube and pull it out again
- The oil should extend to between the two marks on the dipstick.

As is the case with fuel economy, the rate at which the engine uses oil is strongly influenced by driving style and operating conditions.

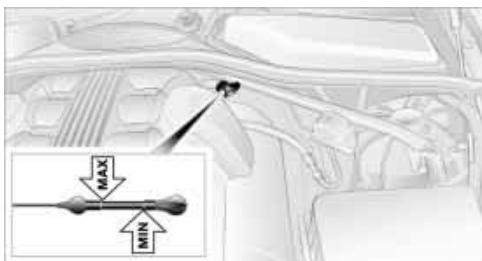


The oil quantity between the two marks of the dipstick is approx. 1.6 US quarts / 1.5 liters. Do not fill beyond the upper mark on the dipstick. Excess oil can damage the engine.

Engine oil

Checking oil level

- Park the vehicle on a level surface
- Switch the engine off after it has reached normal operating temperature
- After approx. 5 minutes, pull the dipstick **3** out and wipe it off with a clean lint-free cloth, paper towel, or similar material

Adding engine oil

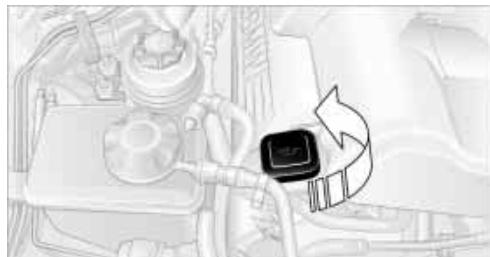

Wait until the level has dropped to just above the lower mark or a message appears on the Control Display before adding oil.

⚠ BMW engines are designed to operate without additives, and their use could even lead to damage in some cases. This also applies to the automatic transmission, the differential and the power steering system.◀

Recommendation: have your oil changes only performed at your BMW center.

⚠ Continuous exposure to used oil has caused cancer in laboratory testing. For this reason, any skin areas that come into contact with oil should be thoroughly washed with soap and water.

Store oil, grease, etc., well out of the reach of children; always observe all warning labels on the containers.◀

 Always observe all applicable rules and regulations for environmental protection when disposing of used oil.◀

Specified engine oils

The quality of the engine oil selected has critical significance for the operation and service life of an engine. BMW approves only specific oils after confirming their suitability for use in its vehicles with extensive testing.

Use only approved BMW High Performance Synthetic Oil.

If you are unable to obtain BMW High Performance Synthetic Oil, you can add small amounts of another synthetic oil between oil changes. Use only oils with the API SH specification or higher.

▶ Ask your BMW center for details concerning the specific BMW High Performance Synthetic Oil or synthetic oils which have been approved.◀

You can also call BMW of North America at 1-800-831-1117 or visit this website: www.bmwusa.com to obtain this information.

Viscosity ratings

Viscosity is the oil flow rating as defined in SAE classes.

The selection of the correct SAE class depends on the climatic conditions in the area where you typically drive your BMW.

▶ Approved oils are in SAE classes 5W-40 and 5W-30.◀


These oils may be used for driving in all ambient temperatures.

Coolant

⚠ Do not add coolant to the cooling system when the engine is hot. Escaping coolant can cause burns. Antifreeze and anticorrosion agents are hazardous to health. Always store these agents in tightly-closed original containers kept well away from the reach of children. Antifreeze and anticorrosion agents are flammable. Therefore, do not pour over hot engine parts, as otherwise they could catch fire and cause burns. Always observe the instructions for use provided on the containers.◀

 Always observe all applicable rules and regulations for environmental protection when disposing of used antifreeze and anti-corrosion agents.◀

Checking coolant level

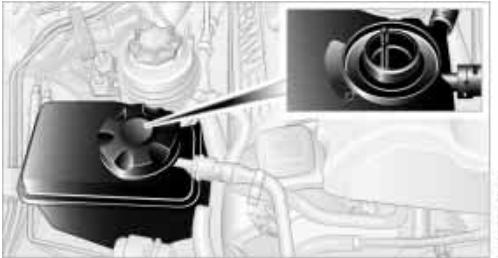

Correct coolant level with the engine cold, approx. +68 °F/20 °C:

1. Turn the cap of the expansion tank counterclockwise to allow any accumulated pressure to escape, then continue turning to open
2. The coolant level is correct when the coolant extends to between the MIN and MAX marks on the filler neck, refer to the diagram adjacent to the filler neck
3. If the coolant is low, slowly add coolant up to the specified level – do not overfill.

Brake fluid



The symbol lights up and a message appears on the Control Display: the brake fluid in the reservoir has fallen to below the minimum level.

The brake fluid reservoir is located under the microfilter housing trim panel on the driver's side of the vehicle. To have brake fluid added to the system, or to have the source of any brake fluid loss traced and rectified, please contact your BMW center, which can also supply the factory-approved – DOT 4 – brake fluids.



Brake fluid is hygroscopic: it absorbs moisture from the atmosphere over the course of time.

To ensure that the brake system continues to provide safe and reliable performance, remember to have the brake fluid changed every 2 years at the latest, refer to page 63 and to the Service and Warranty Information Booklet for US models or the Warranty and Service Guide Booklet for Canadian models.

Brake fluid is toxic and also damages vehicle paintwork. Always store these agents in tightly-closed original containers kept well away from the reach of children.

Do not spill the fluid and do not refill the brake fluid reservoir to beyond the MAX mark. Should it come into contact with hot engine components, the brake fluid could ignite and cause personal injury in the form of burns.◀



Always observe all applicable rules and regulations for environmental protection when disposing of used brake fluid.◀



Warning lamp for Canadian models.

Brake hydraulic systems


A low brake-fluid level combined with longer-than-usual pedal travel could be a sign that one of the brake system's hydraulic circuits has failed.



Proceed to the nearest BMW center. Remember that pedal travel may be increased, and there may also be a substantial increase in the amount of pedal pressure required to brake the vehicle. Please adapt your driving style accordingly.◀

Maintenance

The BMW Maintenance System

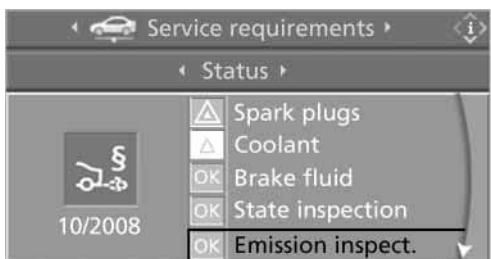

The BMW Maintenance System is designed to ensure that your vehicle will continue to furnish consistent reliability combined with optimal safety. The service schedule also includes operations related to the vehicle's comfort and convenience features, such as replacement of the filters for the inside air. The ultimate objective is to ensure economical maintenance by providing the ideal service for your vehicle.

Should the day come when you decide to sell your BMW, you will find that a complete dealer service history is an asset of inestimable value.

CBS Condition Based Service

CBS is a more advanced version of the Service Interval Display. Sensors combine with highly-specialized algorithms to supply service information that reflects your vehicle's actual operating conditions more precisely than ever before.

The system now provides individual displays of the times or distances remaining until the deadlines for specific service operations as well as official state inspections:

- ▷ Engine oil
- ▷ Brakes: separate for front and rear
- ▷ Brake fluid
- ▷ Spark plugs

- ▷ Vehicle check
- ▷ Depending on national regulations:
Official state inspections.

CBS monitors both current and upcoming service requirements. Your vehicle stores this information continuously in the ignition key while the vehicle is being driven. You should therefore hand over to the BMW service advisor the key you last used to drive when you take your vehicle for service. After accessing the data stored in the vehicle key, your BMW service advisor is able to suggest precisely the right array of service procedures for your own individual vehicle.

By letting you define a service and maintenance regimen that reflects your own individual requirements, Condition Based Service builds the basis for trouble-free driving.

You can find more detailed information on the service requirement display on page 63.

Make sure the date in the Control Center is always set correctly, refer to page 72, as otherwise the effectiveness of CBS Condition Based Service is not ensured.◀

Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Canadian models

Please consult your Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Canadian models for additional information on service requirements.

Have service and repair operations performed at your BMW center. Take the time to ensure that these service procedures are confirmed by entries in your vehicle's Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Cana-

dian models. These entries verify that your vehicle has received the specified regular maintenance, and may also be required when submitting warranty claims.◀

Care

You can find everything you need to know on this topic by consulting the Caring for your vehicle brochure.

Rules and regulations

California Proposition 65 Warning

California laws require us to issue the following warning:

 Engine exhaust and a wide variety of automobile components and parts, including components found in the interior furnishings in a vehicle, contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds. Wash your hands after handling.

Used engine oil contains chemicals that have caused cancer in laboratory animals. Always protect your skin by washing thoroughly with soap and water.◀

The system monitors emission-related components and systems for deterioration and malfunction.



An illuminated lamp informs you of the need for service, not of the need to stop the vehicle. However, the systems should be checked by your BMW center at the earliest possible opportunity.



Indicator lamp for Canadian models

Under certain conditions, the indicator will blink or flash. This indicates a rather severe level of engine misfire. When this occurs, you should reduce speed and consult the nearest BMW center as soon as possible. Severe engine misfire over only a short period of time can seriously damage emissions control components, especially the catalytic converter.



When the fuel filler cap is not properly tightened, the OBD system can detect the vapor leak and the indicator will light up. If the filler cap is subsequently tightened, the indicator should go out within a few days.◀

OBD connector



The Onboard Diagnostic – OBD – interface socket is located on the left of the driver's side under the instrument panel and under a cover.

The cover has the letters OBD on it.

The purpose of the OBD system is to ensure proper operation of the emission control system for the vehicle's lifetime.

Replacing components

Onboard tool kit



Never touch the glass on new bulbs with your bare fingers, as even minute amounts of contamination will burn into the bulb's surface and reduce its service life. Use a clean cloth, napkin, etc., or hold the bulb by its metal socket. In the case of bulbs where the replacement is not described, please consult your BMW center.◀

You can obtain a selection of replacement bulbs at your BMW center.




To prevent short circuits, before working on any electrical system, equipment or accessory you should always switch it off and disconnect the cable from the battery's negative terminal before starting.

To avoid possible injury or equipment damage when changing bulbs, observe any instructions provided by the bulb manufacturer.◀



When maintaining the headlamps, please comply with the instructions in the separate Caring for your vehicle brochure.◀

Windshield wiper blades

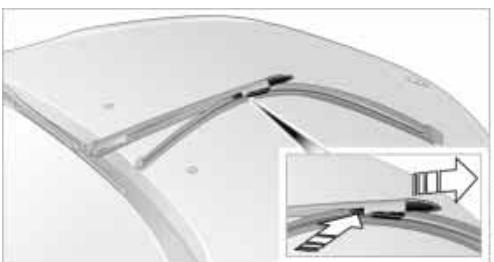

To replace, fold the wiper arm up and hold. Press the catches together while pushing the wiper blade out of the front.

Lamps and bulbs

The lamps and bulbs are essential factors contributing to the safety of your vehicle. Therefore, comply fully with the following instructions during bulb replacement. If you are not familiar with the specified procedures, have the replacements carried out at your BMW center.


Xenon lamps

The service life of these bulbs is very long and the probability of a failure is very low, provided that they are not switched on and off an unusual number of times. In the unlikely event that one of these lamps should fail, you can respond by switching on your fog lamps and proceeding carefully, where allowed by law.



To avoid the risk of potentially fatal injuries: owing to the extremely high voltages at which these units operate, service work on the xenon lighting system should always be entrusted to qualified personnel.◀


Turn signal indicator, front

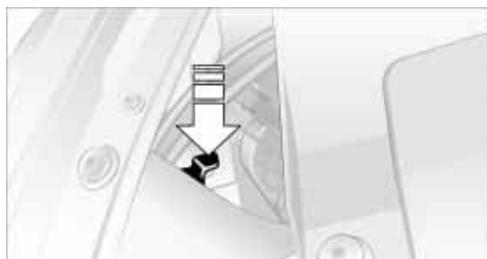

Bulb 21 Watts – WY 21 W

1. Press the bulb fitting downwards and remove
2. Remove and replace the bulb.

Side-mounted turn signal indicators

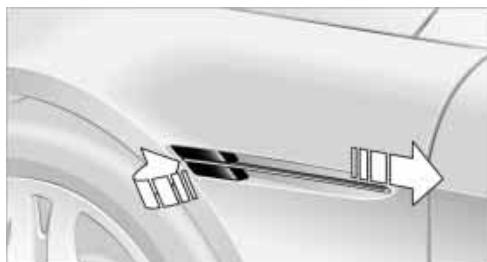

Bulb 5 Watts – WY 5 W

1. Push the trim panel to the back and remove
2. Press against the front edge of the lamp with the tip of your finger, then push it to the rear and release the detent at the front
3. Turn the lamp 90° and remove
4. Turn the bulb holder to the left and remove
5. Extract the bulb for replacement.

Tail lamps



1 Turn signal indicators

2 Standing, tail and brake lamp

3 Backup lamps

4 Reflector

The standing, tail and brake lamps are LEDs. Please contact a BMW center in case of a malfunction. ◀

The backup lamps are fitted with longlife bulbs. Please contact a BMW center in case of a malfunction. ◀

Rear turn signal indicator




Bulb 21 Watts – PY 21 W

The illustration shows the recess on the left side of the luggage compartment.

1. Remove the cover
2. Unclip the bulb fitting and remove
3. Apply gentle pressure to the bulb while turning it to the left for removal and replacement.

License plate lamp

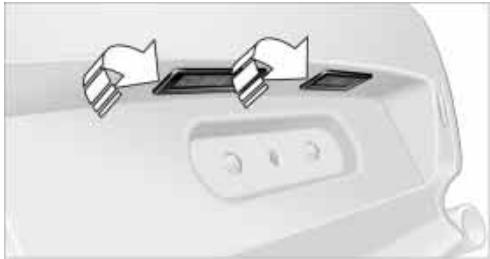

Bulb 5 Watts – C 5 W

1. Insert a screwdriver in the slot and press to the left, refer to arrows; this unlocks the lamp
2. Remove the lamp and replace the bulb.

Changing a wheel

Run-flat tires


Your BMW is equipped with run-flat tires. An immediate wheel change in the event of inflation pressure loss in the event of a flat is therefore no longer required.

You will recognize run-flat tires by a circular symbol containing the letters RSC on the side of the tire, refer to Run-flat tires on page 158.

BMW recommends that you refer to your BMW center if you wish to replace the tires of your BMW or wish to switch from summer to winter tires or vice versa. Your BMW center is qualified to handle run-flat tires and equipped with the necessary special tools.◀

If you switch from summer to winter tires, or vice versa, use run-flat tires, as in the event of a flat there is no spare wheel available.◀

Car jack points

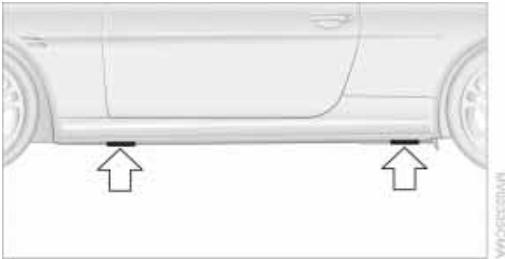

The jacking points for the car jack are located in the positions shown.

- You can obtain a suitable car jack at your BMW center.◀

Battery

Battery care

The battery is 100% maintenance-free, i.e., the electrolyte will last for the life of the battery when the vehicle is operated in a temperate climate.

For all questions that regard the battery, please consult your BMW center.◀

Charging the battery

Only charge the battery in the vehicle via the terminals in the engine compartment with the engine switched off. Connections, refer to Jump-starting on page 174.

Disposal


Return used batteries to a recycling point or your BMW center. Maintain the battery in an upright position for transport and storage. Always restrain the battery to prevent it from tipping over during transport.◀

Fuses

⚠ Never attempt to repair a blown fuse, and do not replace a defective fuse with a substitute of another color or amperage rating, as this could lead to a circuit overload, ultimately resulting in a fire in the vehicle.◀

Spare fuses, plastic tweezers and details of the fuse assignment are located in the compartment for the onboard tool kit, refer to page 169.

In the glove compartment

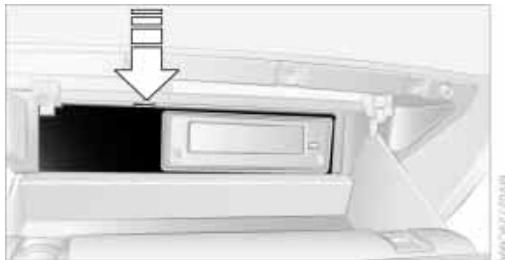

Press the fast release coupling downwards and fold the cover forwards.

In the luggage compartment



Raise the floor mat.


Giving and receiving assistance

Starting an emergency call*

Conditions for an emergency call:

- ▷ The car phone is logged on to a mobile telephone network
- ▷ The emergency call system is operable.

To start an emergency call:

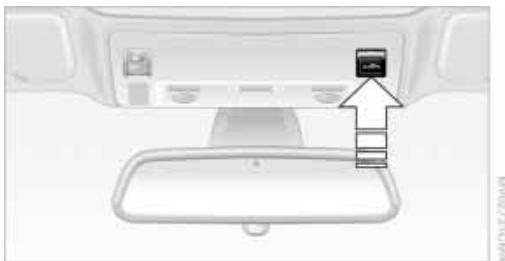

1. Open the protective cover:
Briefly press the protective cover
2. Press the button for at least 2 seconds.
The indicator lamp in the button lights up. As soon as the voice connection to the general emergency number has been set up, the indicator lamp flashes.

If conditions allow, remain in the vehicle until the connection has been established. You will then be able to provide a detailed description of the situation.

In vehicles where BMW Assist is enabled, the phone system will automatically establish contact with the BMW Assist emergency call center. If the current position of your vehicle can be determined, this is transferred to the BMW Assist emergency call center.

Activating BMW Assist, refer to page 147.

- ▷ If the navigation system fails, the current position of the vehicle is not transmitted.◀

If the indicator lamp flashes, but you are unable to hear the emergency call center through the hands-free system, this could indicate, for instance, that the hands-free system is no longer operational. However, the emergency call center can still hear you.

- ⚠ For technical reasons, the emergency call cannot be guaranteed under unfavorable conditions.◀

Under certain conditions, an emergency call is started automatically immediately after a severe accident. The automatic emergency call is not affected by the button being pressed.


Warning triangle*



The hazard warning triangle can be found in the luggage compartment on the left side.

- ⚠ Comply with legal requirements requiring you to carry a hazard warning triangle in the vehicle.◀

First-aid kit*

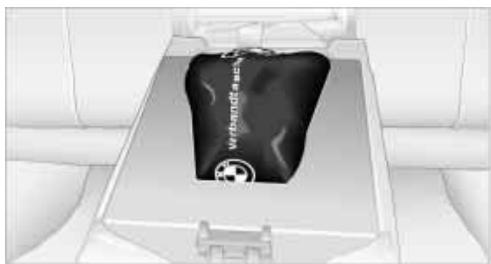

The first-aid kit is located in the filler element of the rear seat backrest. To take it out, press the button and pull the filler element forwards.

To refit the filler element, insert the two steps in the strip and press back the filler element. Make sure that you do not damage the rear seat upholstery.◀

Some of the articles contained in the first-aid kit have a limited service life. For this reason, check the expiration dates of each of the items regularly, and replace any whose expiration dates have passed. You can find replacements in any pharmacy.

Comply with legal requirements requiring you to carry a first aid kit in the vehicle.◀

Roadside Assistance

The Roadside Assistance of the BMW Group offers you assistance in the event of a breakdown around the clock, also at weekends and on public holidays.

The phone numbers of the Mobile Service in your home country can be found in the Service Contact brochure.

In the case of vehicles with BMW Assist or TeleService, you can call the Roadside Assistance of the BMW Group directly via the Control Center, refer to page 148.

Jump-starting

When your battery is discharged you can use two jumper cables to start your vehicle with power from the battery in a second vehicle. You can also use the same method to help start another vehicle. Use only jumper cables with fully-insulated clamp handles.

To avoid the risk of potentially fatal injury, always avoid all contact with electrical components while the engine is running. Carefully adhere to the following sequence, both to prevent damage to one or both vehicles, and to guard against possible personal injuries.◀


Preparing

1. Check whether the battery of the other vehicle has a voltage of 12 Volts and approximately the same capacitance in Ah. This information can be found on the battery
2. Switch off the engine of the vehicle providing assistance
3. Switch off any consumer units in both vehicles.

There must not be any contact between the bodies of the two vehicles, as otherwise there is a danger of short circuits.◀

Connecting the jumper cables

To avoid personal injury from sparks, always observe this sequence when connecting jumper cables.◀

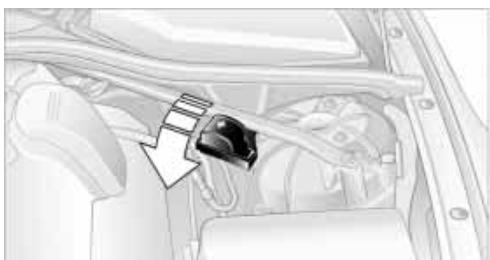

On your BMW, the so-called starting-aid terminal in the engine compartment serves as the battery positive terminal, also refer

to Engine compartment on page 163. The symbol + is embossed on the cover.

1. Open the cover of the BMW starting-aid terminal. To do so, pull the tab
2. Attach one end of the jumper cable plus/+ to the positive terminal of the battery or a starting-aid terminal of the vehicle providing assistance
3. Attach the second end of the cable to the positive terminal of the battery or to a starting-aid terminal of the vehicle to be started



Your BMW has a special nut as body ground or negative pole.

4. Attach one end of the jumper cable minus/- to the negative terminal of the battery or to an engine or body ground of the vehicle providing assistance
5. Attach the second end of the cable to the negative terminal of the battery or to the engine or body ground of the vehicle to be started.

Starting the engine

1. Start the engine on the support vehicle and allow it to run for several minutes at a fast idle
2. Start the engine on the other vehicle in the usual way.
If the first start attempt is not successful, wait a few minutes before another attempt in order to allow the discharged battery to recharge
3. Let the engines run for a few minutes
4. Disconnect the jumper cables by reversing the connection sequence.


If required, have the battery inspected and recharged at your BMW center.

Never use spray fluids to start the engine.◀

Towing

Always observe all applicable towing laws and regulations.◀

Towing with a commercial tow truck

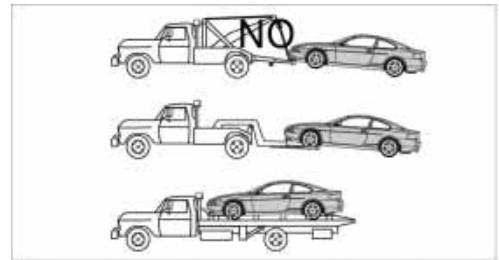

- ▷ Use a wheel lift or flatbed carrier
- ▷ Do not tow with sling-type equipment.

Never allow passengers to ride in a towed vehicle for any reason.◀

Towing with raised front axle

Vehicles with automatic transmission

1. Towing speed:
Maximum of 45 mph/70 km/h
2. Towing distance:
Maximum of 90 miles/150 km/h.

Vehicles with SMG sequential manual transmission


With the ignition switched on, engage selector-lever position N, then switch the ignition off again.

Tow fitting

The threaded tow fitting is stored in the tool kit mounted on the inside of the luggage compartment under the floor mat, refer to page 169, and should always remain in the vehicle. It can be screwed to the front or rear of the vehicle.

Access to tow sockets

Front

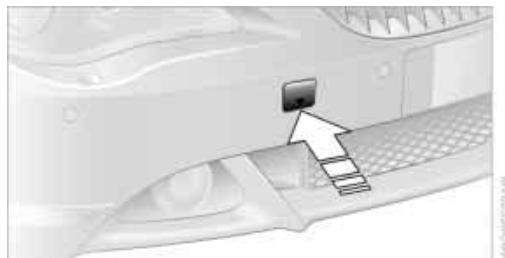

Rear



Press the arrow symbol to push out the cover.

! Only use the tow fitting that comes with the vehicle and screw it in as far as it will go. Only use the tow fitting to tow on the roadway. Follow these instructions; otherwise the tow fitting can come loose and lead to damage to the vehicle. Never attempt to tow or tie down the vehicle using suspension components, as this could lead to damage that might ultimately result in an accident.◀



Reference

This is where to look to find information on any desired topic as quickly as possible.


This chapter includes the section with technical information as well as the manual's index.

Technical data

Engine specifications

645Ci		
Displacement	cu in/cm ³	268.4/4,398
Number of cylinders		8
Maximum output at engine speed	hp rpm	325 6,100
Maximum torque at engine speed	lb ft/Nm rpm	330/450 3,600
Compression ratio	ϵ	10.0
Stroke	in/mm	3.26/82.7
Bore	in/mm	3.6/92.0
Fuel-injection system	Digital electronic engine-management system	

Dimensions

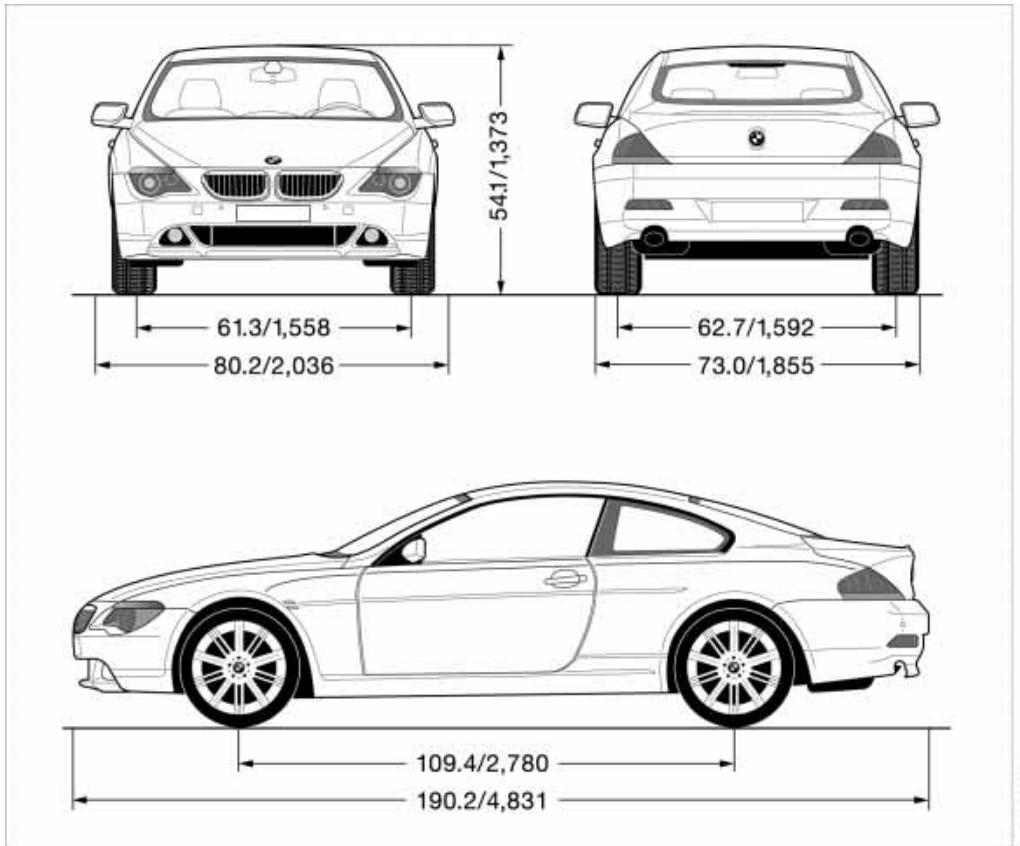

All dimensions in inches/mm. Minimum turning circle diameter: 37.4 ft/11.4 m

Weights

		645Ci
Curb weight with manual transmission with automatic transmission	lbs./kg	3,781/1,715 3,792/1,720
Approved gross weight with manual transmission with automatic transmission	lbs./kg	4,619/2,095 4630/2,100
Load	lbs./kg	838/380
Approved front axle load	lbs./kg	2,271/1,030
Approved rear axle load	lbs./kg	2,513/1,140
Luggage compartment volume	cu ft/l	15.9/450

Never exceed either the approved axle loads or the gross vehicle weight.

Capacities

			Notes
Fuel tank of which reserve	gal/liters gal/liters	approx. 18.5/70 approx. 2.1/8	Fuel specification: page 155
Window and headlamp washer system	quarts/liters	approx. 5.3/5	For details: page 55
Engine oil and filter change	quarts/liters	8.5/8	BMW High Performance Synthetic Oil Oil grades: page 164
Manual, automatic trans- mission and differential		–	Lifetime fluid, no fluid change required

Everything from A to Z

Index

"..." Indicates texts on the Control Display for the selection of functions, pointing out where these are located.

A

ABS Antilock Brake System 74
– indicator lamp 75
Acceleration assistant 51
Accessories, refer to Your individual vehicle 5
"Activation time" 89
Active cruise control 56
– malfunctions 61
Active roll stabilization 77
Active steering 79
Adaptive Head Light 83
"Address book" for navigation 110
Address for navigation
– deleting 111
– entering 106
– selecting 110
"Add to address book" for navigation 110
"Add to destination list" 108
Adjusting temperature for the upper body 88
Adjusting the temperature with automatic climate control 86
Adjusting the thigh support 37
"After door is opened" 38
"After unlocking" 38
Airbags 80
– indicator lamp 81
– sitting safely 36
Air circulation, refer to Air recirculation 87

Air distribution
– automatic 86
– manual 88
Airing, refer to Ventilation 89
"Air recirculation on / off" 42
Air vents of automatic climate control 85
Air volume 86
AKI, refer to Fuel specifications 155
Alarm system 32
– avoiding unintentional alarms 32
All around the steering wheel 11
"All doors" 28
All-season tires, refer to Winter tires 160
"AM", waveband 120, 124
Antenna for portable phone 136
Antifreeze
– coolant 164
– washer fluid 55
Anti-theft system 27
Anti-trapping mechanism
– glass roof, electrical with raise function 34
– windows 33
Approved axle loads, refer to Weights 182
Approved gross vehicle weight, refer to Weights 182
Armrest, see Center armrest 93
Arrival time, refer to Computer 68
Ashtray, front 94
Assistance window 19
Assisting systems, refer to DSC Dynamic Stability Control 75
AUC Automatic recirculated-air control 87
"Audio" 121
Audio 120
– adjusting the tone 121
– controls 120
– switching on/off 120
– volume 121
Audio systems, controls 120
Automatic
– air distribution 86
– air volume 86
– cruise control 55, 56
– curb monitor 38
– headlamp control 82
– steering wheel adjustment 41
– storing stations 125
Automatic car wash, refer to the Caring for your vehicle brochure
Automatic climate control 85
– automatic air distribution 86
– settings using the Control Center 87
– switching off 87
Automatic recirculated-air control AUC 87
Automatic transmission with Steptronic 51
– indicator lamp 53
– interlock 46
– selector lever interlock 52
– shiftlock 52
– sport program 52
– starting the engine 47
– towing 175
"Automatic venting" 89
AUTO program, refer to Automatic air distribution and volume 86

"Autostore" on the radio 126
Average fuel consumption 67
– setting the units 70
Average speed 67
"Avoid ferries" for navigation 111
"Avoid freeways / tolls" for navigation 111
Avoid freeways for navigation 111
Avoiding unintentional alarms 32
"Avoid tollroads" for navigation 111
A axle loads, refer to Weights 182
"A - Z" 140, 141

B

Backrests, refer to Seats 36
Backup lamps, refer to Reverse gear 48
– replacing the bulbs 170
"Balance", refer to Adjusting the tone 122
Balance adjustment in Audio mode
– right/left 122
"Bass", refer to Adjusting the tone 122
Bass, refer to Adjusting the tone 121
Battery 171
– in the remote control 26
– jump-starting 174
Belts, refer to Safety belts 40
Beverage holders 94
Black ice, refer to Ice warning 62
Blocking sections of a route for navigation 115
Blower, refer to Air volume 86

BMW Assist 147
– enabling 147
– services offered 148
"BMW Info" 149
BMW Maintenance System 166
"BMW Service" 148
"BMW Service settings" 147
Bore, refer to Engine data 180
Bottle holder, refer to Beverage holders 94
Brake Assistant, refer to DBC Dynamic Braking Control 77
Brake fluid 165
– indicator lamp 165
– level 165
– replacing 165
Brake Force Display 79
Brake hydraulic systems 165
Brake lamps
– replacing the bulbs 170
Brake pads 99
– breaking-in procedure 98
Brake pedal, refer to Brakes 99
Brake rotors 99
Brakes 99
– ABS 74
– brake fluid 165
– breaking-in procedure 98
– handbrake 47
Brake system 98
– brake-fluid level 165
– brake pads 99
– breaking-in procedure 98
– disc brakes 99
– indicator lamp 14, 75, 99
Breakdown services, refer to Roadside Assistance 174
Break-in procedures 98
– brakes 98
– clutch 98
– differential 98
– engine 98
"Brightness" 70

Brightness on the Control Display 70
Bulbs and lamps
– replacing the bulbs 169
Buttons on steering wheel 12

C

California Proposition 65 Warning 168
"Call" 140
Call
– accepting 139
– display accepted 141
– ending 140
– in absence 141
– starting 139
Calling
– from phone book 140
– from the Top 8 list 141
– redialing 141
Calling up traffic information 116
"Call sender" 143
Can holder, refer to Beverage holders 94
Capacities 182
Car battery, refer to Battery 171
Car care, refer to the Caring for your vehicle brochure
Car-care products, refer to the Caring for your vehicle brochure
"Car Data" 68
Care 167
Cargo, securing 101
Cargo area
– locking separately 31
Caring for artificial leather, refer to the Caring for your vehicle brochure
Caring for leather, refer to the Caring for your vehicle brochure
Caring for light-alloy wheels, refer to the Caring for your vehicle brochure

Caring for plastic, refer to the Caring for your vehicle brochure
 Caring for the carpet, refer to the Caring for your vehicle brochure
 Caring for the vehicle finish, refer to the Caring for your vehicle brochure
 Car jack
 – jacking points 171
 Car keys, refer to Key set 26
 Car phone
 – installation location, refer to Center armrest 93
 – refer to Portable phone 136
 – refer to separate Owner's Manual
 Car radio, refer to Radio 124
 Car wash 98
 – refer to the Caring for your vehicle brochure
 Catalytic converter, refer to High temperatures 98
 CBC Cornering Brake Control 75
 CBS Condition Based Service 166
 "CD" 120
 CD changer 131
 – adjusting the tone 121
 – controls 120
 – fast forward/reverse 133
 – installation location 131
 – listening to a CD 131
 – playing a track 132
 – random order 133
 – repeating a track 132
 – selecting a track 132
 – switching on/off 120
 – volume 121
 CD for navigation 104

CD player 128
 – adjusting the tone 121
 – controls 120
 – fast forward/reverse 129
 – playing a track 129
 – random order 129
 – repeating a track 129
 – selecting tracks 128
 – switching on/off 120
 – volume 121
 Center armrest
 – adjusting the height 93
 – front 93
 Center console, refer to Comfort area 15
 Central key with remote control 26
 Central locking system 27
 – from inside vehicle 30
 – from outside vehicle 27
 Changes, technical, refer to Parts and accessories 6
 Changing a wheel 171
 Changing the direction display for navigation 114
 Changing the language on the Control Display 71
 Changing the measurement units on the Control Display 70
 Changing wheels 171
 CHECK button 66
 Check Control 65
 "Check Control messages" 66
 Check Gas Cap 154
 Checking the air pressure, refer to Tire inflation pressure 156
 Child's seat 44
 Child-restraint fixing LATCH 44
 Child restraints 43
 Child-restraint system 43
 Chrome parts, care, refer to the Caring for your vehicle brochure
 Cigarette lighter 94
 Circulation of air, refer to Recirculated-air mode 87

"City" for destination entry 107
 Cleaning, refer to the Caring for your vehicle brochure
 Cleaning headlamps
 – washer fluid 54
 Cleaning the windshield 54
 "Climate" 87
 Clock 62
 – 12/24 hour mode 71
 – setting the time and date 71
 Closing
 – from inside 30
 – from outside 27
 Cockpit 11
 Comfort area 15
 Comfort start, refer to Starting the engine 46
 "Communication" 138
 "Communication interface" 147
 Compact Disc
 – refer to CD changer 131
 – refer to CD player 128
 Compression ratio, refer to Engine data 180
 Computer 67
 – clock, 12/24 hour mode 71
 – displays on the Control Display 67
 Condition Based Service CBS 166
 "Confirmation" 28
 Confirmation signals for vehicle locking 28
 "Confirm unlock code" 139
 Connecting a vacuum cleaner, refer to Lighter socket 94
 Consumption indicator, refer to Average fuel consumption 67
 "Continue guidance to dest.?" 116

- Control Center 17
 - adjusting the brightness 70
 - assistance window 19
 - automatic climate control 87
 - changing settings 70
 - changing the menu page 20
 - confirming selection or entry 20
 - display, menus 17
 - language selection 71
 - lists 20
 - menu item selection 20
 - selecting units of measure and display format 70
 - setting time and date 71
 - status information 19
 - symbols 18
- Control Display 17
- Controller, refer to Control Center 17
- Controls
 - audio systems 120
 - refer to Cockpit 11
- "Convenience" 28
- Convenience operation
 - glass roof 28, 29
 - windows 28, 29
- Coolant 164, 165
 - level 165
- Cooling, maximum 86
- Cornering Brake Control CBC 75
- "Country" for destination entry 107
- Country of destination for navigation 106
- Courtesy lighting 84
- Cruise control 55
 - active cruise control 56
 - indicator lamp 12
- Cruising range 67
- Cup holder, refer to Beverage holders 94
- Curb weight, refer to Weights 182
- "Current position" 105
- "Customer Relations" 149
- Cylinders, refer to Engine data 180
- D**
- Dashboard, refer to Cockpit 11
- Data 180
 - capacities 182
 - dimensions 181
 - engine 180
 - weights 182
- Date 62
 - calling up 62
 - display format 72
 - setting 72
- "Date format" 72
- Daytime driving lamps 82
- DBC Dynamic Brake Control 77
 - indicator lamp 77
- Decommissioning the vehicle, refer to the Caring for your vehicle brochure
- Defect
 - automatic transmission 53
 - door lock 29
 - fuel filler door 154
 - glass roof, electrical with raise function 35
 - luggage compartment lid 31
 - SMG Sequential manual transmission 50
- Defrosting the windshield, refer to Defrosting windows 86
- Defrosting windows 86
- Defrosting windows and removing condensation 86
- Defrost position, refer to Defrosting windows 86
- "Delete address book" for navigation 111
- "Delete all numbers" on the portable phone 142
- "Delete data" for navigation 111
- "Delete" for portable phone 142, 143
- Deleting the destination address 111
- Destination for navigation
 - entry 106
 - recent destinations 109
 - selecting via map 108
 - selecting with information 108
 - storing 110
- Destination guidance 113
 - changing specified route 111
 - interrupting voice instructions 115
 - selecting a new route 115
 - starting 113
 - terminating/ continuing 116
 - volume of voice instructions 115
- "Detour" 116
- "Dial" for mobile phone 139
- "Dial number" 140
- Digital clock 62
- Dimensions 181
- Dipstick for engine oil 163
- Directional indicators, refer to Turn signal indicators 53
- Direction announcements, refer to Voice instructions 114
- Direction instructions, refer to Voice instructions 114
- Directory, refer to Phone book 140
- Directory for navigation, refer to Address book 110
- Disc brakes 99
- Displacement, refer to Engine data 180
- Display lighting 83
- "Display off" 19

- Displays
– cockpit 11
– Control Display 17
– instrument cluster 13
"Display settings" 70
- Disposal
– brake fluid 165
– coolant 164
– engine oil 164
– vehicle battery 171
- Distance, refer to Computer 68
- Distance cruise control, refer to Active cruise control 56
- "Distance to destin." 68
- Distance to destination, refer to Computer 68
- Distance warning, refer to Park Distance Control 73
- Door entry lighting 84
- Door keys 26
- Door lock 29
- "Door locks" 28
- Doors
– manual operation 29
– remote control 28
- DOT Quality Grades 158
- Draft-free ventilation 89
- "Driver's door only" 28
- Driving lamps, refer to Parking lamps/low beams 82
- Driving notes 98
- Driving stability control 75
- Driving tips, refer to Driving notes 98
- Dry air, refer to Cooling function 86
- Drying the air, refer to Cooling function 86
- DSC Dynamic Stability Control 75
– indicator lamp 75
- DTC Dynamic Traction Control 76
– indicator lamp 14, 76
- DVD for navigation 104
- Dynamic Brake Control DBC
– indicator lamp 77
- Dynamic Driving Control 51
- "Dynamic route" for navigation 111
- Dynamic Stability Control DSC 75
– indicator lamp 75
- Dynamic Traction Control DTC 76
– indicator lamp 14, 76
- E**
- Easy Entry, refer to Entry from the rear 39
- EBV Electronic brake-force distribution 75
- "Edit" on the portable phone 140
- Eject button, refer to Operation using the center console 120
- Electrical defect
– automatic transmission 53
– door lock 29
– fuel filler door 154
– glass roof, electrical with raise function 35
– luggage compartment lid 31
– SMG Sequential manual transmission 50
- Electrical power windows, refer to Windows 33
- Electronic Stability Program ESP, refer to DSC Dynamic Stability Control 75
- Emergency Assistance, refer to Roadside Assistance 174
- Emergency call 173
- Emergency operation, refer to Manual operation 154
- Emergency release of luggage compartment lid from luggage compartment's interior 31
- Emergency services, refer to Roadside Assistance 174
- "Emission inspect." 64
- "Enable services" 148
- "End call" 140
- Engine
– breaking-in procedure 98
– data 180
– speed 180
– starting 46
– switching off 47
- Engine compartment 163
- Engine coolant 164
- Engine hood 162
- Engine oil
– adding 164
– checking the oil level 163
– specified engine oils 164
– temperature 63
- Engine oil thermometer 63
- Engine output, refer to Engine data 180
- Engine speed 180
- "Enter address" 106
- Entering destination 107
- Entering house number or intersection 107
- Entering switch-on times of independent ventilation/heating 89
- Entering the address 106
- Entering the intersection 107
- Entering the town/city for navigation 107
- Entering zip code for navigation 107
- "Entertainment" 120
- "Entertainment settings" 121
- Entry from the rear 39
- "Equalizer", refer to Adjusting the tone 123
- ESP Electronic Stability Program, refer to DSC Dynamic Stability Control 75
- Exhaust system, refer to High temperatures 98
- Exterior mirrors 40
– automatic dimming feature 41

F

"Fader", refer to Adjusting the tone 122
Failure messages, refer to Check Control 65
False alarms, refer to Avoiding unintentional alarms 32
False alarms with the Flat Tire Monitor 78
Fastening safety belts, refer to Safety belts 40
"Fastest route" for navigation 111
Fastest route for navigation 111
First-aid kit 174
Fitting for towing 175
Flashlight, refer to Rechargeable flashlight 92
Flash when locking/unlocking 28
Flat tire 78
– Flat Tire Monitor 77
– run-flat tires 78, 160
Flat Tire Monitor 77
– false alarms 78
– indicator lamp 78, 79
– initializing the system 78
– malfunctions 79
Flat tires, refer to Tire condition 158
Floods, refer to Water on the road 99
"FM", waveband 120, 124
FM, waveband 124
Fog lamps 84
– indicator lamp 84
Footwell lamps 84
Forward, fast
– CD changer 133
– CD player 129
For your own safety 6
Front airbags 80
Front seat adjustment 37
"FTM" 78

Fuel

– display 63
– quality 155
– tank volume 154
Fuel clock, refer to Fuel gauge 63
Fuel display, refer to Fuel gauge 63
Fuel filler door 154
– releasing in the event of electrical malfunction 154
Fuel specifications 155
Fuses 172

G

Garage-door opener, refer to Integrated universal remote control 91
Gasoline, refer to Fuel quality 155
Gasoline display, refer to Fuel gauge 63
Gear changes, refer to Automatic transmission with Steptronic 52
Gear display 51
Gearshift lever
– automatic transmission with Steptronic 52
– manual transmission 48
– SMG Sequential manual transmission 48
General driving notes 98
Glass roof, electrical with raise function 34
– closing in the event of an electrical malfunction 35
– convenience operation 29
– remote control 28
Glove compartment 92
– lighting 92
GPS navigation, refer to Navigation system 104
Grilles of the automatic climate control 85
Gross vehicle weight, refer to Weights 182

H

Handbrake
– indicator lamp 47
Hands-free microphone 15
Hands-free system 15
Hands-free unit 138
Hazard warning flashers 16
Head airbags 80
Headlamp control, automatic 82
Headlamp flasher 53
Headlamps
– care, refer to the Caring for your vehicle brochure
– replacing the bulbs 169
Head Light, refer to Adaptive Head Light 83
Head restraints 39
Heated mirrors 41
Heated rear window 86
Heated seats 40
Heated steering wheel 42
Heating 86
– mirrors 41
– rear window 86
– seats 40
– steering wheel 42
Heating while stationary 87
Heavy cargo, refer to Stowing cargo 101
Height, refer to Dimensions 181
Height adjustment
– head restraints 39
– seats 37
– steering wheel 41
High beams 83
– headlamp flasher 83
– indicator lamp 14
– replacing the bulbs 169
Hills 99
Holder for beverages 94
"Horn" 42
Horn 11
"Hour memo" 71
"House number" for destination entry 107
Hydraulic brake assistant, refer to DBC 77
Hydroplaning 98, 158

I

- Ice warning 62
- iDrive, refer to Control Center 17
- Ignition key 26
- Ignition key positions, refer to Ignition lock 46
- Ignition lock 46
- "Independent ventilation" 89
- Independent ventilation/heating
 - activating the timer 90
 - entering switch-on times 89
 - preselecting switch-on times 89
 - switching on and off directly 89
- Indicator/warning lamps
 - active steering 79
 - airbags 81
 - Flat Tire Monitor 78
 - front fog lamps 12
 - overview 14
 - safety belt warning 14, 40
- Individual button
 - assignment options on steering wheel 42
- Individual settings, refer to Key Memory 26
- Inflation pressure, refer to
 - Tire inflation pressure 156
- Inflation pressure monitoring, refer to Flat Tire Monitor 77
- "Information" for navigation 109
- Information for navigation
 - on a different city 108
 - on city of destination 108
 - on current position 108
- "Information on destination" 109
- "Input map" 108
- Installation location
 - CD changer 131
 - navigation computer 104
 - portable phone 137

J

- Instructions for navigation system, refer to Voice instructions 114
- Instrument cluster 13
- Instrument combination, refer to Instrument cluster 13
- Instrument lighting 83
- Instrument panel, refer to Instrument cluster 11
- Integrated universal remote control 91
- Interesting destination 108
- "Interim time" 70
- Interior lamps 84
 - remote control 28
- Interior mirror
 - automatic dimming feature 41
- Interior motion sensor
 - switching off 28, 32
- Interior protection 33
- Interior rearview mirror 41
- Interlock, refer to Steering locked 46
- Intermittent mode of the wipers 54

K

- Jacking points 171
- Joystick, refer to Control Center 17
- Jump-starting 174

L

- Keypad 142
- Keys 26
- Kickdown 52
- Knock control 155

M

- Lamps and bulbs 169
- "Languages" 71
- "Languages" for navigation 114
- Lashing eyes, refer to Securing the load 101

N

- "Last seat position" 38
- LATCH child-restraint fixing 44
- LEDs light-emitting diodes 84
- Length, refer to Dimensions 181
- Letter symbol on portable phone 142
- License plate light
 - replacing the bulbs 171
- Light-emitting diodes
 - LEDs 84
- Lighter 94
 - socket 94
- "Lighting" 53, 82
- Lighting
 - instruments 83
 - of the vehicle, refer to Lamps 82
- Lighting of the instruments, refer to Instrument lighting 83
- Lights, refer to Parking lamps/low beams 82
- Lights on warning 82
- Light switch 82
- "Limit" 69
- Limit 69
- Lists, Control Center 20
- Loading
 - securing the load 101
 - stowing cargo 101
 - vehicle 100
- "Lock after driving off" 30
- "Lock button" 28
- Locking
 - from inside 30
 - from outside 28
- Locking and unlocking doors
 - from inside 30
 - from outside 27
 - setting confirmation signals 28
- Locking knobs in the doors, refer to Locking 30
- "LOGIC7", refer to Adjusting the tone 122

Low beams 82
– automatic 82
– replacing the bulbs 169
Lower back support, refer to Lumbar support 37
Luggage compartment 30
– capacity 182
– locking separately 31
– opening/closing, refer to Luggage compartment lid 31
– opening with remote control 28
– volume 182
Luggage compartment lid 30
– emergency operation 31
– locking separately 31
– manual operation 31
– opening from the inside 30
– opening from the outside 31
– opening separately 31
– opening with remote control 28
– unlocking manually 31
Lumbar support 37
LW, waveband 124

M

M+S tires, refer to Winter tires 160
Maintenance, refer to Service and Warranty Information Booklet for US models and Warranty and Service Guide Booklet for Canadian models 166
Maintenance system 166
Malfunction warnings, refer to Check Control 65
Manual air distribution 88
Manually controlled recirculated air 87
"Manual" on the radio 125

Manual operation
– door lock 29
– doors 29
– fuel filler door 154
– glass roof, electrical with raise function 35
– luggage compartment lid 31
Manual operation with automatic transmission 52
Manual release, refer to Manual operation 154
Manual station tuning 125
Manual transmission 48
"Map, arrow display" 113
"Map, direction of travel" 114
"Map, facing north" 114
Maximum cooling 86
Maximum speed for winter tires 160
Memory
– refer to Key Memory 26
– refer to Seat, mirror and steering wheel memory 37
Menus, refer to Control Center 17
Message list of traffic information 116
Microphone
– hands-free unit 138
– portable phone 15
Mirror dimming feature 41
Mirrors 40
– automatic curb monitor 38
– heating 41
– memory, refer to Seat, mirror and steering wheel memory 37
"Missed calls" 141
Missed calls 141
Mobile phone, refer to Portable phone
Mobile Service, refer to Roadside Assistance 174
Monitor, refer to Control Center 17
"Monitor display on" 74

Most recent portable phone numbers 141
Multifunction switch
– refer to Turn signal indicators/headlamp flasher 53
– refer to Wiper/washer system 54
Music track
– find 129, 132
"Mute on / off" 42
MW, waveband 124

N

"Navigation" 104
Navigation, refer to Navigation system 104
Navigation CD/DVD 104
Navigation computer, installation location 104
Navigation destination
– manual entry 106
Navigation system 104
– address book 110
– current position 105
– destination entry 106
– destination guidance in assistance window 105
– destination list 109
– entering a destination manually 106
– navigation CD/DVD 104
– recent destinations 109
– route display 113
– route list 114
– selecting destination using information 108
– selecting route criteria 111
– starting 104
– starting destination guidance 113
– switching off, refer to Terminating/continuing destination guidance 116
– terminating/continuing destination guidance 116
– voice instructions 114
– volume adjustment 115

"Navigation voice instructions on" 114
 Neck support, refer to Head restraints 39
 "New destination" 106, 108
 "New route" 115
 "Next entertainment source" 42
 North alignment of map for navigation 114
 Nozzles, refer to
 Windshield washer nozzles 54

O

OBD connector 168
 Octane numbers, refer to
 Fuel quality 155
 Odometer 62
 Oil
 – additives 164
 – capacity 182
 – dipstick 163
 – specified engine oils 164
 Oil change interval,
 refer to Service requirement display 63
 Oil consumption 163
 Oil level 163
 Old batteries, refer to
 Disposal 171
 "On a new destination" for navigation 109
 "Onboard info" 68
 Onboard monitor, refer to
 Control Center 17
 – automatic climate control 87
 Onboard tool kit 169
 "On destination" 109
 "On location" 109
 Opening and closing
 – from inside 30
 – from outside 27
 – using the door lock 29
 – using the remote control 27

Operation via voice for portable phone 143
 – adjusting volume 144
 – canceling 143
 – correcting phone number 144
 – correcting unlock code 144
 – dialing phone number 144
 – entering unlock code 144
 – placing a call 144
 – redialing 145
 – switching on phone 144
 – voice commands 143
 – voice phone book 145
 Orientation menu, refer to
 Start menu 18
 Output, refer to Engine data 180
 Outside air, refer to
 Recirculated-air mode 87
 Outside temperature display 62
 – changing the measurement unit 70
 – in the computer 70

P

Panic mode 28
 Park Distance Control PDC 73
 Parking aid, refer to PDC Park Distance Control 73
 Parking brake, refer to Handbrake 47
 Parking lamps/low beams 82
 – replacing the bulbs 169
 Parking the vehicle 47
 Parts and accessories, refer to Your individual vehicle 5
 Passenger-side mirror tilt function 38
 "Pathway lighting" 82
 Pathway lighting 82
 "PDC" 74
 PDC Park Distance Control 73

"Phone" 139
 Phone book 138
 Phone numbers
 – deleting in the phone book 142
 – dialing 139
 – most recent numbers 141
 – selecting in the phone book 141
 – Top 8 141
 Please fasten safety belt warning lamp 40
 Portable phone
 – accepted calls 141
 – adjusting volume 138
 – battery 137
 – calling 139
 – call termination 140
 – codes 139
 – entering unlock code 139
 – hands-free system 138
 – installation location 93
 – phone book 140
 – redialing 141
 – refer to separate Owner's Manual
 – SMS 142
 – Top 8 141
 – touch tone redialing 142
 Portable phone in the vehicle 100
 Portable phones, use in the interior, refer to Mobile communications systems 100
 Position
 – displaying 105
 "Presets" on the radio 124
 Pressure, tires 156
 "Profile" 151
 Programmable buttons on steering wheel 42

R

- Radio
 - adjusting the tone 121
 - autostore 125
 - controls 120
 - play station 125
 - selecting the waveband 120, 124
 - station search 126
 - station selection 124
 - station with the best reception 125
 - storing stations 126
 - switching on/off 120
 - volume 121
 - Weather Band 127
- Radio-control key, refer to Central key with remote control 26
- Rain sensor 54
- "Random", random sequence generator 129, 133
- Random play
 - CD changer 133
 - CD player 129
- Reading lamps 84
- Rear lamps
 - refer also to Tail lamps 170
 - replacing the bulbs 170
- Rearview mirror 40
- "Received calls" 141
- Recent destinations 109
- Reception
 - quality 127
 - radio stations 127
 - regional program 125
- Reclining seat, refer to Backrest 37
- Recording times, refer to Stopwatch 70
- "Redial" for portable phone 141
- Redialing with portable phone 141
- Refueling 154
- "Relock door if not opened" 30

- Remaining distance
 - refer to Computer 68
 - refer to Cruising range 67
- Remote control 26
 - garage-door opener 91
 - luggage compartment lid 28
 - malfunctions 29
- "Repeat" on the radio 129, 132
- Replacement fuses 172
- Replacement keys 29
- Replacement of tires 159
 - wheel changes 171
- Replacement of wheels 159
- Replacing bulbs, refer to Lamps and bulbs 169
- Reporting an accident, refer to Starting an emergency call 173
- Reporting safety defects 7
- Reserve warning, refer to Fuel gauge 63
- "Reset" for stopwatch 70
- Residual heat 87
- Restraint systems, refer to Safety belts 40
- Reverse, fast
 - CD changer 133
 - CD player 129
- Reverse gear
 - automatic transmission with Steptronic 52
 - manual transmission 48
- SMG Sequential manual transmission 49
- "Roadside Assistance" 148
- Roadside Assistance 174
- "Roaming" 151
- Rope, refer to Towing 175
- Route 113
 - changing 111
 - display 113
 - list 114
 - map display 114
 - new 115
 - selecting 111
 - selecting criteria 111
 - switching to directional arrow mode 113

- Route announcements, refer to Voice instructions 114
- "Route list" for navigation 114
- Route map 113
- "Route preference" 111, 111
- Route selection 111
- Run-flat tires 160
 - continuing driving with a damaged tire 161
 - flat tire 78
 - tire inflation pressure 161

S

- Safety belts 40
 - damage 40
 - indicator lamp 40
 - sitting safely 36
 - warning lamp 40
- Safety belt tensioners, refer to Safety belts 40
- Safety feature
 - glass roof, electrical with raise function 34
 - windows 33
- Safety systems
 - ABS Antilock Brake System 74
 - airbags 80
 - DSC Dynamic Stability Control 75
 - safety belts 40
- "Scan"
 - playing stations 125
 - playing tracks 129, 132
- Scan
 - CD changer 132
 - CD player 129
 - radio 126
- Screen, refer to Control Display 17
- "Screen on / off" 42
- Seat, mirror and steering wheel memory 37

- Seats **36**
 - adjusting sports seat **37**
 - adjusting the seats **37**
 - heating **40**
 - memory, refer to Seat, mirror and steering wheel memory **37**
 - sitting safely **36**
 - storing the setting **37**
- Securing cargo, refer to Cargo **101**
- Securing the load **95**
- "Select as destination" **109**
- "Select current speed" **70**
- Selecting a new route for navigation system **115**
- Selecting audio sources, refer to Operation using the Control Center **120**
- Selecting new scale for navigation system display **114**
- Selecting route **111**
- Selection options with navigation system **111**
- Selector lever
 - automatic transmission with Steptronic **52**
 - Sequential manual transmission SMG **49**
- Selector lever lock, refer to Changing selector-lever positions **52**
- Selector-lever positions
 - automatic transmission with Steptronic **52**
 - manual transmission **48**
 - Sequential manual transmission SMG **49**
- "Service" **63, 148**
- Service, refer to Roadside Assistance **174**
- Service Interval Display **63**
- "Service notification" **148**
- "Service Request" **149**
- Service Requirement Display, refer to Service Interval Display **166**
- "Service requirements" **63, 148**
- "Service Status" **148**
- "Set time" **71**
- Setting road-speed limit **69**
- Settings
 - changing on the Control Display **70**
 - configuring, refer to Key Memory **26**
- Setting the time, refer to Preselecting switch-on times **89**
- Shifting gears with automatic transmission with Steptronic **52**
- Shiftlock, changing the selector-lever positions **52**
- "Shortest route" for navigation **111**
- Shortest route for navigation **111**
- "Show current position" **108**
- "Show destination position" **108**
- Side airbags **80**
- Side marker lamps
 - replacing the bulbs **170**
- Side turn signal indicators
 - replacing the bulbs **170**
- Sitting safely
 - with airbags **36**
 - with safety belts **36**
- Ski bag **95**
- SMG Sequential manual transmission **48**
- "SMS" **142**
- Snow chains **161**
- Socket
 - for Onboard Diagnosis interface **168**
 - in front passenger footwell **94**
 - refer to Lighter socket **94**
- SOS, refer to Starting an emergency call **173**
- Sound in Audio mode
 - middle setting **123**
- Spare fuses **172**
- Spare key **26**
- Special oils, refer to Specified engine oils **164**
- Specified engine oils **164**
- Speed, winter tires **160**
- Speed-dependent volume **122**
- Speed limit warning, refer to Road-speed limit **69**
- Speedometer **13**
- "Speed volume", refer to Adjusting the tone **122**
- Sport program
 - Dynamism Control **51**
- Stability control, refer to Driving stability control **75**
- Standing lamps **83**
- replacing the bulbs **170**
- "Start guidance" **108**
- Starting, refer to Starting the engine **46**
- Starting an emergency call **173**
- Starting assistance, refer to Jump-starting **174**
- Starting destination guidance **113**
- Starting difficulties at very low temperatures **46**
- Starting the engine **46**
- Start menu on the Control Display **18**
- "Start service" **149**
- Start-up difficulties
 - jump-starting **174**
- "State inspection" **64**
- Station, refer to Radio **124**
- "Status" **63**
- Status of this Owner's Manual at time of printing **5**
- Steering wheel **12**
 - adjustment **41**
 - buttons on the steering wheel **12**
 - heating **42**
 - individual button assignment options **42**
 - memory **37**
- "Steering wheel buttons" **42**

Steering with variable ratio, refer to Active steering 79
Steptronic, refer to Automatic transmission with Steptronic 51
"Stop" for stopwatch 70
"Stopwatch" 70
Stopwatch 70
Storage compartments 93
"Store address" for navigation 110
"Store" on the radio 126
Storing sitting position, refer to Seat, mirror and steering wheel memory 37
Storing tires 160
Straps, refer to Loading 101
"Street" for destination entry 107
Stroke, refer to Engine data 180
Summer tires, refer to Wheels and tires 156
Supply reservoir of the cleaning system 55
SW, waveband 124
Switches, refer to Cockpit 11
Switching off
- engine 47
- tilt alarm sensor 28
Switching on/off
- audio 120
- CD changer 120
- CD player 120
- cooling function 86
- navigation voice instructions 114
- portable phone 137
- radio 120
Swiveling headlamps, refer to Adaptive Head Light 83
Symbols 4

T

Tachometer 62
Tailback, refer to Selecting a new route 115
Tail lamps
- replacing the bulbs 170
Tank volume, refer to Fuel tank contents 182
Target cursor for navigation 108
Technical data 180
Telematic 147
Telephone
- refer to Portable phone 136
- refer to separate Owner's Manual
TeleService 147
- enabling 147
- services offered 148
Temperature, engine oil 63
Temperature display
- ice warning 62
- outside temperature 62
- setting the units 62
"Terminate services" 151
"Text language" 71
The BMW Maintenance System 166
Tilt function, passenger-side mirror 38
"Time" 71
"Time 1" 90
"Time 2" 90
"Time format" 71
Timer, refer to Preselecting switch-on time 89
Tire pressure monitoring, refer to Flat Tire Monitor 77
Tire Quality Grading 158
Tires
- age 157
- changing 159
- condition 158
- damage 159
- flat 78
- inflation pressure 156
- pressure monitoring, refer to Flat Tire Monitor 77
- replacing 160
- run-flat 160
- size 159
- tread 158
- wear indicators 159
Tone for audio mode
- adjusting 121
Tools, refer to Onboard tool kit 169
"Top 8" for portable phone 141
Torque, engine 180
Touch tone dialing 142
Tow fitting 175
Towing 175
Tow sockets for tow fitting 176
Tracks
- random play sequence 129, 133
- sample scan 129, 132
Track width, refer to Dimensions 181
Traction Control System, refer to DSC 75
Transmission
- automatic transmission with Steptronic 51
- manual transmission 48
- SMG Sequential manual transmission 48
Transporting children safely 43
Transport securing device, refer to Securing the load 101
Tread depth, refer to Tire tread 158
"Treble", refer to Adjusting the tone 122
"Trip computer" 68

Trip computer **68**

Trip-distance counter, refer to Trip odometer **62**

"Triple turn signal activation" **53**

Trip odometer **62**

Trunk lid, refer to Luggage compartment lid **30**

Turning circle, refer to Dimensions **181**

Turn signal indicators **53**

- replacing the bulbs **170**

U

Underbody protection, refer to the Caring for your vehicle brochure

Uniform Tire Quality Grading **158**

"Units" **71**

Units

- average fuel consumption **70**

- temperature **70**

Universal remote control, refer to Integrated universal remote control **91**

Unlock code **139**

Unlocking

- engine hood **162**

- from inside **30**

- from outside **27**

"Update services" **151**

V

Vehicle

- battery **171**

- break-in procedure **98**

- care, refer to the Caring for your vehicle brochure

- dimensions **181**

- loading **100**

- parking **47**

- washing, refer to the Caring for your vehicle brochure

- weights **182**

Vehicle jack **171**

Vehicle position, refer to Location **105**

"Vehicle settings" **27, 42**

Ventilation **89**

- draft-free **89**

- while parked **89**

Vent outlets of automatic climate control **85**

"Vent settings" **87**

Vents of the automatic climate control **85**

Voice command system **21**

Voice instructions for navigation system **114**

- muting **115**

- repeating **115**

- switching on/off **114**

- volume **115**

Voice phone book **145**

Volume **120**

- audio sources **120**

- portable phone **138**

- speed-dependent **122**

- voice instructions **115**

Volume of the luggage compartment **182**

W

Warning and indicator lamps **14**

Warning messages, refer to Check Control **65**

Warning triangle **173**

Washer fluid **55**

- contents of the reservoir **55**

Washer fluid reservoir **55**

Water on the road, floods **99**

Waveband **124**

"WB" **120, 127**

Wear indicators in the tires **159**

Weights **182**

Wheelbase, refer to Dimensions **181**

Wheels and tires **156, 159**

"Where to go?" **150**

Width, refer to

Dimensions **181**

Windows **33**

- convenience opening **28**

- convenience operation **28, 29**

Windshield washer system **54**

- washer fluid **55**

- washer nozzles **54**

Windshield wipers

- blade replacement **169**

- refer to Wiper/washer system **54**

Winter tires **160**

- speed limit selection **69**

- storage **160**

Wiper blade replacement **169**

Wiper system **54**

"With freeways" for navigation **111**

Wordmatch principle for navigation **112**

Working in the engine compartment **162**

Wrenches/screwdrivers, refer to Onboard tool kit **169**

X

Xenon lamps **169**

- replacing the bulbs **169**

Refueling

To ensure that you always have all the essential data at hand when refueling, we recommend that you fill in the following tables with the specifications and information that apply to your vehicle. Consult the index for individual specifications.

Fuel

Designation

Please enter your preferred fuel here.

Engine oil

Quality

The oil quantity between the two marks on the dipstick is approx. 1.6 US quarts/ 1.5 liter.

Tire inflation pressures

	Summer tires Front	Rear	Winter tires Front	Rear
Up to 4 persons				
4 persons plus luggage				

[More about BMW](#)



The Ultimate
Driving Machine

bmwusa.com

01 41 0157 683 ue

