

STM32CubeIDE Installation & Post-Installation Setup Guide


1. Downloading STM32CubeIDE

1. Visit the official STM32CubeIDE page:
<https://www.st.com/en/development-tools/stm32cubeide.html>
2. Click "**Get Software**".


Get Software					
	Part Number ▲	General Description	ECCN (EU)	Download	All versions
+	STM32CubeIDE-DEB	STM32CubeIDE Debian Linux Installer	NEC	Get latest	Select version ▼
+	STM32CubeIDE-Lnx	STM32CubeIDE Generic Linux Installer	NEC	Get latest	Select version ▼
+	STM32CubeIDE-Mac	STM32CubeIDE macOS Installer	NEC	Get latest	Select version ▼
+	STM32CubeIDE-RPM	STM32CubeIDE RPM Linux Installer	NEC	Get latest	Select version ▼
+	STM32CubeIDE-Win	STM32CubeIDE Windows Installer	NEC	Get latest	Select version ▼

STMicroelectronics recommends always keeping your software up to date

3. Under the version list, click "**Get Latest**" to download the most recent version compatible with your operating system (Windows, Linux, or macOS).
4. Accept the software license agreement.

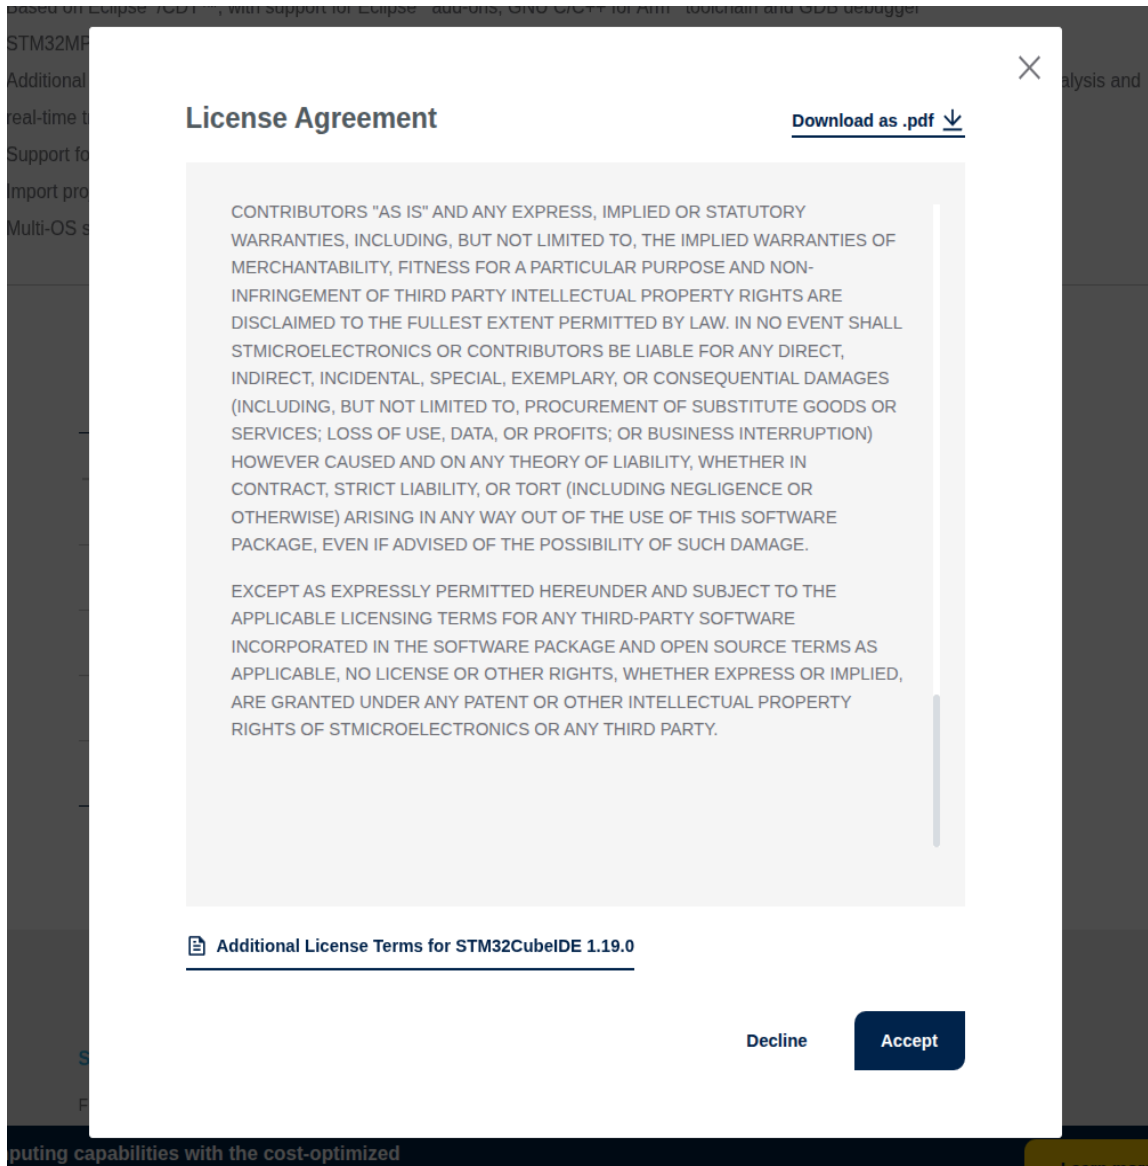

5. You'll be prompted to **log in or create an ST.com (myST) account** in order to download the software. Complete the sign-in or registration process.

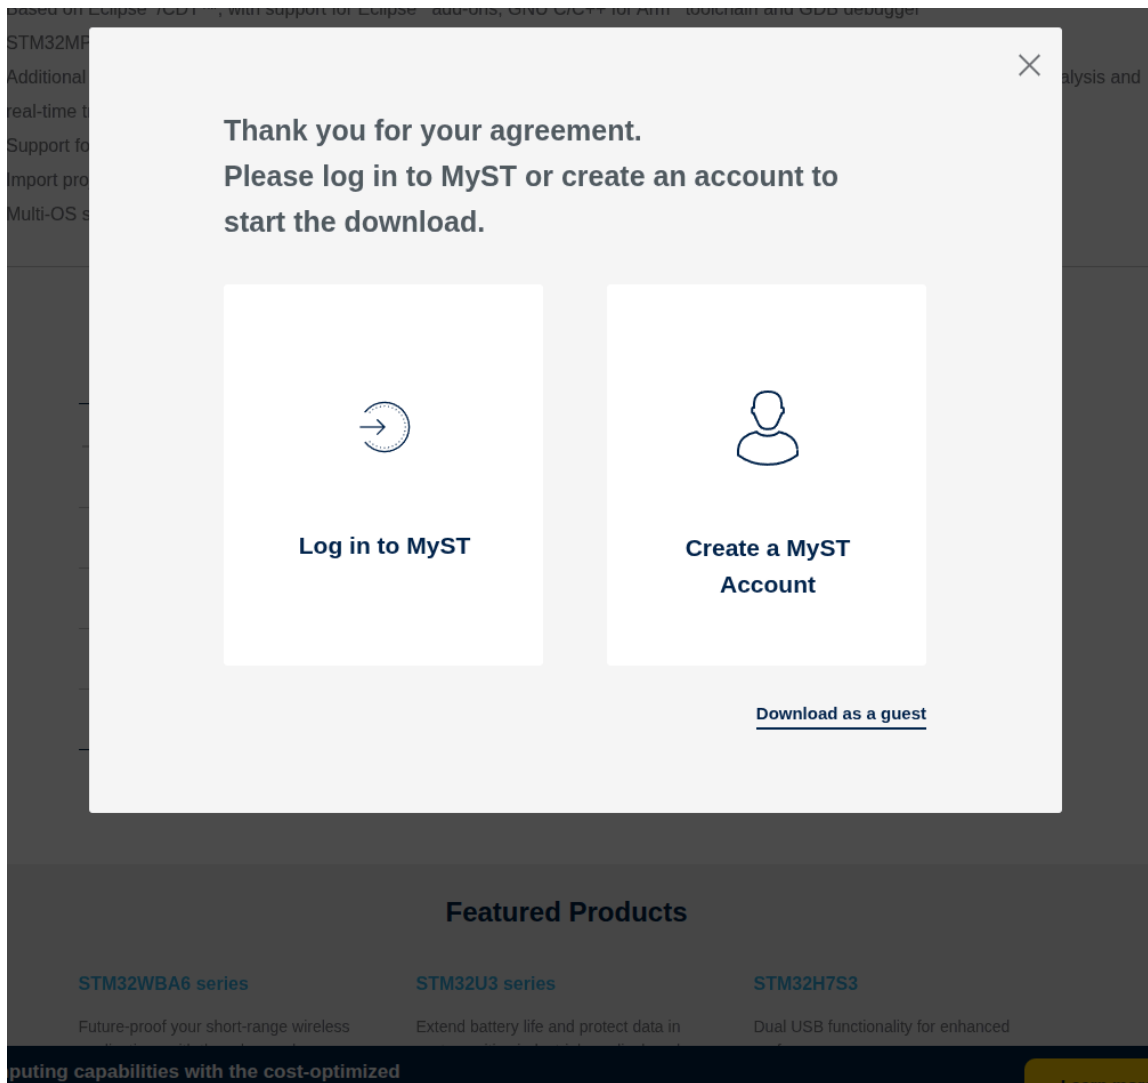


6. Once logged in, the download will begin.

2. Installing STM32CubeIDE

1. After the download completes, run the installer.
2. Follow the on-screen instructions to complete the installation process.
3. Launch **STM32CubeIDE** when prompted.

3. Selecting Your Workspace


1. On first launch, STM32CubeIDE will prompt you to **select a workspace directory**.
 - This is the folder where all your STM32 projects will be stored.
 - Choose a convenient location and click “**Launch.**”

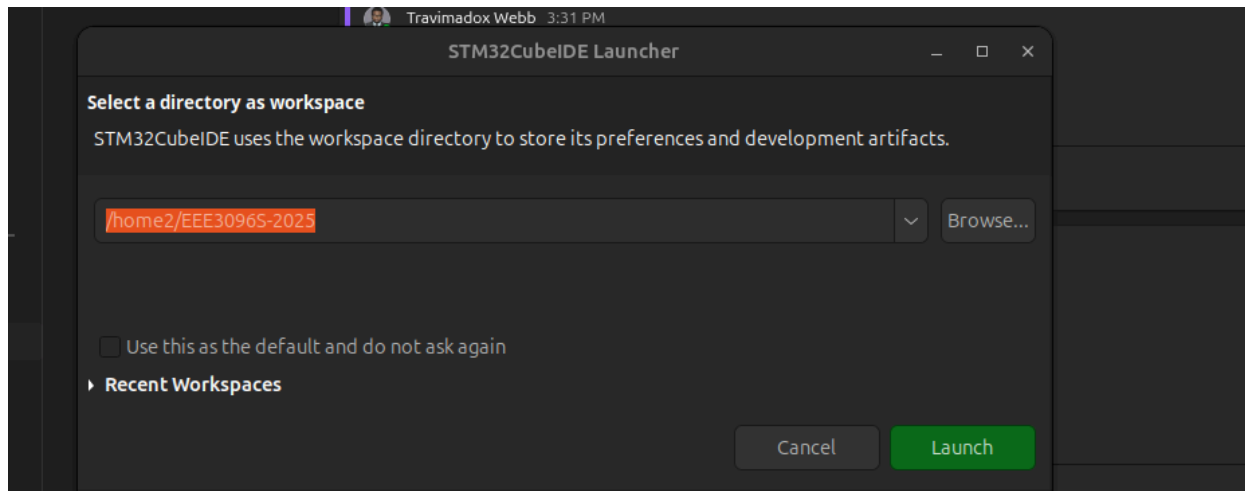

4. Sign In Within STM32CubeIDE

To access online resources and enable project setup support:

1. In STM32CubeIDE, go to the **top menu bar**:
 - Navigate to **Help** → **STM32Cube Updates** → **Connection with My ST Account**.
2. Log in using the **same credentials** you used during the download.

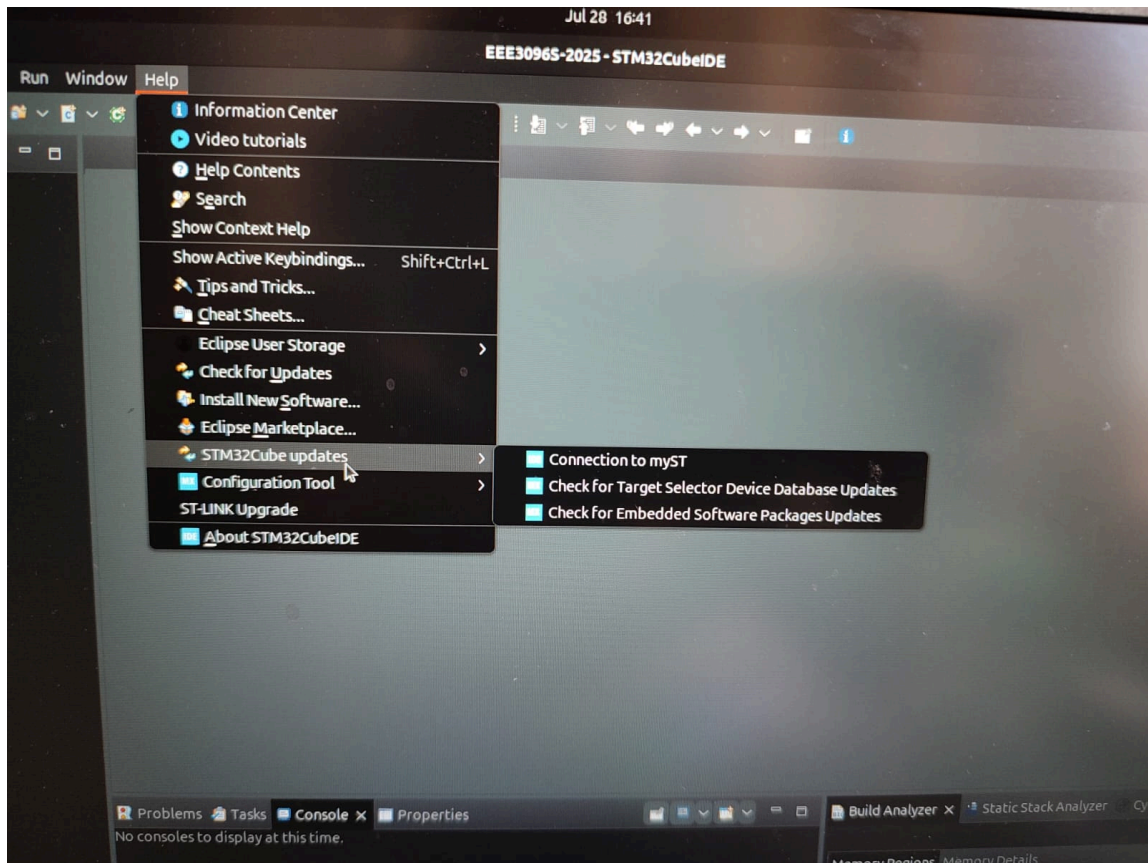

5. Upgrade ST-Link Debugger (Highly Recommended)

To enable proper flashing and debugging support for STM32 boards:

1. Connect your STM32 board to the PC via USB.
2. In STM32CubeIDE, go to:
 - **Help → ST-Link Upgrade.**
3. In the upgrade window:
 - Click **“Open in update mode”**.
 - You may be asked to **disconnect and reconnect the board**. Do so.
4. Once reconnected, click **“Upgrade”** to install the latest firmware for your ST-Link debugger.

