

-
-
-
-
-

Chapter 5

Production System Utilities



Maintain Company Profile



1/MDU

The Maintain Company Profile function is spread over many screens. Progress is made from one screen to the next by pressing **Enter**.

To maintain a different company, select **F16=Change Company**, before taking the Maintain Company Profile option. The system displays a window which lists all of the companies known to the system. Select the company you want, by entering a 1 next to it, and the system removes the window and changes to the company you selected.



Warning: If there is a Copy Company option within Utilities, JBA strongly recommend that you use this option to create a new company. You can use the Copy Company option to copy existing parameters and miscellaneous codes to your new company. You can amend these details using your maintenance and utility options.



Select Maintain Company Profile on the menu to display the Cost Element Management screen.

Cost Element Management Screen

This screen displays the current setting of the cost element profile.



Select Maintain Company Profile on the menu to display the Cost Element Management screen.

MS005		Z1 - GB Demonstration Company		USER GBJBAMS	5/12/95
Maintain Company Profile		14:16:16			
Company Code		Z1			
Cost Element Management					
Cost Element	Order	Add to	Roll to	Fixed	Description
1 Relief Costs	1	—			Relief Costs
2 Direct Material	2	—			Direct Material
3 Packaging	3	—			Packaging
4 Utility	4	—			Resource
5 Labour	5	—			Labour
6 Set-up	6	—			Set-up
7 Machine	7	—			Machine
8 Sub-Contract	8	—			Subcontract
9 Overhead 1	9	—			Overhead 1
10 Overhead 2 Fixed	10	—			Overhead 2 Fixed
11 Overhead 2 Variable	11	—			overhead 2 Variable
12 User 1	12	—	11	—	User 1
13 User 2	13	—	—		User 2
					1=fixed cost
F3=Exit					
10-27	SP	MM	KS	IM	II KENB20A PET166S2

Fields:

Cost

There are 15 numbered cost elements displayed in this column of fields. They are for your information only and cannot be amended.

Element

The names of 16 cost elements are displayed in this column. The first 11 are used by the system. You can define the User n cost elements, where n is from 1 to 4, by entering a description in the Description field. The last cost element is Shrinkage. These fields are for your information only and cannot be amended.

Order

This field is displayed for the 16 cost elements.

Enter a number to specify the order in which cost elements are presented in on-screen enquiries and reports. If no number is entered the cost element is not displayed or printed.

This facility allows you to report only those costs that are relevant to your business.



Note: All standard cost elements are calculated and are rolled up separately in re-costing routines.

Add To

This field is displayed for the 15 numbered cost elements.

By specifying an element number here, for example 02 (direct material) or 05 (labour), you specify which element the cost is accumulated into for enquiries and reporting.

The specified element must have an order sequence, and this element must not have an order number.



Note: The Order and Add To fields are mutually exclusive.

Using this facility, you can amalgamate different costs into a common reporting element.

The cost element is always calculated separately in re-costing routines, and recorded separately on the database, so you can report on it specifically at any time by changing the cost element presentation rules.

Roll To

This field is displayed for the four User n cost elements, where n is from 1 to 4.

It defines which standard cost element you wish to roll a user-defined cost into. This enables costs to be preserved for user-defined elements entered at a particular level.

If the field is left blank, user-defined costs are rolled up and totalled at each level. Therefore this cost definition is lost, except at the lowest level of a structure.

A warning message is displayed if this field is left blank.



Note: A special code 99 can be used to indicate a cost which should NOT be rolled into a higher level.

(User-defined costs are entered via Item Cost Maintenance and subsequently rolled up by item re-cost routines.)

Fixed

This field is displayed for the four User n cost elements, where n is from 1 to 4. It allows you to flag each user-defined element as a fixed or variable charge.

Enter a 1 if you want a user-defined cost to be fixed, and not modified by quantities or shrinkage on a production route. Leave blank if the cost varies with the material usage and batch volumes.

This feature allows you to distinguish between costs not directly related to production (e.g. design costs) and those that are (e.g. material handling).

Description

This field is displayed for the 16 cost elements.

A cost element description must be entered if you wish to report on this element. If you leave this field blank, the cost element is not reportable, although costs are always calculated for it. Your description is displayed against the cost, rather than the default element description, displayed on the left of the screen.

Any cost element with a description is available for data entry in Item Cost Maintenance.



Note: Only the visible cost elements (those which have an Order sequence entry) are accumulated to calculate the unit cost for the item.

Any element without a description is not reportable although costs are calculated for it.



Note: Costs for shrinkage cannot be maintained in Item Cost Maintenance. They are calculated separately by the system for each variable element from which a summary total is calculated for the shrinkage item.



Select Page Down to display the remaining cost elements.

MS005		Z1 - GB Demonstration Company		USER GBJBAMS	5/12/95
Maintain Company Profile		14:16:16			
Company Code		Z1			
Cost Element Management					
Cost Element	Order	Add to	Roll to	Fixed	Description
14 User 3	14	—	—	—	User 3
15 User 4	15	—	—	—	User 4
Shrinkage	—	—	—	—	Shrinkage
1=fixed cost					
F3=Exit					
10-27	SP	MM	KS	IM	II KENB20A PET166S2



Press **Enter** on the Cost Element Management screen to display the Database Options screen.

Database Options Screen

This screen is used to maintain planning and costing parameters.



Press **Enter** on the Cost Element Management screen to display the Database Options screen.

MS005		Z1 - GB Demonstration Company	USER GBJBAMS	5/12/95
Maintain Company Profile				14:16:50
Database Options				
Use Advanced Functions	1	(1=Yes)		
Time Units	2	(1=Hrs 2=Mins)		
Quantity Per Basis	2	(1=Per 1 2=Per std lot size)		
Duration Calculation	3	(1=W/S + Setting time)		
Basis (Default)		(2=Run labour + Setting Time)		
		(3=W/S + Run Labour + Setting Time)		
		(4=Greater of W/S or Labour + Setting)		
Allow Duplicate Items on				
Operation	1	(1=Yes)		
Hold Operation Costs	1	(1=Yes)		
Hold Costs With Shrinkage	1	(1=Yes)		
Reports Include Shrinkage	1	(1=Yes)		
Fixed Cost Amortisation Basis	1	(0=Lot size 1=EOQ)		
Derivation of Standards	0	(0=Routes 1=Production Orders)		
Production Control Method	0	(0=Both 1=Orders 2=Schedules)		
F3=Exit F12=Previous				
06-32 SF MW KS IM II KENB20A PET166S2				

Fields:

Use Advanced Functions

The options available at this flag depend on the level of software licensed to you. If Base functionality is licensed, this flag is not prompted; it automatically defaults to 0 (no) and cannot be maintained. If Extended functionality is licensed, this flag can be set manually to suit your operating requirements. You can enter the following options:

0 - No. To access Base function set. Costing elements associated with extended functions (Relief, Packaging, Utility) are not calculated.

1 - Yes. To access the Extended function set. This comprises all Base functionality plus the ability to control production using schedules in addition to or instead of production orders; for items: specify material types; set trigger tolerance; define a time fence policy; set stock run out policy, route and date; specify yield item; utilise lot balancing to control potency items; specify substitute items; define process routes with multiple outputs, plan production of similar major sequence order; and optionally, hold operation costs. This option also allows an interface with the QS quality control system. Multi-plant, Multi-Sourcing, and Cellular are only available within the extended function set.

Time Units

This indicates whether operation standards should be defined in hours or minutes. You can enter the following options:

1 - Hrs. For a standard time unit of an hour

2 - Mins. For a standard time unit of a minute

The field setting has no impact on cost centre or labour rates, or item and operator bookings, or work station down time, which always use hours.



Note: Costings in an environment scheduled in minutes are converted to hourly costs.

Quantity Per Basis

This is used in route maintenance to control the quantity basis of the process route. You can enter the following options:

- 1 - Per 1. For a lot size of one.
- 2 - Per Std Lot Size. To allow the entry of any batch size.



Note: Input and output quantities should be specified in terms of the specified parent batch size.

Duration Calculation Basis (Default)

Determines the method of calculating operational lead times. Operational lead time calculations and scheduling can be based on different elements of the operation cycle. You can enter the following options:

- 1 - W/S + Setting Time. Add machine and set up times.
- 2 - Run Labour + Setting Time. Add direct labour and set up times.
- 3 - W/S + Run Labour + Setting Time. Add machine, direct labour time and set up times.
- 4 - Greater Of W/S Or Labour + Setting. Use the greater of machine time or the sum of direct labour and set up times.

The value entered here is used as a default in the absence of an operation level code or a work station level code.



Note: The predominant pacing method should be defined as the default calculation method. This default value can be changed at work station and operation level.

Use O/S Operation Quantity

You can change the way in which production order duration / lead times are calculated here.

You can enter the following options:

- 0 - Off. Select this if you do not wish to use the outstanding operation quantity as a basis for calculating duration / lead times.
- 1 - On. Select this to use the outstanding order quantity in the calculation.
- 2 - On. Select this to use the current outstanding quantity at each operation as the basis of calculating duration / lead time.

Allow Duplicate Items On Operation

This flag indicates if the same input may be specified more than once at an operation on a production route.

This may be used to indicate that an item is required at different points in an operation process. You can enter the following options:

0 - No. To prevent this being allowed.

1 - Yes. To allow a particular input to be specified more than once on an operation.

Hold Operation Costs

You can enter the following options:

0 - No. To record item costs only.

1 - Yes. To allow costs to be recorded and displayed at each operation on a process route.



Note: Operation level costs can only be maintained if the system is running with Extended functionality.

Hold Costs With Shrinkage

You can enter the following options:

0 - No. To exclude shrinkage cost.

1 - Yes. To include shrinkage costs.

Inclusion means that the system incorporates the proportion of cost attributable to shrinkage in the total cost of the element.



Note: The shrinkage cost for each element is always held separately so that the cost can be consolidated if you require; this flexibility allows standard costs without shrinkage to be held for Inventory valuations, yet allows reporting on costs to include shrinkage so the effects of process efficiency and supplier quality on item costs can be analysed.

Reports Include Shrinkage

Cost enquiries and reports can be produced with or without the proportion of cost attributable to material and operational shrinkage for each element being included.

The setting defined here are used as the default when an enquiry or a report selection screen with an override option is displayed. For reports which print, or optionally print costs, but do not prompt for inclusion of shrinkage, the default set here is automatically applied.

You can enter the following options:

0 - No. To exclude shrinkage.

1 - Yes. For a default to include shrinkage.

Fixed Costs Amortisation Basis

Determines the method used to spread fixed production costs. in order to ascertain the effect of economies of scale on production unit costs.

Fixed costs may be amortised over the standard lot size or EOQ defined on the route.

You can enter the following options:

0 - Lot Size.

1 - EOQ. Economic Order Quantity.

Derivation Of Standards

You can enter the following options:

0 - Routes. When production is reported, standards are based on the route the order was built from.

1 - Production Orders. The production order standards are used. Non standard orders will always use order details.

If the item is schedule controlled, then for discrete route bookings, the planning route is used; for flow route bookings, the quoted route is used.

Production Control Method

Two production methodologies are available; production orders or schedules. However, the option to utilise schedules may only be taken if Extended functionality is licensed. Indicate the environment required: orders only, schedules only, both (mixed).

You can enter the following options:

0 - Both. For production orders and schedules.

1 - Orders. If planning is required by production order. This is the default and non maintainable setting for Base functionality.

2 - Schedules. If planning is to be made using schedules. This does not display Production Order Control options.

Inspection Policy Default



Note: This field is only available when 2 (Quality Control) is entered in the Inspection Req'd field on the third Item Maintenance field.

Quality System is standalone quality control software which has some links with this software. A QS inspection lot can be created for a QS controlled item when a works order is released or during operation booking. You can decide whether or not inspection lots can be created and, if they can, whether they are created through works order release or operation booking.

If 0 (No) is entered in the Use Advanced Functions field above, 0 and 1 can be entered in this field.

If 1 (Yes) is entered in the Use Advanced Functions field above, 0, 1 and 2 can be entered in this field.

You can enter the following in this field:

0 - None. This means that no inspection lots can be created for any items in this company, regardless of whatever else is configured.

1 - Order Release. Inspection lots are created when works orders are released. This is a company default and can be overridden for each item.

2 - Bookings. Inspection lots are created during operation booking. This is a company default and can be overridden for each item.



Press **Enter** on the Database Options screen to display the Planning Options screen.

Planning Options Screen

This screen is used to set planning parameters.



Press **Enter** on the Database Options screen to display the Planning Options screen.

MS005		E3 - Enterprise-Adu-with MPL		USER GBJBASCC		18/07/97	
Maintain Company Profile						11:57:13	
Planning Options							
Model to firm up MPS/MRP supply		01 (1=Yes)					
MPS/MRP Consume Forecast		0 (1=Yes)					
Confirmed Schedule Policy		- (0=Exclude, 1=Include)					
Lines per Transfer Order		1					
Capacity Basis Code		0 (0=Standard Lot Size, 1=Each, 5=Fixed)					
Model Structure Requirements							
Multi-plant Production		1 (1=Yes)					
Multi-sourcing		1 (1=Yes)					
Cellular Production		1 (1=Yes)					
Description Overrides							
Model Type 2		Plant / Production Plant					
Model Type 3		Cell / Production Cell					
Model Group		Site / Production Site					
Planning Basis 1		Multi-plant Network					
Planning Basis 3		Cellular Network					
F3=Exit F12=Previous							
5-35 SA MW KS CL IM DM II EDN400A KB PET165S2							

Fields:

Planning Options

Model To Firm Up MPS/MRP Supply

The MPS and MRP models can represent different views of your company's production plans. One model must be designated as the live planning model which suggests production orders to take into live production. Orders may only be confirmed into production from the designated live model. Only suggested purchase orders in the designated model can be converted into purchase order requisitions

MPS/MRP Consume Forecast

The consumption of forecast is the process of blending forecasts with orders to determine the MPS/MRP demand quantities. The method used for the comparison of sales forecasts and actual demand within the MPS/MRP review process is controlled by this option. You can enter the following options:

0 - No. Discrete comparison. This method compares the forecast for a period with the total demand in the same period. The greater of these is used as the demand quantity in the MPS or MRP supply and demand analysis.

1 - Yes. Cumulative comparison. This method compares the cumulative forecast at the end of each period and the cumulative actual demand to the same date. The greater of these is used.

Confirmed Schedule Policy

You can enter the following options:

- 0 - Exclude. Recalculate the whole MPS plan.
- 1 - Include. Include any confirmed manufacturing schedules in the plan.

Lines Per Transfer Order

You can enter the maximum number of lines allowed on each transfer order.

Capacity Basis Code

You can enter the following options:

- 0 - Standard Lot Size.
- 1 - Each.
- 5 - Fixed.

Model Structure Requirements



Note: If a company is configured as a plant model, it requires a lot of reconfiguring to change it back. For this reason, the decision to configure a company as a plant model must be made with great care.

Multi-Plant Production

Many plant models can be defined which can be planned independently or as a group governed by a central model. This is called Multi-Plant MPS/MRP.

You can decide whether or not to use Multi-Plant MPS/MRP. You can enter the following options:

- 0 - No.
- 1 - Yes.

Multi-Sourcing

Multi-Sourcing is when multiple supply options are defined at item or designated group level.

You can decide whether or not to use Multi-Sourcing MPS/MRP. You can enter the following options:

- 0 - No.
- 1 - Yes.

Cellular Production

Many cell models can be defined which can be planned independently or as a group governed by a central or plant model. This is called Cellular MRP.

This field is reserved for future use.

Description Overrides



Note: Plant models are often called different things in different environments. For example, words like facility, site and line may be used. You can decide which words are displayed when configuring the plant model by entering text

descriptions in the following fields.

Model Type 2

You can enter a short and a long text description in this field. This text description is displayed in the MPS Model Description screen and other screens across the production system. The system supplied default is 'Plant'.

Model Type 3

You can enter a short and a long text description in this field. This text description is displayed in the MPS Model Description screen and other screens across the production system. The system supplied default is 'Cell'.

Model Group

You can enter a short and a long text description in this field. The system supplied default is 'Site'.

Planning Basis 1

You can enter a text description in this field. The system supplied default is 'Multi-Plant Network'.

Planning Basis 3

You can enter a text description in this field. The system supplied default is 'Cellular Network'.



Press **Enter** on the Planning Options screen to display the first Production Order Options screen.

Production Order Options Screen 1

This screen and the next are used to maintain Production Control parameters.



Press **Enter** on the Planning Options screen to display the first Production Order Options screen.

MS005		Z1 - GB Demonstration Company		USER GBJBAMS	5/12/95
Maintain Company Profile					14:16:50
Production Order Options					
Order Number to be System Generated	1			(1=Yes)	
Last Order Number Used		100			
Allocation of Materials at Order Release	1			(1=Yes)	
Materials to be Issued at Order Release	-			(1=All ops.) (2=First op. only)	
Order Priority Default Value	5			(Blank=No) (Range 0-9)	
FIFO Receipt Costing Method	2			(1=Actual 2=Standard)	
Print Shop Documentation at Order Release	-			(1=Yes)	
Issuing / Printing Interactive or Batch	2			(1=Interactive 2=Batch)	
F3=Exit F12=Previous					
06-48 SF ML KS IM II KENB20A PET166S2					

Fields:

Order Number To Be System Generated

Production order numbers can be assigned manually or generated automatically by the system. An order number is a mandatory requirement. You can enter the following options:

0 - No. To manually enter numbers.

1 - Yes. For the system to assign a number to each new production order. Even if set to automatic, the system allows you to manually enter a number at the order creation point (as long as it is unique) if required.



Note: The system generated format is W999999, where 999999 is the next unused number.

Last Order Number Used

Indicates the last system-generated production order number. This field is for your information only and cannot be amended.

Allocation Of Materials At Order Release

Material requirements for production orders can be allocated at the point of order release. This produces an allocation in Inventory Management for the items. When the items are actually issued the physical and allocated stock is reduced. You can enter the following options:

- 0 - No. For no allocation,
- 1 - Yes. To allow allocation.

Warehouse Issue Requirements At Release



Note: This field is only used if the Warehouse Applications module is active.

Requirements for warehouse controlled items may either be passed in total to the Warehouse application at order release, or requested manually in stages as required. This field may be overridden for a specific order at the point of release. You can enter the following options:

- 0 - For warehouse requirements to be raised manually. Use only if the Warehouse application is installed.
- 1 - To generate warehouse requirements automatically at order release.



Note: Subsequent fields on this and other screens may or may not be displayed, depending on what is entered in this field.

Materials To Be Issued At Order Release

When releasing a production order, it is possible to automatically issue all materials other than warehouse controlled and backflushed inputs at the same time. The system issues planned quantities to make the order quantity. This flag sets the default policy but may be overridden for a specific order at the point of release. You can enter the following options:

- (Blank) - No. No automatic issue.
- 1 - All Ops. For inputs to be issued to all operations on the order.
- 2 - First Op Only. For material to be issued to the first operation only.



Note: 1 or 2 reduces the number of material booking transactions that need to be made.

The issue quantity is the planned quantity of material needed to make the order batch quantity. This may give rise to negative stock; the Stock Availability report indicates if this has happened.

Order Priority Default Value

Every released order has a priority number (0 highest to 9 lowest) which is used for sequencing in machine loading enquiries and reports. The default value entered here can be overridden at any time for an order between its release and its completion.

FIFO Receipt Costing Method

You can enter the following options:

- 1 - Actual.
- 2 - Standard.

Print Shop Documentation At Order Release Time

Enables you to set the system default for printing order documentation automatically as part of the release procedure. Order documentation comprises work instructions (entered via Routes/Structures and Order Maintenance) and pick lists.

The type of documentation is controlled by the Print Work Instructions and Print Pick Lists flags on a subsequent screen.

This flag may be reset for a specific order when it is released.

You can enter the following options:

0 - No.

1 - Yes. For a default of automatic printing.

Issuing/Printing Interactive Or Batch

Order documentation can be generated interactively or produced as a batch job. This flag cannot be maintained at any other point in the system. You can enter the following options:

1 - Interactive. For shop documentation to be printed interactively to a dedicated printer.

2 - Batch. For batch printing.



Note: When defining the Company Profile for the first time in a new company, all the fields on this screen are blank.

Initially the user is asked if automatic numbering of Production Order is required. If yes, then provision is made for the input of the first number. This option is NOT available on subsequent visits to this screen.



Press **Enter** on the first Production Order Options screen to display the second screen.

Production Order Options Screen 2

Additional production order options. This screen is not accessible if the Production Control Method is set to schedules only.



Press **Enter** on the first Production Order Options screen to display the second screen.

MS005		Z1 - GB Demonstration Company		USER GBJBAMS	5/12/95
Maintain Company Profile					14:16:50
Production Order Options					
Print Work Instructions		<u>0</u>	(1=Yes)		
Print Text on Work Instructions		<u>0</u>	(1=Yes)		
Print Pick Lists		<u>0</u>	(1=Yes)		
Suppress Backflush Items on Pick List		<u>-</u>	(1=Yes)		
Order Archive:	Print Variance Report for Purged Orders	<u>1</u>	(1=Yes)		
	Archive Operations Bookings History	<u>0</u>	(1=Yes)		
	Archive Stores History	<u>0</u>	(1=Yes)		
F3=Exit F12=Previous					
06-65	SF	ML	KS	IM	II KENB20A PET166S2

Fields:

Print Work Instructions

Sets the system default for the printing of work instructions. Work instructions print for each production order operation; the order's revision level, receiving stockroom, schedule quantity, UOM, planned work station, operation description and the order and operation completion dates.

Additional text may be printed depending on the setting of the Print Text on Work Instructions flag. You can enter the following options:

0 - No. Do not print work instructions.

1 - Yes. Print work instructions.

Print Text On Work Instructions

Indicates whether or not extended operation should be included together with standard information when work instructions are printed. You can enter the following options:

0 - No.

1 - Yes. Print operation text.

Print Pick Lists

You can enter the following options:

0 - No. Do not to print pick lists.

1 - Yes. Print pick lists.

Suppress Backflush Items On Pick List

Backflushed items may be excluded from printing on pick lists or they may be shown. You can enter the following options:

0 - No. Print backflush items.

1 - Yes. Exclude backflushed items.

Suppress Warehouse Items On Pick List



Note: This field is only used if the Warehouse Applications module is active.

Warehouse controlled items may be excluded from printing on the pick list or they may be shown. Documentation produced by the Warehouse application relating to production orders is not affected by this option, which refers production pick lists. You can enter the following options:

0 - No.

1 - Yes. Suppress printing of Warehouse controlled items.

Order Archive

Print Variance Report For Purged Orders

This report shows variances between planned and actual bookings on archived orders. You can enter the following options:

0 - No.

1 - Yes. Produce a variance report for every production order that is archived.

Archive Operations Bookings History

All booking movement records can be deleted when the production order is archived, or may be retained in the archive file. You can enter the following options:

0 - No. Do not create an archive. All operation bookings are removed from the system.

1 - Yes. Create an archive file of operation bookings and delete the live operations history file.

Archive Stores History

All material movement transaction records can be deleted when the production order is archived or can be retained in the archive. You can enter the following options:

0 - No. Do not archive material movements. All production order material transactions are deleted.

1 - Yes. To archive order material movements.



Press **Enter** on the second Production Order Options screen to display the Text Types screen.

Text Types Screen

Text can be maintained for several Production entities: items, process routes, operations, work stations and work centres, and production orders. Text is grouped in families. Each family is identified by a major type code and description. Each member of the family is identified by a sub-type code and description.

This function is used to specify the major type code and default sub-type code for each entity and to specify default text types to be used on maintenance and enquiry displays.



Note: Text types and text are maintained from text management options in Production Definition Management.



Press **Enter** on the second Production Order Options screen to display the Text Types screen.

```

MS005                Z1 - GB Demonstration Company    USER GBJBAMS    5/12/95
Maintain Company Profile                                14:16:50

Text Types

Enter the text type to be accessed from the following functions. The sub-type
may optionally be left blank for selection at the time of text entry/review.

Function            Major Type            Sub-Type
Item Code           ITEM                  IC1
Route               ROUT                 RT1
Operation           OPER                 OP1
Work Station        WSTN                 WS1
Cost Centre         CSTC                 CC1
Work Centre         WCEN                 WC1
Production Order    WORD                 WO1

F3=Exit  F12=Previous
11-22    SF    MW    KS    IM    II  KENB20A  PET166S2
  
```

Fields:

Function

This column of fields displays the function names, as follows:

- Item Code.
- Route.
- Operation.
- Work Station.
- Cost Centre.
- Work Centre.
- Production Order.

These fields are for your information only and cannot be amended.

Major Type

Specify the active major type for this entity. If you create text with text maintenance, this major type is referenced as the key to the text.

Sub-Type

Specify the default sub-type text for this function. When you create text in text management, this sub-type is referenced.



Press **Enter** on the Text Types screen to display the Calendar Parameters screen.

Calendar Parameters Screen

This screen is used to maintain the default calendar code, and the default working week template to be used in calendar creation. You can also define and describe your operating periods.



Press **Enter** on the Text Types screen to display the Calendar Parameters screen.

```

MS005                Z1 - GB Demonstration Company    USER GBJBAMS    5/12/95
Maintain Company Profile                                14:16:50

Calendar Parameters

Calendar Code          01
Number of Periods per Year  13

Period Name    Days    Period Name    Days    Period Name    Days
1. JANUARY      35      2. FEBRUARY    28      3. MARCH        28
4. APRIL        35      5. MAY         28      6. JUNE         28
7. JULY         35      8. AUGUST      28      9. SEPTEMBER    28
10. OCTOBER     28     11. NOVEMBER   28     12. DECEMBER    28
13. 13          7

Standard week template

M T W T F S S
- - - - - 1 1      (Blank for working day or non-blank for non-working day)

F3=Exit  F12=Previous
07-32    SF    MW    KS    IM    II KENB20A PET166S2
  
```

Fields:

Calendar Code

Specify the default calendar code to be used to perform scheduling and to validate working days.



Note: The calendar detail for this code is maintained in the Calendar Maintenance procedure; for a new company this should be done as soon as the company has been created.

Number Of Periods Per Year

Specify up to 13 periods. These are used to establish the relationship between periods and weeks when building calendars.

Period Name

Name the periods to reflect your reporting nomenclature.

Days

Specify the number of days in each period.



Note: Since forecast entry routines allow period, weekly and daily forecasts the number of days in each period must be divisible by 7 and the

maximum number of days in a period is 98.

If the total days is not 364 or 371 the system, you must confirm by selecting **F5=Refresh**.

The number of days specified for each period is used to calculate the total number of days available in the year. The working days are measured against the total. By printing out the calendar the effects of using period days can be seen. See Calendars on the Production Definition Management menu.

Standard Week Template

This specifies the default working week template which defines working and non working days. It can be overridden when a new calendar is created.

Enter any character for a non-working day.



Press **Enter** on the Calendar Parameters screen to display the User Profile Authorisation Options screen.

User Profile Authorisation Options Screen

Authorisation classes are supplied to enable user profiles authority to manipulate, or view data. This supplements task authorities, controlling data at company level. This screen is used to configure the production stages which need an authorisation. The existing set of authorisation classes are :-

Model Maintenance/Submission

The ability to maintain/submit planning and organisational models. The authority level is planning unit.

Confirm MPS/MRP Suggestions

The ability to confirm planning suggestions for work orders and item schedules. The authority level is planning unit.

Planner Control

The ability to confirm planning suggestions for work orders and item schedules. The authority level is planner code.

Create MPS/MRP Requisitions

The ability to create requisitions for suggested purchase and transfer orders. The authority level is planning unit.



Press **Enter** on the Calendar Parameters screen to display the User Profile Authorisation Options screen.

```

MS005          E3 - Enterprise-Adv-with MPL      USER GBJBASCC  18/07/97
Maintain Company Profile                          12:10:00

User Profile Authorisation Options

Authorisation Class      Active Master View Authority
MODEL_CNTL Model Maintenance/Submission  1  QSECOFB  (1=Yes) User Profile (1=Yes)
PLANR_CNTL Planner Control  1  QSECOFB  -
POREQ_CNTL MPS/MRP Confirm Requisitions  1  QSECOFB  -
PRODN_CNTL MPS/MRP Confirm Production  1  QSECOFB  -

POSITION TO CLASS: _____ Bottom
F3=Exit F12=Previous

8-13  SA  MW  KS  CL  IM  DM  II  EDN400A  KB  PET165S2
  
```

Fields:

Authorisation Class

A list of authorisation classes are automatically displayed with text descriptions. You can amend the text description if 1 is entered in the Active field.

Active

For each authorisation class, you can enter the following options:

0 - No. This is the default.

1 - Yes.



Note: If 1 is entered in the Active field, a text description must be entered in the Authorisation Class field.

Master User Profile

For each authorisation class, you can enter the master user profile. This profile has total authority to the data controlled by the class.

View Authority Required

This field is only displayed if applicable to the class. If set, users will need to be authorised to view the data controlled by the class. If not set, users can view the data controlled by the class without specific authorisation. For each authorisation class, you can enter the following options:

0 - No.

1 - Yes.



Press **Enter** on the User Profile Authorisation Options screen to display the Maintain Organisational Model screen.

Maintain Organisational Model Screen

The organisational model defined in this screen can be entered in the Model To Firm Up MPS/MRP Supply field on the Planning Options screen. This then links the planning model to the organisational model.

This screen contains the same fields as those on the second Maintain Organisational Model screen. For more information, see the Maintain Organisational Model menu option.



Press **Enter** on the User Profile Authorisation Options screen to display the Maintain Organisational Model screen.

DB241	E3 - Enterprise-Adu-with MPL	User	GBJBASCC	18/07/97 12:10:44
Maintain Organisational Model				
Model..... CM	Description..	Central Model		
Scrap Reason Code.....?	SC	Transaction Number.....		
Hold Reason Code.....?	QI	Movement Authority Code...		
Subcontractor Stockroom.....?	EG	Shipper Number.....		
Time Reporting Policy.....?	Q	Count Reporting Policy..?	Q	
Quantity Reporting Policy.....?	Q			
Shipper Tracking.....	1			
Held Inventory Tracking.....	1	(0=No, 1=Yes)		
WIP Lot Tracking.....	1	(0=No, 1=Yes)		
Generate Cost Recovery.....	1	(0=No, 1=Yes)		
Backflush Material Usage				
Including Shrinkage.....	1	(0=No, 1=Yes)		
Backflush Operation Times				
Including Shrinkage.....	1	(0=No, 1=Yes)		
Time Booking Policy.....	Q	(0=Decimal Hrs, 1=HH.MM)		
F3=Exit F4=Prompt F8=Update F11=Delete F12=Previous				
5-36	SA	MW	KS	CL IM DM II EDN400A KB PET165S2

Fields:

Model

Description

Scrap Reason Code

Transaction Number

Hold Reason Code

Movement Authority Code

Subcontractor Stockroom

Shipper Number

Time Reporting Policy

Count Reporting Policy

Quantity Reporting Policy

Shipper Tracking

Held Inventory Tracking

WIP Lot Tracking

Generate Cost Recovery

Backflush Material Usage Including Shrinkage

Backflush Operation Times Including Shrinkage

Time Booking Policy



Select **F8=Update** to validate the data you have entered and display the Cost Element Management screen.

Maintain MPS Model Stockrooms



2/MDU

You can decide which stockrooms are part of which model type. The stockrooms define the scope of the planning model in terms of the stockrooms to be considered. The review process for the model only includes:

- Items which are associated with stockrooms in the list.
- Supply and demand associated with stockrooms in the list.



Note: The model must include all WIP locations and floor stock stockrooms for consideration in the planning run. If plant models are planned centrally, the WIP locations can be defined at central model only. Floor stock stockrooms must be defined at plant level if applicable.

This means you can plan items which are produced in more than one place and restrict the supply and demand analysis to selected sites.



Select Maintain MPS Model Stockrooms on the menu to display the first MPS Stockroom Model Maintenance screen.

MPS Stockroom Model Maintenance Screen

1



Select **Maintain MPS Model Stockrooms** on the menu to display the first MPS Stockroom Model Maintenance screen.

Fields:

Model

You can enter a model for which you wish to maintain the list of stockrooms.

A model uses all defined stockrooms to provide an all-encompassing review of your MPS items, considering all supply and demand for them.

Based On Model

You can enter the name of a model in this field. Any stockrooms defined for this model are copied into the model being edited.

This Model must be already set up in **Maintain MPS Model Stockrooms** or **Maintain MRP Model Stockrooms**.

The existing model details are copied to the new code, and can be maintained here. Leave blank to create a model from scratch.

Or All Stockrooms

If you do not want to copy the stockrooms for a model into the model being edited, you can decide whether or not to copy all of the stockrooms into the model.

You can enter the following options:

0 - No. To specify stockrooms manually on the second screen. This is the default.


1 - Yes. Enter this option to copy all the stockrooms into the selected model to be edited.



Press **Enter** on the first MPS Stockroom Model Maintenance screen to display the second screen.



Select **F8=Update** to add a new model code.

**Fields:**

This field is for your information only and cannot be amended.

The model selected on the first screen is displayed in this field. This field is for your information only and cannot be amended.

The option entered on the first screen is displayed in this field. This field is for your information only and cannot be amended.

A text description of the selected model is automatically displayed in this field. Up to 30 characters of text can be amended.

There are 112 fields, arranged in 8 columns and 14 rows. The stockrooms associated with the selected model are automatically displayed in these fields. You can amend or delete the existing stockrooms and add new stockrooms to the list. The stockroom must be unique to the plant if you are set up for multi-plant (i.e. the model type is 2).



For Multi-Plant, Cellular, and Multi-Sourcing, select **F18=Additional Parameters** on the second MPS Stockroom Model Maintenance screen to display the Additional Parameters window.



Select **F8=Update** to validate the data you have entered and display the first MPS Stockroom Model Maintenance screen.

Functions:

F8

Update/Add. If maintaining an existing model, select this function to save any changes made to the model. If entering a new model code, select this function to add a model and enter a range of stockrooms; or edit a list created by the All Stockrooms field.

F18

Additional Parameters. Select this function to display the Additional Parameters window. This function is for Multi-Plant, Cellular, and Multi-Sourcing only.

MPS Additional Parameters Window 1 (F18)



For Multi-Plant, Cellular, and Multi-Sourcing, select **F18=Additional Parameters** on the second MPS Stockroom Model Maintenance screen to display the Additional Parameters window.

MP016	E3 - Enterprise-Adu-with MPL	USER GBJBASCC	18/07/97 12:18:04
Additional Parameters		MPS Model : P3 Plant 3 - London	
		Production Calendar: 01	
Model Type.....?	☒ Production Plant		
Execution Level...?	☒ Centralised Plan and Execution		
Primary Stockroom.?	☒ FG SR P3-LON		
Business Unit.....?	_____		
Site.....?	_____		
F3=Exit F4=Prompt F12=Previous F15=Model Primary Stockrooms F16=Organisational Model F18=Additional Parameters			
6-25 SA MW KS CL IM DM II EDN400A KB PET165S2			

Fields:

Model Type

Three different model types can be defined. You can enter the following options:

0 (or blank) - Standard (The default model type). Many standard models can be defined, only one of which can confirm suggestions (i.e. the designated live model on the company profile). A standard model can reflect the whole organisation, where production item master planning policies determine the supply method used to satisfy demand. Valid planning basis options are:

- Standard

1 - Central. Many central models can be defined, only one of which can confirm suggestions (i.e. the designated live model on the company profile). A central model can reflect the whole organisation where, if appropriate, plant model types can be defined to sub-set the organisation stockrooms into unique production locations. Alternatively, the single organisation structure of the standard model can be adopted.

Sourcing rules can be defined for both organisation structures, where multiple supply choices are applicable. For example, where an item can be produced on more than one line, or where an item can be manufactured and purchased. The supply decision is governed by the chosen sourcing rules criteria. Valid planning basis options are:

- Standard.

- Multi-Plant Network.
- Single Unit Sourcing.



Note: If plants are to be planned as part of a central model, ensure that each required plant stockroom is defined to the central model stockroom definition..

2 - Plant. Many plant models can be defined to confirm suggestions. Plant models can be defined to reflect a unique sub-set of the organisation (unit, line, etc.). They can be planned autonomously, or centrally as part of the central model. Valid planning basis options (if planned autonomously) are:

- Standard.
- Single Unit Sourcing.



Note: A stockroom can be defined to only one plant model.



Note: A plant model type uses stockrooms to determine which plant produces which items. For this reason it is very important that the model stockroom screen is configured correctly.

Execution Level



Note: This field is only applicable for plant models.

When configuring the plant model, you can decide where and how to firm suggested orders using this field. You can enter the following options:

0 - Simulation (Not Live).

1 - Autonomous Plan And Execution. Enter this option to define the plant model as autonomous. Plan submission and suggested supply confirmation are controlled independent of a central model.

2 - Centralised Plan And Execution. Enter this option to define the plant model as centralised. Plan submission and suggested supply confirmation are controlled by the central model, where multiple plants can be planned during one MPS run.

This Model Plan And Execution Level must be already set up in major type LPLT. For more information see Maintain Parameters.

Primary Stockroom



Note: This field is only applicable for plant models.

You can enter the name of a stockroom in this field. This is the primary stockroom.

This non item-specific primary stockroom enables the most common stockroom (which, in MPS, may be the finished goods receiving stockroom) to be defined as the primary for a range of items. Exceptions to the rule can be defined via the Maintain Model Primary Stockrooms screen, or via the Generate Model Primary Stockrooms screen. The primary stockroom is used to determine:

- Default item overrides (Defined via the Maintain Item Overrides screen). If no default overrides are defined, the item master planning parameters will be used.

- The planning route, where the receiving stockroom of a route level planning route equals the primary stockroom. If an item stockroom planning route is not defined, the item master planning route will be used.
- A suggested purchase orders supply stockroom.

This primary stockroom is only considered if no item model primary stockroom is defined via the Maintain Model Primary Stockrooms screen, or via the Generate Model Primary Stockrooms screen. If a primary stockroom is not defined for an item at this level, then the following hierarchical sequence is observed:

- Item master primary stockroom. Entered on the first production details screen.

This Stockroom must be already set up in Stockroom Details.

Business Unit

This field is a memo field.

This Business Unit Code must be already set up in major type BUCS. For more information see Maintain Parameters.

Site

This field is a memo field.

This Site Code must be already set up in major type STES. For more information see Maintain Parameters.



Press **Enter** or select **F12=Previous** on the Additional Parameters window to display the second MPS Stockroom Model Maintenance screen.



Select **F15=Maintain Model Primary Stockrooms** on the first Additional Parameters window to display the Maintain Model Primary Stockrooms screen.



Select **F16=Organisational Model** on the Additional Parameters window to display the second Maintain Organisational Model screen.



Press **F18=Additional Parameters** on the first Additional Parameters window to display the second screen.

Functions:

F15

Maintain Model Primary Stockrooms. This function is only applicable if the Model Type field is set to 2 (plant), and enables you to select stockrooms at item level.

F16

Organisational Model. You can configure the organisational model for a plant model (i.e. Model Type is 2). Select this function to display the second Maintain Organisational Model screen. For more information, see Maintain Organisational Model.

F18

Additional Parameters. Select this function to display the second Additional Parameters window.

Maintain Model Primary Stockrooms Screen (F15)



Select **F15=Maintain Model Primary Stockrooms** on the first Additional Parameters window to display the Maintain Model Primary Stockrooms screen.



Note: This function is only applicable to plant model types i.e. the model type is 2 (plant).

```

DB578                E3 - Enterprise-Adv-with MPL        USER GBJBASCC  18/07/97
                                      12:16:17

Maintain Model Primary Stockrooms

Plant.....: P1 Plant 1 - Manchester        Position to Item: _____

0 Item ?
■ BELT                A-Seatbelt Belting              D1 Depot for P1
- CAR                 A-Car                            D1 Depot for P1
- CHASSIS              A-Chassis                       D1 Depot for P1
- COMPUTER             Computer - Main Assembly        D1 Depot for P1
- CPU                  CPU Assembly - Level 1           D1 Depot for P1
- DASHBOARD            A-Dashboard                     D1 FG SR P1-MCR
- DASHCLOCK            A-Clocks                        D1 Depot for P1
- DASHRADIO            A-Radio/CD                     D1 Depot for P1
- DASHSPEEDO           A-Odometer                     D1 Depot for P1
- KEYBOARD             Keyboard assembly - Level       D1 Depot for P1
- MONITOR              Monitor Assembly - Level 1      D1 Depot for P1
- PACKAGING            Packing Materials for Comp      D1 Depot for P1

4=Delete                                     More...
F3=Exit  F4=Prompt  F5=Resequenece  F8=Update/Add  F12=Previous

----- 9-2  SA  MW  KS  CL  IM  DM  II  EDN400A  KB  PKH318S1 -----
  
```

Fields:

Plant

This field displays the name of the selected plant. This field is for your information only and cannot be amended.

Position To Item

You can select the item to move the cursor to by entering the first letter of the item's name in this field.

O

Option. This field only appears on lines which hold item details. You can enter the following options:

4 - Delete. Enter this option to delete the item from the list.

Item

If an item name is displayed in this field, this field is for your information only and cannot be amended. The item names are listed in alphabetical order.

Under the list of item names, a list of empty fields is displayed. You can enter item names in these fields. You also enter a stockroom in the Primary Stockroom field, then select **F8=Update/Add** to add the item to the list. This Item must be already set up on the system.

Primary Stockroom

You can enter the name of a stockroom in this field. The primary stockroom is used to determine:

- Default item overrides (Defined via the Maintain Item Overrides screen). If no default overrides are defined, the item master planning parameters will be used.
- The planning route, where the receiving stockroom of a route level planning route equals the primary stockroom. If an item stockroom planning route is not defined, the item master planning route will be used.
- A suggested purchase orders supply stockroom.

If a primary stockroom is not defined for an item at this level, then the following hierarchical sequence is observed:

- Model primary stockroom. Entered on the model stockroom additional details panel.
- Item master primary stockroom. Entered on the first production details screen.

When a stockroom is entered in this field, a text description is automatically displayed beside it.

This Stockroom must be already set up in Stockroom Details.



Select **F8=Update/Add** to add items to the list, validate the data you have entered and display the first MRP Stockroom Model Maintenance screen.

Functions:

F5

Resequence. Select this function to resequence the items into alphabetical order.

F8

Update/Add. Save amended or new details

Additional Parameters Window 2 (F18)

If multiple planning units are planned by a central run model, the parameters stated in this screen are extracted from the individual unit definitions.



Press **F18=Additional Parameters** on the first Additional Parameters window or the second MPS Run Options screen to display the second Additional Parameters window.

```

MP017          E3 - Enterprise-Adv-with MPL          USER GBJBASCC  18/07/97
                                           12:20:31
Additional Parameters  MPS Model      : P1 Plant 1 - Manchester
                       Production Calendar: 01                      (1 of 2 )

Planning Basis..... ■  0 = Standard
                        1 = Multi-plant Network
                        2 = Single Unit Sourcing

Planning Unit Parameters
Use Item Time Fence..... - (1=Yes)
Use Item End Date..... - (1=Yes)
Dependent Requirements Basis..... - (0=Suggested, 1=Firm)
Forecast Basis..... - (0=Daily, 1=Period)
Confirmed Schedule Policy.....? - Exclude

(If multiple planning units are planned by a central run model, the
parameters stated above are extracted from the individual unit definitions.)

F3=Exit  F4=Prompt  F8=Update  F12=Previous  F15=Inter-Model Extract

-----
6-37      SA      MW      KS  CL  IM  DM  II      EDN400A  KB  PKH318S1
  
```

Fields:

Planning Basis

This entry indicates the planning basis for the run. The three options are defined in the system parameter PBAS. You can enter the following options:

0 - Standard.

1 - Multi-Plant. (Multi-Plant Network.) This basis allows multiple plants to be planned in one MPS run, enabling interrelationships between items in those plants. Items can have unique demand and supply parameters in each plant, where stock can be purchased, manufactured, or transferred from another production location in order to satisfy demand. Each source type (Purchase, Manufacture, Transfer) can have a unique supply batch size defined.



Note: This Planning Basis is available for central models where multi-plant is defined as a requirement on the production company profile.

2 - Multi-Sourcing. Single Unit Sourcing. This basis allows multiple supply options to be considered within the confines of a single planning unit. If an autonomous plant is planned where a demand cannot be satisfied locally, a suggested transfer order can be raised to obtain the stock from another planning unit. Each source type (Purchase, Manufacture, Transfer) can have a unique supply batch size defined.



Note: This Planning Basis is available for central models where multi-sourcing is defined, or plant models where multi-plant and multi-sourcing are defined as requirements on the production company profile.

Planning Unit Parameters

Use Item Time Fence

In preference to a global time fence, a time fence based on each items production lead time (This Level) as calculated on the Item Master file may be used. You can enter the following options:

0 - No. Use global time fence entered for run.

1 - Yes. Use item time fence.

If no lead time exists for the item, the run time fence is used.

Use Item End Date

In preference to a global end date for the review of each item, an end date based on each items cumulative lead time may be used. You can enter the following options:

0 - No. Use end date entered for run

1 - Yes. Use individual Item end dates

If a cumulative lead time has not been calculated for the item, the run end date is used. The item end date is calculated as:

Current Date + Cumulative Lead time + Safety Lead Time

For non-production items, the purchasing lead time is used for both the manufactured and cumulative lead times.

Dependent Requirements Basis

Indicates on what basis dependent demand is calculated. You can enter the following options:

0 - Suggested. Use only the suggested parent item quantities to determine dependent demand. That is, suggested orders and schedules and suggested changes to existing orders and schedules.

1 - Firm. Use only firm quantities, irrespective of any suggested changes to the parent item quantity of existing orders and schedules.

Forecast Basis

This option determines the date to be used as the demand date on extracted forecasts. You can enter the following options:

0 (or blank) - Daily. Use the forecast date.

1 - Period. Use the end date of the forecast.

Confirmed Schedule Policy

This field defaults to the value in the Confirmed Schedule Policy field on the Planning Options screen. You can enter the following options:

0 - No. Recalculate the whole MPS plan.

1 - Yes. Include any confirmed manufacturing schedules in the plan.



Note: If a value is not entered for this policy, the setting on the company profile is used.



Press **Enter** on the second Additional Parameters window to display the third screen.



Select **F8=Update** on the second Additional Parameters window to validate the data and display the first screen, or the second MPS Run Options screen.

Additional Parameters Window 3

The parameters stated in this screen are only considered by the quoted run model.



Press **Enter** on the second Additional Parameters window to display the third screen.

MP017	E3 - Enterprise-Adv-with MPL	USER GBJBASCC	18/07/97 12:21:20
Additional Parameters MPS Model : P1 Plant 1 - Manchester		(2 of 2)	
Production Calendar: 01			
Run Model Parameters			
Review Demand.....	☒	(1=Yes)	
Daily Summaries For Co-products..	☐	(1=Yes)	
Forecast Netting Basis.....	☐	(0=Central, 1=Planning Unit, 2=Both)	
Multi-sourcing Basis.....	☐	(0=Ignore, 1=Central+Plan.Unit, 2=P.Unit)	
Save Critical Resource Load.....	☐	(1=Yes)	
Critical Resource Load Policy...	☐	(0=Refresh, 1=Alternative Model Profile, 2=Alternative Model With Update)	
Alternative Resource Model.....	☒		
(The parameters stated above are only considered by the quoted run model.)			
F3=Exit F8=Update F12=Previous			
7-36	SA	MW	KS CL IM DM II EDN400A KB PKH318S1

Fields:

Run Model Parameters

Review Demand

This enables a review of the calculated demand before it is translated to production schedule. You can enter the following options:

0 - No. The MPS Processing run is not interrupted to allow the review and maintenance of the calculated demand.

1 - Yes. The MPS Processing run is interrupted to allow the review and maintenance of the calculated demand. Following review of the demand the run needs to be resumed with the Resume MPS option.

Daily Summaries For Co-Products

This is relevant only if you use concurrent co-product planning.

If you are using co-product planning, then every day the system produces a supply/demand summary for each item involved - both the co-product and other items in the process group. You can enter the following options:

0 - No. Do not include co-product summaries in the MPS review.

1 - Yes. Include co-product summaries in the MPS review.

Forecast Netting Basis



Note: This field can only be used if the Planning

Basis is 1 (Multi-plant).

You can enter the following options:

0 - Central. Only forecasts for the central model will be extracted into the plan. These forecasts will be netted against independent and dependent demand at central model level (subject to an item's demand policy).

1 - Planning Unit. Only forecasts for the individual planning units (plants) will be extracted into the plan. These forecasts will be netted against independent and dependent demand at planning unit level (subject to an item's demand policy).

2 - Both. As the description suggests, policy 0 and 1 are both applicable with this setting. The existence of a central forecast for an item planning unit combination determines which basis is used. A central forecast determines policy 0 (Central).

Multi-Sourcing Basis



Note: This field can only be used if the Planning Basis is 1 (Multi-plant).

You can decide whether to use sourcing rules to satisfy demand, or whether to use an item's planning policies (item override, or item master). You can enter the following options:

0 - Ignore. Sourcing rules are not considered.

1 - Central+Plan Unit. Central plus planning unit. Consider sourcing rules which are defined with a demand point of Central model plus planning unit.

2 - P Unit. Planning Unit. Consider sourcing rules which are defined with a demand point of planning unit only.

Save Critical Resource Load



Note: This field is only applicable if Multi-sourcing is defined as a requirement on the production company profile.

This indicator is used to save the end result of all critical resources (that is, capacity available and capacity unused) for each reporting profile period. This could be used to determine why the system suggested manufacturing particular products on particular routes. You can enter the following options:

0 - No.

1 - Yes.

Critical Resource Load Policy



Note: This field is only applicable if Multi-sourcing is defined as a requirement on the production company profile.

You can enter the following options:

0 - Refresh. Each run of the model will extract the critical resource capacity from the capacity definitions defined via the Maintain Critical Resources and Maintain Capacity Profiles screens. The resource is loaded into the time buckets defined on the run models reporting profile. No load is included. The total capacity is available at the outset.

1 - Alternative Model Profile. If you select this option, you must enter a model in the Alternative Resource Model field. This policy differs from the previous policy in that an alternative reporting profile can be nominated. The reporting profile is derived from the alternative resource model. If existing load is present on the alternative model, it is included in the extract provided that it is not as a consequence of supply relating to the run model.

2 - Alternative Model With Upgrade. If you select this option, you must enter a model in the Alternative Resource Model field. This policy differs from the previous policy in that on completion of the run, the run model and the alternative model will be updated with the current critical resource balances.

Alternative Resource Model



Note: This field is only applicable if Multi-sourcing is defined as a requirement on the production company profile.

You must enter a model in this field if you enter options 1 or 2 in the Critical Resource Load Policy field.



Press **Enter** on the second Additional Parameters window to display the first screen.



Select **F8=Update** on the second Additional Parameters window to validate the data and display the first screen, or the second MPS Run Options screen.

Maintain MRP Model Stockrooms



3/MDU

You can decide which stockrooms are part of which MRP model.



Select Maintain MRP Model Stockrooms on the menu to display the first MRP Stockroom Model Maintenance screen.

MRP Stockroom Model Maintenance Screen

1



Select Maintain MRP Model Stockrooms on the menu to display the first MRP Stockroom Model Maintenance screen.

Fields:

Model

You can enter the name of a model to be edited.

This Model must be already set up in Maintain MPS Model Stockrooms or Maintain MRP Model Stockrooms.

Based On Model

You can enter the name of a model in this field. Any stockrooms defined for this model are copied into the model being edited.

This Model must be already set up in Maintain MPS Model Stockrooms or Maintain MRP Model Stockrooms.

Or All Stockrooms

If you do not want to copy the stockrooms for a model into the model being edited, you can decide whether or not to copy all of the stockrooms into the model.

You can enter the following options:

0 - No.

1 - Yes. Enter this option to copy all the stockrooms into the selected model to be edited.



Press **Enter** on the first MRP Stockroom Model Maintenance screen to display the second screen.

MRP Stockroom Model Maintenance Screen

2



Press **Enter** on the first MRP Stockroom Model Maintenance screen to display the second screen.

```

MR015                E3 - Enterprise-Adu-with MPL          USER GBJBASCC   18/07/97
                                                           12:19:26

MRP Stockroom Model Maintenance

Model.....?.. CM    Based On Model.?.. __ OR All Stockrooms.. _ (1=Yes)
Model Description.. Central Model
..... Stockrooms To Be Included .....
D1      D2      D3      D4      D5      D6      D7      D8
EG      ES      E1      E2      E3      E4      E5      E6
E7      E8      G1      G2      G3      G4      G5      G6
G7      G8      M1      M2      M3      M4      M5      M6
M7      M8      Q1      Q2      Q3      Q4      Q5      Q6
W1      W2      W3      W4      W5      W6      W7      W8
--      --      --      --      --      --      --      --
--      --      --      --      --      --      --      --
--      --      --      --      --      --      --      --
--      --      --      --      --      --      --      --
--      --      --      --      --      --      --      --
--      --      --      --      --      --      --      --
--      --      --      --      --      --      --      --

F3=Exit   F4=Prompt   F8=Update/Add   F11=Delete   F12=Previous
F18=Additional Parameters

6-22      SA      MW      KS      CL      IM      DM      II      EDN400A      KB      PET165S2
  
```

Fields:

Model

This field is for your information only and cannot be amended.

Based On Model

This field is for your information only and cannot be amended.

Or All Stockrooms

This field is for your information only and cannot be amended.

Model Description

A text description of the selected model is automatically displayed in this field. You can amend the text.

Stockrooms To Be Included

There are 112 fields, arranged in 8 columns and 14 rows. The stockrooms associated with the selected model are automatically displayed in these fields. You can amend or delete the existing stockrooms and add new stockrooms to the list.



For Multi-Plant, Cellular, and Multi-Sourcing, select **F18=Additional Parameters** on the second MRP Stockroom Model Maintenance screen to display the Additional Parameters

window.



Select **F8=Update** to validate the data you have entered and display the first MRP Stockroom Model Maintenance screen.

Functions:

F18

Additional Parameters. Select this function to display the Additional Parameters window. This function is for Multi-Plant, Cellular, and Multi-Sourcing only.

MRP Additional Parameters Window (F18)



For Multi-Plant, Cellular, and Multi-Sourcing, select **F18=Additional Parameters** on the second MRP Stockroom Model Maintenance screen to display the Additional Parameters window.

MR016	E3 - Enterprise-Adu-with MPL	USER GBJBASCC	18/07/97 12:34:43
Additional Parameters		MRP Model : P1 Plant 1 - Manchester	
		Production Calendar: 01	
Model Type.....?.	2	Production Plant	
Execution Level.....?.	2	Centralised Plan and Execution	
Primary Stockroom...?.	G1	FG SR P1-MCR	
Business Unit.....?.			
Site.....?.			
MPS Execution Level.?.	2	Centralised Plan and Execution	
F3=Exit F4=Prompt F12=Previous F15=Model Primary Stockrooms F16=Organisational Model F18=Additional Parameters			
6-27 SA MW KS CL HM DM II EDN400A KB PET165S2			

Fields:

Model Type

You can enter the following options:

- 0 (or blank) - Standard Model.
- 1 - Central Model.
- 2 - Production Plant.
- 3 - Production Cell. This option is reserved for future use.

This Model Type must be already set up on the system.

Execution Level

This is for the MRP model. When configuring the plant model, you can decide where and how to firm suggested orders using this field. You can enter the following options:

- 0 - Simulation (Not Live).
- 1 - Autonomous Plan And Execution. Enter this option to firm suggested orders at the plant model. Refer to the MPS Model maintenance section.
- 2 - Centralised Plan And Execution. Enter this option to firm suggested orders at the central model. Refer to the MPS Model maintenance section.

This Model Plan And Execution Level must be already set up in major type LPLT. For more information see Maintain Parameters.

Primary Stockroom

Refer to the MPS Model maintenance section

This Stockroom must be already set up in Stockroom Details.

Business Unit

This field is a memo field.

This Business Unit Code must be already set up in major type BUCS. For more information see Maintain Parameters.

Site

This field is a memo field.

This Site Code must be already set up in major type STES. For more information see Maintain Parameters.

MPS Execution Level

This is for the MPS model. You can enter the following options:

- 0 - Simulation (Not Live).
- 1 - Autonomous Plan And Execution.
- 2 - Centralised Plan And Execution.

This Model Plan And Execution Level must be already set up in major type LPLT. For more information see Maintain Parameters.



For plant model types, select **F15=Model Primary Stockrooms** on the Additional Parameters window to display the Maintain Model Primary Stockrooms screen.



Select **F16=Organisational Model** on the Additional Parameters window to display the second Maintain Organisational Model screen.



Select **F18=Additional Parameters** on the Additional Parameters window to display the (Untitled) window and then the second MRP Stockroom Model Maintenance screen.



Press **Enter** or select **F12=Previous** on the Additional Parameters window to display the second MRP Stockroom Model Maintenance screen.

Functions:

F15

Model Primary Stockrooms. Select this function to display the Maintain Model Primary Stockrooms screen. This function is only applicable to plant model types.

F16

Organisational Model. You can configure the organisational model for the plant model. Select this function to display the second Maintain Organisational Model screen. For more information, see Maintain Organisational Model.

F18

Additional Parameters. Select this function to display the (Untitled) window. This window contains the Maintain MPS Additional Run Parameters and Or MRP Additional Run Parameters fields. You can enter the following options in both fields:

0 - No.

1 - Yes.

Maintain Model Primary Stockrooms Screen (F15)



Note: This function is only applicable to plant model types.



Select **F15=Model Primary Stockrooms** on the Additional Parameters window to display the Maintain Model Primary Stockrooms screen.

DB578		E3 - Enterprise-Adv-with MPL		USER GBJBASCC	18/07/97
					12:36:49
Maintain Model Primary Stockrooms					
Plant.....: P1 Plant 1 - Manchester		Position to Item: _____			
0 Item ?				Primary Stockroom ?	
■ BELT	A-Seatbelt Belting			D1	Depot for P1
- CAR	A-Car			D1	Depot for P1
- CHASSIS	A-Chassis			D1	Depot for P1
- COMPUTER	Computer - Main Assembly			D1	Depot for P1
- CPU	CPU Assembly - Level 1			D1	Depot for P1
- DASHBOARD	A-Dashboard			G1	FG SR P1-MCR
- DASHCLOCK	A-Clocks			D1	Depot for P1
- DASHRADIO	A-Radio/CD			D1	Depot for P1
- DASHSPEEDO	A-Odometer			D1	Depot for P1
- KEYBOARD	Keyboard assembly - Level			D1	Depot for P1
- MONITOR	Monitor Assembly - Level 1			D1	Depot for P1
- PACKAGING	Packing Materials for Comp			D1	Depot for P1
					More...
4=Delete					
F3=Exit F4=Prompt F5=Resequene F8=Update/Add F12=Previous					
9-2 SA MW KS CL IM DM II EDN400A KB PET165S2					

Fields:

Plant

This field displays the name of the selected plant. This field is for your information only and cannot be amended.

Position To Item

You can select the item to move the cursor to by entering the first letter of the item's name in this field.

O

You can enter the following options:

4 - Delete. Enter this option to delete the item from the list.

Item

If an item name is displayed in this field, this field is for your information only and cannot be amended. The item names are listed in alphabetical order.

Under the list of item names, a list of empty fields is displayed. You can enter item names in these fields. You also enter a stockroom in the Primary Stockroom field,

then select **F8=Update/Add** to add the item to the list. The **F4=Prompt** is available. This Item must be already set up on the system.

Primary Stockroom

You can enter the name of a stockroom in this field. The primary stockroom is used to determine:

- Default item overrides (Defined via the Maintain Item Overrides screen). If no default overrides are defined, the item master planning parameters will be used.
- The planning route, where the receiving stockroom of a route level planning route equals the primary stockroom. If an item stockroom planning route is not defined, the item master planning route will be used.
- A suggested purchase orders supply stockroom.

If a primary stockroom is not defined for an item at this level, then the following hierarchical sequence is observed:

- Model primary stockroom. Entered on the model stockroom additional details panel.
- Item master primary stockroom. Entered on the first production details screen.

When a stockroom is entered in this field, a text description is automatically displayed beside it.

This Stockroom must be already set up in Stockroom Details.



Select **F8=Update/Add** to add items to the list, validate the data you have entered and display the first MRP Stockroom Model Maintenance screen.

Functions:

F5

Resequence. Select this function to resequence the items into alphabetical order.

Maintain Organisational Model



4/MDU



Select Maintain Organisational Model on the menu to display the first Maintain Organisational Model screen.

The Organisational Model is an extension of the MPS/MRP model used in the production Planning functions and is a view based on production resources. It must be consistent with the MPS/MRP model.



Note: The MPS/MRP planning model must be set up prior to creating an Organisational Model; and the code entered in the MPS/MRP Model To Confirm Suggestions field on the Company Profile Planning Options screen. If Multi-plant, and/or Cellular is active on the Company Profile Planning Options screen, organisational models can be defined for live plant and/or cell models.

The model is identified by a two character code which is configured in the Company Profile. For more information, see the Model To Firm Up MPS/MRP Supply field on the Planning Options screen.

Because the organisational model is a production process based view, the definition of an organisational model requires parameters which are production process based.

The setting up of the organisational model allows you to:

- Set important default values.
- Define certain procedures.
- Make decisions on policy issues.

Multiple organisational models can be defined. They should represent either different plants or lines that you want to plan or control.

Fields:

Model

Enter the model to be maintained. This must be the model which has already been defined to MPS/MRP. The **F4=Prompt** is available.



Press **Enter** on the first Maintain Organisational Model screen to display the second screen.



Select **F16=Organisational Model** on the Additional Parameters window to display the second Maintain Organisational Model screen.

DB241	MA - Test Company	User	GBJBASW7	17/12/97
				11:58:26
Maintain Organisational Model				
Model..... P1	Description. 31			
Scrap Reason Code.....? SC	Transaction Number.....		8	
Hold Reason Code.....? QI	Movement Authority Code...			
Subcontractor Stockroom.....? S1	Shipper Number.....			
Time Reporting Policy.....? 0	Count Reporting Policy...? 0			
Quantity Reporting Policy.....? 0				
Shipper Tracking..... -				
Held Inventory Tracking..... -	(0=No, 1=Yes)			
WIP Lot Tracking..... -	(0=No, 1=Yes)			
Generate Cost Recovery..... -	(0=No, 1=Yes)			
Generate Material Recovery..... -	(0=No, 1=Yes)			
Backflush Material Usage				
Including Shrinkage..... -	(0=No, 1=Yes)			
Backflush Operation Times				
Including Shrinkage..... -	(0=No, 1=Yes)			
Time Booking Policy..... -	(0=Decimal Hrs, 1=HH.MM)			
F3=Exit F4=Prompt F8=Update F11=Delete F12=Previous				
5-36	SA	MW	KS CL IM DM II	EDN400A KB PET165S2

Fields:

Model

The model is displayed in this field. This field is for your information only and cannot be amended.

Description

Enter the text description associated with this organisational model.

Scrap Reason Code

Enter the default reason code to be displayed when recording scrap of WIP inventory.

This Movement Reason Code must be already set up in major type MOVR. For more information see Maintain Parameter File.

Transaction Number

This is the current value of the system maintained transaction control number. It is automatically incremented with each transaction reported within this Organisational Model. This field is for your information only and cannot be amended.

Hold Reason Code

Enter the default reason code to be displayed when recording Held WIP inventory.

This Movement Reason Code must be already set up in major type MOVR. For more information see Maintain Parameter File.

Movement Authority Code

This field is reserved for future use.

Subcontractor Stockroom

Enter the stockroom code designating the stockroom to hold all subcontractor material balances. Material shipments to subcontractors which are reported within this Organisational Model are placed in this stockroom. Balances are held within the

stockroom by subcontractor. WIP balances are held at the previous in-house operation WIP location.

This Stockroom must first be defined in inventory.

Shipper Number

This field displays the last subcontract shipper number used. This field is for your information only and cannot be amended.

Time Reporting Policy

Enter how production times are to be reported in this model. You can enter the following options:

0 (or blank) - Total Quantity. Requires entering only the net time taken.

1 - Count In/Count Out. Requires entry of both the start time and end time of the activity.

This Count Reporting Policy must be already set up in major type CNTI. For more information see Maintain Parameter File.

Count Reporting Policy

You can enter the following options:

0 (or blank) - Total Quantity. To allow entry of only quantity produced.

1 - Count In/Count Out. To support the calculation of quantity produced by reporting a start and end machine cycle count.

The use of 1 does allow reporting of net quantity produced by reporting the start count as 0.

This Count Reporting Policy must be already set up in major type CNTI. For more information see Maintain Parameter File.

Quantity Reporting Policy

Enter how the quantity reported is to be interpreted during WIP inventory recording. You can enter the following options:

0 (or blank) - Total Quantity. The total quantity reported is exclusive of scrap and held.

1 - Count In/Count Out. The total quantity reported is inclusive of scrap and held.

Whichever method is selected, scrap and held quantities must still be entered separately.

This Count Reporting Policy must be already set up in major type CNTI. For more information see Maintain Parameter File.

Shipper Tracking

By using this you can determine if subcontractor WIP and material shipping transactions should be recorded against shipping documentation. Receipts and shipments are checked to make sure that receipts do not exceed shipments. Shipper numbers are generated for each despatch if not created manually, and more than one shipment may be recorded on the same shipper number. WIP shipping transactions are the movement of production lots to a subcontractor and back again. Material shipping transactions cover the transfer of materials and components in order for the subcontractor to complete the work. WIP inventory is shipped from the

operation immediately before the subcontracted operation and completed subcontracted work is then booked by Receive From Subcontractor rather than the order, item or operator booking routines.

You can enter the following options:

0 - Select this option if you do not want to produce a shipping note. For WIP transactions the quantity received from the subcontractor is assumed to be the full shipped quantity and the transaction is closed following receipt. For material transactions the quantity shipped is assumed to be the quantity consumed when the WIP transaction is closed.

1 - Select this option if you would like a shipping note to be produced. For WIP transactions the quantity received from the subcontractor defaults to the quantity booked and you can receive it repeatedly until the operation is manually set to closed. For material transactions the quantity shipped is assumed to be the quantity used when the WIP transaction is closed.

2 - For WIP transactions a shipping note is not produced, the quantity received from the subcontractor is the full shipped quantity and the transaction is closed following the receipt. For material transactions a shipping note is produced and the quantity shipped is that of the consumed amount when the WIP transaction is closed.

3 - Select this option if you do not want shipping notes to be produced. For WIP transactions the quantity received from the subcontractor is the quantity booked and can be repeatedly received until the operation is manually set to closed. For material transactions the quantity shipped is assumed to be the quantity consumed when the WIP transaction is closed.

Held Inventory Tracking

You can enter the following options:

0 - No. To indicate tracking is not required.

1 - Yes. To indicate that WIP inventory that is held pending a decision must have a tracking number associated with it.

WIP Lot Tracking

You can enter the following options:

0 - No. If this level of control is not required.

1 - Yes. To indicate that items encoded as Lot controlled in Inventory Management are to be tracked by Lot in WIP reporting.

Generate Cost Recovery

You can enter the following options:

0 - No. Standard cost recovery records are not required.

1 - Yes. Creates standard cost recovery records when WIP inventory is recorded at a count point. Cost recovery records contain the standard value of good and held work fully dissected at the elemental cost level and represent the value added between the previous count point and the operation stage reached. It creates separate elemental records for scrapped production to represent the standard cost that is written off between count points.

Generate Material Recovery

0 - No. Does not create.

1 - Yes. Creates material recovery records containing the elemental costs of purchased materials waste and by-products when good and held WIP inventory is recorded or WIP is scrapped at a count point. These are in addition to records for the total material cost and operation transformation costs incurred between count points.

Backflush Material Usage Including Shrinkage

You can enter the following options:

0 - No. Material usage is not to be inflated. This parameter allows routings to support operation shrink assumptions without imposing these assumptions on the material movements calculated in backflushing.

1 - Yes. Inflates calculated material backflush by operation shrinkage factors defined for the route.

Material Shrinkage is always included in backflush calculations.

Backflush Operation Times Including Shrinkage

This parameter allows operation shrinkage to be included or excluded from efficiency calculations.

You can enter the following options:

0 - No. To exclude shrinkage. Operational shrinkage is deemed to be a WIP scrap rate with no impact on machine or labour efficiency. Consequently, operation cycle times will not be inflated by the shrink factor.

1 - Yes. To inflate operation standard operation times for efficiency calculation purposes. These standard or earned hours are calculated for all actual production bookings provided that Efficiency Reporting is requested on the Activity Control File.

Time Booking Policy

You can enter the following options:

0 - Decimal Hrs. Time are reported as decimal hours.

1 - HH.MM. Times are reported as HH.MM.



Select **F8=Update** to validate the data you have entered and display the first Maintain Organisational Model screen.

Maintain Work Station Locations



5/MDU

A WIP location is an Inventory Management stockroom that has been logically associated with one or more work stations as the stockroom which receives all WIP inventory produced from count point operations by those work stations.

These stockrooms are no different to any other stockroom defined in Inventory Management. They are capable of supporting on hand balances for any type of item, purchased or manufactured.

The distinction is exclusively within Production Control, in that these stockrooms are designated as repositories of WIP inventory.

Every work station used on a process route must be linked to a WIP stockroom



Note: WIP inventory is not visible to the Inventory Management application. It is data retained entirely within the Production system.




Note: The system does not validate this condition, but relies upon the user to ensure that these definitions are complete.

A work station can be linked only to a single WIP location. The work station/WIP stockroom linkage dictates which stockroom receives WIP inventory produced by any count point operation.

Every WIP location (stockroom) must be linked to the Organisational Model. Many of the schedule reports and enquiries can be selected and sequenced by WIP location.

Example: F1000 Production Diagram Route

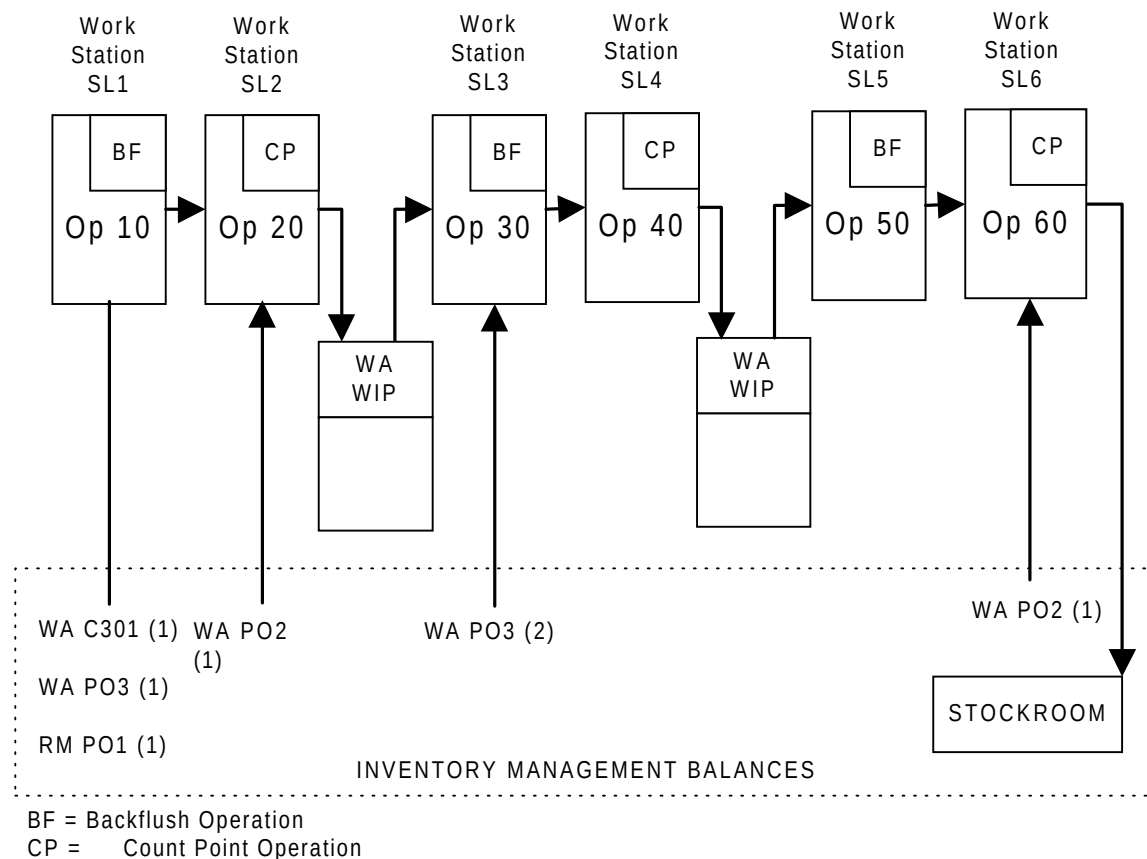

This function links a work station to a WIP location, the Organisational Model and a floor stock location.



Select Maintain Work Station Location on the menu to display the Work Station/WIP Location screen.

Fields:

Work Station

Enter a work station.

This Work Station must be already set up in Work Stations.



Press **Enter** to display the Work Station WIP Locations screen.

DB281X	Z1 - GB Demonstration Company	User	GBJBAMS	5/12/95 14:33:48
Work Station WIP Locations				
Work Station.....	WS01	Work Station	01	
WIP Location.....?	FS			
Organisational Model...?	01			
Floor Stock Location...?	JS			
F3=Exit F4=Prompt F11=Delete F12=Previous				
07-29	SF	MX	KS	IM II KENB20A PET166S2

Fields:

Work Station

This field displays the work station code and description of the work station entered in the first Work Station WIP Locations screen. This field is for your information only and cannot be amended.

WIP Location

Enter the logical WIP location which is linked with this work station and holds all WIP inventory balances. The stockroom must already be defined to Inventory Management.

This Stockroom must be already set up in Stockroom Details.

Organisational Model

Enter the live Organisational Model that is to be linked with this work station and WIP location. The Organisational Model must already be validated.

This Organisational Model must be already set up in Maintain Organisational Model.

Floor Stock Location

When materials with a Material Policy Code 3 are issued (usually from the raw material stockroom) they do not go directly to WIP but are transferred to the floor stock location associated with the work station.

This Stockroom must be already set up in Stockroom Details.



Press **Enter** to validate the data you have entered and display the Work Station/WIP Location screen.

Maintain Parameters



11/MDU



Select Maintain Parameter File on the menu to display the first Maintain Parameter File screen.

In many areas of Production, codes are used to aid data entry. This has the benefit of:

- Fast data entry.
- System-validation of the entries.

The Maintain Parameters File facility allows the codes, where necessary, and their descriptions to be maintained. The file is held in two sections:

- User-defined codes.
- System-defined codes.

The user-defined codes, and their descriptions, need to be set up after the Company Profile with the values needed to start the system. They can be amended, added or deleted as required, depending on access.

The system-defined codes should NOT be altered. However you may change the descriptions to make them more relevant to their particular environment.

Parameters:

BUCS - Business Codes. This is an optional parameter, and can be used when defining additional parameters for MPS models. Planning units (MPS / MRP models) can be grouped within a business code, if you wish.

CSHF - Shift Profile Code. This code should not be maintained by the parameter maintenance facility, but by the Shift Profile Maintenance function; the parameter file is updated automatically as a consequence of any maintenance to shift profile codes.

DEPT - Departments. These are used to group and subsequently report and analyse production booking. In addition if MRP cellular planning is used, then cell (department) codes equivalent to those defined in the Inventory Management application against type DEPT should be set up.

DFPL - Item Trigger Tolerance. Sets the default trigger tolerance used by the Master Production Scheduling, Available to Ship report.

DSPC - Disposition Codes. Change management is a standalone application which you can use to monitor when changes are made to the system and who carried them out, as well as other information. Disposition codes are used as an aide memoir as to what function the change request is performing. For example, stock disposal, product re-call or product re-cost. The defaults are displayed on the Change Management Policies screen. You can configure the disposition codes for the DSPC parameter.

GRPT - Process Group Type. This defines whether the process group is not used, is a co-product process group with a primary co-product, or a concurrent co-product process group. The type of process group is selected by entering 0, 1 or 2

respectively in the Process Group Type field on the Additional Parameters Window (F18).

A co-product process group is one where more than one product is produced during the production process. You can select one of the co-products as the primary. This means that the demand for the primary co-product is used to determine the production of the process group. Alternatively, you can select concurrent co-products as the primary. This means that the co-product with the greatest demand becomes the primary co-product, and this co-product is used to determine the production of the process group.

INSP - Inspection Policy Codes. Quality System is standalone quality control software which has some links with this software. A QS inspection lot can be created for a QS controlled item when a works order is released or during operation booking. You can decide whether or not inspection lots can be created and, if they can, whether they are created through works order release or operation booking.

The company default is configured in the Inspection Policy Default field on the Database Options screen, and can be overridden for each item using the Inspection Policy field on the Production Details screen. When the QS software receives an inspection lot from the system, an inspection order can be generated either manually or automatically, and this inspection order can be printed either manually or automatically. This is configured in the QS software.

PLAN - Planner Code. This defines the initials or similar short codes for the planners used to categorise MPS and MRP enquiries and reports.

PTYP - Product Group. This is not presently used and is reserved for future use.

SCHS - Schedule Source. Defines codes used by the Master Production Scheduling, Available to Ship report, to determine the supply schedule source. This may be firm work station schedules; firm MPS or suggested MPS

STES - Site Code. This is an optional code, and can be used when defining additional parameters for MPS models. Planning units (MPS / MRP models) can be grouped within a business code, if you wish.



Warning: Be careful when making changes to system parameter codes. Considerable damage can be done unless the implications of the changes are fully understood.

Maintain Parameter File Screen 1

This screen displays a list of user-defined codes. These user-defined codes are used by the system to validate entries made on a variety of different options.



Select Maintain Parameter File on the menu to display the first Maintain Parameter File screen.

DB400		Z1 - GB Demonstration Company		User: GBJBAMS		5/12/95 14:20:57	
Maintain Parameter File							
Opt	Type	Descriptions	Code Length	Max Codes	Code		
-	CSHF	Shift profile code	2	99999			
-	DEPT	Departments	6	99999	Model		
-	PLAN	Planner code	5	100			
-	PTYP	Product group	3	150			
1	SCHS	Schedule Source	1	100			
1=Select 2=Maintain 4=Delete 6=Print							
ADD		System screen _ (' ',1-9)		Company dependent _ (1=yes)			
		Password		Rate 1 description			
		Validation Program		Rate 2 description			
		or Rules		Value 1 description			
		Screen Format		Value 2 description			
F3=Exit F5=Refresh F17=System/user F21=Print All							
10-02 SF MV KS IM IT KENB20A PET166S2							

Fields:

Opt

Option. You can enter the following options:

1 - Select. This option displays the definitions and codes for the selected parameter type. Enter this option to display the second Maintain Parameter File screen.

2 - Maintain. Enter this option to change the name of the Add field to the parameter name, and the Add fields automatically display the parameter details. You can amend the parameter details.

4 - Delete. Delete this parameter type.

6 - Print. Print the parameter details.

Type

Parameter Type.

Descriptions

This field displays a description of the parameter type.

Code Length

This is the maximum length of the codes used for this parameter type.

Max Codes

This is the maximum number of the codes that can be defined for this parameter type.

Code

This is a heading for the code.

Add

You can add a new parameter type by first entering the details in the Add fields. The Add fields are the Type, Descriptions, Code Length, Max Codes and Code fields, as explained above.

When you enter 2 in the Opt field, the name of this field changes to the parameter name in the Type field, and the fields automatically display the parameter details. You can amend the parameter details.

System Screen

You can enter the following options:

(Blank) - User-defined parameter.

1-9 - Internal system-defined parameter.

Company Dependent

Defines whether the parameter is company based or global. You can enter the following options:

0 - Global.

1 - Company Dependent.

Password

Enter a password (if required) to prevent unauthorised users altering the parameter. If a password is entered, a password window prompt is displayed each time the parameter is processed.

Validation Program

Enter a program number which validates the Rate and Value fields.

Or Rules

This defines the validation rules to be applied to the rate and value details.

Screen Format

Enter the format ID to be used when maintaining details.

Rate 1 Description

Enter a text description for rate 1 which is used when maintaining details.

Rate 2 Description

Enter a text description for rate 2 which is used when maintaining details.

Value 1 Description

Enter a text description for value 1 which is used when maintaining details.

Value 2 Description

Enter a text description for value 2 which is used when maintaining details.

Functions:

F17

System/User. Toggles between displaying user and system-defined parameters. Maintaining system codes requires exclusive use of the system. That is, only one person at a time is allowed to access individual maintenance screens.

F21

Print All. Produces a listing of all codes and descriptions.



Enter 1 in the Opt field of a selected parameter to display the second Maintain Parameter File screen.



Select **F17=System/User** on the first Maintain Parameter File screen to display the same screen but with different parameters. The parameters toggle between user and system-defined parameters.

Maintain Parameter File Screen 2 (Option 1)

This screen contains a list of codes and definitions for the selected parameter.



Enter 1 in the Opt field of the first Maintain Parameter File screen to display the second screen.

DB410		Z1 - GB Demonstration Company		User: GBJBAMS		8/12/95 13:14:04	
Maintain Parameter File Type WTPY Reschedule policy							
Opt	Code (3)	Description	+-C	IO			
-	11	Purchase Order	111	11			
-	11C	Confirmed PO	001	00			
-	12	Purchase (Schedule)	111	11			
-	13	Purchase (Blanket)	111	11			
-	14	Purchase (Other Type)	111	11			
-	19	Purchase Schedule	111	11			
-	40	Suggested W/O	000	00			
-	41	Planned W/O	111	11			
-	41A	Planned W/O 8 days	011	22			
-	41F	Planned W/O (Firm)	111	00			
2=Maintain 4=Delete							
ADD							
===		% Safety Stock	.00000				
		% Lead Time	.00000				
		Days	.00				
		Order Value	.00				
F3=Exit F5=Refresh F12=Previous F21=Print							
17-06 SP ML KS IM II KENB20A PET166S2							

Fields:

Opt

Option. You can enter one of the following options to carry out an option on the codes:

2 - Maintain. Enter this option to change the name of the Add field to the parameter name, and the Add fields automatically display the parameter details. You can amend the parameter details.

4 - Delete. Delete this code.

Code

The basic code consists of two numeric digits to which an alpha suffix may be added for user-defined requirements. The basic numeric code identifies the order type and status.



Note: When this code is specified on the Item Master record for each item, only the last digit is entered. Therefore a blank on the item master for this field indicates that the system defaults are to be used for every order status.



Note: If user-defined code letters are entered then ensure that ALL the required order status's have been set up with the correct user-defined

letter code. Failure to set up a required code prevents the parameter being applied to that item for that specific order status.

The filtering effects of these codes are controlled by the values in the following columns.

Description

This field displays a description of the codes.

+ - C

Controls the way quantity change is proposed: + - Increase; - - Decrease; C - Cancel.

You can enter the following options under each heading:

0 - No change allowed.

1 - Any change allowed.

You can enter the following options under + and -:

2 - Increase/Decrease less than minimum order quantity definition on item master, not allowed.

3 - Increase/Decrease less than defined % of safety stock defined in parameter file, not allowed.

IO

Controls the way Reschedule In (expedite) and Reschedule Out (Delay) are proposed: I - Expedite; O - Delay.

You can enter the following options:

0 - No change of date allowed

1 - Any change allowed.

2 - Date changed may not be less than number of days entered

3 - Date changed may not be less than percentage of lead time

4 - Value of order must be greater than value entered. (The Order value=suggested order quantity x Inventory standard cost).

Add

You can add a new parameter type by first entering the details in the Add fields. The Add fields are the Type, Descriptions, Code Length, Max Codes and Code fields, as explained above.

When you enter 2 in the Opt field, the name of this field changes to the parameter name in the type field, and the fields automatically display the parameter details. You can amend the parameter details.

Qty % Of Safety

Required if quantity change 3 is used.

% Of Lead Time

Required if date change 3 is used.

Days

Required if date change 2 is used

Order Value

Required if date change 4 is used.



Press **Enter** on the second Maintain Parameter
File screen to display the first screen.

Generate Low Level Codes

12/MDU

The purpose of this utility is to provide a method of updating the low level codes used in the product structure. It is particularly useful when major changes have been made to the structures of a large number of products.

The MPS/MRP running routines include the option to generate low level codes but invoking this facility at run time may cause the duration of the run to be extended.



Select Generate Low Level Codes on the menu to display the Low Level Code Generation Selection screen.

DB082	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95 13:21:23
Low level code generation selection.			
Select a Component Route to re-calculate the low level code.			
Component Route..... 1		1 = Planning Route 2 = Costing Route	
F3=Exit	F8=Submit		
10-26	SF	MM	KS IM II KENB20A PET166S2

Fields:

Component Route

You can enter the following options:

1 - Planning Route. To amend the planning route.

2 - Costing Route. To amend the costing route. The costing route can be defined as either the Cost Route or the Cost Route Designate. For more information, see the Route field in Item Master File Re-Cost.



Select **F8=Submit** to generate the low level codes.

Maintain Production User Profile



13/MDU



Select Maintain Production User Profile on the menu to display the first Maintain Production User Profile screen.

Maintain Production User Profile Screen 1

You can authorise users to selected parts of the system.



Select Maintain Production User Profile on the menu to display the first Maintain Production User Profile screen.

DB572 E3 - Enterprise-Adv-with MPL USER GBJBAJFW 29/01/98 9:48:49

Maintain Production User Profile

User Profile.....?

Authorisation Class...?

Based on Profile.....?

F3=Exit F4=Prompt

5-28 SR MW KS CL IM DM II STUD140 KB PET165S1

Fields:

User Profile

You can enter the name of a user in this field. This User Profile must be already set up on the system.

Authorisation Class

You can enter the name of an authorisation class in this field. This Authorisation Class must be already set up in the User Profile Authorisation Options screen in Maintain Company Profile, and 1 (Yes) must be in the Active field.

Based On Profile


You can enter the name of a user in this field. The authorisations of this user are copied to the user in the User Profile field. This User Profile must be already set up on the system.



Note: If the user in the User Profile or Based On Profile fields is part of a group profile, an error message is displayed.



Press **Enter** on the first Maintain Production User Profile screen to display the second screen.

**Fields:**

This field is for your information only and cannot be amended.

This field is for your information only and cannot be amended.

You can enter the following options:

- 1 - Authority Types. Enter this option to display the third Maintain Production User Profile screen.
- 2 - Authorise All. Enter this option to authorise the user to all activity types for this authorisation class (amend, delete, submit, etc.)
- 4 - Delete. Enter this option to delete the user's relationship with the class code (model, planner, etc.)

You can define the sequence of the class code (model, planner, etc.) authorisations by entering a number in this field. This sequence is used to determine preferences. When a user selects an option governed by the authorisation class, an initial preference will be defaulted onto the screen. When you select **F5=Refresh**, the order of the models is resequenced into numerical order.

Model

Model, Planner, etc. The name of the model, planner, etc. is displayed in this field.

Description

This field contains a text description of the model, planner etc. This field is for your information only and cannot be amended.

* = Total Authority

If a * is displayed in this field, the user has the authority to all activity types for this authorisation class (amend, delete, submit, etc.). This field is for your information only and cannot be amended.



Enter 1 in the O field on the second Maintain Production User Profile screen to display the third screen.



Press **F8=Update** on the second Maintain Production User Profile screen to validate the data you have entered and display the first screen.

Maintain Production User Profile Screen 3



Enter 1 in the O field on the second Maintain Production User Profile screen to display the third screen.

DB572	E3 - Enterprise-Adu-with MPL	USER GBJBASCC	18/07/97 12:55:52
Maintain Production User Profile			
User Profile.....: GBCONMJ		Martin James - Contractor	
Authorisation Class....: MODEL_CNTL		Model Maintenance/Submission	
Model.....: P1		Plant 1 - Manchester	
Authorisation Type		Authority (1=Yes)	
Amend		☒	
Delete		☐	
Submit		☐	
			Bottom
F3=Exit F12=Previous			
12-43 SA MW KS CL IM DM II EDN400A KB PET165S2			

Fields:

User Profile

This field is for your information only and cannot be amended.

Authorisation Class

This field is for your information only and cannot be amended.

(Class Code)

Model, Planner, etc. The name of the model, planner, etc. is displayed in this field. This field is for your information only and cannot be amended.

Authorisation Type

The following authorisation types are displayed (dependant on the authorisation class):

- Amend.
- Delete.
- Submit.
- Confirm.

Authority

For each authorisation type, you can decide whether or not the user has the authority to You can enter the following options:

0 - No.

1 - Yes.



Press **Enter** on the third Maintain Production
User Profile screen to display the second screen.

Start Subsystem



21/MDU



Select Start Subsystem on the menu to submit a job to the system which starts the Transaction Manager subsystem.

Transaction Manager is responsible for processing Production and WIP inventory transactions, generating appropriate movement records as well as updating inventory balances. It processes each activity type with which it has been associated.

The Transaction Manager runs its own subsystem.

Since the job runs in a subsystem by itself, when it awakens it is processed immediately by the system.

Your Computer Department should add the Transaction Manager Utilities options to their daily housekeeping procedures. This includes starting the OSLMJ subsystem, starting Transaction Manager and, at the end of the day, ending Transaction Manager.



Warning: Until these tasks are automatically run each day, you need to select the appropriate Utilities options prior to using the transaction functions. If you forget to do so, the transactions are not lost; they are not processed until Transaction Manager is started.

Start Transaction Manager Job



22/MDU



Select Start Transaction Manager Job on the menu to display the Start Transaction Manager Job window.

MDM	Z1 - GB Demonstration Company	User GBJBAMS	05/12/95
			14:36:18
Production Definition Maintenance			
Items		Processes	
1. Inventory Details		21. Routes/Structures	
2. Stockroom Details		22. Mass Replace - Inputs	
3. Production Details			
Resources		Text	
11. Cost Centres		31. Text Types	
12. Work Stations			
13. Work Centres			
14. Calendars			
15. Shift Profiles			
16. Labour Grades			
17. Operators			
18. Crews			
19. Subcontractors			
Option 22/MDU		90. Signoff	

Start Transaction Manager Job

The option you have chosen submits a batch job to perform the requested task.

Press F8 to confirm this submission or press F3/F12 to return without submission.

F3=Exit F8=Confirm submit F12=Previous

F3=Exit	F4=Prompt	F6=Messages	F12=Previous	F16=Change Company	F18=Prints
21-11	SA	ML	KS	IM	II KENB20A PET166S2



Warning: When saving or restoring the Production FILES library, the job MJ_CONTROL running in sub system OSLMJ must be STOPPED!



Select **F8=Confirm Submit** to start the job.

Stop Transaction Manager



23/MDU



Select Stop Transaction Manager Job on the menu.

This ends the job started with Start Transaction Manager.

You receive no confirmation of system action taken in response to this option. It causes no harm if you mistakenly request this option more than once.

Transaction Input Enquiry



24/MDU

This option enables enquiries to be made on transactions for which there is user input or confirmation.



Select Transaction Input Enquiry on the menu to display the first Transaction Input Enquiry screen.

Transaction Input Enquiry Screen 1



Select Transaction Input Enquiry on the menu to display the first Transaction Input Enquiry screen.



Tip: If any of the ranges are left blank this includes all transactions for that parameter except the date field. The date field cannot be left blank. Defaults to the current system date.

MJ560	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95 16:50:01
Transaction Input Enquiry			
User Id.....	_____		
Organisational Model..?	_____		
Transaction Range.....	_____	to _____	
Work Station Range.....?	_____	to _____	
WIP Location Range....?	_____	to _____	
Reporting Type Range..?	_____	to _____	
Production Order Range?	_____	to _____	
Activity Type.....?	_____		
Reference Date.....	8/12/95		
Processing Status..... *	(*' Any Status ' ' Unprocessed) ('1' In Progress '2' Complete)		
F3=Exit F4=Prompt			
05-27	SF	MW	KS IM II KENB20A PET166S2

Fields:

User ID

Enter the user ID required.

Organisational Model

Enter the model number.

Transaction Range

Enter the transaction number range required. If this is known this can be a useful way of selecting records.

Work Station Range

Enter the range required.

WIP Location Range

Enter the range required.

Reporting Type Range

The reporting type which is defined in Maintain Activity Control File, is linked to an individual or a range of activity types used for booking transactions.

Production Order Range

Enter the required range.

Activity Type

The activity type is defined in the Maintain Activity Control File.

Reference Date

Enter the date for which the transactions are required. Transactions prior to this date are not displayed.



Note: This is not a date range.

Process Status

Enter the appropriate code. If the Transaction Manager update facility is running normally, then transactions are processed at regular intervals. There should not be many unprocessed items for any great length of time.



Press **Enter** on the first Transaction Input Enquiry screen to display the second screen.

Transaction Input Enquiry Screen 2



Press **Enter** on the first Transaction Input Enquiry screen to display the second screen.

MJ561	Z1 - GB Demonstration Company	USER GJBAMS	8/12/95
			16:50:29
Transaction Input Enquiry			
User GJBAMS	Org.Model	Trn	to 99999999 Rpt.typ to
WIP.loc to 99	W/Stn	to 99999	Activity Date 8/12/95 Sts *
Production Order	to		
Opt User	Actvty W/Stn	Item	Operator Time Quantity Sts
- GJBAMS	STATUP	MS001	.000 2
- GJBAMS	STATUP	MS001	.000 2
- GJBAMS	STATUP	MS001	.000 2
- GJBAMS	STATUP	MS001	.000 2
- GJBAMS	STATUP	MS001	.000 2
- GJBAMS	STATUP	MS001	.000 2
- GJBAMS	STATUP	MS001	.000 2
- GJBAMS	STATUP	MS001	.000 2
- GJBAMS	STATUP	MS004	.000 2
- GJBAMS	STATUP	MS004	.000 2 +
1=Select			
F3=Exit F12=Previous			
09-04	SP	MW	KS IM II KENB20A PET166S2

Fields:

Opt

Option. You can enter the following options:

1 -Select. Enter this option to display the third Transaction Input Enquiry screen.

User

User ID selected. This field is displayed for your information only and cannot be amended.

Activity

The activity code for the transaction. This field is displayed for your information only and cannot be amended.

W/Stn

Work station for the transaction. This field is displayed for your information only and cannot be amended.

Item

Item number. This field is displayed for your information only and cannot be amended.

Operator

The operator code IF specified on the original booking. This field is displayed for your information only and cannot be amended.

Time

The booked time if appropriate to the booking. This field is displayed for your information only and cannot be amended.

Quantity

Quantity of the item booked on this transaction. This field is displayed for your information only and cannot be amended.

Sts

Status code. This field is displayed for your information only and cannot be amended:

(Blank) - not yet begun processing

1 - Being processed.

2 - Processing complete.



Enter 1 in the Opt field on the second Transaction Input Enquiry screen to display the third Transaction Input Enquiry screen.

Transaction Input Enquiry Screen 3 (Option 1)



Enter 1 in the Opt field on the second Transaction Input Enquiry screen to display the third Transaction Input Enquiry screen.

MJ561		Z1 - GB Demonstration Company		USER GBJBAMS	8/12/95 16:50:52
Transaction Input Enquiry					
Header details			Model 01 Transaction 10043		
Transaction Date 8/12/95 Shift			User GBJBAMS WIP.locn FS		
Work Station WS01 Dept			Rpt.Type 01 Status 2		
Operator Crew			Entry Date/time 8/12/95 16:16:40		
Booking Details			Transact.Elapsed .00		
Activity PRODRP Rev Ind 0			Production Order Details		
Item MS001			Prod. Order No W000182		
Operation 10 Alten			Route 1		
Lot Number			Prod. Order Status		
Time			Order Complete 0		
Oper Elapsed 2.00			Work Station Status		
W/S Elapsed 2.00			Operation Status		
Quantity			Operation Code		
Good 1.000			WIP Details		
Scrap 1.000 Reason SC			Inventory Status		
Held 1.000 Reason QI			Scrap Reference		
			Held Reference		
F3=Exit F12=Previous F13=Crew F14=Components F17=Scrap F18=Held F19=Subcontract F20=Outputs 16-04 SP MW KS IM II KENB20A PET166S2					

Functions:

F13

Crew. Displays crew details if booked.

F14

Components. Displays component details.

F17

Scrap. Displays scrap references if appropriate.

F18

Held. Displays held references if appropriate.

F19

Subcontract. Displays details of subcontract transactions associated with this booking if appropriate.

F20

Outputs. Displays details of outputs for process group items if appropriate.

Transaction Input Audit Report

1... **2...** 25/MDU

This report provides an audit report listing of the selected transactions



Select Transaction Input Audit Report on the menu to display the Transaction Input Audit Report screen.

The selection parameters are the same as the parameters for the Transaction Input Enquiry option described previously, except for Detail Level.

MJ566	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95 16:51:17
Transaction Input Audit Report			
User Id.....	_____		
Organisational Model..?	_____		
Transaction Range.....	_____	to _____	
Workstation Range.....?	_____	to _____	
WIP Location Range.....?	_____	to _____	
Reporting Type Range..?	_____	to _____	
Production Order Range?	_____	to _____	
Activity Type.....?	_____		
Reference Date.....	8/12/95		
Processing Status..... *	(*' Any Status ' ' Unprocessed) ('1' In Progress '2' Complete)		
Detail level..... -	('1' - 1 Line per transaction) ('2' - 2 Lines per transaction) ('3' - 3 Lines per transaction) ('4' - 3 Lines per transaction) (and all other details)		
F3=Exit F4=Prompt F8=Submit			
05-27	SP	MW	KS IM II KENB20A PET166S2

Fields:

Detail Level

You can enter 1, 2 3 or 4 to select the number of lines per transaction and the level of detail required.



Select **F8=Submit** to submit the report.

Maintain Activity Control



26/MDU



Select Maintain Activity Control on the menu to display the first Production Activity Control Maintenance screen.

Production activity reporting is supported by a modular, highly flexible and powerful transaction processing system. It is comprised of four basic elements.

Activity Types

These are user definitions of activities they report, but which are based upon JBA defined reporting types. Examples of activities which a user might wish to define include:

- Production order bookings.
- Production schedule bookings.
- Setting time.
- Rework.

These definitions can be described in the users own language to be most meaningful. The activities defined for purposes of reporting can be very specific user activities. Every activity type must, however, be linked to a single JBA reporting type.

Reporting Types

These are JBA definitions. Reporting types are definitions capable of supporting families of activity types (defined by the user). Reporting types are not user maintainable. Examples of reporting types include:

- Indirect labour.
- Production.
- Work-in-progress movement.

Activities such as stamping parts and painting parts might both be associated with the Production reporting type. Sweeping floors and washing machines might both be associated with the Indirect Labour reporting type. Each reporting type has been programmed by JBA to perform a specific set of detailed processing activities known as Transaction types.

This design allows additional reporting types to be defined very efficiently.


Transaction Types

These are JBA definitions which are linked to reporting types. A single reporting type may call many different Transaction Types.

Transaction Manager

This is the program that manages the processing of transactions reported in Production Activity Reporting. This program runs in its own subsystem and attempts to process transactions which have been reported, every 60 seconds.

Production Activity Processing Example

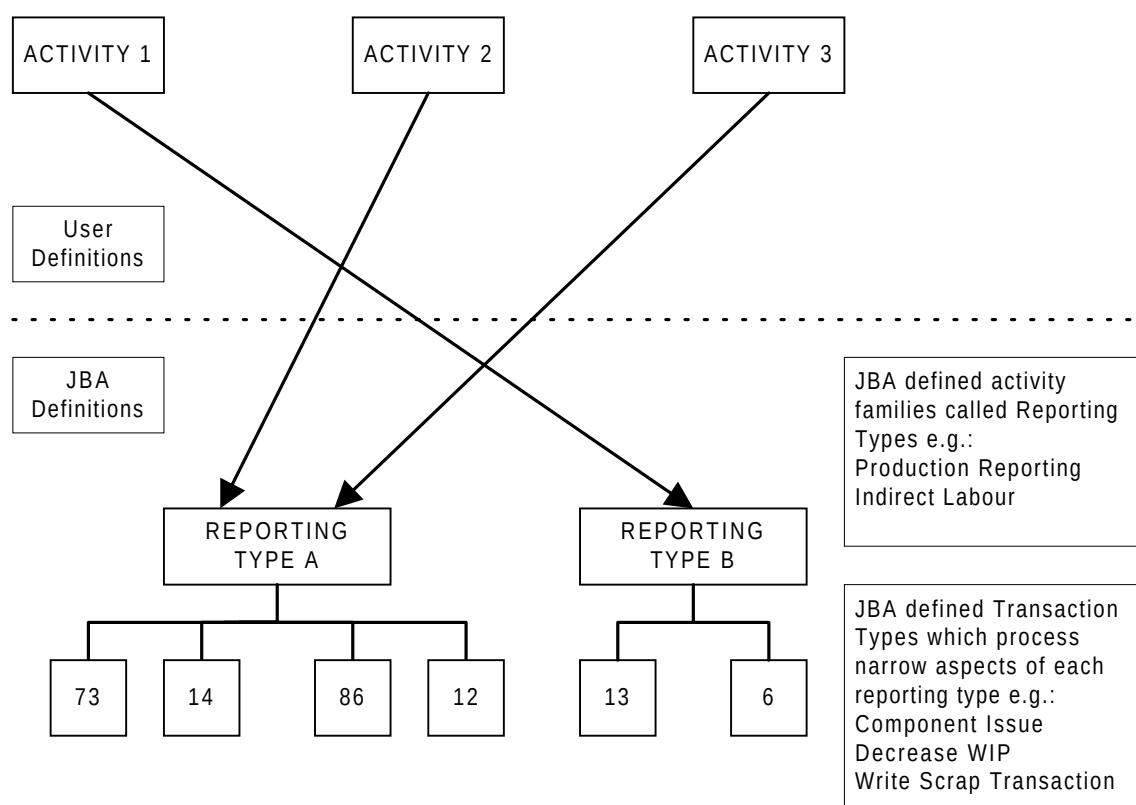

Then JBA defined transaction types are available for use within Advanced Financial Integration (AFI) for the purpose of making postings in the Financial applications.

Fields:

Activity Type

Enter the activity type to be maintained. If this is a new activity type, the Description and Reporting Type fields are displayed.

Description

Description. This field is displayed if a new activity type is entered above. Enter a text description of the activity type.

Reporting Type

This field is displayed if a new activity type is entered above. Enter the reporting type. The **F4=Prompt** is available.

Transaction Costs

Cost transactions are created as a result of additions to and subtractions from inventory and the scrapping of production as bookings are made during the manufacturing process. They can be recorded at two levels. Material and scrap movements are generated with a total movement value. This value can be optionally dissected into its elements and is derived from the standard costs of the items and operations.



Press **Enter** on the first Production Activity Control Maintenance screen to display the

second screen.

MJ010	UK Demonstration Company As shipped	User GBJBAMSS	16/12/97 12:29:41
Production Activity Control Maintenance			
Activity Type....?	WORDRP	<u>Works Order Booking</u>	
Reporting Type....?	01	PRODUCTION REPORTING	
Display Sequence.... <u>101</u>			
Activity Indicators		Report Type Ind.	
Employee No.....	3 Optional	3	
Employee Hours.....	3 Optional	3	
Item No.....	1 Mandatory	1	
Operation.....	1 Mandatory	1	
Work Station.....	3 Optional	3	
Work Station Hours..	3 Optional	3	
Department.....	3 Optional	3	
Quantities.....	1 Mandatory	3	
Shift.....	2 Prohibited	3	
Work Order.....	1 Mandatory	3	
Inventory Movement..	1 Create elemental material cost movements ..	1	
Efficiency.....	1 Create elemental scrap cost movements	1	
F3=Exit F11=Delete F12=Previous			
5-33	SR	MW	KS CL IM DM II STUD140 KB PET165S1

Fields:

Activity Type

The activity type is displayed for your information only.

Reporting Type

The reporting type is displayed for your information only.

Display Sequence

This value controls two things. First, the activity type with the lowest sequence number is the default activity type upon entering the production activity reporting screen. In addition, this number controls the sequence of activities listed within the activity prompt window.

Activity Indicators Column

The first nine activity indicators control whether specific data elements are required, optional or prohibited when reporting this Activity type. The purpose of the activity indicator is to streamline data entry by requiring only appropriate data be entered. Each reporting type imposes mandatory requirements upon certain data elements (for example, production reporting requires an Item code) but supports variations with respect to other elements.

This is where you define, as allowed by the Reporting type, which data elements you wish to require, prohibit or allow as optional in the reporting carried out in your business. Actual activity reporting occurs through options on the Production Order Control menu or the Production Schedule Control menu. The information entered by the user is validated according to the activity indicator settings of the Activity type being reported.

The Activity Indicators are as follows:

- Employee No.
- Employee Hours.

- Item No.
- Operation.
- Work Station.
- Work Station Hours.
- Department.
- Quantities.
- Shift.
- Work Order.



Note: Employee Hours are called Operation Elapsed time and Work Station Hours are called Work Station Elapsed Time on the Production Order Booking screen.

Report Type Indicator Column

This column displays the data entry characteristic defined for the data element by the reporting type definition. If a data element is mandatory or prohibited, you are not able to define the Activity Indicator any differently. If optional for the reporting type, however, you may define the data elements as mandatory, optional or prohibited.

- 1 - Mandatory.
- 2 - Prohibited.
- 3 - Optional.

Inventory Movement

You can enter the following options:

- 0 - The Activity allows reporting of production quantities for efficiency reporting purposes only and WIP inventory balances are not updated. This option allows Activity types to be established which support production reporting without concurrent WIP inventory movements.
- 1 - Specifies that WIP inventory balances are updated when production quantities are entered under this activity type via Shop Floor Reporting.

Create Elemental Material Cost Movements

- 0 - No. Do not create.
- 1 - Yes. Create up to fifteen additional movement records for issues and receipts, one for each cost element used. The value is calculated by multiplying the quantity of the movement by the appropriate cost element value. They are created for both standard and actual inventory movements.

Efficiency

You can enter the following options:

- 0 - Indicates that the standard efficiency data records are not written.
- 1 - Indicates they are to be written. Installations that have a need to track and report production efficiency should probably be set to 1, so that Transaction Manager

generates a full complement of efficiency data. This data may then be used to generate standard production efficiency reports.

It is recommended that this value be set to 0 if standard production efficiency reporting is not used. This significantly reduces the number of database records produced.

Create Elemental Scrap Cost Movements

0 - No. Do not create.

1 - Yes. Create up to fifteen operational cost element records when scrap is booked. The value is calculated by multiplying the quantity of the booked operation scrap by the cumulative cost element value. Cost records are also generated for the cumulative cost of scrap at the previous count point. The difference in scrap will be accounted for by the incremental recovery costs of each operation after the previous count point.



Note: The installation instructions for this application included a list of activity codes which MUST be set up as they are required by the system.

Reporting Type Indicator Defaults

Reporting Type	1=Mandatory 2=Prohibited 3=Optional	Employee Number	Employee Hours	Item Number	Operation	Work Station	Work Station Hours	Department	Quantities	Shift	Production Order Number	Inventory Movement	Efficiency
	Description												
01	Production Reporting	3	3	1	1	3	3	3	1	3	3	-	-
02	Issue To An Order	3	3	1	1	3	3	3	1	3	3	-	-
03	Set Up Time	1	1	3	3	1	3	3	3	3	3	-	-
04	Rework /Off Standard	1	1	1	3	3	3	3	1	3	3	-	-
05	Down Time	2	2	2	2	1	1	3	2	3	3	-	-
06	Overhead	1	1	3	3	3	3	3	3	3	3	-	-
07	Std Labour & Work Station	3	3	1	1	3	3	3	1	3	3	-	-
08	Allocate WIP To An Order	3	3	1	1	3	3	3	1	3	3	-	-
09	Deallocate WIP From An Order	3	3	1	1	3	3	3	1	3	3	-	-
10	Issue To Floor Stock	3	3	1	1	3	3	3	1	3	3	-	-
11	Rework At Operation	1	1	1	3	3	3	3	1	3	3	-	-
20	Subcontract Shipper	2	2	1	1	3	2	3	1	3	3	-	-
21	Subcontract Receipt	2	2	1	1	3	2	3	1	3	3	-	-

22	Subcontract Rework	2	2	1	1	2	2	2	1	3	3	-	-
23	Subcontract Material Shipper	2	2	1	1	2	2	2	1	3	3	-	-
24	Subcontract Progress	3	3	1	1	3	3	3	1	3	3	-	-
30	WIP Held	2	2	1	1	2	2	2	1	1	3	-	-
31	WIP Held Release	2	2	1	1	2	2	2	1	3	3	-	-
32	WIP Held To Scrap	2	2	1	1	2	2	2	1	3	3	-	-
33	Scrap WIP	2	2	1	1	2	2	3	1	3	3	-	-
34	Scrap At An Operation	3	3	1	1	3	3	3	1	3	3	-	-
35	WIP Adjustment	3	3	1	1	3	3	3	1	3	3	-	-
36	WIP Adjustment Held	2	2	1	1	2	2	3	1	3	3	-	-
40	WIP On-Hand Location Transfer	2	2	1	1	2	2	2	1	3	3	-	-
41	Held WIP Location Transfer	2	2	1	1	2	2	2	1	3	3	-	-
50	Production Receipt From Route	3	3	1	1	3	3	3	1	3	3	-	-
51	Change An Order Status	3	3	1	1	3	3	3	1	3	3	-	-
52	Change Work Station Status	3	3	1	1	3	3	3	1	3	3	-	-
90	Order Completion	3	3	1	1	3	3	3	1	3	3	-	-

Archive Production Orders



Warning: Back-ups of the data should be made off-line before these options are used.



31/MDU

These utilities provide options to remove unwanted data from the system and to carry out reconciliation. As the history records start to build up it is necessary to reduce the amount of data held live on the system.

This facility allows completed production orders to be archived. An archived version of the order header is created and the live production file records are deleted. Cancelled orders are deleted but an archived version is not created. When each order is archived the following may happen, depending on how the Company Profile has been set up:

- A report is printed for the production order.
- Booking history is deleted.
- Stockroom transactions are deleted.



Select Archive Production Orders on the menu to display the Production Order Archiving Select Parameters screen.



Tip: Any orders which are to be excluded from the archive job must be specified separately.

```

PC901                Z1 - GB Demonstration Company    USER GBJBAMS    8/12/95
                                           17:50:45

Production Order Archiving - Select Parameters.

Company to be processed:  Z1 -    Z1 - GB Demonstration Company

Last run date: 28/02/95    Last out-off date: 1/02/95    Status: Complete.

1. Enter below any orders which are to be excluded from the archiving routine:

____  ____  ____  ____  ____
____  ____  ____  ____  ____
____  ____  ____  ____  ____
____  ____  ____  ____  ____
____  ____  ____  ____  ____
____  ____  ____  ____  ____
____  ____  ____  ____  ____
____  ____  ____  ____  ____
____  ____  ____  ____  ____
____  ____  ____  ____  ____

2. Enter date up to which completed orders are to be archived:  █

F3=Exit  F8=Submit job

21-67  SF  MW  KS  IM  II  KENB20A  PET166S2
  
```

Fields:

(Untitled)

Order Numbers. Enter orders to exclude.

Date

Enter the date up to which completed orders are to be archived.



Select **F8=Submit Job** to submit the job.

Reconcile WIP Inventory



32/MDU

This option reconciles Held and Subcontract WIP inventory details with the WIP balance file (PCP61). This utility optionally audits or updates the balance totals in PCP61 to match the details.



Select Reconcile WIP Inventory on the menu to display the WIP Inventory Reconciliation Utility screen.

MJ900	Z1 - GB Demonstration Company	User GJBAMS	8/12/95 17:51:06
WIP Inventory Reconciliation Utility			
Held Inventory		:	1 (1=Yes)
Subcontractor Inventory:		:	1 (1=Yes)
Trial Report or Update :		:	1 (1=Trial Report only , 2=Update)
F3=Exit Enter=Submit Job			
05-36	SP	MW	KS IM II KENB20A PET166S2

Fields:

Held Inventory

You can enter the following options:

0 - No. WIP locations associated with organisational models are not included in either the audit or update processing.

1 - Yes. Reconciles the WIP Inventory balance file (PCP61) total Held balance with the Held WIP Inventory details.

Subcontractor Inventory

You can enter the following options:

0 - No. WIP locations associated with organisational models are not included in either the audit or update processing modes.

1 - Yes. Reconciles the WIP Inventory balance file (PCP61) total subcontract balance with the subcontract WIP inventory details.

Trial Report Or Update

You can enter the following options:

1 - Trial Report Only.

2 - Update. If you wish to apply updates to the files.



Press **Enter** on the to submit the job.

Delete Held Inventory References

1...
2...

33/MDU

This utility deletes all held inventory detail records with a remaining quantity (field QTYD54=0). These records were used to reflect held WIP inventory quantities prior to being scrapped, released or transferred.



Select Delete Held Inventory References on the menu to display the Delete Held Inventory References screen.

MJ920	Z1 - GB Demonstration Company	User GJBAMS	8/12/95 17:51:51
Delete Held Inventory References			
This utility will delete all 'Held' inventories that have been scrapped or released.			
Press ENTER to continue			
F3=Exit F12=Previous			
01-02 SP MW KS IM II KENB20A PET166S2			



Press **Enter** to submit the job.



Note: No audit report is created by this process.

Delete Production Transactions



34/MDU

This utility deletes obsolete records from transaction cost files supported by Transaction Manager. These are records with a posting date (field REFDnn in files PCP52, 56, 58, 59, 62 and 93) prior to the date entered on the parameters screen by the user and/or records flagged as posted (field GLUPnn) by the Advanced Financial Integrator if AFI is installed.



Select Delete Production Transactions on the menu to display the Delete Movements screen.

MJ930	Z1 - GB Demonstration Company	User GBJBAMS	8/12/95
			17:52:08
Delete Movements			
Posting Date : <u>8/12/95</u>			
Cost Transactions Prior to the entered date will be deleted.			
(If AFI is active transactions which have not been posted to AFI will not be deleted.)			
F3=Exit Enter=Submit Job			
05-26	SA	MW	KS IM II KENB20A PET166S2

Fields:

Posting Date

Enter a date. Cost transactions prior to this date are deleted.



Warning: Use caution as the default date on this screen is the current date. No audit report is created by this process.



Press **Enter** to submit the job.

Delete Work Station Schedules

1... **2...** 35/MDU

The purpose of this function is to remove historical work station schedule records. The system does not purge these records automatically. Retention of these records serves only to support the Schedule Adherence Report.



Select Delete Work Station Schedules on the menu to display the Delete Firm & Unplanned Work Station Schedules.

MR240	Z1 - GB Demonstration Company	User GBJBAMS	8/12/95 17:52:30
Delete Firm, & Unplanned Work Station Schedules			
Organisational Model..?. __			
From Date..... 8/12/95			
To Date..... 8/12/95			
F3=Exit F4=Prompt F8=Confirm			
06-45	SP	MW	KS IM II KENB20A PET166S2

Fields:

Organisational Model

Enter the live Organisational Model. The **F4=Prompt** is available.

From Date

Enter the beginning date for a selection date range. The system defaults this value to the current system date. This date cannot be later than the current date.

To Date

Enter the to date for the date range. Firm and unplanned schedules up to but not including this date is deleted. This date cannot be later than the current date.




Press **F8=Confirm** to submit the job.

Delete Subcontractor Shippers

36/MDU

This utility deletes all closed (field STAT96=2) shipper records. These records are used to track inventory at a subcontractor.

-  Select Delete Subcontractor Shippers on the menu to display the Delete Subcontractor Shippers screen.

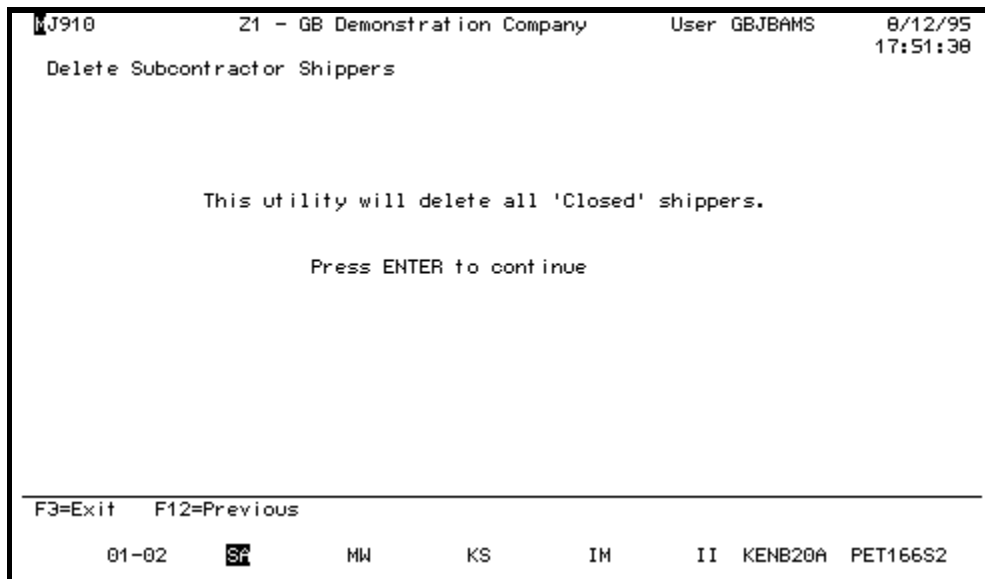

```
J910          Z1 - GB Demonstration Company      User GJBAMS      8/12/95
17:51:38

Delete Subcontractor Shippers

This utility will delete all 'Closed' shippers.

Press ENTER to continue

F3=Exit  F12=Previous
01-02   SF   MW   KS   IM   II  KENB20A  PET166S2
```

-  Press **Enter** to submit the job.



Note: No audit report is generated by this process.

Delete Forecast Model



37/MDU

This facility allows for the deletion of MPS/MRP forecast models which have been set up but are no longer required. The system displays a warning message on access. Press **Enter** to continue.



Select Delete Forecast Model on the menu to display the Forecast Model Deletion Utility screen.



Warning: This facility is intended for deleting MPS/MRP models which may have been created for purely planning purposes. YOU MUST NOT DELETE THE LIVE MODEL !

MS960	MANUFACTURING COMPANY UTILITIES	USER GBJBAMS	8/12/95 13:10:45
Forecast Model Deletion Utility			
Company code: __			
Model number: __			
F3=Exit F4=Prompt F11=Delete Model			
09-31	SA	MM	KS IM II KENB20A PET166S2

Fields:

Company Code

Enter the company number/code.

Model Number

Enter the planning model code



Select **F11=Delete Model** to delete the selected model.

Delete Company


38/MDU

This facility allows for the deletion of any Production company no longer required.

-  Select **Delete Company** on the menu to display the Company Deletion Utility screen.

A warning is displayed on the first Company Deletion Utility screen saying that you must ensure you have made a security copy of your Files Library before continuing with this procedure.

-  Press **Enter** to display the second Company Deletion Utility screen.

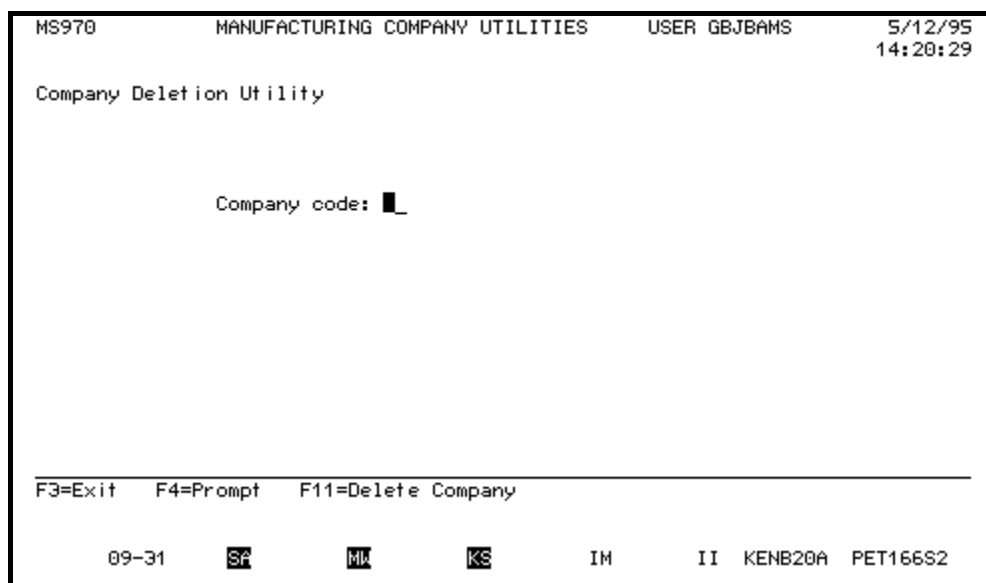

```
MS970      MANUFACTURING COMPANY UTILITIES      USER GBJBAMS      5/12/95
                                           14:20:29

Company Deletion Utility

                Company code: █

F3=Exit   F4=Prompt   F11=Delete Company

09-31    SF      MM      KS      IM      II  KENB20A  PET166S2
```

Fields:

Company Code

Enter the code of the company to be deleted. The **F4=Prompt** is available.

-  Select **F11=Delete Company** to delete the selected company.