

-
-
-
-
-

Chapter 2

Master Production Scheduling



Master Production Scheduling

Introduction

Both MPS and MRP employ near identical processing routines. This section reviews the MPS run in detail. The MRP section identifies only important differences.

The master production schedule run is a series of calculations undertaken by the system, using data derived from the other modules in the system, to construct a statement of possible future production requirement.

This can only be done when model maintenance has been completed. If required, forecast details should also be entered, before the run is started.

The output from the MPS run produces two different kinds of production requirements depending on the Production Item Master definition for each parent item. That is, whether an item is production order or schedule controlled.

For the production order based items MPS:

- Suggests new production orders to meet the required demand.
- Re-plans any existing orders, by suggesting changes to order quantities and/or due dates.

For schedule based items MPS:

- Produces suggested schedules using the planning route.
- Produces schedules which become the basis for daily work station operation schedules.
- Requires no reporting against the schedules themselves.
- Uses WIP inventory to net gross requirements.

Processing Factors

There are a number of processing factors which are reviewed here which affect the way in which the MPS/MRP runs handle data.


Structure Checks

All valid item structures are analysed and low level codes assigned to every item on the database. This is important because items must not be reviewed until all possible dependent demand has been generated.

If no changes to structures have been made since MPS was last run, the low level codes need not be re-calculated. This condition is indicated on the Run MPS option with the flag Suppress Low Level Code Generation defaulting to 1 (yes).

The system also checks the structure and produces an exception report for all invalid parent - input combinations.

For Example:

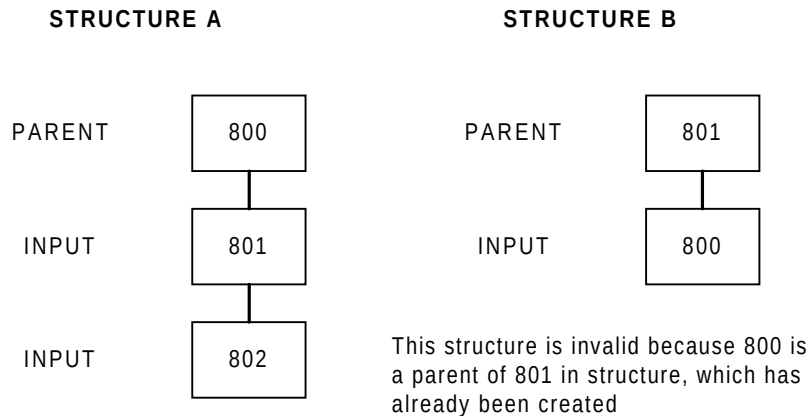

Items Selected

The following items are considered during the MPS run:

- MPS items, which have a level code (in the structure), less than or equal to the cut-off level for the run AND are defined in a stockroom included in the model.
- MPS items not in the model but with dependent MPS items that meet the above criteria.
- Non-MPS items which have a level code less than or equal to the cut off level for the run AND have MPS items as components.

Stock Availability

The opening balance for each item is taken as physical stock less frozen stock and used in the MPS review. Any negative stocks are treated as having a zero balance.

Any item transferred out, but not yet transferred in is assumed to be in the new stockroom location, but is shown as In Transit

Sales And Purchase Order Selection

Sales orders are selected for inclusion in the MPS run, where:

- The order status is blank.
- An outstanding quantity is present.
- The due date is within the MPS review dates.
- The warehouse/depot location is defined to the MPS model.

Production orders are included, where:

- The due date is within the MPS review dates.
- The receiving stockroom is defined to the MPS model. If the stockroom is not in the model then the components on each order are examined with respect to the above criteria, to see if they should be included in the run.
- There is an outstanding supply quantity defined as order quantity less quantity received.



Note: The component quantity on existing orders is calculated as; quantity required less quantity

issued to the order.

Purchase orders which have an outstanding quantity and refer to items being considered by the MPS run are included. The outstanding quantity on these orders being taken from Purchase Management (or Inventory Management).

If the order has an expected date, then this is used in preference to the due date on the order.

Consumption Of Forecast

The method of consumption of the forecast is the process of comparing forecasts with orders to determine which are used to provide the MPS demand. The Consume Forecast flag in the company profile controls the way in which the calculation is made.

Discrete Comparison (Flag Set To 0)

This method of consumption compares the forecast for the forecast period with the total demands in the same period. The greater of these is used unless modified by the item demand policy.

Demand policy is a flag set against each item in Production Details.

Cumulative Consumption (Flag Set To 1)

This method compares the cumulative forecast at the end of each period and the cumulative demand to the same date. The greater of these is used unless modified by the item demand policy.

The value entered in this field is a default value only and is overridden by an item's own demand policy.

Demand Policy

The decision on which policy to set should be made once it has been established whether the item is Master Production Schedule (MPS) or Material Requirements Planning (MRP) controlled. The method used to calculate forecast demand is controlled by the Consume Forecast flag in the company profile, and affects those policies which utilise internal or external forecasts.

- 0 - Total actual demand. MPS and MRP forecasting does not allow forecasts to be entered, and the demand is the sum of sales orders (independent demand) and dependent demand.
- 1 - Forecasts compared with independent demand. Demand is the greater of sales forecast and sales demand (independent demand).
- 2 - Forecasts compared with total demand. Demand is the greater of forecast and sales + dependent demand.
- 3 - Independent demand compared with dependent demand. Demand is the greater of sales and dependent demand. Sales forecasts may not be entered.
- 4 - Generate component forecasts. the forecast for the item is used to create forecasts for its next level of inputs as defined on the designated planning route. The derivation of demand for the components depends on the demand policy of each. No demand is created for this item, that is, no sales or dependent demand are considered.

- 5 - Make to forecast. Demand is equal to the forecast entered. No actual demand considered.
- 6 - Total demand. Demand is the sum of forecast, independent and dependant demand.

Input Effectivity

A requirement for a component is generated if:

- Its effective start date is less than or equal to the calculated operation start date.
- Its effective stop date is greater than the calculated operation start date.
- It has an issuing stockroom on the route in the MPS model.

Demand - Daily Net Demand Calculation

For each selected item the review calculation operates on a daily basis, to derive the net demand from the gross demand less available stock.

Hence:

Net Demand = Gross Demand LESS Available Stock

- Gross Demand = Netted Sales Forecasts, Sales Orders & Dependent Production Order Demand (as defined using the demand policy code) PLUS Safety Stock(Target Inventory Level) PLUS Stock Forecast.
- Available Stock = Physical Stock (for the first period in the run) OR Projected Available Stock (for future periods in the run) PLUS Outstanding Production or Purchase Order Quantities.

This results in three possibilities:

- Net Demand < 0 - In this case there is an over-supply situation. Recommendations are made to reduce supply.
- Net Demand = 0 - Supply and Demand are equal and therefore no actions are suggested.
- Net Demand > 0 - This indicates a supply shortage situation. Recommendations are made to increase existing production orders or generate new suggested orders and/or schedules.

Demand - Net Demand For Schedule Controlled Items

In the absence of production orders there is a level of work-in-progress inventory which needs to be recognised by the planning system in order to avoid over-planning materials and production.

WIP inventory balances are calculated for operations coded as count point on the planning route for the item.



Note: Only count point operation WIP inventory is included.



Note: Negative WIP is processed as a requirement. This implies that earlier operations or transfers of WIP have not been completed.

Order Policy Codes

Having calculated the net demand the review then makes recommended changes to supply orders or generate suggested orders taking into account the order policy code set in the Item Master file.

Code	Description	Recommended Quantity	Example			
A	Discrete	Required quantity	Actual demand	100		
			Recommended qty	100		
B	Discrete above minimum	Required quantity, unless this is less than the specified Minimum Order Quantity, in which case MOQ is recommended instead	Actual demand	100		
			Min Order Qty	200		
			Recommended qty (MOQ)	200		
D	Fixed quantity	Enough batches of the Fixed Quantity to satisfy required quantity	Actual demand	100		
			Fixed Qty	80		
			Recommended qty (2x80)	160		
G	Number of days supply	Sufficient quantity to satisfy all requirements for the specified Number of Days Supply from the initial shortage date	No of Days Supply	5		
			Monday	20		
			Tuesday	20		
			Wednesday	20		
			Thursday	20		
			Friday	20		
			Recommended qty (5x20)	100		
H	Multiple above minimum	Enough batches of the Multiple Order Quantity to satisfy demand, unless this is less than Minimum Order Quantity, in which case MOQ is recommended instead	Minimum Order Qty	200		
			Maximum Order Qty	500		
			Multiple Order Qty 1)	50		
			Actual demand	101		
			Recommended qty (MOQ)	200		
			2)	380		
			Actual demand	400		
			Recommended qty (8x50)			
			3)	501		
			Actual demand	550		
			Recommended qty (11x50)			
MAINTENANCE SUMMARY		A	B	D	G	H
Minimum Order Quantity needed?		no	yes	no	no	yes
Maximum Order Quantity needed?		no	no	no	no	yes
Multiple Order Quantity needed?		no	no	no	no	yes
Fixed Order Quantity?		no	no	yes	no	no
Number of Days of Supply needed?		no	no	no	yes	no

Time Periods

These are user-defined, for each model, using the Maintain MPS Reporting Profile option.

Current Date

End Date

Time

Current Date	This is the live date for the plan.
Start Date	This is the first date which is considered for the run. The orders prior to this date are ignored.
End Date	This is the last date to be considered in the run. This may be modified at run time for each item.
Time Fence	The period between the current date and the time fence date. This period is regarded as fixed, i.e. no recommendations are made during this period. This may be modified at run time to relate to the specific lead time of an item.
Safety Lead Time	This ensures that the end date is extended so that all generated demand for MPS is included in the lower level analysis.

Lead times for purchased items are calculated in the following way:

- For every item, the item/supplier profile record in Purchase Management is used. If the profile record is not available, the Lead Time field on the second Stockroom Details Maintenance screen is used.
- For scheduled or blanket orders, if any of the items do not have a delivery date, the receipt due date is assumed to be the end date for this MPS run.

The materials required for each item, at each operation, are calculated for the route, including allowance for shrinkage, if any.

Where changes to existing orders are recommended the quantity outstanding is calculated as the quantity required less the quantity issued.

If a production order is recommended to be cancelled then the component demand is zero. If materials have been issued in this case, they must be manually returned to the issuing stockroom.

Planning filters determine the extent of quantity and timing changes allowed to existing supplies for each item.

General filters for each production/purchase order and schedule status are pre-set in Parameter File Maintenance but can be enhanced by the introduction of user-defined


codes which may be applied to individual items. For more information see Maintain Parameter File.

Lot Control - Lot Planning

Stock availability for items subject to lot control takes account of the lot details set up in Inventory Management. These details include several fields which may be used to calculate:

- Total shelf life
- Customer shelf life
- First available date (FAD)
- Last available date (LAD)
- Expiry date

Lot Control - Lot Planning Time Periods

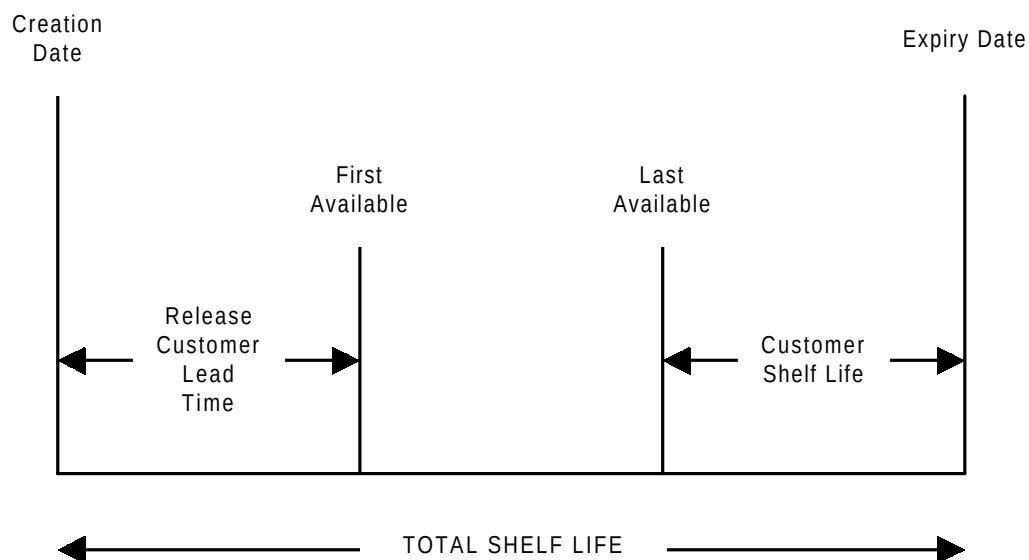


Definitions

- First Available Date = Creation Date + Release Lead Time
- Last Available Date = Expiry Date - Customer Shelf Life
- Expiry Date = Creation Date + Total Shelf Life

Lot Control - Lot Planning Logic

This takes the form of a series of steps to determine which lots are available during the planning horizon and what recommendations need to be made about each. Each lot is considered in turn and recommendations made about its use depending on its status within the Lot Planning Time Periods. MPS and MRP show additional supply status codes as indicated below:

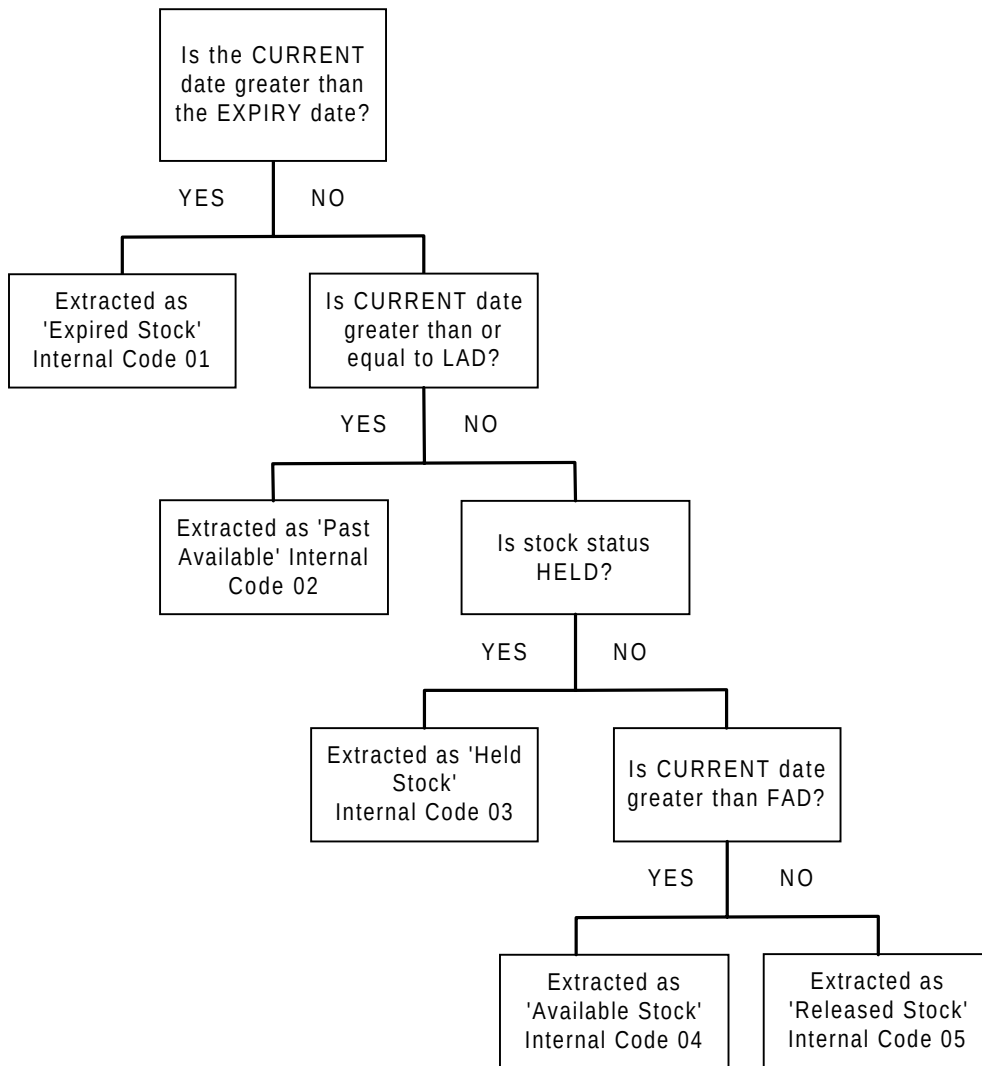

FAD = First Available Date

LAD = Last Available Date



Note: If held stock or available stock is not used it may cease to be available. If this happens then a new demand is created for this out of date (OS) stock.



Note: MPS nets off supply and demand for each day if the supply does not use up the available stock. During the netting process MPS consumes future OS stock. When the potential OS stock reaches its Last Available Date, it becomes a real demand.



Note: The internal codes can be found in the Maintain Parameter File screen.

An external cost may be defined against each internal code by the user.

It is the user-defined external code which is used as a supply status code in MPS and MRP.

Discard Obsolete Schedules

Firmed item schedules with due dates prior to the current date for the MPS/MRP run are not extracted and are deleted from the planning model.

Master Production Schedule

The Master Production Schedule is a statement of which products or items a company plans to produce, in terms of item numbers and quantities, for given planning periods and dates.

The schedule takes into account sales demand, sales forecast, over due and manual requirements. It provides the input to produce the detailed material requirements planning.

The Master Production Schedule converts sales orders, forecasts and manual demands into a detailed production schedule which satisfies the total demand.

The user arranges a number of system definition and item level planning parameters to control the calculation of demand and supply for each item.

The MPS planning process is driven by the definition of independent demands - demands which cannot be calculated but which must come from external sources. In most organisations customer orders and forecasts constitute nearly all the independent demand.

Dependent demand for an item is generated from the demand for its parent.

MPS can be carried out at any level but is normally used to determine schedules for finished items and items which are critical to the production process.

Rough cut capacity planning is provided to assist the scheduler in determining whether or not the schedule is feasible before proceeding to an MPS run. On-line enquiries and forecast up-dates allow the scheduler to maintain the schedule so that it meets the requirements of the organisation.

All MPS scheduling is carried out by using a model code.

MPS may be run and re-run at any time.


Any confirmed order or schedule, released or active order activity and any work-in-progress (WIP) stock in Production Control is taken into consideration in the next full MPS run.

Master Production Schedule - Choice Of MPS Items For Control


MPS is normally used to control the critical production items. The choice of items for control by MPS is made in the Production Details file and varies according to the requirements of each organisation.

MPS items are almost certainly used for the parent items which are actually sold, but may also include other dependent items lower down on the structure.


The following figure illustrates a single item structure which makes item A. In this kind of structure A is regarded as an MPS item. If the structure went down to several further levels, then it may be that B and C may also be considered as MPS items.

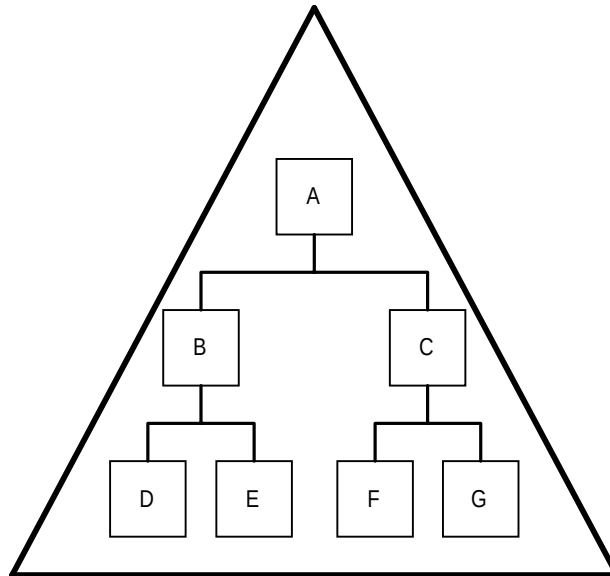

In the next figure there is a situation where the production of several parent items is made from a common raw material or sub assembly N. In this case it is likely that the critical items are again the top level parents H, I, J and K.

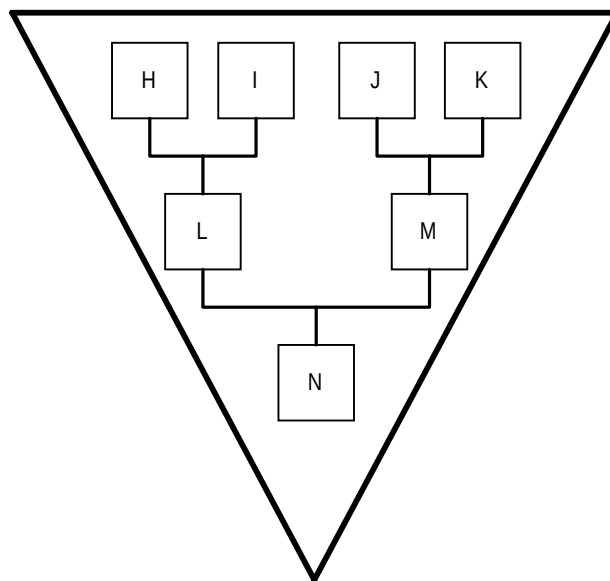

This last figure shows a structure in which there is a critical component controlling the production of several parent items. In this case R may be considered an MPS item in addition to P and Q.

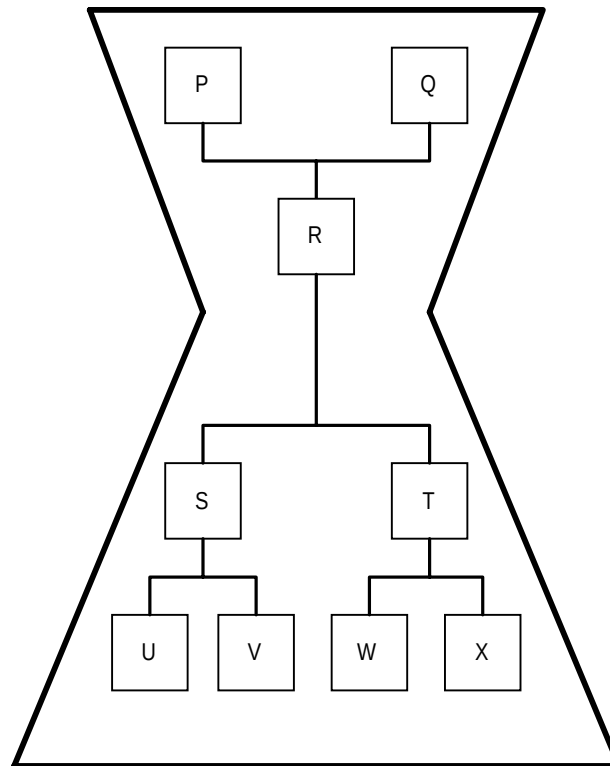

Note. If too many items are designated as MPS, it may make the review of the MPS plan difficult because of the volume of information to be reviewed.


Before making any decisions about MPS and MRP item selection, give careful consideration to other aspects of Production Planning available in the application such as flow line control and cellular planning.

These functions impose specific requirements for the use of either MPS or MRP.

Master Production Schedule - Production Scheduling

The structures and route details are used to calculate the Production lead time. This is shown on the following diagram by the length of the connecting lines. Purchase items, either have a lead time from the stockroom details file in Inventory Management or the item/supplier profile in Purchase Management. The number of production items appearing in each time period determines the load which may be measured against the capacity available.

Master Production Schedule - Capacity

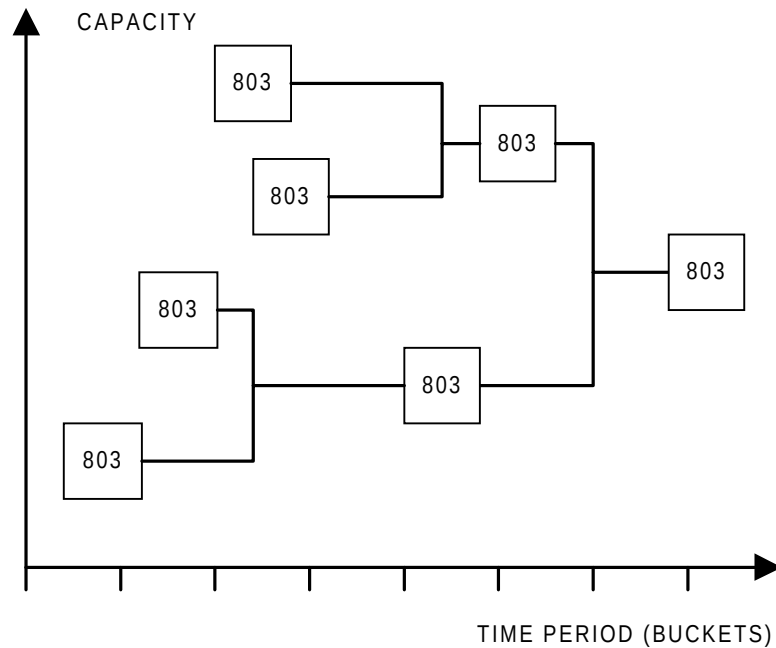

Master Production Schedule - MPS Processing


MPS requires certain maintenance tasks to be carried out before making an MPS run. After the run, enquiries and reports can be used to determine the feasibility of the model. The stages in MPS processing may be summarised as follows:

- Maintain MPS Reporting Profile (once only)
- Maintain Model Stockrooms (once only)
- Maintain Rough Cut Capacity Planning Route (User-Defined)
- Maintain Seasonal Indices*
- Maintain Family Forecasts*
- Generate Item Forecasts*
- Maintain Item Forecasts (optional)*
- Spread Item Forecast (optional)*
- Extract Customer Schedules (if required)
- Run MPS
- Run Rough Cut Capacity Planning
- Make Enquiries and run Reports
- Confirm MPS Suggested Orders/Schedules

* If MPS/MRP forecasting is to be used.

Master Production Schedule - MPS Run Options

The MPS run may be initiated so that it runs to completion as one operation; or may be set to halt part way through for demand to be manipulated manually. Once changed, the MPS run must then be restarted.

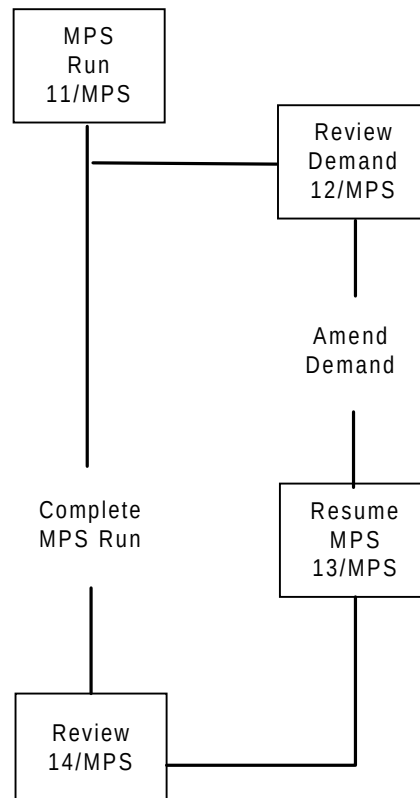

All production planning is specific to a planning model. One live planning model must be created from which suggested orders may be confirmed, and in the case of MPS, output used as input to MRP.



Note: Both MPS and MRP applications include complementary planning model creation and maintenance facilities. This describes the MPS facility in detail, but all functions and definitions apply equally well to MRP.

Maintain Model Stockrooms



1/MPS

This is the same function as described in Maintain MPS Model Stockrooms. For more information, see Production System Utilities in Production Definition Management.

Generate Model Primary Stockrooms



2/MPS

You can generate model/item primary stockroom links for ranges or groups of items. If used effectively, this greatly reduces the amount of configuration time.



Select Generate Model Primary Stockrooms on the menu to display the Generate Model Primary Stockrooms screen.

```
DB580          E3 - Enterprise-Adu-with MPL          User GBJBASCC  18/07/97
12:21:57

Generate Model Primary Stockrooms

Model.....?.  PL

Item Attribute Type?.  ____
From.....?.  ____
To.....?.  ____

Primary Stockroom...?.  ____

F3=Exit  F4=Prompt  F8=Submit

6-33  SA  MW  KS  CL  IM  DM  II  EDN400A  KB  PKH318S1
```

Fields:

Model



Note: This option is only applicable to plant model types.

You must enter a model in this field. The **F4=Prompt** is available. This model must be already set up.

Item Attribute Type

You can enter the item attribute type you wish to edit. You can enter the following options:

PGMJ - Item Group Major

PGMN - Item Group Minor

TECH - GT Family

The **F4=Prompt** is available. The Item Attribute must be already set up in major type ITAT. For more information see the Inventory Maintain Descriptions screen.

If you leave this field blank, it is assumed that a range of items is to be entered in the From and To fields.



Note: If you enter an option in the Item Attribute Type field, you can also enter a range of items in the From and To fields.

From

The items, or item attributes, are arranged in alphanumerical order in the database. You can select the first item in a range by entering an item in this field. The **F4=Prompt** is available. The item, or item attributes, must be already set up. If this field is left blank, it is assumed that the range begins from the first item, or item attribute.

To

The items, or item attributes, are arranged in alphanumerical order in the database. You can select the last item in a range by entering an item in this field. The **F4=Prompt** is available. The item, or item attributes, must be already set up. If this field is left blank, it is assumed that the range ends with the last item, or item attribute.

Primary Stockroom

You must enter the name of the primary stockroom in this field. The **F4=Prompt** is available. The stockroom must be already set up.



Select **F8=Submit** to generate the model primary stockrooms and display the menu.

Maintain MPS Reporting Profile



3/MPS

For the model it is necessary to create a reporting profile, by which the supply and demand information is displayed and reported.



Note: MPS always calculates demand and suggest orders on a daily basis.

The model periods summarise the daily data into convenient time slots or buckets for display and presentation.

Examples:

DAYS	1	2	3	4	5	6	7	8	9
MPS		A	D	E	G		K	N	O
Suggested		B		F	H		L		P
Orders and		C			I		M		Q
Dates					J				

Using three day buckets, the orders displayed are:

Period 1	Period 2	Period 3	Period 4
A,B,C,D	E,F,G,H,I,J	K,L,M,N,O,P,Q	-----

Using five day buckets, the orders displayed are:

Period 1	Period 2	Period 3	Period 4
A,B,C,D,E,F,G,H,I,J	K,L,M,N,O,P,Q	-----	-----

Using nine day buckets, the orders displayed are:

Period 1	Period 2	Period 3	Period 4
A,B,C,D,E,F,G,H,I,J,K,L,M,N,O,P,Q	-----	-----	-----



Select Maintain MPS Reporting Profile on the menu to display the first Maintain MPS Reporting Profile screen.

Fields:

Model

Enter the MPS model you wish to maintain. The **F4=Prompt** is available. This model must be already set up.



Press **Enter** to display the second Maintain MPS Reporting Profile screen.

Maintain MPS Reporting Profile Screen 2



Press **Enter** on the first Maintain MPS Reporting Profile screen to display the second screen.

MP001		Z1 - GB Demonstration Company				USER GBJBAMS		8/12/95			
								12:50:17			
Maintain MPS Reporting Profile (in days)											
Model 01 MPS Model 01						Calendar Code.. 01					
1	2	3	4	5	6	7	8	9	10	11	12
1	1	1	1	1	1	1	7	7	7	7	7
13	14	15	16	17	18	19	20	21	22	23	24
7	7	7	7	7	7	7	7	30	30	30	30
25	26	27	28	29	30	31	32	33	34	35	36
30	30	30									
37	38	39	40	41	42	43	44	45	46		
F3=Exit F12=Previous F18=Update Details											
01-02		SF		MK		KS		IM		II KENB20A PET166S2	

Fields:

Model

This field is displayed for your information only and cannot be amended.

Calendar Code



Note: This field is not applicable for the live standard or central model. The company level calendar code is assumed.

If you wish to associate a particular production calendar with this model, enter a calendar code. This calendar is used to validate suggested due dates for production orders. If this field is left blank the default company profile calendar is used for this purpose.

(Untitled)

Period. There are up to 46 periods available. When the screen is in update mode, for each period, you can enter the bucket length, in days. The periods specified must be continuous. Only the time periods defined here are displayed on reports and enquiries. The more immediate periods are normally shorter, so that relatively few orders are contained within each period. Later periods may be made longer, since such close control is not normally required this far in advance.

If you enter 1 in each period, it means that the critical resource is renewed each day (period) because the route is renewed each day (period).



Press **Enter** to save any amendments and display the first Maintain MPS Reporting Profile

screen.

Functions:

F18

Update Details/Review. This function toggles between two different settings.

Select **F18=Review** to display this screen in review mode. This means you cannot amend any of the values in the (Untitled) fields. In this case, this function is then displayed as **F18=Update Details**. When this screen is first displayed it is in review mode.

Select **F18=Update Details** to display this screen in update mode, as indicated in the top right hand corner of the screen. This means you can amend any of the values in the (Untitled) fields. In this case, this function is then displayed as **F18=Review**.

Maintain Supply Sourcing Rules

This function enables multiple supply choices to be defined for a given demand point. These choices will be considered against the quoted sourcing rule tolerances during the MPS run to determine the method of satisfying the demand situation. The supply choices are a series of routes in a user-defined sequence.

Sourcing rules may be defined at both the central (multi-plant) and the plant model.

If at the central level, then either a default rule or separate rules per each plant model can be defined. This allows for different sourcing methods dependent upon where the demand - forecast, independent and dependent - comes from; that is, central model or plant-specific model.



Tip. This must be maintained for items which can be supplied by more than one route or method, where currently critical resource levels will determine the supply choice. Further sourcing rule types can be introduced as required by the system. If sourcing rules are not present for a given demand situation, the default supply method for the demand point will be used (planning route or suggested purchase order).



4/MPS

Maintain Sourcing Rule Details For MPS Demand



Select Maintain Supply Sourcing Rules on the menu to display the first Sourcing Rule Maintenance screen.

```

IN191          JW - Multiplant Phase II QA Company USER GBUJAJFW      3/02/98
                                           12:18:53

Maintain sourcing rule details for MPS Demand

Activity..... CRTMPSSUG      Create MPS Suggested Supply

Sel Rule Item      Warehouse      <---Effectivity--->
  type            /Plant
- 004 CM-ASS4B      CM / J1        Date From Date To
- 004 CM-ASS5      CM             22/01/98 99/99/99
- 004 CM-ASS5A     CM / J1        22/01/98 99/99/99
- 004 CM-ASS5A     CM / J3        22/01/98 99/99/99
- 004 CM-ASS5A     CM / J5        22/01/98 99/99/99
- 004 CM-ASS6      CM             22/01/98 99/99/99
- 004 CM-ASS8      CM             22/01/98 99/99/9 +

Pos'n to Item..      W"House..

1=Amend 2=Details 4=Delete
F3=Exit F5=Refresh F10=Add F12=Previous

13-4  SA  MW  KS  CL  IM  DM  II  STUD140  KB  PET165S1
  
```

Fields:

Sel

Choose a selection from the options available. These are:

1=Amend. Used to add a new sourcing rule or amend an existing one.

2=Details. Used to enter more specific information for the sourcing rule. This includes the sequence in which item routes should be applied whenever capacity is exceeded on preceding routes.

4=Delete. Used to remove the selected sourcing rule details.

Rule Type

This refers to the sourcing rule type which, at the moment, is either Critical Resource (004) or Stock Sourcing (005). The sourcing rule type categorises resources such as labour, machine and stock.

Item

The item covered by the sourcing rule.

Warehouse/Plant

This is the main area in which the item in the sourcing rule is manufactured.

Effectivity Date From/To

The sourcing rule is ineffective outside these two dates.

Pos'n to Item

Provides a short cut to the line you wish to update.

W"House

Specify the warehouse required here.

-  Enter **1=Amend** in the Sel column of the first Maintain Sourcing Rule Details For MPS Demand screen to display the Amend Sourcing Rule Window (Option 1)
-  Enter **2=Details** in the Sel column of the first Maintain Supply Sourcing Rule Details For MPS Demand screen to display the Maintain Sourcing Rule Details for MPS Demand (Option 2) screen.
-  Enter **4=Delete** in the Sel column of the first Maintain Sourcing Rule Details For MPS Demand screen to remove the selected sourcing detail line.
-  Select **F10=Add** on the Maintain Sourcing Rule Details For MPS Demand screen to display the Add Sourcing Rule window.
-  Select **F12=Previous** on the Maintain Sourcing Rule Details For MPS Demand screen to display the Maintain Sourcing Rule Details For MPS Demand (F12) screen.

Functions:

F10

Add. Displays the Add Sourcing Rule window. This allows you to enter details for new rules.

F12

Previous. This function allows you to re-select the desired Sourcing Process/Activity. Currently, these are restricted to Create MPS Suggested Supply; Create MRP Suggested Supply; Sales Order Entry and Vendor Sourcing.

Amend Sourcing Rule Window (Option 1)

This window allows you to select the sourcing rule for amendment.



Enter 1=Amend in the Sel column against the line you want to change.

INI91 JW - Multiplant Phase II QA Company USER GBJBAJFW 3/02/98 12:18:53

Maintain sourcing rule details for MPS Demand

Activity..... CRTMPSSUG Create MPS Suggested Supply

Sel	Rule	Item	Effectivity---
	type		From Date To
-	004	CM-ASS4B	1/98 99/99/99
1	004	CM-ASS5	1/98 99/99/99
-	004	CM-ASS5A	1/98 99/99/99
-	004	CM-ASS5A	1/98 99/99/99
-	004	CM-ASS5A	1/98 99/99/99
-	004	CM-ASS6	1/98 99/99/99
-	004	CM-ASS8	1/98 99/99/99

Pos'n to Item.. _ F4=Prompt F8=Update F12=Previous

1=Amend 2=Details 4=Delete
F3=Exit F5=Refresh F10=Add F12=Previous

12-46 SA MW KS CL IM DM II STUD140 KB PET165S1

Fields:

Sourcing rule type

Categorises the sourcing rule from one of two currently available options:-

- Critical Resource - Covering such things as labour and machines.
- Stock Sourcing - The sourcing rule should apply to there being stock available of the item represented in the next field.

Item

The item to which the sourcing rule applies.

Warehouse/Plant

The primary area of manufacture for the item referred to in the previous field.

Demand point

The area, usually the stockroom, where demand for the item is to come from.

Effective Date From/To

The sourcing rule is ineffective outside these two dates.



Select **F8=Update** to validate and update the sourcing rule line.

Maintain Sourcing Rule Details for MPS Demand (Option 2)



Enter **2=Details** in the Sel column on the first Maintain Supply Sourcing Rules screen against the line you wish to maintain.

```

DB092          JW - Multiplant Phase II QA Company USER GBUJBAJFW      3/02/98
                                           12:20:18

Maintain sourcing rule details for MPS Demand

Item.....: CM-ASS5          Common Assembly P1 P2 P3 P5
Central.....: CM              Central Model
Rule Type.....: 004          Critical Resource
Effective From...: 22/01/98   To..: 99/99/99

Default Values
Source Type...: 02 Manufacture      Company.....:
Route.....: B                      Process Group..:
Stockroom.....:
Supplier.....: Seq...: Lead Time.....:

          Process Group/
S Seq Tp Co R Supplier      SR      Supply <---Effective--->
  1 02  A                2      Policy From      To
  2 02  B                2      22/01/98 99/99/99
  3 02  C                2      22/01/98 99/99/99

1=Amend 4=Delete
F3=Exit  F4=Prompt  F5=Refresh  F10=Add  F12=Previous  F14=Default Values

18-2      SR      MW      KS      CL  IM  DM  II      STUD140  KB  PET165S1
  
```

Fields:

Item

The item for which the sourcing rules apply.

Central/Factory

The plant in which the item is produced.

Rule Type

One of two Sourcing Rule Types:

- 004-Critical Resource.
- 005-Stock Sourcing.

Effective From/To

The sourcing rule is ineffective outside these two dates.

Source Type

The source type indicates the origin of the item. Examples include manufactured and purchased.

Company

Route

The route set up to process this item.

Process Group

If the item is a primary co-product production item, it can be produced as part of a process group. Enter the group here. No default is provided.

Stockroom

The stockroom normally associated with this item.

Cell

The cell normally associated with the item.

Supplier

The default supplier for the item.

Seq

Sequence. You can configure the preferred sequence of routes and plants. This field works in conjunction with the route and default values.

When a demand situation is encountered during the MPS run, each of the detail routes will be tried in ascending user-defined sequence, where if the rule criteria cannot be met (that is, there is insufficient critical resource), the next route in sequence will be considered.

If all of the detail routes defined fail the rule criteria, the route defined as the default route will be accessed. If defined, the supply will be raised against the preferred route regardless of the rule criteria. If not defined, the first detail route in sequence will take on the role of the default route.

To delete a sequence line, leave this field blank and select **F8=Update**.

Lead Time

The time it takes to obtain the item from a supplier.

S

The selection field. Enter one of the options displayed. 1=Amend, 2=Delete.

Seq

Sequence. The order in which production routes are used. When there is insufficient capacity on one route, then the next one in the sequence is used.

Tp

The source type for this route in the sequence.

Co

R

Route.

Supplier

The normal supplier. Used for purchased items.

SR

Stock Room.

Supply Policy

Effective From /To

The sourcing rule is ineffective outside these two dates.



Select **F10=Add** on the Maintain Sourcing Rule Details Of MPS Demand screen to display the Maintain Sourcing Rule Details Of MPS Demand (F10) screen.



select **F14=Default Values** on the Maintain Sourcing Rule Details Of MPS Demand screen to display the Maintain Sourcing Rule Details Of MPS Demand (F14) screen.

Functions:

F10

Add. Use this function to add a new sourcing rule.

F14

Default Values. Similar to the F10 function. Also allows you to specify the plant/factory.

Maintain Sourcing Rule Details For MPS Demand (F10)



Select F10=Add on the Maintain Sourcing Rule Details For MPS Demand (Option 2) screen to display the Maintain Sourcing Rule Details For MPS Demand (F10) screen.

```
DB092          JW - Multiplant Phase II QA Company USER GBJBAJFW      3/02/98
                                           12:20:50

Maintain sourcing rule details for MPS Demand                                (1 of 2)

Item.....: CM-ASS5          Common Assembly P1 P2 P3 P5
Central.....: CM              Central Model
Rule Type.....: 004          Critical Resource
Effective From...: 22/01/98    To.: 99/99/99
Sequence.....: 1
Source Type....?: 02
Company.....:
Route.....?: -
Process Group...?:
Stockroom.....?:

Supplier.....?:
Address Sequence..
Lead Time Policy?.
Lead Time.....
Supply Policy...?: -
Effective From.... 22/01/98
To..... 99/99/99

F4=Prompt   F8=Update   F12=Previous

9-22      SR      MW      KS      CL      IM      DM      II      STUD140      KB      PET165S1
```

Fields:

Sequence

The order in which routes are to be used in the production process. As capacity is exceeded in each one, so processing moves on to the next route in the sequence.

Source Type

The source type indicates the origin of the item. Examples include manufactured and purchased.

Route

The actual route to be used in the production process according to its associated sequence.

Process Group

If the item is a primary co-product production item, it can be produced as part of a process group. Enter the group here. No default is provided.



Press **Enter** on the first Maintain Sourcing Rule Details For MPS Demand (F10) screen to display the second screen.



Select **F8=Update** to validate and update this sequence number line of the sourcing rule.

Maintain Sourcing Rule Details For MPS Demand (F10) Screen 2



Press **Enter** on the first Maintain Sourcing Rule Details For MPS Demand (F10) screen to display this second screen.

DB092		JW - Multiplant Phase II QA Company USER GBUJAJFW		3/02/98	
				12:21:34	
Maintain sourcing rule details for MPS Demand					
(2 of 2)					
Percentage.....		Round to Minimum....			
Minimum Quantity...		Maximum Quantity....			
Multiple Quantity...		Rule Quantity.....			
Minimum Time.....		Maximum Time.....			
Minimum Value.....		Maximum Value.....			
Minimum Weight.....		Maximum Weight.....			
Multiple Weight.....		Weight UOM.....			
Minimum Potency....		Maximum Potency....			
Minimum Grade.....		Maximum Grade.....			
Rule Code 1.....		Rule Code 2.....			
Rule Code 3.....		Rule Code 4.....			
Rule Code 5.....		Rule Code 6.....			
F4=Prompt F8=Update F12=Previous					
1-1 SR MW KS CL IM DM II STUD140 KB PET165S1					



Select **F8=Update** to update the data in the screen and return to the Maintain Sourcing Rule Details For MPS Demand (Option 2) screen.

Add Sourcing Rule Window (F10)

-  Select **F10=Add** on the Maintain Sourcing Rule Details For MPS Demand screen to display the Add Sourcing Rule window.

INI91JW - Multiplant Phase II QA Company USER GBJBAJFW3/02/9812:22:46

Maintain sourcing rule details for MPS Demand

Activity..... CRTMPSSUGCreate MPS Suggested Supply

Sel Rule Itemtype

004CM-ASS4B

004CM-ASS5

004CM-ASS5A

004CM-ASS5A

004CM-ASS5A

004CM-ASS6

004CM-ASS8

Add Sourcing Rule

Sourcing rule type..?.

Item.....?.

Warehouse/Plant.....?.

Demand point.....?.

Effective Date From... 3/02/98

Effective Date To..... 99/99/99

Effectivity--->

From

Date To

1/98

99/99/99

1/98

99/99/99

1/98

99/99/99

1/98

99/99/99

1/98

99/99/99

1/98

99/99/99

1/98

99/99/99

1/98

99/99/99

Pos'n to Item..

F4=PromptF8=UpdateF12=Previous

1=Amend2=Details4=Delete

F3=ExitF5=RefreshF10=AddF12=Previous

12-46

SR

MW

KS

CL

IM

DM

II

STUD140

KB

PET165S1

Fields:

For details of the Add Sourcing Rule Window, see the Amend Sourcing Rule Window (Option 1).

-  Select **F8=Update** to validate and update the newly added sourcing rule line.

Maintain Sourcing Rule Details For MPS Demand (F12)



Select **F12=Previous** on the Maintain Sourcing Rule Details For MPS Demand screen to display the Maintain Sourcing Rule Details For MPS Demand (F12) screen .

INI91 JW - Multiplant Phase II QA Company USER GBJBAJFW 3/02/98
12:23:20

Maintain sourcing rule details for MPS Demand

Activity.....?.. ? _____ Create MPS Suggested Supply

SAP Sourcing Process/Activity

1 Code	Description
☒ CRTMPSSUG	Create MPS Suggested Supply
☐ CRTMRPSUG	Create MRP Suggested Supply
☐ ENTSALORD	Sales Order Entry
☐ VENDSOURCE	Vendor Sourcing

1=Select
F5=Refresh F12=Previous F15=Extend

F3=Exit F4=Prompt

11-33 **SA** **MM** KS **CL** IM DM II STUD140 KB PET165S1

Fields:

Activity

Enter one of the following four sourcing activities:

- CRTMPSSUG - Create MPS Suggested Supply.
- CRTMRPSUG - Create MRP Suggested Supply.
- ENTSALORD - Sales Order Entry.
- VENDSOURCE - Vendor Sourcing.

These sourcing activities are held on Inventory Descriptions and are also created as part of system implementation. For MPS and MRP sourcing rule maintenance purposes you would select CRTMPSSUG and CRTMRPSUG respectively.

Run MPS



11/MPS

The application takes the selected planning definition and extracts all the stockrooms defined. The stockrooms define the scope of the Master Production Schedule. Only items that reside in the stockrooms on the model are extracted for planning.



Note: It is important to ensure that calendars have been maintained to cover the duration of the review; including any future years.



Select Run MPS on the menu to display the first MPS Run Options screen.

MPS Run Options Screen 1



Select Run MPS on the menu to display the first MPS Run Options screen.

Fields:

Model

Enter the MPS model to run. The **F4=Prompt** is available.

The stockrooms defined to the selected model determine the scope of the master production schedule, and the reporting profile, how detailed information is bucketed on reports and enquiries. Only items with defined item/stockroom relationships for the stockrooms on the model are extracted for planning.

Only the model specified in the company profile can subsequently be used to confirm orders and schedules. This model is the live model, and if you need to confirm your suggested MPS orders and schedules, then you must enter the live MPS model here. If the suggestions are to be used for planning only, then you may enter any model here. The system displays the default calendar code from the models reporting profile.

On selection, the system displays date information pertaining to the last time MPS was run for the entered model.



Press **Enter** on the first MPS Run Options screen to display the second screen.

MPS Run Options Screen 2



Press **Enter** on the first MPS Run Options screen to display the second screen.

```

MP002          ***M5:Multi-Plant Manufacturing ***      USER GBJBAEL0      3/12/96
                                                    9:56:40

MPS Run Options      MPS Model      : AA Plant A
                     Production Calendar : 01

Details shown are from the last run selection.

      Start Date      000000      Overdue Days
      Current Date    031296
      Time Fence Date 000000      Time Fence Days
      End Date        000000

Enter: Lowest Level To Review..... █
      Current Date..... 031296
      Overdue Days..... —
      Time Fence Days..... —
      Safety Horizon Days..... —
      End Date..... 000000

      Suppress low level code generation.. 1 (1=Yes)

-----
F3=Exit      F5=Refresh  F12=Previous  F16=Display New Run Dates
F17=Start Run F18=Additional Parameters F22=Print Details
      13-42      SF      MW      KS      IM      II EDN400A PET179S2
  
```

Fields:

Start Date

This field is displayed for your information only. The date is updated when **F16=Display New Run Dates** is selected.

Overdue Days

This field is displayed for your information only. The date is updated when **F16=Display New Run Dates** is selected.

Current Date

This field is displayed for your information only. The date is updated when **F16=Display New Run Dates** is selected.

Time Fence Date

This field is displayed for your information only. The date is updated when **F16=Display New Run Dates** is selected.

Time Fence Days

This field is displayed for your information only. The date is updated when **F16=Display New Run Dates** is selected.

End Date

This field is displayed for your information only. The date is updated when **F16=Display New Run Dates** is selected.

Lowest Level To Review

MPS enables you to master schedule at any level in your product structure.

For example, you may wish to control schedules for end products together with schedules for components, where one is dependent upon the other.

The level you specify determines the number of levels of product structure that are analysed. Master scheduled items with low level codes less than or equal to the entered level are potentially considered for review, depending upon their stockroom definition.

If you only wish to schedule end items (products), leave this field blank or enter zero. To schedule first level items enter 1, for second level enter 2 and so on.

Current Date

This is the base date of the review.

The review start date and frozen schedule time fence are calculated from this date.

Overdue Days

Enter the number of days of overdue supply and demand that you wish the MPS to consider. This number of days is subtracted from the current date to give the MPS start date. All supplies and demands due on or after this date are included.

Time Fence Days

Enter the number of days to be included in the frozen portion of the schedule. The system does not make any recommendations to schedules due within the time fence or suggest new orders within it. The time fence is calculated as the current date plus the number of days entered here. The time fence period is often the lead time of the master schedule item.

Safety Horizon Days

This entry is used in conjunction with the item end date to establish planning horizons for all items in the review. It ensures that all generated demand derived from a master schedule plan is included in lower level analysis.

End Date

Enter the end date of the MPS review. This date should be the longest cumulative lead time of your end products plus a safety factor.

Suppress Low Level Code Generation

In order to include all requirements for an item it is essential that the system has a record of the lowest level within a planned product structure that an item occurs.

If product structures have changed during the period since the last MPS run, the system automatically sets this field to 0 (generate) so that new low level codes can be calculated.

If the field defaults to 0 (generate) do not change it to 1(suppress) unless you are sure that the structure changes the system has detected do not affect the model to be processed.

The low level code routine may be safely suppressed if the additional Low Level Code Generation option on the Production Utilities menu is submitted prior to the MPS run.

0 (or blank) - No. Do not suppress low level code generation. The system displays the warning message '*** Changes made in structure currently exist ***' if there are any changes to structures, or non-standard production orders included.

1 - Yes. Suppress low level code generation.



Select **F18=Additional Parameters** on the second MPS Run Options screen to display the second Additional Parameters window.

Functions:

F16

Display New Run Dates. Select this function to recalculate the dates displayed at the top of the screen using the data entered in the fields.

F17

Start Run. This automatically generates a report detailing the MPS parameters used.

F18

Additional Parameters. This displays the second Additional Parameters window.

F22

Print Details. Provides a summary report of the selected planning parameters for the MPS model.

Additional Parameters (F18)

A continuation screen from MPS Run Options.



Press **F18=Additional Parameters** on the MPS Run Options screen to display the Additional Parameters screen.

```

MP017          E3 - Enterprise-Adu-with MPL          USER GBJBASCC   23/10/97
                                                    11:14:08
Additional Parameters  MPS Model      : 01 01 Multiplant STANDARD model
                    Production Calendar: 01                      (1 of 2 )

Planning Basis..... 2  0 = Standard
                        1 = Multi-plant Network
                        2 = Single Unit Sourcing

Planning Unit Parameters
Use Item Time Fence..... 0  (1=Yes)
Use Item End Date..... 0  (1=Yes)
Dependent Requirements Basis..... - (0=Suggested, 1=Firm)
Forecast Basis..... - (0=Daily, 1=Period)
Confirmed Schedule Policy.....?. - Exclude

F3=Exit  F4=Prompt  F8=Update  F12=Previous

6-37  SA  MW  KS  CL  IM  DM  II  EDN400A  KB  PET165S2

```

Fields:

Planning Basis

If you are using the Multiplant module then this will allow you to select from multiplant, multi-sourcing or cellular production. Otherwise the default is standard.

Use Item Time Fence

Indicates if you want to use the Time Fence Policy as set in Production Details.

Use Item End Date

Allows you to use the end date, as held in Inventory Details. It determines the date after which items can no longer be used.

Dependent Requirements Basis

This enables you to define what is passed down from parent to dependent items. Firm does not take into account any changes in dependent requirements, whereas Suggested does reflect changes in dependent items.

Forecast Basis

Specifies what to use as the start or end day of a forecast. If you select Daily, the Monday is taken as the start date. Period indicates that Sunday should be used.

Confirmed Schedule Policy

You can enter the following options:

0 - Exclude. Recalculate the whole MPS plan.

1 - Include. Include any confirmed manufacturing schedules in the plan.

The default is taken from the planning option section within Company Profile.



Select **F8=Update** to validate the data you have entered and display the MPS run Options screen.

Review Demand



12/MPS

The calculated planned demand can be examined before it is used to calculate the MPS. The demand can be maintained before resuming the run. Any adjustments made are flagged as manual adjustments and identified by the users ID in the plan.

The option to stop the run to allow review of demand must be taken at the start of the run. If a run is started without the Review Demand option being selected, it continues until fully complete with no opportunity to review.



Select Review Demand on the menu to display the first MPS Demand Review screen.

MPS Demand Review Screen 1



Select Review Demand on the menu to display the first MPS Demand Review screen.

Fields:

Model

Enter the model over which MPS is being run, and which you want to review.

Item

The demand that has been extracted by MPS may be reviewed on an item by item basis. Enter here the item for which you wish to maintain the demand. You see the calculated demand using the demand policy code selected for this item in the Item Master file.



Press **Enter** on the first MPS Demand Review screen to display the second screen.

MPS Demand Review Screen 2



Press **Enter** on the first MPS Demand Review screen to display the second screen.

MP150		Z1 - GB Demonstration Company		USER GBJBAMS		8/12/95	
						13:24:25	
MPS Demand Review		Demand Policy F/C vs Total Demand					
Model	01	MPS Model 01					
Item	MS001	Product A					
Period							
Start	End	Forecast	Sales	Net Demand			
12/12/95			5.00	<u>5.000</u>			
20/12/95			134.00	<u>134.000</u>			
5/01/96			48.00	<u>48.000</u>			
2/02/96			12.00	<u>12.000</u>			
4/02/96		21.516		<u>21.516</u>			
3/03/96		21.517		<u>21.517</u>			
31/03/96		25.819		<u>25.819</u>			
5/05/96		25.820		<u>25.820</u>			
F3=Exit F8=Update F12=Previous							
10-54		SP	MM	KS	IM	II KENB20A	PET166S2

Fields:

The following fields are displayed:

- Model
- Item
- Demand Policy
- Independent Demand
- Forecast Comparison

The following fields are displayed for each demand:

- Period Start
- Period End
- Forecast
- Sales Orders
- Customer Schedules

Net Demand

This defaults to the net demand as calculated by MPS. You can amend the demand quantities before continuing the MPS run.

Resume MPS

13/MPS

Having reviewed the demand it is necessary to request a resumption of the run. This allows the final MPS calculation to be made. It is possible to start a further MPS run without resuming the previous run. If a run has been made without the request to review demand, then it is still possible to do this after the run has been fully completed. Of course any changes now made to the demand are not effective in the completed run. It is necessary to re-run MPS to make these changes effective.



Select Resume MPS on the menu to display the first MPS Run Options screen.

Fields:

Model

Enter the required model.



Note: This should be a model for which the demand has been reviewed.



Press **Enter** on the first MPS Run Options screen to display the second screen.

MP130	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95 13:24:49				
MPS Run Options							
Production Model		01 MPS Model 01					
Production Calendar							
Details shown are from initiating run selection.							
Lowest level to Review		2					
Run Dates	Start Date	26/11/95	Overdue Days	5			
	Current Date	1/12/95					
	Time Fence Date	4/12/95	Time Fence Days	3			
	End Date	30/05/96	Safety Lead Time	5			
	Use Item End Date	0					
	Use Item Time Fence	0					
F3=Exit F12=Previous F17=Continue Run							
01-02	SA	MA	KS	IM	II	KENB20A	PET166S2

Functions:

F17

Continue Run.

Review MPS



14/MPS



Select Review MPS on the menu to display the first Enquiry screen.

Fields:

Model

Enter the planning model you wish to review.



Press **Enter** on the first Enquiry screen to display the second screen.

Enquiry Screen 2



Press **Enter** on the first Enquiry screen to display the second screen.

MP050	E3 - Enterprise-Adu-with MPL	USER GBJBASCC	18/07/97 12:37:59
Enquiry			
Model.....	CM	Central Model	
Select Item	?		
Plant.....	?		
Planner.....	?		
Default Detail Panel..	-	(1=Yes)	
F3=Exit F4=Prompt F12=Previous			
6-37	SA	MW	KS CL IM DM II EDN400A KB PKH318S1

Fields:

Model

This field is displayed for your information only and cannot be amended.

Select Item

Enter an item to review a product. If the item does not exist, the next item's details will be displayed. The **F4=Prompt** is available.

Plant

This field is shown only if the Planning Basis field on the Additional Parameters window of the Run MPS option is set to 1 (multi-plant). The **F4=Prompt** is available.

You can enter the following options:

(Blank) - A global view of all plants and the central model where the item exists.

Plant specified - The views you see will include only this plant. You can enter the central model if required.

Planner

Enter a planner. The review will only include items for that planner. If the planner does not exist, the next planner's details will be displayed. The **F4=Prompt** is available.

Default Detail Panel

When you press **Enter** to go to the next screen, that screen can be either the summary or the detail screen, depending on the choice you make here. The screen

you select will remain the default while you stay in the option. You can enter the following options:

0 (or blank) - No. The summary screen is the default.

1 - Yes. The detail screen is the default.



Press **Enter**, and either the Enquiry Summary screen or the Enquiry Detail screen is displayed, depending on the entry in the Default Detail Panel field on the Enquiry screen.

Enquiry Summary Screen

The Enquiry Summary screen displays a summary of the item supply and demand schedule, using the item periods defined in the model. Key item information is displayed, including the planning category, replenishment parameters and the current stock balance.



If 0 is entered in the Default Detail Panel field on the second Enquiry screen, press **Enter** to display the Enquiry Summary screen.



Select **F17=Summary** on the Enquiry Detail screen to display the Enquiry Summary screen.

MP050	Z1 - GB Demonstration Company			USER GBJBAMS	8/12/95
					13:26:14
Enquiry - Summary		Planning Model 01 MPS Model 01			
		Start 26/11/95	Time Fence 4/12/95	End 30/05/96	
Item.... MS001	Product A		MPS Item		
Planner.. MS	Product Group..		MS1	UOM EA	
GT Family.....			Last Planned.... 1/12/95		
Order Policy.. A	Opening Stock..		25.000	Fixed Qty...	100.000
Type..... M	Safety Stock..		234.000	Min.Batch...	100.000
Production Seq	Avg.Mnly Usg..		.000	Max.Batch...	1000.000
Lead Time....	Supplier.....			Multiples...	25.000
	<u>01/03/96</u>	<u>08/03/96</u>	<u>07/04/96</u>	<u>07/05/96</u>	<u>TOTAL</u>
Actual Dem.					199
Forecast...	31	37	37		136
Adj.Demand.	22	26	26		294
Supply.....					
Available..	217-	243-	269-	269-	
Net Reqmt..	460	488	514	503	
Plan Recpt.	22	28	26		514
Plan Avail.	243	245	245	245	
F3=Exit	F12=Previous	F17=Detail	F19=Next Item	F20=Next Planner	
F16=Previous Item					
06-42	SA	MA	KS	IM	II KENB20A PET166S2

Fields:

The following fields are displayed:

Planning Model

Start

Time Fence

F/C Time Fence

End

Item

Plant

Plant. This field is displayed if a plant-specific view is taken.

Planning Basis

Planner

Product Group

UOM

GT Family

Last Planned

Order Policy

Opening Stock

Fixed Qty

Type

Safety Stock

Min Batch

Production Seq

Avg Mnly Usg

Max Batch

Lead Time

Supplier

Multiples

If a global or multi-plant plant-specific view is taken, certain summary fields are not displayed due to the fact that more than one definition of the entity could exist in the current view. Each item/model, for example, could have a different order policy.

A list of periods is displayed, starting with Overdue, and then the date of each period. The following fields are displayed for each period:

Actual Dem

Actual Demand. Total Sales Demand + Dependent Demand due in the period (dependent demand is generated component requirements for orders offset by lead time from the parent order due date).

Forecast

Total sales forecasts in the period.

Adj Demand

Adjusted Demand. The calculated demand due in the summary reporting period. This quantity is determined by the demand policy for the item, the forecast consumption method, and manual adjustments to demand.

Supply

The total of existing supplies due in the summary.

Available

This is calculated as: The Previous Period Quantity Available + Supply - Adjusted Demand (In the first period, Previous Available = Physical Stock on hand)

Net Reqmt

Net Requirement. The calculation is: Adjusted Demand + Safety Stock + Largest Stock Forecast in period - Previous Period Available - Existing Supplies.

Plan Recpt

Planned Receipts. The MPS suggested supply schedule for production orders and purchase orders. This bucket shows the total of all MPS recommended supplies due in the period.

Plan Avail

Planned Available. This is calculated as: The Previous Period Planned Available + Planned Receipts - Adjusted Demand (In the first period, Previous Planned Available = Physical Stock on hand)



Note: You can press the Page Up and Page Down keys to display the previous or next periods.

Functions:

F16

Previous Item. Select this function to display the previous item.

F17

Detail. Select this function to display the first Enquiry Detail screen.

F19

Next Item. Select this function to display the next item, or next item within this planner group.

F20

Next Planner. Select this function to display the first item from the next planner group.

Enquiry Detail Screen 1

This screen displays the detailed results of the MPS run for this item. All supply or demand records processed or generated by the MPS run are displayed, together with their corresponding recommendations and projected inventory balances. The data can be presented in two sequences:

- Supplies in MPS recommended due date order
- Supplies in current due date sequence

Select **F21=Change Sequence** to toggle between the two displays. The projected available balance reflects the sequence chosen.

➡ If 1 is entered in the Default Detail Panel field on the second Enquiry screen, press **Enter** to display the first Enquiry Detail screen.

➡ Select **F17=Detail** on the Enquiry Summary screen to display the first Enquiry Detail screen.

```

MP050          ***M6:Multi-Plant Manufacturing ***          USER GBJBAEL0          3/12/96
                                                         11:41:20

Enquiry - Detail          Planning Model Central Model 'live'
  Start 20/10/96

Item.... P1          Product 1(Sch)          MPS Item

                                Planning Basis: Multi-plant
MPS <--- Demand ---> <----- Supply ----->
0 Date Ref          Quantity St Supply Quantity St Action          Available
■ 21/10          W000001          10 IW          31
- 21/10          Route A          20 SS          51
- 21/10          Route A          10 SS          61
- 31/10 0001793          200 SO Route A          200 SS          61
- 99/99          W000002          10 CW CA          61

2=Maintain Supply  3=Display All Outputs  5=Maintain Order  6=Peg Demand
F3=Exit           F5=Refresh              F12=Previous      F23=More Options
F10=New Supply    F14=Hide Exc.Demand      F15=Inc.Zero Supply F24=More Keys
09-02            S2                MW                KS                IM                II EDN400A PET179S2

```

Fields:

The following fields are displayed:

- Planning Model
- Start
- Time Fence - suppressed if a global view is taken for a multi-plant review. This is because it could differ for each item/model.
- F/C Time Fence - suppressed if a global view is taken for a multi-plant review. This is because it could differ for each item/model.
- End - suppressed if a global view is taken for a multi-plant review. This is because it could differ for each item/model.

- Item
- Plant - shown if a plant-specific view is taken
- Planning Basis

The following fields are displayed for each demand and supply for each date:

O

Option. You can enter the following options:

2 - Maintain Supply. Maintains existing schedule item supply. Select this option to display the Supply Maintenance window.

3 - Display All Outputs. Displays all outputs for a process group item only. Select this option to display the All Outputs window.



Note: If a supply item is selected which, at the end of the production process, creates additional outputs (for example by-products or waste) then, when 3 is entered in the O field, the All Outputs window displays the outputs for the process group of the primary co-product.

5 - Maintain Order. Maintains a production or purchase order. Select this option to display the Production Order Maintenance screen.

6 - Peg Demand. Pegs dependent demand only. This displays the MPS schedule for the parent item that generated the demand. This is only possible for component items.

7 - Supply Details. This option is used if the Planning Basis is Multi-Plant or Single Unit Sourcing. If you are enquiring on a sourced plant model within, or independent of, a central model, enter this option to display the Supply Details window.

8 - Demand Details. This option is used if the Planning Basis is Multi-Plant or Single Unit Sourcing. If you are enquiring on a sourced plant model within, or independent of, a central model, enter this option to display the Demand Details window.



*Select **F23=More Options** to display options 7 and 8 at the bottom of the screen. You do not need to display the options to select them..*

MPS Date

For generated demand, this is the required date of the demand, reflecting higher level MPS suggestions.

For independent demand, the forecast or shipment date is displayed.

For a supply, it is either the MPS recommended due date or the current due date, depending on the display.

If the date is shown as 99*** this indicates a zero demand, with an existing supply.

Demand

Ref

Demand Reference. This is the sales order or contract number for the demand of the item at the MPS date.

Quantity

This is the amount of the item in demand.

St

Demand Status. The following status codes can be displayed:

Cn - Where n=1 to 5. Release schedule horizons

CA - Cancelled

CD - Confirmed demand

CI - Daily Call In (DCI) for release schedule horizons

CR - Receipt advice notification (RAN) for release schedule horizons

CS - Confirmed schedule

CW - Confirmed production order

DO - Distribution order

DX - Excluded distribution order

FC - Sales forecast

FS - Stock forecast

FX - Excluded sales forecast

IW - Active production order

MA - Manual adjustment

OS - Out of date stock

PW - Planned production order

PX - Excluded purchase order

RW - Released production order

SO - Sales order

SP - Suggested purchase order

SS - Suggested schedule

ST - Suggested transfer order

SW - Suggested production order

SX - Excluded sales order

TO - Transfer order

TW - Active production order

TX - Excluded transfer order

WX - Excluded production order

Xn - Where n=1 to 5. Release schedules

XI - Daily call in (DCI) for release schedules

XR - Receipt advice notification (RAN) for release schedules

XS - Excluded firm schedule

XT - Excluded suggested transfer order

XW - Phantom suggested production order

Supply

Supply

This is the reference number for the supply of the item at the MPS date.

Quantity

This is the amount of the item to be supplied.

St

Supply Status. The following status codes can be displayed:

CA - Cancelled

CP - Confirmed purchase order

CS - Confirmed schedule

CW - Confirmed production order

DO - Distribution order

GI - Goods inwards (Purchase Management)

IS - Inspection (Purchase Management)

IW - Active production order

PW - Planned production order

RW - Released production order

SP - Suggested purchase order

SS - Suggested schedule

ST - Suggested transfer order

SW - Suggested production order

TO - Transfer order

UP - No call off

XW - Phantom suggested production order

Action

The recommended action for the supply order. One of the major purposes of the Master Production Scheduling is to provide planning support for order actions needed to ensure the orderly supply of material.

Information is provided to assist planners in making decisions on the action required to optimise the supply schedule. Procurement of purchased items is also supported by suggestions to change purchasing schedules and to create new purchase orders.

The advice is based on the latest status of material requirements and the current inventory order status. The following recommendations can be made:

CA - Cancel order

CQ - Change quantity

DI - Dispose of lot
EF - Check effectivity
EI - Expedite and change effectivity
EICQ - Expedite, change quantity and check effectivity
EL - Extend life of lot
EO - Defer and check effectivity
EOCQ - Defer, change quantity and check effectivity
EQCQ - Change quantity and check effectivity
MS - Manual supply
RI - Expedite (reschedule in)
RICQ - Expedite and change quantity
RL - Release lot
RO - Reschedule out (defer)
ROCG - Defer and change quantity



Note: The recommendation codes and associated descriptions can be amended using the Maintain Parameter File option.

Available

The planned available stock. When in MPS recommended due date sequence, this reflects the supply recommendations. In current due date sequence, it reflects the current supply schedule in terms of quantities and due dates. It is calculated for each day that a demand or supply line is present and represents the projected Inventory level.

In MPS recommendation sequence, this field is calculated as: Physical stock (first detail line only) or quantity available on previous date LESS demand for that date LESS safety stock PLUS supplies currently due on that date.



Note: The dependent demand for a given date is always generated from a higher level recommendation and represents the MPS suggested schedule and does not change when the supply sequence is changed.



Enter 2 in the O field on the first Enquiry Detail screen to display the Supply Maintenance window.



Enter 3 in the O field on the first Enquiry Detail screen to display the All Outputs window.



Enter 5 in the O field on the first Enquiry Detail screen to display the Production Order Maintenance window.



Enter 7 in the O field on the first Enquiry Detail screen to display the Supply Details window. This option is used if the Planning Basis is Multi-Plant

or Single Unit Sourcing.



Enter 8 in the O field on the first Enquiry Detail screen to display the Demand Details window. This option is used if the Planning Basis is Multi-Plant or Single Unit Sourcing.



Select **F10=New Supply** on the first Enquiry Detail screen to display the Supply Maintenance window.



Select **F18=Header Detail** on the first Enquiry Detail screen to display the Header Details window.



Select **F22=Detail Line** on the first Enquiry Detail screen to display the second screen. details for each line.

Functions:

F10

New Supply. Add a new supply. Select this function to display the Supply Maintenance window.

F14

Show/Hide Exc Demand. Toggles between displaying Hide Excluded Demand and Show Excluded Demand records which have been excluded from the netting process can therefore be optionally displayed.

F15

Inc/Exc Zero Supply. Toggles between displaying Inc Zero Supply and Exc Zero Supply.

F16

Previous Item. Displays the previous item.

F17

Summary. Select this function to display the Enquiry Summary screen for this item.

F18

Header Detail.

F19

Next Item. Select this function to display the next item, or next item within this planner group.

F20

Next Planner. Select this function to display the first item from the next planner group.

F21

Change Sequence. Toggle between recommended and current date order.

F22

Detail Line. Allows additional details to be displayed.

F23

More Options. This function is only available if you are enquiring on a sourced plant model within, or independent of, a central model. It toggles between the standard options and the options 7 (Supply Details) and 8 (Demand Details).

F24

More Keys. When there is not enough room to display all the functions at once, this function enables you to display those which are hidden.

Supply Maintenance Window (Option 2)

If you are operating multi-plant or multi-sourcing, the associated plant is displayed.



Enter 2 in the O field on the first Enquiry Detail screen to display the Supply Maintenance window.

```

MP050      ***M6:Multi-Plant Manufacturing ***      USER GBJBAEL0      3/12/96
                                           11:42:51

Enquiry - Detail      Planning Model Central Model 'live'
Start 20/10/96
Item.... P1          Product 1

MPS <---- Demand ----> <----->
0 Date Ref      Quantity St Supply
- 21/10                W000001
2 21/10                Route A
- 21/10                Route A
- 31/10 0001793      200 SO Route A
- 99/99                W000002

Supply Maintenance
Item: P1
Product 1(Sch)

Due Date   : 21/10/96

Quantity: 20.000
Route.....?. A

Planning Filter.....?. M
Confirm Schedule..... - (1=Yes)

F4=Prompt F5=Refresh F12=Previous
Bottom
2=Maintain Supply 3=Display All Outputs 5=Maintain Order 6=Peg Demand
F3=Exit           F5=Refresh           F12=Previous      F23=More Options
F10=New Supply    F14=Hide Exc.Demand F15=Inc.Zero Supply F24=More Keys
12-54            SF MW KS IM II EDN400A PET179S2
  
```

Fields:

Supply Date

If a Delivery Lead Time is defined for this item on the Production Details file, then this date is the creation (or made by) date which is offset from the due date by the number of days specified for this item in the file.

Due Date

Date suggested by MPS. Amending the date on a firm schedule sets an MRP trigger.

Quantity

Quantity suggested by MPS. Amending the quantity on a firm schedule sets an MRP trigger.

Route

Allows a change of route to be made.

Planning Filter

If any, may be set here for this specific item.

Confirm Schedule

You can enter the following options:

0 - To return a confirmed schedule to suggested provided that an equivalent firm work station does not exist.

1 - To change to a confirmed schedule which is retained on the next MPS run.



Press **F12=Previous** to return to the first Enquiry
Detail screen.

All Outputs Window (Option 3)

This window displays all outputs for a process group item.



Enter 3 in the O field on the first Enquiry Detail screen to display the All Outputs window.

MP050	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95
Enquiry - Detail		Planning Model MPS Model 01	13:35:18
COP01	Co-product A	Start 26/11/95 Time Fence 4/12/95 End 30/05/96	
		MPS Item	

All Outputs					
Process Group: MS003		Co-product process group			
Item	Description	Type	Suggested Qty	Prm	
COP01	Co-product A	1	260.000	1	
COP02	Co-product B	1	86.667		
BYP01	By-product A	2	433.335		
WAS01	Waste product	3	346.668		
More:					

F12=Previous F19=Planned Quantities					
-	2/02 0000242	167 SO Route 1	62 SW		379
-	2/02 UNAVAIL	67 OS			312
-	4/02	43 FC			269
-	4/02	19 FS			269
More...					

2=Maintain Supply	3=Display All Outputs	5=Maintain Order	6=Peg Demand
F3=Exit	F5=Refresh	F12=Previous	F24=More Keys
F10=New Supply	F14=Hide Exc.Demand	F15=Inc.Zero Supply	F16=Previous Item
10-02	SA	MM	KS IM II KENB20A PET166S2

If a co-product item is entered in the Select Item field on the first Enquiry screen, then this window displays the outputs for the process group of the primary co-product. They are calculated in the ratios of the quantities on the planning route. Outputs for each process group can be seen on the appropriate MPS line.

Functions:

F19

Planned Quantities. Displays planned quantities.



Press **F12=Previous** to return to the first Enquiry Detail screen.

Production Order Maintenance Screen (Option 5)

You can maintain an existing production order or to create a new order against a suggested order.

The order header screen from Production Control is displayed. All the various order maintenance options can be used. If option 5 is taken against a suggested purchase order and multi-plant or multi-sourcing is used, the plant is displayed.



Note: There is a further option to create production orders in bulk via the Confirm MPS Suggested Orders, which is discussed in a later section. Suggested schedules can be confirmed (that is, made firm) by using the MPS Suggested Schedules option.



Warning: It must be remembered that the ability to maintain and create production order can only be carried out for the planning model defined in the company profile, or for an autonomous plant.



Enter 5 in the O field on the first Enquiry Detail screen to display the Production Order Maintenance window.

PC151	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95
Production Order Maintenance			13:27:18
			Week: 49 95
Order Number.....:	_____	* Enter new order details.	
Order Type.....:	1 (0=Non-Standard)		
Item.....?..:	MS001		
Process Group.?.:	_____		
Route Code....?..:	1		
Quantity.....:	5.000	UOM.....:	
		Stockroom:	
Due Date.....:	121295	Due Week.....:	_____
Start Date.....:	_____ OR	Start Week.....:	_____
Calendar Code...?.	01	Reference 1.....	_____
Planning Filter.?.	_____	Reference 2.....	_____
Output Validation. @		Shelf Life Val.... @	
F3=Exit	F4=Prompt	F8=Add new order	F12=Previous
F16=Item search	F19=Create details		
00-22	SA	MM	KS IM II KENB20A PET166S2



Press **F12=Previous** to return to the first Enquiry Detail screen.

Supply Details Window (Option 7)



This option is used if the Planning Basis is Multi-Plant or Single Unit Sourcing.

Enter 7 against supply to see the demand relating to that supply (thus, at plant level, showing why the supply was raised).



Enter 7 in the O field on the first Enquiry Detail screen to display the Supply Details window.

Fields:

O

Option. You can enter the following options:

1 - Demand Parameters. Select this option to display the demand parameters used when processing the demand.

6 - Peg to Demand. Select this option to peg to the item demand plant.

Functions:

F6

Peg To Transfer. Select this function to peg to the item transfer from plant.



Note: This function is only applicable if a distribution order, transfer order, or in transit supply is reviewed.

F14

Supply Parameters. Select this function to display the supply parameters used (supply policy, etc.) to generate a new supply, or suggest a change to an existing firm supply.

F15

Rule Details. Select this function to display the sourcing rule type used to generate the suggested supply and the resultant outcome.

F19

Toggle between suggested and planned supply dates and quantities.

Demand Details Window (Option 8)



This option is used if the Planning Basis is Multi-Plant or Single Unit Sourcing.

Enter 8 against demand to see the supply raised to satisfy the demand.



Enter 8 in the O field on the first Enquiry Detail screen to display the Demand Details window.

```

MP050      ***M6:Multi-Plant Manufacturing ***      USER GBJBAEL0      3/12/96
                                                    11:48:41
Enquiry - Detail      Planning Model Central Model 'live'
  Start 20/10/96
Item.... P1          Product 1(Sch)          MPS Item
                        Planning Basis: Multi-plant

Demand Details
Parent Plant.....      Planning Date : 31/10/96
Demand Stockroom: A2      Finished Goods/Intermed.
Demand Reference: 0001793      Demand Qty:      200.000      Tp: S0      UOM: EA
                        Total Demand Qty:      200.000

O Supply Route      Stockroom Supply      Suggested Qty Tp Supply Plant
- A                A2                200.000      SS AA Plant A

Total:      200.000
1=Supply Parameters      2=Rule Details      More:
F12=Previous      F13=Demand Parameters      F19=Planned Quantities
15-05      SA      MW      KS      IM      II      EDN400A      PET179S2
  
```

Fields:

O

Option. You can enter the following options:

- 1 - Supply Parameters. Select this option to display the supply parameters used (supply policy, etc.) to generate a new supply, or suggest a change to an existing firm supply.
- 2 - Rule Details. Select this option to display the sourcing rule type used to generate the suggested supply and the resultant outcome.
- 6 - Peg to Supply. Select this option to peg to the item supply plant.

Functions:

F6

Peg to Transfer. Select this function to peg to the item transfer to plant.



Note: This function is only applicable if a distribution order, or transfer order demand is reviewed.

F13

Demand Parameters. Select this function to display the demand parameters used when processing the demand.

F19

Toggle between suggested and planned supply dates and quantities.

Supply Maintenance Window (F10)

A new item schedule may be created by taking **F10=New Supply** (this function is not applicable to production order controlled items). This displays the Supply Maintenance window. For new supply where the item is manufactured, the window defaults to the planning route specific to that plant in a multi-plant or plant environment where a plant-specific view is taken. Otherwise the item master planning route is the default.



Select **F10=New Supply** on the first Enquiry Detail screen to display the Supply Maintenance window.

```

MP050          ***M6:Multi-Plant Manufacturing ***      USER GBJBAEL0      3/12/96
                                           11:49:36

Enquiry - Detail      Planning Model Central Model 'live'
  Start 20/10/96
Item.... P1          Product 1

  MPS <---- Demand -----> <----->
0 Date Ref      Quantity St Supply
- 21/10                W000001
- 21/10                Route A
- 21/10                Route A
- 31/10 0001793      200 S0 Route A
- 99/99                W000002

Supply Maintenance
Item: P1
Product 1(Sch)
Process Group: _____

Due Date   : 0/00/00

Quantity: _____
Route.....?.. A

Planning Filter.....?.. M
Confirm Schedule..... _ (1=Yes)

F4=Prompt F5=Refresh F12=Previous

2=Maintain Supply 3=Display All Outputs 5=Maintain Order 6=Peg Demand
F3=Exit          F5=Refresh          F12=Previous      F23=More Options
F10=New Supply   F14=Hide Exc.Demand F15=Inc.Zero Supply F24=More Keys
09-56          MW          KS          IM          II EDN400A PET179S2
  
```

Fields:

Process Group

Enter the process group as required.

Due Date

Due date of the supply.

Quantity

Quantity required.

Route

Production route.

Planning Filter

Optional planning filter code.

Confirm Schedule

This option is shown for scheduled items.

Header Details Window (F18)



Select F18=Header Detail on the first Enquiry
Detail screen to display the Header Details
window.

This window displays the header details. Certain fields will be suppressed if a plant-specific, or multi-plant global review is underway.

MP050		Z1 - GB Demonstration Company		USER GBJBAMS		8/12/95 13:36:24	
Enquiry - Detail		Planning Model MPS Model 01					
Item.... MS001		Start 26/11/95		Time Fence 4/12/95		End 30/05/96	
		Product A		MPS Item			
MPS <---- Demand -----> <----- Supply ----->							
0	Date Order	Quantity St	Supply	Quantity St	Action	Available	
Header Details							
Planner..... MS	Item Group.....	Date Last Planned...		1/12/95			
UOM..... EA	Open.Stk..	25.000	Fixed Qty..	100.000			
Order Policy A	Safety Stk	234.000	Min. Qty...	100.000			
Item Type... M	Lead Time. .00		Max. Qty...	1000.000			
Supplier....	Value/Usage Class.. 0		Multiples..	25.000			
GT Family...	Delivery Lead Time. 0		Delivery Days Basis	2			
F12=Previous							
- 3/03	9 FS					243	
- 29/03	Route 1	20 SW				271	
						More...	
2=Maintain Supply		3=Display All Outputs		5=Maintain Order		6=Req Demand	
F3=Exit		F5=Refresh		F12=Previous		F24=More Keys	
F10=New Supply		F14=Hide Exc.Demand		F15=Inc.Zero Supply		F16=Previous Item	
09-02	SF	MM	KS	IM	II	KENB20A	PET166S2

Enquiry Detail Screen 2 (F22)



Select **F22=Detail Line** on the first Enquiry Detail screen to display the second screen. details for each line.

This function displays additional details for each line.

When you have seen all the details you require, select **F3=Exit** to return to the menu or select **F22=Detail Line** again to remove the additional details.

MP050	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95
			13:36:24
Enquiry - Detail	Planning Model MPS Model 01		
	Start 26/11/95 Time Fence 4/12/95	End 30/05/96	
Item.... MS001	Product A	MPS Item	
MPS <---- Demand -----> <----- Supply ----->			
0	Date Order	Quantity St Supply	Quantity St Action Available
■	4/12		Route 1 209 SW 234
95			Due 4/12/95 Es 4/10/95 Ls 4/10/95
-	12/12 0000215	5 S0 Route 1	5 SW 234
95			Due 12/12/95 Es 11/12/95 Ls 11/12/95
-	20/12 0000240	134 S0 Route 1	134 SW 234
95			Due 20/12/95 Es 13/11/95 Ls 13/11/95
-	5/01 0000242	48 S0 Route 1	48 SW 234
96			Due 5/01/96 Es 21/12/95 Ls 21/12/95
-	2/02 0000241	12 S0 Route 1	12 SW 234
96			Due 2/02/96 Es 31/01/96 Ls 31/01/96
-	2/02	Route 1	31 SW 265
96			Due 2/02/96 Es 25/01/96 Ls 25/01/96
			More...
2=Maintain Supply 3=Display All Outputs 5=Maintain Order 6=Peg Demand			
F3=Exit F5=Refresh F12=Previous F24=More Keys			
F10=New Supply F14=Hide Exc.Demand F15=Inc.Zero Supply F16=Previous Item			
09-02	SA	MA	KS IM II KENB20A PET166S2

Review Critical Resource Load



15/MPS

You can display the capacity and load of a critical resource over the planning horizon using the periods defined in the model, or associated model.



Select Review Critical Resource Load on the menu to display the first Review Critical Resource Load screen.

Fields:

Model

Enter the run model. The **F4=Prompt** is available.



Press **Enter** to display the second screen.

Review Critical Resource Load Screen 2



Press **Enter** on the first Review Critical Resource Load screen to display the second screen.

DB586	E3 - Enterprise-Adv-with MPL	User GJBASCC	18/07/97 12:38:58
Review Critical Resource Load			
Model.....	CM Central Model	Type.....	Central
Planning Basis.....	Multi-plant Network	Start Date:	31/05/97
Plant.....?	Plant 1 - Manchester	End Date..:	31/03/01
Critical Resource.?	B2		
Capacity UOM.....		Calendar Code...	
F3=Exit F4=Prompt F12=Previous			
7-23	SA	MW	KS CL IM DM II EDN400A KB PKH318S1

Fields:

Model

This field is for your information only and cannot be amended.

Type

This field is for your information only and cannot be amended.

Planning Basis

This field is for your information only and cannot be amended.

Start Date

This field is for your information only and cannot be amended.

Plant

You can optionally enter a plant in this field. If a plant is quoted, the load on the plant is displayed. The **F4=Prompt** is available.

End Date

This field is for your information only and cannot be amended.

Critical Resource

You can enter the critical resource in this field. The **F4=Prompt** is available.

Capacity UOM

This field is for your information only and cannot be amended.

Calendar Code

This field is for your information only and cannot be amended.



Press **Enter** on the second Review Critical Resource Load screen to display the third screen.

Review Critical Resource Load Screen 3



Press **Enter** on the second Review Critical Resource Load screen to display the third screen.

DB586	E3 - Enterprise-Adu-with MPL	User GJBASCC	18/07/97 12:39:14
Review Critical Resource Load			
Model.....	CM Central Model	Type.....	Central
Planning Basis.....	Multi-plant Network	Start Date:	31/05/97
Plant.....?	PL Plant 1 - Manchester	End Date..	31/03/01
Critical Resource.?	B2 P2 resource		
Capacity UOM.....	HR Hours	Calendar Code....	01
	OVERDUE	01/06/97	08/06/97 15/06/97
Capacity.....	120.000	120.000	120.000
Load.....		150.000	175.000
Available.....	120.000	30.000-	55.000-
Load on Plant...			
	22/06/97	29/06/97	06/07/97 13/07/97
Capacity.....	120.000	120.000	120.000
Load.....			356.000
Available.....	120.000	120.000	236.000-
Load on Plant...			380.000-
+			
F3=Exit F4=Prompt F12=Previous			
7-23	SA	MW	KS CL IM DM II EDN400A KB PKH318S1

Fields:

The fields displayed on the second screen are also displayed on the third screen. You can enter details in the following fields:

Plant

You can optionally enter a plant in this field. If a plant is quoted, the load on the plant is displayed. The **F4=Prompt** is available.

Critical Resource

You can enter the critical resource in this field. The **F4=Prompt** is available.

A list of periods is displayed, starting with Overdue, and then the date of each period. The following fields are displayed for each period:

Capacity

This field displays the capacity of the critical resource during each time period. This field is for your information only and cannot be amended.

Load

This field displays the load of the critical resource during each time period. This field is for your information only and cannot be amended.

Available

This field displays the available capacity of the critical resource during each time period. This field is for your information only and cannot be amended.

Load On Plant

This field is only displayed if a plant is entered in the Plant field. This field is for your information only and cannot be amended.



Note: If there are no values displayed for any days then this is a non-working day.



Note: You can press the Page Up and Page Down keys to display the previous or next periods.

Confirm MPS Suggested Orders



16/MPS

When full consideration has been given to the model, it may be decided that it should be used for actual future production. At this point two courses of action are possible:

- Confirm the suggested orders in Production Control, by using this task.
- Take no further action in MPS but run the model in MRP using the suggested order as a base.

You can display all suggested production orders generated from the MPS model, which have starting dates and planner codes falling within the selected range.

The selected orders are processed and confirmed orders for the suggested due dates and quantities are generated. The route defined against the suggested production order is used to generate operation and component details. The status of the suggested order on the planning file changes to 'confirmed'.

All orders displayed are automatically selected for processing. To prevent an order from being processed, remove the 1 against it.



Note: Provided that Purchase Management has been installed, suggested purchase orders may be converted into full purchase orders using the Requisitions system.



Select Confirm MPS Suggested Orders on the menu to display the first Confirm MPS Suggested Orders screen.

Fields:

Model

Enter the model in this field. The **F4=Prompt** is available.



Press **Enter** to display the second screen.

Confirm MPS Suggested Orders Screen 2



Press **Enter** on the first Confirm MPS Suggested Orders screen to display the second screen.

Fields:

Model

Enter the live planning model, either the designated live model on the company profile, or an autonomous live plant.

From/To Start Date

Enter the From Start Date and To Start Date, to restrict the confirmation of suggested production orders to those with a start date within the selected range. Leave these fields blank to include all suggested work orders within the model.

From/To Plant

These fields are only displayed if the live multi-plant central model is entered in the Model field.

Enter the From Plant code and To Plant code, to restrict the confirmation of suggested work orders to those within this plant range. Leave blank to include all plant codes. The **F4=Prompt** is available.

From/To Planner

Enter the From Planner code and To Planner code, to restrict the confirmation of suggested work orders to those within this planner range. Leave blank to include all planner codes. The **F4=Prompt** is available.



Press **Enter** to display the Order Creation screen.

Order Creation Screen



Press **Enter** on the second Confirm MPS Suggested Orders screen to display the Order Creation screen.

MP052	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95 13:43:50
Order Creation Model.. 01 MPS Model 01			
Start Date Range... 26/11/95 To 30/05/96 MPS Start. 26/11/95 MPS End 30/05/96			
0	Start	Quantity	Item Description
1	18/12/95	67	COP01 Co-product A
1	7/12/95	183	COP01
1	8/01/96	67	COP01
1	1/01/96	183	COP01
1	2/01/96	346	COP01
1	29/01/96	62	COP01
1	29/12/95	596	COP01
1	26/02/96	62	COP01
1	25/01/96	534	COP01
1	18/03/96	62	COP01
1	22/03/96	74	COP01
1	22/02/96	460	COP01
1	8/04/96	62	COP01
1	12/04/96	74	COP01
1	14/03/96	460	COP01
1	29/04/96	62	COP01
1=Create Order Blank/0=Do Not Create Order 3=Display All Outputs			+
F3=Exit F8=Update and Submit Job F12=Previous			
06-02	SP	MM	KS IM II KENB20A PET166S2

Fields:

Model

This field displays the model. This field is displayed for your information only and cannot be amended.

Start Date Range

This field displays the start date of the range of items presently being displayed. This field is displayed for your information only and cannot be amended.

To

This field displays the end date of the range of items presently being displayed. This field is displayed for your information only and cannot be amended.

MPS Start

This field displays the start date of the MPS run. This field is displayed for your information only and cannot be amended.

MPS End

This field displays the end date of the MPS run. This field is displayed for your information only and cannot be amended.

O

Option. For each item listed, you can enter the following options:

0 (or blank) - Do Not Create Order. Excludes the order.

1 - Create Order. Confirms order.

3 - Display All Outputs. Displays all outputs for a process group.

Start

For each item listed, the start date is displayed for your information only and cannot be amended.

Quantity

For each item listed, the quantity is displayed for your information only and cannot be amended.

Item

For each item listed, the item name is displayed for your information only and cannot be amended.

Description

For each item listed, the text description is displayed for your information only and cannot be amended.

Route

For each item listed, the route is displayed for your information only and cannot be amended.



Select **F8=Update And Submit Job** to confirm the MPS suggested orders.

Confirm MPS Suggested Schedules



17/MPS

This option enables you to see a list of suggestions for supply to meet the demand and, if required, to choose certain suggested schedules to be retained as confirmed schedules and to be taken into account by future MPS runs. Any such confirmed schedules are considered as a firm supply by future MPS runs.



Warning: Remember that any suggested schedules which have NOT been confirmed by this option, are deleted on the next MPS run.



Select Confirm MPS Suggested Schedules on the menu to display the first Confirm Suggested Schedules screen.

Fields:

Model

Enter the model in this field. The **F4=Prompt** is available.



Press **Enter** to display the second screen.

Confirm Suggested Schedules Screen 2



Press **Enter** on the first Confirm Suggested Schedules screen to display the second screen.

The second Confirm Suggested Schedules screen is displayed. The designated live model from the company profile, or an autonomous live plant, is displayed.

Fields:

To Date

This is the cut off date for the schedules listed on the following screen. No schedules with a due date later than the To date are displayed shown.

Planner Range

Enter the range of planner schedules to be displayed. If only the From Planner is used, all schedules from that planner onwards are displayed. If only the To Planner is used, all schedules up to that planner are displayed.



Note: If either field is used the following display lists schedules in planner order. If both fields are blank the display is in item order.

Item Range

Enter the range of items you want to see displayed. If only the From Item is used, all schedules from that item onwards are displayed. If only the To Item is used, all schedules up to that item are displayed.

Plant Range

If you are working in multi-plant mode, a range of plants can be entered.



Press **Enter** to display the third screen.

Confirm Suggested Schedules Screen 3

As well as displaying the planner, this screen will display the plant, if you are in multi-plant mode.



Press **Enter** on the second Confirm Suggested Schedules screen to display the third screen.

MP059		Z1 - GB Demonstration Company		USER GBJBAMS	8/12/95
					13:44:26
Confirm Suggested Schedules					
Production Model		01 MPS Model 01			
Sel	Item	Due Date	Schedule Qty	Planner	
1	MS002	2/02/96	34.000	MS	
1	MS002	2/02/96	51.486	MS	
1	MS002	1/03/96	35.860	MS	
1	MS002	29/03/96	46.158	MS	
1	MS002	3/05/96	43.033	MS	
1=Confirm 3=Display All Outputs					
F3=Exit F8=Update F12=Previous					
09-04 SF ML KS IM II KENB20A PET166S2					

Fields:

Sel

Select.

Blank - Prevents confirmation.

1 - Confirm. Confirms an item.

3 - Display All Output. Displays all outputs for a process group.

The schedule quantity can be manually amended.



Note: For schedule controlled items the action of firming work station schedules (see Confirm Work Station Schedule) causes the supply status of the item supply in MPS/MRP to be changed to CS.

Run Rough Cut Capacity Planning

The Production system enables you to compare the output from the MPS run with a rough cut view of your actual capacity; and from this comparison to decide whether or not changes are made to the MPS plan.



31/MPS

This procedure extracts the planned load generated by a specified Master Production Schedule and compares it with the capacity defined for the work stations on route. This enables you to check the feasibility of the suggested MPS and to make schedule or demand adjustments, or change resources to achieve a balanced plan.



Select Run Rough Cut Capacity Planning on the menu.

```
MP000P          Z1 - GB Demonstration Company    USER GBJBAMS      8/12/95
                                           13:45:06

Rough Cut Capacity Planning Run

Base run on
Model.....? 01 MPS Model 01
Route Policy..... 0=Use Quoted Route 1=Use MPS Route  Start Week.. 7/95
Use Route.....? 2                               End Week.... 10/95
Qty Override Basis. _ 1=Use Suggested Qty 2=Use Firm Qty

Base plan on supply Status
Suggested.. 1 Planned.. 1 Confirmed.. 1 Released.. 1 Active.. 1

Last run details Completed Normally
Requested by GBJBASCC at QPADEV0001 Run Date 14/02/95 Time 10:58:05

Model.. 01 MPS Model 01                      Route used.. 2 Start week.. 7/95
                                           End Week.... 10/95

Plan was based on the following supply types
Suggested.. 1 Planned.. 1 Confirmed.. 1 Released.. 1 Active.. 1

0=No 1=Yes
F3=Exit F4=Prompt F8=Submit planning run

06-22  SF  MW  KS  IM  II  KENB20A  PET166S2
```

Fields:

Model

Enter the MPS planning model on which the capacity analysis is to be based. This defaults to the last model selected.

Use Route

Enter the route code used to define the key resources for MPS Items. This defaults to the last resource route selected for a rough cut capacity run.

Start Week/End Week

Enter the range of week numbers to be included in processing. These dates default to the dates entered for the last rough cut capacity planning run.

The range of dates is compared with the start dates of orders/schedules.

If the start date of an order/schedule is earlier than the start week or later than the end week of this run, that order/schedule is disregarded.

Base Plan On Supply Status

Enter a 1 against the types of supply which should be included as scheduled load. The entry made defaults to the selection last made.

The Last run details appear lower down the screen. This enables you to check the details of the last run.

Capacity Enquiry



32/MPS

The enquiries used and produced in Rough Cut Capacity Planning are the same as those used in the full Capacity Requirements Planning application, and are explained elsewhere.

For more information see Barchart on the Capacity Requirements Planning menu.

Capacity Report



33/MPS

The reports used and produced in Rough Cut Capacity Planning are the same as those used in the full Capacity Requirements Planning application, and are explained elsewhere.

For more information see Work Station Capacity Requirements on the Capacity Requirements Planning menu.

MPS/Capacity Summary Report

34/MPS

This report, which is NOT available in full Capacity Planning, shows the periodic loading of work stations based on the MPS plan. It is organised by item within work station, using the item production sequence to organise the load sequence for the planning periods.



Select MPS/Capacity Summary Report on the menu.

MP092	Z1 - GB Demonstration Company	8/12/95 13:47:42
MPS/Capacity Load Summary Report		
Base run on :		
Model.....?.. 1		
Work Station..?.From _____ To _____		
Start Date..... <u>8/12/95</u>		
Route Policy..... 1 (1 = Use Planned Route) (2 = Use Entered Route)		
Route.....?.. 1 (Use with Route Policy 2)		
Qty Override Basis?. 1 (1 = Use Suggested Quantity) (2 = Use Firm Quantity)		
Include Standard Efficiency..... 1 (1 = Yes 0/Blank = No)		
F3=Exit F4=Prompt		
08-29	SP	ML KS IM II KENB20A PET166S2

Fields:

Model

Enter the MPS planning model from which demand information should be extracted for translation into capacity loading. This may be a planning model or the live model. There must be a previous successfully completed MPS run for the model.

Work Station Range

Enter the range of work stations to be included in the report.

Start Date

Enter a start date for the report.

If this is the current date from the MPS model you select, then the time slots (buckets) cover the same dates.

Otherwise, any MPS demand falling before the date you enter is placed in the overdue period.

The time bucket dates are recalculated using the MPS reporting profile, taking the date entered as the start of the first time bucket. The report displays the start date of each bucket.

Route Policy

Enter the route policy you wish to use to calculate work station loading.

Blank - The system assumes that a blank route code has been selected.

1 - Use planned route. If you use the planned route you ensure the report uses the same route that MPS used to schedule the supply.

2 - Use entered route. Enter a particular route in the Route field if you wish to simulate alternatives, or to use rough cut capacity routings.

If the route selected for an item under either policy is not found, then the item supply is ignored.

Route

This only applies to Route Policy 2.

Enter the route code to be used to calculate the loading for all items. If no route is found for an item with the specified code, then all supply for that item is ignored.

Qty Override Basis

Enter 1 to use either suggested or 2 firm quantities.

Include Standard Efficiency

Indicate whether or not standard efficiency should be applied to work station capacity.

Blank - Exclude (default).

1 - Include.

Demand Report

Several reports are available in Master Production Scheduling, with various report selection parameters to ensure that the required pertinent information can be made available to the scheduler.

Reports can be run at any time, although care must be taken that they relate to the same base data as the appropriate MPS run.



Warning: Remember that any suggested orders/schedules not confirmed from one run is deleted on the next run of that model.



41/MPS

This report produces a detailed listing of the demand calculated for the model. It may be used as an audit report of all changes made manually to the plan or it may be selected by range of items or planners for control purposes.



Select Demand Report on the menu.

MP180	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95
MPS Demand Report			13:42:15
Enter	Model?..	___	
	Planner?...	___ to ___	
	Item?...	_____ to _____	
	Changes only....	_ (1=Yes)	
F3=Exit F4=Prompt			
08-40	SP	MM	KS IM II KENB20A PET166S2

Fields:

Model

Enter the model required.

Planner

Enter the range of planner codes required. Leave blank for all.

Item

Enter the range of items required. Leave blank for all.

Changes Only

Enter 1 to include in the report only those items to which there has been some change since the last MPS run.

Normally, these items have their demand adjusted during the MPS run, using the Review Demand option.

Press **Enter** to generate the report and store it on the system ready for printing.

The Demand report contains the following fields:

Planner

Item

Demand Policy

Independent Demand

Forecast Comparison

Period Start

Period End

Forecast

Sales Orders

Customer Schedules

Net Demand

Adjustment

Item Total

Planner Total



Note: If the advance customer schedule application is not installed, the Customer Schedule fields and heading are not displayed.

MPS Report



42/MPS

This task produces a complete report of the Master Production Schedule for review and action. The report may be tailored to generate details of particular categories of items or planners and can be printed in summary or detailed form.



Select MPS Report on the menu to display the Master Production Scheduling Report screen.

Master Production Scheduling Report Screen



Select MPS Report on the menu to display the Master Production Scheduling Report screen.

MP021P	JW - Multiplant Phase II QA Company	USER GBUJAJFW	27/01/98
Master Production Scheduling Report			11:38:03
Model.....? ☐ _			
From Plant.....? ☐ _			
To Plant.....? ☐ _			
Print Supply/Demand Detail... 1 (1=Yes)			
Print Items With No Details.. 0 (1=Yes)			
Exclude Dependent MRP..... 0 (1=Yes)			
F3=Exit F4=Prompt F14=Additional Selection			
6-44 ☐ SA ☐ MW KS CL IM DM II EDN400A KB PET165S2			

Fields:

Model

Enter the planning model to be printed.

From (Plant)

Enter the first plant in the range you wish to print from. The word within brackets is user-defined in the description overrides section of the Maintain Company Profile option.

To (Plant)

Enter the last plant in the range you wish to print from. The word within brackets is user-defined in the description overrides section of the Maintain Company Profile option.

Print Supply/Demand Detail

Enter 0 to see a summary by time bucket for each item; or 1 to include the details of supply and demand each review period.

Print Items With No Details

Enter 0 to omit items with no supply and demand detail; or 1 to include all items, with or without these details.

Exclude Dependent MRP

Enter 0 to include both MRP and MPS items in the report; or 1 to include MPS items only.

Press **Enter** to generate the report and store it on the system ready for printing.

The Master Production Scheduling report contains the following fields:

Min Batch

Max Batch

Multiples

Avg Wkly Usq

Time Fence

F/C Time Fence

End Date

MPS



Select **F14=Additional Selection** on the Master Production Scheduling Report screen to display the Enter Selection Criteria window.

Functions:

F14

Additional Selection. Select this function to display the Enter Selection Criteria window.

Enter Selection Criteria Window (F14)

This window enables you to select items.

 Select **F14=Additional Selection** on the Master Production Scheduling Report screen to display the Enter Selection Criteria window.

MP021P Z1 - GB Demonstration Company USER GBJBAMS 8/12/95
Master Production Scheduling Report 13:38:39

Model...?... 01

Enter Selection Criteria

Item.....?..	_____	to	_____	Report Sequence
Planner.....?..	_____	to	_____	-
Item Group.....?..	_____	to	_____	-
Value/Usage Class.....	_____	to	_____	-
Preferred Supplier....	_____	to	_____	-
GT Family.....	_____	to	_____	-

F4=Prompt F12=Previous

11-30 SF ML KS IM II KENB20A PET166S2

Fields:

If the range fields below are blank ALL items are selected.

Item

Enter the range of items to printed.

Planner

Enter the range of planner codes to be included.

Item Group

Enter the range of Item Group/Minor codes set up in Inventory.

Value/Usage Class

Enter the value required. These are maintained in Inventory.

Preferred Supplier

Enter the range of preferred suppliers required. This is maintained on the stockroom record in Inventory.

GT Family

Enter the required GT Family codes. This is maintained on the Item Master record in Production Definition Management.

Report Sequence

For each range it is possible to select one of the following sort sequences:

- 1 - Primary sort sequence
- 2 - Secondary sort sequence
- 3 - Third sort sequence

MPS Planner Action Report



43/MPS

This task produces a summarised action list of recommended changes to supply orders in the planing model. The report also identifies overdue orders, that is, with a due date earlier than the current date.



Select MPS Planner Action Report on the menu.

MP044

JW - Multiplant Phase II QA Company

USER GBJBAJFW

27/01/98
11:39:03

MPS Planner Action Report

Model.....?. _

From Plant.....?. _

To Plant.....?. _

Planner Action Start..... 0/00/00 To 27/01/98

Include Overdue Orders..... _ (1=Yes)

F3=Exit

F4=Prompt

F14=Additional Selection

6-45

SR

MW

KS

CL

IM

DM

II

EDN400A

KB

PET165S2

Fields:

Model

Enter the planning model to be printed.

From (Plant)

Enter the first plant in the range you wish to print from. The word within brackets is user-defined in the description overrides section of the Maintain Company Profile option.

To (Plant)

Enter the last plant in the range you wish to print from. The word within brackets is user-defined in the description overrides section of the Maintain Company Profile option.

Planner Action Start

Enter a start date for the earliest MPS supply action required and a To date for the latest MPS supply action required.

Include Overdue Orders

Enter 1 to print any outstanding orders with a due date earlier than the current system date. Leave blank to exclude such orders.



If you require a report for all items in this model then press **Enter** to submit the report.

Functions:

F14

Additional Selection. Select this function to display the Enter Selection Criteria window.

MPS Valuation Report



44/MPS

This report assesses the inventory and purchase order commitment of a proposed MPS in standard or cost set value terms. The selected schedule is translated from a quantitative plan by extending quantities by the unit cost of items based on standard cost or cost set values.



Select MPS Valuation Report on the menu to display the MPS Valuation Report screen.

MPS Valuation Report Screen



Select MPS Valuation Report on the menu to display the MPS Valuation Report screen.

MP022	JW - Multiplant Phase II QA Company	USER GBUJAFW	27/01/98
MPS - Valuation Report			11:40:43
Model ?.. _	Start	Current	Time Fence
	0/00/00	0/00/00	0/00/00
From Plant.....?.. _	End	0/00/00	
To Plant.....?.. _			
Basis..... _			
1=Units 2=Hundreds 3=One Thousands 4=Ten Thousands			
5=Hundred Thousands 6=Millions			
MPS Item From.....?.. _	To	_	
Planner From.....?.. _	To	_	
Reporting Level..... _			
1=Summary 2=Detail	_		
1=Std Cost 2=Cost Set.....	_		
Cost Set.....	_		
Select MPS Item Types..... _			
1=Manufactured 2=Purchased 3=Both			
F3=Exit F4=Prompt F8=Submit Job F18=Cost Presentation F19=Cost Uplift			
5-12 SP MW KS CL IM DM II EDN400A KB PET165S2			

Fields:

Model

Enter the planning model to report on.

From (Plant)

Enter the first plant in the range you wish to print from. The word within brackets is user-defined in the description overrides section of the Maintain Company Profile option.

To (Plant)

Enter the last plant in the range you wish to print from. The word within brackets is user-defined in the description overrides section of the Maintain Company Profile option.

Basis

Select the basis for rounding cost values. Detail calculations take place prior to rounding on the report.

- 1 - Units
- 2 - Hundreds
- 3 - One Thousands
- 4 - Ten thousands
- 5 - Hundred Thousands
- 6 - Millions

Item From/To

Select a range of items for the report. Leave blank for all items.

Planner From/To

Select a range of planners for the report. Leave blank for all planners.

Reporting Level

Limit the report to a single manufacturing level. This is intended for the summary only report since the cost of an item is the full rolled-up cost. If more than one level is included in the summary, then the costs of an item are included twice, once in the lower level costs and once in parent cost.

For the detail report showing more than one level, leave the Single Level selection blank.

Summary/Detail

The report may be produced in detail by item, or limited to a Model summary total:

- 1 - Model summary costs.
- 2 - Item detail costs.

Std/Cost Set

Indicate which cost method is to be used to provide the item unit cost:

- 1 - Production standard cost.
- 2 - Cost Set.

Cost Set

If you entered 2 in the std/cost set field to be used.

Enter the name of the cost set.

Select MPS Item Types

The report may be restricted to production items only, purchased items only, or can include both:

- 1 - Production items (this includes phantoms)
- 2 - Purchased items (this encompasses item types B, P, T, G, R.)
- 3 - All item types.



Select **F18=Cost Presentation** on the MPS Valuation Report screen to display the Cost Presentation window.



Select **F19=Cost Uplift** on the MPS Valuation Report screen to display the Cost Uplift window.

Functions:

F18

Cost Presentation. To change the cost presentation for this report from the one specified in the company profile, select this function to display the Cost Presentation window.

F19

Cost Uplift. Select this function to display the Cost Uplift window.

Cost Presentation Window (F18)



Select **F18=Cost Presentation** on the MPS Valuation Report screen to display the Cost Presentation window.

You can define the cost elements to report. Changes made here do not affect the default cost presentation in the company profile.

```

MP022          Z1 - GB Demonstration Company          USER GBJBAMS          8/12/95
                                                    13:40:50

MPS - Valuation Report

Model?... 01                      Start   Current   Time Fence   End
                                26/11/95  1/12/95    4/12/95    30/05/96
                                MPS Model 01

Basis..... 2 Hundreds
1=Units 2=Hundreds 3=One Thousands 4=Ten Thousands
5=Hundred Thousands 6=Millions

Cost Presentation
  Cost Element  Order  Add  Roll  Fixed Description
1 Relief Costs   1    --    --    --    Relief Costs
2 Direct Material 2    --    --    --    Direct Material
3 Packaging       3    --    --    --    Packaging
4 Utility        4    --    --    --    Resource
5 Labour         5    --    --    --    Labour
6 Set-up         6    --    --    --    Set-up
7 Machine        7    --    --    --    Machine
8 Sub-Contract   8    --    --    --    Subcontract
                                1=Fixed cost

F5=Refresh F12=Previous F15=Save F16=Restore

14-27  SF  MW  KS  IM  II  KENB20A  PET166S2
  
```

Fields:

Order

This field controls the order in which the individual elements are presented on screens and in reports.

Add To

By entering a cost element number, e.g. 1 (direct material) or 5 (labour), an element can be accumulated in the total for another element for enquiry and reporting purposes. The element selected to be added to must have a sequence number defined in the Order field. One cost element can not have both an order sequence and an add to element defined; they are mutually exclusive.

Description

Enter a description for the cost element. The descriptions entered appear in the output from all cost related functions.

Functions:

F15

Save. Saves any changes made so that they may be used again.

F16

Restore. Restores any previously saved changes.

Cost Uplift Window (F19)

You can change the way the costing is carried out for this report only. This allows a cost percentage to be entered for each element of cost. This has the effect of increasing the cost by this percentage.



Select **F19=Cost Uplift** on the MPS Valuation Report screen to display the Cost Uplift window.

MP022	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95																		
			13:41:35																		
MPS - Valuation Report																					
Model.?.. 01	Start	Current	Time Fence																		
MPS Model 01	26/11/95	1/12/95	4/12/95																		
			30/05/96																		
Basis..... 2 Hundreds																					
1=Units 2=Hundreds 3=One Thousands 4=Ten Thousands																					
5=Hundred Thousands 6=Millions																					
MPS Item From.....?.. M																					
Planner From.....?.. M																					
Reporting Level..... 0																					
1=Summary 2=Detail 2																					
1=Std Cost 2=Cost Set..... 1																					
Cost Set.....																					
Select MPS Item Types..... 1																					
1=Manufactured 2=Purchase																					
<table border="1"> <thead> <tr> <th>Cost Element</th> <th>Percentage Uplift</th> </tr> </thead> <tbody> <tr> <td>Relief Costs</td> <td>.00</td> </tr> <tr> <td>Direct Material</td> <td>.00</td> </tr> <tr> <td>Packaging</td> <td>.00</td> </tr> <tr> <td>Utility</td> <td>.00</td> </tr> <tr> <td>Labour</td> <td>.00</td> </tr> <tr> <td>Set-up</td> <td>.00</td> </tr> <tr> <td>Machine</td> <td>.00</td> </tr> <tr> <td>Sub-Contract</td> <td>.00</td> </tr> </tbody> </table>				Cost Element	Percentage Uplift	Relief Costs	.00	Direct Material	.00	Packaging	.00	Utility	.00	Labour	.00	Set-up	.00	Machine	.00	Sub-Contract	.00
Cost Element	Percentage Uplift																				
Relief Costs	.00																				
Direct Material	.00																				
Packaging	.00																				
Utility	.00																				
Labour	.00																				
Set-up	.00																				
Machine	.00																				
Sub-Contract	.00																				
F3=Exit	F4=Prompt	F8=Submit Jo	F8=Update F12=Previous																		
14-68	SF	MM	KS IM II KENB20A PET166S2																		

Fields:

Percentage Uplift

Enter the required % uplift for each cost element.

MPS Reporting Profile



45/MPS

This report lists the actual dates represented by the model periods defined for a specific planning model.



Note: The report is produced automatically during the Master Production Schedule Run but can also be obtained on request.



Select MPS Reporting Profile on menu to display the screen..

MP003P	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95 12:51:11
Master Production Schedule - Print MPS Reporting Profile			
Model...?.. █			
F3=Exit F4=Prompt			
06-27	SA	ML	KS IM II KENB20A PET166S2

Fields:

Model

Enter the model required and press Enter to run the report. A message is displayed saying that the report was printed successfully.

Available To Ship Report



46/MPS

This report serves two purposes:

1. It provides an exception report of MPS items with projected on-hand inventory positions falling outside a range of acceptability.
2. The program may optionally set MRP net change triggers for MPS items appearing on the report. As a consequence, these MPS items are replanned in the next net change MRP run. This feature allows MPS item replanning to be limited to items with significant projected inventory problems.

The report calculates and compares cumulative MPS item supply and demand for each of up to fifteen MPS period dates.

An MPS item is included on the report if its projected on-hand balance is less than zero or is outside a tolerance range on an MPS period date (within a date limit provided by the user when the report is requested).

Supplies and demands are only included in the report calculations if they relate to one of the MPS model stockrooms.

Sales orders are included only if the ship date is also later than the cut-off date for sales backlog.

Supplies include production order supplies as well as firmed repetitive schedule quantities.

An items tolerance range is calculated as:


Safety stock quantity $\pm$ (safety stock quantity x trigger tolerance %)

Both the safety stock quantity and the trigger tolerance % for an item are defined in Production Item Master Maintenance.



Note: MRP net change triggers for MPS items optionally set by the program, are set in all MRP models which include a stockroom included in this model.

Available To Ship Trigger Mechanism

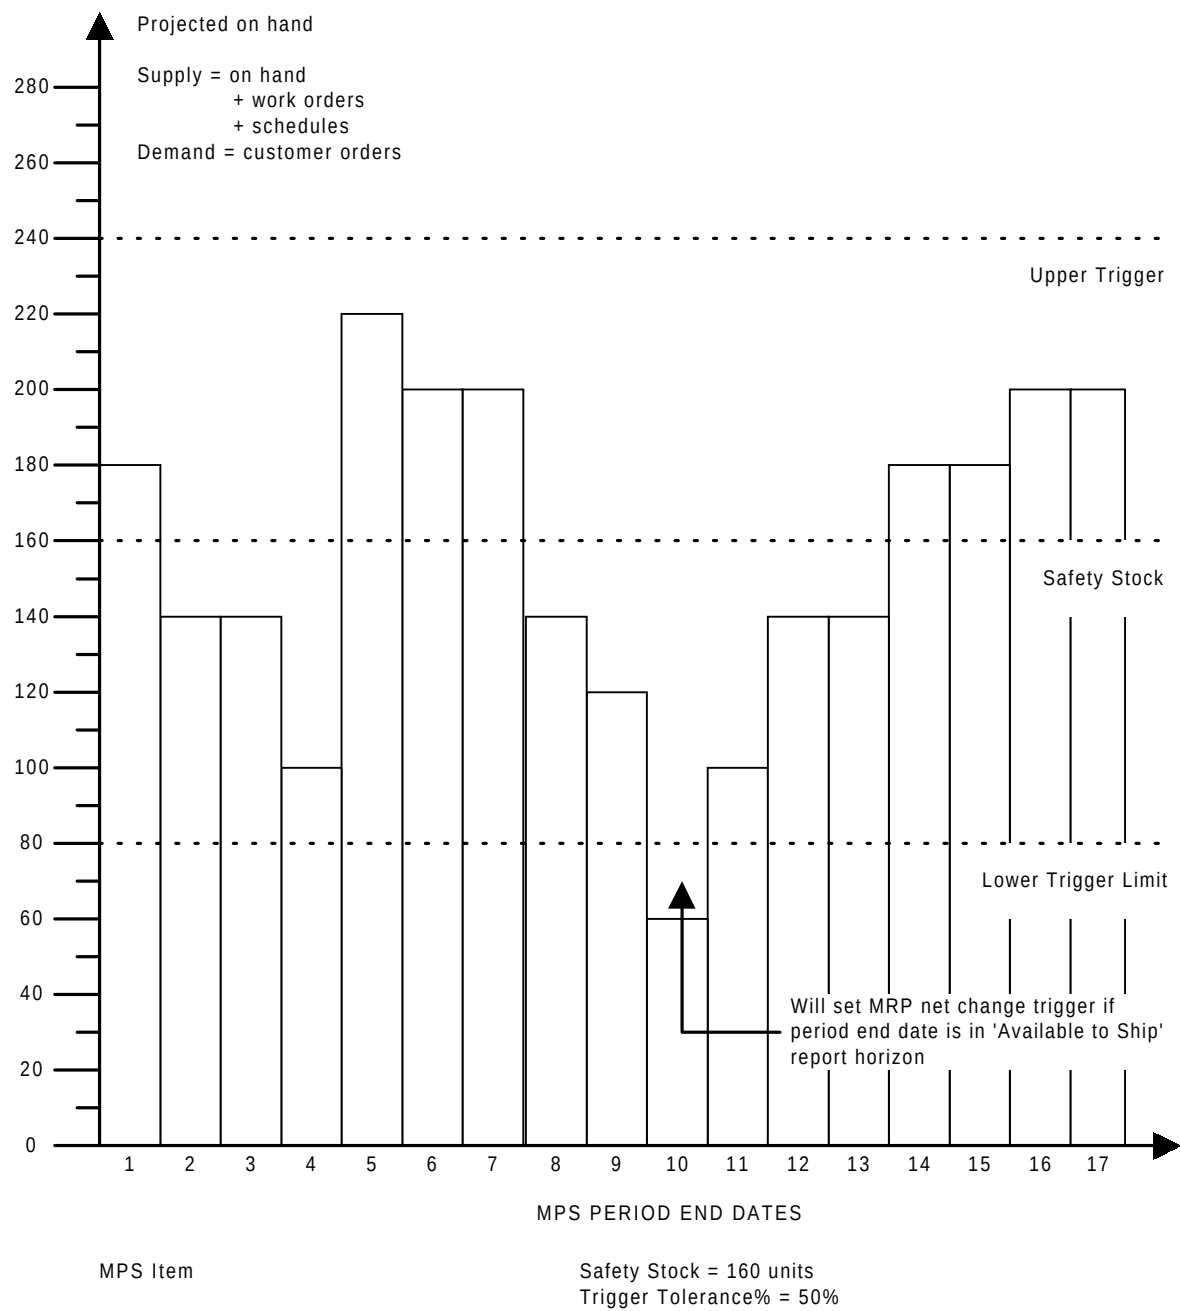

Select Available To Ship Report on the menu.

MP240	JW - Multiplant Phase II QA Company	User	GBJBAJFW	27/01/98 11:49:16
Available to Ship Report				
MPS Model.....?	☒			
From Plant.....?	___	To.?.	___	
Item From.....?	_____	To.?.	_____	
Planner From.....?	_____	To.?.	_____	
From.....	27/01/98	To...	27/01/98	
Supply Source.....?	☐ Firm Workstation Schedule			
Sales Order Backlog Period...	00 (Days)	Cut Off Date	27/01/98	
Tolerance Override %.....	000			
Suppress Net Change Triggers.	☐ (0=No 1=Yes)			
Demand Source.....	☐ (0=Sales Orders 1=Customer Schedules 2=Both)			
F3=Exit F4=Prompt F8=Submit				
5-33	SA	MW	KS CL IM DM II	EDN400A KB PET165S2

Fields:

MPS Model

The report is produced for the MPS model entered here. The model controls which stockrooms, and therefore which items are reviewed in the production of the report.

(Plant) From/To

Enter the plant range you wish to print. The word within brackets is user-defined in the description overrides section of the Maintain Company Profile option.

Item Range

Enter an item range or leave blank to include all items.



Note: The selection only includes items with a Planning Type of 1 (MPS).

The report prints items in item within planner sequence.

Planner Range

Enter a range of planners or leave blank to include all planners. The report prints items in item within planner sequence.

From/To

Enter the date on which comparison of sales and production is to commence as the From Date. Dates in the past cannot be selected. Use Sales Backlog Days to pick up overdue demand. The To Date is the last date used to compare sales order demand with planned production.

Supply Source

This field is not displayed if the company profile, Production Control Method flag is set to 1 (production orders only) This parameter enables you to determine the source of supply.

0 - Firm work station schedule.

1 - Firm MPS

2 - Suggested MPS

Codes are defined on the parameter file against type SCHS

Sales Order Backlog Period

This number is subtracted from the current date to calculate a cut off date for consideration of past due sales orders.

Cut Off Date

As calculated from the above.

Tolerance Override

This is the percentage of safety stock which, if breached, causes a net change trigger to be written for an item; it establishes upper and lower inventory limits relative to safety stock. If the stock balance is outside the upper and lower limits implied, then the item is replanned during the next MRP run (regenerative or net change) for the selected model. Any percentage entered here overrides that which may have been set specifically for an item.

Suppress Net Change Triggers

The option is given to enable the creation of MRP triggers 0 or to prohibit creation 1

Demand Schedule Source

The demand source may be selected.

0 or blank - Sales orders. This is the default.

1 - Customer schedules.

2 - Both.

Analyse Planning Source Of Supply

When planning for process groups, the forecast **MUST** be for the items actually sold (that is, each co-product) and not the process group itself. This means that the product group minor codes should be entered on the co-product in Inventory Details. Forecast demand is then generated against each co-product.

47/MPS

This option produces a report listing of every item which satisfies the following criteria:

- The item is not the primary co-product in its primary process group.
- The item is the primary co-product on more than one other process group route, i.e. it has more than one alternative source of supply.
- The item has not had a planning source of supply specified to the system using the Maintain Planning source of Supply option.
- The report lists the item in question with the alternative sources of supply (the process group and route combination).
- The first process group in the list for each item concerned is that selected for phase 2 processing.



Select Analyse Planning Source Of Supply on the menu to display the Analyse Planning Source Of Supply window.

```

MPS                Z1 - GB Demonstration Company      User GBJBAMS      08/12/95
                                                           14:51:48

Master Production Scheduling

MPS Maintenance
1. Maintain Model Stockrooms
2. Maintain MPS Reporting Profile
3. Maintain Planning Source of Supply

MPS Rough Cut Capacity Planning
31. Run Rough Cut Capacity Planning
32. Capacity Enquiry
33. Capacity Report
34. MPS/Capacity Summary Report

MPS Processing
11. Run MPS
12. Review Demand
13. Resume MPS
14. Review MPS
15. Confirm MPS Suggest
16. Confirm MPS Suggest

Option 47

F3=Exit  F4=Prompt  F6=Messages  F12=Previous  F16=Change Company  F18=Prints
21-11    SF        MW          KS          IM          II  KENB20A  PET166S2
  
```

Analyse Planning Source of Supply

The option you have chosen submits a batch job to perform the requested task.

Press F8 to confirm this submission or press F3/F12 to return without submission.

F3=Exit F8=Confirm submit F12=Previous



Select **F8=Confirm/Submit** to confirm the report.