
PINOUT

DevLab: I2C Buzzer Module

Top view

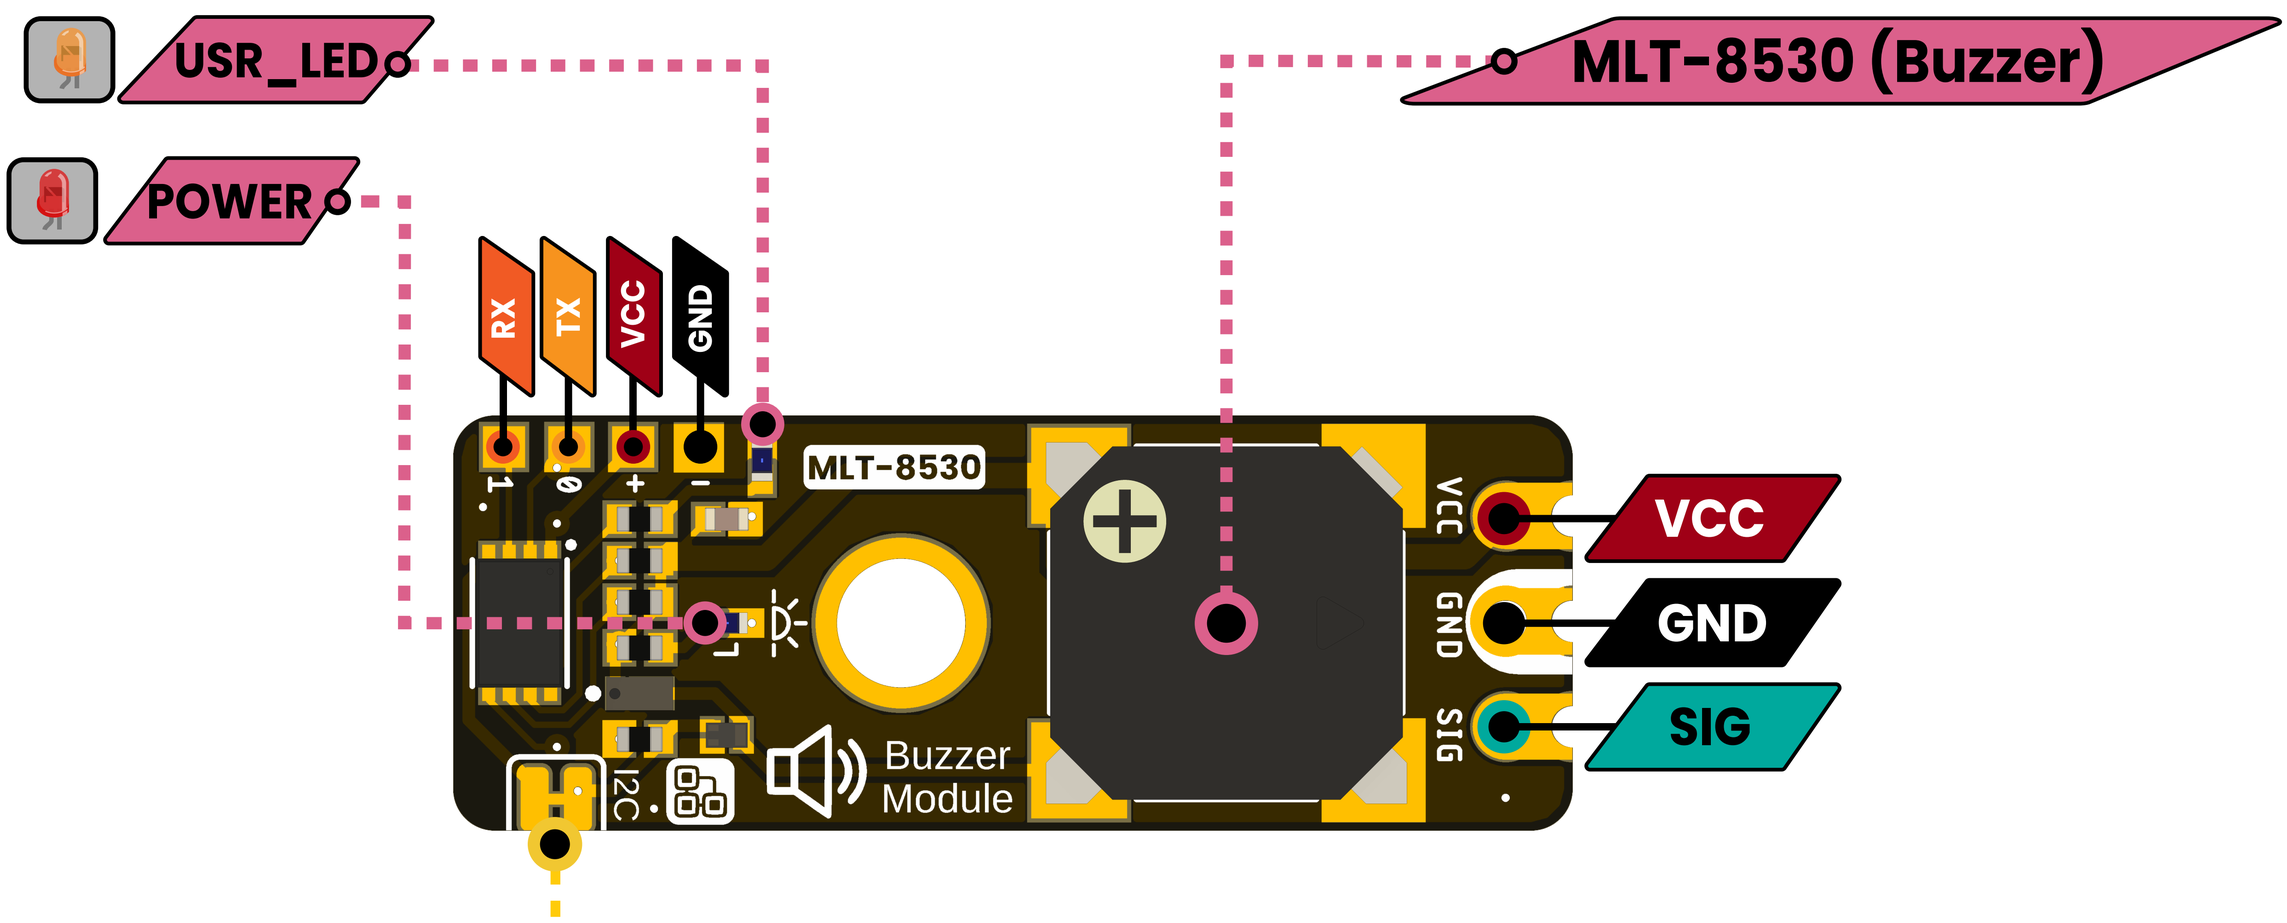





Open the pad to disable the I²C SIG signal

Bottom view

NOTE
Optional JST connectors; not included.
Solder them if you wish to extend the I²C bus.

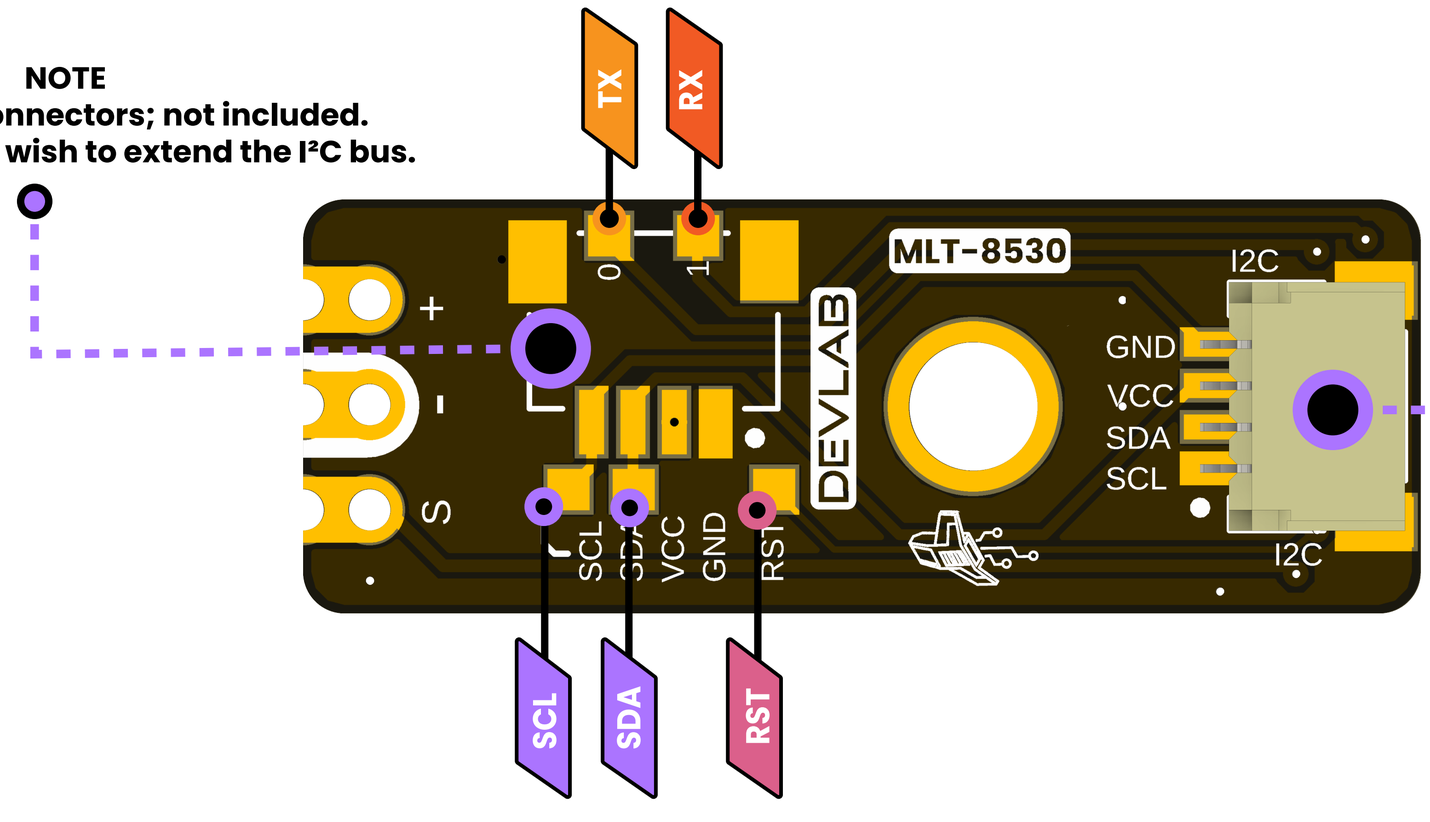

QWIIC
OPT I²C

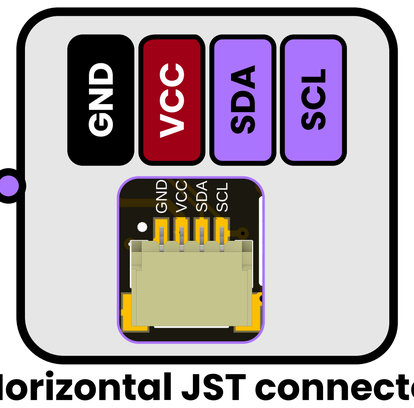

Horizontal JST connector 4P (1mm)

NOTE
Optional connector (not included).