
PINOUT

DevLab: I2C HX0805-C2 Vibration Sensor

Top view

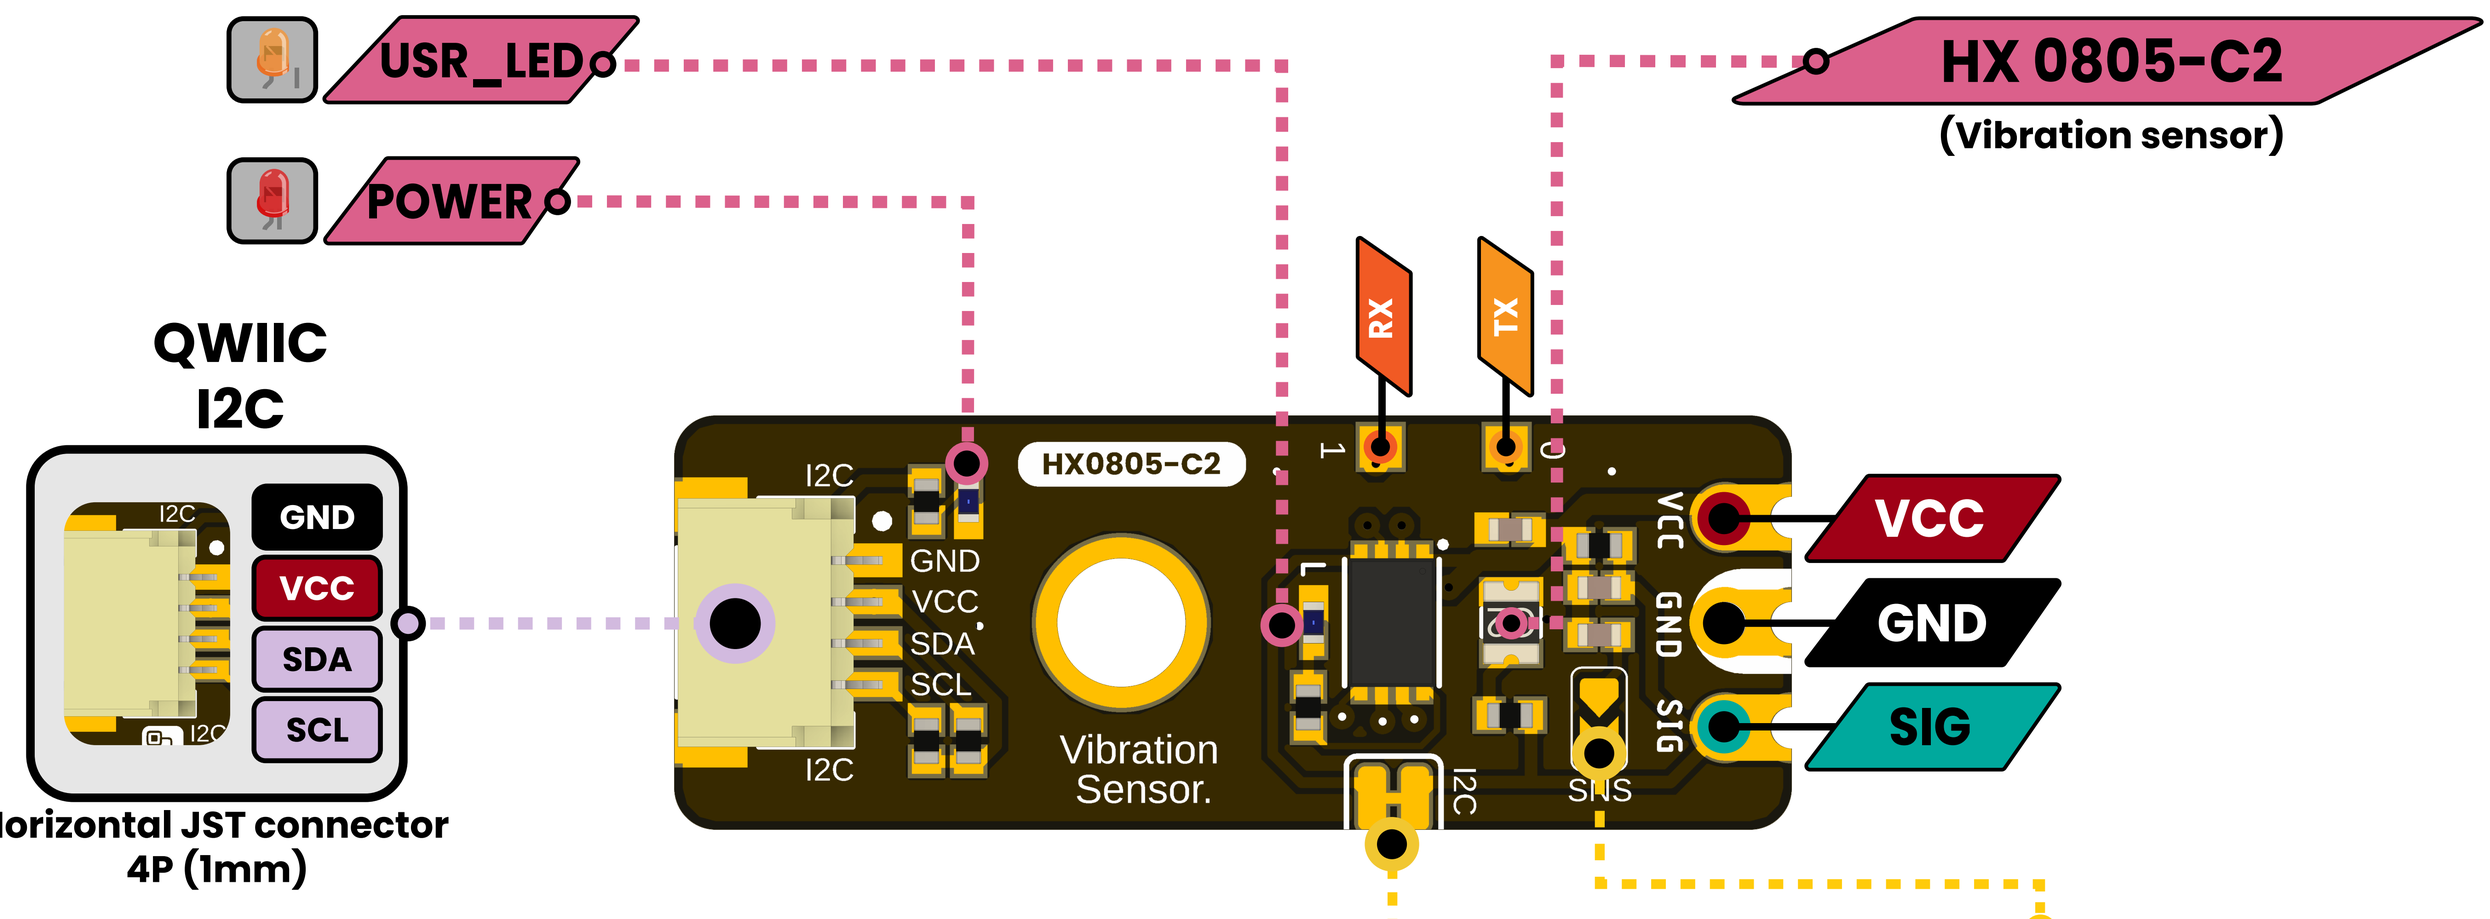

Open the pad to disable the I²C SIG signal

Close the pad to enable the Vout filter

Top view

