


UNIT ELECTRONICS · DEVLAB ECOSYSTEM · ATOM FAMILY

UNIT ATOM TEMT6000

MPN: UE0098

Version 1.1.0

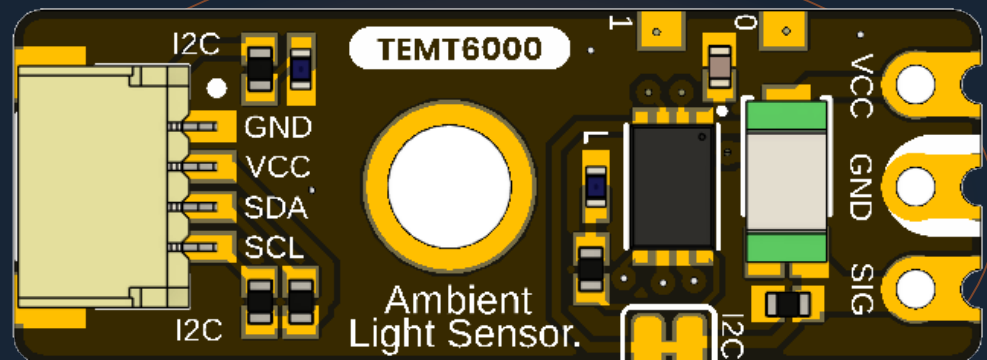

TEMT6000 ambient-light module with an onboard I2C interface, Qwiic expansion, and direct analog access.

TEMT6000

I2C + ANALOG

QWIIC

DEVLAB ECOSYSTEM

ATOM FAMILY

Contents

- **Description**
 - Applications
 - DevLab Format Compatibility
 - Hardware Features
- **1 The Board**
 - 1.1 Accessories
 - 1.2 Recommended Test Equipment
 - 1.3 Board Identification
 - 1.4 Board Components and Features
 - 1.5 Board Layout and Reference Designators
 - 1.5 Board Views
 - 1.6 Handling
- **2 Ratings**
 - 2.1 Recommended Operating Conditions
 - 2.2 Digital Interface and Firmware Characteristics
 - 2.3 Interface Controller Characteristics
 - 2.4 TEMT6000 Maximum Ratings
 - 2.5 TEMT6000 Characteristics
 - 2.6 Analog Signal Path
 - 2.7 Unspecified Current-Module Characteristics
 - 2.8 Electrical Precautions
- **3 Functional Overview**
 - 3.1 Functional Block Diagram
 - 3.2 Operating Modes
 - 3.3 Digital Light Measurement
 - 3.4 I2C Communication Model
 - 3.5 User-Accessible DDP Functions
 - 3.6 Built-In Indicator
 - 3.7 Physical Interface Notes
- **4 Connectors & Pinouts**
 - 4.1 General Pinout
 - 4.2 Signal and I2C Connection Guide
 - 4.3 Direct Sensor Contacts
 - 4.4 I2C Connection Positions

- 4.5 Auxiliary and Factory Service Functions
- 4.6 Indicators and I2C Bridge
- 5 Board Operation
 - 5.1 Required Hardware and Software
 - 5.2 Library Installation
 - 5.3 I2C Connection and Example Settings
 - 5.4 Single-Sensor Arduino Example
 - 5.5 Upload and Serial Output
 - 5.6 Troubleshooting
- 6 Mechanical Information
 - 6.1 Board Dimensions
 - 6.2 Integration Clearances
 - 6.3 Mechanical Data Not Specified
- 7 Company Information
- 8 Reference Documentation
- 9 Appendix
 - 9.1 Current V2.0.0 Schematic
 - 9.2 Document Control
 - 9.3 Required Technical Releases

Description

The UNIT ATOM TEMT6000 is an ambient-light sensor module developed by UNIT Electronics as part of the DevLab ecosystem. It combines a TEMT6000 visible-light phototransistor with an onboard interface controller, providing both I2C communication and direct access to the sensor's analog signal.

The board provides direct VCC, GND, and SIG contacts, reserved expansion pads, power and status indicators, and a solder bridge for disabling the I2C interface. The onboard controller acquires the TEMT6000 signal through its analog-to-digital converter (ADC) and makes the resulting measurements available through the I2C interface.

Applications

- I2C-connected ambient-light acquisition
- Direct analog light measurement during development and calibration
- Automatic display and indicator brightness control
- Day/night and relative-light detection
- Environmental data logging
- Educational I2C, ADC, and phototransistor experiments

DevLab Format Compatibility

As part of the DevLab Atom family, the TEMT6000 module follows a compact and standardized form factor intended for rapid prototyping and integration with other DevLab modules. The board provides three 4-pin, 1.00 mm-pitch I2C connection positions carrying GND, VCC, SDA, and SCL. One connector is populated by default, while two additional horizontal positions are available for optional JST/Qwiic-compatible connectors. This arrangement provides multiple physical access points to the same I2C interface and supports different module integration and mounting configurations.

The module is designed for nominal 3.3 V or 5 V operation. Before connecting it to a host, verify the supply voltage, I2C pull-up voltage, connector orientation, and applicable electrical ratings. When operating the module at 5 V with a 3.3 V host, level translation may be required.

Hardware Features

- TEMT6000 ambient-light phototransistor
- 32-bit Arm Cortex-M0+ controller with 16 KB Flash and 2 KB SRAM, using its internal HSI at up to 24 MHz
- Nominal 3.3 V and 5 V operation; controller upper operating limit of 5.5 V
- 7-bit I2C slave operation from 100 kHz to 400 kHz
- Three I2C connection positions carrying GND, VCC, SDA, and SCL: one populated by default and two optional horizontal positions
- Direct analog SIG access with adjacent VCC and GND contacts
- Two reserved expansion pads with no current application assignment
- Internal ADC acquisition of the TEMT6000 analog signal
- Shared I2C and factory programming signals
- Factory-only SWD/reset functions, power indicator, and built-in status indicator
- Cutable solder bridge for disabling I2C operation
- Manufacturer Part Number (MPN): UE0098

The controller implements DevLab Device Protocol (DDP) v1.0. The TEMT6000 profile is identified by Device ID `0x0102`; command `TEMT6000_RAW (0x80)` returns a 12-bit ADC sample in an unsigned 16-bit little-endian response. The current controller firmware reports factory address `0x20`, firmware/hardware version 1.0, and capabilities `0x000001B9`.

The I2C data and clock signals are shared with the controller's factory programming interface; therefore, I2C communication and SWD programming cannot be used simultaneously. SWD and reset functions are reserved for manufacturer programming and advanced factory diagnostics, not for user firmware replacement.

The Board

The design supports two host paths. A Qwiic-capable controller can attach through the I2C positions, while an ADC-capable host or test instrument can sample the exposed SIG contact directly. Factory programming and debugging reuse the I2C signals; they are not a separate user interface.

1.1 Accessories

The module is supplied with a Qwiic-compatible cable for connection to the I2C interface.

Accessory	Purpose	Selection notes
JST/Qwiic-compatible cable	Connects GND, VCC, SDA, and SCL	Verify 1.00 mm pitch, connector orientation, and contact order against the populated connector

1.2 Recommended Test Equipment

The following equipment may be used for integration, testing, and validation. These items are not included with the module.

Equipment	Purpose	Selection notes
I2C-capable host	Scans and communicates with the module	Use 7-bit addressing and an I2C clock from 100 kHz through 400 kHz
Analog test lead or carrier	Provides access to VCC, GND, and SIG	SIG must connect to a voltage-compatible ADC input
Logic analyzer	Checks I2C communication activity	Use input thresholds compatible with the powered board
Reference lux meter	Supports optical calibration and validation	Required for quantitative illuminance validation

1.3 Board Identification

Item	Value
Product	UNIT ATOM TEMT6000 Ambient Light Sensor
Brand / company	UNIT Electronics
Board ecosystem	DevLab
Product family	Atom
Product type	I2C-compatible and direct-analog ambient-light module
Optical component	TEMT6000
Interface controller	32-bit Arm Cortex-M0+; 16 KB Flash and 2 KB SRAM
Manufacturer Part Number (MPN)	UE0098
Current board artwork	
Product Reference	Version 1.1.0

Board, pinout, schematic, and documentation revisions are controlled independently.

1.4 Board Components and Features

Component / Feature	Function	Implementation / Notes
TEMT6000 sensor	Converts visible light to photocurrent	Primary ambient-light sensing element
Interface controller	Samples and processes the sensor signal for I2C access	32-bit Arm Cortex-M0+ with 16 KB Flash and 2 KB SRAM
I2C connections	Provide module power and I2C bus access	J1 is populated by default; J3 and J4 support optional horizontal 4-pin, 1.00 mm-pitch JST/Qwiic-compatible connectors
Direct contacts	Provide direct access to VCC, GND, and analog SIG	Intended for analog signal access and external ADC measurement
I2C disable bridge	Allows the I2C interface to be disabled	Cut JP1 to disable I2C operation
Power indicator	Indicates that the board is powered	Onboard PWR indicator
Built-in status indicator	Provides firmware-controlled status indication	Onboard USR_LED indicator
Reserved expansion pads	Provide connections reserved for future expansion	No user function is currently assigned
Factory service functions	Support controller programming, debugging, and reset	Reserved for manufacturer use; programming signals share the I2C interface

1.5 Board Layout and Reference Designators

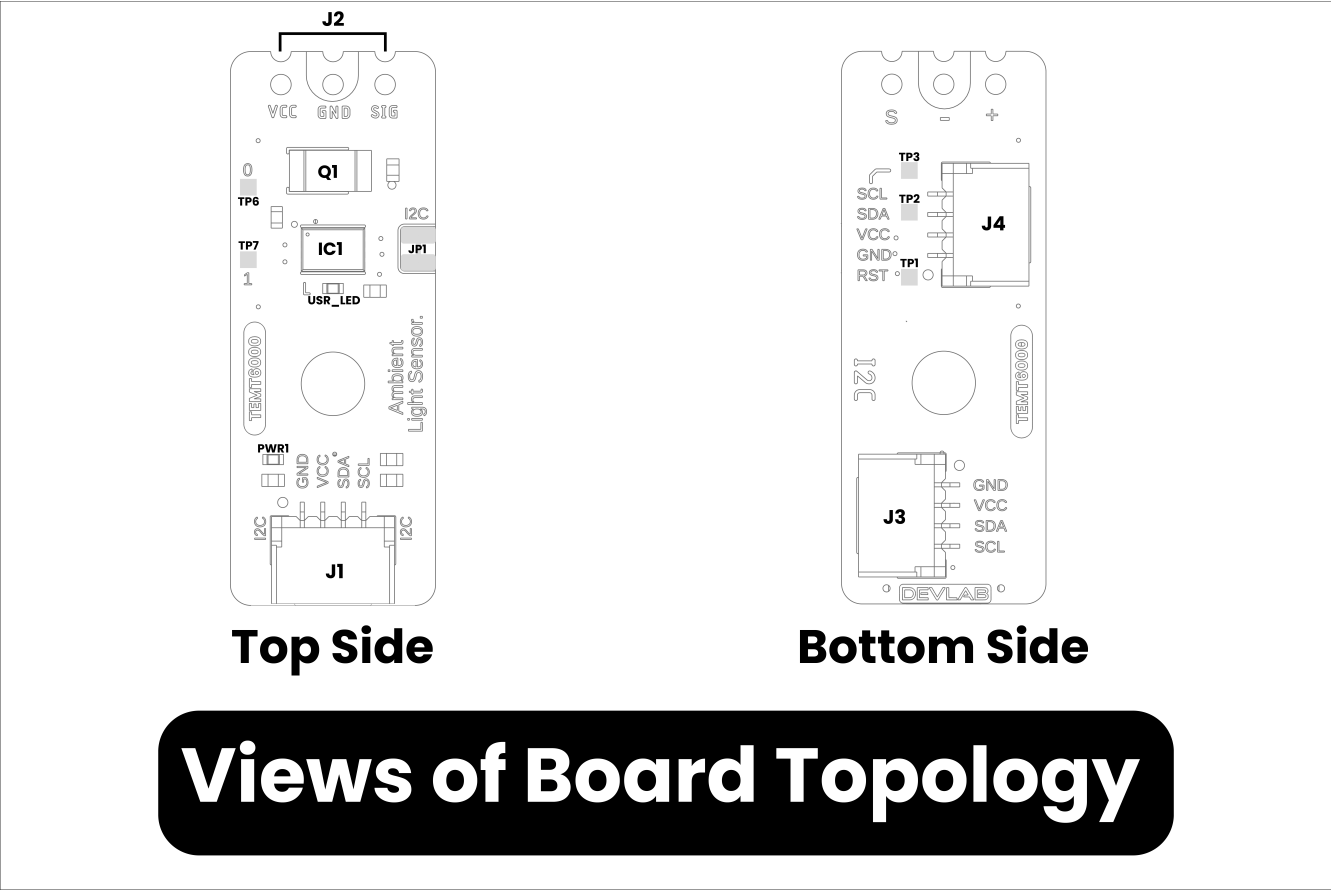


Figure 1.1 — Location of components and reference designators on the top and bottom sides of the PCB.

This drawing is a component-location reference. It helps locate parts named in the schematic and in the table below; it does not define connector pin order or indicate that every connector footprint is populated.


The top side contains the TEMT6000 sensor (Q1), interface controller (IC1), direct VCC/GND/SIG contacts (J2), and the I2C connector installed by default (J1). The bottom side provides two additional footprints, J3 and J4, for optional horizontal I2C connectors. J1, J3, and J4 carry the same GND, VCC, SDA, and SCL signals and provide access to the same I2C bus.

The drawing also locates the I2C-disable bridge (JP1), the power and status indicators, and factory test points. Refer to Chapter 4 for user connections and to the released schematic for circuit-level information.


Ref.	Description
Q1	TEMT6000 ambient-light sensor
IC1	Onboard interface controller
J1	Factory-populated 4-pin, 1.00 mm-pitch I2C connector
J3, J4	Two optional horizontal 4-pin, 1.00 mm-pitch I2C connector positions
J2	Direct VCC/GND/SIG contacts
JP1	Cuttable bridge for disabling I2C operation
PWR	Power indicator

Ref.	Description
USR_LED	Built-in status indicator
TP1-TP7	Factory test points

1.5 Board Views

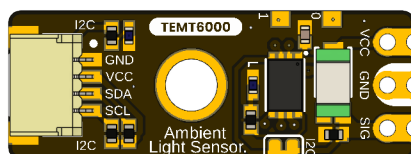

The top view shows the direct sensor contacts, controller, sensor, mounting hole, indicator circuitry, and the factory-populated I2C connector.

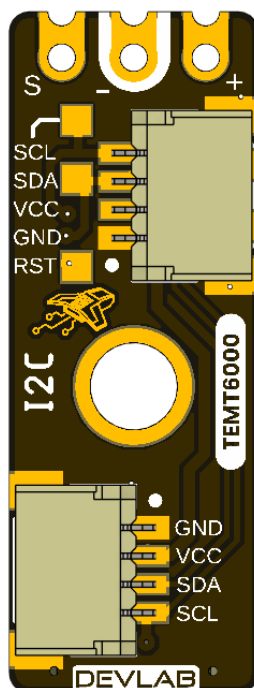

The bottom view shows the I2C connection points, reserved expansion pads, factory service markings, and the optional horizontal connector positions. The I2C signals are shared with the controller's factory programming and debugging interface; there is no separate user-accessible SWD connector.

1.6 Handling

Use normal ESD precautions. Keep the transparent sensor package clean and optically unobstructed. Remove power before changing connectors or modifying the I2C solder bridge.

2 Ratings

This chapter summarizes the electrical operating conditions and interface characteristics relevant to integrating the UNIT ATOM TEMT6000. It covers the module supply, I2C operation, analog sensor path, controller capabilities, and ambient-light sensor characteristics. Use these ratings to select a compatible power source and host interface and to identify the electrical characteristics that require application-specific verification.

2.1 Recommended Operating Conditions

Symbol	Description	Min.	Typ.	Max.	Unit
VCC	Module supply voltage	—	3.3 or 5	—	V
VI2C	I2C logic-high and pull-up voltage	—	VCC	—	V
fSCL	I2C clock frequency	100	—	400	kHz
VSIG	Direct analog SIG voltage range	—	Not specified	—	V
ICC	Module supply current	—	Not specified	—	mA
TA	Module ambient operating temperature	Not specified	—	Not specified	°C

The VCC values are the supported nominal operating points; they are not complete-module absolute maximum ratings. The validated continuous supply range around each nominal point is not specified.

Use a current-limited source during initial bring-up. The I2C pull-ups follow the module supply, so the host must tolerate the actual bus voltage. When the module operates at 5 V with a 3.3 V host, bidirectional level translation may be required.

The direct SIG range requires analog-stage verification and measurement. Module current consumption must include the controller, indicators, pull-ups, and sensor load. The complete-module ambient-temperature range has not been qualified. I2C pull-up resistance, bus capacitance, and complete-module absolute maximum ratings are also not specified.

2.2 Digital Interface and Firmware Characteristics

Parameter	Value	Description
I2C addressing	7-bit slave	Valid configurable addresses are 0x08 . . 0x77
Factory I2C address	0x20 (7-bit)	Pass 0x20 directly to the host I2C library; 0x40 is the 8-bit write address, not the device address
Device protocol	DDP v1.0	Command transaction followed by an exact-length read transaction

Parameter	Value	Description
Logical Device ID	0x0102	TEMT6000 identity; independent of the I2C address
Firmware / hardware	1.0 / 1.0	Current observable controller profile
Capability bitmap	0x000001B9	I2C configuration, analog input, sensor data, relay, watchdog, and persistent configuration
Raw digital sample	0 to 4095	12-bit ADC code returned as an unsigned 16-bit little-endian value
ADC update interval	Approximately 20 ms	Background acquisition; an I2C read returns the latest published sample
Command processing delay	2 to 5 ms	Use 5 ms conservatively before reading
Pending setter timeout	250 ms	Parameter must arrive before expiry

These values describe the currently documented digital behavior. Detailed DDP commands and transaction sequences are provided in Chapter 3.

2.3 Interface Controller Characteristics

The onboard interface controller provides a 32-bit Arm Cortex-M0+ core, 16 KB Flash, and 2 KB SRAM. The capabilities below describe controller resources relevant to module operation; they are not complete-module electrical ratings.

Feature	Controller capability
CPU and application clock	32-bit Arm Cortex-M0+; internal HSI at up to 24 MHz
Memory	16 KB Flash and 2 KB SRAM
Controller operating-voltage guidance	2.0–5.5 V; conservative range pending confirmation of the exact fitted variant
ADC	12-bit analog-to-digital conversion used for sensor acquisition
I2C	Standard mode at 100 kHz and Fast mode at 400 kHz; 7-bit addressing
GPIO	General-purpose digital I/O and external-interrupt capability
Timers	General-purpose, advanced-control, low-power, watchdog, and system timing resources
Other interfaces	SPI, USART, DMA, RTC, CRC, comparators, unique device identification, and factory programming/debug functionality

Programming and debugging functionality is reserved for factory use on this module. The controller operating range applies only to the controller and does not establish the absolute maximum ratings of the complete module or every externally accessible contact.

2.4 TEMT6000 Maximum Ratings

These component-level reference ratings describe a TEMT6000 profile. They are not absolute maximum ratings for the complete module and do not establish limits for the controller, indicators, pull-ups, connectors, or other board components.

Parameter	Symbol	Value	Unit
Collector-emitter voltage	VCE0	6	V
Emitter-collector voltage	VECO	1.5	V
Collector current	IC	20	mA
Power dissipation at 25 °C	PV	100	mW
Junction temperature	Tj	100	°C
Component operating temperature	Tamb	−40 to +100	°C

2.5 TEMT6000 Characteristics

The following component-level reference characteristics apply at 25 °C unless otherwise noted. They are not guaranteed complete-module performance values.

Parameter	Test condition	Min.	Typ.	Max.	Unit
Collector dark current	VCE = 5 V, Ev = 0	—	3	50	nA
Collector light current	Ev = 20 lx, CIE illuminant A, VCE = 5 V	3.5	10	16	μA
Collector light current	Ev = 100 lx, CIE illuminant A, VCE = 5 V	—	50	—	μA
Collector-emitter capacitance	VCE = 0 V, f = 1 MHz, dark	—	16	—	pF
Collector-emitter saturation voltage	Ev = 20 lx, IPCE = 1.2 μA	—	0.1	—	V
Angle of half sensitivity	—	—	±60	—	degrees
Peak sensitivity wavelength	—	—	570	—	nm
Spectral bandwidth at half sensitivity	—	440	—	800	nm

2.6 Analog Signal Path

The TEMT6000 analog signal is developed across a 10 kΩ resistor (R1) to ground. The resulting SIGNAL net is connected to the controller ADC input and the external VCC/GND/SIG contacts.

As a first-order estimate, $V_{\text{SIGNAL}} \approx \text{IPCE} \times 10 \text{ k}\Omega$ outside saturation. Applying the typical 100 lx photocurrent from the comparative T6000 data gives an estimated signal of approximately 0.50 V. This calculation is an engineering estimate and must not be interpreted as a guaranteed or calibrated lux output.

The direct SIG range, analog transfer accuracy, source impedance, loading behavior, and complete-module response still require measurement and qualification.

2.7 Unspecified Current-Module Characteristics

- Complete-module absolute maximum ratings, current consumption, and power-up behavior
- Exact oscillator and timing tolerance
- Electrical I2C bus-loading limits
- Pull-up resistance and supported bus capacitance
- I2C logic-level compatibility under all supported supply conditions
- Direct analog transfer function, load resistance, range, accuracy, and source impedance
- Guaranteed lux measurement range, accuracy, repeatability, response time, and calibration
- Exact controller ordering variant
- Controlled firmware image and manufacturer programming procedure
- Board-level operating-temperature range
- ESD and EMC ratings
- Humidity and ingress ratings

Until these characteristics are validated, component-level specifications must not be interpreted as guaranteed complete-module specifications.

2.8 Electrical Precautions

1. Use a current-limited 3.3 V or 5 V supply during engineering bring-up.
2. Verify connector orientation and establish a common ground before applying power.
3. Do not exceed the controller upper operating-voltage limit of 5.5 V.
4. When operating the module at 5 V, verify host compatibility with the actual voltage present on SDA, SCL, and SIG. Use appropriate level translation when required.
5. During normal operation, use the I2C connection points only for I2C communication. The same physical signals are shared with the controller's factory programming and debugging functions; SWD is not provided as a separate user interface.
6. Do not attempt firmware replacement or external debugging through the I2C connection points. Programming, debugging, and reset functions are reserved for manufacturer use and factory diagnostics.
7. Remove power before cutting, soldering, or reworking the I2C disable bridge or optional connector positions.
8. Verify the current released schematic, component specifications, and interface documentation before production integration.

3 Functional Overview

The UNIT ATOM TEMT6000 combines an ambient-light phototransistor with an onboard controller. The module provides two ways to observe light level: digital readings over I2C and direct access to the analog sensor signal at SIG.

The TEMT6000 itself is an analog device. The onboard controller samples its output, applies the selected averaging, and provides the latest raw reading through DevLab Device Protocol (DDP) v1.0.

3.1 Functional Block Diagram

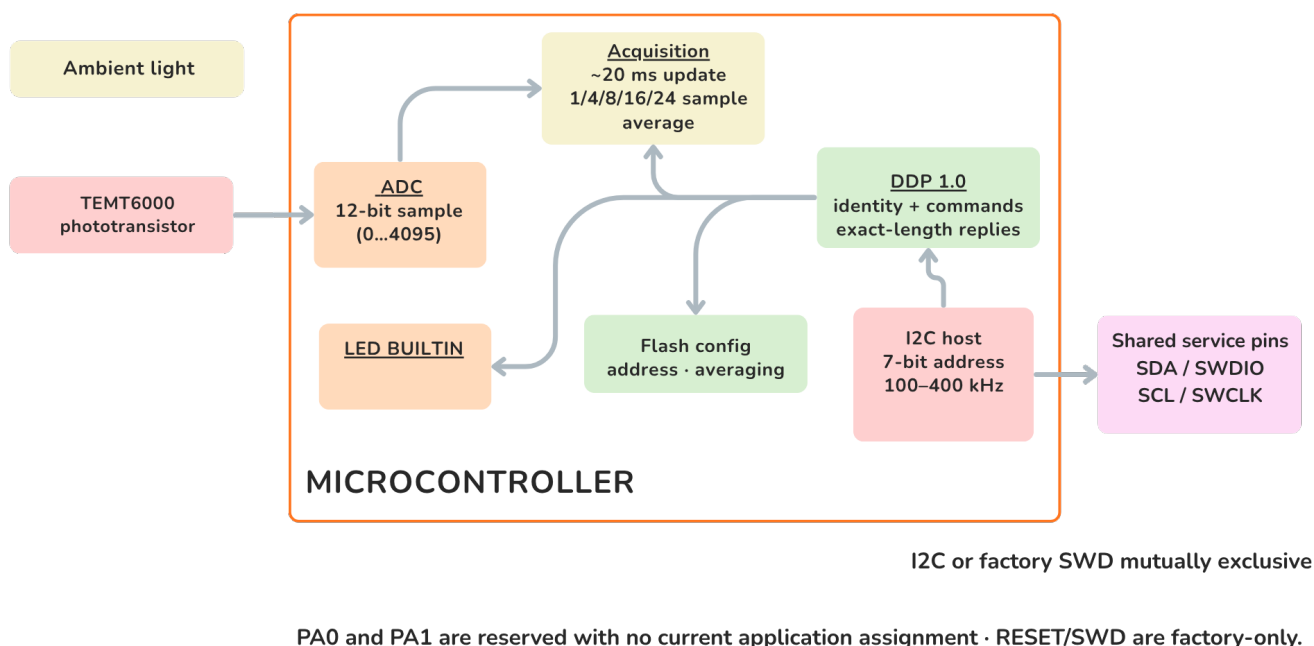


Figure 3.1 — Functional signal and control paths. Ambient light changes the TEMT6000 output. The signal is available at SIG and is also acquired by the controller ADC for access over I2C.

3.2 Operating Modes

Mode	Connection	User-visible result
Digital I2C	VCC, GND, SDA, and SCL	Averaged 12-bit raw light reading through DDP
Direct analog	VCC, GND, and SIG	Light-dependent voltage for a host ADC or measurement instrument

Both modes observe the same sensor path. An I2C read returns the latest available sample; it does not trigger a new light measurement. The direct analog output may be used independently for development, comparison, or application-specific calibration.

3.3 Digital Light Measurement

The onboard ADC produces an unsigned 12-bit value. A higher value represents a higher sensor output under the actual supply, optical, and mechanical conditions.

Measurement property	Value
ADC resolution	12 bits
Raw output range	0 . . 4095
Response format	Two bytes, [LSB, MSB]
Update interval	Approximately 20 ms
Selectable averaging	1, 4, 8, 16, or 24 samples

The averaging setting controls the balance between response speed and stability:

Samples	Approximate time for a completely new average	Typical use
1	20 ms	Fast changes
4	80 ms	Low-latency smoothing
8	160 ms	General monitoring
16	320 ms	Stable ambient-light monitoring
24	480 ms	Maximum available smoothing

The result is a relative ADC reading, not a calibrated lux measurement. Quantitative lux measurements require calibration in the final enclosure and optical arrangement.

3.4 I2C Communication Model


The I2C host always initiates communication. The 7-bit I2C address selects the module, while the one-byte DDP selector identifies the requested function. These are independent values.

DDP Operation Bytes over I²C

1. Selector Write




2. Response Read



The host ACKs intermediate bytes and NACKs the final byte. N is fixed by the selected DDP command: 1, 2, or 4 bytes in this profile.

Address Byte Format



The DDP selector is payload data; it is independent of the 7-bit I2C slave address.

Figure 3.2 — DDP command and response over I2C. The host writes one DDP selector, issues STOP, waits 2–5 ms, and then reads the documented number of response bytes. The host acknowledges intermediate bytes and sends NACK after the final byte.

Communication property	Value
Factory 7-bit address	0x20
Configurable address range	0x08 . . 0x77
I2C clock	100 kHz to 400 kHz
Delay before response read	2–5 ms; use 5 ms conservatively
Byte order for multi-byte values	Little endian
Supported response lengths	1, 2, or 4 bytes, depending on the selected function

Pass 0x20 directly to an I2C library. Values 0x40 and 0x41 are the shifted write/read address bytes visible on the bus, not the 7-bit address used by typical host APIs.

3.5 User-Accessible DDP Functions

User function	DDP selector	Result
Identify the module	0x00	Device ID 0x0102

User function	DDP selector	Result
Read protocol version	0x04	DDP version 1.0
Read active I2C address	0x20	Current 7-bit address
Change I2C address	0x21	Stores and applies a new address in the valid range
Restore factory configuration	0x23	Restores default configuration; reset required
Read ambient-light data	0x60 or 0x80	Latest two-byte 12-bit raw sample
Set ADC averaging	0x62	Selects 1, 4, 8, 16, or 24 samples
Read ADC averaging	0x63	Returns the active averaging setting
Turn BUILTIN off/on	0xA0 / 0xA1	Drives the built-in indicator LOW/HIGH
Pulse BUILTIN	0xA2	Starts a non-blocking timed pulse
Set/read pulse time	0xA3 / 0xA4	Uses 1–40 units of 25 ms

The I2C address, averaging selection, and pulse duration are retained after a power cycle. Changing a stored value should be an occasional configuration operation rather than part of the normal measurement loop.

Detailed transaction handling is already implemented by the maintained C++ and MicroPython examples listed in Chapter 8.

3.6 Built-In Indicator

The built-in status indicator is controlled through the DDP actuator functions. The shared DDP command names contain RELAY, but this product uses them for the built-in indicator and does not provide an electromechanical relay output.

The pulse duration is configurable from 25 ms to 1000 ms in 25 ms steps. A timed pulse runs without interrupting light measurements or I2C communication.

3.7 Physical Interface Notes

The SIG contact provides direct access to the analog sensor path. Its complete board-level transfer function, source impedance, and guaranteed output range are not specified for the current revision. Use a high-impedance input and verify the actual range before connecting it to a lower-voltage ADC.

The PCB provides three I2C connection positions carrying GND, VCC, SDA, and SCL: one connector is populated by default and two horizontal positions are provided for optional 4-pin, 1.00 mm-pitch JST/Qwiic-compatible connectors. All three positions access the same I2C bus.

The I2C connection points share signals with the controller's factory programming and debugging interface; there is no separate user-accessible SWD connector. Programming, debug, and reset functions are reserved for manufacturer programming and factory diagnostics, not user firmware replacement.

Two expansion pads are reserved and have no current user function. The I2C disable bridge is intended for applications that require the analog path without active I2C operation; remove power before cutting or restoring it.

4 Connectors & Pinouts

The user-accessible interfaces are described below by module function. The released documentation does not provide controlled contact numbers or a mating-connector part number, so the signal order must be checked against the connector orientation before producing a harness.

4.1 General Pinout

Connection group	Signals	Function
Direct sensor contacts	VCC, GND, SIG	Module power and direct access to the TEMT6000 analog signal
I2C connection positions	GND, VCC, SDA, SCL	Power and digital communication over the common I2C bus
Reserved expansion pads	Reserved	No current application assignment; electrical limits are not specified

The PCB has three physical I2C connection positions. One connector is populated by default, and two additional horizontal positions accept optional 4-pin, 1.00 mm-pitch JST/Qwiic-compatible connectors. All three positions are connected to the same I2C bus.

4.2 Signal and I2C Connection Guide

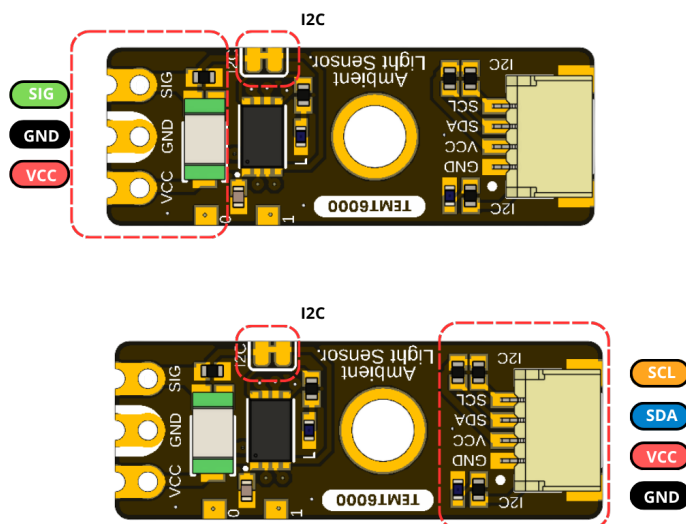


Figure 4.1 — Direct analog and I2C connection groups. The direct contacts provide SIG, GND, and VCC; the populated I2C connector provides SCL, SDA, VCC, and GND. Always follow the connector orientation shown on the board.

4.3 Direct Sensor Contacts

Label	Type	Description
VCC	Power	Module supply; nominal 3.3 V or 5 V operation
GND	Power	Common power and signal reference
SIG / SIGNAL	Analog	Direct light-dependent sensor signal; current transfer function unspecified

These three contacts are shown at the end opposite the populated I2C connector. SIG provides direct access to the TEMT6000 analog signal; it is not a separate specialized communication port.

4.4 I2C Connection Positions

Signal	Type	Description
GND	Power	Common return
VCC	Power	I2C peripheral supply; nominal 3.3 V or 5 V
SDA	Bidirectional I2C data	Host must tolerate the actual bus pull-up voltage

Signal	Type	Description
SCL	I2C clock	Supported at 100 kHz to 400 kHz

The two optional horizontal I2C connector positions use the same signal set and 1.00 mm pitch as the populated connector. Because all three positions are physical access points to the same bus, an optional connector may be used for an alternate cable orientation or bus continuation. Account for the loading and pull-ups of every attached device.

The I2C connection points share signals with the controller's factory programming and debugging interface. These functions are mutually exclusive, and there is no separate user-accessible SWD connector.

4.5 Auxiliary and Factory Service Functions

Function	Documented role	Qualification status
Reserved expansion pad 1	Reserved connection	No current application assignment; electrical limits unspecified
Reserved expansion pad 2	Reserved connection	No current application assignment; electrical limits unspecified
Controller reset	Factory service function	Manufacturer programming and factory diagnostics only

Programming, debugging, and reset are not user interfaces, and the product is not documented for user firmware replacement. During manufacturer programming or factory diagnostics, I2C must be inactive and other bus devices must be isolated from the shared signals.

4.6 Indicators and I2C Bridge

The module provides a power indicator, a firmware-controlled built-in status indicator, and a cuttable bridge used to disable I2C operation. Indicator polarity and current, along with the bridge's complete electrical behavior, require confirmation from the released schematic and module-level validation. The controller ADC input used for sensor acquisition is internal to the module and is not an additional external contact.

5 Board Operation

This chapter shows how to verify one UNIT ATOM TEMT6000 and read its raw ambient-light value with Arduino. The example supports the Pulsar ESP32-C6 and Pulsar RP2350 host boards.

5.1 Required Hardware and Software

- UNIT ATOM TEMT6000 module
- Pulsar ESP32-C6 or Pulsar RP2350 development board
- I2C connection for VCC, GND, SDA, and SCL
- USB cable for programming and Serial Monitor access
- Arduino IDE with the selected board package installed
- DevLab_TEMT6000 Arduino library

5.2 Library Installation

1. Open **Tools > Manage Libraries** in Arduino IDE.
2. Search for DevLab_TEMT6000.
3. Select the current release and click **Install**.
4. Allow Arduino IDE to install the DevLabDDP dependency when prompted.



Figure 5.1 — DevLab_TEMT6000 in Arduino Library Manager. The installed package provides the TEMT6000 examples and installs the DDP communication dependency used by the sketch below.

5.3 I2C Connection and Example Settings

Connect the module with power removed.

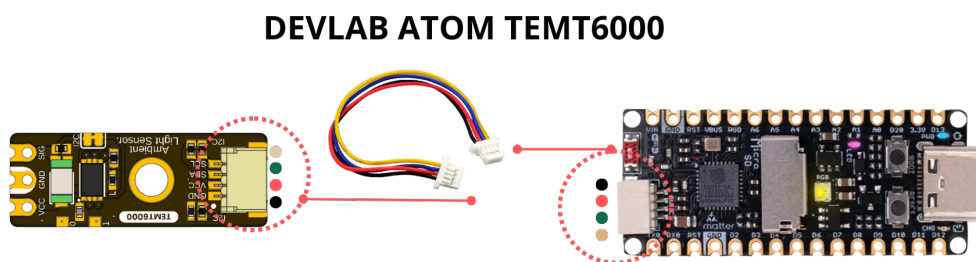


Figure 5.2 — I2C connection to a Pulsar ESP32-C6 host. Align the connector with the orientation shown and verify VCC, GND, SDA, and SCL before applying power.

Module	Pulsar ESP32-C6	Pulsar RP2350	Function
VCC	3.3 V or 5 V	3.3 V or 5 V	Module supply
GND	GND	GND	Common reference
SDA	GPIO6	GPIO24	I2C data
SCL	GPIO7	GPIO25	I2C clock

The pin numbers above match `singleSensor.ino`. Change `I2C_SDA` and `I2C_SCL` when the selected host board uses different I2C pins. At 5 V, confirm that the host accepts the bus pull-up voltage or use bidirectional level translation.

The example uses the following settings:

Constant	Default	Purpose
<code>I2C_SDA</code>	GPIO6 on Pulsar ESP32-C6; GPIO24 on Pulsar RP2350	Host SDA pin
<code>I2C_SCL</code>	GPIO7 on Pulsar ESP32-C6; GPIO25 on Pulsar RP2350	Host SCL pin
<code>I2C_FREQ</code>	400000 Hz	I2C clock
<code>SENSOR_ADDRESS</code>	0x20	Factory 7-bit module address
<code>READ_INTERVAL_MS</code>	1000 ms	Time between printed readings

If the module address was changed previously, update `SENSOR_ADDRESS` before uploading the sketch.

5.4 Single-Sensor Arduino Example

Open or create `singleSensor.ino`, then use the following sketch:

```
/**
 * @file singleSensor.ino
 * @brief Verifies a single TEMT6000 DDP device on the I2C bus and prints
 * its raw light readings over Serial at a fixed interval.
 * @author Cesar Bautista
 */

#include <Arduino.h>
#include <Wire.h>
#include <DevLabDDP.h>
#include <DevLabI2CBusRecovery.h>

#if defined(ARDUINO_ARCH_RP2040)
#define I2C_BUS Wire
constexpr uint8_t I2C_SDA = 24U, I2C_SCL = 25U;
#elif defined(ARDUINO_ARCH_ESP32)
#define I2C_BUS Wire
constexpr uint8_t I2C_SDA = 6U, I2C_SCL = 7U;
#else
#error "Use Pulsar ESP32-C6 or Pulsar RP2350"
#endif

constexpr uint32_t I2C_FREQ = 400000;
constexpr uint8_t SENSOR_ADDRESS = 0x20;
constexpr uint32_t READ_INTERVAL_MS = 1000U;

DevLabDDP::Master master(I2C_BUS, DevLabDDP::DEVICE_TEMT6000);
bool deviceVerified = false;

void setup() {
    Serial.begin(115200);
    delay(500);

    if (!devlabBeginI2cBusRecovered(
        I2C_BUS, I2C_SDA, I2C_SCL, I2C_FREQ, 100)) {
        Serial.println("ERROR: I2C bus is blocked");
        return;
    }

    DevLabDDP::DeviceInfo info;
    deviceVerified = master.matchesExpectedDevice(SENSOR_ADDRESS, &info);

    if (!deviceVerified) {
        Serial.println("ERROR: address is not a DDP TEMT6000 (ID 0x0102)");
        return;
    }

    DevLabDDP::printDeviceInfo(
        Serial,
        SENSOR_ADDRESS,
        info,
        DevLabDDP::DEVICE_TEMT6000);

    Serial.println("adc0_raw");
}

void loop() {
    uint16_t raw;

    if (deviceVerified && master.readAdc(SENSOR_ADDRESS, 0, raw)) {
        Serial.println(raw);
    } else {
        Serial.println("ERR");
    }

    delay(READ_INTERVAL_MS);
}
```

5.5 Upload and Serial Output

1. Select the connected Pulsar ESP32-C6 or Pulsar RP2350 board in Arduino IDE.
2. Select its serial port.
3. Compile and upload `singleSensor.ino`.
4. Open Serial Monitor at **115200 baud**.
5. Illuminate and cover the TEMT6000 to confirm that the printed value changes.

At startup, the sketch recovers and initializes the I2C bus, verifies that address `0x20` contains a DDP TEMT6000 with Device ID `0x0102`, and prints the reported device information. It then prints the heading `adc0_raw` and one reading per second.

```
<DDP device information>
adc0_raw
<value from 0 to 4095>
<value from 0 to 4095>
```

The readings are raw ADC values. They indicate relative light level and must not be interpreted directly as lux.

5.6 Troubleshooting


Serial output or symptom	Check
ERROR: I2C bus is blocked	Wiring, connector orientation, shared ground, pull-up voltage, and unintended SDA/SCL drive
ERROR: address is not a DDP TEMT6000 (ID 0x0102)	Address setting, I2C pins, module power, and possible address collision
ERR after successful identification	Cable continuity, bus clock, supply stability, and I2C connections
Constant 0 or 4095	Sensor obstruction, excessive illumination, supply, and module orientation
Values change but lux is inaccurate	Calibrate the complete optical installation against a reference light meter

The complete Arduino examples and the reusable DDP library are listed in Chapter 8.

6 Mechanical Information

The current mechanical drawing defines the board outline and the dimensions shown below. Dimensions are in millimetres.

6.1 Board Dimensions

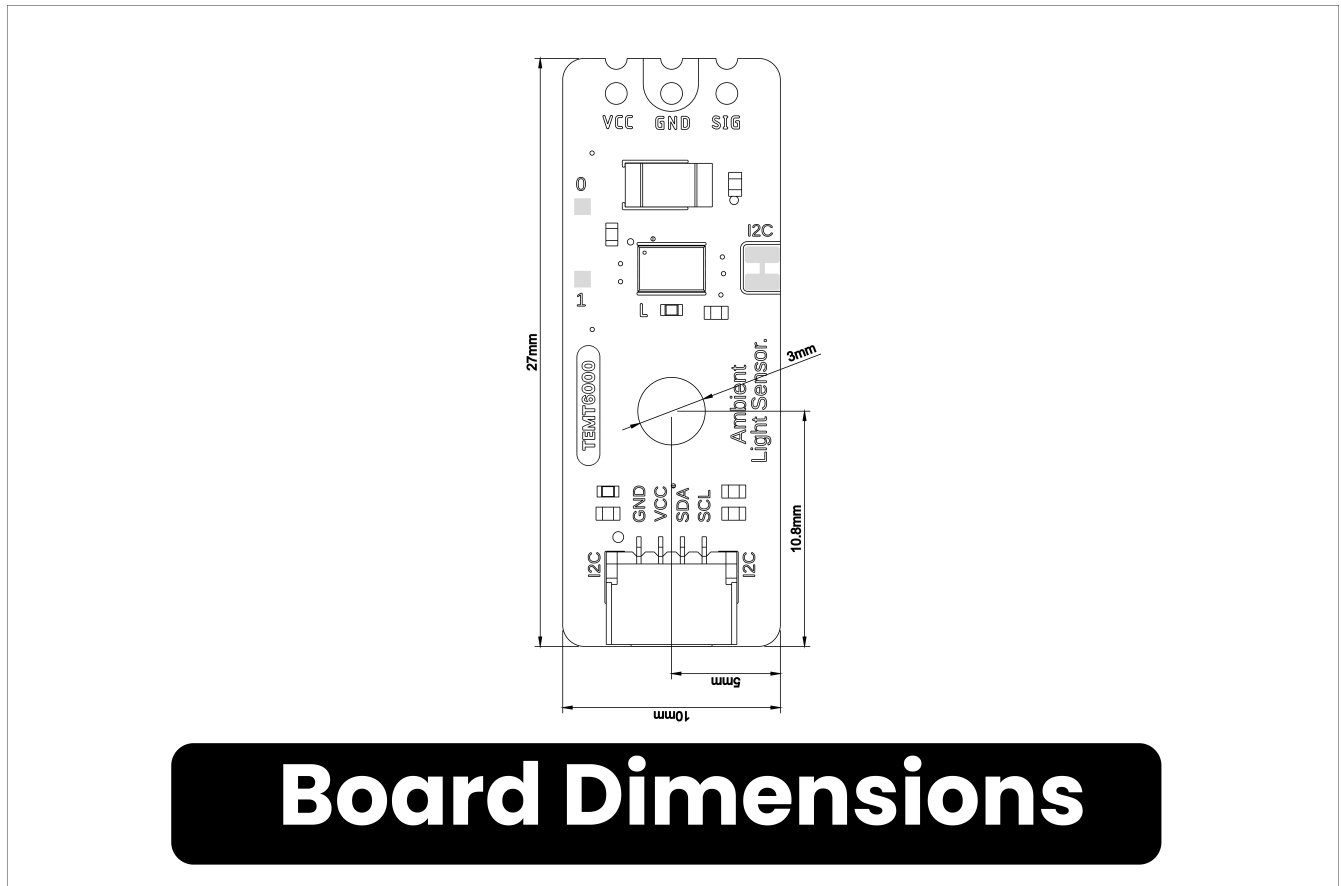

Board Dimensions

Figure 6.1 — Board dimensions.

The drawing specifies a 27 mm × 10 mm board outline and a 3 mm mounting hole. It also shows the hole centerline 5 mm from the side edge and 10.8 mm from the connector-end edge. Use the drawing itself as the dimensional reference; do not derive additional dimensions by scaling the image.

6.2 Integration Clearances

Leave optical clearance around the transparent TEMT6000 sensor package and its field of view. Provide connector insertion and cable bend clearance at the populated I2C connector and at any optional connector position that will be assembled. Keep conductive fasteners away from contacts and factory service points, and avoid enclosure features that shadow the sensor or indicators.

6.3 Mechanical Data Not Specified

- Board thickness, dimensional tolerances, and finished mass
- Unannotated feature coordinates and edge clearances

- Optional connector population variants and mating-part numbers
- Connector insertion envelope, retention force, and cable bend radius
- Maximum top- and bottom-side component heights
- Optical axis, keep-out cone, and enclosure-window specification
- Reserved expansion-pad and factory service-point coordinates

7 Company Information

Item	Information
Company / brand	UNIT Electronics
Board ecosystem	DevLab
Product family	Atom
Website	UNIT Electronics
Address	Salvador 19, Cuauhtémoc, 06000 Mexico City, CDMX, Mexico

The product repository and controlled technical references are listed in the next chapter.

8 Reference Documentation

Reference	Location
Board topology	Current resource
Board dimensions	Current resource
Product repository	UNIT-Electronics-MX/unit_devlab_temt600_ambient_light_sensor
Hardware reference	hardware/README.md
English pinout	Released pinout — English
Spanish pinout	Released pinout — Spanish
Board top view	V0.3.1 resource
Board bottom view	V0.3.1 resource
Current schematic	V2.0.0
Software examples	C++ and MicroPython
Arduino library	UNIT-Electronics-MX/unit_devlab_temt6000_library
Local DDP device profile	TEMT6000 DDP profile
Canonical DDP definitions and Arduino library	UNIT-Electronics-Labs/unit_devlab_ddp_library
Comparative component page	Vishay TEMT6000X01 — reference only
TEMT6000 component datasheet	Vishay Semiconductors, <i>TEMT6000X01 Ambient Light Sensor</i>, document 81579 — comparative reference only

The released pinout, current board images, topology, dimensions, and schematic define the current visible interfaces, board layout, and mechanical envelope. The Vishay datasheet is retained only as a comparative TEMT6000X01 profile; it does not establish the exact orderable part fitted to this module or define complete-module ratings. The DDP profile defines runtime identity and digital data transport; it does not replace module-level electrical qualification.

9 Appendix

9.1 Current V2.0.0 Schematic

The current schematic is documented in `hardware/unit_sch_v_2_0_0_ue0098_temt6000.pdf`. It documents the controller-based V0.3.1 board, including the reference controller, TEMT6000 analog stage, I2C interfaces, status indicators, test points, and optional connectors.

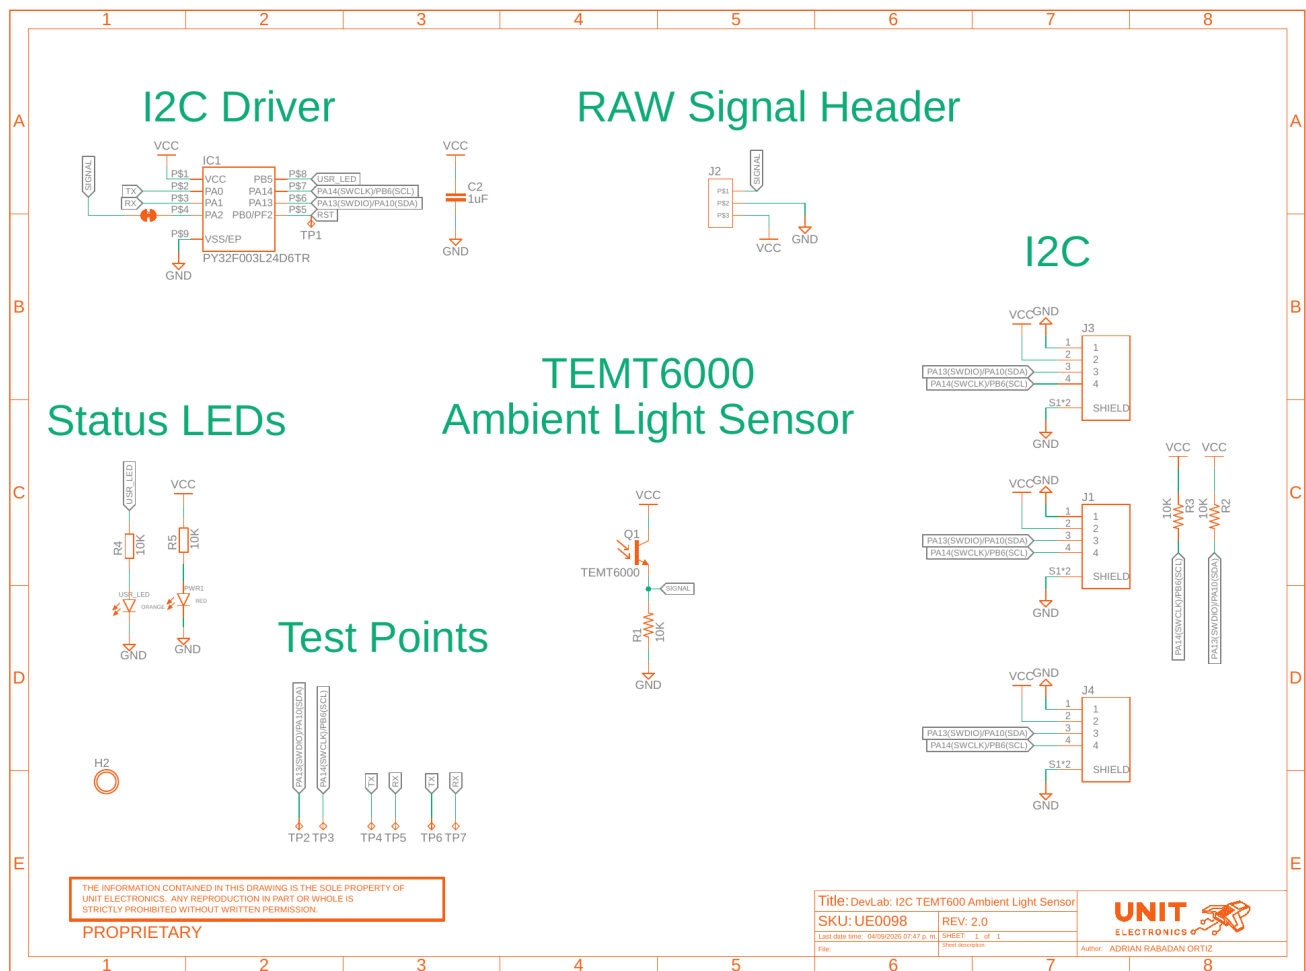


Figure 9.1 — Current V2.0.0 electrical schematic.

The sensor signal uses a 10 kΩ resistor (R1) to ground and is routed to the controller ADC input and the external VCC/GND/SIG header. As a first-order estimate outside saturation, $V_{\text{SIGNAL}} \approx \text{IPCE} \times 10 \text{ k}\Omega$; this is not a calibrated or guaranteed conversion to lux.

The I2C SDA and SCL signals are available at three physical connection positions: one connector populated by default and two optional horizontal positions. These signals are shared with the controller's factory programming and debugging interface; there is no separate user-accessible SWD connector.

9.2 Document Control

Field	Value
Product	UNIT ATOM TEMT6000 Ambient Light Sensor
Product hierarchy	UNIT Electronics → DevLab board ecosystem → Atom family
Manufacturer Part Number (MPN)	UE0098
Current board artwork	V0.3.1
Current pinout, topology, and dimensions	V3.1.0
Available schematic	Current V2.0.0
Product Reference	Version 1.1.0
Publication date	2026-08-31
Interfaces	Three I2C connection positions on one bus; VCC/GND/SIG header; reserved expansion pads; shared factory programming/debug signals

9.3 Required Technical Releases

- V0.3.1 bill of materials
- Exact controller package/ordering suffix and controlled manufacturer programming release
- Exact oscillator/timing tolerances and uniform future DDP status behavior
- Complete-module supply/logic absolute-maximum ratings and current consumption
- Pull-up values and bus-loading limits
- Direct SIG transfer, loading, range, and ADC guidance
- Mechanical tolerances, board thickness, component heights, and finished mass
- Module-level optical, electrical, environmental, and EMC characterization