PINOUT

Pulsar RP2350A

The following pads are disabled by default to preserve Arduino Nano layout compatibility:
–EN
–VBAT
–NEOPIXEL DOUT
They can be enabled by soldering a bridge(solder pad) on the bottom side of the PCB.

Top view

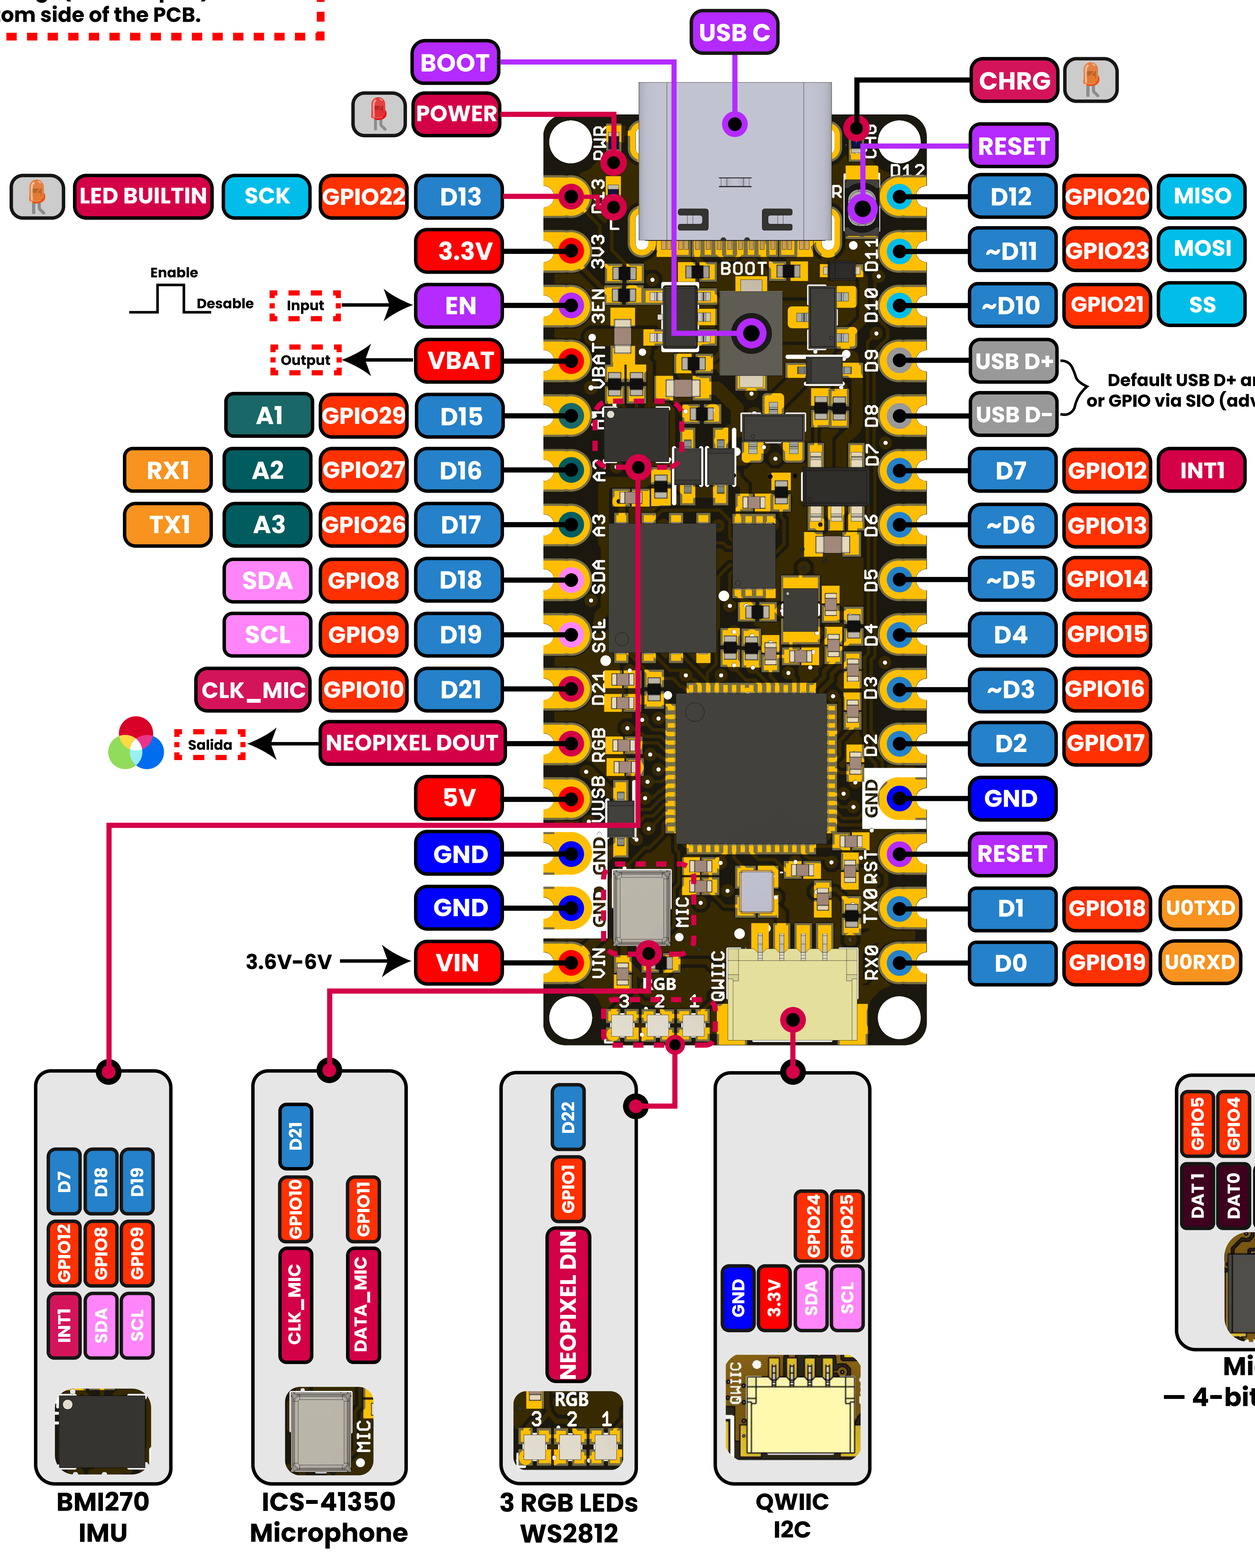

BMI270
IMU

ICS-41350
Microphone

3 RGB LEDs
WS2812

QWIIC
I2C

Bottom view

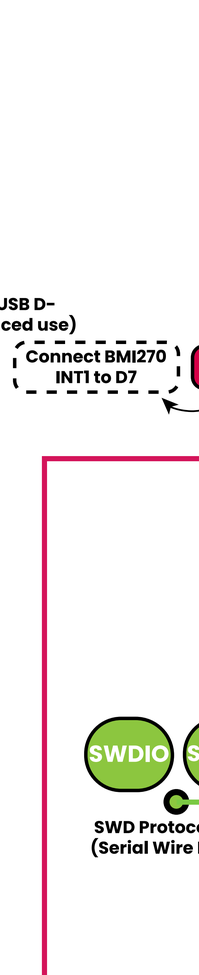

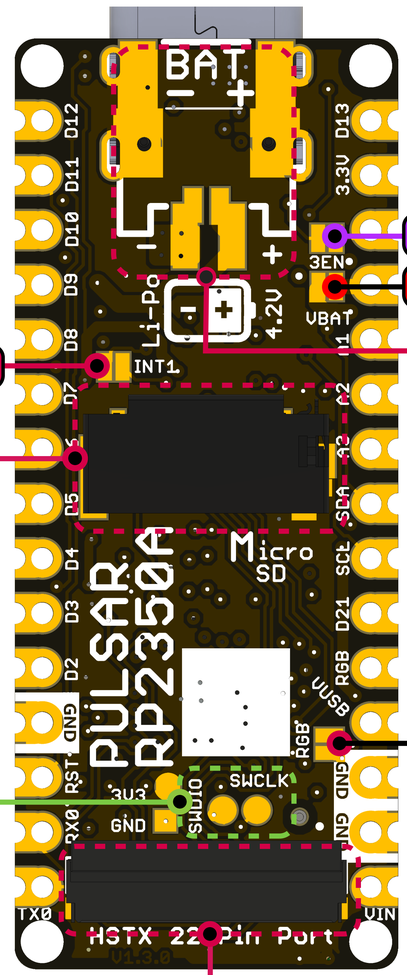

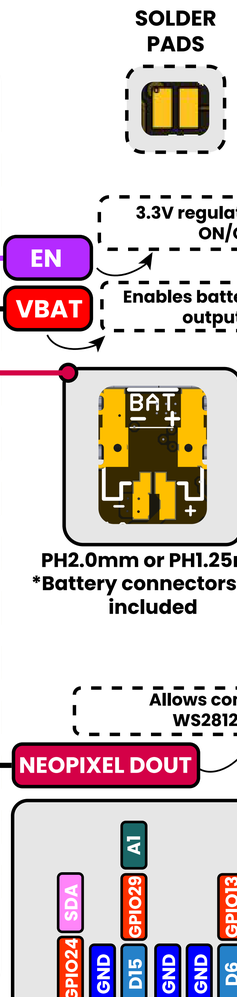

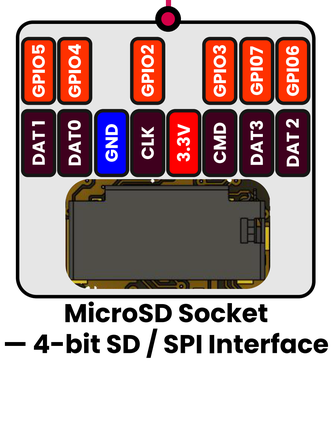

MicroSD Socket
— 4-bit SD / SPI Interface

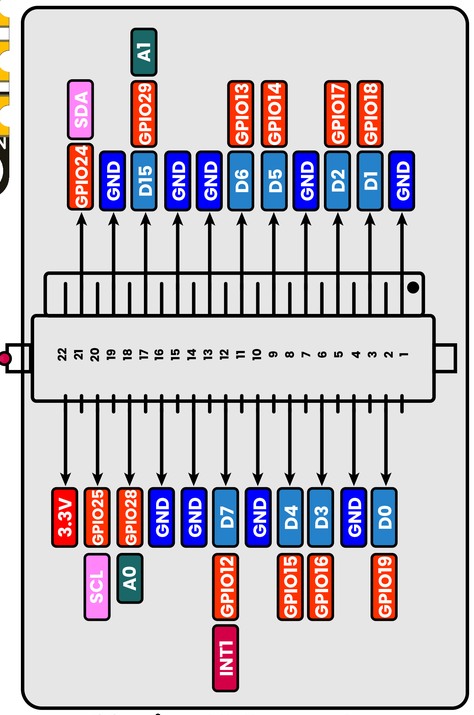

22-pin FPC Connector
HSTX Port — Compatible with DVI adapter

Legend

- Power supply
- GND
- System
- Devices
- GPIO compatible with Arduino NANO (~PWM)
- GPIO RP2350A
- Analog inputs
- Micro SD
- SPI
- I2C
- USB data
- UART
- SWD
- Led (POWER, CHG, BUILTIN)
- Led RGB