
If your card's RP2040 stops being recognized by your PC as shown in the image



Press the following button combination:

1. Reset
2. Boot
3. Hold both buttons
4. Release Reset, then hold Boot
5. Quickly repeat steps 1 through 4 a second time.

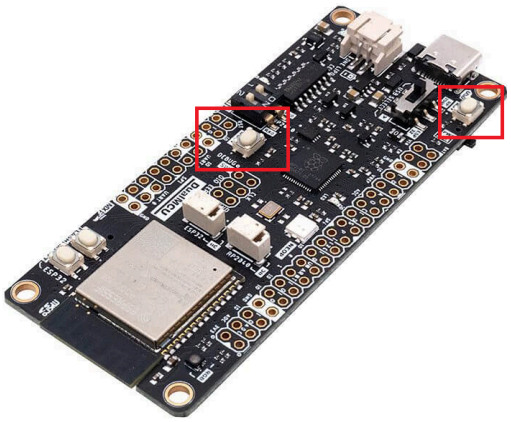

Upload a Blink from your Arduino IDE to the UF2 port.



Once the program has finished downloading, press the Reset button and your RP2040 will be recognized again as a COM port on your PC.

