

Computerized Embroidery Machine Controller

BECS-A15

(Wireless Design Upload)

Version: 2022-01

OPERATING MANUAL



CONTENTS


CHAPTER 1	SOFTWARE INSTALLATION	1
CHAPTER 2	WIFI SETTINGS.....	3
2.1	WIFI SETTING OF PC.....	3
2.2	WIFI SETTINGS	3
2.3	PC NETWORKING.....	5
2.4	CHANGE MACHINE NAME	7
CHAPTER 3	UPLOAD DESIGN TO DATABASE	9
CHAPTER 4	WIRELESS DESIGN UPLOAD	11
4.1	SEND FROM DISK.....	11
4.2	SEND FROM DB	12
4.3	SCAN CODE TO SEND DESIGN	14
4.3.1	<i>Scan Code to Send Design from DB.....</i>	<i>14</i>
4.3.2	<i>Scan Code to Upload Design via Design Query.....</i>	<i>16</i>
4.4	DOWNLOAD DESIGN FROM NETWORK.....	19
CHAPTER 5	SOFTWARE REINSTALL	22
5.1	EXIT RUNNING SOFTWARE.....	22
5.2	UNINSTALL	23
5.3	REINSTALL SYSTEM	24

The specification is subject to changes without a prior notice!


Chapter 1 Software Installation

Installation of wireless design upload software: DesignServer_Setup.

1. Find and double click this file on PC.

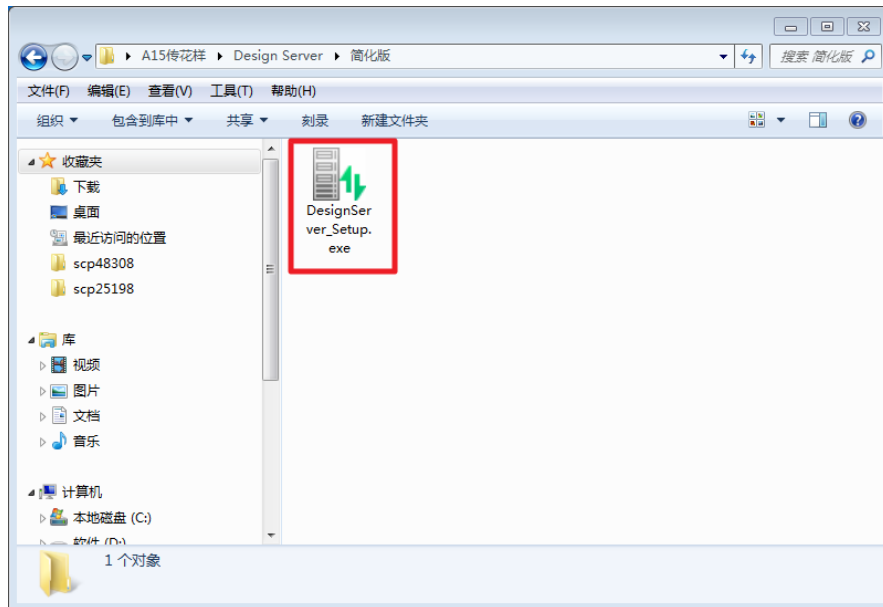



2. All options are default settings during installation.
3. After finishing installation, power off and reboot the PC and the DesignServer icon  will appear on the desktop. Double click it to open this software.

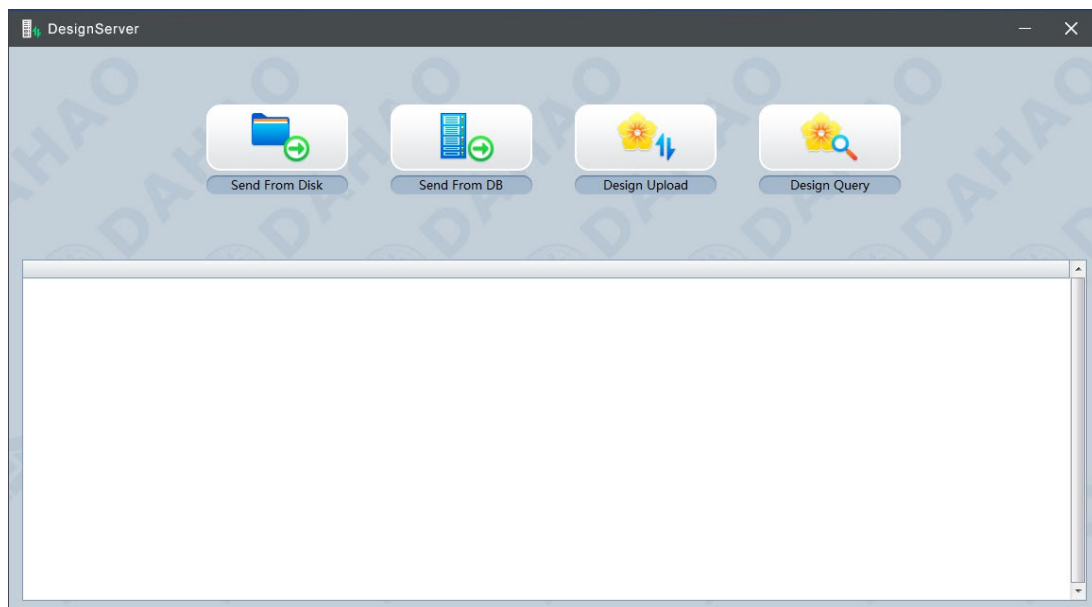

4. Right click this icon at the lower right corner of desktop to switch languages.



Chapter 1 Software Installation

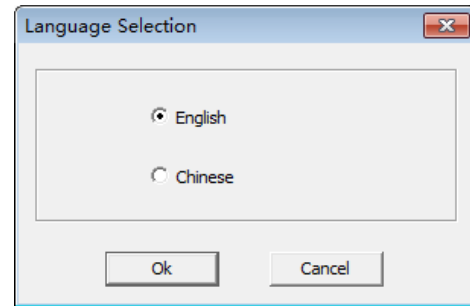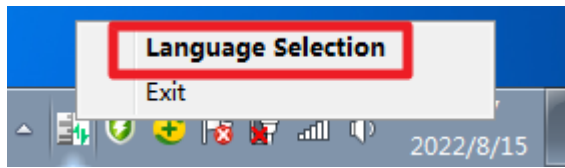

Chapter 2 Wifi Settings


Both PC and A15 electronic controller should be connected to **the same** wireless network before they are connected mutually.

2.1 Wifi Setting of PC

1. Click wireless network to set the wifi networking function at the lower right corner of PC.



2. Click “Connect”, enter wireless password and click “OK” button to set the wireless network.

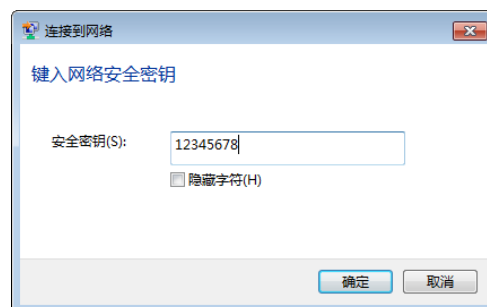

2.2 Wifi Settings


1. Click on the main interface  to enter the wireless network settings. Click “Wireless Network” to set the wifi networking function.



Chapter 2 Wifi Settings



2. Select the wireless network you want to set, click “Connect”, enter the wireless password, and click  to confirm the operation.

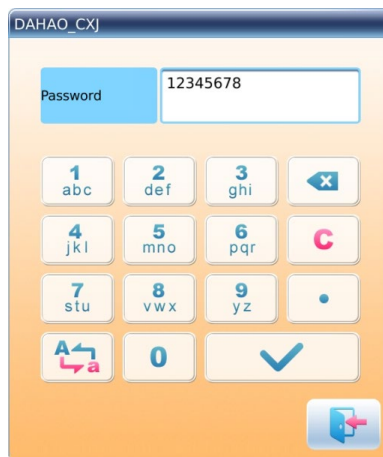


3. The wireless network status on the interface:  change from to .




2.3 PC Networking

1. Check the IP address in PC;

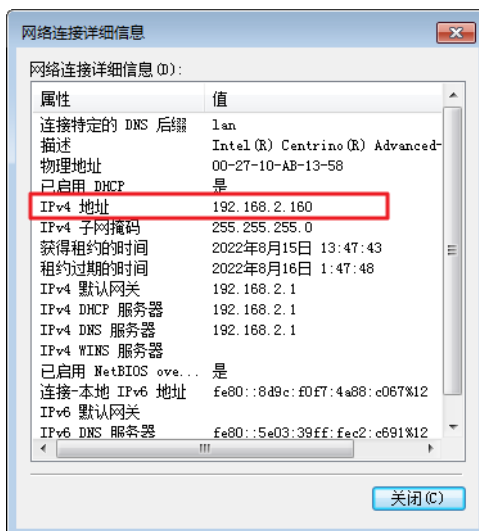


2. Press  in the main interface and press  to enter parameter setting interface.

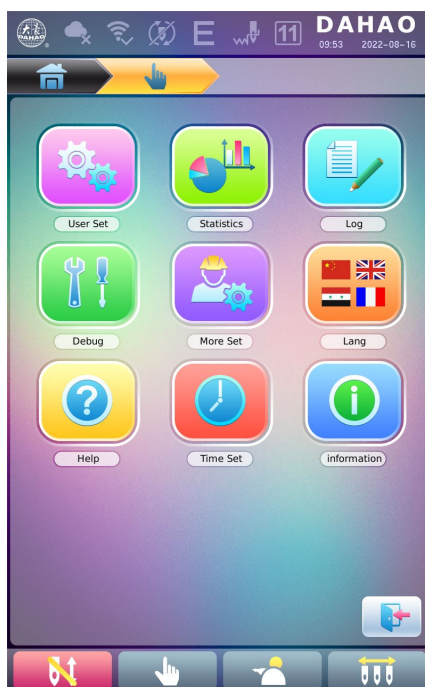

3. Enter parameter setting interface of system and set parameters related to IP address;



Chapter 2 Wifi Settings

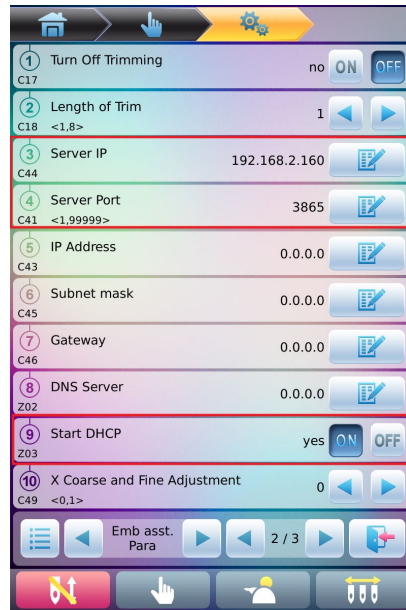


Parameter Code	Parameter Name	Parameter Information
C44	Server IP	IP address is consistent with PC;
C41	Server Port	3865
Z03	Start DHCP	Yes/ON

4. After finishing setting, power off and reboot the machine and network cloud will be connected automatically. The wireless cloud status on interface will turn  from .




- Double click to open DesignServer  on the desktop of PC and the connected machine will occur in the list. Update design wirelessly.

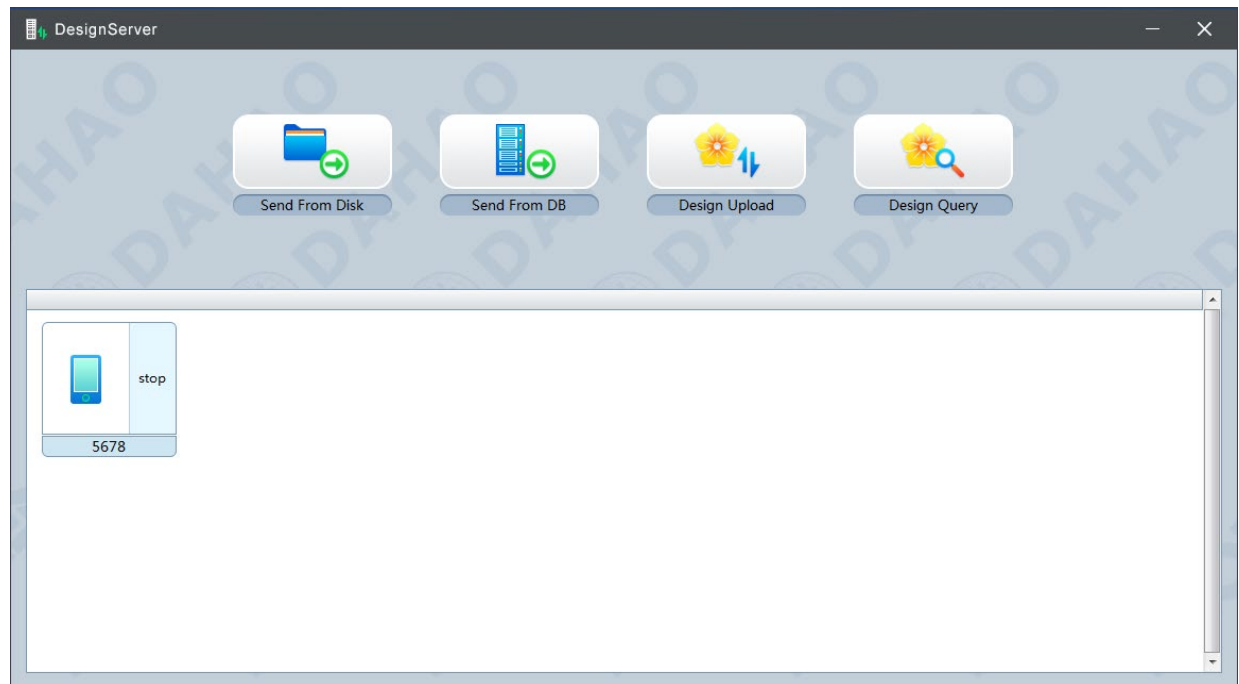


2.4 Change Machine Name

- Click auxiliary embroidery function button  on A15 operation box to enter the auxiliary embroidery operation interface.

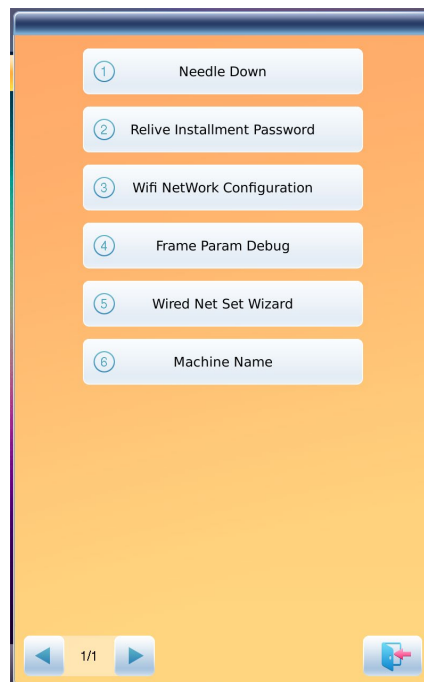

- Click “Machine name” to change the machine name.

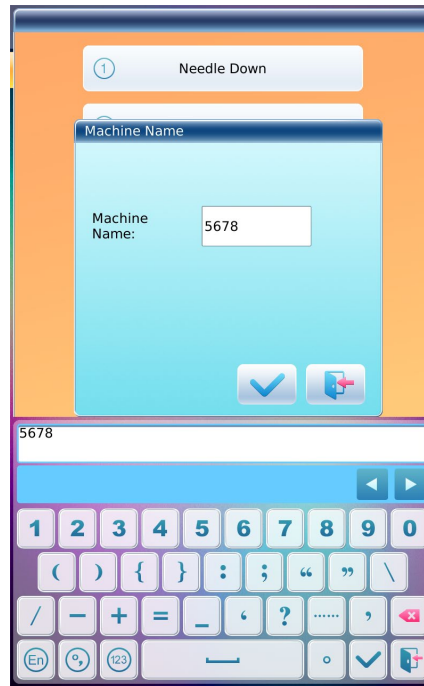


3. Click the button  to confirm the operation, and click the button  to cancel the operation.


Chapter 3 Upload Design to Database

Upload design to database: Upload local design of PC to the database.


1. Double click to open the DesignServer software  on desktop of PC, and then click “Design upload”.

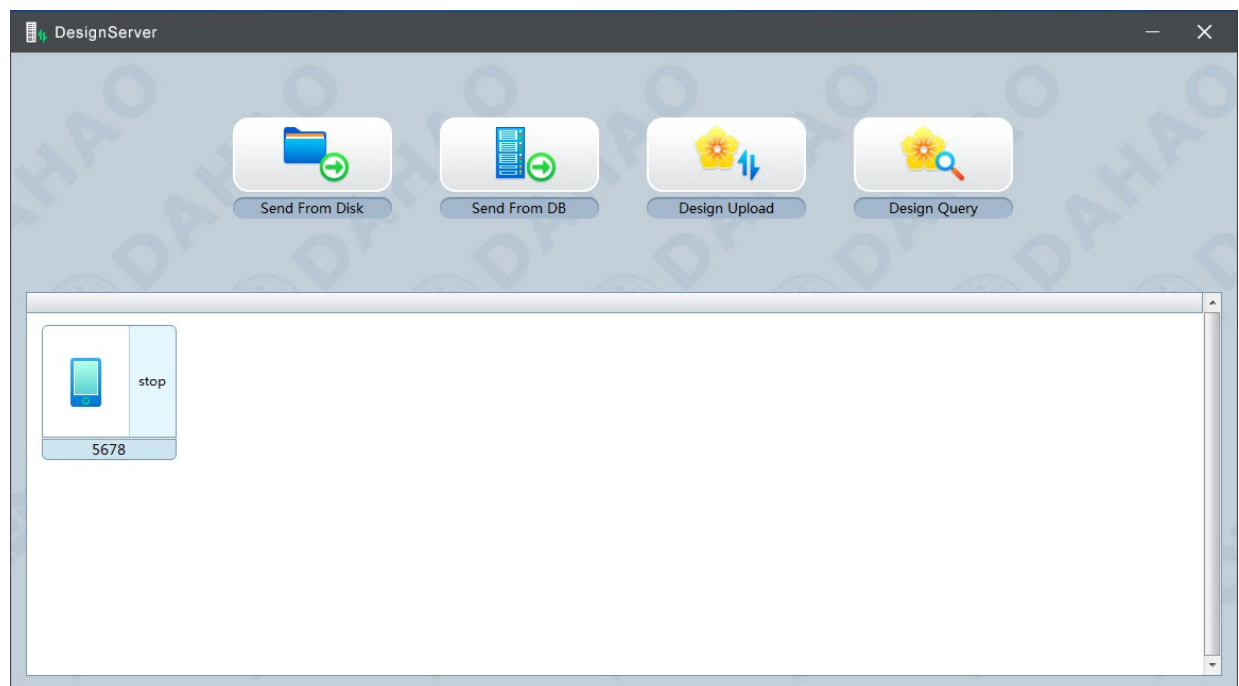


2. Find the target design locally in PC and press “Upload”.

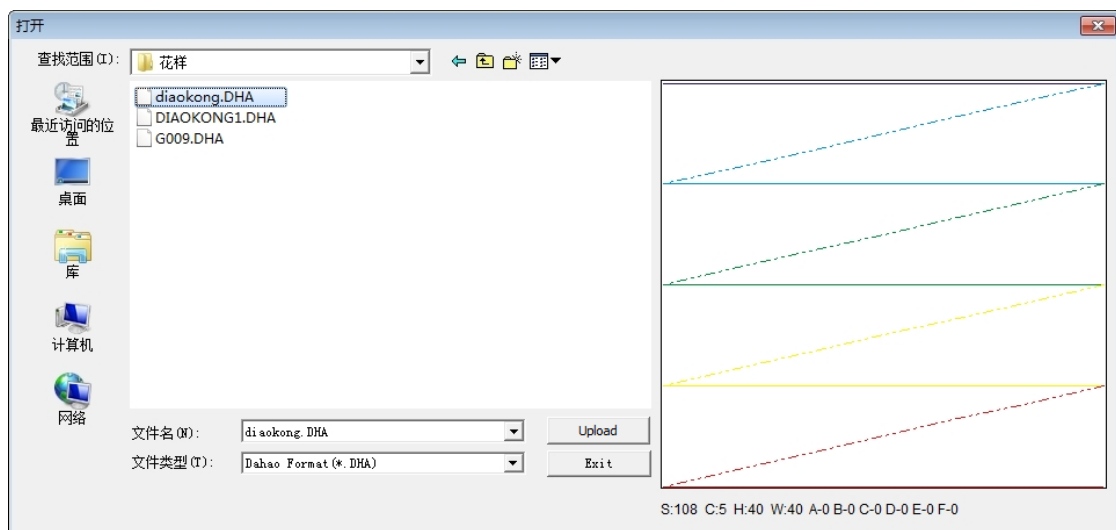

3. After finishing uploading design, the interface will show prompt text.

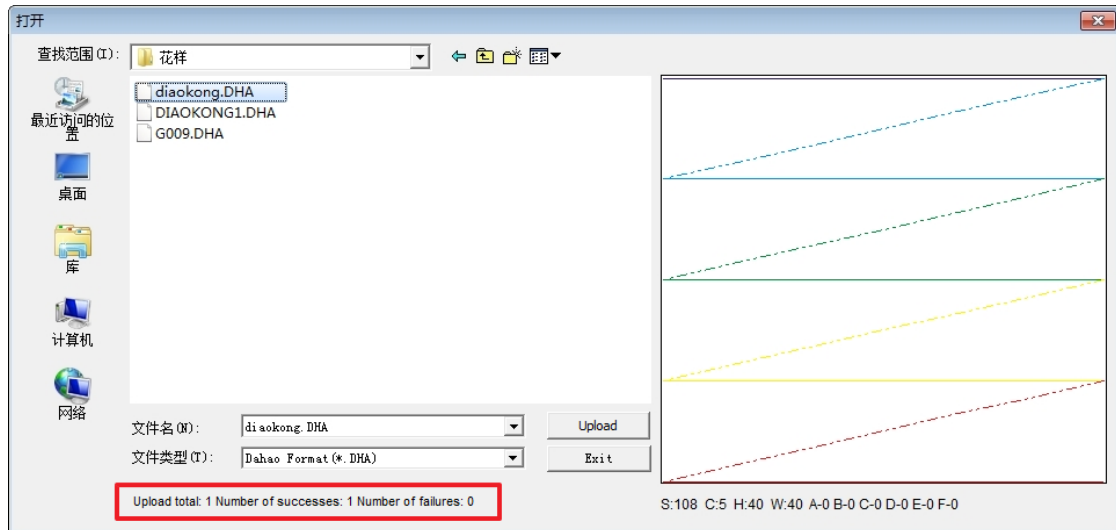

4. The uploaded designs can be queried in the “Send from DB”.

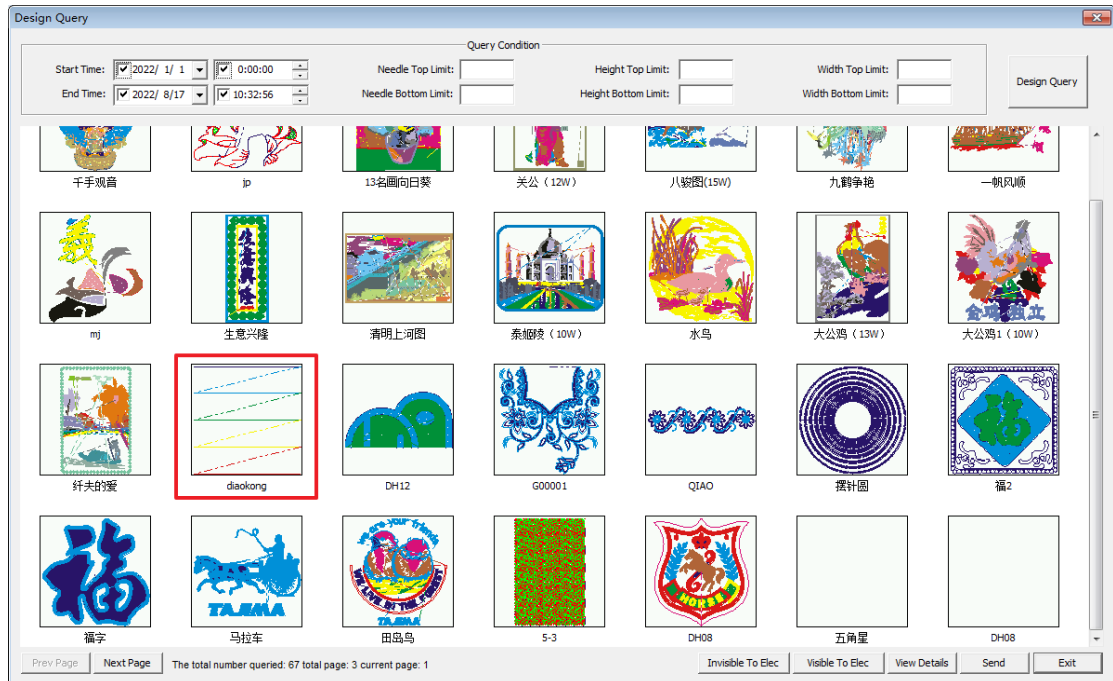


Chapter 4 Wireless Design Upload


Wireless design upload: Upload the designs on PC and A15 electronic controller through wireless network. The wireless design upload can be realized in four modes: Send from disk, send from DB, scan code to upload design, and download design from Dahaoyun.

4.1 Send from Disk

1. Double click to open DesignServer software  on the desktop of PC. Select the machine to upload design in the list, and then click “Send from disk”.

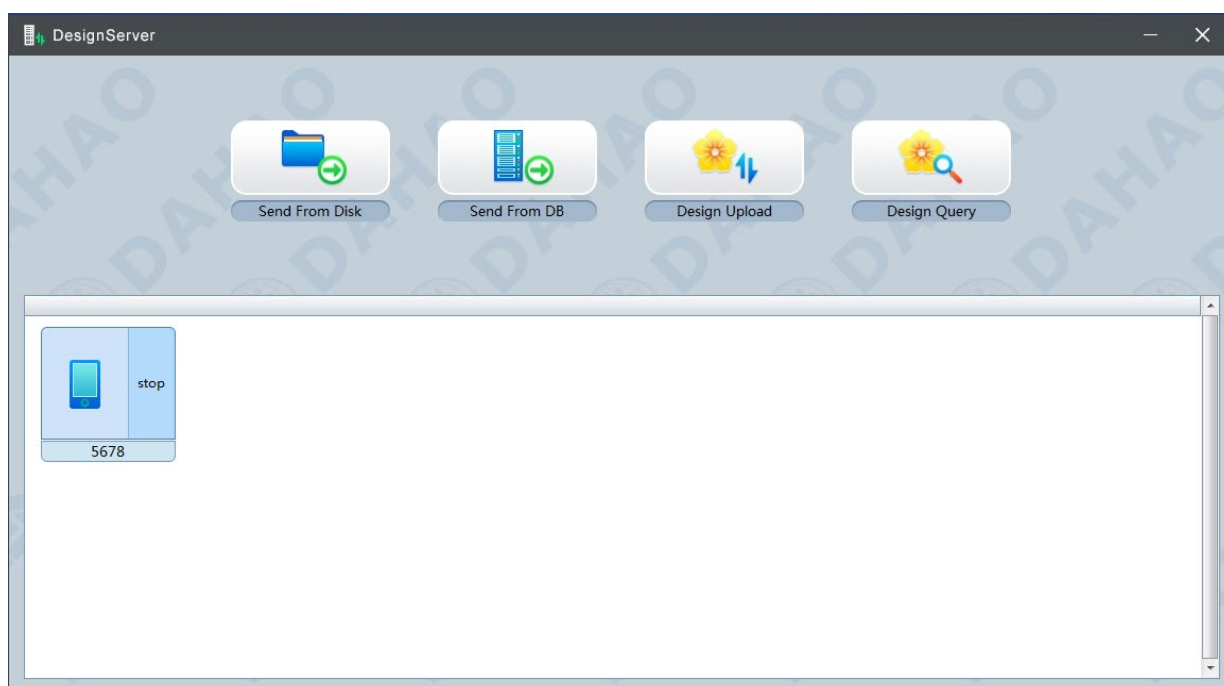


2. Find the target design locally in PC and click “Send”.

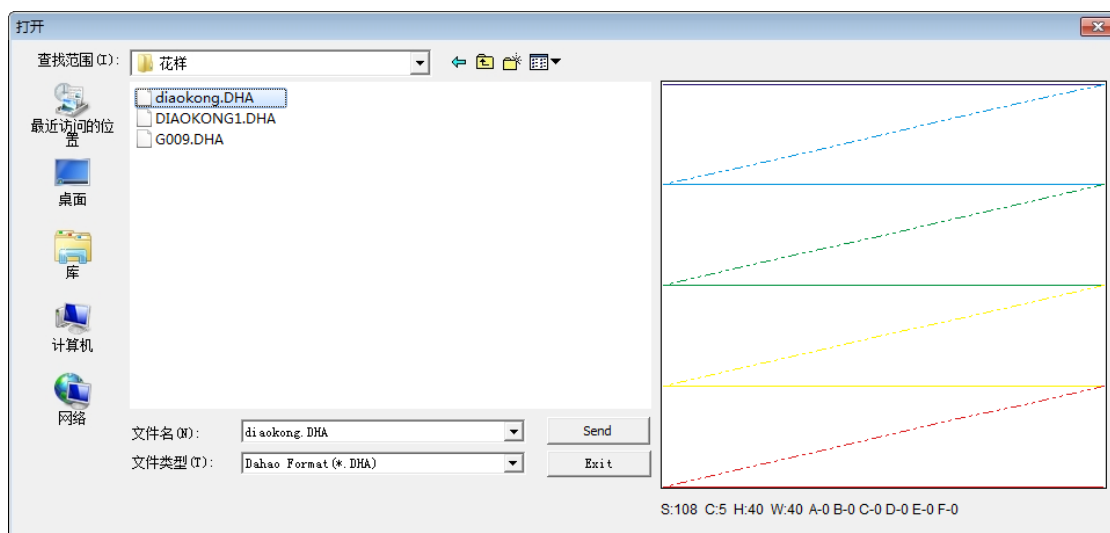



Chapter 4 Wireless Design Upload

- After finishing design, it will jump to “Sent the design success” interface automatically.

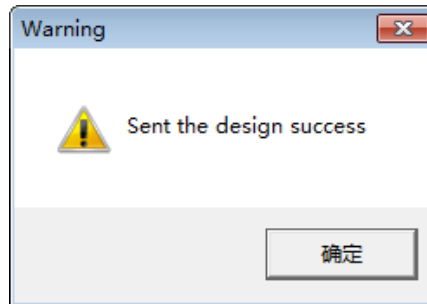


- The uploaded design can be viewed in the A15 design management interface.




4.2 Send from DB


- Double click to open the DesignServer software  on the desktop of PC. Select the machine to upload design in the list, and then click “Send from DB”.

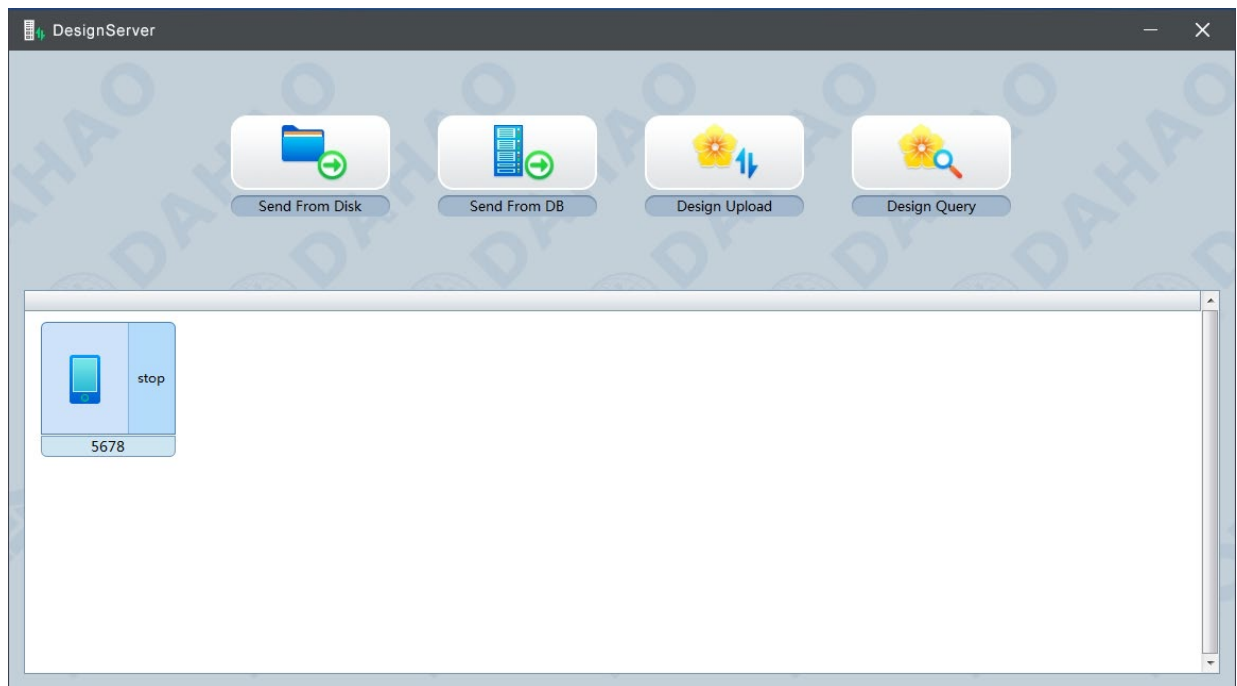

- Find the target design in the design list and click “Send”.

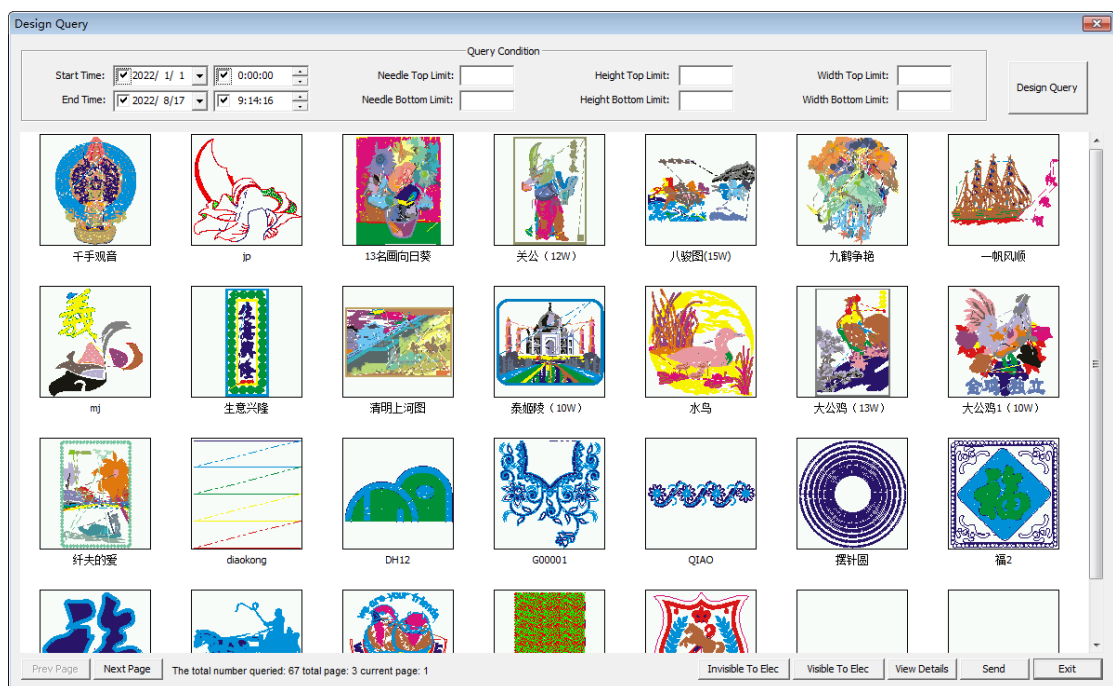

- After finishing uploading design, it will jump to “Sent the design success” interface automatically.

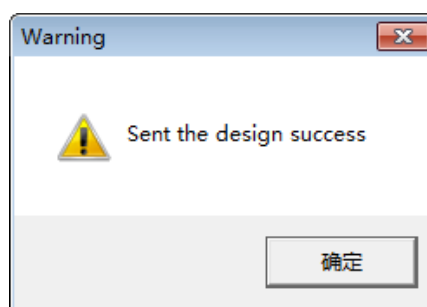




- The uploaded design can be viewed in the A15 design management interface.




4.3 Scan Code to Send Design

4.3.1 Scan Code to Send Design from DB


- Double click to open the DesignServer software  on the desktop of PC, select the target machine in the list and click “Send from DB”.

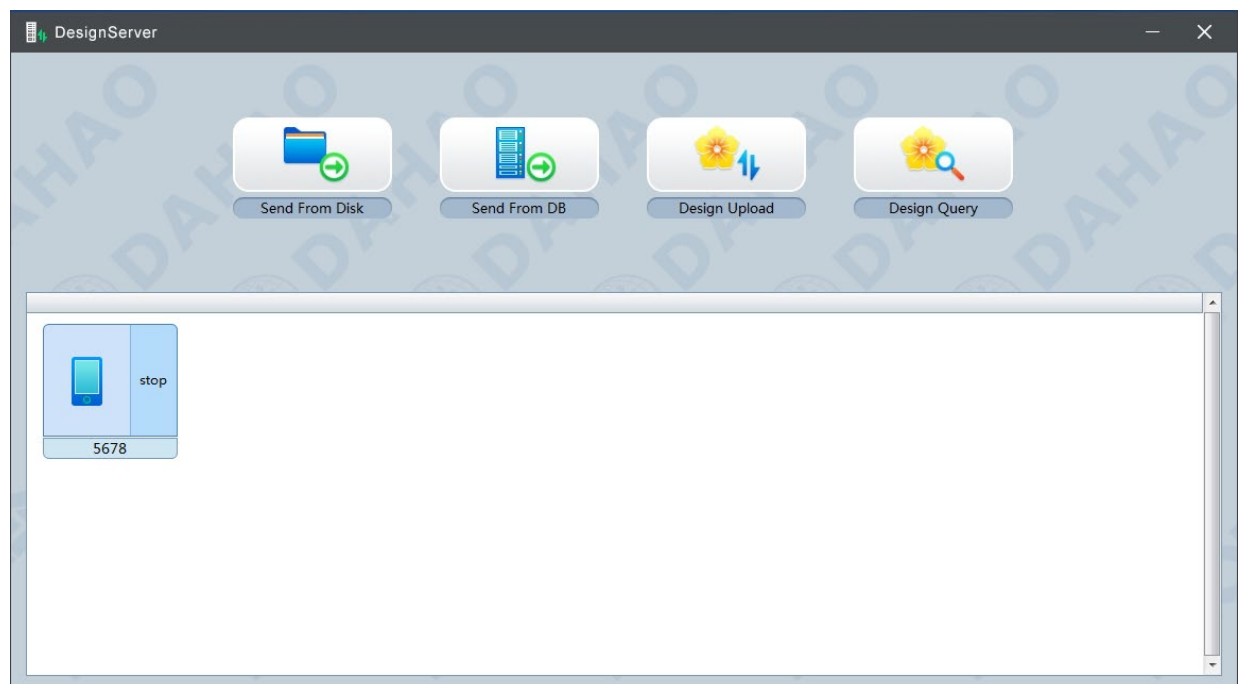

- Find the target design in the design list and click “Design query”.

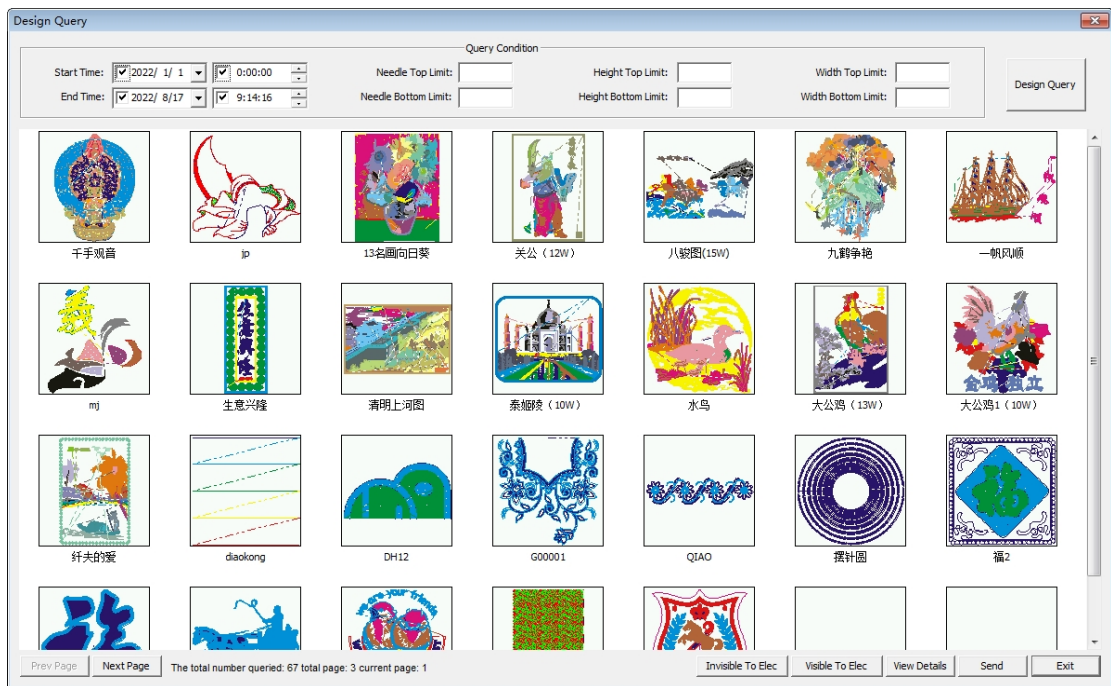


3. The QR code and design details will appear, and scan it with scanning gun to upload the design.

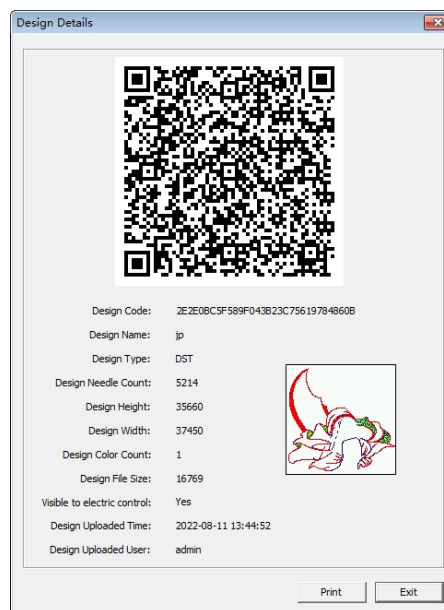

Note: The scanning gun should be connected to A15 electronic controller.

4. After finishing uploading design, it will jump to “Sent the design success” interface automatically.

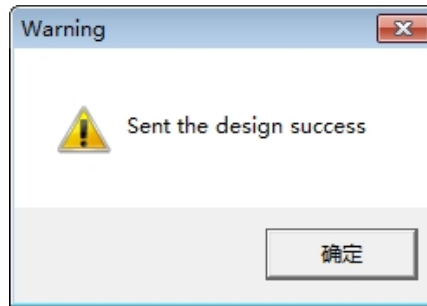


5. The uploaded design can be viewed in the A15 design management interface.




4.3.2 Scan Code to Upload Design via Design Query

1. Press “Design Query”. Double click to open the DesignServer software  on the desktop of PC and press “Design Query”.

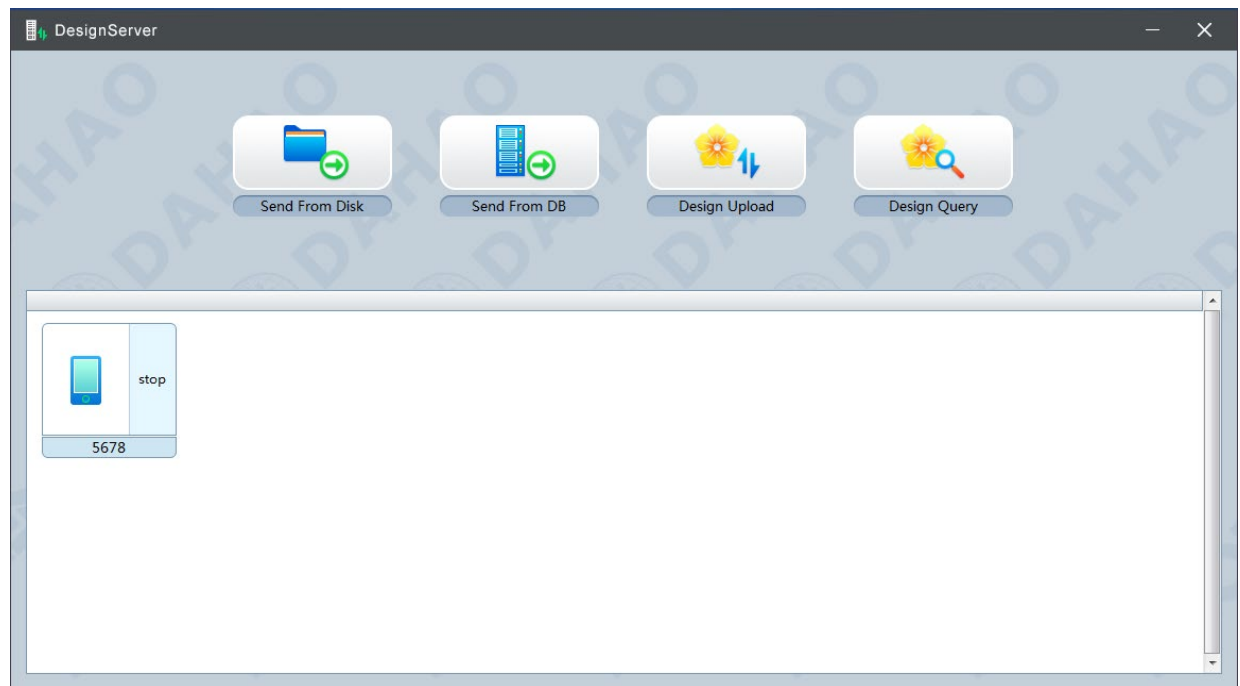


2. Find the target design in the design list and click “Design query”.

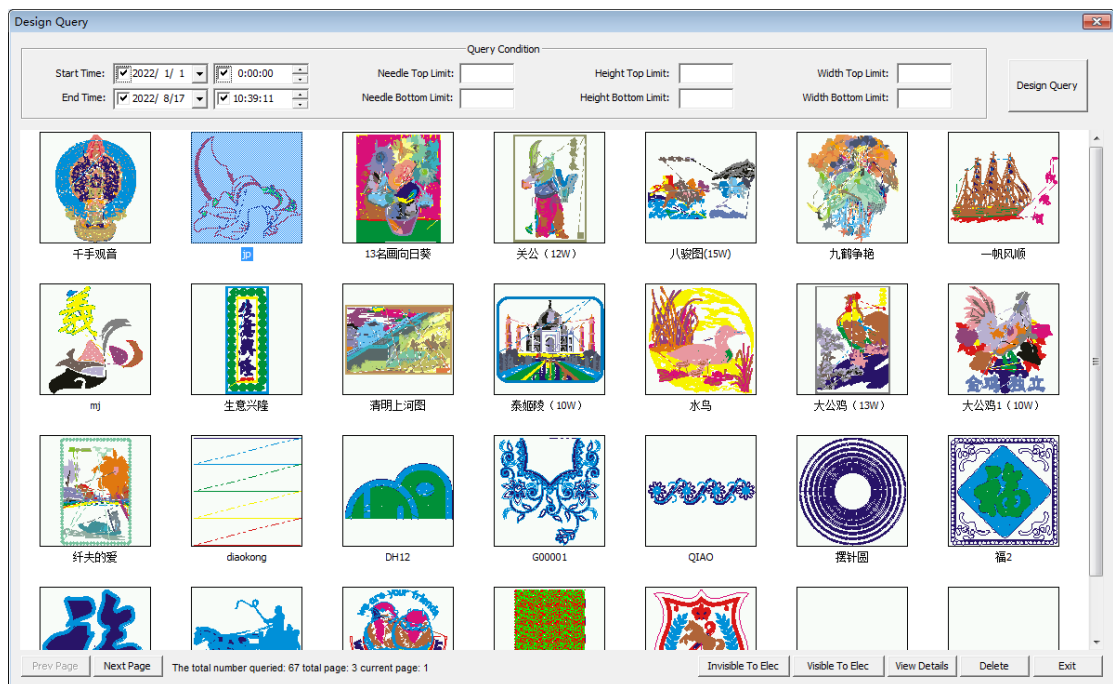


Note: The designs in database can be deleted in this interface.

3. The QR code and design details will appear and scan it with scanning gun to upload the design.

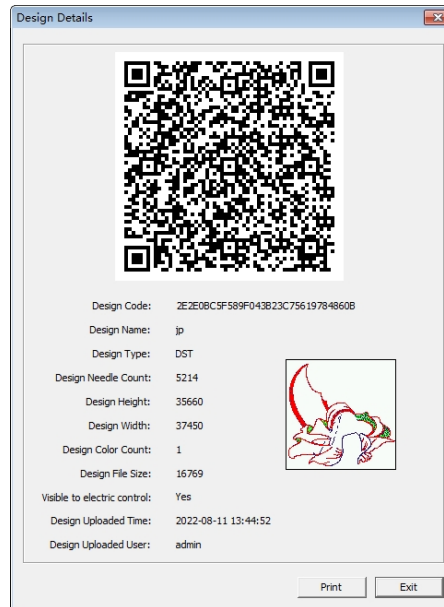

Note: The scanning gun should be connected to A15 electronic controller.

4. After finishing uploading design, it will jump to “Sent the design success” interface automatically.

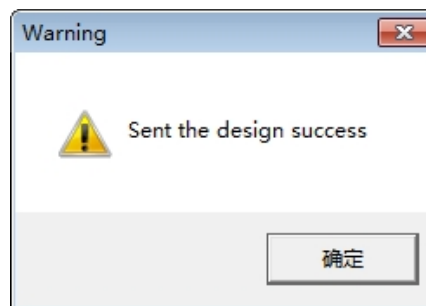

5. The uploaded design can be viewed in the A15 design management interface.



4.4 Download Design from Network


1. Enter A15 design management interface and click  button;




2. Select the target design from the list, and click  button to download designs from the DB.



Chapter 4 Wireless Design Upload

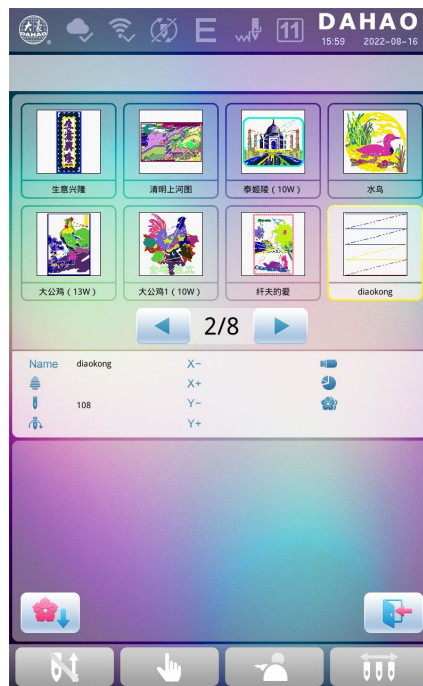

3. Enter design No. and name and click  button.

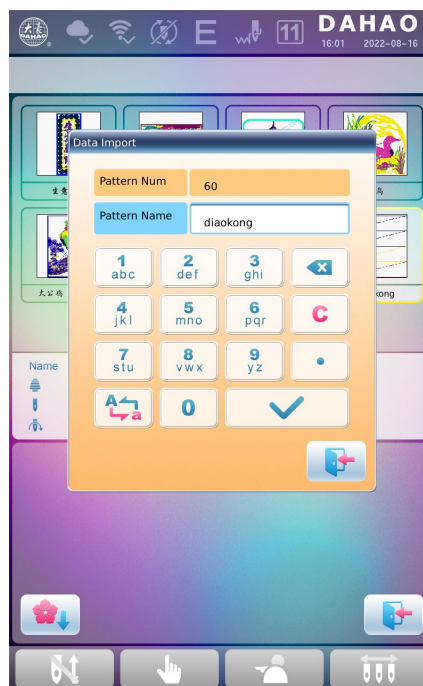

4. The downloaded designs can be found in the design management interface.






Chapter 5 Software Reinstall


5.1 Exit Running Software

Exit the running software in two ways:

Method 1: Click the “×” at the upper right corner of software to exit.

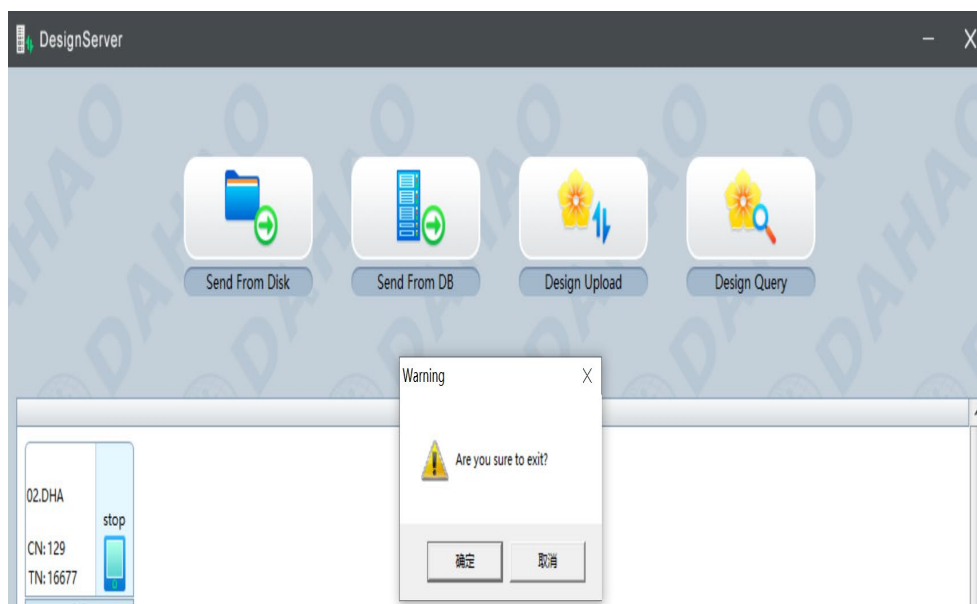


Method 2: Click the icon at the lower right corner of computer and right click “Exit”.

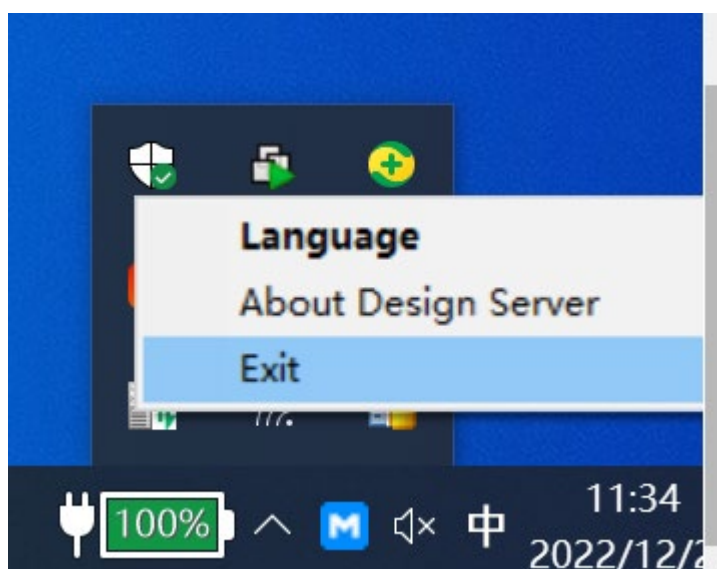


5.2 Uninstall

1. Find and right click the shortcut of DesignServer and choose “Open the file location”.

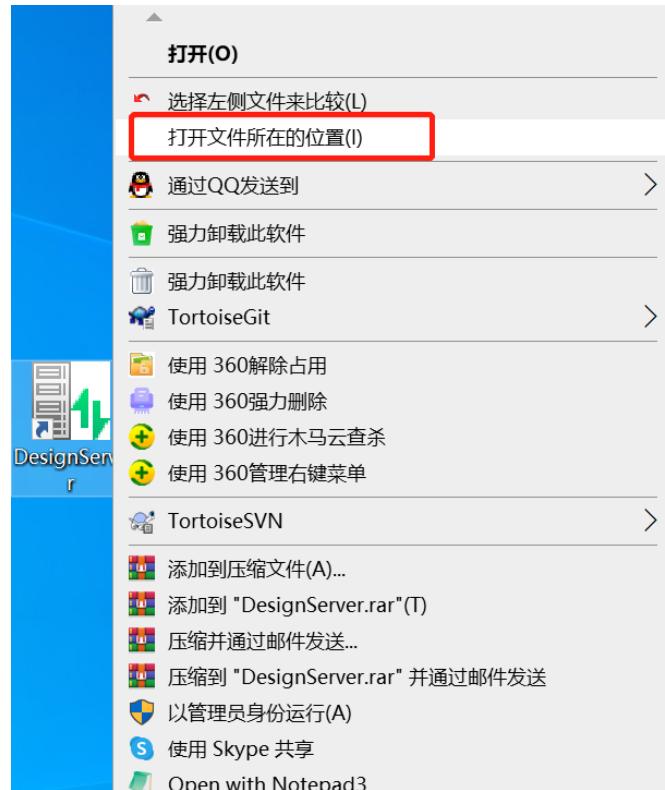

2. Select and double click “uninst.exe” in the software installation path and start uninstall.

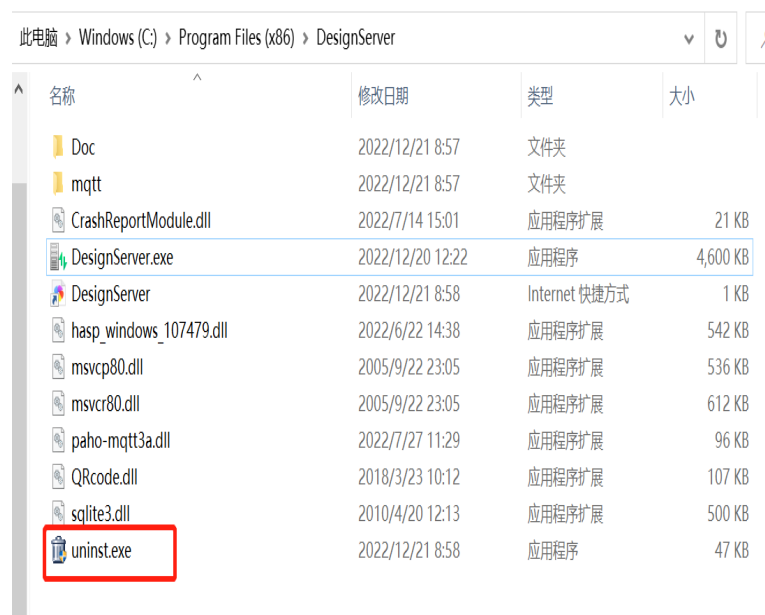

3. If uninstall fails, exit the antivirus software and then uninstall it through the administrator



authority.

5.3 Reinstall System

1. The steps are consistent with “Chapter 1 Software Installation”.
2. Click “Ignore” when the following prompts occur during installation.

