

Agilent X-Series Signal Analyzer

This manual provides documentation for the following analyzers:

PXA Signal Analyzer N9030A

MXA Signal Analyzer N9020A

EXA Signal Analyzer N9010A

CXA Signal Analyzer N9000A

MXE EMI Receiver N9038A

X-Series Programmer's Guide

Notices

© Agilent Technologies, Inc. 2008-2013

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Trademark Acknowledgements

Microsoft[®] is a US registered trademark of Microsoft Corporation.

Windows[®], MS Windows[®], Windows Vista[®], and Windows 7[®] are US registered trademarks of Microsoft Corporation.

Visual Basic[®], Visual Basic.NET[®], Visual Studio[®], and MS Excel[®] are registered trademarks of Microsoft Corporation.

Adobe Acrobat[®] and Reader[®] are US registered trademarks of Adobe Systems Incorporated.

Java™ is a US trademark of Sun Microsystems, Inc.

MATLAB[®] is a US registered trademark of Math Works, Inc.

LabVIEW™ and CVI™ are trademarks of National Instruments Corporation.

LabWindows is a mark used by National Instruments Corporation under a license from Microsoft Corporation.

Manual Part Number

N9020-90112

Print Date

February 2013

Supersedes: July 2012

Printed in USA

Agilent Technologies Inc. 1400 Fountaingrove Parkway Santa Rosa, CA 95403

Warranty

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a US Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software"

as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the US Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Warranty

This Agilent technologies instrument product is warranted against defects in material and workmanship for a period of one year from the date of shipment. During the warranty period, Agilent Technologies will, at its option, either repair or replace products that prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by Agilent Technologies. Buyer shall prepay shipping charges to Agilent Technologies, and Agilent Technologies shall pay shipping charges to return the product to Buyer. For products returned to Agilent Technologies from another country, Buyer shall pay all shipping charges, duties, and taxes.

Where to Find the Latest Information

Documentation is updated periodically. For the latest information about these products, including instrument software upgrades, application information, and product information, browse to one of the following URLs, according to the name of your product:

http://www.agilent.com/find/pxa

http://www.agilent.com/find/mxa

http://www.agilent.com/find/exa

http://www.agilent.com/find/cxa

http://www.agilent.com/find/mxe

To receive the latest updates by email, subscribe to Agilent Email Updates at the following URL:

http://www.agilent.com/find/emailupdates

Information on preventing instrument damage can be found at:

http://www.agilent.com/find/tips

Is your product software up-to-date?

Periodically, Agilent releases software updates to fix known defects and incorporate product enhancements. To search for software updates for your product, go to the Agilent Technical Support website at:

http://www.agilent.com/find/techsupport



Table of Contents

1	Introduction to Programming X-Series Applications
	How to Use this Manual 9
	X-Series Programming Options 10
	Hardware Connection Formats 12
	Interchangeable Virtual Instruments (IVI-COM, IVI-C) Drivers 1
	VISA Driver Options 13
	Agilent VEE Pro 15
	Programming Documentation Roadmap 16
2	SCPI Programming Fundamentals
	SCPI Language Basics 20
	Command Keywords, Separators and Syntax 20
	Creating Valid Commands 21
	Special Characters in Commands 21
	Parameters in Commands 23
	Variable Parameters 23
	Block Program Data 25
	Writing Multiple Commands on the Same Line 25
	SCPI Termination and Separator Syntax Examples 26
	Where to find X-Series SCPI Command Definitions 27
	Help System Features for SCPI Programmers 27
	Help System Contents Pane 27
	Help Topic Content 28
	List of SCPI Commands 29
	Simple SCPI Communication Methods 31
	Communicating SCPI Using Telnet 31
	Determining Instrument IP Address 32
	Enabling Telnet in Windows 34
	Communicating SCPI using Agilent Connection Expert 34
	Techniques for Improving Measurement Performance
	Turn off Display Updates 37
	Use Binary Data Format instead of ASCII 37
	Minimize the Number of Bus Transactions 37
	Use USB or LAN Connection instead of GPIB 38
	Minimize DUT/instrument Setup changes 38

Contents

	Avoid Unnecessary Use of *RST 39
	Avoid Automatic Attenuator Setting 39
	Avoid using RFBurst trigger for Single Burst Signals 39
	Making a Single Burst Measurement 39
	Optimize GSM Output RF Spectrum Switching Measurement (N9071A Measurement Application) 40
	To make Power Measurements on Multiple Bursts or Slots use CALCulate:DATA <n>:COMPress? 40</n>
	More Hints & Tips 41
3	Developing and Deploying VISA Projects
	Programming in Visual Basic 6 with VISA Location of Header Files 43
	Programming in C or C++ with VISA 43
	Location of Header Files & Libraries 43
	Programming with Microsoft .NET and VISA 44
	Location of Header Files 44
	Requirements for Deploying a VISA Project 45
	Multiple VISA DLL Versions 45
4	Program Samples
	Where to find Sample Programs 47
	N9060A Spectrum Analyzer Mode Programing Samples 48
	Matrix of Program Sample Functionality and Programming Language 48
	Visual Basic 6 49
	Retrieve Screen Images 50
	Read Binary Trace Data 50
	C, C++ 50
	Poll Method for Operation Complete 52
	SRQ Method for Operation Complete 52
	Set and Query Relative Band Power Markers 52
	Set Traces and Couple Markers 54
	Phase Noise Trace Math 54
	C#.NET & Visual Studio 2010 54
	Retrieve Screen Images 55
	Poll Method for Operation Complete 55
	SRQ Method for Operation Complete 55
	Phase Noise Trace Math 57
	Agilent VEE Pro 57

Retrieve Sc	reen Ima	ges	5	58				
Retrieve Tra	ice Data		58					
LabVIEW	58							
Screen Cap	ture	59						
MATLAB	59							
Upload a Fil	le 5	9						
IVI-COM Pe	ersonality	(Mod	de) Se	elect	59			
N9064A VXA V	ector Sigi	nal Aı	nalyze	er Progr	ammiı	ng Sam	ıples	60
Vector Analys	is Meası	ıreme	ent	61				
Digital Demod	d Measur	emen	ıt	61				

Appendix A References

Documents & Web Sites 63

Developer Resources 65

Agilent Developer Network (ADN) 65

Technical Support 65

Contents	



How to Use this Manual

This chapter provides overall information regarding remote programming of Agilent X-Series instruments, and how to use the programming documentation provided with the product.

This chapter includes the following topics:

"X-Series Programming Options" on page 10

"Hardware Connection Formats" on page 12

"Interchangeable Virtual Instruments (IVI-COM, IVI-C) Drivers" on page 13

"VISA Driver Options" on page 13

"Agilent VEE Pro" on page 15

"Programming Documentation Roadmap" on page 16

The second chapter, "SCPI Programming Fundamentals" on page 19, provides an introduction to **Standard Commands for Programmable Instruments (SCPI)**, which is the most popular and versatile protocol for programming X-Series instruments.

The chapter "Developing and Deploying VISA Projects" on page 43 provides basic information about X-Series programming with the **Virtual Instrument Software Architecture (VISA)**, using various popular programming languages.

The chapter "Program Samples" on page 47 describes all program samples that are included in the \progexamples folder of the X-Series Documentation DVD, and provides information about how to find other X-Series program samples.

X-Series Programming Options

You can program X-Series instruments using a variety of programming tools, languages and Application Development Environments (**ADEs**).

There are also several software driver technologies that you can use to program X-Series instruments, which offer various tradeoffs between programming tool, ADE and driver technology. Table 1-1 explains the relative advantages of each programming method and driver technology. Figure 1-1 on page 12 shows a conceptual overview of the hierarchy of drivers that are available for X-Series programming.

Table 1-1 Programming Options & Driver Technologies for X-Series Instruments

Method	Description			
Instrument Drivers	Features	As shown in Figure 1-1, Instrument Drivers are built upon, and offer a higher level of abstraction than, VISA Drivers. Instrument drivers offer a shorter learning curve than VISA Drivers, at the expense of reduced operational flexibility.		
		For more details, see "Interchangeable Virtual Instruments (IVI-COM, IVI-C) Drivers" on page 13.		
	Acquisition & Licensing	Free download from Agilent and IVI Foundation web sites.		
	Requires separate ADE?	Yes, but depending on your program development requirements, you may be able to use a free download such as one of the Microsoft Visual Studio Express editions.		
	Driver Support	IVI Class Driver and Instrument-Specific IVI Drivers, as shown in Figure 1-1 below. These are enhanced developments of the older VXIplug&play Drivers.		
		Also referred to as "IVI-C" and "IVI-COM" Drivers.		

Table 1-1 Programming Options & Driver Technologies for X-Series Instruments Method **Description VISA Drivers** As shown in Figure 1-1, VISA is a driver technology that **Features** operates at a lower level of abstraction than Instrument Drivers. As such, it offers greater flexibility, at the expense of a longer learning curve. VISA is a generic, industry-wide standard, unlike Instrument Drivers, which are instrument-specific. For more details, see "VISA Driver Options" on page 13. Acquisition & Free download from Agilent web site. Licensing Requires separate Yes, but depending on your program development ADE? requirements, you may be able to use a free download such as one of the Microsoft Visual Studio Express editions. **Driver Support** VISA, as shown in "VISA Library Layer" in Figure 1-1 **Agilent VEE Features** An integrated, graphically-oriented, standalone ADE, which supports instruments from Agilent and other manufacturers. For more details, see "Agilent VEE Pro" on page 15. License must be purchased from Agilent. Acquisition & Licensing

No

Supports both Instrument Drivers and VISA.


Requires separate

Driver Support

ADE?

Hardware Connection Formats

Figure 1-1 X-Series Software Driver Hierarchy

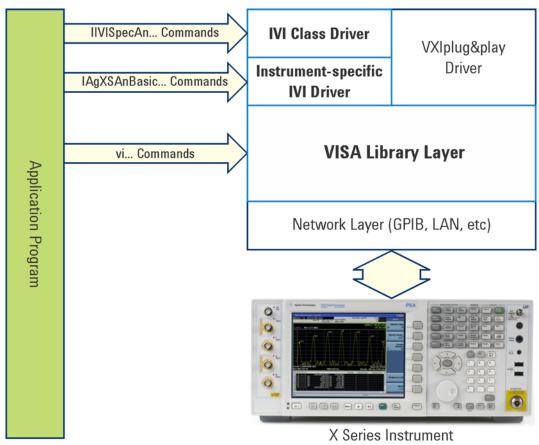

Hardware Connection Formats

X-Series instruments support the following hardware connection standards (represented by the "Network Layer" in Figure 1-1 above):

Standard	Instrument Connection Type	
GPIB	GPIB devices and interfaces	
TCPIP	LAN and HiSLIP instruments	
USB	USB instruments	

In general, modern driver technology hides the details of the hardware connection from the programmer, so your instrument's actual hardware connection is unlikely to have any significant effect on the optimal choice of programming tool, language or ADE.

Interchangeable Virtual Instruments (IVI-COM, IVI-C) Drivers

IVI Drivers are defined by the IVI Foundation, as an enhanced development of the earlier VXIplug&play Instrument Drivers.

With IVI drivers you do not need to have in-depth test instrument knowledge to develop sophisticated measurement software.

Agilent supports IVI Drivers for the following architectures:

- IVI-COM Drivers are based on the Microsoft Component Object Model (COM) technology, offering the seamless integration in all environments that is generally associated with COM.
- IVI-C Drivers are based on C-language shared libraries, and are intended to cater to National Instruments LabWindows/CVI.

IVI driver download packages for X-Series instruments can be found at the URL:

http://www.agilent.com/find/sa-ivi

Note that the Agilent I/O Libraries Suite must be installed and the hardware interface must be configured, before installing the IVI Drivers.

IVI Shared Components are required by all IVI-COM and IVI-C drivers. VI Shared Components are automatically installed when you install the Agilent IO Libraries Suite.

VISA Driver Options

Agilent I/O Libraries Suite is a collection of libraries, Application Programming Interfaces (APIs) and utility programs. The I/O libraries (SICL, VISA, and VISA COM) enable instrument communication for a variety of development environments (Agilent VEE Pro, Microsoft Visual Studio, etc.) that are compatible with GPIB, USB, LAN, RS-232, PXI, AXIe, and VXI test instruments from a variety of manufacturers.

The suite's utility programs help you quickly and easily connect instruments to a computer.

The Agilent IO Libraries Suite includes the following libraries:

ltem	Library Name	Documentation Location & Notes
1	Agilent Virtual Instrument Software Architecture (VISA) ¹	The VISA API is a programming interface originally developed and standardized by the VXIplug&play Alliance (now the IVI Foundation) as an industry-wide standard for communicating with instruments over various hardware interfaces. The definition includes the standard visa.h header file for use with C and C++, which provides declarations for the visa32.dll library.
		Additionally, Agilent has developed the header files visa32.cs and visa32.bas, to permit the VISA DLL to be used with C#.NET and Visual Basic.NET respectively.
		For more information, see the VISA Documentation Help in the Agilent I/O Libraries Suite.
2	VISA for the Common Object Model (VISA COM) ¹	The VISA COM I/O API is a programming interface standardized by the IVI Foundation for communicating with instruments over various hardware interfaces.
		Agilent Technologies offers an implementation of the VISA COM I/O standard that is compatible with Agilent hardware as well as computer standard I/O interfaces. VISA COM I/O is an update of the older VISA C API to work in and with Microsoft's COM technology.
		For more information, see the VISA COM Help in the Agilent I/O Libraries Suite.
3	Agilent Standard Instrument Control Library (SICL) ¹	SICL is compatible only with Agilent interfaces, whereas VISA is an industry-wide standard.
		This library is not described further in this document. For more information, see the SICL Documentation Help in the Agilent I/O Libraries Suite.
		Note that SICL is supported only for the C and VB6 languages; there is no SICL support for .NET languages.

ltem	Library Name	Documentation Location & Notes
4	Agilent 488	Compatible with the NI-488.2 Application Programming Interface (API) from National Instruments, and used for GPIB programming only.
		This library is not described further in this document. For more information, see the Agilent 488 Help in the Agilent I/O Libraries Suite.

1. Note that using VISA functions and SICL functions in the same I/O application is not supported.

Agilent VEE Pro

Agilent VEE (Visual Engineering Environment) Pro provides a graphical language and integrated development environment that permits efficient development of measurement and analysis solutions, while requiring minimal custom programming.

You can select and edit objects from pull-down menus or toolbars and connect them to each other by virtual wires to specify the program's data flow, mimicking the order of tasks you want to perform.

Agilent VEE Pro can communicate with any instrument from any vendor, using GPIB, LAN, USB, RS-232, VXI or LXI.

For further details, see the web page for Agilent VEE Pro.

For information about using IVI Instrument Drivers with Agilent VEE, see Agilent Application Note 1595.

Programming Documentation Roadmap

Most X-Series manuals and publications can be accessed via the Additional Documentation page in the instrument Help system, and are also included on the Documentation DVD shipped with the instrument. Exceptions are noted in Table 1-2 below.

All documents can also be found online at the Agilent X-Series Document Library.

Table 1-2	X-Series Documentation Resources				
Resource	Description				
X-Series	Provides general programming information on the following topics:				
Programmer's Guide	Introduction to Programming X-Series Applications				
(This document)	SCPI Programming Fundamentals				
,	Program Samples				
	Note that SCPI command descriptions for measurement applications are not in this document, but are in the User's and Programmer's Reference manuals for each measurement application (mode).				
User's and	Describes all SCPI commands for a measurement application (mode). Note that:				
Programmer's Reference	• Each measurement application has its own User's and Programmer's Reference.				
manuals	 The content of this manual is duplicated in the instrument's Help file. That is, the context-sensitive help content for a key is identical to that in User's and Programmer's Reference manual for the same mode. 				
Embedded Help in the instrument	Describes all SCPI commands for a measurement application (mode), organized according to the front-panel key and softkey hierarchy.				
	Note that the content that you see in Help when you press a key is identical to that in the User's and Programmer's Reference for the same topic.				
Agilent X-Series	Provides valuable sections related to programming including:				
Signal Analyzer: Getting Started	Licensing New Measurement Application Software - After Initial Purchase				
Guide	Configuring instrument LAN Hostname, IP Address, and Gateway Address				
	Using the Windows Remote Desktop to connect to the instrument remotely				
	 Using the Embedded Web Server Telnet connection to communicate SCPI 				
	This manual is shipped with the instrument as a printed document.				
Agilent Application Notes	Printable PDF versions of pertinent application notes.				
Agilent I/O Libraries Suite	The download package includes documentation describing the Agilent Virtual Instrument Software Architecture (VISA) library, and showing how to use it to develop I/O applications and instrument drivers on Windows PCs.				

Not included on X-Series Documentation DVD.

Table 1-2	X-Series Documentation Resources
Resource	Description
Agilent IVI (Instrument) Drivers	The driver download packages include documentation (in Help CHM format) describing the IVI Class and Instrument-Specific Drivers. If the drivers are installed in the default location on your computer drive, the CHM files may be found in the folders:
	C:\Program Files\IVI Foundation\IVI\Components
	and:
	C:\Program Files\IVI Foundation\IVI\Drivers

Not included on X-Series Documentation DVD.

Introduction to Programming X-Series Applications Programming Documentation Roadmap				



This chapter provides overall information on programming X-Series instruments using Standard Commands for Programmable Instruments (SCPI). Sections include:

- "SCPI Language Basics" on page 20
- "Where to find X-Series SCPI Command Definitions" on page 27
- "Simple SCPI Communication Methods" on page 31
- "Techniques for Improving Measurement Performance" on page 37

SCPI Language Basics

This section provides a basic introduction to the SCPI language. For more details about SCPI, see IEEE Standard 488.2–1992.

Topics covered in this section include:

- "Command Keywords, Separators and Syntax" on page 20
- "Creating Valid Commands" on page 21
- "Special Characters in Commands" on page 21
- "Parameters in Commands" on page 23
- "Writing Multiple Commands on the Same Line" on page 25

Command Keywords, Separators and Syntax

Keywords, Parameters & Separators: A typical SCPI command is made up of keywords separated by colons. The keywords are followed by parameters that can be followed by optional units. The parameter list is separated from the command by a space.

```
Example: :SENSe:FREQuency:STARt 1.5 MHZ
```

Upper- vs. Lower-Case Usage: The instrument does not distinguish between upper and lower case letters. In the documentation, upper case letters indicate the short form of the keyword, whereas lower case letters indicate the long form of the keyword. Either form may be used in the command.

Example:

```
:Sens:Freq:Star 1.5 mhz
```

This is the same as

```
:SENSE:FREQ:start 1.5 MHz
```

NOTE

The command :SENS:FREQU:STAR would **not** be valid because FREQU is neither the short, nor the long form of the command. Only the short and long forms of the keywords are allowed in valid commands.

Multiple SCPI commands on the same line: This is permissible if the commands are separated by a semicolon. See "Writing Multiple Commands on the Same Line" on page 25.

Initial Colon: In general, SCPI commands start with a colon, as shown above. You may choose to omit the initial colon, but, if you do so, note that SCPI rules for the interpretation of Compound Headers will be invoked by the command interpreter. For full discussion and examples of Compound Headers, see Appendix A of IEEE Standard 488.2—1992. For examples, see "SCPI Termination and Separator Syntax Examples" on page 26.

Creating Valid Commands

Commands are not case-sensitive, and there are often many different ways of writing a particular command. These are examples of valid commands for a given command syntax:

Command Syntax	Sample Valid Commands		
:[SENSe:]BANDwidth[:RESolution] <freq></freq>	The following sample commands are all identical. They all cause the same result.		
	• :Sense:Band:Res 1700		
	• :BANDWIDTH:RESOLUTION 1.7e3		
	• :sens:band 1.7KHZ		
	• :SENS:band 1.7E3Hz		
	• :band 1.7kHz		
	• :bandwidth:RES 1.7e3Hz		
:MEASure:SPECtrum[n]?	• :MEAS:SPEC?		
	• :Meas:spec?		
	• :meas:spec3?		
	The number 3 in the last meas example causes it to return different results than the commands above it. See the command description for more information.		
[:SENSe]:DETector[:FUNCtion]	• :DET:FUNC neg		
NEGative POSitive SAMPle	• :Detector:Func Pos		
:INITiate:CONTinuous ON OFF 1 0	The sample commands below are identical.		
	• :INIT:CONT ON		
	• :init:continuous 1		

Special Characters in Commands

Special Character	Meaning	Example
I	A vertical stroke between parameters indicates alternative choices. The effect of the command is different depending on which parameter is selected.	Command: TRIGger:SOURce EXTernal INTernal LINE The choices are external, internal, and line. Ex: TRIG:SOURCE INT
		is one possible command choice.

SCPI Language Basics

Special Character	Meaning	Example
	A vertical stroke between keywords	Command:
	indicates identical effects exist for	SENSe:BANDwidth BWIDth:OFFSet
	both keywords. The command functions the same for either	Two identical commands are:
	keyword. Only one of these keywords	Ex1: SENSE: BWIDTH: OFFSET
	is used at a time.	Ex2: SENSE:BAND:OFFSET
[]	keywords in square brackets are optional when composing the command. These implied keywords will be executed even if they are omitted.	<pre>Command: [SENSe:]BANDwidth[:RESolution]:AUT O</pre>
		The following commands are all valid and have identical effects:
		Ex1: bandwidth:auto
		Ex2: band:resolution:auto
		Ex3: sense:bandwidth:auto
<>	Angle brackets around a word, or words, indicates they are not to be used literally in the command. They represent the needed item.	Command: SENS:FREQ <freq></freq>
		In this command example the word <freq> should be replaced by an actual frequency.</freq>
		Ex: SENS:FREQ 9.7MHz.
{}	Parameters in braces can optionally be used in the command either not at all, once, or several times.	Command: MEASure:BW <freq>{,level}</freq>
		A valid command is:
		meas:BW 6 MHz, 3dB, 60dB
		•

Parameters in Commands

There are four basic types of parameters: booleans, keywords, variables and arbitrary block program data.

Туре	Description	
OFF ON 0 1	This is a two state boolean-type parameter. The numeric value 0 is equivalent to	
(Boolean)	OFF. Any numeric value other than 0 is equivalent to ON. The numeric values of 0 or 1 are commonly used in the command instead of OFF or ON. Queries of the parameter always return a numeric value of 0 or 1.	
keyword	The keywords that are allowed for a particular command are defined in the command syntax description.	
Units	Numeric variables may include units. The valid units for a command depend on the variable type being used. See the following variable descriptions. The indicated default units will be used if no units are sent. Units can follow the numerical value with, or without, a space.	
Variable	A variable can be entered in exponential format as well as standard numeric format. The appropriate range of the variable and its optional units are defined in the command description.	
	The following keywords may also be used in commands, but not all commands allow keyword variables.	
	DEFault - resets the parameter to its default value.	
	UP - increments the parameter.	
	DOWN - decrements the parameter.	
	 MINimum - sets the parameter to the smallest possible value. 	
	MAXimum - sets the parameter to the largest possible value.	
	The numeric value for the function's MINimum, MAXimum, or DEFault can be queried by adding the keyword to the command in its query form. The keyword must be entered following the question mark.	
	Example query: SENSE: FREQ: CENTER? MAX	

Variable Parameters

Туре	Description
<integer></integer>	An integer value with no units.
<real></real>	A floating point number with no units.
<freq></freq>	A positive rational number followed by optional units. The default unit is Hertz.
<bandwidth></bandwidth>	Acceptable units include: Hz, kHz, MHz, GHz.

SCPI Language Basics

Type	Description
<time></time>	A rational number followed by optional units. The default units are seconds.
<seconds></seconds>	Acceptable units include: ks, s, ms, μs, ns.
<voltage></voltage>	A rational number followed by optional units. The default units are Volts. Acceptable units include: V, mV, μ V, nV
<current></current>	A rational number followed by optional units. The default units are Amperes. Acceptable units include: A, mA, μA , nA.
<pre><power></power></pre>	A rational number followed by optional units. The default units are W. Acceptable units include: kW, W, mW, μ W, nW, pW.
<ampl></ampl>	A rational number followed by optional units. The default units are dBm. Acceptable units include: dBm, dBmV, dB μ V.
<rel_power></rel_power>	A positive rational number followed by optional units. The default units are dB.
<rel_ampl></rel_ampl>	Acceptable units include: dB.
<percent></percent>	A rational number between 0 and 100. You can either use no units or use PCT.
<angle></angle>	A rational number followed by optional units. The default units are degrees.
<degrees></degrees>	Acceptable units include: DEG, RAD.
<string></string>	A series of alpha numeric characters.
 dit_pattern>	Specifies a series of bits rather than a numeric value. The bit series is the binary representation of a numeric value. There are no units.
	Bit patterns are most often specified as hexadecimal numbers, though octal, binary or decimal numbers may also be used. In the SCPI language these numbers are specified as:
	 Hexadecimal, #Hdddd or #hdddd where 'd' represents a hexadecimal digit 0 to 9 and 'a' to 'f'. So #h14 can be used instead of the decimal number 20. Octal, #Odddddd or #odddddd where 'd' represents an octal digit 0 to 7. So #o24 can be used instead of the decimal number 20. Binary, #Bdddddddddddddddddddddddddddddddddddd

Block Program Data

Some parameters consist of a block of data. There are a few standard types of block data. Arbitrary blocks of program data can also be used.

Туре	Description	
<trace></trace>	An array of rational numbers corresponding to displayed trace data. See the description of the FORMat: DATA command in the "Programming the Analyzer" chapter of any X-Series Users and Programmers Reference or online Help file for information about available data formats.	
	A SCPI command often refers to a block of current trace data with a variable name such as: Trace1, Trace2, or trace3, depending on which trace is being accessed.	
<arbitrary block<br="">data></arbitrary>	A block of data bytes. The first information sent in the block is an ASCII header beginning with #. The block is terminated with a semi-colon. The header can be used to determine how many bytes are in the data block. There are no units.	
	A data query returns each block of data in the following format:	
	#DNNN <nnn binary="" bytes="" data="">;</nnn>	
	where #DNNN is the header. To parse this data:	
	1. Read two characters ($\#D$), where D tells you how many N characters follow the D character,	
	2. Read D characters, and convert to an integer that specifies the number of data bytes in the block,	
	3. Read NNN bytes into a real array.	
	Example: Header value = #512320	
	 The first numeric character/digit (5) tells you how many additional digits there are in the header. 	
	 The 12320 means that 12,320 data bytes follow the header. 	
	 Divide the number of data bytes by the bytes/data point of the current data format, which is 8 for REAL, 64. Thus, in this example, there are 12320/8 = 1540 data points in this block. 	

Writing Multiple Commands on the Same Line

Multiple commands can be written on the same line, reducing your code space requirement. To do this:

- · Commands must be separated with a semicolon (;)
- If the commands are in different subsystems, the key word for the new subsystem must be preceded by a colon (:)
- If the commands are in the same subsystem, the full hierarchy of the command key words need not be included. The second command can start at the same key word level as the command that was just executed.

SCPI Termination and Separator Syntax Examples

The following are some examples of valid and invalid commands. The examples are created from a theoretical instrument with the simple set of commands indicated below:

```
[:SENSe]:POWer[:RF]:ATTenuation 40dB
:TRIGger[:SEQuence]:EXTernal[1]:SLOPe POSitive
[:SENSe]:FREQuency:STARt:POWer[:RF]:MIXer:RANGe[:UPPer]
```

Table 2-1 Examples of Valid and Invalid SCPI Commands

⊗ Invalid Command	Problem
✓ Valid Command	
⊗ PWR:ATT 40dB	The short form of POWER is POW, not PWR.
POW:ATT 40dB	
FREQ:STAR 30MHz;MIX:RANG -20dBm FREQ:STAR 30MHz;POW:MIX:RANG -20dBm	The MIX: RANG command is in the same : SENSE subsystem as FREQ, but executing the FREQ command puts you back at the SENSE level. You must specify POW to get to the
TICLY BITTER SOURCE TOWN THE TELES BOOKEN	MIX: RANG command.
FREQ:STAR 30MHz;POW:MIX RANG -20dBm	MIX and RANG require a colon to separate them
FREQ:STAR 30MHz;POW:MIX:RANG -20dBm	
S:POW:ATT 40dB;TRIG:FREQ:STAR 2.3GHz	:FREQ:STAR is in the :SENSE subsystem, not the :TRIGGER subsystem.
:POW:ATT 40dB;:FREQ:STAR 2.3GHz	
S:POW:ATT?:FREQ:STAR?	: POW and FREQ are within the same : SENSE subsystem, but they are two separate
: POW: ATT?;: FREQ: STAR?	commands, so they should be separated with a semicolon, not a colon.
⊗ :pow:att -5db;:freq:star 10mHz	Attenuation cannot be a negative value.
:POW:ATT 5dB;:FREQ:STAR 10MHz	

Where to find X-Series SCPI Command Definitions

All X-Series SCPI commands are described in two locations: the Users & Programmers Reference manual for each application (PDF format), and the Embedded Help for each application (HTML Help format).


Reference Type	Usage & More Information
Users & Programmers Reference Manuals	All available PDF manuals are included on the X-Series Spectrum Analyzer Documentation DVD, in the folder \files.
	You can also download all Users & Programmers Reference manuals from the Agilent web site, by using the hyperlinks in the Additional Documentation section of the instrument's Embedded Help.
	In the Users & Programmers References, SCPI command descriptions are organized by front-panel functionality, but you can also find a specific command by looking for it in the common or measurement-specific "List of SCPI Commands" chapters.
Embedded Help	The instrument's Embedded Help system contains context-sensitive reference information for each installed measurement application. To see the Help topic for any active function or key, press the green front-panel Help key when the measurement application is open. For more details of how to use Help as a SCPI command reference, see "Help System Features for SCPI Programmers" on page 27.
	In the Help files, SCPI command descriptions are organized by front-panel functionality, but you can also find a specific command by looking for it in the alphabetized List of SCPI Commands.
	All available Compiled Help Metafiles (CHMs) are also included on the X-Series Spectrum Analyzer Documentation DVD, in the \help subfolder. The CHM Help file for each measurement application has a name of the form <mode_name>.en-us.chm.</mode_name>

Help System Features for SCPI Programmers

Help System Contents Pane

The features described below are shown in the Help system Contents Pane (see Figure 2-1).

Figure 2-1 Example Help System Contents Pane

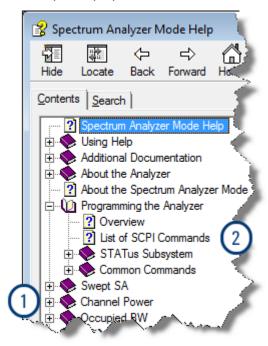

- 1. "Help Topic Content" on page 28
- 2. "List of SCPI Commands" on page 29

Help Topic Content

A typical Help topic is shown in Figure 2-2. Each Help topic includes:

- · A description of the current active function or key,
- · SCPI Command parameters, including limits, presets, variables, and queries,
- · Associated Remote-Only commands (if any).

Figure 2-2

Example Help Topic - Scale/Div Topic

To exit, press (Esc)



For more about Help, press

Scale / Div

Sets the units per vertical graticule division on the display. This function is only available when Scale Type (Log) is selected and the vertical scale is power. When Scale Type (Lin) is selected, Scale/Div is grayed out.

Key Path	AMPTD Y Scale
Remote Command	:DISPlay:WINDow[1]:TRACe:Y [:SCALe]:PDIVision <rel_ampl> :DISPlay:WINDow[1]:TRACe:Y [:SCALe]:PDIVision?</rel_ampl>
Example	DISP:WIND:TRAC:Y:PDIV 5 DB
Dependencies	Scale/Div is grayed out in linear Y scale. Sending the equivalent SCPI command does change the Scale/Div, though it has ro affect while in Lin.

List of SCPI Commands

The List of SCPI Commands is an alphabetically sorted list of all commands in the current measurement application. Each item shown is a hyperlink to the specific Help Topic that contains the command or query. See Figure 2-3 for an example of a List of SCPI Commands.

Figure 2-3 Example List of Commands



NOTE

You can query the instrument for all supported SCPI commands in the current mode by sending the ":SYST:HELP:HEAD?" query. For details on how to query the instrument see "Communicating SCPI Using Telnet" on page 31.

Simple SCPI Communication Methods

This section describes some simple methods that you can use to create SCPI communication sessions between a computer and an X-Series instrument:

"Communicating SCPI Using Telnet" on page 31

"Communicating SCPI using Agilent Connection Expert" on page 34

Communicating SCPI Using Telnet

You can communicate SCPI using a Telnet connection from a computer to the instrument. The following procedure describes how to connect a computer running Microsoft Windows to the instrument.

To complete the procedure, you will need to know the IP address of the instrument, which you can obtain by "Determining Instrument IP Address" on page 32.

TIP	In newer versions of Microsoft Windows (Windows Vista and Windows 7), you may first need to enable the Telnet client. See "Enabling Telnet in Windows" on page 34.		
NOTE	In addition to the procedure described below, you can open a Telnet connection with the instrument using an internet connection to the instrument's Embedded Web Server. This procedure is described in the Agilent X-Series Signal Analyzer: Getting Started Guide.		

To initiate a Telnet session and communicate SCPI using the LAN connection to the instrument:

Step	Action	Notes
1	Obtain the IP address of the instrument	If necessary, you can obtain it via the procedure described in "Determining Instrument IP Address" on page 32.
2	Ensure that the instrument Telnet socket is On	Press System, I/O Config, SCPI LAN, and make sure SCPI Telnet (Port 5023) is toggled to On.
3	Enable computer's Telnet client if required	See "Enabling Telnet in Windows" on page 34.

Step	Action	Notes	
4	Test LAN connection	 On a Microsoft Windows computer, in the Taskbar select St Run, and type "cmd" to open a DOS session. 	art,
		 Enter the DOS command "ping", a single space and the IF address of the instrument, and press Enter. The results sho resemble those shown in Figure 2-4. If the LAN connection working, you will see statistics for Packets Sent and Packet Received. 	uld is
		3. In the DOS window, type:	
		"telnet <instrument_ip_address> 5023", then press Enter.</instrument_ip_address>	
		A Telnet window opens with a Welcome answerback from instrument Host Name, and the command prompt changes "SCPI>". You can enter any valid SCPI command at the prompt and receive responses to queries sent.	

Figure 2-4 Command Window and ping Command results

```
C:\Documents and Settings>ping 255.255.252.07

Pinging 255.255.252.07 with 32 bytes of data:

Reply from 255.255.252.07: bytes=32 time=16ms TTL=128

Reply from 255.255.252.07: bytes=32 time<1ms TTL=128

Reply from 255.255.252.07: bytes=32 time=1ms TTL=128

Reply from 255.255.252.07: bytes=32 time=1ms TTL=128

Ping statistics for 255.255.252.07:

Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),

Approximate round trip times in milli-seconds:

Minimum = 0ms, Maximum = 16ms, Average = 4ms


C:\Documents and Settings>
```

Determining Instrument IP Address

- 1. If necessary, close the Agilent Signal Analyzer application, by selecting **File** > **Exit** from the front panel and softkey menu, then confirming that you want to close the application.
- 2. When you can see the Windows desktop, move the cursor to the bottom of the screen using a mouse or the keyboard, to reveal the Windows Taskbar. In the Windows Taskbar, click **Start, Run**.

3. In the Window Run Dialog (shown in Figure 2-5), type "cmd" then click **OK** or press **Enter** to open a DOS command window.

Figure 2-5 Windows Run Dialog

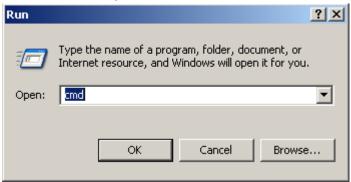

4. At the DOS command prompt, enter "ipconfig", and press **Enter**.

The results should resemble the window shown in Figure 2-6. The IP Address is listed under Ethernet adapter Local Area Connection.

Figure 2-6 Command Window and ipconfig Results

```
C:\WINDOWS\system32\cmd.exe
                                                 _ | 🗆 |
C:\Documents and Settings>ipconfig
Windows IP Configuration
Ethernet adapter Wireless Network Connection:
     Media State . . . . . . . . . . . . . . Media disconnected
Ethernet adapter {2D7F75871ADCE-4A38-8D96-2D7F75871ADA}:
     Connection-specific DNS Suffix
     Default Gateway . . . . . . . :
Ethernet adapter Local Area Connection:
     Connection-specific DNS Suffix . : acilent.com
     C:\Documents and Settings>
```

Enabling Telnet in Windows

In newer versions of Microsoft Windows (Windows Vista and Windows 7), the Telnet client is disabled by default. To enable the Telnet client, do the following:


Step	Actions
1. Open Windows Control Panel	From the Windows Start menu, select Control Panel .
2. Select Programs	
3. Display Windows Features dialog	In the Programs and Features group, click Turn Windows features on or off .
	The Windows Features dialog appears.
4. Enable Telnet client	In the listbox, locate Telnet client and check its checkbox.
	Click OK .

Communicating SCPI using Agilent Connection Expert

You can use Agilent Connection Expert to communicate with devices on any supported network type. Agilent Connection Expert is installed as part of the Agilent I/O Libraries Suite.


Figure 2-7 below shows part of the Agilent Connection Expert main screen, with one N9020A instrument connected via LAN.

Figure 2-7 Agilent Connection Expert Main Screen

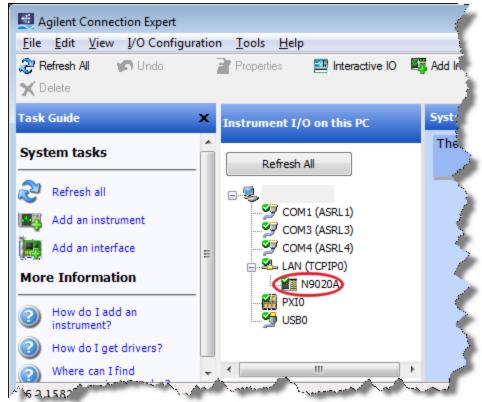


When you click on the N9020A instrument icon in this example, the content of the Task Guide panel on the left changes to "Tasks for This Instrument", which includes the selection "Send commands to this instrument", as shown in Figure 2-8 below.

Figure 2-8 Tasks for This Instrument

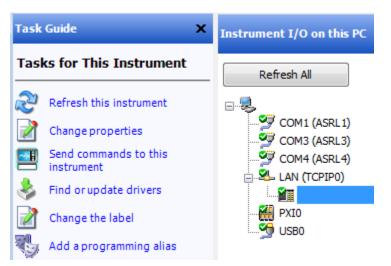

If you click the item "Send commands to this instrument", the Agilent Interactive IO dialog appears as shown in Figure 2-9 below, which allows you to send SCPI commands to the instrument and read the responses.

Figure 2-9 Agilent Interactive IO

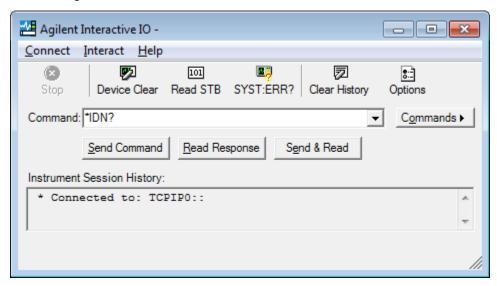

For full details of how to use these features, open the Agilent Connection Expert main screen (as shown in Figure 2-7) and select Help > Connection Expert Help from the menu.

Techniques for Improving Measurement Performance

This section describes several programming techniques that can improve speed and efficiency. Most, but not all, of these techniques relate to SCPI program design.

- "Turn off Display Updates" on page 37
- "Use Binary Data Format instead of ASCII" on page 37
- "Minimize the Number of Bus Transactions" on page 37
- "Use USB or LAN Connection instead of GPIB" on page 38
- "Minimize DUT/instrument Setup changes" on page 38
- "Avoid Automatic Attenuator Setting" on page 39
- "Avoid using RFBurst trigger for Single Burst Signals" on page 39
- "Optimize GSM Output RF Spectrum Switching Measurement (N9071A Measurement Application)" on page 40
- "To make Power Measurements on Multiple Bursts or Slots use CALCulate:DATA<n>:COMPress?" on page 40

Turn off Display Updates

When the instrument is being operated remotely, there is no need to display data on the instrument screen. Display updates slow down the measurement, so measurement speed may be increased by switching off updates.

Send : DISPlay: ENABle OFF to turn off the display. In this case, data remains visible, but will no longer be updated.

Use Binary Data Format instead of ASCII

The ASCII data format is the instrument default, since it is easier for humans to read and is required by SCPI for *RST. However, data input/output is faster using the binary formats.

:FORMat:DATA REAL, 64 selects the 64-bit binary data format for all numerical data queries. (The REAL, 32 format, which is smaller and somewhat faster, should only be used if you do not require full data resolution. Some frequency data may require full 64 bit resolution.)

If you are using a PC rather than UNIX, you may need to change the byte order to little-endian, by sending **:FORMat:BORDer SWAP**. For details, see the "Programming the Analyzer" chapter of any X-Series Help file or Users & Programmers Reference PDF.

When using the binary format, data is sent in a block of bytes prefixed by an ASCII header. For details of the block format, see "Block Program Data" on page 25.

Minimize the Number of Bus Transactions

When you are using the GPIB bus for control of your instrument, each transaction requires driver overhead and bus handshaking, so minimizing these transactions reduces the time used.

Techniques for Improving Measurement Performance

- You can reduce bus transactions by sending multiple SCPI commands per transaction. See "Writing Multiple Commands on the Same Line" on page 25.
- When making the same measurement multiple times with small changes in the measurement setup, use the READ command, which is faster than using INITiate and FETCh.
- When changing the frequency and making a measurement repeatedly, you can reduce transactions by sending the optional frequency parameter with the READ query (for example, READ: <meas>? {<freq>}). These optional parameters are not available in certain modes, such as Spectrum Analyzer or Phase Noise.

The CONFigure/MEASure/READ commands for some measurements allow you to send center frequency setup information along with the command (for example, MEAS:PVT? 935.2MHz). This sets the Power vs. Time measurement to its defaults, then changes the center frequency to 935.2 MHz, initiates a measurement, waits until it is complete and returns the measurement data.

When doing bottom/middle/top measurements on Base Stations, you can reduce transactions by making
a time slot active at each of the B,M,T frequencies. Then, issue three measurements at once in the
programming code and retrieve three data sets with just one bus transaction pair (write, read).

For example, send READ: PFER? <Freq_bottom>; PFER? <Freq_middle>; PFER? <Freq_top>. This single transaction initiates three different phase and frequency error measurements at each of the three different frequencies provided and returns three sets of data.

Use USB or LAN Connection instead of GPIB

USB and LAN networks allow faster data input and output, relative to GPIB. This is especially important if you are moving large blocks of data.

Note that LAN transfer speeds are affected by the volume of LAN traffic, and may be degraded if, for example, the instrument is connected to a busy enterprise LAN. Thus you may want to use a private LAN that is dedicated for the test system.

Minimize DUT/instrument Setup changes

- Some instrument setup parameters are common to multiple measurements, making it possible to
 organize the test process in such a way as to minimize setup changes. If the process involves nested
 loops, make sure that the innermost loop is the fastest. Also, check whether the loops could be nested in
 a different order to reduce the number of parameter changes as you step through the test.
- If you must switch between measurements, remember that if you have already set your Meas Setup
 parameters for a measurement, and you want to make another one of these measurements later, you
 should use the query READ: <meas>?.
 - The MEASure: <meas>?. command resets all the settings to the defaults, while READ changes back to that measurement without changing the setup parameters from the previous use.
- If you must switch between measurements, remember that **Mode Setup** parameters remain constant across all the measurements in a given mode (for example, Center/Channel Frequency, Amplitude, Radio Standard, Input Selection, Trigger Setup). You do not need to re-initialize these parameters each time you change to a different measurement.

Avoid Unnecessary Use of *RST

Remember that while *RST does not change the current Mode, it presets all the measurements and settings to their factory defaults. This forces you to reset the instrument's measurement settings even if they use similar mode setup or measurement settings. See "Minimize DUT/instrument Setup changes" on page 38.

Note also that *RST may put the instrument in Single measurement/sweep for some modes.

Avoid Automatic Attenuator Setting

Many of the one-button measurements use an internal process for automatically setting the value of the attenuator. It requires measuring an initial burst to identify the proper attenuator setting before the next burst can be measured properly. If you know the amount of attenuation or the signal level needed for your measurement, just set it.

Note that spurious types of measurements must be done with the attenuator set to automatic (for measurements such as: Output RF Spectrum, Transmit Spurs, Adjacent Channel Power, Spectrum Emission Mask). These types of measurements start by tuning to the signal, then they tune away from it and must be able to reset the attenuation value as needed.

Avoid using RFBurst trigger for Single Burst Signals

RFBurst triggering works best when measuring signals with repetitive bursts. For a non-repetitive or single burst signals, use the IF (video) trigger or external trigger, depending on what you have available.

RFBurst triggering depends on its establishment of a valid triggering reference level, based on previous bursts. If you only have a single burst, the peak detection nature of this triggering function, may result in the trigger being done at the wrong level/point generating incorrect data, or it may not trigger at all.

Making a Single Burst Measurement

To achieve consistent triggering and valid data for this type of measurement application, you must synchronize the triggering of the DUT with the instrument. You should use the instrument's internal status system for this.

The first step in this process is to initialize the status register mask to look for the "waiting for trigger" condition (bit 5). Use :STATUS:OPERation:ENABle 32

Then, in the measurement loop:

- 1. Send query :STATus:OPERation:EVENt? to clear the current contents of the Operation Event Register.
- 2. Send query :READ:PVT? to initiate a measurement (in this example, for GSM Power versus Time) using the previous setup. The measurement then waits for the trigger.
 - Make sure attenuation is set manually. Do **not** use automatic attenuation, as this requires an additional burst to determine the proper attenuation level before the measurement can be made.
- 3. Create a small loop that polls the instrument for a status byte value of 128. Then wait 1 msec (or 100 ms if the display is enabled) before checking again, to minimize bus traffic. Repeat these two commands until the condition is set, to ensure that the trigger is armed and ready.
- 4. Trigger the DUT to send the burst.

5. Retrieve the measurement data.

Optimize GSM Output RF Spectrum Switching Measurement (N9071A Measurement Application)

For ORFS (switching), setting the break frequency to zero (0) puts the instrument into a measurement setup where it can use a direct time measurement algorithm, instead of an FFT-based algorithm. The non-FFT approach is faster.

However, remember that the break frequency for ORFS (modulation) measurements must be >400 kHz for valid measurements, so, if you are making both types of measurements, you will need to change the break frequency.

To make Power Measurements on Multiple Bursts or Slots use CALCulate:DATA<n>:COMPress?

The Calculate/Compress Trace Data Query is the fastest way to measure power data for multiple bursts/slots. (For details of the command, see the Programming the Analyzer chapter of any X-Series Help file or Users & Programmers Reference PDF.) There are two reasons for this:

- 1. It can be used to measure data across multiple, consecutive slots/frames with just one measurement, instead of a separate measurement on each slot,
- 2. It can pre-process and/or decimate the data so that you only return the information that you need, which minimizes data transfer to the computer.

Example: you want to do a power measurement for a GSM base station where you generate a repeating frame with 8 different power levels. Using the Waveform measurement, you can gather all the data with a single CALC:DATA:COMP? acquisition.

By sending :CALC:DATA2:COMP? MEAN, 25us, 526us, 579.6us, 8 you can measure the mean power in those bursts. This single command measures the data across all 8 frames, locates the first slot/burst in each of the frames, calculates the mean power of those bursts, then returns the resulting 8 values. The sequence of commands is as follows:

Step	Command	Action			
1	:CONF:WAV	Switch to Waveform measurement			
2	:WAV:BAND 300khz	Set resolution bandwidth to 300 kHz			
3	:WAV:SWE:TIME 5ms	Set sweep time to 5 milliseconds			
4	:WAV:BAND:TYPE FLAT	Select flat filter type			
5	:WAV:DEC 4;DEC:STAT ON	Select a decimation of 4, and turn on decimation.			
		This reduces the amount of data that must be transferred.			
6	:INIT	Initiate measurement and acquire data			

Step	Command	Action
7	:CALC:DATA2:COMP?	Retrieve the desired data
	MEAN, 25us, 526us, 579.6us, 8	

More Hints & Tips

For more information about optimizing measurement speed using X-Series instruments, see Agilent Application Note 1583.

SCPI Programming Fundamentals Techniques for Improving Measurement Performance					



This chapter provides a brief overview of the requirements for development and deployment of Virtual Instrument Software Architecture (VISA) programming projects using various languages. Sections include:

- "Programming in Visual Basic 6 with VISA" on page 43
- "Programming in C or C++ with VISA" on page 43
- "Programming with Microsoft .NET and VISA" on page 44
- "Requirements for Deploying a VISA Project" on page 45

For an overview of the relationship between VISA and other programming tools and drivers, see "X-Series Programming Options" on page 10.

Programming in Visual Basic 6 with VISA

See the VISA online Help section "Using the VISA C API in Microsoft Visual Basic 6", in the Agilent VISA Help.

Location of Header Files

The required header files visa32.bas and agvisa32.bas can be found in:

or

C:\Program Files (x86)\IVI Foundation\VISA\WinNT\include

Programming in C or C++ with VISA

Full details of X-Series programming in C and C++ are provided in the Agilent I/O Libraries Suite.

Location of Header Files & Libraries

The header file visa.h can be found in:

C:\Program Files (x86)\IVI Foundation\VISA\WinNT\include

Developing and Deploying VISA Projects

Programming with Microsoft .NET and VISA

Programs must link to the VISA libraries visa32.1ib or aqvisa32.1ib, located in subfolders of:

C:\Program Files (x86)\IVI Foundation\VISA\WinNT\lib

or

C:\Program Files (x86)\IVI Foundation\VISA\WinNT\Lib_x64

For more details, see the VISA online Help section "VISA Directories", in the Agilent VISA Help.

Programming with Microsoft .NET and VISA

The IVI Foundation defines the standard visa.h header file for use in C and C++, which provides declarations for the visa32.dll C DLL. This header file is distributed by Agilent Technologies, among others. The Foundation also defines header file visa32.bas for Microsoft Visual Basic 6. However, there are at present no officially defined header files for programming with the VISA C API in the Microsoft .NET technology languages, such as C# and Visual Basic.NET.

Therefore, Agilent has defined and developed the redistributable .NET header files visa32.cs (for C#) and visa32.vb (for Visual Basic.NET), to allow programmatic access to the VISA C API from the two most popular .NET languages. To use the VISA C API in a .NET project, include the appropriate file in your project. The compiled .NET assembly will then have all the information it needs to use the VISA C Library (visa32.dll or visa64.dll).

For programmers accustomed to the VISA-C API, or those not familiar with COM, use of Agilent's .NET header files may offer a preferable approach, because it avoids the overhead of the VISA COM implementation and exposes VISA functionality in a more familiar style.

VISA has specifications for API versions in C and COM, so there are two ways to work with VISA in your .NET applications: via the wrapper already written by Agilent around the C library, or via the Visa COM Interop.

Location of Header Files

The header files visa32.cs and visa32.vb can be found in:

C:\Program Files (x86)\IVI Foundation\VISA\WinNT\agvisa\include

or

C:\Program Files (x86)\IVI Foundation\VISA\WinNT\include

For more details, see the VISA online Help section "Using the VISA C API in Microsoft .NET", in the Agilent VISA Help.

Requirements for Deploying a VISA Project

The only VISA-specific system requirements for deploying your compiled programs on other machines are:

- A valid visa32.DLL must be in the system's PATH environment variable.
- The resource address you are trying to open must exist on the system and be configured for the visa32.DLL that is found first during the Windows DLL search.

Additionally, you must satisfy the normal .NET requirements, such as having an appropriate version of the .NET framework installed on the deployed systems. Obviously, any other software libraries your program uses at runtime must also be installed.

Multiple VISA DLL Versions

Because each VISA vendor installs its version of the VISA DLL, the VISA DLL on your deployed system may differ from the one with which you developed your application. When multiple vendors' VISA implementations are present, the DLL used is the one that is found first using Microsoft Windows' DLL search rules.

If you developed your program using Agilent VISA, and you wish to ensure that your program uses Agilent VISA even if other VISA implementations are on your deployed systems, you can change the DLL name in all of the method declarations in visa32.cs or visa32.vb from "visa32.DLL" to "agvisa32.DLL". This will prevent your program from working with any other vendor's VISA implementation, and will ensure that, if multiple VISA DLLs are installed on the system, your program will use the Agilent DLL implementation.



The program samples described here were written for use on a PC running Microsoft Windows.

The description of each sample includes its function, operational details, programming language and driver usage, and the sample file name or root directory.

This chapter is divided into the following sections:

"Where to find Sample Programs" on page 47

"N9060A Spectrum Analyzer Mode Programing Samples" on page 48

"N9064A VXA Vector Signal Analyzer Programming Samples" on page 60

Where to find Sample Programs

- Unless otherwise stated, all the sample programs described in this chapter are available in the \progexamples directory on the X-Series Spectrum Analyzer Documentation DVD.
- Most of the X-Series samples can also be found on the Agilent Technologies, Inc. web site at URL: http://www.agilent.com/find/sa programming
- Program samples installed by the Agilent I/O Libraries Suite may be found (after installation) in the directory:

C:\Documents and Settings\All Users\Agilent\Agilent IO Libraries Programming Samples

You can browse to this directory by opening the Agilent Connection Expert and selecting **Help > Programming Samples** from the menu,

(The Agilent I/O Libraries Suite samples are **not** described in this document, and are in general **not** specific to X-Series instruments.)

Samples are available for the following programming languages and development environments:

- Visual Basic 6
- C, C++
- C#.NET & Visual Studio 2010
- Agilent VEE Pro
- LabVIEW
- MATLAB

NOTE

These samples have all been tested and validated as functional in the Spectrum Analyzer mode. They have not necessarily been tested in other modes. However, they should work in all other modes, except where exceptions are noted.

Matrix of Program Sample Functionality and Programming Language

In the table below, availability of program samples for each function/language is indicated by page number references. If no page number reference is provided, then there is no available sample for the given functionality in the specified language.

Function	Visual Basic 6	C, C++	C#.NET	VEE	LabVIEW	MATLAB
Retrieve Screen Image	50		55	58	59	
Read Binary Trace Data	50		57 ^a	58		
Poll Method for Operation Complete		52	55			
SRQ Interrupt Method for Operation Complete (Multi-threaded)		52	55			
Set and Query Relative Band Power Markers		52				
Set Traces and Couple Markers		54				
Phase Noise Trace Math Calculation		54	57			
Upload a State File						59
Switch Instrument Mode	50 ^b		55 ^c			59

- a. This functionality is included in the C# sample for Phase Noise Trace Math.
- b. This functionality is included in the Visual Basic 6 sample for Reading Binary Trace Data.
- c. This functionality is included in the C# sample for the SRQ Interrupt Method.

Visual Basic 6

NOTE

In some cases, Visual Basic 6 files with the extension .bas have been renamed with the extension .bas.txt, to avoid possible instrument security warnings generated by the .bas extension. To use these files in Visual Basic 6, rename them by removing the .txt portion of the extension.

- 1. Retrieve Screen Images
- 2. Read Binary Trace Data

All the samples use the VISA driver.

Retrieve Screen Images

Function Transfer Screen Images from the instrument

Description This example demonstrates how to:

- 1. Store the current screen image in instrument memory as "D:\PICTURE.PNG"
- 2. Transfer the memory image file via GPIB or LAN
- 3. Store the transferred image in the computer's current directory as "C:\PICTURE.PNG"

4. Delete the instrument memory file "D:\PICTURE.PNG"

Language Visual Basic 6

File name mxa_screen.bas

Read Binary Trace Data

Function Read Binary Block Trace data from the instrument

Description This example demonstrates how to:

- 1. Open a VISA session via GPIB or LAN
- 2. Modify the timeout value
- 3. Send the *IDN? query to the instrument, then display the result
- 4. Change the instrument mode to Spectrum Analyzer
- 5. Set the Trace data format to REAL, 32 or REAL, 64
- 6. Set the instrument to Single Sweep
- 7. Initiate a sweep
- 8. Read the trace data and display it
- 9. Store the trace data to the file "bintrace.txt"

The binary data transfer method is faster than the default ASCII transfer mode, because less data is sent over the bus. For more information about data formats, see the section "Remote Measurement Functions" in any X-Series Help file or Users & Programmers Reference PDF.

Language Visual Basic 6

File name bintrace.bas

C, C++

The samples provided are console applications written in C, but these should also be compilable by most C++ compilers.

1. Poll Method for Operation Complete

- 2. SRQ Method for Operation Complete
- 3. Set and Query Relative Band Power Markers
- 4. Set Traces and Couple Markers
- 5. Phase Noise Trace Math

All the samples use the VISA driver.

Poll Method for Operation Complete

Function Serial Poll for Sweep Complete

Description This example demonstrates how to:

1. Modify the timeout value

2. Initiate a sweep

3. Poll the instrument to determine when the operation is complete

4. Query and report the sweep result

Language C

File name mxa_sweep.c

SRQ Method for Operation Complete

Function Service Request Method (SRQ) determines when a measurement is done by waiting for

SRQ, then reading the Status Register.

Description This example demonstrates how to:

1. Define an SRQ interrupt handler

2. Set up mode and measurement parameters

3. Set the service request mask to assert SRQ when either a measurement is uncalibrated

or an error message has occurred

4. Install the interrupt handler

5. Initiate a sweep

6. Wait for an SRQ interrupt

7. When an SRQ interrupt occurs, examine its source and type and report the result

8. Uninstall the interrupt handler

The STATus subsystem of commands is used to monitor and query hardware status. For details of these commands and registers, see the section "Measurement Group of Commands" in any X-Series Help file or Users & Programmers Reference PDF.

Language C

File name mxa srq.c

Set and Query Relative Band Power Markers

Function Relative Band Power Markers

Description This example demonstrates how to:

- 1. Set up a calibration signal
- 2. Set Markers 1 through 5 as Band Power Markers
- 3. Obtain the band power of Markers 2 through 5, relative to Marker 1

Language C

File name mxa_bpm.c

Set Traces and Couple Markers

Function Trace Detector/Couple Markers

Description This example demonstrates how to:

- 1. Set various types of trace (Max Hold, Clear Write, Min Hold)
- 2. Relate markers to specified traces
- 3. Couple markers

NOTE The instrument supports multiple simultaneous detectors (for example, peak

detector for max hold, sample for clear and write, and negative peak for min

hold).

Language C

File name mxa_tracecouple.c

Phase Noise Trace Math

Function Phase Noise Trace Math Calculation

Description This example demonstrates how to remove instrument noise from phase noise, by:

- 1. Setting up a calibration signal
- 2. Setting local oscillator phase noise behavior
- 3. Setting Trace 1 type to average and initiate a sweep
- 4. Turning off calibration signal
- 5. Setting Trace 2 type to average and initiate a sweep
- 6. Calculating the power difference between Trace 1 and Trace 2, saving the result as Trace 3

Language C

File name mxa_phasenoise.c

C#.NET & Visual Studio 2010

The samples provided are written in C# for Visual Studio 2010 (.NET version 4.5),

- 1. Retrieve Screen Images
- 2. Poll Method for Operation Complete
- 3. SRQ Method for Operation Complete
- 4. Phase Noise Trace Math

All the samples use the VISA driver.

Retrieve Screen Images

Function Capture and transfer Screen Images from the instrument

Description This example demonstrates how to:

- 1. Store the current screen image as a PNG file on the instrument's D: drive, with a user-specified name
- 2. Retrieve the screen image data from the instrument as a Program Data Block
- 3. Analyze the header of the Program Data Block and extract the PNG bitmap from the block
- 4. Store the extracted bitmap as a PNG file in the computer's current directory, with the same user-specified name
- 5. Delete the PNG file that was stored on the instrument's D: drive

Language

C#

Project Folder

vs2010.net/x_screencapture

Poll Method for Operation Complete

Function Serial Poll for Sweep Complete

Description This example demonstrates how to:

- 1. Modify the timeout value
- 2. Initiate a sweep
- 3. Poll the instrument to determine when the operation is complete
- 4. Query and report the sweep result

Language C#

Project Folder

vs2010.net/x_sweep

SRQ Method for Operation Complete

Function Service Request Method (SRQ) determines when a measurement is done by waiting for

SRQ, then reading the Status Register.

Header/

visa32.cs

Library

Description This multi-threaded example demonstrates how to:

- 1. Define an SRQ interrupt handler
- 2. Set up mode and measurement parameters
- 3. Set the service request mask to assert SRQ when either a measurement is uncalibrated or an error message has occurred
- 4. Install the interrupt handler
- 5. Initiate a sweep
- 6. Set up a wait for multiple events
- 7. When an SRQ interrupt occurs, examine its source and type and report the result
- 8. Uninstall the interrupt handler

The STATus subsystem of commands is used to monitor and query hardware status. For details of these commands and registers, see the section "Measurement Group of Commands" in any X-Series Help file or Users & Programmers Reference PDF.

Language

C#

Project Folder vs2010.net/x_srq

Phase Noise Trace Math

Function Phase Noise Trace Math Calculation

Description This example demonstrates how to remove instrument noise from phase noise. The

program does the following:

1. Set up a calibration signal

2. Set local oscillator phase noise behavior

3. Set Trace 1 type to average and initiate a sweep

4. Turn off calibration signal

5. Set Trace 2 type to average and initiate a sweep

6. Calculate the power difference between Trace 1 and Trace 2, then save the result as Trace 3

7. Retrieve Trace 3 data from the instrument as a binary data block

8. Optionally, save the retrieved trace data in an on-disk text file

Language C#

Project Folder

vs2010.net/x_phasenoise

Agilent VEE Pro

- 1. Retrieve Screen Images
- 2. Retrieve Trace Data

Retrieve Screen Images

Function Transfer Screen Images from the instrument

Description This example demonstrates how to:

- 1. Store the current screen image in instrument memory as "D:\mxascr.PNG"
- 2. Transfer the memory image file via GPIB
- 3. Store the transferred image on the computer, in a user-specified directory, as "capture.gif"

4. Delete the instrument memory file "D:\mxascr.PNG"

Language Agilent VEE Pro

File name mxa_screencapture.vee

Retrieve Trace Data

Function Transfer trace data from the instrument.

 $\textbf{Description} \qquad \textbf{For each available data format (INTeger, 32, REAL, 32, REAL, 64, and ASCii), the}$

program does the following:

1. Sets the Trace data format

- 2. Sets the instrument to Single Sweep
- 3. Initiates a sweep

4. Reads the trace data and plots it graphically (using the default value of 1001 trace points)

For more information about data formats, see :FORMat:DATA in the "Programming the Analyzer" chapter of any X-Series Help file or Users & Programmers Reference PDF.

Language Agilent VEE Pro

File name transfertrace.vee

LabVIEW

This sample is not available on the X-Series Documentation DVD. You can download the zip file containing the sample from http://www.agilent.com/find/sa_programming

Screen Capture

Function Transfer Screen Images from the instrument

Description The program retrieves screen capture data from the instrument via GPIB, then writes the

contents of the binary block to a file, removing the header information before writing it. It

uses the VISA protocol to communicate with the instrument.

Language /

LabVIEW/ VISA

Driver

File name MXA Screen Capture via GPIB.11b

MATLAB

These samples are not available on the X-Series Documentation DVD. You can download them from http://www.agilent.com/find/sa_programming

Upload a File

Function Upload a state file to the instrument

Description The program opens a state file on the computer's hard disk, transfers it to the instrument

via LAN, then stores the file on the instrument's D: drive.

Language /

MATLAB / IVI Instrument Drivers

Driver

File name Upload File to SA.m

IVI-COM Personality (Mode) Select

Function Check instrument identification fields and change mode to SA.

This example does the following: Description

1. Checks Instrument Model, Firmware Revision and Serial Number

2. Selects SA Mode

3. Sets a Center Frequency

4. Reads the Instrument Error Queue

Language / Driver

MATLAB / IVI-COM Instrument Drivers

File name IVI_Personality_Select.m

N9064A VXA Vector Signal Analyzer Programming Samples

Two program samples are available for N9064A VXA Vector Signal Analyzer Mode:

- "Vector Analysis Measurement" on page 61
- "Digital Demod Measurement" on page 61

Each sample is implemented for three development environments, programming languages and driver technologies:

- · Agilent VEE Pro,
- · Visual Basic 6 with VISA COM,
- Visual Studio 2003 / VB.NET with VISA COM

The VEE samples consist of a single file each, whereas the Visual Basic 6 and Visual Studio 2003 samples consist of project file sets in specified subfolders.

NOTE These samples have all been tested and validated as functional in N9064A VXA Vector Signal Analyzer Mode.

Vector Analysis Measurement

Function Set up a Vector Analysis Measurement, then read trace data.

Description This example program:

- 1. Creates a ResourceManager object (except in VEE example)
- 2. Creates a FormattedIO488 interface object (except in VEE example)
- 3. Sets VXA Mode
- 4. Sets Vector Analysis Measurement
- 5. Configures the measurement
- 6. Initiates the measurement
- 7. Reads Trace 1 data in REAL, 64 format (also in ASCii and REAL, 32 formats for VEE example)
- 8. Outputs the trace data to the computer screen
- 9. Closes the FormattedIO488 interface (except in VEE example)

File or VEE: vxa-measdemo.vee

Project Visual Basic 6

Visual Basic 6 / VISA COM: vb6-visacom/vxa-measdemo

name Visual Studio 2003 (VB.NET) / VISA COM: vs2003.net/vxa-measdemo

Digital Demod Measurement

Function Set up a Digital Demod Measurement, then read Demodulated Bits, Error Vector Time and

EVM value.

Description This example program:

- 1. Creates a ResourceManager object (except in VEE example)
- 2. Creates a FormattedIO488 interface object (except in VEE example)
- 3. Sets VXA Mode
- 4. Sets Digital Demod Measurement
- 5. Configures the measurement
- 6. Initiates the measurement
- 7. Sets REAL, 32 format, then reads Demodulated Bits
- 8. Reads Error Vector Time (VEE example only)
- 9. Sets ASCii format, then reads EVM value
- 10. Outputs all data to the computer screen
- 11. Closes the FormattedIO488 interface (except in VEE example)


Program Samples

N9064A VXA Vector Signal Analyzer Programming Samples

File or VEE: vxa-digdemoddemo.vee

Project Visual Basic 6 / VISA COM: vb6-visacom/vxa-digdemoddemo

name Visual Studio 2003 (VB.NET) / VISA COM: vs2003.net/vxa-digdemoddemo

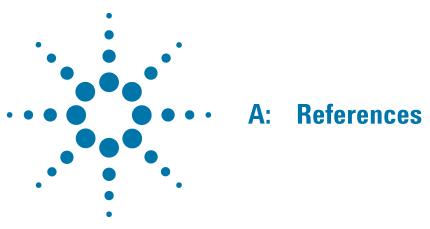

Documents & Web Sites

1. **IEEE Standard 488.2–1992**

IEEE Standard Codes, Formats, Protocols, and Common Commands for Use With IEEE Std 488.1-1987, IEEE Standard Digital Interface for Programmable Instrumentation

May be downloaded in Acrobat (PDF) format from:

ieeexplore.ieee.org/iel1/2839/5581/00213762.pdf?arnumber=213762

2. **IVI Foundation**

(Interchangeable Virtual Instrument Foundation)

http://www.ivifoundation.org/default.aspx

3. Agilent X-Series Document Library

Select one of the following hyperlinks, depending on the product name of your instrument:

http://www.agilent.com/find/pxa manuals

http://www.agilent.com/find/mxa_manuals

http://www.agilent.com/find/exa manuals

http://www.agilent.com/find/cxa manuals

http://www.agilent.com/find/mxe manuals

4. Agilent X-Series Signal Analyzer: Getting Started Guide

Agilent Technologies Inc. 2008-2013. Part Number: subject to change as document is revised.

A printed copy of this document is supplied with each Agilent X-Series Analyzer.

It is also available in Acrobat (PDF) form:

- on the Documentation DVD supplied with each instrument,
- on the instrument's disk drive at the following location:
 C:\Program Files\Agilent\SignalAnalysis\Infrastructure\Help\bookfiles\getstart.pdf
- via download from:

www.agilent.com/find/xseries_getting_started_guide

Documents & Web Sites

5. Agilent I/O Libraries Suite

Agilent Technologies Inc.

All Agilent VISA, VISA COM, SICL and 488 documentation is included in HTML Help (CHM) format in the Agilent I/O Libraries Suite installer, which may be downloaded from:

www.agilent.com/find/iosuite

After installing the libraries suite, you can access the help by clicking the IO taskbar icon, then selecting Documentation > API Documentation > VISA Documentation from the popup menus.

6. **Agilent VISA Help**

After installing the Agilent I/O Libraries Suite, you can access the VISA Help CHM by clicking the IO taskbar icon, then selecting Documentation > API Documentation > VISA Documentation from the popup menus.

Alternatively, you can find the CHM at the following disk location:

C:\Program Files\Agilent\IO Libraries Suite\Visa.chm

7. Agilent IVI (Instrument) Drivers

Installation packages for the Signal Analyzer class driver ("Base Driver"), and instrument-specific drivers, may be downloaded from the "Signal Analyzer Instrument Drivers" page at:

http://www.agilent.com/find/sa-ivi

8. Agilent Application Note 1583

"Maximizing Measurement Speed with Agilent's X-Series Signal Analyzers"

May be downloaded in Acrobat (PDF) format from:

http://cp.literature.agilent.com/litweb/pdf/5989-4947EN.pdf

9. Agilent Application Note 1595

"How to Use IVI-COM Drivers in Agilent VEE Pro 8.0"

May be downloaded in Acrobat (PDF) format from:

http://cp.literature.agilent.com/litweb/pdf/5989-6914EN.pdf

10. **Agilent VEE Pro**

For links to all available information, see:

www.agilent.com/find/vee

Developer Resources

Agilent Developer Network (ADN)

This website offers a one-stop shop, with links to Instrument Drivers, Example Programs, Product Downloads, Evaluations, Demos, and resources for contacting Agilent regarding development issues:

http://www.agilent.com/find/adn

Technical Support

Navigate to one of the web pages below, according to the name of your product, then select the Technical Support tab for links to all available documentation for the product:

http://www.agilent.com/find/pxa

http://www.agilent.com/find/mxa

http://www.agilent.com/find/exa

http://www.agilent.com/find/cxa

http://www.agilent.com/find/mxe