

Motherboard

PRIME A520M-A II

Quick start guide Hurtigstartsveiledning Guia de consulta rápida Кратко упътване за бърз старт Stručná příručka Instrukcja szybkiej instalacji Quick Start-vejledning Краткое руководство **Snelstartgids** Ghid de pornire rapidă Guía de inicio rápida Lühijuhend Guide de démarrage rapide Vodič za brzo korišćenje Stručný návod na spustenie Pikakäynnistysopas Snabbstartsguide Schnellstartanleitung คู่มือเริ่มต้นอย่างเร็ว Οδηγός γρήγορης έναρξης Beüzemelési útmutató Hızlı Başlatma Kılavuzu

Panduan Ringkas Vodič za brzi početak rada クイックスタートガイド Короткий посібник

Höôùng daãn khôûi ñoäng nhanh

راهنمای شروع سریع

Жылдам іске қосу нұсқаулығы Vodnik za hitri začetek دليل التشغيل السريع 빠른 시작 설명서

Greitos darbo pradžios vadovas


Īsa pamācība


Guida Rapida

Step 1

Install the CPU Инсталирайте процесора Instalace procesoru Installer CPU'en De CPU installeren Paigaldage CPU Installez le processeur Asenna suoritin Installieren der CPU Εγκατάσταση της CPU Helyezze be a CPU-t Installare la CPU **Pasang CPU** CPUを取り付ける CPU орнатыңыз CPU 설치 Sumontuokite centrinį procesorių



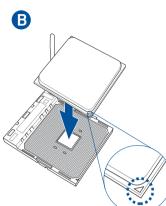

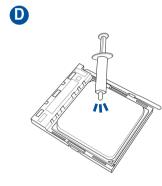

Installer sentralprosessoren (CPU) Instale a CPU Instalacja procesora Установка процессора Instalați CPU-ul Instalar la CPU Instalirajte CPU Inštalácia centrálneho procesora Installera CPU ติดตั้ง CPU CPU'yu takın Lắp CPU Instalacija procesora Інсталюйте процесор Namestitev CPE-ja

قم بتثبيت وحدة المعالجة المركزية (CPU) CPU را نصب کنید



تثبيت مروحة وحدة المعالجة المركزية پنکه CPU را نصب کنید

Type 1

Step 2

Install the CPU fan

Installer CPU-blæseren

Инсталирайте вентилатора на процесора

Instalace ventilátoru procesoru

De CPU-ventilator installeren

Paigaldage CPU ventilaator

Asenna suorittimen tuuletin

Installieren des CPU-Lüfters

Szerelje be a CPU ventillátort

Installare la ventola della CPU

CPU желдеткішін орнатыңыз

Sumontuokite centrinio procesoriaus ventiliatorių

Uzstādiet centrālā procesora ventilatoru

Inštalácia ventilátora centrálneho procesora

CPUクーラーを取り付ける

Pasang kipas CPU

Installer CPU-viften

Instale a ventoinha de CPU

Instalacja wentylatora procesora Установка вентилятора

Instalați ventilatorul CPU-ului

Instalar el ventilador de la CPU Instalirajte CPU ventilator

Instalacija ventilatora procesora

Інсталюйте вентилятор процесора Namestitev ventilatorja CPE-ja


Installera CPU-fläkten ติดตั้งพัดลม CPU

CPU fanını takın Lắp quạt CPU


CPU 팬 설치


Installez le ventilateur du processeur


Εγκατάσταση του ανεμιστήρα της CPU

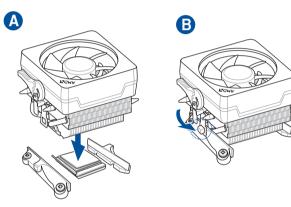





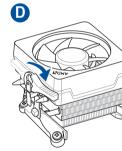

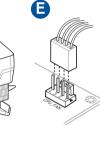

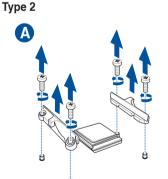


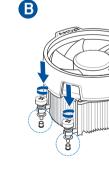

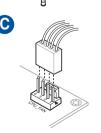

NOTE: Remove the screws and the retention module only. Do not remove the plate on the bottom

Motherboard Layout

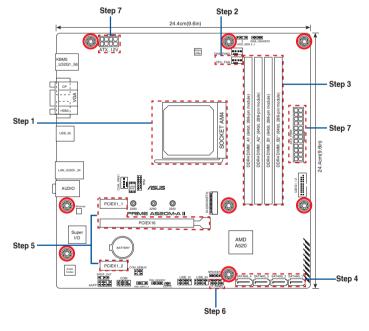

Australia statement notice

From 1 January 2012 updated warranties apply to all ASUS products, consistent with the Australian Consumer Law. For the latest product warranty details please visit http://www.asus.com/support/. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at http://www.asus.com/support/

India E-waste (Management) Rule 2016

This product complies with the "India E-Waste (Management) Rules, 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls (PBBs) and polybrominated diphenyl ethers (PBDEs) in concentrations exceeding 0.1% by weight in homogenous materials and 0.01 % by weight in homogenous materials for cadmium, except for the exemptions listed in Schedule II of the Rule.

Regional notice for Turkey

AEEE Yönetmeliğine Uygundur.

Q17797 First Edition February 2021 Copyright © ASUSTeK Computer Inc. All Rights Reserved

PRODUZIDO NO PÓLO INDUSTRIAL DE MANAUS




Step 3

Install memory modules Инсталирайте модулите памет Instalace paměťových modulů Installer hukommelsesmodulerne Geheugenmodules installeren Paigaldage mälumoodulid Installez les modules de mémoire Asenna muistimoduulit Installieren der Speichermodule Εγκατάσταση των στοιχείων μνήμης Helyezze be a memória modulokat Installare i moduli di memoria Pasang modul memori メモリーモジュールを取り付ける Жад моульдерін орнатыңыз 메모리 모듈 설치 Sumontuokite atminties modulius Uzstādiet atminas modulus

Installer minnemoduler Instale módulos de memória Instalacja modułów pamięci Установка модулей памяти Instalați modulele de memorie Instalar los módulos de memoria Instaliraite module memorije Inštalácia pamäťových modulov Installera minnesmoduler ติดตั้งโมดูลหน่วยความจำ Bellek modüllerini takın Lắp các thanh nhớ Instalacija memorijskih modula Інсталюйте модулі пам'яті Namestitev pomnilniških modulov

تثبيت وحدات الذاكرة مادول های حافظه را نصب کنید

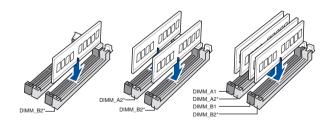

Step 4


Install storage devices Инсталиране на устройства за съхранение Instalování paměťových zařízení Installering af lagerenheder Opslagapparaten installeren Installige salvestid Installer les périphériques de stockage Tallennuslaitteiden asentaminen Installieren der Speichergeräte Εγκατάσταση συσκευών αποθήκευσης Tárolóeszközök telepítése Installare i dispositivi di archiviazione Memasang perangkat penyimpanan ストレージデバイスを取り付ける Сақтау құрылғыларын орнату 저장 장치 설치

Įdiegti saugojimo įrenginius

Instalējiet atmiņas ierīces

Montere lagringsenheter Instalar dispositivos de armazenamento Instalacja urządzeń pamięci Установите накопители Instalarea dispozitivelor de stocare Instalar dispositivos de almacenamiento Instalirajte uređaje za skladištenje Ištalácia pamäťových zariadení Installera lagringsenheter การติดตั้งอุปกรณ์เก็บข้อมูล Depolama aygıtlarınızı takma lắp đặt các thiết bị lưu trữ Instalirajte uređaje za pohranjivanje Інсталяція пристроїв пам'яті Namestitev naprav za shranjevanje

تثبيت أجهزة التخزين نصب دستگاه های ذخیره سازی

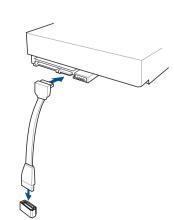

Step 5

Install expansion card(s)

Инсталирайте допълнителна карта (допълнителни карти)

Instalace přídavné karty (karet)

Installer udvidelseskortene

Uitbreidingskaart(en) installeren

Paigaldage laienduskaart(-kaardid)

Installez les cartes d'extension Asenna laajennuskortti/kortit

Installieren der Erweiterungskarte(n)

Ενκατάσταση καρτών επέκτασης

Helyezze be a bővítőkártyá(ka)t

Installare le schede di espansione

Pasang kartu ekspansi

拡張カードを取り付ける

Кеңейту картас(лар)ын орнатыңыз

확장 카드 설치

Sumontuokite išplėtimo plokštę (-es)

Uzstādiet izvērses karti(-es)

Installer utvidelseskort

Instale placas de expansão

Instalacja kart(y) rozszerzenia Установка карт расширения

Instalați cardul/cardurile de extensie

Instalar tarjetas de expansión

Instaliraite ekspanzionu/e karticu/e

Inštalácia rozširujúcich kariet

Installera expansionskort ติดตั้งเอ็กซ์แพนชั้นการ์ด


Genisletme kartlarını takın

Lắp (các) thẻ mở rộng

Instalacija kartica za proširenje

Інсталюйте плати розширення Namestitev razširitvenih kartic

تثبيت بطاقة (بطاقات) التوسعة

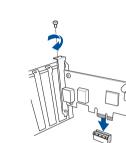

Step 6

Install the system panel connector Инсталирайте конектора за системния панел

Nainstalujte konektor pro panel systému

Tilslut stikket til systempanelet

Installeer de connectors van het systeempaneel Ühendage süsteemi paneeli liitmik

Installer le connecteur de panneau système

Asenna järjestelmäpaneelin liitäntä

Installieren des Systembereich-Anschlusses

Ενκατάσταση του συνδέσμου του πίνακα του συστήματος

Telepítse a rendszerpanell csatlakozót

Installa il connettore del pannello di sistema Pasang konektor panel sistem

システムパネルコネクターを取り付ける Жүйе панелінің коннекторын орнатыңыз

시스템 패널 커넥터를 설치하십시오

Sumontuokite sistemos valdymo plokštės jungtį

Sistēmas paneļa savienotāja instalēšana

Installer systempanelkontakten

Instalar o conector do painel do sistema Zainstaluj złacze panelu systemowego

Установка разъема системной панели

Instalați Conector pentru placa de bază

Instalar el conector del panel del sistema

Instalirajte priključak za sistemsku ploču Inštalácia konektora systémového panela

Sätt i systempanelens kontakt

ติดตั้งขั้วต่อแผงระบบ

Sistem paneli konnektörünü takın

Lắp đầu nối bảng điều khiển hệ thống Instalacija konektora ploče sustava

Встановіть з'єднувач системної панелі Namestitev Konektor matične plošče

> تركيب موصل لوحة النظام رابط صفحه سیستم را نصب کنید



Install ATX power connectors

Инсталирайте ATX конекторите за захранване

Instalace konektorů napájení ATX

Installer ATX-strømtilslutningerne ATX-voedingsaansluitingen installeren

Paigaldage ATX-i toitekonnektorid

Installez les connecteurs d'alimentation ATX

Asenna ATX-virtaliittimet

Installieren der ATX-Stromanschlüsse Ενκατάσταση συνδέσμων τροφοδοσίας ΑΤΧ

Csatlakoztassa az ATX tápcsatlakozókat Installare i connettori di alimentazione ATX

Pasang konektor daya ATX

電源ケーブルを接続する

АТХ электр куат коскыштарын орнатыныз

ATX 전원 커넥터 설치

Sumontuokite ATX maitinimo jungtis

Uzstādiet ATX strāvas savienotājus Installer kontakter for ATX-strøm

Instale os conectores de alimentação ATX

Instalacja złączy zasilacza ATX

Установка АТХ разъема

Instalați pinii conectori ATX

Instalar conectores de alimentación ATX

Instalirajte ATX električne priključke Inštalácia napájacích konektorov ATX

Installera ATX strömkontakter

ติดตั้งขั้วต่อ ATX เพาเวอร์


ATX güç konnektörlerini takın


Lắp các đầu nối nguồn ATX

Instalacija konektora ATX napajanja Інсталюйте розніми живлення АТХ

Namestitev priključkov za napajanje ATX

تثبيت توصيلات الطاقة ATX رابط های برق ATX را نصب کنید

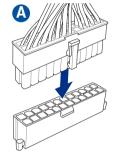

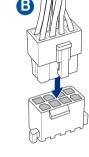

Step 8

Connect input/output devices

Свързване на І/О устройства

Připojení vstupních/výstupních zařízení

Tilslut input-/outputudstyr

I/O-apparaten aansluiten

Ühendage sisend -/väljundseadmed

Connectez les périphériques d'entrée/sortie

Liitä tulo/lähtölaitteita

Eingabe-/Ausgabe-Geräte verbinden Σύνδεση συσκευών εισόδου/εξόδου

Bemeneti/kimeneti eszközök csatlakoztatása

Collegate i dispositivi di input/output

Sambungkan perangkat input/output 入出力デバイスに接続する

Кіріс/шығыс құрылғыларын қосу 입력/출력 장치 연결 Prijunkite įvesties / išvesties įrenginius

Pievienot ievades/izvades ierīces

Ligar dispositivos de entrada/saída Podłaczenie urzadzeń wejścia/wyjścia Подключение устройств ввода/вывода Conectare dispozitive de intrare/ieşire

Koble til inngang/utgangsenheter

Conectar dispositivos de entrada y salida

Povežite ulazne/izlazne uređaje

Pripojenie vstupných/výstupných zariadení

Anslut ingående/utgående enheter

ชื่อมต่ออุปกรณอินพุต/เอาตพุต


Giriş/çıkış aygıtlarına bağlan

Kết nối các thiết bị đầu vào/đầu ra Spajanje ulaznih/izlaznih uređaja

Priključitev vhodnih/izhodnih naprav

Під'єднайте пристрої вводу/виводу

توصيل أجهزة الدخل/الخرج دستگاه های ورودی/خروجی را متصل نمایید

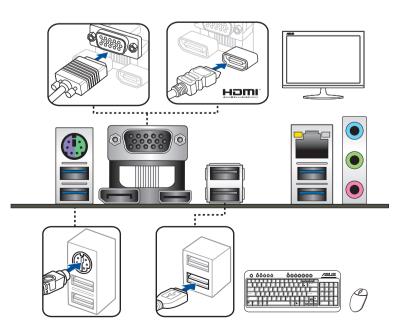

Step 9

Power on the system and install operating system and drivers

Включете системата и инсталирайте операционната система и драйверите Zapnutí napájení systému a instalace operačního systému a ovladačů

Tænd for systemet, og installer operativsystemet og de tilhørende drivere Het systeem inschakelen en het besturingssysteem en de stuurprogramma's installeren

Lülitage süsteemi toide sisse ning installige operatsioonisüsteem ja draiverid

Démarrez le système et installez le système d'exploitation et les pilotes

Käynnistä järjestelmä ja asenna käyttöjärjestelmä ja ohjaimet

Einschalten des Systems und Installieren des Betriebssystems und der Treiber Ενεργοποιήστε το σύστημα και εγκαταστήστε το λειτουργικό σύστημα και τα προγράμματα οδήγησης

Kapcsolja be a rendszert és telepítse az operációs rendszert és illesztőprogramokat

Accendere il sistema e installare il sistema operativo e i driver Hidupkan sistem, lalu instal sistem operasi dan driver

システムを起動しOSとドライバーをインストールする

Жүйені қосып, операциялық жүйені жәнә драйверлерді орнатыңыз 시스템 전원 켜기 및 운영체제와 드라이버 설치

ljunkite sistemą ir įdiekite operacinę sistemą ir tvarkykles

leslēdziet sistēmu un instalējiet operētājsistēmu un draiverus Slå på systemet og installer operativsystem og drivere

Ligue o sistema e instale o sistema operativo e os controladores

Włącz zasilanie i zainstaluj system operacyjny oraz sterowniki Включение системы и установка операционной системы и драйверов

Porniți sistemul și instalați sistemul de operare și driverele Proporcionar alimentación al sistema e instalar el sistema operativo y los controladores

Uključite sistem i instalirajte operativni sistem i drajvere

Zapnutie systému a inštalácia operačného systému a ovládačov Slå på systemet och installera operativsystem och drivrutiner

เปิดระบบ และติดตั้งระบบปฏิบัติการและใดรเวอร์

Sistemi açıp işletim sistemini ve sürücüleri yükleyin

Bật nguồn hệ thống và cài đặt hệ điều hành cũng như các driver Uključivanje sustava i instaliranje operativnih sustava i upravljačkih programa

Увімкніть живлення системи та інсталюйте операційну систему та драйвери Vklop sistema ter namestitev operacijskega sistema in gonilnikov

تشغيل الجهاز وتثبيت نظام وبرمجيات التشغيل سیستم را روشن کرده و درایورها و سیستم عامل را نصب کنید



