



# Operating Manual

**pDDL2450**

2.4 GHz 1W OEM Wireless Digital Data Link

Document: pDDL2450.Operating Manual.v1.3.1.pdf  
FW: v1.3.0 Build 1032



150 Country Hills Landing NW  
Calgary, Alberta  
Canada T3K 5P3

Phone: (403) 248-0028  
Toll Free: 1-855-353-0028  
[www.microhardcorp.com](http://www.microhardcorp.com)



## Important User Information

### Warranty

Microhard Systems Inc. warrants that each product will be free of defects in material and workmanship for a period of one (1) year for its products. The warranty commences on the date the product is shipped by Microhard Systems Inc. Microhard Systems Inc.'s sole liability and responsibility under this warranty is to repair or replace any product which is returned to it by the Buyer and which Microhard Systems Inc. determines does not conform to the warranty. Product returned to Microhard Systems Inc. for warranty service will be shipped to Microhard Systems Inc. at Buyer's expense and will be returned to Buyer at Microhard Systems Inc.'s expense. In no event shall Microhard Systems Inc. be responsible under this warranty for any defect which is caused by negligence, misuse or mistreatment of a product or for any unit which has been altered or modified in any way. The warranty of replacement shall terminate with the warranty of the product.

### Warranty Disclaims

Microhard Systems Inc. makes no warranties of any nature of kind, expressed or implied, with respect to the hardware, software, and/or products and hereby disclaims any and all such warranties, including but not limited to warranty of non-infringement, implied warranties of merchantability for a particular purpose, any interruption or loss of the hardware, software, and/or product, any delay in providing the hardware, software, and/or product or correcting any defect in the hardware, software, and/or product, or any other warranty. The Purchaser represents and warrants that Microhard Systems Inc. has not made any such warranties to the Purchaser or its agents. **MICROHARD SYSTEMS INC. EXPRESS WARRANTY TO BUYER CONSTITUTES MICROHARD SYSTEMS INC. SOLE LIABILITY AND THE BUYER'S SOLE REMEDIES. EXCEPT AS THUS PROVIDED, MICROHARD SYSTEMS INC. DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PROMISE.**

**MICROHARD SYSTEMS INC. PRODUCTS ARE NOT DESIGNED OR INTENDED TO BE USED IN ANY LIFE SUPPORT RELATED DEVICE OR SYSTEM RELATED FUNCTIONS NOR AS PART OF ANY OTHER CRITICAL SYSTEM AND ARE GRANTED NO FUNCTIONAL WARRANTY.**

### Indemnification

The Purchaser shall indemnify Microhard Systems Inc. and its respective directors, officers, employees, successors and assigns including any subsidiaries, related corporations, or affiliates, shall be released and discharged from any and all manner of action, causes of action, liability, losses, damages, suits, dues, sums of money, expenses (including legal fees), general damages, special damages, including without limitation, claims for personal injuries, death or property damage related to the products sold hereunder, costs and demands of every and any kind and nature whatsoever at law.

IN NO EVENT WILL MICROHARD SYSTEMS INC. BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, INCIDENTAL, BUSINESS INTERRUPTION, CATASTROPHIC, PUNITIVE OR OTHER DAMAGES WHICH MAY BE CLAIMED TO ARISE IN CONNECTION WITH THE HARDWARE, REGARDLESS OF THE LEGAL THEORY BEHIND SUCH CLAIMS, WHETHER IN TORT, CONTRACT OR UNDER ANY APPLICABLE STATUTORY OR REGULATORY LAWS, RULES, REGULATIONS, EXECUTIVE OR ADMINISTRATIVE ORDERS OR DECLARATIONS OR OTHERWISE, EVEN IF MICROHARD SYSTEMS INC. HAS BEEN ADVISED OR OTHERWISE HAS KNOWLEDGE OF THE POSSIBILITY OF SUCH DAMAGES AND TAKES NO ACTION TO PREVENT OR MINIMIZE SUCH DAMAGES. IN THE EVENT THAT REGARDLESS OF THE WARRANTY DISCLAIMERS AND HOLD HARMLESS PROVISIONS INCLUDED ABOVE MICROHARD SYSTEMS INC. IS SOMEHOW HELD LIABLE OR RESPONSIBLE FOR ANY DAMAGE OR INJURY, MICROHARD SYSTEMS INC.'S LIABILITY FOR ANY DAMAGES SHALL NOT EXCEED THE PROFIT REALIZED BY MICROHARD SYSTEMS INC. ON THE SALE OR PROVISION OF THE HARDWARE TO THE CUSTOMER.

### Proprietary Rights

The Buyer hereby acknowledges that Microhard Systems Inc. has a proprietary interest and intellectual property rights in the Hardware, Software and/or Products. The Purchaser shall not (i) remove any copyright, trade secret, trademark or other evidence of Microhard Systems Inc.'s ownership or proprietary interest or confidentiality other proprietary notices contained on, or in, the Hardware, Software or Products, (ii) reproduce or modify any Hardware, Software or Products or make any copies thereof, (iii) reverse assemble, reverse engineer or decompile any Software or copy thereof in whole or in part, (iv) sell, transfer or otherwise make available to others the Hardware, Software, or Products or documentation thereof or any copy thereof, except in accordance with this Agreement.



microhard

pDDL

1010101010101010101010  
0101010101010101010101  
1010101010101010101010  
0101010101010101010101

## Important User Information (continued)

---

### About This Manual

It is assumed that users of the products described herein have either system integration or design experience, as well as an understanding of the fundamentals of radio communications.

Throughout this manual you will encounter not only illustrations (that further elaborate on the accompanying text), but also several symbols which you should be attentive to:



#### **Caution or Warning**

Usually advises against some action which could result in undesired or detrimental consequences.



#### **Point to Remember**

Highlights a key feature, point, or step which is noteworthy. Keeping these in mind will simplify or enhance device usage.



#### **Tip**

An idea or suggestion to improve efficiency or enhance usefulness.



#### **Information**

Information regarding a particular technology or concept.



microhard

pDDL

1010101010101010101010  
01010101010101010101010  
1010101010101010101010  
01010101010101010101010  
1010101010101010101010  
01010101010101010101010

## Important User Information (continued)

### Regulatory Requirements / Exigences Réglementaires



#### **WARNING:**

To satisfy FCC RF exposure requirements for mobile transmitting devices, a separation distance of 23 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.



#### **WARNING:**

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.



#### **WARNING:**

Changes or modifications not expressly approved by Microhard Systems Inc. could void the user's authority to operate the equipment. This device has been tested with UFL to Reverse Polarity SMA connectors with the antennas listed in Appendix A. When integrated in OEM products, fixed antennas require installation preventing end-users from replacing them with non-approved antennas. Antennas not listed in the tables must be tested to comply with FCC Section 15.203 (unique antenna connectors) and Section 15.247 (emissions).



#### **WARNING:**

##### **MAXIMUM EIRP**

FCC Regulations allow up to 36 dBm equivalent isotropically radiated power (EIRP). Therefore, the sum of the transmitted power (in dBm), the cabling loss and the antenna gain cannot exceed 36 dBm.



#### **WARNING:**

##### **EQUIPMENT LABELING**

The FCC and IC numbers depend on the model of the radio module. Do NOT use the Marketing Name of the product but the Model to distinguish the Certifications Numbers. This device has modularly approved. The manufacturer, product name, and FCC and Industry Canada identifiers of this product must appear on the outside label of the end-user equipment.



#### **WARNING:**

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

### SAMPLE LABEL REQUIREMENT / EXIGENCE D'ÉTIQUETTE: pDDL

FCCID: NS916PDDL2450
IC: 3143A-16PDDL2450

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Please Note: These are only sample labels; different products contain different identifiers. The actual identifiers should be seen on your devices if applicable.



microhard

pDDL

## Important User Information (continued)

### Regulatory Requirements / Exigences Réglementaires



#### **WARNING:**

*Pour satisfaire aux exigences de la FCC d'exposition RF pour la base et mobiles sur une distance de séparation de 23 cm ou plus doit être maintenue entre l'antenne de cet appareil et des personnes lors de fonctionnement du dispositif. Pour assurer la conformité des opérations au plus près que cette distance n'est pas recommandée. L'antenne utilisée pour ce transmetteur ne doit pas être co-localisés en conjonction avec toute autre antenne ou transmetteur.*



#### **WARNING:**

Son fonctionnement est soumis aux deux conditions suivantes : ( 1 ) ce dispositif ne doit pas causer d'interférences nuisibles et ( 2 ) cet appareil doit accepter toute interférence reçue, incluant les interférences qui peuvent provoquer un fonctionnement indésirable .



#### **WARNING:**

Les changements ou modifications non expressément approuvés par Microhard Systems Inc. pourraient annuler l'autorité de l'utilisateur à utiliser l'équipement . Ce dispositif a été testé avec MCX et connecteurs SMA à polarité inverse sur les antennes répertoriées à l'annexe A Lorsqu'il est intégré dans les produits OEM , antennes fixes nécessitent une installation empêchant les utilisateurs finaux de les remplacer par des antennes non approuvées . Antennes ne figurant pas dans les tableaux doivent être testés pour se conformer à la Section 15.203 (connecteurs d'antenne uniques ) et à la Section 15.247 ( émissions ) .



#### **WARNING:**

##### MAXIMUM EIRP

Règlement FCC permettent jusqu'à 36 dBm puissance isotrope rayonnée équivalente ( EIRP ) . Par conséquent, la somme de la puissance émise ( en dBm ), la perte de câblage et le gain d'antenne ne peut pas dépasser 36 dBm.



#### **WARNING:**

##### ÉQUIPEMENT DE MARQUAGE

Les numéros FCC et IC dépendent du modèle du module radio . Ne pas utiliser le nom marketing du produit, mais le modèle de distinguer les numéros Certifications . Ce dispositif a été approuvé de façon modulaire . Le fabricant , nom du produit, et les identificateurs de la FCC et d'Industrie Canada de ce produit doivent figurer sur l'étiquette à l'extérieur de l'équipement de l'utilisateur final .



#### **WARNING:**

Cet appareil est conforme aux CNR exempts de licence d'Industrie Canada . Son fonctionnement est soumis aux deux conditions suivantes : ( 1 ) Ce dispositif ne peut causer des interférences ; et ( 2 ) Ce dispositif doit accepter toute interférence , y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

### SAMPLE LABEL REQUIREMENT / EXIGENCE D'ÉTIQUETTE: pDDL

FCCID: NS916PDDL2450 IC: 3143A-16PDDL2450
<p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.</p>

Please Note: S'il vous plaît noter: Ce sont des exemples d'étiquettes seulement; différents produits contiennent des identifiants différents. Les identifiants réels devrait être vu sur vos périphériques le cas échéant.



## Revision History

Revision	Description	Initials	Date
0.0	Preliminary Release. Based on Firmware v1.3.0 Build 1009-52	PEH	Feb 2016
0.1	Added current specifications.	PEH	Mar 2016
0.2	Updated Images. Added info for video applications (Wireless).	PEH	Mar 2016
0.3	Added Rx Diversity Enable (Wireless), Misc Updates. Build 1009-68	PEH	Mar 2016
0.4	Updated Wireless (RF). Firmware v1.3.0 Build 1010	PEH	Apr 2016
0.5	Updated Quick Start to include using defaults (Auto). Added Channel Selection Tool. Updated defaults. Firmware v1.3.0 Build 1011-6.	PEH	Apr 2016
0.6	Updated images, added FCC/IC numbers.	PEH	Apr 2016
1.0	Removed Channel Selection Tool. Updated to Firmware v1.3.0 Build 1012	PEH	Apr 2016
1.1.0	Added SMT temperature profile and baking instructions	PEH	May 2016
1.1.1	Added Appendix D: Serial Port Extension	PEH	May 2016
1.1.2	Updated Images	PEH	June 2016
1.2.0	Updated Logo's, Screenshots, Added USB RNDIS Support	PEH	Nov 2016
1.2.1	Updated to Firmware v1.3.0-r1024. Updated AT Commands.	PEH	Jan 2017
1.2.2	Updated to firmware v1.3.0-r1026.	PEH	Feb 2017
1.2.3	Updated to firmware v1.3.0-r1030.	PEH	Mar 2017
1.3.0	Added pDDL2450-ENC	PEH	Mar 2017
1.3.1	Misc corrections	PEH	Aug 2017

## Table of Contents

<b>1.0 Overview .....</b>	<b>10</b>
1.1 Performance Features .....	10
1.2 Specifications .....	11
1.3 pDDL Performance.....	13
<b>2.0 QUICK START .....</b>	<b>14</b>
2.1 Getting Started .....	14
2.2 Simple Master and Slave (Auto - Using Defaults).....	16
2.3 Simple Master and Slave (Manual).....	17
2.3.1 Configuring the Master .....	17
2.3.2 Configuring the Slave /Remote .....	19
2.3.3 Testing the Connection .....	21
<b>3.0 Hardware Features .....</b>	<b>22</b>
3.1 pDDL2450 OEM .....	22
3.1.1 Mechanical Drawings .....	23
3.1.2 Recommended Solder Mask (Pad Landing) .....	24
3.1.3 Recommended Solder Paste Pattern.....	25
3.1.4 OEM Connectors .....	25
3.1.5 SMT Temperature Profile .....	26
3.1.6 SMT Baking Instructions (MSL).....	26
3.1.7 OEM Pin Descriptions .....	27
3.1.8 USB Device Mode .....	29
3.2 pDDL2450 Enclosed .....	30
3.2.1 Mechanical Drawings .....	31
3.2.2 Connectors & Indicators .....	32
3.3 pDDL Development Board .....	35
3.3.1 Mechanical Drawings .....	36
3.3.2 Connectors & Indicators .....	37
<b>4.0 Configuration.....</b>	<b>39</b>
<b>  4.0 Web User Interface.....</b>	<b>39</b>
4.0.1 Logon Window .....	40
<b>  4.1 System.....</b>	<b>41</b>
4.1.1 Summary .....	41
4.1.2 Settings.....	42
Host Name.....	42
Date/Time .....	43
4.1.3 Services .....	45
SSH .....	45
Telnet.....	45
HTTP/HTTPS .....	45
4.1.4 Maintenance .....	46
Firmware Upgrade.....	46
Backup & Restore Configurations .....	47
4.1.5 Reboot .....	48



## Table of Contents

<b>4.2 Network .....</b>	<b>49</b>
4.2.1 Status .....	49
4.2.2 LAN .....	50
LAN DHCP .....	52
4.2.3 WAN .....	54
4.2.4 USB .....	56
4.2.5 DHCP (MAC Binding) .....	57
4.2.6 Routes .....	58
4.2.7 Ports .....	60
4.2.8 Device List .....	61
<b>4.3 Wireless.....</b>	<b>62</b>
4.3.1 Status .....	62
4.3.2 Radio1 .....	63
Radio On/Off .....	63
Channel Bandwidth .....	64
Radio Channel (Frequency) .....	64
TX Power .....	64
Rx Diversity On/Off .....	64
Operating Mode .....	65
TX Rate .....	65
Network ID .....	66
Encryption .....	66
<b>4.4 Firewall .....</b>	<b>67</b>
4.4.1 Summary .....	67
4.4.2 General .....	68
4.4.3 Port Forwarding .....	69
4.4.4 MAC-IP List .....	71
4.4.5 Rules .....	73
4.4.4 Default .....	75
<b>4.5 Serial.....</b>	<b>76</b>
4.5.1 Summary .....	76
4.5.2 RS232 Port Settings .....	77
Data Baud Rate .....	78
IP Protocol Config .....	80
TCP Client .....	80
TCP Server .....	80
TCP Client/Server .....	81
UDP Point-to-Point .....	81
PPP .....	82
4.5.3 GS0 (USB - Device Mode) .....	83
<b>4.6 Diag.....</b>	<b>84</b>
4.6.1 Ping .....	84
4.6.2 Traceroute .....	84
4.6.3 Iperf .....	85
<b>4.7 Admin .....</b>	<b>86</b>
4.7.1 Users .....	86
4.7.2 SNMP .....	88
4.7.3 Discovery .....	93
4.7.4 Logout .....	94



microhard

pDDL

101010101010101010101010  
010101010101010101010101  
101010101010101010101010  
010101010101010101010101

## Table of Contents

---

<b>5.0 AT Command Line Interface.....</b>	<b>95</b>
5.1 AT Command Overview.....	95
5.1.1 Telnet (TCP/IP).....	95
5.2 AT Command Syntax.....	96
5.3 Supported AT Commands.....	97
<b>6.0 Installation .....</b>	<b>107</b>
6.1 Path Calculation .....	109
6.2 Installation of Antenna System Components .....	110
6.2.1 Antennas.....	110
6.2.2 Coaxial Cable.....	111
6.2.3 Surge Arrestors.....	111
6.2.4 External Filter.....	111
<b>Appendices .....</b>	<b>112</b>
Appendix A: Serial Interface.....	112
Appendix B: Firmware Recovery.....	113
Appendix C: Sample Interface Schematic.....	114
Appendix D: Serial Port Extension .....	115
Appendix E: Troubleshooting/FAQ.....	116



## 1.0 Overview

The pDDL is a feature rich, high power, OEM, Wireless Digital Data Link. The pDDL is designed to provide high performance wireless capabilities in a compact and rugged OEM module for system integration. The pDDL features simultaneous dual 10/100 Ethernet & Serial (RS232) Gateway capabilities for high speed wireless applications

The pDDL can be configured using a built-in WebUI interface which does not require any additional software or tools to setup or download. The unit can operate as a Master or Slave to establish long range wireless links between locations.

Providing reliable wireless Ethernet bridge functionality as well gateway service for most equipment types which employ an RS232 interface, the pDDL can be used in various types of applications such as:

- High-speed backbone
- IP video surveillance
- Voice over IP (VoIP)
- Ethernet wireless extension
- Mobile Internet
- Legacy network/device migration
- SCADA
- Display Signs
- Fleet Services
- Remote Telemetry
- Multicast Video

### 1.1 Performance Features

Key performance features of the pDDL include:

- High Power Tx (up to 1W) w/ Excellent Rx Sensitivity
- Up to 25 Mbps data rate\*
- Master, Slave/Remote operating modes
- Point to Point, Point to Multipoint, Mesh (future) topology support
- Firewall with ACL Security, Port Forwarding
- Serial Gateway (RS232)
- Dual 10/100 Ethernet Ports
- RSSI LED pins for Antenna Alignments
- Industrial grade operating temperature (-40°C to +85°C)
- Administration via local console, telnet, web browser, SNMP
- Local and remote wireless firmware upgradable

\* See [Section 1.3 Performance Specifications](#)



## 1.0 Overview

### 1.2 Specifications

For detailed specifications, please see the specification sheets available on the Microhard website @ <http://www.microhardcorp.com> for your specific model.

#### Electrical/General

<b>Frequency:</b>	2.402 - 2.482 GHz
<b>Link Rate:</b>	See <a href="#">Section 1.3 Performance Specifications</a>
<b>TX Power:</b>	20 dBm - 30 dBm (Selectable)
<b>Channel Bandwidth:</b>	1, 2, 4, 8 MHz (Selectable)
<b>Error Detection/Control:</b>	CRC, ARQ
<b>Data Encryption*:</b> (*Requires Export Permit)	128-bit AES (Optional 256-bit)
<b>Serial Port:</b>	300bps to 921kbps - TTL Level RS232
<b>Ethernet:</b>	Dual 10/100 BaseT, Auto - MDI/X, IEEE 802.3
<b>USB:</b>	2.0
<b>Network Protocols:</b>	TCP, UDP, TCP/IP, ARP, ICMP, DHCP, HTTP, HTTPS*, SSH*, SNMP, FTP, DNS, Serial over IP (*May require an export permit)
<b>Operating Modes:</b>	Master, Slave/Remote
<b>Management:</b>	Local Serial Console, Telnet, WebUI, SNMP, FTP & Wireless Upgrade
<b>Diagnostics:</b>	Status LED's, RSSI, remote diagnostics, SNR
<b>Input Voltage:</b>	Digital Voltage: 3.3 VDC (500mA) RF Voltage: 5.0 VDC (2.5A)
<b>Current:</b>	

	Tx Power (dBm)	Vcc @ 3.3V	VRF @ 5V
Peak Avg. Transmit Current (mA)	20	360 - 400	360
	22	360 - 400	400
	24	360 - 400	450
	26	360 - 400	500
	28	360 - 400	580
	30	360 - 400	700
Instantaneous Current Draw	-	500	2500
Typical Receive Current Draw (mA)	-	360-400	-

Table 1-1: pDDL Current Consumption



microhard

1010101010101010101010101  
01010101010101010101010101  
1010101010101010101010101  
01010101010101010101010101  
1010101010101010101010101  
01010101010101010101010101

**pDDL**

## 1.0 Overview

---

### Environmental

**Operation Temperature:** -40°F(-40°C) to 185°F(85°C)

**Humidity:** 5% to 95% non-condensing

### Mechanical

**Dimensions:** 1.05" (26.5mm) X 1.3" (33mm) X 0.13" (3.5mm)

**Weight:** Approx. 5 grams

**Connectors:** Antenna: UFL x2 (Main, Diversity)  
Data: 80 Pin SMT

## 1.0 Overview

## 1.3 Performance Specifications

Modulation	Multicast IPerf Throughput (Mbps)	Throughput @ Sensitivity (dBm)	Maximum Tx Power (dBm) +/- 1dB
<b>8 MHz Channel Bandwidth</b>			
BPSK_1/2	3	-96	30dBm
QPSK_1/2	6	-94	30dBm
QPSK_3/4	9	-91	30dBm
16QAM_1/2	12	-88	29dBm
16QAM_3/4	17	-85	29dBm
64QAM_2/3	23	-80	27dBm
64QAM_3/4	25	-78	27dBm
64QAM_5/6	28	-76	27dBm
<b>4 MHz Channel Bandwidth</b>			
BPSK_1/2	1.5	-99	30dBm
QPSK_1/2	3	-98	30dBm
QPSK_3/4	4.5	-96	30dBm
16QAM_1/2	6	-92	29dBm
16QAM_3/4	9	-88	29dBm
64QAM_2/3	11.5	-83	27dBm
64QAM_3/4	12.5	-82	27dBm
64QAM_5/6	14	-80	27dBm
<b>2 MHz Channel Bandwidth</b>			
BPSK_1/2	0.78	-101	30dBm
QPSK_1/2	1.5	-100	30dBm
QPSK_3/4	2.2	-97	30dBm
16QAM_1/2	2.9	-93	29dBm
16QAM_3/4	4.3	-90	29dBm
64QAM_2/3	5.5	-86	27dBm
64QAM_3/4	6	-84	27dBm
64QAM_5/6	6.5	-82	27dBm

*Table 1-2: pDDL Performance Specifications*

## 2.0 Quick Start

This QUICK START guide will walk you through the setup and configuration of a few basic applications. The QUICK START will rely on the *WebUI* for configuration. This walkthrough also assumes the units used are installed in microhard interface/development boards or custom boards that allow access to the LAN port. See the appropriate section for pin-outs.


Note that the units arrive from the factory with a Radio Configuration of 'Master' and the Local Network setting configured as 'Static' (IP Address **192.168.168.1**, Subnet Mask 255.255.255.0). DHCP is enabled by default, and will assign an IP to a connected device or computer with DHCP enabled.

## 2.1 Getting Started

- ✓ Connect an appropriate Antenna to the **ANTENNA** connector of the pDDL.
  - ✓ Connect and/or apply a suitable power source to the unit. Allow the unit to boot up fully, the CPU LED (Blue) should be on in a solid state
  - ✓ Connect A PC to the **LAN** port (eth0) of the pDDL, using an Ethernet Cable.



To reset to factory defaults, press and hold the CONFIG for 8 seconds with the pDDL powered up. The pDDL will reboot with factory default settings.

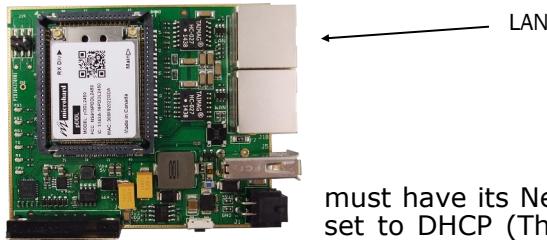


- ✓ The PC must have its Network Setting (TCP/IP Properties) set to DHCP (The modem will assign a IP address to you), or STATIC with an IP Address of (e.g.) 192.168.168.10 and a Subnet Mask of 255.255.255.0.
  - ✓ Open a Browser Window and enter the IP address 192.168.168.1 into the address bar.



The factory default network settings:

IP: 192.168.168.1  
Subnet: 255.255.255.0

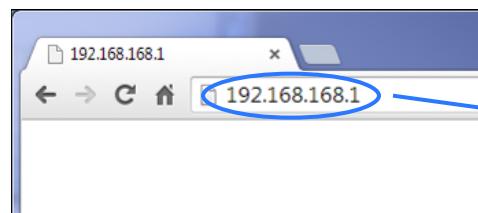




## 2.0 Quick Start

## 2.2 Simple Master and Slave - Auto (Using Defaults)

This **Quick Start** example requires (2) pDDL units, one will be configured as a Master (M), the second unit will be configured as a Slave/Remote (S). This example will use factory defaults to set up each unit so that a simple network will be established.



- ✓ Use [Section 2.1 Getting Started](#) to power up a pair of pDDL modules mounted in a Pico Ethernet Motherboard.
  - ✓ Master: Once the pDDL is fully booted (solid blue CPU LED), press and hold the CFG button. Once the CPU LED begins to flash, continue to hold for at least **10 seconds**, then release.

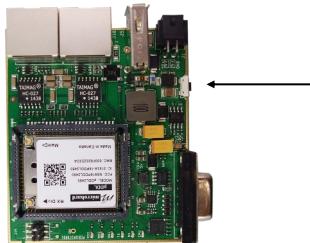

Press and hold ***CFG*** button for at least  
***10 seconds*** to reset to a default Master pDDL


Press and hold **CFG** button for **5 seconds**  
to reset to a default Slave pDDL

- ✓ The pDDL will then reset all settings to default values, RSSI LEDs (Green) and set the following settings that are required to automatically create a link with a slave:
    - IP Address: **192.168.168.1**, Operating Mode: **Master**
    - Network ID: **pDDL**, Channel Bandwidth: **8 MHz**
    - Channel-Frequency: **76 - 2477 MHz**
  - ✓ Slave: Ensure the pDDL is fully booted (solid blue CPU LED), then press and hold the CFG button. Once the CPU LED begins to flash, continue to hold for **5 seconds**, then release.
  - ✓ The pDDL will then reset all settings to default values, and set the following settings that are required to automatically create a link with a slave:
    - IP Address: **192.168.168.2**, Operating Mode: **Slave**
    - Network ID: **pDDL**, Channel Bandwidth: **8 MHz**
    - Channel-Frequency: **76 - 2477 MHz**
  - ✓ Once both units have finished changing settings (~60 seconds) a wireless link should automatically be established between them, this can be seen by observing the RSSI LEDs, they should be on solid, indicating a link (the more LEDs illuminated = stronger the link).

## 2.0 Quick Start

## 2.3 Simple Master and Slave – Manual Setup

This [Quick Start](#) example requires (2) pDDL units, one will be configured as a Master (M), the second unit will be configured as a Slave/Remote (S). This example will show the basic steps required to set up each unit so that a simple network will be established.

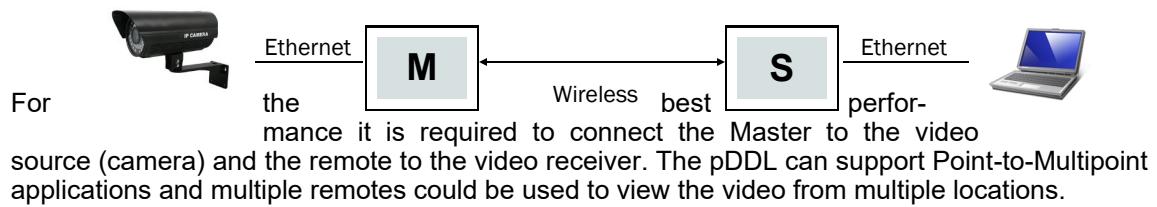

### **2.3.1 Configuring the Master**

- ✓ Use [Section 2.1 Getting Started](#) to connect, power up and log in to a pDDL unit.
  - ✓ Give the pDDL unit a unique IP address.



To connect to an existing network, contact your Network Administrator for valid network settings.

Select **Network** from the top/main navigation.

Select **LAN** from the submenu list.  
Select Edit on the LAN interface 1.

System	Network	Wireless	Firewall		
Status	LAN	WAN	Routes	Ports	Device
Network LAN Configuration					
LAN Interfaces Settings					
No.	Name	Static IP Address			
1	Ian	192.168.168.1			

Choose *Static IP* for the ***Connection Type***.

<b>LAN Configuration</b>	
Spanning Tree (STP)	<input type="button" value="Off ▾"/>
Connection Type	<input type="button" value="Static IP ▾"/>
IP Address	<input type="text" value="192.168.168.11"/>
Netmask	<input type="text" value="255.255.255.0"/>
Default Gateway	<input type="text"/>

Enter the following Network Information:

**IP Address:** 192.168.168.11  
**IP Subnet Mask:** 255.255.255.0

Click on the **Submit** button to write the changes to the pDDL. The **Cancel** button will revert back to last values saved to the unit.

Refer to [Section 5.2.2 LAN](#) for additional information.

**Once the IP Address is changed, you will need to type the new address into your browser to continue the configuration.**

## 2.0 Quick Start

### **2.3.1 Configuring the Master (Con't)**

- ✓ Configure the pDDL as a Master

Select **Wireless** from the top/main navigation, and then **RF** from the submenu list.

A screenshot of a software interface showing the 'Wireless' tab selected. The top navigation bar includes tabs for System, Network, Wireless (which is highlighted with a red oval), and Firewall. Below the tabs, there are two buttons: 'Status' and 'RF' (also highlighted with a red oval). The main content area displays the 'Wireless Configuration' page, which further includes an 'RF Configuration' section.

RF Configuration	
Radio	<input checked="" type="radio"/> On <input type="radio"/> Off
Compatibility Mode	pDDL ▾
Channel Bandwidth	8MHz ▾
Channel-Frequency	76 - 2477 MHz ▾
Tx Power	20 dbm ▾
Wireless Distance	3000
Rx Diversity(Reboot Required)	<input checked="" type="radio"/> Disable <input type="radio"/> Enable

In the RF Configuration ensure the **Compatibility Mode**, **Channel Bandwidth** and **Channel-Frequency** are set the same on each module.

*If a Antenna is not physically connected to the Rx Diversity connector, ensure it is disabled in this menu.*

For bench or close proximity testing it is best to use a lower power setting to prevent RF saturation. Select 20dBm from the **TX Power** setting.

Select **Master** from the **Operation Mode** dropdown box.

Set a **Network ID**, which will need to be the same on each unit in the network. This example uses **TEST\_ID**.

Operation Mode	Master ▾
TX Rate	Auto ▾
Extended Addressing	<input checked="" type="radio"/> On <input type="radio"/> Off
Network ID	TEST_ID
Encryption Type	AES-128 ▾
Encryption Key	1234567890
Show password	<input checked="" type="checkbox"/>



If any additional settings need to be changed, ensure they are also changed on the Slave.

System	Network	Wireless	Firewall	Serial	Diag				
Status	RF								
<b>Wireless Configuration</b>									
<b>RF Configuration</b>									
Radio	<input checked="" type="radio"/> On <input type="radio"/> Off								
Compatibility Mode	<input type="checkbox"/> pDDL	<input type="checkbox"/>							
Channel Bandwidth	<input type="checkbox"/> 8MHz	<input type="checkbox"/>							
Channel-Frequency	<input type="checkbox"/> 76 - 2477 MHz	<input type="checkbox"/>							
Tx Power	<input type="checkbox"/> 20 dbm	<input type="checkbox"/>							
Wireless Distance	<input type="checkbox"/> 3000	<input type="checkbox"/>			(m)				
Rx Diversity(Reboot Required)	<input checked="" type="radio"/> Disable	<input type="radio"/> Enable							
Channel Selection									
Operation Mode	<input type="checkbox"/> Master	<input type="checkbox"/>							
TX Rate	<input type="checkbox"/> Auto (recommended)	<input type="checkbox"/>							
Extended Addressing	<input checked="" type="radio"/> Off	<input type="radio"/>							
Network ID	<input type="checkbox"/> TEST_ID	<input type="checkbox"/>							
Encryption Type	<input type="checkbox"/> AES-128	<input type="checkbox"/>							
Encryption Key	*****								
Show password	<input type="checkbox"/>								

The remaining settings in the **Wireless** menu should be left as defaults for this exercise.

Refer to **Section 5.3 Wireless** for additional information.

Click on the **Submit** button to write the changes to the pDDL. The **Cancel** button will revert back to previously saved values

## 2.0 Quick Start

### **2.3.2 Configuring the Slave/Remote**

The following procedure describes the steps required to set up a pDDL unit as a Slave (S). A Slave provides a single wireless connection (i.e to an Master) and provides a wired connection to a PC or other devices.

- ✓ Use [Section 2.1 Getting Started](#) to connect, power up and log in to a second pDDL unit.
  - ✓ Give the pDDL unit an unique IP address.

Select **Network** from the top/main navigation.

Select **LAN** from the submenu list.  
Select Edit on the LAN interface 1.



To connect to an existing network, contact your Network Administrator for valid network settings.

LAN Configuration	
Spanning Tree (STP)	Off ▾
Connection Type	Static IP ▾
IP Address	192.168.168.12
Netmask	255.255.255.0
Default Gateway	192.168.168.11

Refer to [Section 5.2.2 LAN](#) for additional information.

System		Network		Wireless		Firewall			
Status	LAN	WAN	Routes	Ports	Device	Logs			
Network LAN Configuration									
LAN Interfaces Settings									
No.	Name	Static IP Address							
1	lan	192.168.168.1							

Choose *Static IP* for the ***Connection Type***.

Enter the following Network Information:

**IP Address:** 192.168.168.12  
**IP Subnet Mask:** 255.255.255.0  
**Default Gateway:** 192.168.168.11

Click on the **Submit** button to write the changes to the pDDL. The **Cancel** button will revert back to last values saved to the unit.

**Once the IP Address is changed, you will need to type the new address into your browser to continue the configuration.**

## 2.0 Quick Start

### **2.3.3 Configuring the Slave/Remote (Con't)**

- ✓ Configure the pDDL as a Slave

Select **Wireless** from the top/main navigation, and then **RF** from the submenu list.

A screenshot of a software interface showing the 'Wireless' tab selected. The top navigation bar includes tabs for System, Network, Wireless (which is highlighted with a red oval), and Firewall. Below the tabs, there are two main sections: 'Status' and 'RF' (Radio Frequency), with 'RF' also circled in red. Under the RF section, the 'Wireless Configuration' and 'RF Configuration' options are listed.

RF Configuration	
Radio	<input checked="" type="radio"/> On <input type="radio"/> Off
Compatibility Mode	pDDL ▾
Channel Bandwidth	8MHz ▾
Channel-Frequency	76 - 2477 MHz ▾
Tx Power	20 dbm ▾
Wireless Distance	3000
Rx Diversity(Reboot Required)	<input checked="" type="radio"/> Disable <input type="radio"/> Enable

In the RF Configuration ensure the **Compatibility Mode**, **Channel Bandwidth** and **Channel-Frequency** are set the same on each module.

*If a Antenna is not physically connected to the Rx Diversity connector, ensure it is disabled in this menu.*

For bench or close proximity testing it is best to use a lower power setting to prevent RF saturation. Select 20dBm from the **TX Power** setting.

Select **Slave** from the *Operating Mode* dropdown box.

Set a **Network ID**, which will need to be the same on each unit in the network. This example uses **TEST ID**.

Operation Mode	<input type="button" value="Slave ▾"/>
TX Rate	<input type="button" value="Auto (recommended) ▾"/>
Extended Addressing	<input checked="" type="radio"/> On <input type="radio"/> Off
Network ID	<input type="text" value="TEST_ID"/>
Encryption Type	<input type="button" value="AES-128 ▾"/>
Encryption Key	<input type="text" value="1234567890"/>
Show password	<input checked="" type="checkbox"/>



If any additional settings need to be changed, ensure they are also changed on the Slave.

System	Network	Wireless	Firewall	Serial	Diag				
Status	RF								
<b>Wireless Configuration</b>									
<b>RF Configuration</b>									
Radio	<input checked="" type="radio"/> On <input type="radio"/> Off	Compatibility Mode	<input type="button" value="pDDL"/>	Channel Bandwidth	<input type="button" value="8MHz"/>				
Channel Frequency	<input type="button" value="76 - 2477 MHz"/>	Tx Power	<input type="button" value="20 dbm"/>	Wireless Distance	<input type="button" value="3000"/> (m)				
Rx Diversity(Reboot Required)	<input checked="" type="radio"/> Disable <input type="radio"/> Enable	Channel Selection	<input type="button" value="Slave"/>	Operation Mode	<input type="button" value="Auto (recommended)"/>				
Extended Addressing	<input checked="" type="radio"/> On <input type="radio"/> Off	Network ID	<input type="button" value="TEST_ID"/>	Encryption Type	<input type="button" value="AES-128"/>				
Encryption Key	*****	Show password	<input type="checkbox"/>						

The remaining settings in the **Wireless** menu should be left as defaults for this exercise.

Refer to **Section 5.3 Wireless** for additional information.

Click on the **Submit** button to write the changes to the pDDL. The **Cancel** button will revert back to previously saved values

## 2.0 Quick Start

### **2.3.3 Testing the Connection**

- ✓ Visually check to see if the pDDL units are communicating.


The **RSSI** LED's represent signal strength, the more LED's that are illuminated, the stronger the signal. The **Wireless > Status** window also has a Connection Status section similar to that seen below:



RSSI LED's that are 'cycling' or 'scanning' indicate that the unit is searching for a signal.

RF Status							
General Status							
MAC Address	Operation Mode	Network ID	Compatibility Mode	Bandwidth	Frequency	Tx Power	Encryption Type
00:0F:92:FA:37:C5	Master	TEST_ID	pDDL	8 MHz	2.477 GHz	20 dBm	AES-128
Traffic Status							
Receive Bytes	Receive Packets		Transmit Bytes	Transmit Packets			
104.895KB	404		77.873KB	562			
Connection Info (1)							
MAC Address	Tx Mod	Rx Mod	SNR (dB)	RSSI (dBm)	Signal Level	RSSI Graph	
00:0F:92:FA:37:CE	64-QAM FEC 5/6	64-QAM FEC 5/6	29	-62			


- ✓ With a PC connected to the Master (M), type in the IP address of the Slave (S) into the URL address bar of your browser. You should be able to connect, log in and view the WebUI of the Slave via the wireless connection.

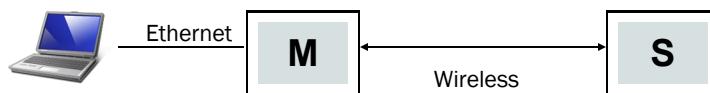

Open a browser and type in the address of the slave: **192.168.168.12**

Log into the unit.

The System Summary screen should be displayed

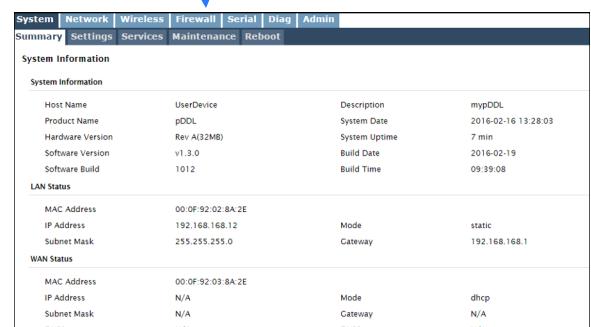

If any additional settings need to be changed, ensure they are also changed on all radios.

### **3.0 Hardware Features**


### **3.1 pDDL OEM Module**

The pDDL modems are available as OEM modules for complete integration into custom designs. The OEM module supplies all the required raw signals to allow the unit to be tightly integrated into applications to efficiently maximize space and power requirements. The Microhard development board can provide a convenient evaluation platform to test and design with the module. (Contact Microhard Systems for details)

Any pDDL module may be configured as a Master, or Slave(Remote). This versatility is very convenient from a 'sparing' perspective, as well for convenience in becoming familiar and proficient with using the module: if you are familiar with one unit, you will be familiar with all units.



*Image 3-1: pDDL Top View*

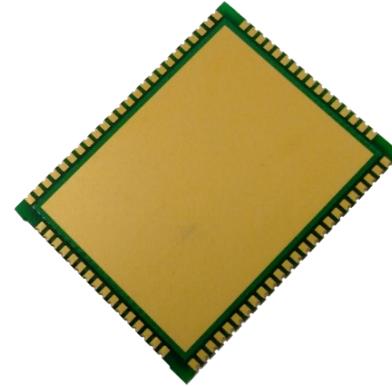


*Image 3-2: pDDL Bottom View*

### **3.0 Hardware Features**

### **3.1.1 Mechanical Drawings**

The pDDL OEM Modules have an extremely small form factor as seen *below*.

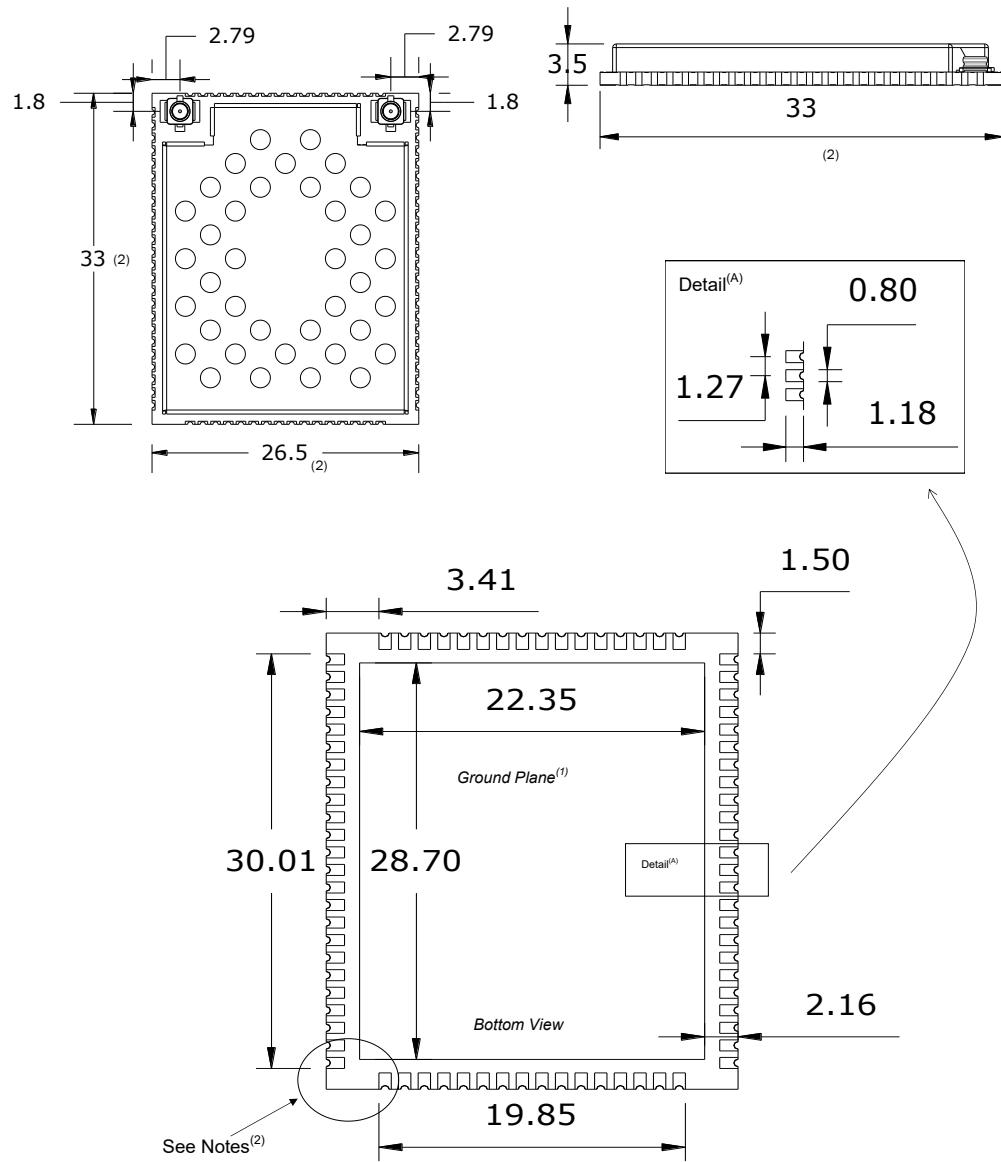


1. Ground plane must be connected to GND for required heat dissipation.
  2. Due to manufacturing methods additional PCB material may be present on the corners that cannot be removed. Designs should allow for a small tolerance of this additional material,  $\pm 0.25\text{mm}$

**Units: millimeters**

*Drawing 3-1: pDDL OEM Mechanical*

## 3.0 Hardware Features



### 3.1.2 Recommended Solder Mask (Pad Landing)

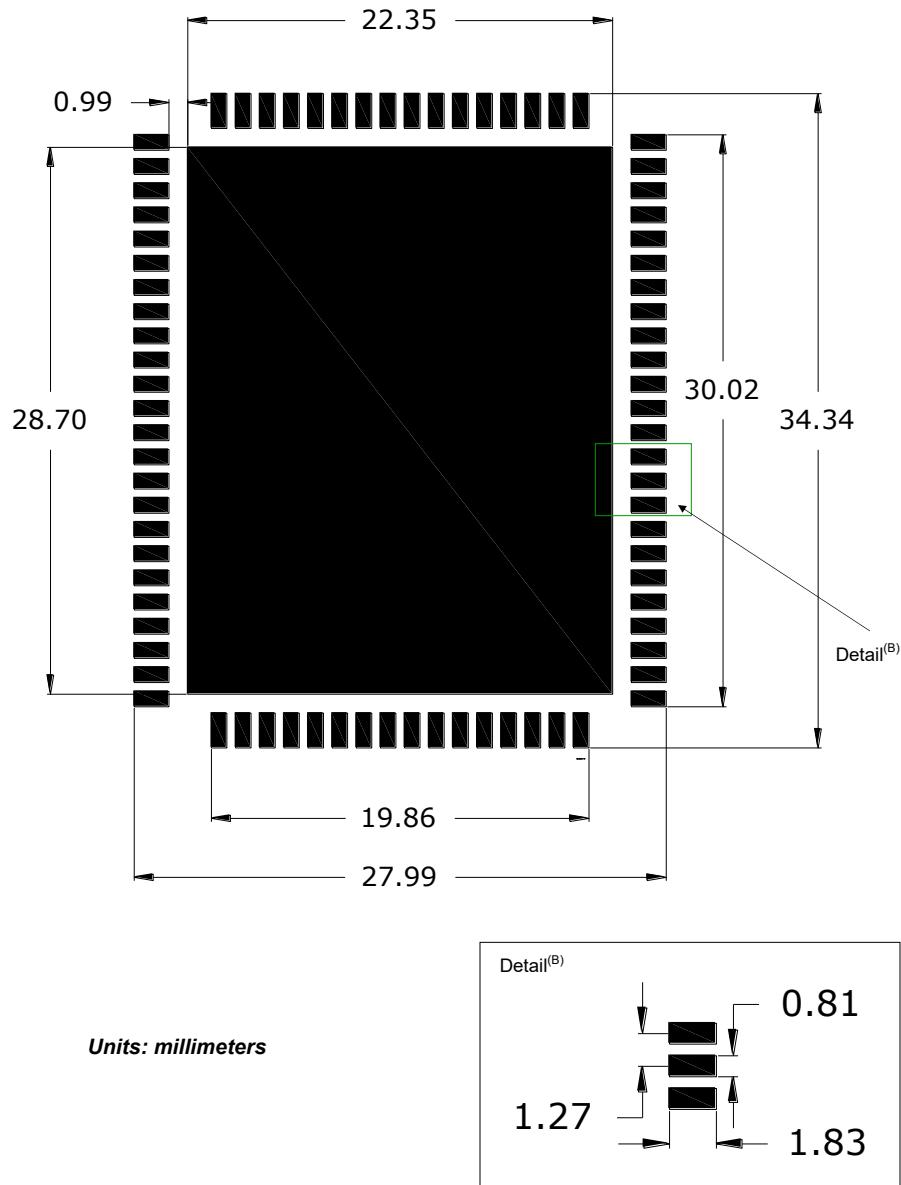

Drawing 3-2: pDDL Recommended Solder Mask

## 3.0 Hardware Features

### 3.1.3 Recommended Solder Paste Pattern

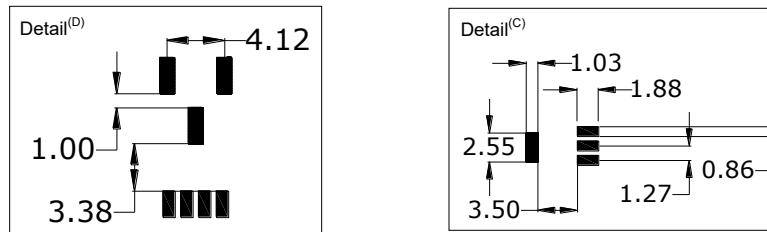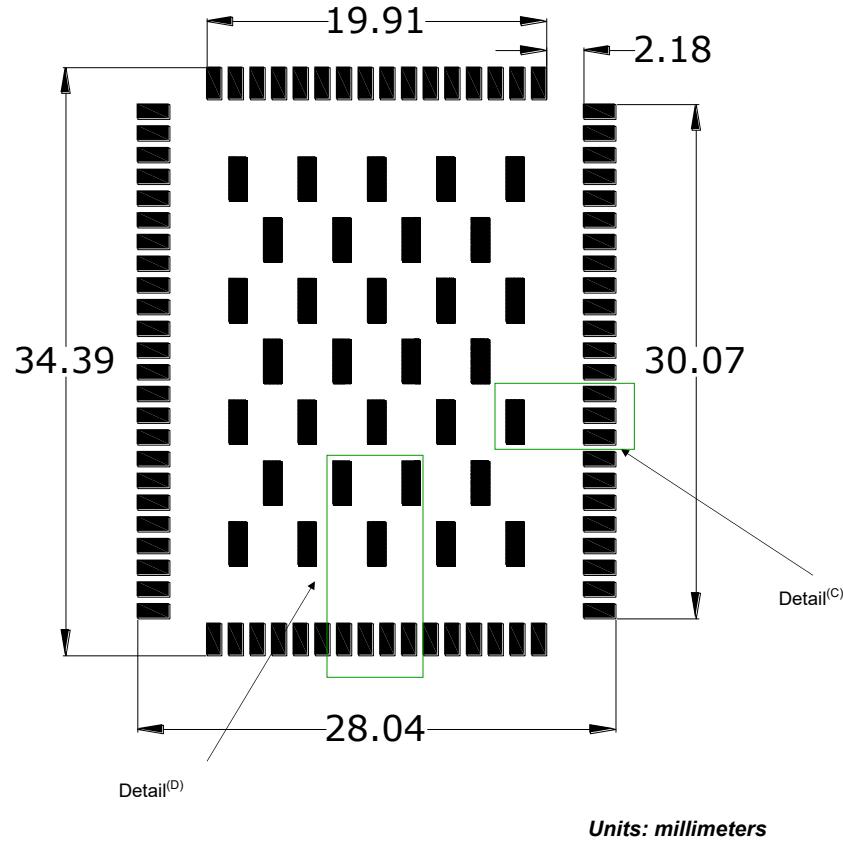

Drawing 3-3: pDDL Recommended Solder Paste

### 3.1.4 OEM Connectors

#### Antenna


All pDDL OEM Modules use an UFL connector for the antenna connection.

#### Data

The interface to the pDDL OEM module is a tight integration using 80 pad SMT connections.

## 3.0 Hardware Features

### **3.1.5 SMT Temperature Profile**

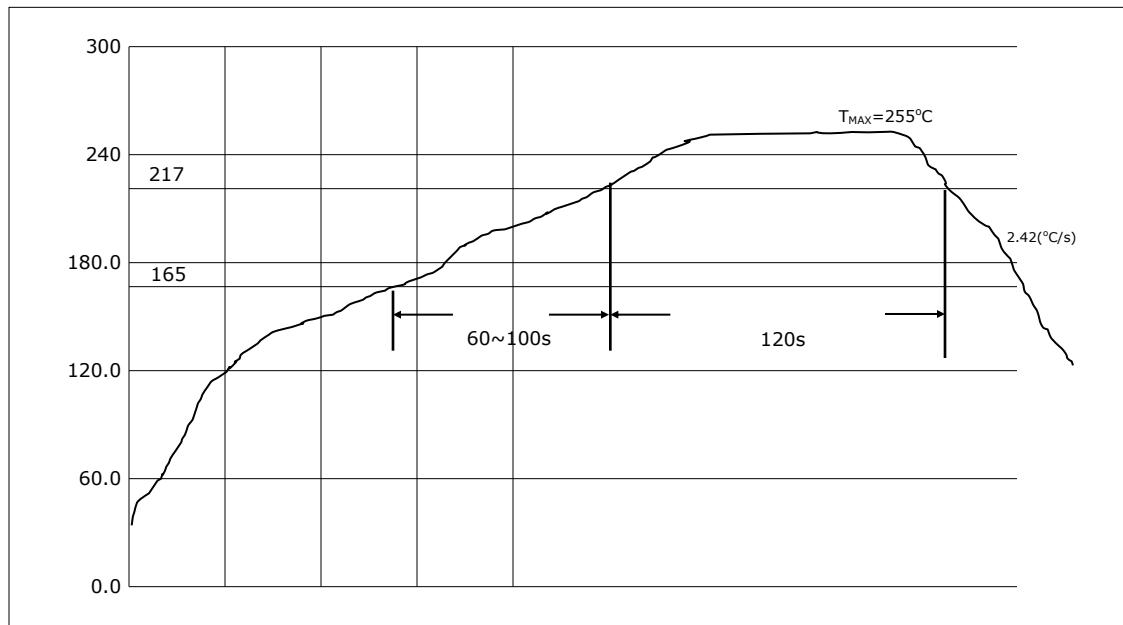

*Drawing 3-4: pDDL Reflow Profile*

Temperature Zone	Time	Parameter
Preheat zone: (40°C - 165°C)	-	Heating rate: 0.5°C/s-2°C/s
Soak Zone: (165°C - 217°C)	60 - 100s	-
Reflow zone: (>217°C)	120s	Peak reflow: 255°C
Cooling zone	Cooling rate: 2°C/s ≤ Slope ≤ 5°C/s	

Table 3-1: *pPDL Reflow Parameters*

Zone	Temperature (°C)
1	120
2	140
3	160
4	180
5	215
6	255
7	255
8	255
9	250
10	130

Table 3-2: *pDDL Oven Temperature Profile*


### **3.1.6 SMT Baking Instructions (MSL)**

The pDDL OEM modules must be baked before mounting, the following baking instruction should be followed for the best results:

- a) Minimum of 8 to 12 hours at 125°C +/- 5°C for high-temperature device containers.
  - b) Unused modules should be stored at ≤ 10% RH

## 3.0 Hardware Features

### 3.1.7 Pico OEM Pin Descriptions

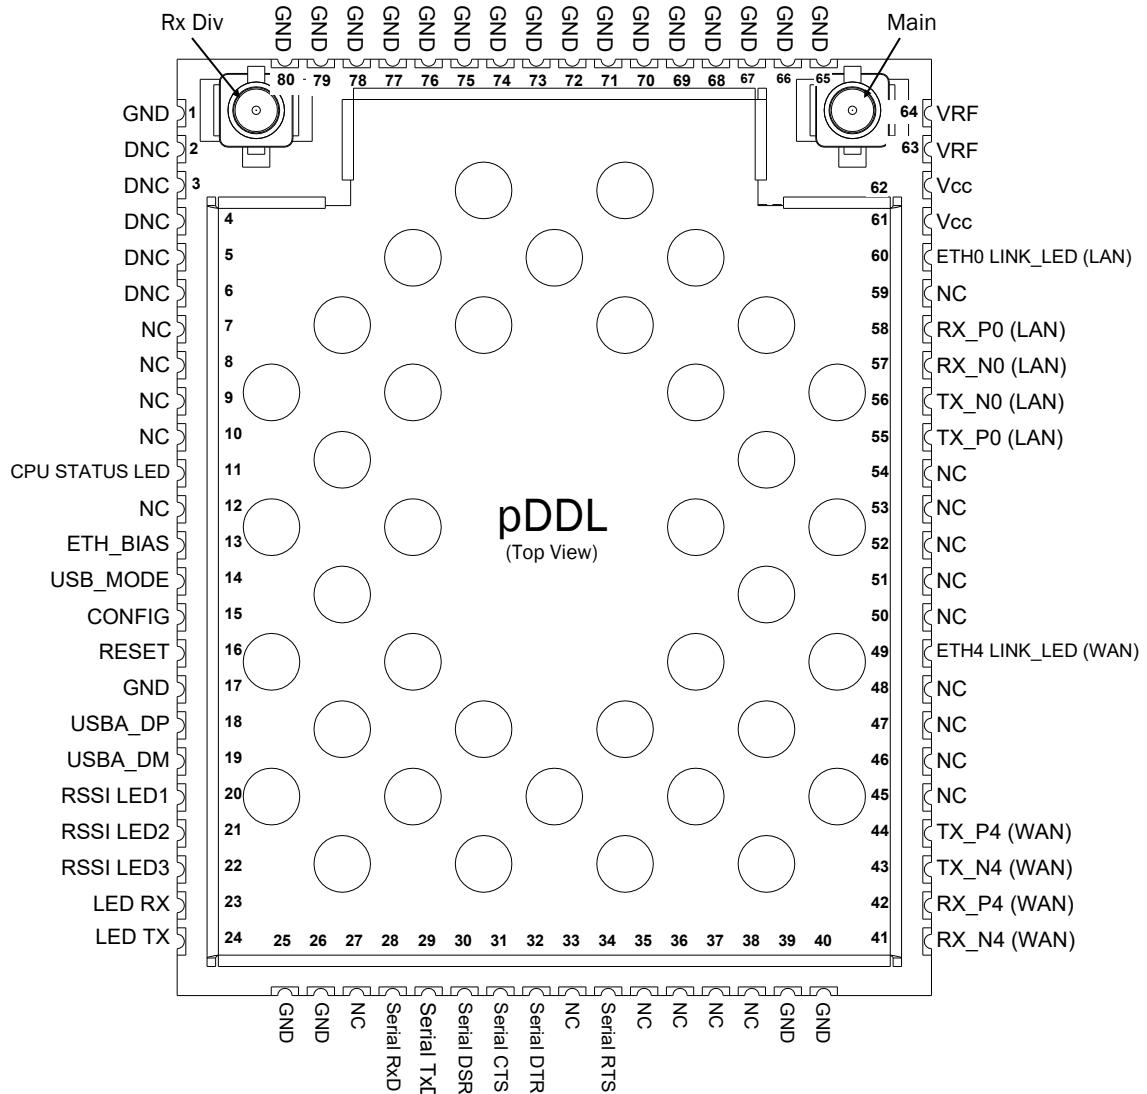

Drawing 3-5: pDDL 80-pin OEM Connection Info

Inputs and outputs are 3.3V nominal (3.0V min — 3.6V max) unless otherwise specified.

The above drawing depicts a top view of the pDDL OEM Module. A full description of the connections and function of each pin is provided on the pages that follow.

## 3.0 Hardware Features



**Caution:** During power up or reset, output pins from the Pico are in an unknown state. It is advised to use pull up or pull down resistors as appropriate.

Pin Name	No.	Description	Dir
GND	1, 17, 25-26, 39-40, 65-80	Ground reference for logic, radio, and I/O pins.	
DNC	2, 3, 4, 5, 6	Reserved for factory use only.	
NC	7, 8, 9, 10, 12, 27, 33, 35, 36, 37, 38, 45, 46, 47, 48, 50, 51, 52, 53, 54, 59	*Currently Not Supported. For Future Expansion*	
CPU STATUS LED	11	Active high output indicates CPU/Module status. Active high, cannot drive LED directly. Requires current limiting resistor. 8mA maximum.	O
ETH_BIAS	13	Bias Voltage to Ethernet PHY transformer	
USB_MODE	14	Indicates if the interface is in host/device mode. 0 = Device (Connected through 1K resistor to GND), 1 = Host.	I
Config	15	Active low. In normal mode, pull it low and hold for more than 8 seconds will reset the system to default settings. Pull it low upon power up will put the module into recovery mode.	I
RESET	16	Active low input will reset module	I
USBDP	18	USB D+ signal; carries USB data to and from the USB 2.0 PHY	
USBDM	19	USB D- signal; carries USB data to and from the USB 2.0 PHY	
LED_1 (RSSI1)	20	Receive Signal Strength Indicator 1. Active high, cannot drive LED directly. Requires current limiting resistor. 8mA maximum.	O
LED_2 (RSSI2)	21	Receive Signal Strength Indicator 2. Active high, cannot drive LED directly. Requires current limiting resistor. 8mA maximum.	O
LED_3 (RSSI3)	22	Receive Signal Strength Indicator 3. Active high, cannot drive LED directly. Requires current limiting resistor. 8mA maximum.	O
LED_RX	23	Active high output indicates receive and synchronization status. Active high, cannot drive LED directly. Requires current limiting resistor. 8mA maximum.	O
LED_TX	24	Active high output indicates module is transmitting data over the RF channel. Active high, cannot drive LED directly. Requires current limiting resistor. 8mA maximum.	O
Serial RxD	28	Receive Data. Logic level input into the modem. It is recommended to wire this pin out through a zero ohm resister to a header and jumper block for external access to the serial port for modem recovery procedures.	I
Serial TxD	29	Transmit Data. Logic level Output from the modem. It is recommended to wire this pin out through a zero ohm resister to a header and jumper block for external access to the serial port for modem recovery procedures.	O
Serial DSR	30	Data Set Ready. Active low output. <i>The DSR line set high enables the transmitter of the RS485 driver.</i>	O
Serial CTS	31	Clear To Send. Active low output.	O
Serial DTR	32	Data Terminal Ready. Active Low output.	O
Serial RTS	34	Request To Send. Active low input.	I

Table 3-3: pDDL Pin Description

All serial communications signals are logic level (0 and 3.3V). DO NOT connect RS-232 level (+12, -12VDC) signals to these lines without shifting the signals to logic levels.

## 3.0 Hardware Features



**Caution:** During power up or reset, output pins from the Pico are in an unknown state. It is advised to use pull up or pull down resistors as appropriate.

Pin Name	No.	Description	Dir
RX_N4	41	Ethernet Port 4 (WAN) Receive Pair	
RX_P4	42		
TX_N4	43	Ethernet Port 4 (WAN) Transmit Pair	
TX_P4	44		
ETH4 LINK_LED	49	Active high output indicates Ethernet port 4 link status. Active high, cannot drive LED directly. Requires current limiting resistor. 8mA maximum.	O
TX_P0	55	Ethernet Port 0 (LAN) Transmit Pair	
TX_N0	56		
RX_N0	57	Ethernet Port 0 (LAN) Receive Pair	
RX_P0	58		
ETH0 LINK_LED	60	Active high output indicates Ethernet port 0 link status. Active high, cannot drive LED directly. Requires current limiting resistor. 8mA maximum.	O
Vdd	61,62	Positive voltage supply voltage for the digital section of the module (3.3V).	I
Vpa	63,64	Positive voltage supply voltage for the radio module (3.3-5V).	I


*Table 3-3: pDDL Pin Description (continued)*

All serial communications signals are logic level (0 and 3.3V). DO NOT connect RS-232 level (+12, -12VDC) signals to these lines without shifting the signals to logic levels.

See **Appendix D: Sample Interface Schematic** for a sample schematic that can be used to interface to the pDDL OEM module.

### **3.1.8 USB Device Mode**

The pDDL can be set to operate as a USB Device. When set as a USB device, Microhard Composite Drivers can be installed on a USB Host to provide Ethernet and Serial functionality to the USB port on the pDDL. To enable USB Device mode, Pin 14 must be connect to GND through a 1K resistor as shown below:

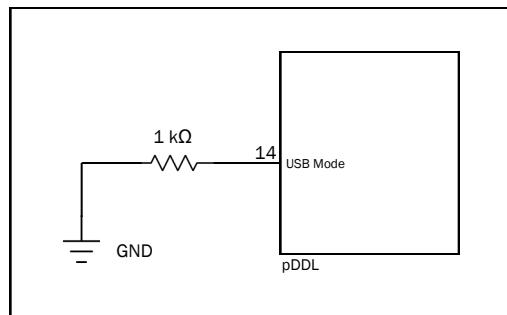

*Drawing 3-6: pDDL USB Device Mode*

## 3.0 Hardware Features

### **3.2 pDDL2450 Enclosed**

The pDDL2450-ENC is a robust and compact enclosed unit that provides easy access to all the standard interfaces for connecting and working with the pDDL2450. The enclosed model is ideal for base stations and applications where a full integration is not required and the modem can be used right out of the box with only software configuration required.

The pDDL2450-ENC includes the following standard indicators and interfaces:


- 2x RJ45 Ethernet Ports
  - DE9 Female Serial Port Interface
  - USB Type A (Future)
  - Micro-AB USB (Console - Future)
  - Power / IO Connector (7-30 VDC)
  - Power / CPU Status LED (Blue)
  - Wireless Activity (Tx/Rx) LED's (Red/Green)
  - RSSI (x3) LED's (Green)
  - RS485 LED (Blue)
  - Config Button (Reset/Recovery Operations)
  - 3x RP-SMA Female Antenna (Main, Diversity, Aux)



*Image 3-3: pDDL2450-ENC*

## 3.0 Hardware Features

### 3.2.1 pDDL2450-ENC Mechanical Drawings

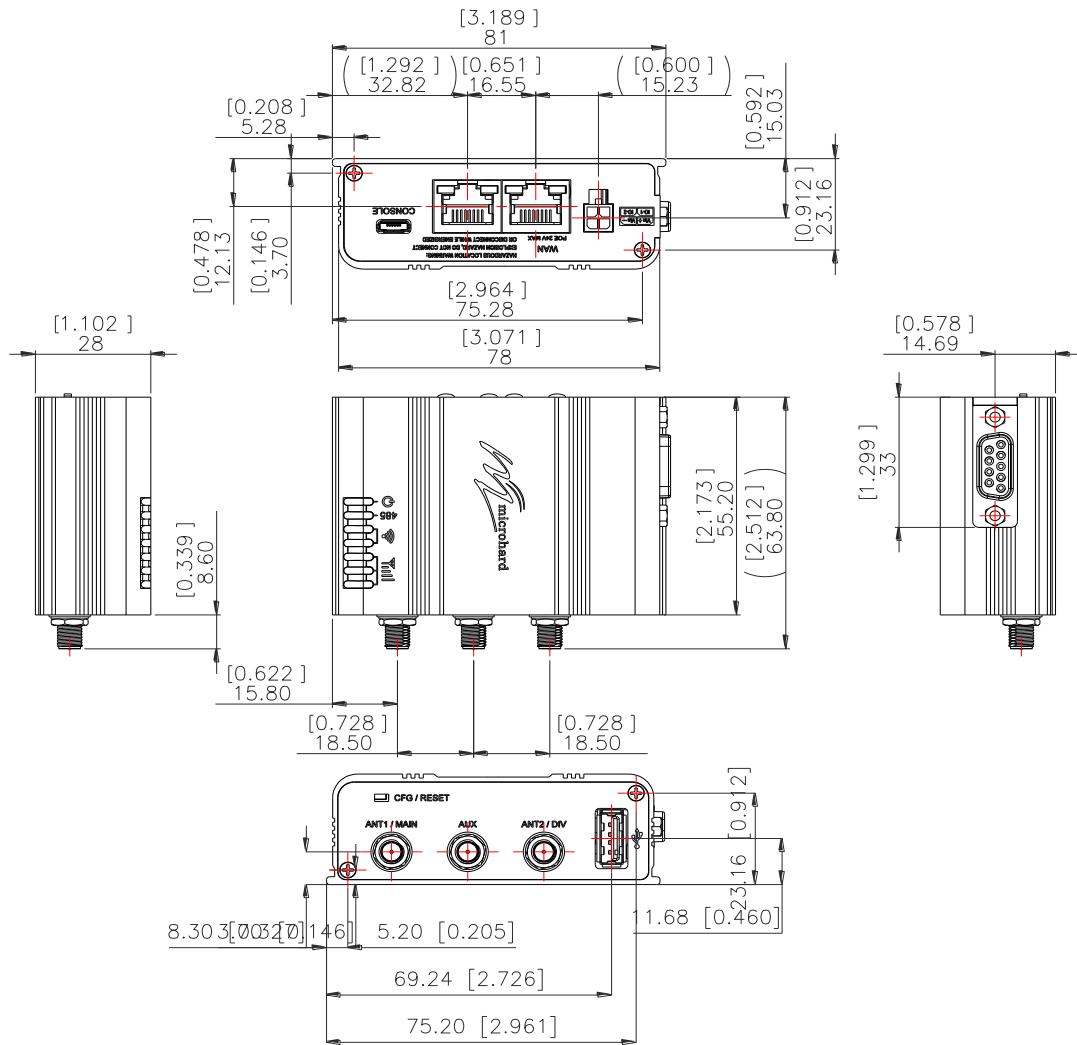

Drawing 3-7: pDDL2450-ENC Mechanical

## 3.0 Hardware Features

### **3.2.2 pDDL2450-ENC Connectors & Indicators**

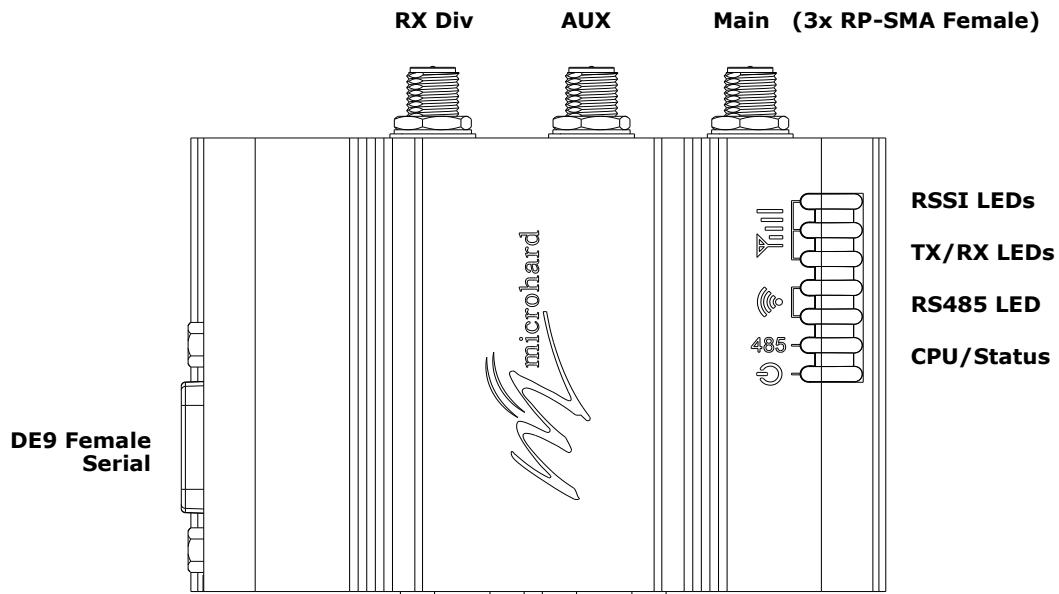


Figure 3-1: pDDL2450-ENC Top View

### Antennas:

The pDDL2450-ENC module uses a RP-SMA Female connectors. ANT1/Main and ANT2/Div are marked on the Enclosure. AUX is not used at this time. (Future Development).

### **RSSI LEDs (Green):**

The RSSI LEDs indicate the Received Signal Strength on the Wireless Link. On a Master it will indicate an average RSSI value based on connected units. On a Slave the RSSI LEDs will represent the signal strength between the Slave and the Master it is connected to. (The more LEDs illuminated, the stronger the signal)

#### TX/RX LEDs (Red/Green):

The TX/RX LEDs indicate wireless traffic to/from the pDDL module.

## **RS485 LED (Blue):**

The RS485 LED indicates that the serial port has been configured as a RS485 port.

## CPU>Status (Blue):

The CPU/Status LED indicates that power has been applied to the module. A Solid LED indicates normal operation, while flashing indicates boot or firmware upgrade status.

## 3.0 Hardware Features

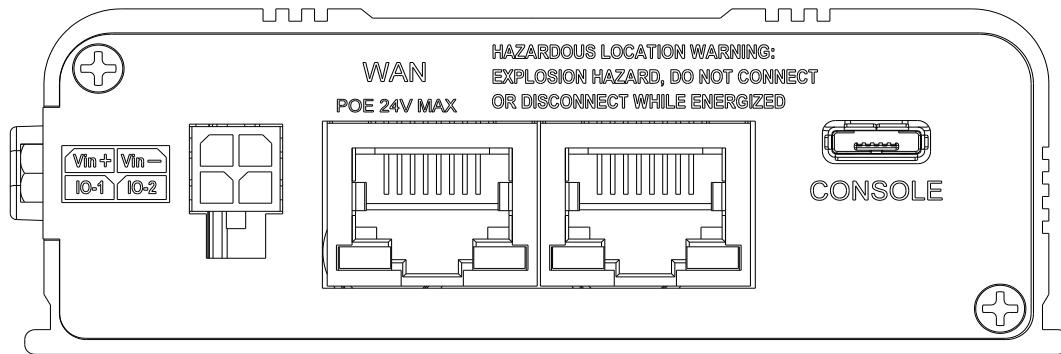


Figure 3-2: pDDL2450-ENC Back View

### Ethernet LAN:

The Ethernet LAN port is a standard RJ45 port to connect local network devices. The default IP address for this port is 192.168.168.1.

### Ethernet WAN:

The Ethernet WAN port is a standard RJ45 Port that can be used as a separate WAN port for Router functions, or can be bridged (via software) to the LAN as a additional switch port for local devices.

The pDDL2450-ENC can be powered using **Passive PoE from 12—30 VDC Maximum** on the WAN port using a PoE injector that meets the following requirements:

Ethernet RJ45 Connector Pin Number								
Source Voltage	1	2	3	4	5	6	7	8
12 - 30 Vdc	Data	Data	Data	DC+	DC+	Data	DC-	DC-

Table 3-2: Ethernet (WAN) PoE Connections


### Power:

The pDDL2450-ENC can be powered using an input voltage in the 7-30 VDC range.


### Power

### Console:

The console port is a Micro-AB USB port that uses a generic FTDI driver as a USB/Serial Interface. When a cable is connected to this port from a PC the FTDI driver should automatically be installed. (Future Development - Coming Soon)

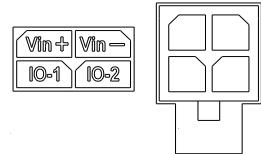

### **3.0 Hardware Features**

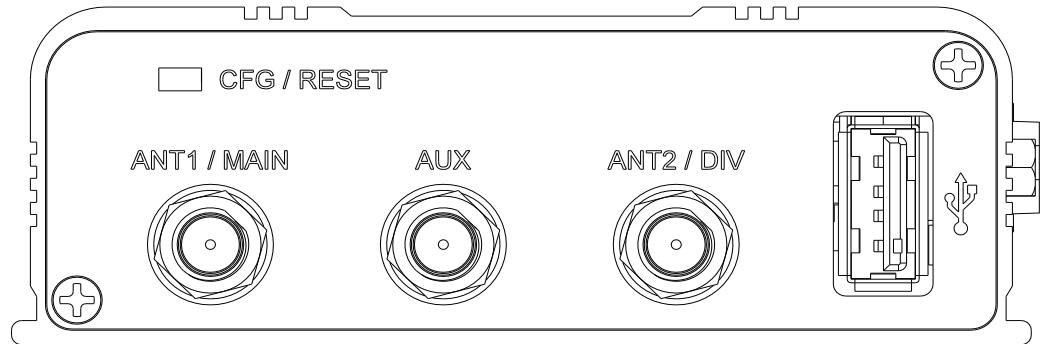

*Figure 3-3: pDDL2450-ENC End View*

#### **CFG/RESET Button:**

The Config button on the pDDL can be used to either reset the modem into its factory default configuration, or it can be used to perform a firmware recovery procedure.

**Factory Default Settings:** While power is applied and the pDDL is in an operational state, press and hold the **Config** Button for more than 10 seconds to reset to a factory default Master, alternatively hold the button for 5 seconds for a factory default Slave.

Firmware Recovery: To load the firmware on the unit it is recommended to use the normal WebUI to perform a firmware update (Maintenance). In the event that the firmware cannot be loaded using the standard WebUI (non responsive unit), pressing and holding the *Config* Button while powering-up the module will force the pDDL into a firmware recovery mode. There are 3 main modes, HTTP, TFTP and Master Reset. The table below shows the time required to hold the *Config* button while power is applied:

0 to 5 seconds HTTP Recovery	5 to 10 seconds TFTP Recovery	10 to 15 seconds Master Reset	15+ seconds No Effect
---------------------------------	----------------------------------	----------------------------------	--------------------------

HTTP\_Recovery: Set an IP on a PC to 192.168.1.1. Open a web browser and Navigate to 192.168.1.39. This will open a simple webpage which will allow a firmware file to be loaded.

**TFTP Recovery:** Set an IP on a PC to 192.168.1.1. Use a TFTP session to push the firmware file to the modems recovery IP of 192.168.1.39. See Appendix for Firmware Recovery Procedure.

**Master Reset:** Runs Master Reset, file system is erased.

**DE9 Serial:**

The RS232/485 Serial data port can be used to communicate with Serial devices or it can be configured to operate as a console port. See Table 3-3 for pin assignments.

RS232/RS485 modes are selected through the serial port configuration in the WebUI. The LED on the pDDL2450-ENC will illuminate when in RS485 mode.

## **USB (Type A, 2.0):**

## (Future Development)

Pin No.	RS232	RS485 Full-Dup	RS485 Half-Dup
1	DCD		
2	RXD	TX-	Data-
3	TXD	RX+	
4	DTR		
5	Ground		
6	DSR		
7	RTS	RX-	
8	CTS	TX+	Data+
9	N/C		

*Table 3-3: DE9 Data Pin Assignment*

## 3.0 Hardware Features

### 3.3 pDDL Development Board

The pDDL Development board provides a platform in which to test and evaluate the operation of the pDDL without the need to design a custom interface PCB right from the start. The pDDL includes a socket to insert the pDDL and provides standard interfaces/indicators for:


- Ethernet
- RS232 Serial Port
- USB Port (Type A)
- Power (9-30 VDC)
- CPU Status LED
- Tx/Rx LED's
- RSSI (x3) LED's
- Config Button (Reset/Recovery Operations)
- Vpa (3/5V) Jumper Block



Image 3-3: pDDL Development Board

## 3.0 Hardware Features


### 3.3.1 pDDL Development Board Mechanical Drawings

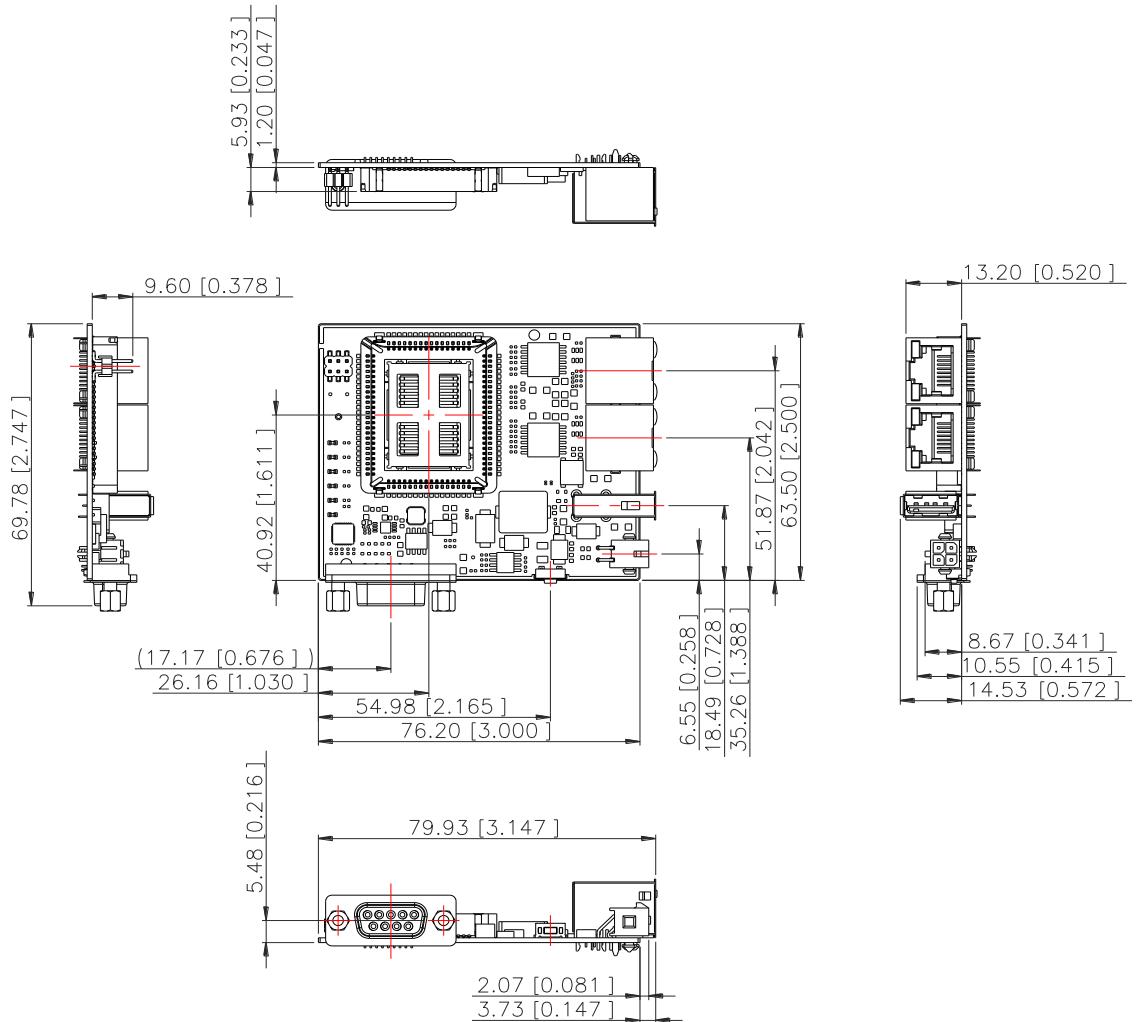

Drawing 3-8: pDDL Development Board Mechanical Drawings

### **3.0 Hardware Features**

### **3.3.2 pDDL Development Board Connectors & Indicators**

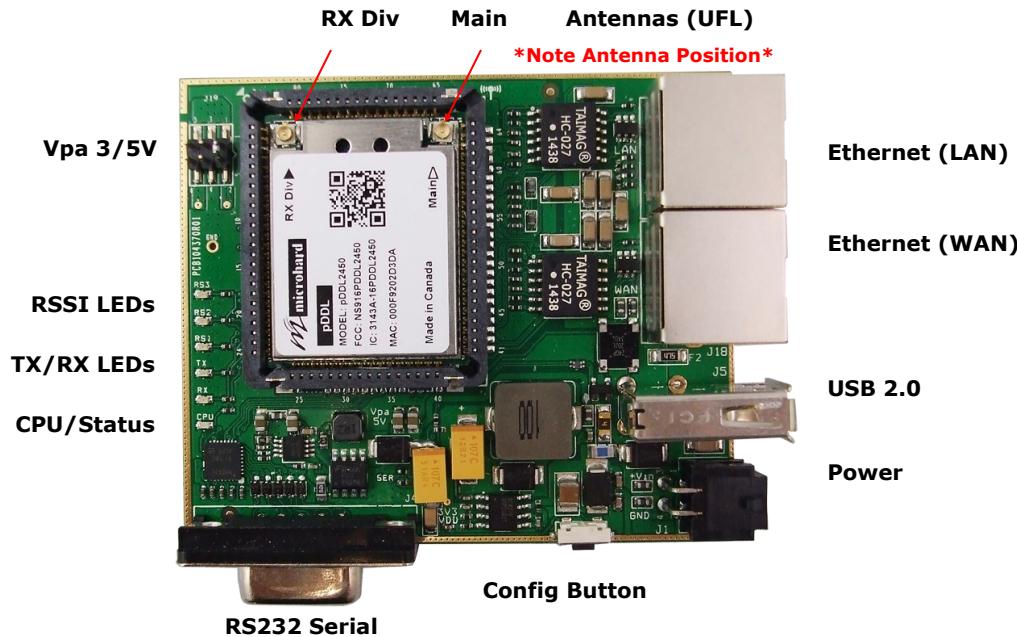

*Figure 3-4: pDDL Development Board*

### Antennas:

The pDDL OEM module uses a UFL connectors. Ensure proper orientation as seen above to prevent damage to the pDDL module and to the development board. Main and Div. are marked on the module.

## **Ethernet LAN:**

The Ethernet LAN port is a standard RJ45 port to connect local network devices. The default IP address for this port is 192.168.168.1.

## **Ethernet WAN:**

The Ethernet WAN port is a standard RJ45 Port that can be used as a separate WAN port for Router functions, or can be bridged (via software) to the LAN as a additional switch port for local devices.


The pDDL development board can be powered using ***Passive PoE from 12—30 VDC Maximum*** on the WAN port using a PoE injector that meets the following requirements:

Ethernet RJ45 Connector Pin Number								
Source Voltage	1	2	3	4	5	6	7	8
12 - 30 Vdc	Data	Data	Data	DC+	DC+	Data	DC-	DC-

*Table 3-2: Ethernet (WAN) PoE Connections*

Power:

The pDDL development board can be powered using an input voltage in the 9-30 VDC range.

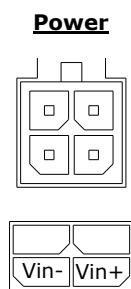

### **3.0 Hardware Features**

### **Config Button:**

The Config button on the pDDL can be used to either reset the modem into its factory default configuration, or it can be used to perform a firmware recovery procedure.

Factory Default Settings: While power is applied and the pDDL in an operational state, press and hold the Config Button for more than 10 seconds to reset to a factory default Master, alternatively hold the button for 5 seconds for a factory default Slave.

Firmware Recovery: To load the firmware on the unit it is recommended to use the normal WebUI to perform a firmware update (Maintenance). In the event that the firmware cannot be loaded using the standard WebUI (non responsive unit), pressing and holding the *Config* Button while powering-up the module will force the pDDL into a firmware recovery mode. There are 3 main modes, HTTP, TFTP and Master Reset. The table below shows the time required to hold the *Config* button while power is applied:

0 to 5 seconds HTTP Recovery	5 to 10 seconds TFTP Recovery	10 to 15 seconds Master Reset	15+ seconds No Effect
---------------------------------	----------------------------------	----------------------------------	--------------------------

HTTP\_Recovery: Set an IP on a PC to 192.168.1.1. Open a web browser and Navigate to 192.168.1.39. This will open a simple webpage which will allow a firmware file to be loaded.

**TFTP Recovery:** Set an IP on a PC to 192.168.1.1. Use a TFTP session to push the firmware file to the modems recovery IP of 192.168.1.39. See Appendix for Firmware Recovery Procedure.

**Master Reset:** Runs Master Reset, file system is erased.

## **RS232 Serial:**

The RS232 Serial data port can be used to communicate with RS232 Serial devices or it can be configured to operate as a console port. See Table 3-3 for pin assignments.

### CPU>Status:

The CPU/Status LED indicates that power has been applied to the module. A Solid LED indicates normal operation, while flashing indicates boot or firmware upgrade status.

### **TX/RX LEDs:**

The TX/RX LEDs indication wireless traffic to/from the pDDL module.

## RSSI LEDs:

The RSSI LEDs indicate the Received Signal Strength on the Wireless Link. On a Master it will indicate an average RSSI value based on connected units. On a Slave the RSSI LEDs will represent the signal strength between the Slave and the Master it is connected to. (The more LEDs illuminated, the stronger the signal)

Table 3-3: Data DE9 RS232 Pin Assignment

Vpa Jumper

3.3VDC

5VDC

Vpa 3/5V:

The Vpa jumper allows the radio inside the pDDL to be connected to 3.3 or 5VDC. For the pDDL to operate at maximum output Transmit (Tx) power of 1 Watt (30dBm), the Vpa jumper must be set to 5VDC (Pin 1+2).

## 4.0 Configuration

## 4.0 Web User Interface

# microhard

System Network Wireless Firewall Serial Diag Admin

Summary Settings Services Maintenance Reboot

## System Information

### System Information

Host Name	UserDevice
Product Name	pDDL
Hardware Version	Rev A
Software Version	v1.3.0
Software Build	1021-3

### LAN Status

MAC Address	00:0F:92:02:AA:15
IP Address	192.168.168.1
Subnet Mask	255.255.255.0

### WAN Status

MAC Address	00:0F:92:03:AA:15
IP Address	N/A
Subnet Mask	N/A
Primary DNS	N/A

### RF Status

#### Wireless Interfaces

##### RF Status

###### General Status

MAC Address	Operation Mode	Network ID	Compatibility Mode	Bandwidth	Frequency	Tx Power	Encryption Type
00:0F:92:FA:38:22 Master	pDDL	pDDL	8 MHz	2477	20 dBm	AES-128	

###### Traffic Status

Receive Bytes	Receive Packets	Transmit Bytes	Transmit Packets
0B	0	304.482KB	2128

###### Connection Info (0)

MAC Address	Tx Modulation	Rx Modulation	SNR (dB)	RSSI (dBm)	Signal Level	RSSI Graph
00:0F:92:FA:38:22 Master	pDDL	pDDL	8 MHz	2477	20 dBm	AES-128

###### General Status

MAC Address	Operation Mode	Network ID	Mode	Bandwidth	Frequency	Tx Power	Encryption Type
00:0F:92:FA:38:22 Master	pDDL	pDDL	pDDL	8 MHz	2477	20 dBm	AES-128

###### Traffic Status

Receive Bytes	Receive Packets	Transmit Bytes	Transmit Packets
0B	0	303.491KB	2124

Copyright © 2014-2016 Microhard. pDDL

Stop Refreshing Interval: 20(in seconds)



The factory default network settings:

**IP: 192.168.168.1  
Subnet: 255.255.255.0**

- Initial configuration of an pDDL using the Web User (Browser) Interface (Web UI) method involves the following steps:

  - configure a static IP Address on your PC to match the default subnet **or** if your PC is configured for DHCP, simply connect a PC to the LAN port of the pDDL and it will be assigned a IP address automatically.
  - connect the pDDL LAN port to PC NIC card using an Ethernet cable
  - apply power to the pDDL and wait approximately 60 seconds for the system to load
  - open a web browser and enter the factory default IP address (**192.168.168.1**) of the unit:
  - logon window appears; log on using default Username: **admin** Password: **admin**
  - use the web browser based user interface to configure the pDDL as required.
  - refer to **Section 2.0: Quick Start** for step by step instructions.

In this section, all aspects of the Web Browser Interface, presented menus, and available configuration options will be discussed.

## 4.0 Configuration

## 4.0.1 Logon Window

Upon successfully accessing the pDDL using a Web Browser, the Logon window will appear.



*Image 4-0-2: Logon Window*



For security, do not allow the web browser to remember the User Name or Password.

The factory default User Name is: **admin**  
The default password is: **admin**

Note that the password is case sensitive. It may be changed (discussed further along in this section), but once changed, if forgotten, may not be recovered.



It is advisable to change the login Password. Do not FORGET the new password as it cannot be recovered.

The ‘Remember my password’ checkbox may be selected for purposes of convenience, however it is recommended to ensure it is deselected - particularly once the unit is deployed in the field - for one primary reason: security.

When entered, the password appears as 'dots' as shown in the image below. This display format prohibits others from viewing the password.

The 'Remember my password' checkbox may be selected for purposes of convenience, however it is recommended to ensure it is deselected - particularly once the unit is deployed in the field - for one



*Image 4-0-3: Logon Window : Password Entry*

*After successfully logging into the Pico DDL for the first time, you will be forced, and prompted to change the admin password.*



## 4.0 Configuration

### 4.1 System

The main category tabs located at the top of the navigation bar separate the configuration of the pDDL into different groups based on function. The System Tab contains the following submenus:

- Summary - Status summary of entire radio including network settings, version information, and radio connection status.
- Settings - Host Name, System Log Settings, System Time/Date.
- Services - Enable/Disable and configure port numbers for SSH, Telnet, HTTP and HTTPS services.
- Maintenance - Remote firmware Upgrades, reset to defaults, configuration backup and restore.
- Reboot - Remotely reboot the system.

#### 4.1.1 System > Summary

The System Summary screen is displayed immediately after initial login, showing a summary and status of all the functions of the pDDL in a single display. This information includes System Status, LAN/WAN network information, version info, Radio Status etc.

The screenshot shows the 'System' tab selected in the navigation bar. Under the 'Summary' sub-tab, the 'System Information' section displays the following details:

Host Name	UserDevice	Description	myDDL
Product Name	pDDL	System Date	2017-02-10 14:29:06
Hardware Version	Rev A	System Uptime	10 min
Software Version	v1.3.0	Build Date	2017-02-10
Software Build	1026	Build Time	14:19:02

The 'LAN Status' section shows:

MAC Address	00:0F:92:02:AB:22	Connection Type	static
IP Address	192.168.168.1	Gateway	N/A
Subnet Mask	255.255.255.0		

The 'RF Status' section shows:

General Status	MAC Address	Operation Mode	Network ID	Compatibility Mode	Bandwidth	Frequency	Tx Power	Encryption Type
00:0F:92:FA:38:30 Master	pDDL	pDDL	4 MHz	2441	20 dBm	AES-128		

The 'Traffic Status' section shows:

Receive Bytes	0B	Receive Packets	0	Transmit Bytes	22.905KB	Transmit Packets	155
---------------	----	-----------------	---	----------------	----------	------------------	-----

At the bottom right of the window, there is a button labeled 'Stop Refreshing | Interval: 20(in seconds)'.

Image 4-1-1: System Summary Window



## 4.0 Configuration

### 4.1.2 System > Settings

#### System Settings

Options available in the System Settings menu allow for the configuration of the Host Name, Description, Console Timeout, System Log server and System Time settings.

System	Network	Wireless	Firewall	Serial	Diag	Admin	
Summary	Settings	Services	Maintenance	Reboot			
<b>System Settings</b>							
<b>System Settings</b>							
Host Name	UserDevice						
Description	mypDDL						
Console Timeout (s)	120	[30 ~ 65535] 0-Disable					
CFG Reset to Default Button	<input checked="" type="radio"/> Enable <input type="radio"/> Disable						
System Log Server IP/Name	0.0.0.0		0.0.0.0-Disable				
System Log Server Port	514		Default: 514				
<b>Time Settings</b>							
Current Date(yyyy-mm-dd)	2014-01-01						
Current Time(hh:mm:ss)	22:24:43						
Date and Time Setting Mode	<input type="radio"/> Local Time <input checked="" type="radio"/> NTP						
Timezone	Mountain Time						
POSIX TZ String	MST7MDT,M3.2.0,M11.1.0						
NTP Server IP/Name	pool.ntp.org						
NTP Server Port	123						
NTP Client Interval (seconds)	0 [0 ~ 65535] 0-Disable						

Image 4-1-2: System Settings > System Settings

#### Host Name

The Host Name is a convenient identifier for a specific pDDL unit. This feature is most used when accessing units remotely: a convenient cross-reference for the unit's WAN IP address. This name appears when logged into a telnet session.

**Values (characters)**

pDDL (varies)

up to 64 characters

#### Description

The description is a text field that can be used to describe the unit or system. This value can be viewed on the System > Summary screen.

**Values (characters)**

pDDL (varies)

up to 64 characters

#### Console Timeout (s)

This value determines when a console connection (made via Console Port or Telnet) will timeout after becoming inactive.

**Values (seconds)**

60  
0-65535



## 4.0 Configuration

CFG Reset to Default Button	
Enabled by default, when the CFG button on the front of the pDDL is held down for 10s while the unit is powered up, the unit will reset and all settings will be reset to factory defaults. When disabled the unit will reset, but the settings will not be overwritten.	Values (Selection)
<input checked="" type="checkbox"/> Enable <input type="checkbox"/> Disable	
System Log Server IP	
The pDDL can report system level events to a third party System Log server, which can be used to monitor events reported by the pDDL.	IP Address
0.0.0.0	
System Log Server Port	
Enter the UDP listening port of the System Log Server. The default port number is generally 514, but could vary from Server to Server.	UDP Port
514	

### Time Settings

The pDDL can be set to use a local time source, thus keeping time on its own, or it can be configured to synchronize the date and time via a NTP Server. The options and menus available will change depending on the current setting of the Date and Time Setting Mode, as seen below.

Time Settings	
Current Date(yyyy-mm-dd)	2016-01-12
Current Time(hh:mm:ss)	15:03:03
Date and Time Setting Mode	<input checked="" type="radio"/> Local Time <input type="radio"/> NTP
Date (yyyy-mm-dd)	2016-01-12
Time (hh:mm:ss)	15:03:03
Time Settings : Current Date(yyyy.mm.dd) 2015.11.27 Time(hh:mm:ss): 18:07:54	
Date and Time Setting Mode	<input checked="" type="radio"/> Local Time <input type="radio"/> NTP
Timezone	Mountain Time
POSIX TZ String	MST7MDT,M3.2.0,M11.1.0
NTP Server IP/Name	pool.ntp.org
NTP Server Port	123
NTP Client Interval (seconds)	0 [0 ~ 65535] 0-Disable

Image 4-1-3: System Settings > Time Settings



Network Time Protocol (NTP) can be used to synchronize the time and date or computer systems with a centralized, referenced server. This can help ensure all systems on a network have the same time and date.

Date and Time Setting Mode	
Select the Date and Time Setting Mode required. If set for 'Local Time' the unit will keep its own time and not attempt to synchronize with a network server. If 'NTP' is selected, a NTP server can be defined.	Values (selection)
<input checked="" type="radio"/> Local Time	
<input type="radio"/> NTP	



## 4.0 Configuration

Date	
The calendar date may be entered in this field. Note that the entered value is lost should the pDDL lose power for some reason.	Values (yyyy-mm-dd)
	2016-01-12 (varies)
Time	
The time may be entered in this field. Note that the entered value is lost should the pDDL lose power for some reason.	Values (hh:mm:ss)
	11:27:28 (varies)
Timezone	
If connecting to a NTP time server, specify the time zone from the dropdown list.	Values (selection)
	(varies)
POSIX TZ String	
This displays the POSIX TZ String used by the unit as determined by the Timezone setting.	Values (read only)
	(varies)
NTP Server	
Enter the IP Address or domain name of the desired NTP time server.	Values (address)
	pool.ntp.org
NTP Port	
Enter the IP Address or domain name of the desired NTP time server.	Values (port#)
	123
NTP Client Interval	
By default the modem only synchronizes the time and date during system boot up (default: 0), but it can be modified to synchronize at a regular interval. <i>This process does consume data and should be set accordingly.</i>	Values (seconds)
	0



## 4.0 Configuration

### 4.1.3 System > Services

Certain services in the pDDL can be disabled or enabled for either security considerations or resource/power considerations. The Enable/Disable options are applied after a reboot and will take affect after each start up.

System		Network	Wireless	Firewall	Serial	Diag	Admin			
Summary		Settings	Services	Maintenance	Reboot					
Services										
Services Status										
FTP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable				<input type="text" value="23"/>	<input type="button" value="Update"/>				
Telnet	<input checked="" type="radio"/> Enable <input type="radio"/> Disable			Port	<input type="text" value="23"/>	<input type="button" value="Update"/>				
SSH	<input checked="" type="radio"/> Enable <input type="radio"/> Disable			Port	<input type="text" value="22"/>	<input type="button" value="Update"/>				
Web UI	<input checked="" type="radio"/> HTTP/HTTPS <input type="radio"/> HTTP <input checked="" type="radio"/> HTTPS			Port HTTP	<input type="text" value="80"/>	<input type="button" value="Update"/>				
				Port HTTPS	<input type="text" value="443"/>	<input type="button" value="Update"/>				

*Image 4-1-4: System > Services*

The FTP service can be enabled/disabled using the Services Status Menu. The FTP service is used for firmware recovery operations.	<b>Values (port)</b>  <b>Enable / Disable</b>
Using the Telnet Service Enable/Disable function, you can disable the Telnet service from running on the pDDL. The port used by the Telnet service can also be modified. The default is 23.	<b>Telnet</b>  <b>Values (port)</b>  <b>23</b>
Using the SSH Service Enable/Disable function, you can disable the SSH service (Port 22) from running on the pDDL. The port used by the SSH service can also be modified. The default is 22.	<b>SSH</b>  <b>Values (port)</b>  <b>22</b>
The default web server port for the web based configuration tools used in the modem is port 80 (http) and port 443 (HTTPS).	<b>Web UI</b>  <b>Values (selection)</b>  <b>HTTP/HTTPS</b> HTTP HTTPS
Change as required, but keep in mind that if a non standard port is used, it must be specified in a internet browser to access the unit. (example: http://192.168.168.1:8080).	



## 4.0 Configuration

### 4.1.4 System > Maintenance

#### Firmware Upgrade

Occasional firmware updates may be released by Microhard Systems which may include fixes and/or new features. The firmware can be updated wirelessly using the WebUI.

System						Network	Wireless	Firewall	Serial	Diag	Admin
Summary		Settings		Services		Maintenance		Reboot			
System Maintenance											
Version Information											
Product Name		Hardware Type		Build Version		Build Date		Build Time			
pDDL		1.0		v1.3.0 build 1026		2017-02-10		14:19:02			
Firmware Upgrade											
Erase Current Configurations			Keep All Configurations ▾ <input type="button" value="Choose file"/> No file chosen <input type="button" value="Upgrade Firmware"/>								
Firmware Image											
Upgrade			<input type="button" value="Upgrade Firmware"/>								
Reset to Default Configurations											
Reset to Default Configurations			<input type="button" value="Reset to Default"/>			<input type="checkbox"/> Wipeout data and logs					

Image 4-1-5: Maintenance > Firmware Upgrade

#### Erase Current Configuration

Choose to keep or erase the current configuration. Erasing the configuration of the pDDL unit during the upgrade process will upgrade, and return the unit to factory defaults, including the default IP Address and password.

**Values (check box)**

**Keep ALL Configuration**  
Erase Configuration

#### Firmware Image

Use the Browse button to find the firmware file supplied by Microhard Systems. Select "Upgrade Firmware" to start the upgrade process. This can take several minutes.

**Values (file)**

(no default)

#### Reset to Default Configurations

The pDDL may be set back to factory defaults by using the Reset to Default option under System > Maintenance > Reset to Default. **\*Caution\* - All configuration settings will be lost!!!**

Additionally you can select the "Wipeout data and logs" check box to delete all data including historical logs and any other data from the device. **\*Caution\* - All configuration settings & data/logs will be lost!!!**

## 4.0 Configuration

**Security for Configurations / Backup & Restore Configuration**

The configuration of the pDDL can be backed up to a file at any time using the Backup Configuration feature. The file can be restored using the Restore Configuration feature. It is always a good idea to backup any configurations in case of unit replacement.

The configuration files cannot be edited offline, they are used strictly to backup and restore units. A password can be added to the Backup and Restore files. If the password is lost, files that have been backed up with a password can not be restored.

<b>Security for Configurations</b>											
<b>Set Password</b> 	<input type="text"/> <input type="button" value="Update"/>										
<b>Backup Configurations</b>											
Configuration File Name	<input type="text" value="MicrohardpDDL.config"/>										
Backup	<input type="button" value="Backup Configurations"/>										
<div style="border: 1px solid black; padding: 5px;"> <b>Backup Configuration</b>            Downloading Configuration File, please wait ...            Right click to save <a href="#">MicrohardpDDL.config</a> </div>											
<b>Restore Configurations</b>											
Select Configuration File	<input type="button" value="Choose file"/> No file chosen										
Check Configuration File	<input type="button" value="Check Configuration File"/>										
<div style="border: 1px solid black; padding: 5px;"> <b>Restore Configuration</b>  <b>Configuration Verified!</b>   <table> <tbody> <tr> <td>Config file Name</td> <td>MicrohardpDDL.config</td> </tr> <tr> <td>Generated</td> <td>Tue Feb 16 13:47:40 MST 2016</td> </tr> <tr> <td>Vendor</td> <td>2014-2015 Microhard Systems Inc.</td> </tr> <tr> <td>Product</td> <td>pDDL-pDDL</td> </tr> <tr> <td>Hardware Type</td> <td>Rev A</td> </tr> </tbody> </table> <input type="button" value="Restore"/> </div>		Config file Name	MicrohardpDDL.config	Generated	Tue Feb 16 13:47:40 MST 2016	Vendor	2014-2015 Microhard Systems Inc.	Product	pDDL-pDDL	Hardware Type	Rev A
Config file Name	MicrohardpDDL.config										
Generated	Tue Feb 16 13:47:40 MST 2016										
Vendor	2014-2015 Microhard Systems Inc.										
Product	pDDL-pDDL										
Hardware Type	Rev A										

*Image 4-1-6: Maintenance > Reset to Default / Backup & Restore Configuration*

## Configuration File Name / Backup

Use this field to name the configuration file. The .config extension will automatically be added to the configuration file.

## Select Configuration file / Check Configuration File / Restore

Use the 'Browse' button to find the backup file that needs to be restored to the unit. Use the 'Check Restore File' button to verify that the file is valid, and then the option to restore the configuration is displayed, as seen above.

If the selected file is password protected the password must be set before restoring the file using the "Set Password" field under "Security for Configurations".

## 4.0 Configuration

## 4.1.5 System > Reboot

The pDDL can be remotely rebooted using the System > Reboot menu. As seen below a button 'Reboot Now' is provided. Once pressed, the unit immediately reboots and starts its boot up procedure. An automatic Scheduled Reboot (up to 3) can also be configured to force the pDDL to reboot daily, weekly or monthly.

**System** | **Network** | **Wireless** | **Firewall** | **Serial** | **Diag** | **Admin**

**Summary** | **Settings** | **Services** | **Maintenance** | **Reboot**

**Reboot Now**

### Config Scheduled Reboot

**Schedule No.1**

Status	<input type="button" value="Enable"/>
Type	<input type="button" value="Reboot Daily"/>
Time	<input type="button" value="01"/> : <input type="button" value="01"/>

**Schedule No.2**

Status	<input type="button" value="Enable"/>
Type	<input type="button" value="Reboot Weekly"/>
Days	<input type="button" value="1,"/> (Example:1,2,3...)
Time	<input type="button" value="01"/> : <input type="button" value="01"/>

**Schedule No.3**

Status	<input type="button" value="Enable"/>
Type	<input type="button" value="Reboot Monthly"/>
Days	<input type="button" value="6,"/> (Example:1,2,3...)
Time	<input type="button" value="01"/> : <input type="button" value="01"/>

*Image 4-1-7: System > Reboot*

Setting	Description	Type
Scheduled Reboot	Enable or disable the Scheduled Reboot.	<b>Values (selection)</b> Enable / Disable
Reboot Schedule	Set the reboot schedule to reboot the modem once a day, week or month at a time and date specified below.	<b>Values (selection)</b> Reboot Daily Reboot Weekly Reboot Monthly
Days / Time	When set to Weekly, set the day (1 is Sunday, 7 is Saturday) in which to reboot the modem. In a monthly configuration it is simply the date of the month (1 to 31). Once the day or date has been selected, specify the hour (00 to 23) and minute (00 to 59) in which the reboot is to occur.	<b>Values</b> (varies)



## 4.0 Configuration

### 4.2 Network

#### 4.2.1 Network > Status

The Network Summary display gives a overview of the currently configured network interfaces including the Connection Type (Static/DHCP), IP Address, Net Mask, Default Gateway, DNS, and IPv4 Routing Table.

Network Status							
LAN Port Status		WAN Port Status					
General Status		General Status					
IP Address	Connection Type	Subnet Mask	MAC Address				
192.168.168.1	static	255.255.255.0	00:0F:92:02:AA:15				
Traffic Status		Traffic Status					
Receive bytes	Receive packets	Transmit bytes	Transmit packets				
355.176KB	3849	857.981KB	3322				
WAN Port Status							
IP Address	Connection Type	Subnet Mask	MAC Address				
N/A	dhcp	N/A	00:0F:92:03:AA:15				
Traffic Status		Traffic Status					
Receive bytes	Receive packets	Transmit bytes	Transmit packets				
0B	0	0B	0				
Default Gateway							
Gateway		192.168.168.1					
DNS							
DNS Server(s)		None					
IPv4 Routing Table							
Destination	Gateway	Subnet Mask	Flags	Metric	Ref	Use	Interface
0.0.0.0	192.168.168.1	0.0.0.0	UG	0	0	0	(br-lan)
192.168.168.0	0.0.0.0	255.255.255.0	U	0	0	0	(br-lan)

Interval: 20 (in seconds)

Copyright © 2014-2016 Microhard. pDDL

Image 4-2-1: Network > Network Status



## 4.0 Configuration

### 4.2.2 Network > LAN

#### LAN Port Configuration

The LAN Ethernet port(s) on the pDDL are for connection of devices on a local network. By default, this port has a static IP Address. It also, by default is running a DHCP server to provide IP Addresses to devices that are connected to the physical LAN port (directly or via a switch).

No.	Name	Static IP Address	Connection Type	DHCP Server	Config
1	LAN	192.168.168.1	static	On	<a href="#">Edit</a>
2	usb	N/A	static	Off	<a href="#">Remove</a> <a href="#">Edit</a>

Image 4-2-2: Network > Network LAN Configuration



**DHCP:** Dynamic Host Configuration Protocol may be used by networked devices (Clients) to obtain unique network addresses from a DHCP server.

**Advantage:**  
Ensures unique IP addresses are assigned, from a central point (DHCP server) within a network.

**Disadvantage:**  
The address of a particular device is not 'known' and is also subject to change.

STATIC addresses must be tracked (to avoid duplicate use), yet they may be permanently assigned to a device.



Within any IP network, each device must have its own unique IP address.

#### LAN Add/Edit Interface

By selecting the Add or Edit buttons the LAN network interface can be configured, or additional LAN interfaces can be created.

Spanning Tree (STP)	<input type="button" value="Off"/>
IGMP Snooping	<input type="button" value="On"/>
Connection Type	<input type="button" value="Static IP"/>
IP Address	<input type="text" value="192.168.168.1"/>
Netmask	<input type="text" value="255.255.255.0"/>
Default Gateway	<input type="text" value="192.168.168.1"/>
Default Route	<input type="button" value="Yes"/>
DNS Mode	<input type="button" value="Manual"/>
Primary DNS	<input type="text"/>
Secondary DNS	<input type="text"/>

Image 4-2-3: Network > LAN Port Configuration

#### Spanning Tree (STP)

This option allows the pDDL to participate in the Spanning Tree protocol with other devices to prevent local loops. By default this is disabled.

#### Values (selection)

Off  
On



## 4.0 Configuration

## LAN DHCP

A pDDL may be configured to provide dynamic host control protocol (DHCP) service to all attached (either wired or wireless devices. By default the DHCP service is enabled, so devices that are connected to the physical Ethernet LAN ports, as well as any devices that are connected by Wireless will be assigned an IP by the pDDL. The LAN DHCP service is available for each interface, and is located in the add/edit interface menus.

<b>LAN DHCP</b>	
DHCP Server	<input type="button" value="Enable ▾"/>
Start ①	<input type="text" value="192.168.168.100"/>
Limit ①	<input type="text" value="150"/>
Lease Time (in minutes) ①	<input type="text" value="720"/>
Alternate Gateway	<input type="text"/>
Preferred DNS server	<input type="text"/>
Alternate DNS server	<input type="text"/>
WINS/NBNS Servers	<input type="text"/>
WINS/NBT Node Type	<input type="button" value="none ▾"/>

*Image 4-2-4: Network > DHCP Server*



Prior to enabling this service, verify that there are no other devices - either wired (e.g. LAN) or wireless with an active DHCP SERVER service. (The Server issues IP address information at the request of a DHCP Client, which receives the information.)

DHCP Server	
The option is used to enable or disable the DHCP service for devices connected to the LAN Port(s).	<b>Values (selection)</b> Enable / Disable
Select the starting address DHCP assignable IP Addresses. The first octets of the subnet will be pre-set based on the LAN IP configuration, and can not be changed.	<b>Start</b> <b>Values (IP Address)</b> 192.168.168.100
Set the maximum number of IP addresses that can be assigned by the pDDL.	<b>Limit</b> <b>Values (integer)</b> 150
The DHCP lease time is the amount of time before a new request for a network address must be made to the DHCP Server.	<b>Lease Time</b> <b>Values (minutes)</b> 720
Specify an alternate gateway for DHCP assigned devices if the default gateway is not to be used.	<b>Alternate Gateway</b> <b>Values (IP Address)</b> (IP Address)

## 4.0 Configuration



DNS: Domain Name Service  
is an Internet service that  
translates easily-  
remembered domain names  
into their not-so-easily-  
remembered IP addresses.

Being that the Internet is based on IP addresses, without DNS, if one entered the domain name [www.microhardcorp.com](http://www.microhardcorp.com) (for example) into the URL line of a web browser, the website 'could not be found'.

Specify a preferred DNS server address to be assigned to DHCP devices.	<b>Values (IP Address)</b> <i>(IP Address)</i>
Specify the alternate DNS server address to be assigned to DHCP devices.	<b>Alternate DNS Server</b> <b>Values (IP Address)</b> <i>(IP Address)</i>
Enter the Domain Name for the DHCP devices.	<b>Domain Name</b> <b>Values (string)</b> <i>(IP Address)</i>
Enter the address of the WINS/NBNS (NetBIOS) Server. The WINS server will translate computers names into their IP addresses, similar to how a DNS server translates domain names to IP addresses.	<b>WINS/NBNS Servers</b> <b>Values (IP/Domain)</b> <i>(no default)</i>
Select the method used to resolve computer names to IP addresses. Four name resolution methods are available:	<b>WINS/NBT Node Type</b> <b>Values (selection)</b> <ul style="list-style-type: none"> <li><b>none</b></li> <li>b-node</li> <li>p-node</li> <li>m-node</li> <li>h-node</li> </ul>



## 4.0 Configuration

### 4.2.3 Network > WAN

#### WAN Configuration

The WAN configuration refers to the wired WAN connection on the pDDL. The WAN port can be used to connect the pDDL to other networks, the internet and/or other network resources.

System	Network	Wireless	Firewall	Serial	Diag	Admin
Status	LAN	<b>WAN</b>	USB	DHCP	Routes	Ports
WAN Port Configuration						
Configuration						
Working Mode		Independent WAN				
WAN Configuration						
Connection Type	Static IP					
IP Address						
Subnet Mask						
Default Route	Yes					
Default Gateway						
DNS Mode	Manual					
Primary DNS						
Secondary DNS						

Image 4-2-6: Network > WAN Configuration



**DHCP:** Dynamic Host Configuration Protocol may be used by networked devices (Clients) to obtain unique network addresses from a DHCP server.

**Advantage:**  
Ensures unique IP addresses are assigned, from a central point (DHCP server) within a network.

**Disadvantage:**  
The address of a particular device is not 'known' and is also subject to change.

STATIC addresses must be tracked (to avoid duplicate use), yet they may be permanently assigned to a device.

#### Working Mode

##### Values (selection)

Independent WAN  
Bridged with LAN Port  
Independent LAN

#### Connection Type

##### Values (selection)

DHCP  
Static

#### IP Address

##### Values (IP Address)

(no default)

#### Netmask

##### Values (IP Address)

(no default)



## 4.0 Configuration

Default Gateway	
If the pDDL is integrated into a network which has a defined gateway, then, as with other hosts on the network, this gateway's IP address will be entered into this field. If there is a DHCP server on the network, and the Connection Type (see previous page) is selected to be DHCP, the DHCP server will populate this field with the appropriate gateway address.	Values (IP Address) <i>(no default)</i>
Default Route	
The Default Route parameter allows you to set this interface as the default route in the routing table. This is result in all data being sent to the WAN interface if there the destination network is not directly connected (LAN, Wireless etc), and no other route has been specified. In cases where the WAN is the primary connection this would be set to Yes.	Values (selection) No / Yes
DNS Servers	
The following section will allow a user to specify DNS Server(s) to be used by the WAN interface of the pDDL.	Mode
Select between Manual or Auto for DNS server(s) for the WAN interface. If set to Auto the pDDL will try to automatically detect the DNS servers to use, which is normally the case when the WAN is DHCP. Manual required the DNS addresses to be known and entered below.	Values (selection) Manual / Auto
Primary DNS	
DNS (Domain Name Service) Servers are used to resolve domain names into IP addresses. If set to auto and the Connection Type is set for DHCP the DHCP server will populate this field and the value set can be viewed on the Network > Status page. To add additional static servers, enter them here.	Values (IP Address) <i>(no default)</i>
Secondary DNS	
DNS (Domain Name Service) Servers are used to resolve domain names into IP addresses. If set to auto and the Connection Type is set for DHCP the DHCP server will populate this field and the value set can be viewed on the Network > Status page. To add additional static servers, enter them here.	Values (IP Address) <i>(no default)</i>

## 4.0 Configuration

#### **4.2.4 Network > USB**

## USB Port Configuration

Normally, the pDDL module is bootstrapped to USB host mode that allows select generic devices to be used to extend Ethernet and serial functions (USB to Ethernet Adapters, USB to Serial Converters).

Alternatively, the pDDL can be set to Device mode by pulling PIN 14 (on OEM module) low through an 1k resistor to switch the USB mode. Older development boards will not support this and will either need to be modified or new boards will need to be acquired. In USB device mode, there are two functions supported, RNDIS/CDC Ethernet and CDC Serial port, when connected a host machine (PC etc).

RDNIS Ethernet and CDC Serial composite drivers are available from Microhard Systems.

System		Network		Wireless		Firewall		Serial		Diag		Admin	
Status	LAN	WAN	USB	DHCP	Routes	Ports	Device List						
<b>USB Port Configuration</b>													
<b>Configuration</b>													
Working Mode	<input type="button" value="Independent LAN"/>												
<b>LAN Configuration</b>													
Connection Type	<input type="button" value="Static IP"/>												
IP Address	<input type="text"/>												
Netmask	<input type="text"/>												
Default Gateway	<input type="text"/>												
Default Route	<input type="button" value="No"/>												
DNS Mode	<input type="button" value="Manual"/>												
Primary DNS	<input type="text"/>												
Secondary DNS	<input type="text"/>												
<b>DHCP Server</b>													
Mode	<input type="button" value="Disable"/>												

*Image 4-2-7: Network > USB*

## Working Mode

The RNDIS Ethernet USB port can be configured to operate as an additional LEN Ethernet Port with the current LAN (Bridged) or it can be configured to operate as an independent LAN (Subnet).

### Values (selection)

Independent LAN  
Bridge with LAN Port

## LAN Configuration

When bridged with LAN the network parameters are set from the Network > LAN menu. When set to Independent the port can be configured as Static or DHCP. Again refer to the LAN configuration for help with the displayed fields and definitions.

## DHCP Server

When in Independent mode the pDDL can run a DHCP service on the USB port to assign IP addresses and lease information. Refer to Network > LAN > DHCP for help with parameters and definitions.

## 4.0 Configuration

## 4.2.5 Network > DHCP

## **Static IP Addresses (for DHCP Server)**

In many applications it is required to know the IP address of connected devices in order to implement security and firewall rules as well as for Port Forwarding rules. The Static IP Address (for DHCP Server) features MAC binding to allow connected devices to automatically obtain a specific IP address.

For configuration of the LAN DHCP Service see Network > LAN > (Edit) > LAN DHCP.

System	Network	Wireless	Firewall	Serial	Diag	Admin
Status	LAN	WAN	USB	DHCP	Routes	Ports
DHCP Configuration						
Static IP addresses (for DHCP Server)						
Name	<input type="text"/>					
MAC Address	<input type="text"/>					
IP Address	<input type="text"/>					
<input type="button" value="Add static IP"/>						
Static Addresses						
MAC Address	IP Address	Name	NetStatus			
Active DHCP Leases						
MAC Address	IP Address	Name	Expires in			
A6:12:20:F4:9A:0D	192.168.168.132	DMKT0002-2	9hr 59min 30sec			
<input type="button" value="Release All"/> <input type="button" value="Refresh"/>						

*Image 4-2-8: Network > DHCP*

## Static Addresses

Displays the MAC Binding table that is configured in the pDDL device.

## Active DHCP Leases


Displays the active DHCP leases for any IP Addresses that have been assigned. This includes the IP address, the MAC, Device Name as well as the lease expiry.

## 4.0 Configuration

## 4.2.6 Network > Routes

## Static Routes Configuration

It may be desirable to have devices on different subnets to be able to talk to one another. This can be accomplished by specifying a static route, telling the pDDL where to send data.

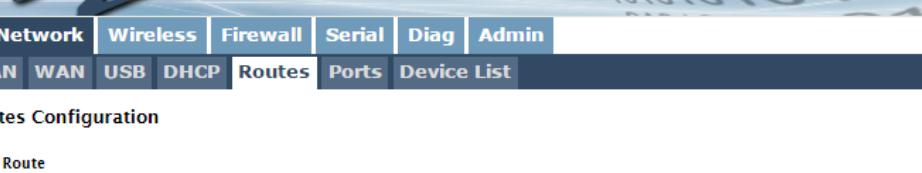

**microhard**

**System Network Wireless Firewall Serial Diag Admin**

**Status LAN WAN USB DHCP Routes Ports Device List**

### Static Routes Configuration

Add Static Route

Name	<input type="text" value="route1"/>
Destination Subnet <small>①</small>	<input type="text" value="192.168.168.0"/>
Netmask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.168.1"/>
Metric	<input type="text" value="0"/>
Interface	<input style="width: 100px; height: 20px; border: 1px solid #ccc; padding: 2px; margin-bottom: 5px;" type="text" value="LAN"/> <small>②</small>
<a href="#" style="color: inherit; text-decoration: none;">Add Static Route</a>	

### Static Route Summary

Name	Destination	Netmask	Gateway	Metric	Interface
route1	192.168.168.0	255.255.255.0	192.168.168.1	0	LAN

*Image 4-2-9: Network > Routes*

Name	Routes can be names for easy reference, or to describe the route being added.	Values (characters)	(no default)
Destination	Enter the network IP address for the destination.	Values (IP Address)	(192.168.168.0)
Gateway	Specify the Gateway used to reach the network specified above.	Values (IP Address)	192.168.168.1
Netmask	Enter the Netmask for the destination network.	Values (IP Address)	



microhard

pDDL

## 4.0 Configuration

Metric
In some cases there may be multiple routes to reach a destination. The Metric can be set to give certain routes priority, the lower the metric is, the better the route. The more hops it takes to get to a destination, the higher the metric.
Values (Integer)
0
Interface
Define the exit interface. Is the destination a device on the LAN, LAN1 (If physical WAN port is bridged as an independent LAN), or the WAN?
Values (Selection)
LAN / LAN1 / WAN / USB / None

## 4.0 Configuration

## 4.2.7 Network > Ports

The Network > Ports menu can be used to determine the characteristics of the physical Ethernet interfaces on the pDDL. As seen below the Mode (Auto/Manual), Auto-Negotiation, Speed (10/100Mbit/s) and the Duplex (Full/Half) can all be configured on the pDDL.

System		Network		Wireless		Firewall		Serial		Diag		Admin											
Status	LAN	WAN	USB	DHCP	Routes	Ports		Device List															
<b>Ethernet Port Configuration</b>																							
Port	Mode			Auto-Negotiation				Speed			Duplex												
WAN	<input checked="" type="radio"/> Auto	<input type="radio"/> Manual		<input checked="" type="radio"/> On	<input type="radio"/> Off			<input checked="" type="radio"/> 100Mbit/s	<input type="radio"/> 10Mbit/s		<input checked="" type="radio"/> Full	<input type="radio"/> Half											
LAN	<input checked="" type="radio"/> Auto	<input type="radio"/> Manual		<input checked="" type="radio"/> On	<input type="radio"/> Off			<input checked="" type="radio"/> 100Mbit/s	<input type="radio"/> 10Mbit/s		<input checked="" type="radio"/> Full	<input type="radio"/> Half											
<b>Ethernet Port Status</b>																							
Port	Linked			Auto-Negotiation				Speed			Duplex												
WAN	no			on				10Mb/s			Half												
LAN	no			on				10Mb/s			Half												

*Image 4-2-10: Network > Ports*

Mode

If set to Auto, the pDDL will negotiate and determine the best connection speed and mode.

**Values (selection)**

Auto / Manual

### Auto-Negotiation

Enable or disable auto-negotiation.

**Values (selection)**

On / Off

### Speed

If the mode and auto negotiation are set you manual the connection speed can be specified.

**Values (selection)**

100Mbit/s / 10 Mbit/s

### Duplex

Selection between full or half duplex for the direction of data.

**Values (selection)**

Full / Half



## 4.0 Configuration

### 4.2.8 Network > Device List

The Network > Device List shows the current ARP table for the local network adapter. The MAC address and IP address are shown, however not only DHCP assigned devices are listed in the device list, any devices, even those statically assigned, that are connected through the local network interface (s) are displayed, including those connected through a hub or switch.

Devices can also be filtered by the network that they are attached to. Devices with a MAC and no IP and vice versa can also be filtered.

A screenshot of a web-based network management interface. The top navigation bar includes links for System, Network, Wireless, Firewall, Serial, Diag, Admin, Status, LAN, WAN, USB, DHCP, Routes, Ports, and Device List. The 'Network' link is currently selected. Below the navigation is a section titled 'Network Device List'. It contains a dropdown menu labeled 'Select networks:' with options 'LAN' and 'WAN'. To the right of the dropdown are two checkboxes: 'Show MACs without IP' and 'Show IPs without MAC', both of which are unchecked. A 'Apply Filter' button is located next to the checkboxes. A table below the filter section displays one row of data. The columns are 'Network', 'MAC Address', 'IP Address', 'State', and 'Ageing Timer'. The data row shows: Network (LAN), MAC Address (a6:12:20:f4:9a:0d), IP Address (192.168.168.132), State (REACHABLE), and Ageing Timer (0.22).

Network	MAC Address	IP Address	State	Ageing Timer
LAN	a6:12:20:f4:9a:0d	192.168.168.132	REACHABLE	0.22

Image 4-2-11: Network > Device List

## 4.0 Configuration

## 4.3 Wireless


### 4.3.1 Wireless > Status

The Status window gives a summary of all radio or wireless related settings and connections.

The **General Status** section shows the MAC address of the current radio, the Operating Mode (Master, Slave etc), the Network ID being used, the Compatibility Mode, Channel Bandwidth and frequency information and the type of security used.

**Traffic Status** shows statistics about the transmitted and received data.

The pDDL shows information about all Wireless connections in the **Connection Info** section. The MAC address, TX & RX Modulation, Signal to Noise ratio (SNR), Signal Strength (RSSI), and a graphical representation of the signal level or quality, as well as a RSSI Graph Link.

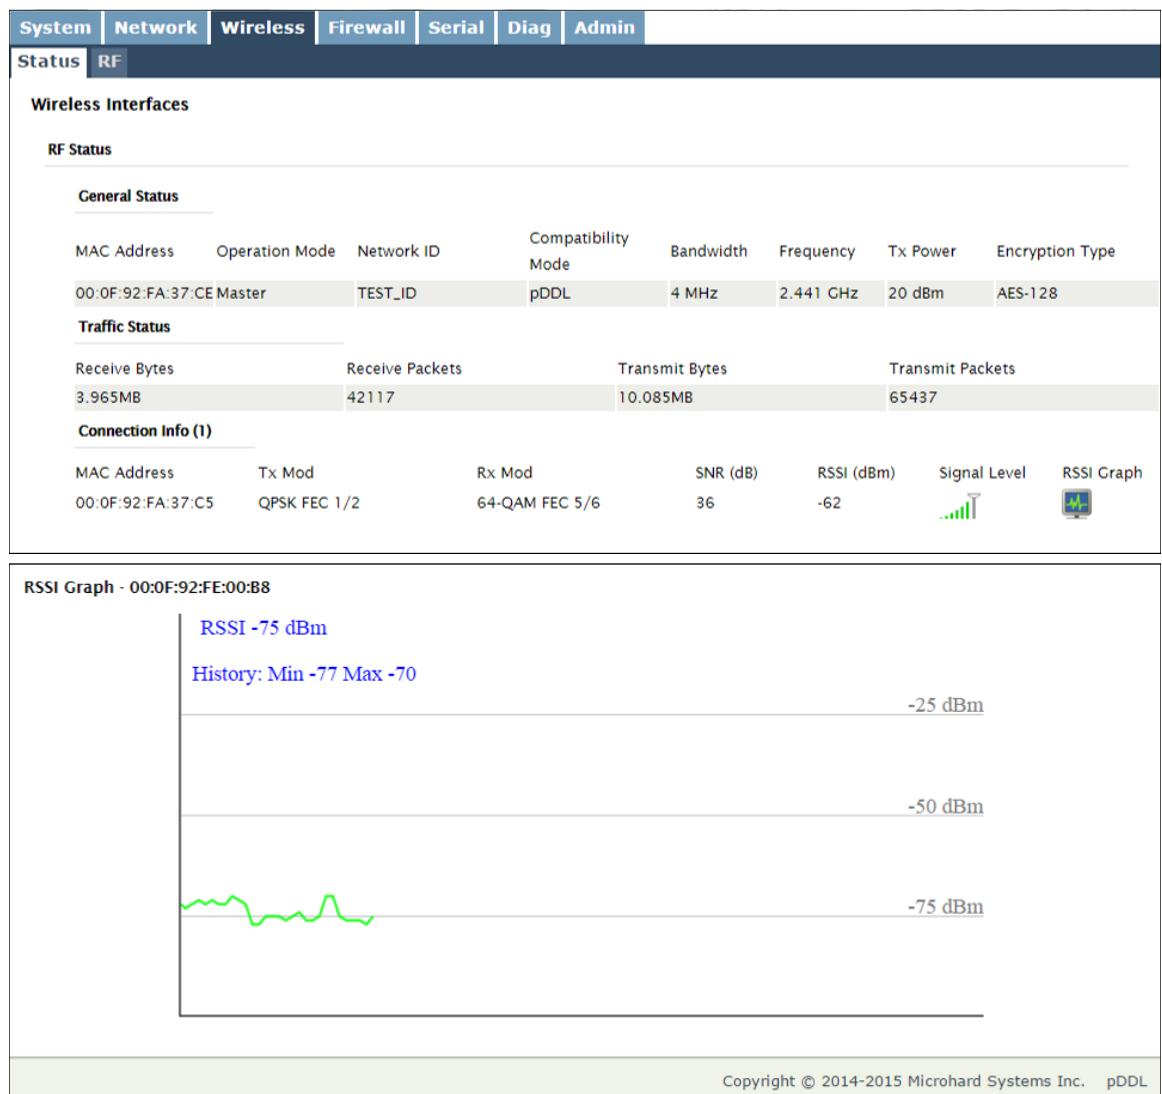

*Image 4-3-1: Wireless > Status (RSSI Graph Shown Below)*



## 4.0 Configuration

### 4.3.2 Wireless > RF

#### RF Configuration

The RF Configuration allows for the configuration of the radio module. You can turn the radio on or off, adjust the TX power, select the channel bandwidth and frequency, as well as the operating mode of the radio as seen below.

System	Network	Wireless	Firewall	Serial	Diag	Admin
Status	RF					
<b>Wireless Configuration</b>						
<b>RF Configuration</b>						
Radio	<input checked="" type="radio"/> On <input type="radio"/> Off					
Compatibility Mode	pDDL					
Channel Bandwidth	8MHz					
Channel-Frequency	76 - 2477 MHz					
Tx Power	20 dbm					
Wireless Distance	3000 (m)					
Rx Diversity(Reboot Required)	<input checked="" type="radio"/> Disable <input type="radio"/> Enable					
Operation Mode	Master					
TX Rate	Auto (recommended)					
Extended Addressing	<input checked="" type="radio"/> On <input type="radio"/> Off					
Network ID	pDDL					
Encryption Type	AES-128					
Encryption Key	*****					
Show password	<input type="checkbox"/>					
<b>RF Comport Configuration</b>						
Comport1 TX Rate	Normal Rate					
Comport2 TX Rate	<input checked="" type="radio"/> Data Mode Disabled					

Image 4-3-2: Wireless > RF Configuration

Radio	
This option is used to turn the radio module on or off. If turned off Wireless connections can not be made. The default is On.	<b>Values (selection)</b>
<input checked="" type="radio"/> On / Off	
Compatibility Mode	
Future option for setting different compatibility modes.	<b>Values (selection)</b>
	pDDL

## 4.0 Configuration




Refer to FCC (or as otherwise applicable) regulations to ascertain, and not operate beyond, the maximum allowable transmitter output power and effective isotropic radiated power (EIRP).

Channel Bandwidth													
Select the channel bandwidth from the list. Refer to the specifications to see the relationship and performance between channel bandwidth, throughput and sensitivity.	<b>Values (selection)</b> 8 / 4 / 2 MHz												
Generally a larger channel has greater throughput, at the cost of sensitivity, while a smaller channel tends to be more robust, but at the cost of throughput.													
Channel-Frequency													
Set the Channel-Frequency. This must be the same on each unit in a network. The frequency shown is the center frequency and is available in 1 MHz increments, values shown will vary with the Channel Bandwidth selected above.	<b>Values (selection (MHz))</b> 2402 - 2482 (2MHz BW, CH 1-81) 2405 - 2479 (4MHz BW, CH 4-78) 2407 - 2477 (8MHz BW, CH 6-76)												
<i>The noise floor of the specified channel will dramatically affect the quality of the link, it is essential to select the cleanest channel for superior performance.</i>													
TX Power													
This setting establishes the transmit power level which will be presented to the antenna connector of the pDDL.	<b>Values (selection)</b> <table><tbody><tr><td>20 dBm</td><td>25 dBm</td></tr><tr><td>21 dBm</td><td>26 dBm</td></tr><tr><td>22 dBm</td><td>27 dBm</td></tr><tr><td>23 dBm</td><td>28 dBm</td></tr><tr><td>24 dBm</td><td>29 dBm</td></tr><tr><td></td><td>30 dBm</td></tr></tbody></table>	20 dBm	25 dBm	21 dBm	26 dBm	22 dBm	27 dBm	23 dBm	28 dBm	24 dBm	29 dBm		30 dBm
20 dBm	25 dBm												
21 dBm	26 dBm												
22 dBm	27 dBm												
23 dBm	28 dBm												
24 dBm	29 dBm												
	30 dBm												
Unless required, the Tx Power should be set not for maximum, but rather for the minimum value required to maintain an adequate system fade margin.													
Wireless Distance													
The Wireless Distance parameter allows a user to set the expected distance the wireless signal needs to travel. The pDDL sets various internal timeouts to account for this travel time. Longer distances will require a higher setting, and shorter distances may perform better if the setting is reduced.	<b>Values (meters)</b> 3000												
Rx Diversity													
When enabled Rx Diversity can provide enhanced sensitivity potentially allowing greater throughput. When enabled, <u>an Antenna must be connected</u> to the Rx Diversity port or system performance	<b>Values (selection)</b> Disable / Enable												

## 4.0 Configuration

		Mode
Master	- A Master may provide a wireless data connection to many slaves/remotes.	Values (selection)
Slave/Remote	- A Slave may sustain one wireless connection, i.e. to an Master.	Master Slave

For video applications it is required to connect the video source (camera) to the radio designated as the Master. Video receivers would then be connected to the Slave radios, this would allow for multiple viewing stations. See the diagram below for an example.

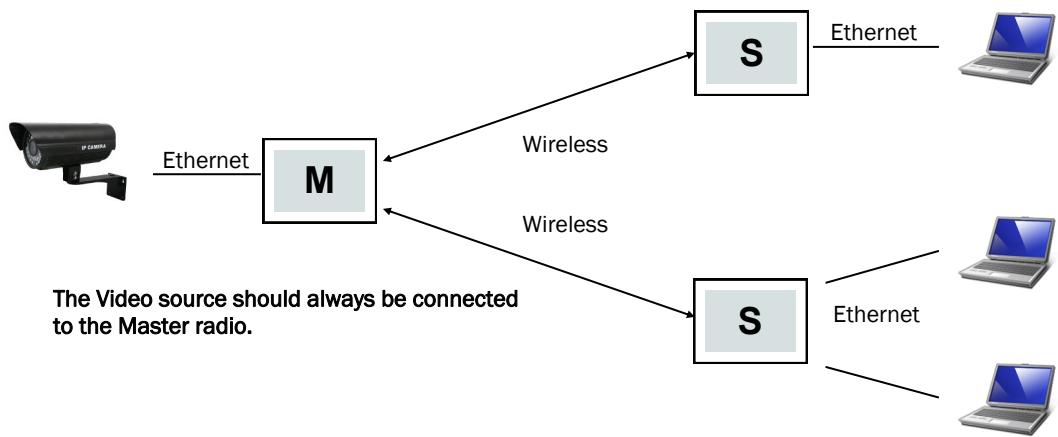

*Diagram 4-3-1: Operating Modes*

TX Rate	
This setting determines the modulation type and in turn the rate at which the data is to be wirelessly transferred.	<b>Values (selection)</b>
<b>The default and recommended setting for both Master and Slave units is 'Auto'.</b> When in 'Auto' the unit will transfer data at the highest possible rate in consideration of the receive signal strength (RSSI).	<b>Auto (recommended)</b>
Refer to <a href="#">Section 1.3 Performance Specifications</a> for a table breakdown of performance at selected rates. If setting a fixed TX Rate It is recommended to retain a fade margin of at least 10 dBm for optimum performance. For example, for a link (8MHz channel) with a signal strength of at least -75dBm, a TX rate of 16-QAM 3/4 FEC is recommended. Setting to the highest rate with a poor link may result in reduced performance.	64-QAM 5/6 FEC 64-QAM 3/4 FEC 64-QAM 2/3 FEC 16-QAM 3/4 FEC 16-QAM 1/2 FEC QPSK FEC 3/4 QPSK FEC 1/2

## 4.0 Configuration



Change the default value for the Network ID to something unique for your network. Do this for an added measure of security and to differentiate your network from others which may be operating nearby.

Extended Addressing	
Enable or disable extended addressing.	Values (selection)
	On / Off
Network ID	
Each network of pDDL modules must have a unique Network ID. This Network ID must be set in each unit on the network.	Values
	<i>pDDL</i>
Encryption Type	
The encryption types defines the type of security used for the Wireless Interface, to join a network a device must know the correct Encryption Key. Security options are dependent on the version type. Export versions may not have all optional available to meet regulatory requirements set government policies.	Values (selection)
	Disabled AES-128
Encryption Key	
This is the password, or preshared key that is required by any device to connect to the wireless interface of the pDDL. It is <u>strongly recommended</u> to always have a password defined, and changed from the factory default.	Values (string)
	1234567890
Show Password	
Check this box to show the currently configured password for the encryption passphrase.	Values (selection)
	unchecked
Comport Tx Rate	
When using Ethernet and Serial data. If the volume of serial data is high, leave at the default (Normal Rate), if the volume of Ethernet data is high set com data to High Rate (Compressed).	Values (selection)
	Normal / High

## 4.0 Configuration

## 4.4 Firewall

#### 4.4.1 Firewall > Summary

The Firewall Summary allows a user to see detailed information about how the firewall is operating. The All, Filter, Nat, Raw, and Mangle options can be used to view different aspects of the firewall.

System																
Network		Wireless		Firewall		Serial		Diag								
Summary		General		Port Forwarding		MAC-IP List		Rules								
Firewall Status			Status and Rules			All										
Target Filter																
Chain INPUT (policy ACCEPT 0 packets, 0 bytes)																
num	pkts	bytes	target	prot	opt	in	out	source	destination	options						
1	76204	7440K	delegate_input	all	--	i	i	0.0.0.0/0	0.0.0.0/0							
Chain FORWARD (policy DROP 0 packets, 0 bytes)																
num	pkts	bytes	target	prot	opt	in	out	source	destination	options						
1	0	0	delegate_forward	all	--	i	i	0.0.0.0/0	0.0.0.0/0							
Chain OUTPUT (policy ACCEPT 0 packets, 0 bytes)																
num	pkts	bytes	target	prot	opt	in	out	source	destination	options						
1	70807	10M	delegate_output	all	--	i	i	0.0.0.0/0	0.0.0.0/0							
Chain delegate_forward (1 references)																
num	pkts	bytes	target	prot	opt	in	out	source	destination	options						
1	0	0	forwarding_rule	all	--	i	i	0.0.0.0/0	0.0.0.0/0	/* user chain for forwarding */						
2	0	0	ACCEPT	all	--	i	i	0.0.0.0/0	0.0.0.0/0	ctstate RELATED,ESTABLISHED						
3	0	0	zone_lan_forward	all	--	br-lan	i	0.0.0.0/0	0.0.0.0/0							
4	0	0	reject	all	--	i	i	0.0.0.0/0	0.0.0.0/0							
Chain delegate_input (1 references)																
num	pkts	bytes	target	prot	opt	in	out	source	destination	options						
1	0	0	ACCEPT	all	--	lo	i	0.0.0.0/0	0.0.0.0/0							
2	76204	7440K	input_rule	all	--	i	i	0.0.0.0/0	0.0.0.0/0	/* user chain for input */						
3	65396	6648K	ACCEPT	all	--	i	i	0.0.0.0/0	0.0.0.0/0	ctstate RELATED,ESTABLISHED						
4	2873	149K	syn_flood	tcp	--	i	i	0.0.0.0/0	0.0.0.0/0	tcp flags:0x17/0x02						
5	10808	793K	zone_lan_input	all	--	br-lan	i	0.0.0.0/0	0.0.0.0/0							
Chain delegate_output (1 references)																
num	pkts	bytes	target	prot	opt	in	out	source	destination	options						
1	0	0	ACCEPT	all	--	i	lo	0.0.0.0/0	0.0.0.0/0							
2	70807	10M	output_rule	all	--	i	i	0.0.0.0/0	0.0.0.0/0	/* user chain for output */						
3	70807	10M	ACCEPT	all	--	i	i	0.0.0.0/0	0.0.0.0/0	ctstate RELATED,ESTABLISHED						
4	0	0	zone_lan_output	all	--	i	br-lan	0.0.0.0/0	0.0.0.0/0							
Chain forwarding_lan_rule (1 references)																
num	pkts	bytes	target	prot	opt	in	out	source	destination	options						

*Image 4-4-1: Firewall > Status*



## 4.0 Configuration

### 4.4.2 Firewall > General

The General Firewall settings allow users to enable or disable the firewall, and to decide which areas of the modem to protect. The Firewall can also be reset to factory defaults from this area of the WebUI.

System	Network	Wireless	Firewall	Serial	Diag	Admin
Summary	General	Port Forwarding	MAC-IP List	Rules	Firewall Default	
<b>Firewall General</b>						
Firewall General Configuration						
WAN Remote Management <small> ⓘ</small>	<input checked="" type="radio"/> Enable <input type="radio"/> Disable					
WAN Request <small> ⓘ</small>	<input checked="" type="radio"/> Block <input type="radio"/> Allow					
LAN to WAN Access Control <small> ⓘ</small>	<input checked="" type="radio"/> Block <input type="radio"/> Allow					
Anti-Spoof <small> ⓘ</small>	<input checked="" type="radio"/> Enable <input type="radio"/> Disable					
Packet Normalization <small> ⓘ</small>	<input checked="" type="radio"/> Enable <input type="radio"/> Disable					

Image 4-4-2: Firewall > General

#### WAN Remote Management

Allow remote management of the pDDL on the WAN side using the WebUI on port 80(HTTP), and 443 (HTTPS). If disabled, the configuration can only be accessed from the LAN.

##### Values

Enable / Disable

#### WAN Request

When Blocked the pDDL will block all requests from devices on the WAN unless specified otherwise in the Access Rules, MAC List, IP List configurations. Access to ports 80 (HTTP) and 443 (HTTPS-if enabled), is still available unless disabled in the **WAN Remote Management** option.

##### Values

Block / Allow

#### LAN to WAN Access Control

Allows or Blocks traffic from the LAN accessing the WAN unless specified otherwise using the Access Rules, MAC, and IP List configuration.

##### Values

Block / Allow

#### Anti-Spoof

The Anti-Spoof protection is to create some firewall rules assigned to the external interface (WAN) of the firewall that examines the source address of all packets crossing that interface coming from outside. If the address belongs to the internal network or the firewall itself, the packet is dropped.

##### Values

Enable / Disable

#### Packet Normalization

Packet Normalization is the normalization of packets so there are no ambiguities in interpretation by the ultimate destination of the packet. The scrub directive also reassembled fragmented packets, protecting some operating systems from some forms of attack, and drops TCP packets that have invalid flag combinations.

##### Values

Enable / Disable

## 4.0 Configuration

#### **4.4.3 Firewall > Port Forwarding**

The pDDL can be used to provide remote access to connected devices. To access these devices a user must define how incoming traffic is handled by the pDDL. If all incoming traffic is intended for a specific connected device, DMZ could be used to simplify the process, as all incoming traffic can be directed towards a specific IP address.


In the case where there is multiple devices, or only specific ports need to be passed, Port forwarding is used to forward traffic coming in from the WAN to specific IP Addresses and Ports on the LAN. Port forwarding can be used in combination with other firewall features, but the Firewall must be enabled for Port forwarding to be in effect. If the WAN Request is blocked on the General Tab, additional rules and/or IP Lists must be set up to allow the port forwarding traffic to pass through the firewall.

System	Network	Wireless	Firewall	Serial	Diag	Admin														
<a href="#">Summary</a>	<a href="#">General</a>	<a href="#">Port Forwarding</a>	<a href="#">MAC-IP List</a>	<a href="#">Rules</a>	<a href="#">Firewall Default</a>															
<b>Firewall Port Forwarding</b>																				
<p><b>Notice</b></p> <p>Port Forwarding Rules are taken into consideration after the General firewall settings are applied. If the WAN and/or cellular traffic is blocked, additional rules must be created:</p> <ol style="list-style-type: none"> <li>1. Add rules in the Rules configuration to open ports or allow IP addresses.</li> <li>2. Create a firewall rule in the Firewall-&gt;Rules page to allow desired connections.</li> </ol>																				
<p><b>Firewall DMZ Configuration</b></p> <p><b>DMZ Source: WAN</b></p> <table> <tr> <td>DMZ Mode</td> <td><input type="button" value="Disable ▾"/></td> </tr> <tr> <td>DMZ Server IP</td> <td><input type="text" value="192.168.200.100"/></td> </tr> <tr> <td>Exception Port</td> <td><input type="text" value="0"/></td> </tr> </table>							DMZ Mode	<input type="button" value="Disable ▾"/>	DMZ Server IP	<input type="text" value="192.168.200.100"/>	Exception Port	<input type="text" value="0"/>								
DMZ Mode	<input type="button" value="Disable ▾"/>																			
DMZ Server IP	<input type="text" value="192.168.200.100"/>																			
Exception Port	<input type="text" value="0"/>																			
<p><b>Firewall Port Forwarding Configuration</b></p> <table> <tr> <td>Name</td> <td><input type="text" value="forward1"/></td> </tr> <tr> <td>Source</td> <td><input type="button" value="▼"/></td> </tr> <tr> <td>Internal Server IP</td> <td><input type="text" value="192.168.2.1"/></td> </tr> <tr> <td>Internal Port</td> <td><input type="text" value="3000"/></td> </tr> <tr> <td>Protocol</td> <td><input type="button" value="TCP ▾"/></td> </tr> <tr> <td>External Port</td> <td><input type="text" value="2000"/></td> </tr> <tr> <td colspan="2"><input type="button" value="Add Port Forwarding"/></td> </tr> </table>							Name	<input type="text" value="forward1"/>	Source	<input type="button" value="▼"/>	Internal Server IP	<input type="text" value="192.168.2.1"/>	Internal Port	<input type="text" value="3000"/>	Protocol	<input type="button" value="TCP ▾"/>	External Port	<input type="text" value="2000"/>	<input type="button" value="Add Port Forwarding"/>	
Name	<input type="text" value="forward1"/>																			
Source	<input type="button" value="▼"/>																			
Internal Server IP	<input type="text" value="192.168.2.1"/>																			
Internal Port	<input type="text" value="3000"/>																			
Protocol	<input type="button" value="TCP ▾"/>																			
External Port	<input type="text" value="2000"/>																			
<input type="button" value="Add Port Forwarding"/>																				
<p><b>Firewall Port Forwarding Summary</b></p> <table border="1"> <thead> <tr> <th>Name</th> <th>Source</th> <th>Internal IP</th> <th>Internal Port</th> <th>Protocol</th> <th>External Port</th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>							Name	Source	Internal IP	Internal Port	Protocol	External Port								
Name	Source	Internal IP	Internal Port	Protocol	External Port															

*Image 4-4-3: Firewall > Port Forwarding*

DMZ Mode	
Enable or disable DMZ Mode. DMZ can be used to forward all traffic to the DMZ Server IP listed below.	<b>Values (selection)</b>
	<b>Disable / Enable</b>
Enter the IP address of the device on the LAN side of the pDDL where all the traffic will be forwarded to.	<b>Values (IP Address)</b>
	192.168.100.100

## 4.0 Configuration

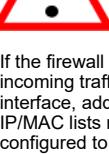Exception Port	
Enter a exception port number that will NOT be forwarded to the DMZ server IP. Usually a configuration or remote management port that is excluded to retain external control of the pDDL.	Values (Port #)
0	
Firewall Port Forwarding Configuration	
	Name
This is simply a field where a convenient reference or description is added to the rule. Each Forward must have a unique rule name and can use up to 10 characters.	Values (10 chars)
Forward	
	Source
Select the source for the traffic, if applicable.	Values (selection)
(none)	
	Internal Server IP
Enter the IP address of the intended internal (i.e. on LAN side of the pDDL) server. This is the IP address of the device you are forwarding traffic to.	Values (IP Address)
192.168.2.1	
	Internal Port
Target port number of the internal server on the LAN IP entered above.	Values (Port #)
3000	
	Protocol
Select the type of transport protocol used. For example Telnet uses TCP, SNMP uses UDP, etc.	Values (selection)
TCP / UDP / Both	
	External Port
Port number of the incoming request (from WAN-side).	Values (Port #)
2000	



## 4.0 Configuration

### 4.4.4 Firewall > MAC-IP List

MAC List configuration can be used to control which physical LAN devices can access the ports on the pDDL, by restricting or allowing connections based on the MAC address. IP List configuration can be used to define who or what can access the pDDL, by restricting or allowing connections based on the IP Address/Subnet.

MAC-IP List can be used alone or in combination with LAN to WAN Access Control to provide secure access to the physical ports of the pDDL.

System	Network	Wireless	Firewall	Serial	Diag	Admin
Summary	General	Port Forwarding	MAC-IP List	Rules	Firewall Default	
<b>Firewall MAC/IP List</b>						
Firewall MAC List Configuration						
Name	<input type="text" value="mac1"/>					
Action	<input type="button" value="Accept ▾"/>					
Mac Address	<input type="text" value="00:00:00:00:00:00"/>					
<input type="button" value="Add Mac List"/>						
Firewall IP List Configuration						
Name	<input type="text" value="ip1"/>					
Action	<input type="button" value="Accept ▾"/>					
Source <small>?</small>	<input type="button" value="LAN ▾"/>					
Source IP / Prefix <small>?</small>	<input type="text" value="0.0.0.0"/> / <input type="text"/>					
<input type="button" value="Add IP List"/>						
Firewall MAC List Summary						
Name	Action	Source	Mac Address			
Firewall IP List Summary						
Name	Action	Src	Src IP	Prefix		

Image 4-4-4: Firewall > MAC-IP List

### Firewall MAC List Configuration

Rule Name
The Rule Name field is required to give the rule a convenient name for reference. Each rule must have a unique name, up to 10 characters in length.
Values (10 chars)
<b>MAC_List</b>
MAC Address
Specify the MAC Address to be added to the list. Must be entered in the correct format as seen above. Not case sensitive.
Values (MAC Address)
<b>00:00:00:00:00:00</b>



## 4.0 Configuration

### Firewall MAC List Configuration (Continued)

Action
The Action is used to define how the rule handles the connection request.
ACCEPT will allow a connection, while REJECT (error) and DROP (quietly dropped), will refuse connections.
ACCEPT DROP REJECT

### Firewall IP List Configuration

Rule Name
The Rule Name field is required to give the rule a convenient name for reference. Each rule must have a unique name, up to 10 characters in length.
IP_List
Action
The Action is used to define how the rule handles the connection request. ACCEPT will allow a connection, while REJECT (error) and DROP (quietly dropped), will refuse connections.
ACCEPT / DROP / REJECT
Source
Enter the specific zone that the IP List will apply to, LAN, WAN or None (both).
LAN/LAN1/WAN/USB NONE
Source IP Address
Match incoming traffic from the specified source IP range. Boxes accept single IP Addresses without network masks, example: 192.168.1.0 to 192.168.1.255 represents all IP Addresses in the 192.168.1.0/24 network. (Put same IP in both boxes for a single IP match.)
192.168.0.0
Destination Address
Match incoming traffic from the specified destination IP range. Boxes accept single IP Addresses without network masks, example: 192.168.1.0 to 192.168.1.255 represents all IP Addresses in the 192.168.1.0/24 network. (Put same IP in both boxes for a single IP match.)
192.168.0.0

## 4.0 Configuration

## 4.4.5 Firewall > Rules

The Rules configuration can be used to define specific rules on how local and remote devices access different ports and services. MAC List and IP List are used for general access, and are applied before rules are processed.

It is highly recommended to block as much traffic as possible from the modem, especially when using a public IP address. The best security would be to allow traffic only from trusted IP addresses, and only the specific ports being used, and block everything else. Not configuring the firewall and the firewall rules correctly could result in unpredictable data charges from your provider.

*Image 4-4-5: Firewall > Rules*

Rule Name	Values (10 Chars)
The rule name is used to identify the created rule. Each rule must have a unique name and up to 10 characters can be used.	characters
Action	Values (selection)
The Action is used to define how the rule handles the connection request.  ACCEPT will allow a connection, while REJECT (error) and DROP (quietly dropped), will refuse connections.	ACCEPT DROP REJECT
Source	Values
Select the zone which is to be the source of the data traffic. The LAN/WAN refers to local connections on the pDDL.	LAN/WAN/Independent LAN/None

## 4.0 Configuration

Source IPs	Match incoming traffic from the specified source IP range. Boxes accept single IP Addresses without network masks, example: 192.168.1.0 to 192.168.1.255 represents all IP Addresses in the 192.168.1.0/24 network. (Put same IP in both boxes for a single IP match.)	Values (IP Address)  192.168.0.0 to 192.168.0.0
Destination	Select the zone which is the intended destination of the data traffic. The selections shown will reflect any network interfaces configured.	Values (selection)  LAN/WAN/None (varies)
Destination IPs	Match incoming traffic from the specified destination IP range. Boxes accept single IP Addresses without network masks, example: 192.168.1.0 to 192.168.1.255 represents all IP Addresses in the 192.168.1.0/24 network. (Put same IP in both boxes for a single IP match.)	Values (IP Address)  192.168.0.0 to 192.168.0.0
Destination Port	Match incoming traffic directed at the given destination port or port range.  (To specify a port range use a From:To (100:200) format)	Values (port)  0
Protocol	The protocol field defines the transport protocol type controlled by the rule.	Values  TCP UDP Both ICMP



## 4.0 Configuration

### 4.4.6 Firewall > Default

The firewall can be returned to default setting without requiring the entire modem to be reset to defaults. It is recommended to restart the modem once changes to the firewall or a reset is performed.

A screenshot of the Microhard pDDL web interface. The top navigation bar includes links for System, Network, Wireless, Firewall (which is highlighted), Serial, Diag, and Admin. Below this is a secondary navigation bar with Summary, General, Port Forwarding, MAC-IP List, Rules, and Firewall Default (which is also highlighted). The main content area is titled 'Firewall Default'. It contains a 'Notice' section with instructions: 'Firewall Default is available now. Please follow the steps:' followed by '1. Click the following button.' and '2. Wait couple of seconds.' Below this is a button labeled 'Let's go to default now.' At the bottom right of the page, there is a copyright notice: 'Copyright © 2014-2016 Microhard. pDDL'.

Image 4-4-6: Firewall > Default

## 4.0 Configuration

## 4.5 Serial

#### 4.5.1 Serial > Summary


The Serial > Summary window gives a summary of the on board serial data port. A second serial port can be added to the pDDL OEM by interfacing a FTDI USB to Basic UART IC as shown in [Appendix D: Serial Port Extension](#).

**GS0** - If the pDDL has been set to USB Device mode (Pin 14 connected to GND through a 1K resistor), the GS0 tab will appear and the USB port can be used to connect to a USB host that has the Microhard Composite Drivers installed. The USB port will appear as a serial device on the host system.

The Summary window shows a number of status items that aid in viewing the operation, statistics, and troubleshooting of the RS232 & USB Serial Ports.

## **General Status**

- Port Status - Shows if the RS232 has been enabled in the configuration.
  - Baud Rate - The current baud rate used to interface with the connected device.
  - Connect As - The type of IP Protocol Config is displayed here (TCP, UDP, SMTP, PPP, etc)
  - Connect Status - Shows if there are any current connections / if the port is active.

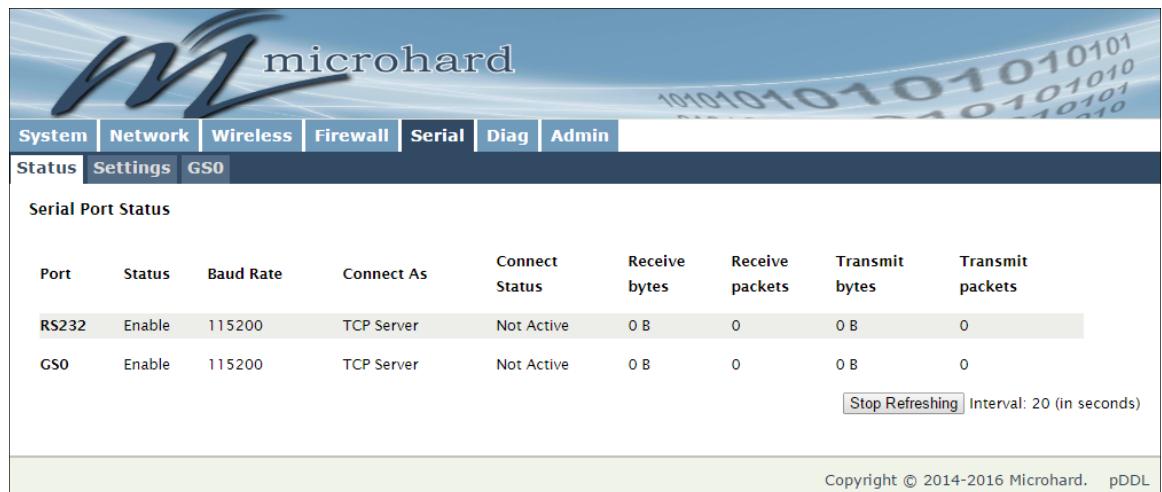

*Image 4-5-1: Serial > Summary*

## 4.0 Configuration

## 4.6.2 Serial > Settings

This menu option is used to configure the serial device server for the serial communications port. Serial device data may be brought into the IP network through TCP, UDP, or multicast; it may also exit the pDDL network on another pDDL serial port. The fully-featured RS232 interface supports hardware handshaking.

**microhard**

System Network Wireless Firewall Serial Diag Admin

Status Settings GSO

### Serial Port Configuration

#### Port Configuration

Port status	<input type="button" value="Data"/>
Escape Sequence	<input type="button" value="Disabled"/>
Data Baud Rate	<input type="button" value="115200"/>
Data Format	<input type="button" value="8N1"/>
Data Mode <small>ⓘ</small>	<input type="radio"/> Seamless <input checked="" type="radio"/> Transparent
Character Timeout	<input type="button" value="24"/>
Maximum Packet Size	<input type="button" value="256"/>
No-Connection Data <small>ⓘ</small>	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
MODBUS TCP Status	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
IP Protocol Config	<input type="button" value="TCP Server"/>

#### TCP Configuration

Server Mode	<input checked="" type="radio"/> Monitor <input type="radio"/> Polling
Polling Timeout (seconds)	<input type="button" value="10"/>
Local Listening port	<input type="button" value="20002"/>
Incoming Connection Timeout(seconds)	<input type="button" value="300"/>
Fast Recovery <small>ⓘ</small>	<input type="radio"/> Disable <input checked="" type="radio"/> Enable

*Image 4-5-2: Serial > Settings Configuration*



## 4.0 Configuration



Note: Most PCs do not readily support serial communications greater than 115200bps.

Port Status	
Select operational status of the Serial Port. The port is in console mode by default.	Values (selection)
Data / Console	
Escape Sequence	
Enabling the escape sequence allows users to temporarily exit data mode and enter console mode for the serial port.	Values (selection)
Enabled / Disabled	
Escape Guard Interval	
Appears only when the Escape Sequence is enabled. Enter the time interval in which the escape sequence must be entered fully.	Values (seconds)
1	
Escape Sequence String	
Only shown when the escape sequence is enabled. Enter the characters to be used for the escape sequence.	Values (characters)
+++	
Data Baud Rate	
The serial baud rate is the rate at which the modem is to communicate with the attached local asynchronous device.	Values (bps)
921600 460800 230400 115200 57600 38400 28800 19200 14400	9600 7200 4800 3600 2400 1200 600 300
Data Format	
This setting determines the format of the data on the serial port. The default is 8 data bits, No parity, and 1 Stop bit.	Values (selection)
8N1 8E1 8O1	

## 4.0 Configuration

Data Mode

This setting defines the serial output data framing. In Transparent mode (default), the received data will be output promptly from the pDDL.

**Values (selection)**

Seamless / Transparent

When set to Seamless, the serial port server will add a gap between data frames to comply with the MODBUS protocol for example. See 'Character Timeout' below for related information.

**Character Timeout**

In Seamless mode (see Data Mode described on the preceding page), this setting determines when the serial server will consider the recently-received incoming data as being ready to transmit. As per the MODBUS standard, frames will be marked as 'bad' if the time gap between frames is greater than 1.5 characters, but less than the Character Timeout value.

**Values (characters)**

24

The serial server also uses this parameter to determine the time gap inserted between frames. It is measured in 'characters' and related to baud rate.

Example: If the baud rate is 9600bps, it takes approximately 1ms to move one character. With the Character Timeout set to 4, the timeout period is 4ms. When the calculated time is less than 3.5ms, the serial server will set the character timeout to a minimum value of 3.5ms.

If the baud rate is greater than 19200bps, the minimum character timeout is internally set to 750us (microseconds).

**Maximum Packet Size**

Defines the buffer size that the serial server will use to receive data from the serial port. When the server detects that the Character Timeout criteria has been met, or the buffer is full, it packetizes the received frame and transmits it.

**Values (bytes)**

256

**No-Connection Data**

When enabled the data will continue to buffer received on the serial data port when the radio loses synchronization. When disabled the pDDL will disregard any data received on the serial data port when radio synchronization is lost.

**Values (selection)**

Disable / Enable

**MODBUS TCP Status**

This option will enable or disable the MODBUS decoding and encoding features.

**Values (selection)**

## 4.0 Configuration

IP Protocol Config	
This setting determines which protocol the serial server will use to transmit serial port data over the pDDL network.	<b>Values (selection)</b>
The protocol selected in the IP Protocol Config field will determine which configuration options appear in the remainder of the RS232 Configuration Menu.	TCP Client TCP Server TCP Client/Server UDP Point-to-Point PPP (Not supported on USB)

**TCP Client:** When TCP Client is selected and data is received on its serial port, the pDDL takes the initiative to find and connect to a remote TCP server. The TCP session is terminated by this same unit when the data exchange session is completed and the connection timeout has expired. If a TCP connection cannot be established, the serial port data is discarded.

- **Remote Server Address**  
IP address of a TCP server which is ready to accept serial port data through a TCP connection. For example, this server may reside on a LAN network server.  
Default: **0.0.0.0**
  - **Remote Server Port**  
A TCP port which the remote server listens to, awaiting a session connection request from the TCP Client. Once the session is established, the serial port data is communicated from the Client to the Server.  
Default: **20001**
  - **Outgoing Connection Timeout**  
This parameter determines when the pDDL will terminate the TCP connection if the connection is in an idle state (i.e. no data traffic on the serial port).  
Default: **60** (seconds)
  - **Fast Recovery**  
Sets the TCP session parameters and buffers to be set such that TCP sessions recover faster in environments where the wireless link is weak/unstable. This is ideal for critical, near real time applications such as flight control data. Data is not buffered during outages.  
Default: **Disable**

UDP: User Datagram Protocol does not provide sequencing information for the packets sent nor does it establish a 'connection' ('handshaking') and is therefore most suited to communicating small packets of data.

UDP: User Datagram Protocol does not provide sequencing information for the packets sent nor does it establish a 'connection' ('handshaking') and is therefore most suited to communicating small packets of data.

TCP: Transmission Control Protocol in contrast to UDP does provide sequencing information and is connection-oriented; a more reliable protocol, particularly when large amounts of data are being communicated.

Requires more bandwidth than UDP

**TCP Server:** In this mode, the pDDL Series will not INITIATE a session, rather, it will wait for a Client to request a session of it (it's being the Server—it 'serves' a Client). The unit will 'listen' on a specific TCP port. If a session is established, data will flow from the Client to the Server, and, if present, from the Server to the Client. If a session is not established, both Client-side serial data, and Server-side serial data , if present, will be discarded.

- **Local Listening Port**  
The TCP port which the Server listens to. It allows a TCP connection to be created by a TCP Client to carry serial port data.  
Default: **20001**
  - **Incoming Connection Timeout**  
Established when the TCP Server will terminate the TCP connection if the connection is in an idle state.  
Default: **300** (seconds)
  - **Fast Recovery**  
Sets the TCP session parameters and buffers to be set such that TCP sessions recover faster in environments where the wireless link is weak/unstable. This is ideal for critical, near real time applications such as flight control data. Data is not buffered during outages.  
Default: **Disable**

## 4.0 Configuration

## IP Protocol Config (Continued...)



A UDP or TCP port is an application end-point. The IP address identifies the device and, as an extension of the IP address, the port essentially 'fine tunes' where the data is to go 'within the device'.

Be careful to select a port number that is not predetermined to be associated with another application type, e.g. HTTP uses port 80.

**TCP Client/Server:** In this mode, the pDDL will be a combined TCP Client and Server, meaning that it can both initiate and serve TCP connection (session) requests. Refer to the TCP Client and TCP Server descriptions and settings described previously as all information, combined, is applicable to this mode.

**UDP Point-to-Point:** In this configuration the pDDL will send serial data to a specifically-defined point, using UDP packets. This same pDDL will accept UDP packets from that same point.

- **Remote IP Address**  
IP address of distant device to which UDP packets are sent when data received at serial port.  
Default: **0.0.0.0**
  - **Remote Port**  
UDP port of distant device mentioned above.  
Default: **20001**
  - **Listening Port**  
UDP port which the IP Series listens to (monitors). UDP packets received on this port are forwarded to the unit's serial port.  
Default: **20001**
  - **UDP Timeout(s)**  
UDP Timeout in seconds.  
Default: **10**



1010101010101010101010  
010101010101010101010101  
10101010101010101010101  
010101010101010101010101  
101010101010101010101010

## 4.0 Configuration

### IP Protocol Config (Continued...)

**PPP:** The serial port can be configured as a PPP server for a serial connection with a PC or other device. The attached PC could then use a dedicated serial (WindowsXP - dialup/modem) type PPP connection to access the network resources of the pDDL.

- **PPP Mode**  
Can be set for Active or Passive. If set for Active, the PPP server will initiate the PPP connection with a PPP client. The server will periodically send out link requests following PPP protocol. If set to Passive, the PPP server will not initiate the PPP connection with PPP client. The server will wait passively for the client to initiate connection.  
Default: **Passive**
- **Expected String**  
When a client (PC or device) initiates a PPP session with the modem, this is the handshaking string that is expected in order to allow a connection. Generally this does not need to be changed.  
Default: **CLIENT**
- **Response String**  
This is the handshaking string that will be sent by the modem once the expected string is received. Generally this does not need to be changed.  
Default: **CLIENTSERVER**
- **PPP LCP Echo Failure Number**  
The PPP server will presume the peer to be dead if the LCP echo-requests are sent without receiving a valid LCP echo-reply. If this happens, PPP server will terminate the connection. Use of this option requires a non-zero value for the LCP Echo Interval parameter. This option can be used to enable PPP server to terminate after the physical connection has been broken (e.g., the modem has hung up).  
Default: **0**
- **PPP LCP Echo Interval**  
The PPP server will send an LCP echo-request frame to the peer every 'n' seconds. Normally the peer should respond to the echo-request by sending an echo-reply. This option can be used with the LCP-echo-failure option to detect that the peer is no longer connected.  
Default: **0**
- **PPP Local IP**  
Enter the local PPP IP Address, the IP Address of the pDDL COM Port.  
Default: **192.168.0.1**
- **PPP Host IP**  
Enter the PPP Host IP here. This is the IP of the PC or attached device.  
Default: **192.168.0.99**
- **PPP Idle Timeout(s)**  
It is the timeout for tearing down the ppp connection when there is no data traffic within the time interval. When there is data coming, new ppp connection will be created.  
Default: **30**



## 4.0 Configuration

### 4.6.3 Serial > GS0

This tab only appears if the pDDL has been set to operate as a USB Device (Pin 14 connected to GND through a 1k resistor). Microhard USB Serial Composite Drivers are available which allow the pDDL to appear as a serial device to a USB Host (PC etc.)

The USB port can be set to "Idle" or to operate as a Data port as seen below:

A screenshot of the Microhard web-based configuration interface. The top navigation bar includes links for System, Network, Wireless, Firewall, Serial, Diag, Admin, Status, Settings, and GS0. The GS0 link is highlighted. The main content area is titled "GS0 Serial Port Configuration". It contains two sections: "Port Configuration" and "TCP Configuration".

**Port Configuration**

Port status	Data
Data Baud Rate	115200
Data Format	8N1
Flow Control	none
Data Mode	<input checked="" type="radio"/> Seamless <input type="radio"/> Transparent
Character Timeout	24
Maximum Packet Size	256
No-Connection Data	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
MODBUS TCP Status	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
IP Protocol Config	TCP Server

**TCP Configuration**

Server Mode	<input checked="" type="radio"/> Monitor <input type="radio"/> Polling
Polling Timeout (seconds)	10
Local Listening port	20003
Incoming Connection Timeout(seconds)	300
Fast Recovery	<input type="radio"/> Disable <input checked="" type="radio"/> Enable

Image 4-5-2: Serial > Settings Configuration

### GS0 Serial Port Configuration

The USB port configuration is identical to the Serial Port > Settings parameters. For help or definitions of each field, refer to the previous section of this manual which describes the available settings.



## 4.0 Configuration

### 4.6 Diag

#### 4.6.1 Diag > Ping

The Network Tools Ping feature provides a tool to test network connectivity from within the pDDL unit. A user can use the Ping command by entering the IP address or host name of a destination device in the Ping Host Name field, use Count for the number of ping messages to send, and the Packet Size to modify the size of the packets sent.

<b>System</b>	<b>Network</b>	<b>Wireless</b>	<b>Firewall</b>	<b>Serial</b>	<b>Diag</b>	<b>Admin</b>	
<b>Ping</b>	<b>Traceroute</b>	<b>Iperf</b>					
<b>Network Tools</b>							
<b>Ping</b>							
Ping Host Name	<input type="text" value="192.168.168.250"/>						
Ping Count	<input type="text" value="4"/> (0 = continuous)						
Ping Size	<input type="text" value="56"/>						
<input type="button" value="Start"/> <input type="button" value="Stop"/> <input type="button" value="Clear"/>							
<pre>Please wait for output of "ping -c 4 -s 56 192.168.168.250"... PING 192.168.168.250 (192.168.168.250): 56 data bytes 03:39:24.160097 -- sending icmp request 64 bytes from 192.168.168.250: seq=0 ttl=128 time=5.763 ms 03:39:25.160753 -- sending icmp request 64 bytes from 192.168.168.250: seq=1 ttl=128 time=0.788 ms 03:39:26.161321 -- sending icmp request 64 bytes from 192.168.168.250: seq=2 ttl=128 time=0.851 ms 03:39:27.161916 -- sending icmp request</pre>							

Image 4-6-1: Diagnostics > Ping

#### 4.6.2 Diag > Traceroute

The **Traceroute** command can be used to provide connectivity data by providing information about the number of hops, routers and the path taken to reach a particular destination.

<b>System</b>	<b>Network</b>	<b>Wireless</b>	<b>Firewall</b>	<b>Serial</b>	<b>Diag</b>	<b>Admin</b>	
<b>Ping</b>	<b>Traceroute</b>	<b>Iperf</b>					
<b>Network Tools</b>							
<b>Traceroute</b>							
Traceroute Host Name	<input type="text" value="192.168.168.250"/>						
<input type="button" value="Start"/> <input type="button" value="Stop"/> <input type="button" value="Clear"/>							
<pre>Begin traceroute test at ... 1 * * * 2 * * * 3 * * * 4 * * * 5 * * * 6 * * * 7 * * * 8 * * * 9 * * * 10 * * * 11 * * * 12 * * *</pre>							

Image 4-6-2: Diagnostics > Trace Route

## 4.0 Configuration

### 4.6.3 Diag > Iperf

The pDDL features an integrated Iperf server/client to use to measure and analyze throughput of TCP/UDP packets to and/or from the pDDL. Iperf is a 3rd party utility that can be loaded on any PC to measure network performance. For additional information about Iperf, please visit the [Iperf website](#).

The pDDL can be configured to operate as a Server, listening for an incoming connection from another device (with Iperf), or PC running an Iperf client. If set to Iperf client, the pDDL will connect to or send packets to a specified Iperf server.

**System | Network | Wireless | Firewall | Serial | Diag | Admin**

**Ping Traceroute Iperf**

### Throughput Testing

#### Iperf Configuration

Iperf Mode	<input type="button" value="Server ▾"/>
Server Status	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Protocol	<input type="button" value="TCP ▾"/>
TCP Window Size	<input type="text" value="128K"/> (0 for default 85.3KByte)
TCP Maximum Segment Size	<input type="text" value="0"/> (0 for default)
<input type="button" value="Save Server Settings"/>	

---

#### Iperf Configuration

Iperf Mode	<input type="button" value="Client ▾"/>
Protocol	<input type="button" value="TCP ▾"/>
Remote Server IP Address	<input type="text" value="192.168.168.100"/>
Duration(seconds)	<input type="text" value="5"/>
TCP Window Size	<input type="text" value="128K"/> (0 for default 85.3KByte)
TCP Maximum Segment Size	<input type="text" value="0"/> (0 for default)
Report Format	<input type="button" value="Mbits ▾"/>
<input type="button" value="Save &amp; Run Test"/>	

*Image 4-6-3: Diag > Iperf*

Iperf Mode	Select between an Iperf Server (listens for incoming connections) and client (initiates a connection with a server)	Values (selection)	Server / Client
Server Status	If the Iperf mode is set to Server, this Server Status allows a user to Enable or Disable the server.	Values (selection)	Enable / Disable
Protocol	Select the type of packets to be sent to test the throughput. TCP packets are connection oriented and require additional overhead for the handshaking that occurs, while UDP is a connectionless, best effort oriented protocol.	Values (selection)	TCP / UDP



## 4.0 Configuration

### 4.7 Admin

#### 4.7.1 Admin > Users

##### Password Change

The Password Change menu allows the password of the user 'admin' to be changed. The 'admin' username cannot be deleted, but additional users can be defined and deleted as required as seen in the Users menu below. After the modem has been reset to factory defaults, it is mandatory to change the default password for admin, the modem will prompt a user to do so upon the first login.

System	Network	Wireless	Firewall	Serial	Diag	Admin	
Users	SNMP	Discovery	Logout				
<b>Access Control</b>							
New password will take effect immediately after pressing "Change Password" button.							
Account Name	admin						
Change Password	<input type="text"/> (5-64 characters, no space)						
Confirm Password	<input type="text"/>			<input type="button" value="Change Password"/>			
Add User (It will take effect immediately after pressing "Add User" button)							
Username	<input type="text"/> (5-32 characters)						
Password	<input type="text"/> (5-64 characters, no space)						
Confirm Password	<input type="text"/>						
System	<input type="button" value="Hide Submenu"/>						
Network	<input type="button" value="Hide Submenu"/>						
Wireless	<input type="button" value="Hide Submenu"/>						
Firewall	<input type="button" value="Hide Submenu"/>						
Serial	<input type="button" value="Hide Submenu"/>						
Diag	<input type="button" value="Hide Submenu"/>						
Admin	<input type="button" value="Hide Submenu"/>						
Add User	<input type="button" value="Add User"/>						
<b>Users Summary</b>							
No users defined.							

Image 4-7-1: Users > Password Change

Enter a new password for the 'admin' user. It must be at least 5 characters in length. **The default password for 'admin' is 'admin'.**

**New Password**

**Values (characters)**

admin

**Confirm Password**

**Values (characters)**

admin



## 4.0 Configuration

### Add Users

Different users can be set up with customized access to the WebUI. Each menu or tab of the WebUI can be disabled on a per user basis as seen below.

System   Network   Wireless   Firewall   Serial   Diag   Admin			
<a href="#">Users</a> <a href="#">SNMP</a> <a href="#">Discovery</a> <a href="#">Logout</a>			
<b>Access Control</b> New password will take effect immediately after pressing "Change Password" button Account Name: admin Change Password: <input type="password"/> (5-64 characters) Confirm Password: <input type="password"/> Change Add User (It will take effect immediately after pressing "Add User" button) Username: <input type="text"/> (5-32 characters) Password: <input type="password"/> (5-64 characters) Confirm Password: <input type="password"/> System: Hide Submenu ▾ Network: Hide Submenu ▾ Wireless: Hide Submenu ▾ Firewall: Hide Submenu ▾ Serial: Hide Submenu ▾ Diag: Hide Submenu ▾ Admin: Hide Submenu ▾ Add User: <a href="#">Add User</a> <b>Users Summary</b> No users defined.			
System: Show Submenu ▾ Settings: Disable ▾ Services: Disable ▾ Maintenance: Disable ▾ Reboot: Disable ▾  Network: Show Submenu ▾ Status: Disable ▾ LAN: Disable ▾ WAN: Disable ▾ USB: Disable ▾ DHCP: Disable ▾ Routes: Disable ▾ Ports: Disable ▾ DeviceList: Disable ▾  Wireless: Show Submenu ▾ Status: Disable ▾ RF: Disable ▾  Firewall: Show Submenu ▾ Summary: Disable ▾ General: Disable ▾ PortForwarding: Disable ▾ MACIPList: Disable ▾ Rules: Disable ▾ FirewallDefault: Disable ▾  Serial: Hide Submenu ▾ Diag: Hide Submenu ▾ Admin: Hide Submenu ▾ Add User: <a href="#">Add User</a>			

Image 4-7-2: Access Control > Users

Username	
----------	--

Enter the desired username. Minimum of 5 character and maximum of 32 character. Changes will not take effect until the system has been restarted.

**Values (characters)**

(no default)  
Min 5 characters  
Max 32 characters

Password / Confirm Password	
-----------------------------	--

Passwords must be a minimum of 5 characters. The Password must be re-entered exactly in the Confirm Password box as well.

**Values (characters)**

(no default)  
min 5 characters

## 4.0 Configuration

## 4.7.2 Admin > SNMP

The pDDL may be configured to operate as a Simple Network Management Protocol (SNMP) agent. Network management is most important in larger networks, so as to be able to manage resources and measure performance. SNMP may be used in several ways:

- configure remote devices
  - monitor network performance
  - detect faults
  - audit network usage
  - detect authentication failures

i

**SNMP:** Simple Network Management Protocol provides a method of managing network devices from a single PC running network management software.

Managed networked devices are referred to as SNMP agents.

A SNMP management system (a PC running SNMP management software) is required for this service to operate. This system must have full access to the pDDL. Communications is in the form of queries (information requested by the management system) or traps (information initiated at, and provided by, the SNMP agent in response to predefined events).

Objects specific to the pDDL are hosted under private enterprise number **21703**.

An object is a variable in the device and is defined by a Management Information Database (MIB). Both the management system and the device have a copy of the MIB. The MIB in the management system provides for identification and processing of the information sent by a device (either responses to queries or device-sourced traps). The MIB in the device relates subroutine addresses to objects in order to read data from, or write data to, variables in the device.

An SNMPv1 agent accepts commands to retrieve an object, retrieve the next object, set and object to a specified value, send a value in response to a received command, and send a value in response to an event (trap).

SNMPv2c adds to the above the ability to retrieve a large number of objects in response to a single request.

SNMPv3 adds strong security features including encryption; a shared password key is utilized. Secure device monitoring over the Internet is possible. In addition to the commands noted as supported above, there is a command to synchronize with a remote management station.

The pages that follow describe the different fields required to set up SNMP on the pDDL. MIBS may be requested from Microhard Systems Inc.

The MIB file can be downloaded directly from the unit using the '**Get MIB File**' button on the Network > SNMP menu.





## 4.0 Configuration

### SNMP Settings

System		Network		Wireless		Firewall		Serial		Diag		Admin	
												<b>Users</b>	
												<b>SNMP</b>	
												<b>Discovery</b>	
												<b>Logout</b>	
<b>SNMP Settings</b>													
<b>SNMP Settings</b>													
SNMP Agent Status	<input type="button" value="Enable"/> <input type="text" value="public"/> <input type="text" value="private"/> <input type="text" value="161"/> <input type="button" value="Version 3"/> <input type="text" value="userV3"/> <input type="button" value="Read Only"/> <input type="button" value="AuthPriv"/> <input type="button" value="MD5"/> <input type="text" value="....."/> <input type="checkbox" value="Show Secret"/> <input type="button" value="DES"/> <input type="text" value="....."/> <input type="checkbox" value="Show Secret"/>												
SNMP Trap Settings	<input type="button" value="Disable"/>												
Download MIB File	<input type="button" value="Get MIB File"/>												

Image 4-7-3: Admin > SNMP

<b>SNMP Agent Status</b>	
If disabled, an SNMP service is not provided from the device. Enabled, the device - now an SNMP agent - can support SNMPv1, v2, & v3.	<b>Values (selection)</b>
	<b>Disable / Enable</b>
<b>Read Only Community Name</b>	
Effectively a plain-text password mechanism used to weakly authenticate SNMP queries. Being part of the community allows the SNMP agent to process SNMPv1 and SNMPv2c requests. This community name has only READ priority.	<b>Values (string)</b>
	<b>public</b>
<b>Read Write Community Name</b>	
Also a plain-text password mechanism used to weakly authenticate SNMP queries. Being part of the community allows the SNMP agent to process SNMPv1 and SNMPv2c requests. This community name has only READ/WRITE priority.	<b>Values (string)</b>
	<b>private</b>
<b>Listening Port</b>	
Enter the UDP port on which the pDDL listens for incoming SNMP get/ set messages. The default is port 161.	<b>Values (UDP Port)</b>
	<b>161</b>

## 4.0 Configuration

SNMP Version	
Select the SNMP version used. Only SNMP version 1 & 2 support SNMP traps (See MIB).	<b>Values (selection)</b> Version 1 / <b>Version 2</b> / Version 3
SNMP V3 User Name	
Defines the user name for SNMPv3.	<b>Values (string)</b> V3user
V3 User Read Write Limit	
Defines accessibility of SNMPv3; If Read Only is selected, the SNMPv3 user may only read information; if Read Write is selected, the SNMPv3 user may read and write (set) variables.	<b>Values (selection)</b> Read Only / Read Write
V3 User Authentication Level	
Defines SNMPv3 user's authentication level: NoAuthNoPriv: No authentication, no encryption. AuthNoPriv: Authentication, no encryption. AuthPriv: Authentication, encryption.	<b>Values (selection)</b> NoAuthNoPriv AuthNoPriv AuthPriv
V3 User Authentication Password	
SNMPv3 user's authentication password. Only valid when V3 User Authentication Level set to AuthNoPriv or AuthPriv.	<b>Values (string)</b> 00000000
V3 User Privacy Password	
SNMPv3 user's encryption password. Only valid when V3 User Authentication Level set to AuthPriv (see above).	<b>Values (string)</b> 00000000
Auth Failure Traps	
If enabled, an authentication failure trap will be generated upon authentication failure. (SNMP v1 & v2 only).	<b>Values (selection)</b> Disable / Enable
Trap Community Name	
The community name which may receive traps. (SNMP v1 & v2 only).	<b>Values (string)</b> TrapUser
Trap Manage Host IP	
Defines a host IP address where traps will be sent to (e.g. SNMP management system PC IP address). (SNMP v1 & v2 only).	<b>Values (IP Address)</b>



## 4.0 Configuration

### SNMP Trap Settings

SNMP Trap Settings	
SNMP Trap Status	<input type="button" value="Enable ▾"/>
Trap Community Name	<input type="text" value="TrapUser"/> 0.0.0.0-Disable
Trap Manage Host IP	<input type="text" value="0.0.0.0"/> 0.0.0.0-Disable
Auth Failure Traps	<input type="button" value="Disable ▾"/>
Trap Selection:	
RSSI	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
RSSI Threshold	<input type="text" value="90"/> [30 - 120] (- dBm)
Resend Interval (seconds)	<input type="text" value="90"/> [0 - 65535] 0-Disable
WAN IP	<input type="radio"/> Disable <input checked="" type="radio"/> Enable

Image 4-7-4: Admin > SNMP Trap Settings

SNMP Trap Status	
Enable or disable autonomous SNMP traps from the device.	<b>Values (selection)</b>
	<b>Disable / Enable</b>
Trap Community Name	
Effectively a plain-text password mechanism used to weakly authenticate SNMP queries. Being part of the community allows the SNMP agent to process SNMP traps.	<b>Values (string)</b>
	<b>TrapUser</b>
Trap Manage Host IP	
Enter the IP address of the SNMP host to which SNMP traps are sent from the device.	<b>Values (IP Address)</b>
	<b>0.0.0.0</b>
Auth Failure Traps	
Enable or Disable authentication requirements for outgoing configured SNMP event traps.	<b>Values (selection)</b>
	<b>Disable / Enable</b>
RSSI	
Enable or Disable RSSI traps. The threshold in which that traps are triggered can also be configured, as well as the frequency at which the traps are sent when the threshold has been crossed.	<b>Values (selection)</b>
	<b>Disable / Enable</b>
	<b>90</b> (30-120) in -dBm
	<b>90</b> (0 - 65535 seconds, 0=disabled.)



microhard

pDDL

## 4.0 Configuration

WAN IP	Values (selection)
Enable or Disable WAN IP Traps. Device will send a trap any time the WAN IP has been changed. Generally used with dynamic IP addresses.	<b>Disable / Enable</b>



## 4.0 Configuration

### 4.7.3 Admin > Discovery

#### Server Status Settings

Microhard Radios employ a discovery service that can be used to detect other Microhard devices on a network. This can be done using a stand alone utility from Microhard System's called 'IP Discovery' or from the Tools > Discovery menu. The discovery service will report the MAC Address, IP Address, Description, Product Name, Firmware Version, Operating Mode, and the Network ID.

The screenshot shows the Microhard Admin interface with the 'Discovery' tab selected. Under 'Server Status Settings', the 'Discovery server status' is set to 'Enable'. Under 'Server Port Settings', the 'Server Port' is set to '20097'. The 'Network Discovery' section displays a table of discovered devices:

MAC Address	IP Address	Description	Product Name	Firmware Ver	Operation Mode	Network ID
00:0F:92:02:AA:15	192.168.168.1	UserDevice	pDDL	v1.3.0-r1021-4	Master	pDDL

Image 4-7-5: Admin > Discovery

Discovery Service Status	
Use this option to disable or enable the discovery service.	Values (selection)
Disable / Enable	
Server Port Settings	
Specify the port running the discovery service on the pDDL unit.	Values (Port #)
20097	

#### Network Discovery


The Network discovery tool allows the pDDL to send a broadcast to all Microhard devices on the same network. Other units on the network will respond to the broadcast and report their MAC address, IP address (With a hyperlink to that units WebUI page), description, firmware version.

The discovery service can be a useful troubleshooting tool and can be used to quickly find and identify other units on the network.

## 4.0 Configuration

#### 4.7.4 Admin > Logout

The logout function allows a user to end the current configuration session and prompt for a login screen.

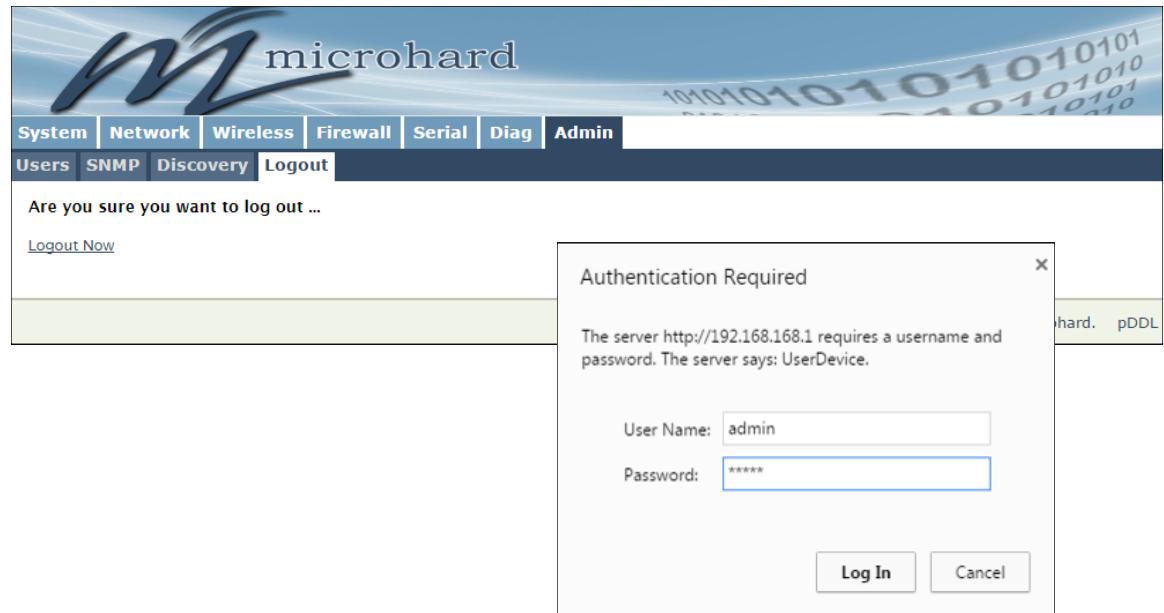

*Image 4-7-6: Admin > logout*


## 5.0 AT Command Line Interface

## 5.1 AT Command Overview

AT Commands can be issued to configure and manage the pDDL, via TCP/IP (telnet).

### 5.1.1 Telnet (TCP/IP)

Telnet can be used to access the AT Command interface of the pDDL. The default port is TCP Port 23. A telnet session can be made to the unit using any Telnet application (Windows Telnet, Tera Term, ProComm etc). Once communication is established, a login is required to continue.

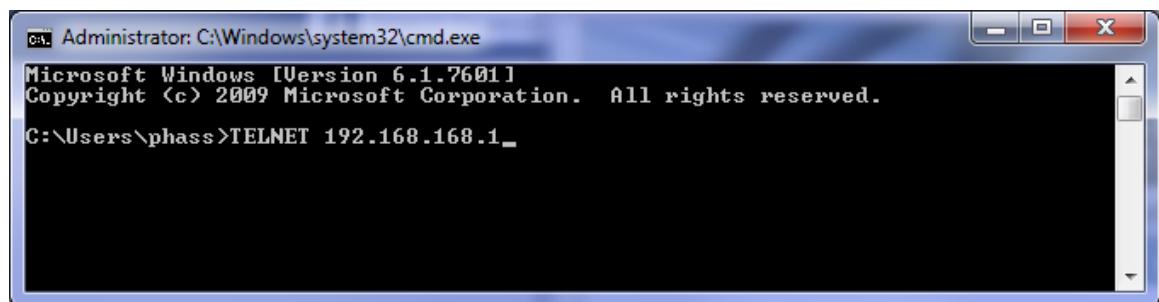

*Image 5-1: Establishing a Telnet Session*


A session can be made to the WAN IP Address (if allowed in the firewall settings) for remote configuration, or to the local RJ45 interface.



The factory default network settings:

**IP: 192.168.168.1  
Subnet: 255.255.255.0  
Gateway: 192.168.168.1**

Once a session is established a login is required to continue. As seen in the Serial port setup, the default login is **admin**, and the password is **admin**. Once verified, the AT Command Line Interface menu is shown and AT Commands can now be issued. (Type “?” or Help to list the commands).

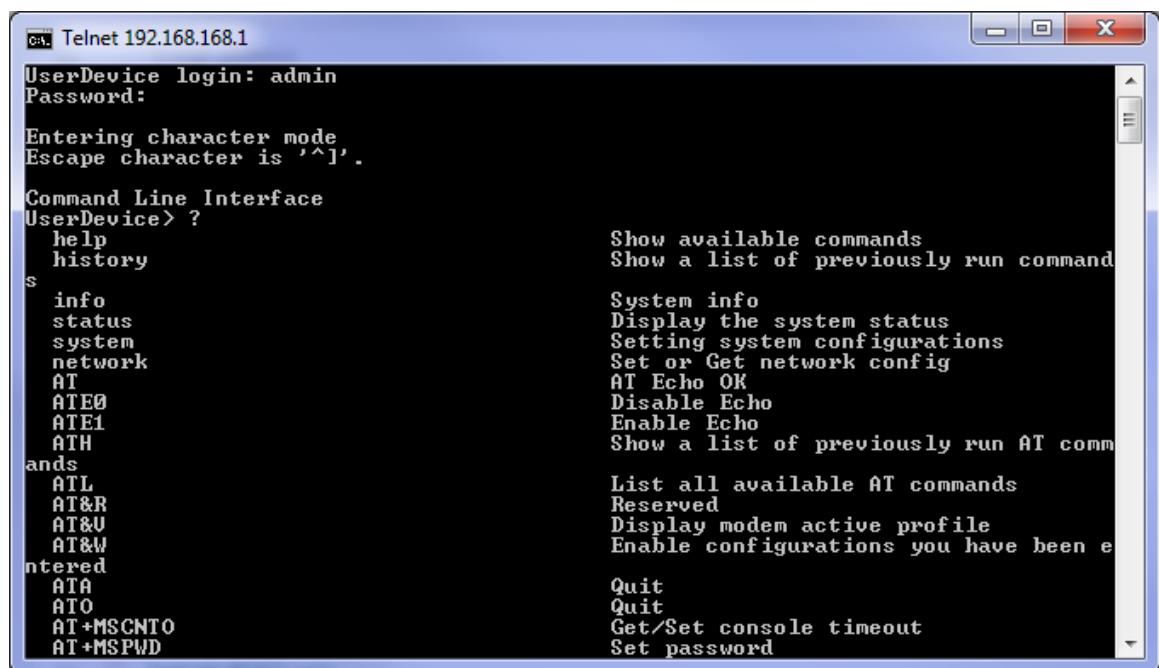

*Image 5-2: Telnet AT Command Session*

## 5.0 AT Command Line Interface

## 5.2 AT Command Syntax

The follow syntax is used when issuing AT Commands on the pDDL

- All commands start with the AT characters and end with the <Enter> key
  - Microhard Specific Commands start with +M
  - Help will list top level commands (ATL will list ALL available AT Commands)
  - To query syntax of a command: AT+<command\_name>=?
  - Syntax for commands that are used only to query a setting:  
AT<command\_name>
  - Syntax for commands that can be used to query *and* set values:  
AT<command\_name>=parameter1,parameter2,... (Sets Values)  
AT<command\_name>? (Queries the setting)

## Query Syntax:

AT+MSCNTO=? <Enter>

+MSCNTO:

Command Syntax: AT+MSCNTO=<Timeout\_s>

#### Parameter:

<Timeout\_s> 30 to 65535 in seconds, 0-Disable

OK

## Setting a value:

AT+MSCNTO=300 <Enter>

OK

## Query a setting:

AT+MSCNTO? <Enter>

+MSCNTO: 300 seconds

OK

A screen capture of the above commands entered into a unit is shown below:

```
Telnet 192.168.168.1
UserDevice> AT+MSCNT0=?
+MSCNT0:
Command Syntax:
  AT+MSCNT0=<Timeout_s>
Parameter:
  <Timeout_s> : 30 to 65535 in seconds, 0=Disable
OK
UserDevice> AT+MSCNT0=300
OK
UserDevice> AT+MSCNT0?
+MSCNT0: 300 seconds
OK
UserDevice> AT+MSCNT0
```

*Image 5-3: Telnet AT Command Syntax*

Once AT commands are entered, they must be saved into the file system to enable the changes.

AT&W                      Saves changes.

**ATO or ATA** Exits the AT Command Line Interface, if used before AT&W, changes are discarded.



## 5.0 AT Command Line Interface

### 5.3 Supported AT Commands

Basic AT Commands			
AT Command	Description	Syntax	Effect
AT	AT echo OK	AT <enter>	Immediate
ATE0	Disable echo	ATE0 <enter>	Immediate
ATE1	Enabled local echo	ATE1 <enter>	Immediate
ATH	Show a list of previously run commands	ATH <enter>	Immediate
ATL	Show a list of all available AT Commands	ATL <enter>	Immediate
AT&R	Read modem profile to editable profile. (Reserved)	AT&R <enter>	Immediate
AT&V	Read modem active profile	AT&V <enter>	Immediate
AT&W	Enable configuration changes that have been entered	AT&W <enter>	Immediate
ATA	Quit. Exits AT command session and returns to login prompt	ATA <enter>	Immediate
ATO	Quit. Exits AT command session and returns to login prompt	ATO <enter>	Immediate

### Administrative AT Commands

AT Command	Description	Syntax	Effect
AT+MADISS	Get/Set discovery service used by the modem	<b>AT+MADISS[=&lt;Mode&gt;[,&lt;Port&gt;]]</b> Mode: 0 - Disable 1 - Discoverable Port: 1 to 65535. Default is 20097	AT&W
AT+MASNMP	Get/Set SNMP service	<b>AT+MASNMP[=&lt;Mode&gt;[,&lt;ROCommunity&gt;,&lt;RWCommunity&gt;,&lt;Port&gt;,&lt;Version&gt;]]</b> <Mode>: 0 - Disable 1 - Enable <ROCommunity>: Read Only Community Name 1 to 32 characters <RWCommunity>: Read Write Community Name 1 to 32 characters <Port>: Listening Port 0 to 65535. Default is 161 <Version>: SNMP version 1 - Version 1 2 - Version 2 3 - Version 3 (Use AT+MASNMPV3 to set Authentication and Privacy parameters)	AT&W
AT+MASNMPV3	Get/Set SNMP Version 3	<b>AT+MASNMPV3=&lt;UserName&gt;,&lt;RWLimit&gt;,&lt;AuthLevel&gt;[,&lt;Auth&gt;,&lt;AuthPassword&gt;[,&lt;Privacy&gt;,&lt;PrivacyPassword&gt;]]</b> <UserName> : V3 User Name 1 to 32 characters <RWLimit> : V3 User Read Write Limit 0 - Read Only 1 - Read Write <AuthLevel> : V3 User Authentication Level 0 - NoAuthNoPriv 1 - AuthNoPriv 2 - AuthPriv <Auth> : V3 Authentication Protocol 0 - MD5 1 - SHA <AuthPassword> : V3 Authentication Password 5 to 64 characters <Privacy> : V3 Privacy Protocol 0 - DES 1 - AES <PrivacyPassword>: V3 Privacy Password 5 to 64 characters Usage: NoAuthNoPriv : AT+MASNMPV3=<UserName>,<RWLimit>,0 AuthNoPriv : AT+MASNMPV3=<UserName>,<RWLimit>,1,<Auth>,<AuthPassword> AuthPriv : AT+MASNMPV3=<UserName>,<RWLimit>,2,<Auth>,<AuthPassword>,<Privacy>,<PrivacyPassword>	AT&W



## 5.0 AT Command Line Interface

Administrative AT Commands (Continued)			
AT Command	Description	Syntax	Effect
AT+MASNMPTRAP	Get/Set SNMP Trap	<b>AT+MASNMPTRAP[=&lt;Mode&gt;[,&lt;Name&gt;,&lt;IP&gt;[,&lt;AuthFailureTraps&gt;]]</b> <Mode>: 0 - Disable 1 - Enable <Name>: Trap Community Name. 1 to 32 characters <IP>: Trap Manage Host IP. Default 0.0.0.0 (Disable) <AuthFailureTraps>: 0 - Disable 1 - Enable Usage: AT+MASNMPTRAP AT+MASNMPTRAP=0 AT+MASNMPTRAP=1[,<Name>,<IP>[,<AuthFailureTraps>]]	AT&W
Serial Port AT Commands			
AT Command	Description	Syntax	Effect
AT+MCPS2	Get/Set Serial port	<b>AT+MCPS2=&lt;Mode&gt;</b> Parameters: COM2 Mode: 0 - Console 1 - Data	AT&W
AT+MCBR2	Get/Set Serial port baud rate	<b>AT+MCBR2=&lt;Baud Rate Type&gt;</b> Parameters: COM2 Baud Rate Type: 0 - 300 1 - 600 2 - 1200 3 - 2400 4 - 3600 5 - 4800 6 - 7200 7 - 9600 8 - 14400 9 - 19200 10 - 28800 11 - 38400 12 - 57600 13 - 115200 14 - 230400 15 - 460800 16 - 921600	AT&W
AT+MCDF2	Get/Set Serial port data format	<b>AT+MCDF2=&lt;Data Formate Type&gt;</b> Parameters: COM2 Data Formate Option: 0 - 8N1 2 - 8E1 3 - 8O1	AT&W
AT+MCDM2	Get/Set Serial port data mode	<b>AT+MCDM2=&lt;Data Mode Type&gt;</b> Parameters: COM2 Data Mode Option: 0 - Seamless 1 - Transparent	AT&W
AT+MCCT2	Get/Set Serial port character timeout	<b>AT+MCCT2=&lt;timeout&gt;</b> Parameters: COM2 timeout: 1 to 65535 in seconds	AT&W
AT+MCMPS2	Get/Set Serial port maximum packet size	<b>AT+MCMPS2=&lt;size&gt;</b> Parameters: COM2 maximum packet size: 1 to 2048	AT&W
AT+MCNCDI2	Get/Set Serial port no-connection data intake	<b>AT+MCNCDI2=&lt;Mode&gt;</b> Parameters: COM2 Mode Option: 0 - Disable 1 - Enable	AT&W
AT+MCMTC2	Get/Set Serial port Modbus tcp configuration	<b>AT+MCMTC2=&lt;Status&gt;</b> Parameters: COM2 Modbus Status: 0 - Disable 1 - Enable	AT&W



## 5.0 AT Command Line Interface

Serial Port AT Commands (Continued)			
AT Command	Description	Syntax	Effect
AT+MCIPM2	Get/Set Serial port IP protocol mode	<b>AT+MCIPM2=&lt;IP Protocol Config&gt;</b> Parameters: COM2 IP Protocol Config: 0 - TCP Client 1 - TCP Server 2 - TCP Client/Server 3 - UDP Point to Point 4 - UDP Point to Multipoint(P) 5 - UDP Point to Multipoint(MP) 8 - PPP	AT&W
AT+MCCT2	Get/Set Serial port tcp client configuration when IP protocol mode is TCP Client	<b>AT+MCCT2=&lt;Remote Server IP&gt;,&lt;Remote Server Port&gt;,&lt;Outgoing timeout&gt;</b> Parameters: COM2: Remote Server IP : valid IP address Remote Server Port : 1 to 65535 Outgoing timeout : 1 to 65535 in seconds	AT&W
AT+MCTS2	Get/Set Serial port tcp server configuration when IP protocol mode is TCP Server	<b>AT+MCTS2=&lt;Server Mode&gt;,&lt;Polling Timeout&gt;,&lt;Local Listening Port&gt;,&lt;Connection timeout&gt;</b> Parameters: Server Mode : 0 - Monitor; 1 - Polling Polling timeout : 1 to 65535 in seconds Local Listening Port : 1 to 65535 Connection timeout : 1 to 65535 in seconds	AT&W
AT+MCTCS2	Get/Set Serial port tcp client/server configuration when IP protocol mode is TCP Client/Server	<b>AT+MCTCS2=&lt;Remote Server IP&gt;,&lt;Remote Server Port&gt;,&lt;Outgoing timeout&gt;,&lt;Server Mode&gt;,&lt;Polling Timeout&gt;,&lt;Local Listener Port&gt;,&lt;Incoming timeout&gt;</b> Parameters: Remote Server IP : valid IP address Remote Server Port : 1 to 65535 Outgoing timeout : 1 to 65535 in seconds Server Mode : 0 - Monitor; 1 - Polling Polling timeout : 1 to 65535 in seconds Local Listening Port : 1 to 65535 Incoming timeout : 1 to 65535 in seconds	AT&W
AT+MCUPP2	Get/Set Serial port UDP point to point configuration when IP protocol mode is UDP point to point	<b>AT+MCUPP2=&lt;Remote IP&gt;,&lt;Remote Port&gt;,&lt;Listening Port&gt;,&lt;UDP Timeout&gt;</b> Parameters: Remote IP : valid IP address Remote Port : 1 to 65535 Listening Port : 1 to 65535 UDP Timeout : 1 to 65535 in seconds	AT&W
AT+MCPPP2	Get/Set Serial port PPP configuration when IP protocol mode is PPP	<b>AT+MCPPP2[=&lt;Mode&gt;,&lt;CCP negotiation&gt;,&lt;LCP Echo Failure Number&gt;,&lt;LCP Echo Interval&gt;,&lt;Local IP&gt;,&lt;Host IP&gt;,&lt;Idle Timeout&gt;[,&lt;Expected String&gt;,&lt;Response String&gt;]]</b> Parameters: COM2: Mode : 0 - Active; 1 - Passive CCP negotiation : 0 - Disable; 1 - Enable LCP Echo Failure Number : [0 .. 65535] LCP Echo Interval : [0 .. 65535] Local IP : Valid IP address Host IP : Valid IP address Idle Timeout : 1 to 65535 in seconds Expected String : (Optional) 0 - 63 characters Response String : (Optional) 0 - 63 characters	AT&W
AT+MCUPMP2	Get/Set Serial port UDP point to multipoint as point configuration when IP protocol mode is set to UDP point to multipoint (P)	<b>AT+MCUPMP2[=&lt;Multicast IP&gt;,&lt;Multicast Port&gt;,&lt;Listening Port&gt;,&lt;Time To Live&gt;,&lt;Multicast Interface&gt;]</b> Parameters: COM2: Multicast IP : valid IP address Multicast Port : 1 to 65535 Listening Port : 1 to 65535 Time To Live : 1 to 255 in seconds Multicast Interface : 0 - default 1 - LAN	AT&W
AT+MCUPMM2	Get/Set Serial port UDP point to multipoint as MP configuration when IP protocol mode be set to UDP point to multipoint (MP)	<b>AT+MCUPMM2[=&lt;Remote IP&gt;,&lt;Remote Port&gt;,&lt;Multicast IP&gt;,&lt;Multicast Port&gt;,&lt;Multicast Interface&gt;]</b> Parameters: COM2: Remote IP : valid IP address Remote Port : 1 to 65535 Multicast IP : valid IP address Multicast Port : 1 to 65535 Multicast Interface : 0 - default 1 - LAN	AT&W
AT+MCESCP2	Get/Set Serial support escape sequence configuration	<b>AT+MCESCP2[=&lt;Escape Mode&gt;[,&lt;Escape Guard Interval&gt;,&lt;Escape Sequence String&gt;]]</b> Parameters: COM2: Escape Mode : 0 - Disabled; 1 - Enabled Escape Guard Interval : 1 to 10 seconds Escape Sequence String : 3 to 7 characters	AT&W



## 5.0 AT Command Line Interface

Firewall AT Commands			
AT Command	Description	Syntax	Effect
AT+MFGEN	Get/Set firewall general configuration	<b>AT+MFGEN[=&lt;Config&gt;[,&lt;Mode&gt;]]</b> Parameters: Config : 0 - WAN Remote Management 1 - WAN Request 2 - LAN to WAN Access Control 3 - Anti-Spoof 4 - Packet Normalization Mode : 0 - Disable (Block) 1 - Enable (Allow)	AT&W
AT+MFDMZ	Get/Set firewall DMZ configuration	<b>AT+MFDMZ[=&lt;DMZ Source&gt;[,&lt;DMZ Mode&gt;[,&lt;DMZ Server IP&gt;,&lt;Exception Port&gt;]]]</b> Parameters: DMZ Source : 0 - WAN DMZ Mode : 0 - Disable 1 - Enable DMZ Server IP : Valid IP address Exception Port : 0 - 65535	AT&W
AT+MFPORTFWD	Get/Set firewall Port Forwarding rule	<b>AT+MFPORTFWD[=&lt;Name&gt;[,&lt;Operation&gt;[,&lt;Source&gt;,&lt;Internal IP&gt;,&lt;Internal Port&gt;,&lt;Protocol&gt;,&lt;External Port&gt;,&lt;SNAT&gt;]]]</b> Parameters: Name : Name of Port Forwarding rule, 1 - 64 characters Operation : ADD - Add a rule EDIT - Edit a rule DEL - Delete a rule Source : 0 - WAN 1 - USB Internal IP : Valid IP address Internal Port : Valid port number, 1 - 65535 Protocol : 0 - TCP 1 - UDP 2 - TCPUDP External Port : Valid port number, 1 - 65535 Source NAT : 0 - No; 1 - Yes Usage: AT+MFPORTFWD AT+MFPORTFWD=<Name> AT+MFPORTFWD=<Name>,DEL AT+MFPORTFWD=<Name>,ADD,<Source>,<Internal IP>,<Internal Port>,<Protocol>,<External Port>,<SNAT> AT+MFPORTFWD=<Name>,EDIT,<Source>,<Internal IP>,<Internal Port>,<Protocol>,<External Port>,<SNAT>	AT&W
AT+MFMAC	Get/Set firewall MAC list	<b>AT+MFMAC[=&lt;Name&gt;[,&lt;Operation&gt;[,&lt;Action&gt;,&lt;Mac Address&gt;]]]</b> Parameters: Name : Name of firewall MAC list name, 1 - 64 characters Operation : ADD - Add a firewall MAC list EDIT - Edit a firewall MAC list DEL - Delete a firewall MAC list Action : 0 - Accept 1 - Drop 2 - Reject MAC Address : Valid MAC address Usage: AT+MFMAC AT+MFMAC=<Name> AT+MFMAC=<Name>,DEL AT+MFMAC=<Name>,ADD,<Action>,<Mac Address> AT+MFMAC=<Name>,EDIT,<Action>,<Mac Address>	AT&W
AT+MFIP	Get/SET firewall IP list	<b>AT+MFIP[=&lt;Name&gt;[,&lt;Operation&gt;[,&lt;Action&gt;,&lt;Source&gt;,&lt;IP Address&gt;[,&lt;Prefix&gt;]]]]</b> Parameters: Name : Name of firewall IP list name, 1 - 64 characters Operation : ADD - Add a firewall IP list EDIT - Edit a firewall IP list DEL - Delete a firewall IP list Action : 0 - Accept 1 - Drop 2 - Reject Source : 0 - LAN 1 - Independent LAN 2 - WAN 3 - USB Source IP : Valid IP address Prefix : 0 ~ 32. 32 (default) - single IP address Usage: AT+MFIP AT+MFIP=<Name> AT+MFIP=<Name>,DEL AT+MFIP=<Name>,ADD,<Action>,<Source>,<IP Address>[,<Prefix>] AT+MFIP=<Name>,EDIT,<Action>,<Source>,<IP Address>[,<Prefix>]	AT&W



## 5.0 AT Command Line Interface

Firewall AT Commands (Continued)			
AT Command	Description	Syntax	Effect
AT+MFRULE	Get/Set firewall rule	<b>AT+MFRULE[=&lt;Name&gt;[,&lt;Operation&gt;[,&lt;Action&gt;,&lt;Source&gt;,&lt;Src IP Format&gt;,&lt;Src IP From/Subnet &gt;,&lt;Src IP To/Prefix&gt;,&lt;Destination&gt;,&lt;Dest IP Format&gt;,&lt;Dest IP From/Subnet&gt;,&lt;Dest IP To/Prefix&gt;,&lt;Dest Port&gt;,&lt;Protocol&gt;]]]</b> Parameters: Name : Name of firewall rule name, 1 - 64 characters Operation : ADD - Add a firewall rule EDIT - Edit a firewall rule DEL - Delete a firewall rule Action : 0 - Accept 1 - Drop 2 - Reject Source : 0 - LAN 1 - Independent LAN 2 - WAN 3 - USB 4 - None IP Format : 0 - IP Range 1 - Subnet / Prefix IP From/Subnet: Valid IP address. 0 - Set to blank IP To/Prefix : Valid IP address. 0 - Set to blank; or 0 ~ 32 for Prefix Destination : 0 - LAN 1 - Independent LAN 2 - WAN 3 - USB 4 - None IP Format : 0 - IP Range 1 - Subnet / Prefix IP From/Subnet: Valid IP address. 0 - Set to blank IP To/Prefix : Valid IP address. 0 - Set to blank; or 0 ~ 32 for Prefix Port/Range : Port 0 ~ 65535 or Port range specified as 100:200 format Protocol : 0 - TCP 1 - UDP 2 - TCPUDP 3 - ICMP	AT&W
AT+MFRST	Reset to default firewall	<b>AT+MFRST &lt;enter&gt;</b>	Immediate
Network AT Commands			
AT Command	Description	Syntax	Effect
AT+MNLAN	Show/Add/Edit/Delete the network LAN interface	<b>AT+MNLAN</b> <b>AT+MNLAN=&lt;LAN Name&gt;</b> <b>AT+MNLAN=&lt;LAN Name&gt;,DEL</b> <b>AT+MNLAN=&lt;LAN Name&gt;,ADD/EDIT,&lt;Protocol&gt;[,&lt;IP&gt;,&lt;Netmask&gt;[,&lt;Gateway&gt;]] Where &lt;Protocol&gt;=0</b> <b>AT+MNLAN=&lt;LAN Name&gt;,ADD/EDIT,&lt;Protocol&gt; Where &lt;Protocol&gt;=1 or 3</b> <b>AT+MNLAN=&lt;LAN Name&gt;,EDIT,&lt;Protocol&gt;[,&lt;IP&gt;,&lt;Netmask&gt;] Where &lt;Protocol&gt;=2 and &lt;LAN Name&gt;="lan"</b> Parameters: LAN Name : Name of Network LAN interface. System built-in one is "lan" Operation : ADD - Add a new LAN interface EDIT - Edit an existing LAN interface DEL - Delete an existing LAN interface Protocol : 0 - Static IP 1 - DHCP with LAN alias disabled 2 - DHCP with LAN alias enabled, only for "lan" 3 - None. Not for "lan" IP Address : Valid IP address Netmask : Valid netmask Gateway : Valid IP address. 0 - Reset	AT&W
AT+MNLANDHCP	Get/Set LAN DHCP server on LAN interface	<b>AT+MNLANDHCP=&lt;LAN Name&gt;[,&lt;Mode&gt;[,&lt;Start IP&gt;,&lt;Limit&gt;,&lt;Lease Time&gt;[,&lt;Alt. Gateway&gt;,&lt;Pre. DNS&gt;,&lt;Alt. DNS&gt;,&lt;WINS/NBNS Servers&gt;,&lt;WINS/NBT Node&gt;]]]</b> Parameters: LAN Name : Name of Network LAN interface Mode : 0 - Disable DHCP Server 1 - Enable DHCP Server Start IP : The starting address DHCP assignable IP Addresses Limit : The maximum number of IP addresses. min=1 max=16777214 Lease Time : The DHCP lease time in minutes. 2~2147483647 minutes. 0 means'infinity' Alt. Gateway : Alternate Gateway for DHCP assigned devices if the default gateway is not to be used Pre. DNS : Preferred DNS server address to be assigned to DHCP devices Alt. DNS : Alternate DNS server address to be assigned to DHCP devices WINS/NBNS Server : WINS/NBNS Servers WINS/NBT Node : WINS/NBT Node Type 0 - none 1 - b-node 2 - p-node 3 - m-node 4 - h-node	AT&W

## 5.0 AT Command Line Interface

Network AT Commands (Continued)			
AT Command	Description	Syntax	Effect
AT+MNLANSTP	Get/Set the network LAN interface: Spanning Tree (STP)	<b>AT+MNLANSTP=&lt;LAN Name&gt;[,&lt;STP&gt;]</b> Parameters: LAN Name : Name of Network LAN interface Spanning Tree : 0 - Off 1 - On	AT&W
AT+MNLANIGMP	Get/Set the network LAN interface: IGMP Snooping	<b>AT+MNLANIGMP=&lt;LAN Name&gt;[,&lt;IGMP Snooping&gt;]</b> Parameters: LAN Name : Name of Network LAN interface IGMP Snooping : 0 - Off 1 - On	AT&W
AT+MNLANDR	Get/Set the network LAN interface: Default Route	<b>AT+MNLANDR=&lt;LAN Name&gt;[,&lt;Default Route&gt;]</b> Parameters: LAN Name : Name of Network LAN interface Default Route : 0 - No 1 - Yes	AT&W
AT+MNLANDNS	Get/Set the network LAN interface: DNS	<b>AT+MNLANDNS=&lt;LAN Name&gt;[,&lt;Mode&gt;[,&lt;Primary DNS&gt;,&lt;Secondary DNS&gt;]]</b> Usage: AT+MNLANDNS=<LAN Name> AT+MNLANDNS=<LAN Name>,<Mode> Where <Mode>=0 AT+MNLANDNS=<LAN Name>,<Mode>[,<Primary DNS>,<Secondary DNS>] Where <Mode>=1 Parameters: LAN Name : Name of Network LAN interface Mode : 0 - Auto 1 - Manual Primary DNS : Valid IP Address or 0 (Reset) Secondary DNS : Valid IP address or 0 (Reset)	AT&W
AT+MNWAN	Get/Set the network WAN interface	<b>AT+MNWAN[=&lt;Mode&gt;[,&lt;Protocol&gt;[,&lt;IP&gt;,&lt;Netmask&gt;[,&lt;Gateway&gt;]]]]</b> Usage: AT+MNWAN AT+MNWAN=<Mode>,<Protocol>,<IP>,<Netmask>[,<Gateway>] Where <Mode>=0 and <Protocol>=0 AT+MNWAN=<Mode>,<Protocol>[,<IP>,<Netmask>] Where <Mode>=2 and <Protocol>=0 AT+MNWAN=<Mode>,<Protocol> Where <Mode>=0/2 and <Protocol>=1 AT+MNWAN=<Mode>,<Protocol> Where <Mode>=2 and <Protocol>=2 AT+MNWAN=<Mode> Where <Mode>=1 Parameters: Mode : 0 - Independent WAN 1 - Bridge with LAN Port 2 - Independent LAN Protocol: 0 - Static IP 1 - DHCP 2 - None IP : Valid IP address Netmask : Valid netmask Gateway : Valid IP address. 0 - Reset	AT&W
AT+MNWANDR	Get/Set the network WAN interface: Default Route	<b>AT+MNWANDR[=&lt;Default Route&gt;]</b> Parameters: Default Route : 0 - No 1 - Yes	AT&W
AT+MNWANDNS	Get/Set DNS Server when WAN port works as Independent WAN	<b>AT+MNWANDNS[=&lt;Mode&gt;[,&lt;Primary DNS&gt;,&lt;Secondary DNS&gt;]]</b> Usage: AT+MNWANDNS AT+MNWANDNS=<Mode> Where <Mode>=0 AT+MNWANDNS=<Mode>[,<Primary DNS>,<Secondary DNS>] Where <Mode>=1 Parameters: Mode : 0 - Auto 1 - Manual Primary DNS : Valid IP Address or 0 (Reset) Secondary DNS : Valid IP address or 0 (Reset)	AT&W
AT+MNWANLANDHCP	Get/Set LAN DHCP server when the WAN port is set as Independent LAN	<b>AT+MNWANLANDHCP[=&lt;Mode&gt;[,&lt;Start IP&gt;,&lt;Limit&gt;,&lt;Lease Time&gt;[,&lt;Alt.Gateway&gt;,&lt;Pre.DNS&gt;,&lt;Alt.DNS&gt;]]]</b> Usage: AT+MNWANLANDHCP AT+MNWANLANDHCP=<Mode> Where <Mode>=0 AT+MNWANLANDHCP=<Mode>[,<Start IP>,<Limit>,<Lease Time>[,<Alt.Gateway>,<Pre.DNS>,<Alt.DNS>]] Where <Mode>=1 Parameters: Mode : 0 - Disable DHCP Server 1 - Enable DHCP Server Start IP : The starting address DHCP assignable IP Addresses Limit : The maximum number of IP addresses. min=1 max=16777214 Lease Time : The DHCP lease time in minutes. 2~2147483647 minutes. 0 means 'infinity' Alt. Gateway : Alternate Gateway for DHCP assigned devices if the default gateway is not to be used Pre. DNS : Preferred DNS server address to be assigned to DHCP devices Alt. DNS : Alternate DNS server address to be assigned to DHCP devices	AT&W



## 5.0 AT Command Line Interface

### Network AT Commands (Continued)

AT Command	Description	Syntax	Effect
AT+MNIPMAC	Show/Add/Delete/Release/ReleaseAll the MAC-IP address binding	<b>AT+MNIPMAC[=&lt;Operation&gt;[,&lt;Name&gt;[,&lt;IP Address&gt;,&lt;MAC Address&gt;]]]</b> Usage: AT+MNIPMAC AT+MNIPMAC=SHOW,<Name> AT+MNIPMAC=ADD,<Name>,<IP Address>,<MAC Address> AT+MNIPMAC=DEL,<NAME> AT+MNIPMAC=RELEASE,<NAME> AT+MNIPMAC=RELEASEALL Parameters: Operation : SHOW - Show the details of the MAC-IP address binding ADD - Add a new MAC-IP address binding DEL - Delete an existing MAC-IP address binding RELEASE - Release the active DHCP lease RELEASEALL - Release all active DHCP leases Name : Name of the MAC-IP binding, 1-64 characters IP Address: Valid IP address MAC Address: The physical MAC address of the device or interface	AT&W
AT+MNEMAC	Get the MAC address of the local Ethernet interface	<b>AT+MNEMAC &lt;enter&gt;</b>  Sample Output: +MNEMAC: "00:0F:92:02:F9:0F" OK	Immediate
AT+MNPORT	Get/Set the Ethernet port configuration	<b>AT+MNPORT[=&lt;Ethernet Port&gt;[,&lt;Mode&gt;[,&lt;Auto Negotiation&gt;,&lt;Speed&gt;,&lt;Duplex&gt;]]]</b> Parameters: Ethernet Port : 0 - WAN 1 - LAN Mode : 0 - Auto 1 - Manual Auto-Negotiation : 0 - Off 1 - On Speed : 0 - 10 Mbit/s 1 - 100 Mbit/s Duplex : 0 - Full 1 - Half	AT&W
AT+MNSTATUS	Get the network status	<b>AT+MNSTATUS &lt;enter&gt;</b>  Sample Output: LAN Port Status General Status IP Address : 192.168.168.1 Connection Type : static Subnet Mask : 255.255.255.0 MAC Address : 00:0F:92:02:F9:0F Traffic Status Receive bytes : 262.633KB Receive packets : 3345 Transmit bytes : 168.370KB Transmit packets : 2229 WAN Port Status General Status IP Address : N/A Connection Type : dhcp Subnet Mask : N/A MAC Address : 00:0F:92:03:F9:0F Traffic Status Receive bytes : 0B Receive packets : 0 Transmit bytes : 0B Transmit packets : 0 Default Gateway : 192.168.168.1 DNS Server(s) : None  Kernel IP routing table Destination   Gateway   Subnet Mask   Flags Metric Ref Use Iface 0.0.0.0   192.168.168.1  0.0.0.0   UG   0   0   0 br-lan 192.168.168.0  0.0.0.0   255.255.255.0 U   0   0   0 br-lan	Immediate



## 5.0 AT Command Line Interface

System AT Commands			
AT Command	Description	Syntax	Effect
AT+MSCNTO	Get/Set the console timeout	<b>AT+MSCNTO=&lt;Timeout_s&gt;</b> Parameter: <Timeout_s> : 30 to 65535 in seconds, 0-Disable	AT&W
AT+MSPWD	Set password	<b>AT+MSPWD=&lt;New Password&gt;,&lt;Confirm Password&gt;</b> Parameters: <New Password> : 5-64 characters except space <Confirm Password> : Same as <New Password>	AT&W
AT+MSGMI	Get manufacturers identification	<b>AT+MSGMI &lt;enter&gt;</b> Sample Output: +MSGMI: 2014-2016 Microhard. OK	Immediate
AT+MSSYSI	Get system summary information	<b>AT+MSSYSI &lt;enter&gt;</b> Sample Output: +MSSYSI: Ethernet Port: MAC : 00:0F:92:02:AB:22 IP : 192.168.168.1 MASK : 255.255.255.0 System: Device : UserDevice Product : PDDL Image : PWii Hardware : Rev A Software : v1.3.0 build 1024 Copyright : 2014-2016 Microhard. System Time : Tue Nov 29 14:14:32 2016 OK	Immediate
AT+MSGMR	Get modem Record information	<b>AT+MSGMR &lt;enter&gt;</b> Sample Output: +MSGMR: Hardware Version : Rev A Software Version : v1.3.0 build 1024 Copyright : 2014-2016 Microhard. System Time : Tue Nov 29 14:15:02 2016 OK	Immediate
AT+MSMNAME	Get/Set modem Name setting	<b>AT+MSMNAME=&lt;Modem_Name&gt;</b> Parameter: <Modem_Name> : 1 - 64 characters. Must be alphanumeric or dots(.), or dashes(-) or underscores(_)	AT&W
AT+MSRTF	Reset the modem to the factory default settings from non-volatile (NV) memory	<b>AT+MSRTF=&lt;Action&gt;</b> Parameter: <Action>: 0 - Pre-set action 1 - Confirm action	AT&W
AT+MSREB	Reboot the modem	<b>AT+MSREB &lt;enter&gt;</b> Sample Output: Rebooting... OK	Immediate
AT+MSNTP	Get/Set NTP server	<b>AT+MSNTP[=&lt;Mode&gt;[,&lt;Server&gt;,&lt;Port&gt;,&lt;Client Interval&gt;]]</b> Parameters: <Mode> : 0 - Local Time; 1 - NTP <Server> : Valid IP Address or Name <Port> : 1 to 65535. Default is 123 <Client Interval> : 15 to 65535 in seconds, 0-Disable	AT&W
AT+MSSYSLOG	Get/Set Syslog server settings	<b>AT+MSSYSLOG[=&lt;Server&gt;[,&lt;Port&gt;]]</b> Parameters: <Server> : Valid IP Address or Name. 0.0.0.0 - Disable. 1 to 256 characters <Port> : 1 to 65535. Default is 514	AT&W
AT+MSSERVICE	Get/Set service status and port	<b>AT+MSSERVICE[=&lt;Service&gt;[,&lt;Mode&gt;[,&lt;Port&gt;]]]</b> Parameters: <Service> : 0 - FTP 1 - Telnet 2 - SSH <Mode> : 0 - Disable 1 - Enable <Port> : 0 to 65535. For Telnet (23 by default) and SSH (22 by default) only	AT&W
AT+MSWEBUI	Get/Set Web UI protocol and port	<b>AT+MSWEBUI[=&lt;Mode&gt;[,&lt;HTTP Port&gt;][,&lt;HTTPS Port&gt;]]]</b> Parameters: <Mode> : 0 - HTTP/HTTPS 1 - HTTP 2 - HTTPS 3 - Disable <HTTP Port> : 2 to 65534. 80 by default <HTTPS Port> : 2 to 65534. 443 by default	AT&W



## 5.0 AT Command Line Interface

Wireless (Radio) AT Commands			
AT Command	Description	Syntax	Effect
AT+MWRADIO	Get/Set radio status, On or Off	<b>AT+MWRADIO[=&lt;Radio&gt;]</b> <Radio> 0 - Off 1 - On	AT&W
AT+MWMODE	Get/Set Radio Mode	<b>AT+MWMODE[=&lt;Mode&gt;]</b> <Mode> 0 - pDDL	AT&W
AT+MWDISTANCE	Get/Set radio Wireless Distance	<b>AT+MWDISTANCE[=&lt;Distance&gt;]</b> <Distance> 1 - 200000 in meter	AT&W
AT+MWTXPOWER	Get/Set radio Tx power	<b>AT+MWTXPOWER[=&lt;Tx Power&gt;]</b> <Tx Power> 7 - 7 dbm 8 - 8 dbm 9 - 9 dbm 10 - 10 dbm 11 - 11 dbm 12 - 12 dbm 13 - 13 dbm 14 - 14 dbm 15 - 15 dbm 16 - 16 dbm 17 - 17 dbm 18 - 18 dbm 19 - 19 dbm 20 - 20 dbm 21 - 21 dbm 22 - 22 dbm 23 - 23 dbm 24 - 24 dbm 25 - 25 dbm 26 - 26 dbm 27 - 27 dbm 28 - 28 dbm 29 - 29 dbm 30 - 30 dbm	AT&W
AT+MWBAND	Get/Set radio channel bandwidth	<b>AT+MWBAND[=&lt;Channel Bandwidth&gt;[,&lt;Symbol Rate&gt;]]</b> Available radio channel bandwidth for pDDL mode 0 - 8 MHz 1 - 4 MHz 2 - 2 MHz Symbol Rate: (Only need to set for 2MHz and 1MHz bandwidth) 0 - Normal 1 - Fast	AT&W
AT+MWFREQ	Get/Set radio channel-frequency (Options vary by channel bandwidth)	<b>AT+MWFREQ2400[=&lt;MHz Channel Frequency&gt;]</b> <Channel Frequency> : 4 - 2405 MHz 78 - 2479 MHz	AT&W
AT+MWRXDIV	Get/Set radio diversity (reboot required)	<b>AT+MWRXDIV[=&lt;Rx Diversity&gt;]</b> <Rx Diversity> 0 - Off 1 - On	AT&W
AT+MWMCASTRT	Get/Set radio Multicast Rate	<b>AT+MWMCASTRT[=&lt;Multicast Rate&gt;]</b> <Multicast Rate> : 0 - QPSK FEC 1/2 1 - QPSK FEC 3/4 2 - 16-QAM FEC 1/2 3 - 16-QAM FEC 3/4 4 - 64-QAM FEC 2/3	AT&W
AT+MVVMODE	Get/Set radio mode	<b>AT+MVVMODE[=&lt;Virtual Interface Mode&gt;]</b> <Virtual Interface Mode> : 0 - Master 1 - Slave	AT&W
AT+MWVRATE	Get/Set radio TX Rate	<b>AT+MWVRATE[=&lt;Virtual Interface TX Rate&gt;]</b> <Virtual Interface TX Rate> : 0 - auto (Recommended) 1 - 64-QAM 5/6 FEC 2 - 64-QAM 3/4 FEC 3 - 64-QAM 2/3 FEC 4 - 16-QAM 3/4 FEC 5 - 16-QAM 1/2 FEC 6 - QPSK FEC 3/4 7 - QPSK FEC 1/2	AT&W



## 5.0 AT Command Line Interface

Wireless (Radio) AT Commands (Continued)			
AT Command	Description	Syntax	Effect
AT+MWEXTADDR	Get/Set radio extended addressing	<b>AT+MWEXTADDR[=&lt;Extended Addressing&gt;]</b> <Extended Addressing> : 0 - Off 1 - On	AT&W
AT+MWNWORLDID	Get/Set radio Network ID	<b>AT+MWNWORLDID[=&lt;Network ID&gt;]</b> <Network ID> Radio Virtual Interface Network ID: 1-64 characters	AT&W
AT+MWVENCRYPT	Get/Set radio Encryption Type & Key	<b>AT+MWVENCRYPT[=&lt;Encryption Type&gt;[,&lt;Key&gt;]]</b> <Encryption Type> Radio Virtual Interface Encryption Type: 0 - Disabled 1 - AES-128 <Key>: Min 8 characters, Max 64 characters	AT&W
AT+MWRESYNC	RF Re-Sync from the slave side	<b>AT+MWRESYNC &lt;enter&gt;</b>	Immediate
AT+MWINTFSRAN	Generate radio channel interference information in 10 to 30 seconds	<b>AT+MWINTFSRAN[=&lt;Sorting&gt;]</b> The spectral scan action takes about 10 to 30 seconds. <Sorting> : 0 - Not sorting the scan result (default) 1 - Sorting the scan result	Immediate
AT+MWSTATUS	Get the status of RF	<b>AT+MWSTATUS &lt;enter&gt;</b> Sample Output: General Status MAC Address : 00:0F:92:FA:38:30 Operation Mode : Master Network ID : pDDL Compatibility Mode : pDDL Bandwidth : 4 MHz Frequency : 2441 Tx Power : 20 dBm Encryption Type : AES-128 Traffic Status Receive Bytes : 0B Receive Packets : 0 Transmit Bytes : 89.076KB Transmit Packets : 550 OK Connection Info MAC Address : 00:0F:92:FA:59:F9 Tx Mod : 64-QAM FEC 5/6 Rx Mod : 64-QAM FEC 2/3 SNR (dB) : 75 RSSI (dBm) : -24	Immediate
AT+MWSNR	Get the value of SNR (Slave)	<b>AT+MWSNR &lt;enter&gt;</b> Sample Output: 43 OK	Immediate
AT+MWNOISEFLOOR	Get the value of Noise Floor (Slave)	<b>AT+MWNOISEFLOOR &lt;enter&gt;</b> Sample Output: -99 OK	Immediate
AT+MWSQTHRESH	Get/Set Squelch threshold	<b>AT+MWSQTHRESH[=&lt;Squelch Threshold&gt;]</b> Squelch Threshold : -1 to -128 (-1 = Turn off the threshold)	AT&W
AT+MWRFTST	RF Test (power cycle the device after the tests)	<b>AT+MWRFTST=&lt;Operation&gt;</b> <Operation> : 0 - Start Transmit 1 - Start Receive 2 - Stop 3 - Poll the result Note : !!! Power cycle the device after the tests for the RF link to work properly!!!	AT&W
AT+MWRSSI	Get radio RSSI	<b>AT+MWRSSI &lt;enter&gt;</b> Sample Output: 00:0F:92:FA:59:F9 -74 dBm	Immediate

## 6.0 Installation

The are a number of factors to consider when preparing to deploy a radio network, several of which have been touched-upon or detailed elsewhere within this manual. Following is a listing of a number of factors, in no particular order:



**The installation,  
removal, or  
maintenance of any  
antenna system  
components must be  
undertaken only by  
qualified and  
experienced  
personnel.**

## Network Topology

The pDDL currently supports Master, Slave and Mesh modes which can create either Point to Multipoint or Point to Point, or Mesh network topologies.

## Throughput

The pDDI is capable of up to 25 Mbps throughput. The network topology has an effect on how this available throughput is ‘shared’ between all nodes on the network.

## Distance

The physical distance between the modems dictates such things as required antenna performance and heights. When contemplating antenna types, keep in mind the directivity (omnidirectional or directional) of the antennas being used.

## Terrain

Along with distance, the terrain is a very important consideration with respect to antenna height requirements. The term 'line-of-sight' (LOS) refers to being able to 'see' one location from another - a minimum requirement for a radio signal path. In addition to LOS, adequate clearance must also be provided to satisfy 'Fresnel Zone' requirements - an obstruction-free area much greater than the physical LOS, i.e. LOS is not enough to completely satisfy RF path requirements for a robust communications link.

## Transmit Power

Having read thus far through the factors to be considered, it should be clear that they are all interrelated. Transmit power should be set for the minimum required to establish a reliable communications path with adequate fade margin. Required transmit power is dictated primarily by distance, antenna type (specifically the 'gain' of the antennas being used), and the receive sensitivity of the distant modem. Cable and connector losses (the physical path from the modem's 'antenna connector' to the antenna's connector) must also be taken into account.

## Receive Sensitivity

The Pico Series has exceptional receive sensitivity, which can produce a number of benefits, such as: added fade margin for a given link, being able to use less expensive coaxial cable or antenna types, being able to operate at greater distances for a given distant transmitter power (perhaps negating the requirement for a Repeater site!). Distance, antenna gain, transmit power, and receive sensitivity are critical ‘numbers’ for radio path calculations. Fortunately, the Pico Series features the maximum available transmit power combined with exceptional receive sensitivity - two ‘numbers’ which will produce the most favorable path calculation results.



1010101010101010101010  
0101010101010101010101  
1010101010101010101010  
0101010101010101010101

## 6.0 Installation

### Fade Margin

When all radio path numbers are being considered and hardware assumptions are being made, another factor to consider is the 'fade margin' of the overall system. The fade margin is the difference between the anticipated receive signal level and the minimum acceptable receive level (receive sensitivity). Being that the Pico Series performs to exacting specifications, the overall deployment should be such that the modems may be utilized to their full potential to provide a reliable and robust communications link. A typical desired fade margin is in the order of 20dB, however oftentimes a 10dB fade margin is acceptable.

### Frequency

The 2.4 GHz frequency range is not effected by rain to any significant degree, and is also able to penetrate through foliage and 'around obstacles' to a certain degree. This being the case, some may choose to scrimp on the physical deployment, particularly when it comes to antenna (tower) heights. Path calculations provide results which specify 'required' antenna heights. For cost savings and in taking advantage of the characteristics of the frequency range, sometimes the height requirements are not adhered to: this may result in unreliable communications.

### Power Requirements

The Pico Series may be integrated into a system (Development Board, or custom) which accepts a range of DC input voltages (supply current requirements must also be met). In some deployments, power consumption is critical. A number of features related to minimizing power consumption are available with the pDDL such the ability to operate at lower transmit power given the receive sensitivity of the distant modem.

### Interference

The channel selection of the pDDL often allows it to work well in an environment within which there may be sources of in-band interference. Cavity filters are also available if required: contact Microhard Systems Inc. for further information.

## 6.0 Installation

## 6.1 Path Calculation



FCC regulations allow for up to 36dB<sub>i</sub> effective isotropic radiated power (EIRP). The sum (in dBm) of the transmitted power, the cabling loss, and the antenna gain cannot exceed 36dB<sub>i</sub>.

Assuming adequate antenna heights, a basic formula to determine if an adequate radio signal path exists (i.e. there is a reasonable fade margin to ensure reliability) is:

Fade Margin = System Gain - Path Loss

where all values are expressed in dB.

As discussed on the previous page, a desired fade margin is 20dB.

System gain is calculated as follows:

System Gain = Transmitter Power + (Transmitter Antenna Gain - Transmitter Cable and Connector Losses) + (Receiver Antenna Gain - Receiver Cable and Connector Losses) + | Receiver Sensitivity |.

where all values are expressed in dB, dBi, or dBm, as applicable.

Assuming a path loss of 113dB for this example, the fade margin = 143-113 = 30dB.

30dB exceeds the desired fade margin of 20dB, therefore this radio communications link would be very reliable and robust.

On the following page are examples of actual path loss measurements taken in an open rural environment; the path loss numbers do not apply to urban or non-LOS environments.

### Example:

Tx power = 30dBm  
Tx antenna gain = 6dBi  
Tx cable/connector loss = 2dB  
Rx antenna gain = 3dBi  
Rx cable/connector loss = 2dB  
Rx sensitivity = -108dBm

$$\begin{aligned}\text{System Gain} &= [30 + (6-2) + (3-2) + 108] \text{dB} \\ &= [30 + 4 + 1 + 108] \text{dB} \\ &= 143 \text{dB.}\end{aligned}$$



## 6.0 Installation



To satisfy FCC radio frequency (RF) exposure requirements for mobile transmitting devices, a separation distance of 23cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operation at less than this distance is not recommended. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.



Never work on an antenna system when there is lightning in the area.

Distance (km)	Master Height (m)	Remote Height (m)	Path Loss (dB)
5	15	2.5	116.5
5	30	2.5	110.9
8	15	2.5	124.1
8	15	5	117.7
8	15	10	105
16	15	2.5	135.3
16	15	5	128.9
16	15	10	116.2
16	30	10	109.6
16	30	5	122.4
16	30	2.5	128.8

Table 6-1: Path Loss

### 6.2 Installation of Antenna System Components

The installation, removal, or maintenance of any antenna system components must be undertaken only by qualified and experienced personnel.

#### 6.2.1 Antennas

The two most common types of antenna are the omnidirectional ('omni') and directional (Yagi).

An **omni** typically has 3-6dBi gain and spreads its energy in all directions (hence the name 'omnidirectional'). The 'pattern' of the energy field is in the shape of a donut, with the antenna mounted vertically at the centre. This vertical-mounted antenna produces a signal which is vertically 'polarized'.

A **Yagi** has a more focused antenna pattern, which results in greater gain: commonly, 6-12dBi. The pattern of a Yagi is in the shape of a large raindrop in the direction in which the antenna is pointed. If the elements of the Yagi are perpendicular to the ground (most common orientation) the radiated signal will be vertically polarized; if parallel to the ground, the polarization is horizontal.

The network topology, application, and path calculation are all taken into consideration when selecting the various antenna types to be used in a radio network deployment.

## 6.0 Installation



Direct human contact with the antenna is potentially unhealthy when a pDDL is generating RF energy.

**Always ensure that the pDDL equipment is powered down (off) during installation.**

### **6.2.2 Coaxial Cable**

The following types of coaxial cable are recommended and suitable for most applications (followed by loss at 2.4GHz, in dB, per 100 feet):

- LMR 195 (10.7)
  - LMR 400 (3.9)
  - LMR 600 (2.5)

For a typical application, LMR 400 may be suitable. Where a long cable run is required - and in particular within networks where there is not a lot of margin available - a cable with lower loss should be considered.

When installing cable, care must be taken to not physically damage it (be particularly careful with respect to not kinking it at any time) and to secure it properly. Care must also be taken to affix the connectors properly - using the proper crimping tools - and to weatherproof them.



To comply with FCC regulations, the maximum EIRP must not exceed 36dBm.

### **6.2.3 Surge Arrestors**

The most effective protection against lightning-induced damage is to install two lightning surge arrestors: one at the antenna, the other at the interface with the equipment. The surge arrestor grounding system should be fully interconnected with the transmission tower and power grounding systems to form a single, fully integrated ground circuit. Typically, both ports on surge arrestors are N-type female.

#### 6.2.4 External Filter

Although the Pico Series is capable of filtering-out RF noise in most environments, there are circumstances that require external filtering. Paging towers and cellular base stations in close proximity to the pDDL's antenna can desensitize the receiver. Microhard Systems Inc.'s external cavity filter eliminates this problem. The filter has two N-female connectors and should be connected inline at the interface to the RF equipment.



All installation, maintenance, and removal work must be done in accordance with applicable codes.

## Appendix A: Serial Interface

Module (DCE)	Host (e.g. PC)	Signal (DTE)	
1	DCD	→	IN Arrows denote the direction that signals are asserted (e.g., DCD originates at the DCE, informing the DTE that a carrier is present).
2	RX	→	IN The interface conforms to standard RS-232 signals, so direct connection to a host PC (for example) is accommodated.
3	← TX		OUT
4	← DTR		OUT
5	SG		
6	DSR	→	IN
7	← RTS		OUT The signals in the asynchronous serial interface are described below:
8	CTS	→	IN

**DCD** *Data Carrier Detect* - Output from Module - When asserted (TTL low), DCD informs the DTE that a communications link has been established with another device.

**RX** *Receive Data* - Output from Module - Signals transferred from the pDDL are received by the DTE via RX.

**TX** *Transmit Data* - Input to Module - Signals are transmitted from the DTE via TX to the pDDL.

**DTR** *Data Terminal Ready - Input to Module - Asserted (TTL low) by the DTE to inform the module that it is alive and ready for communications.*

**SG** *Signal Ground* - Provides a ground reference for all signals transmitted by both DTE and DCE.

**DSR** *Data Set Ready* - Output from Module - Asserted (TTL low) by the DCE to inform the DTE that it is alive and ready for communications. DSR is the module's equivalent of the DTR signal.

**RTS** Request to Send - Input to Module - A “handshaking” signal which is asserted by the DTE (TTL low) when it is ready. When hardware handshaking is used, the RTS signal indicates to the DCE that the host can receive data.

**CTS** *Clear to Send - Output from Module - A “handshaking” signal which is asserted by the DCE (TTL low) when it has enabled communications and transmission from the DTE can commence. When hardware handshaking is used, the CTS signal indicates to the host that the DCE can receive data.*

Notes: It is typical to refer to RX and TX from the perspective of the DTE. This should be kept in mind when looking at signals relative to the module (DCE); the module transmits data on the RX line, and receives on TX.

“DCE” and “module” are often synonymous since a module is typically a DCE device. “DTE” is, in most applications, a device such as a host PC.

## **Appendix B: Firmware Recovery Procedure**

In event that your unit becomes unresponsive it may be required to perform a firmware recovery procedure outlined below:

1. Download and save firmware file in a local folder, for example C:\;
  2. Separate the PC from the network and set IP to static:

192.168.1.1  
255.255.255.0

3. Connect PC Ethernet port to the Ethernet port of the modem to be recovered
  4. Start a ping on the PC

```
C:\>ping 192.168.1.39 -t  
Pinging 192.168.1.39 with 32 bytes of data:  
Request timed out.  
Request timed out.
```

5. Power cycle modem while pressing and holding CFG (Config) button;
  6. Release the CFG button when ping responded:

```
C:\>ping 192.168.1.39 -t  
Pinging 192.168.1.39 with 32 bytes of data:  
Request timed out.  
Request timed out.  
Request timed out.  
Reply from 192.168.1.39: bytes=32 time<1ms TTL=128  
Reply from 192.168.1.39: bytes=32 time<1ms TTL=128  
Reply from 192.168.1.39: bytes=32 time<1ms TTL=128  
Reply from 192.168.1.39: bytes=32 time<1ms TTL=128
```

Note, If ping responds as shown above, then you can probably recover the unit, please proceed. Otherwise, send the unit back for RMA.

7. Now use TFTP to push firmware file into the corrupted unit:

*For example, on Windows XP using following command line:*

*tftp -i 192.168.1.39 put pDDL-v1\_1\_0-r1003.bin (use the filename saved).*


8. Wait until above command to successfully transferred the image, similar message should show

*Transfer successful: xxxxxxx bytes in 5 seconds, nnnnnnn bytes/s, note the number might change for different firmware file*

Note, if you see message above, the unit will re-flash itself and reboot, otherwise call for help or send back for RMA.


9. Wait for the unit to recover and reboot.

## Appendix C: Sample Interface Schematic

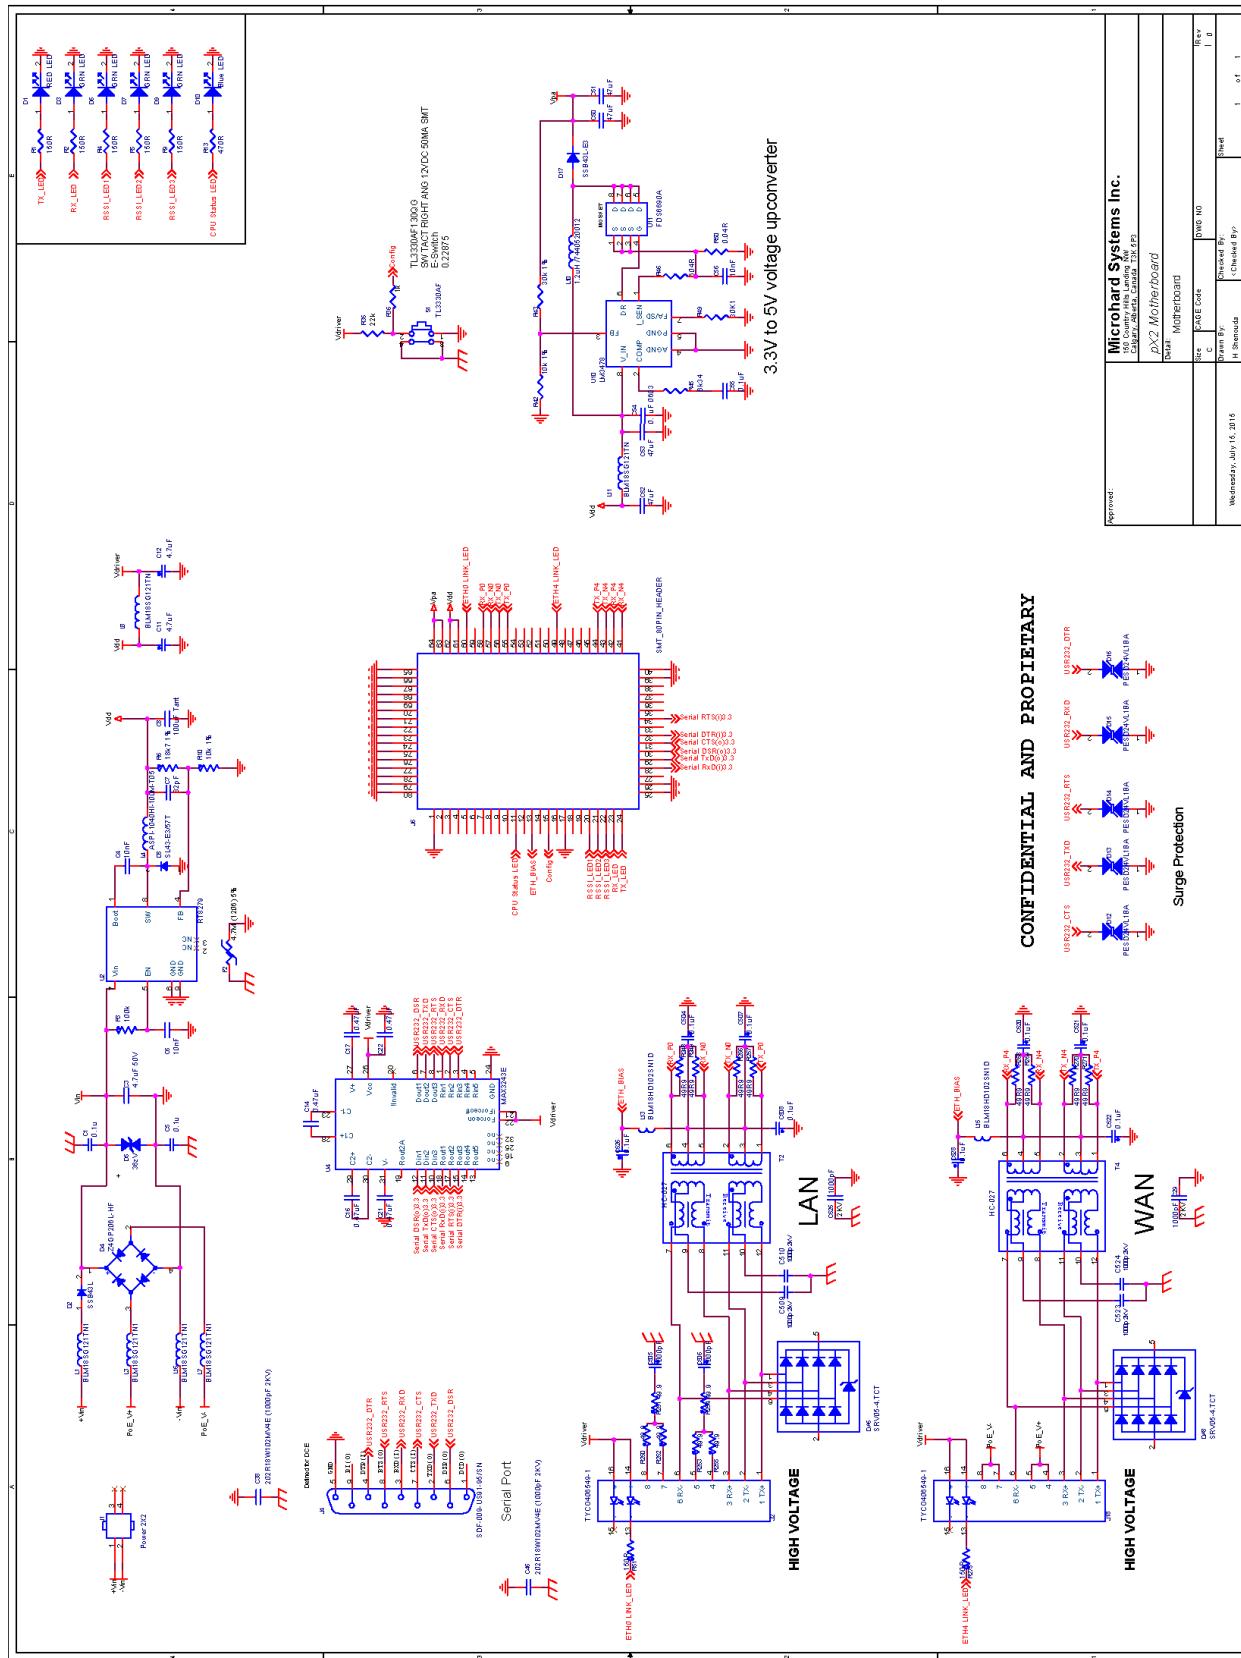

## Appendix D: Serial Port Extension

The pDDL can support a second serial port by utilizing a FT234XD USB to serial UART interfaced to the USB lines of the pDDL. The sample circuit below shows how this is done.

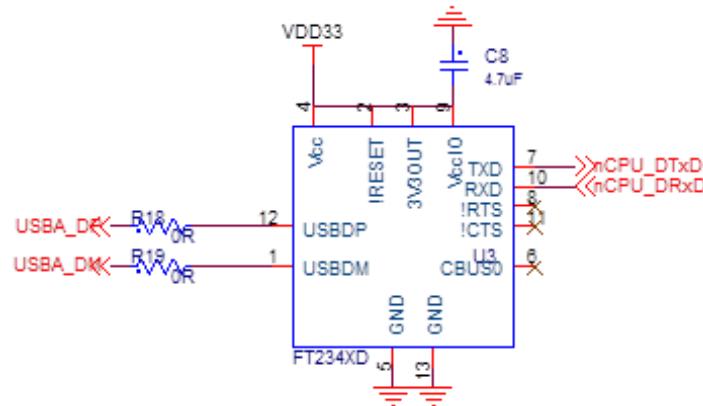

Drawing App-D: FTDI USB to Basic UART



10101010101010101010  
010101010101010101010  
10101010101010101010  
010101010101010101010

**pDDL**

## Appendix E: Troubleshooting

---

Below is a number of the common support questions that are asked about the pDDL. The purpose of the section is to provide answers and/or direction on how to solve common problems with the pDDL.

---

**Question:** *What is the default IP Address of the pDDL?*

**Answer:** The default IP address for the LAN is 192.168.168.1.

---

**Question:** *What is the default login for the pDDL?*

**Answer:** The default username is **admin**, the default password is **admin**. You will be prompted to change the password as soon as you login using the default.

---

**Question:** *How do I reset my modem to factory default settings?*

**Answer:** If you are logged into the pDDL navigate to the System > Maintenance Tab. If you cannot log in, power on the pDDL and wait until the modem complete the boot up process. Press and hold the Config button for 8 seconds to reset to a factory default Master.

---

**Question:** *I connected a device to the serial port of the pDDL and nothing happens?*

**Answer:** In addition to the basic serial port settings, the IP Protocol Config has to be configured. Refer to the COM0/1 Configuration pages for a description of the different options.

---

Additional topics will be added in future releases.



150 Country Hills Landing NW  
Calgary, Alberta  
Canada T3K 5P3

Phone: (403) 248-0028  
Toll Free: 1-855-353-0028  
[www.microhardcorp.com](http://www.microhardcorp.com)