
CANopen upper computer instructions

1. Installation of upper computer

First install the upper computer software we provide

After installation, connect the motor through our YZ-USBCAN adapter, and click to open the device after opening the software, as shown in the figure below:

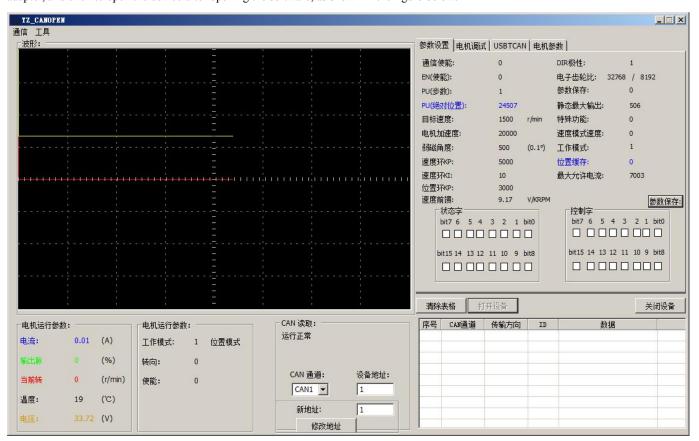


PU (绝对位置) PU(absolute position) 位置缓存 Location cache


2. Trial run of position mode

Operate according to the picture content

Zhengzhou Defy Mechanical & Electrical Equipment Co., Ltd

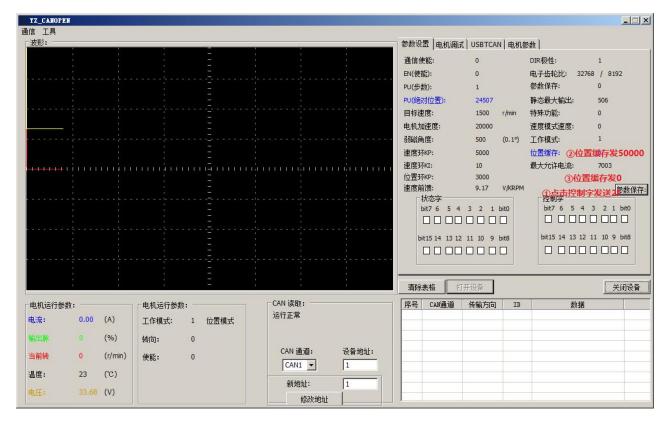

- ②位置缓存发 50000
- The location cache sends 50000
- ③位置缓存发 0 location cache sends 0
- ①点击控制字发送 2F Click the control word to send 2F

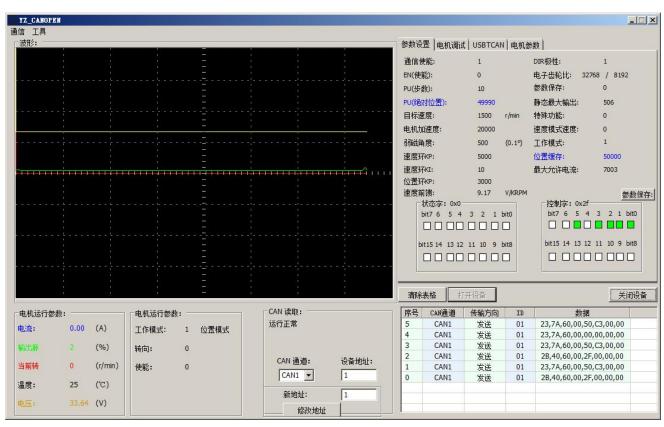


PU (绝对位置) 49990

PU(absolute position)


位置缓存 50000

Location cache

3. Speed mode trial run

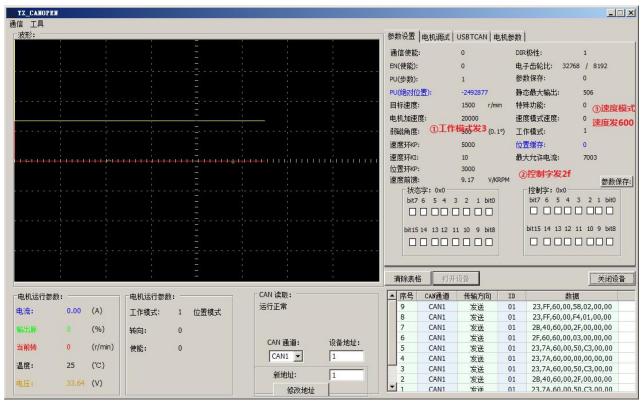

- ①工作模式发 3 Working mode sends 3 ③速度模式速度发 600 speed model speed sends 600
- ②控制字发送 2F the control word to send 2F

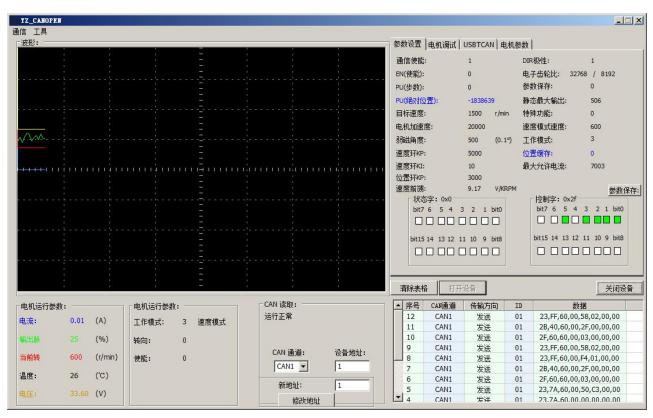

PU(绝对位置):-1838639 PU(absolution position)-1838639

位置缓存 Location cache