



SOEKARNO-HATTA INTL. AIRPORT (WIII) PILOT BRIEFING (DEPARTURES)



REVISION LETTER

REVISION	DATE	CHANGE
0.1	21/04/2026	- Initial Draft
0.2	22/04/2026	- Implemented Fixes
1.0	23/04/2026	- Release

TABLE OF CONTENTS

REVISION LETTER.....	1
TABLE OF CONTENTS.....	2
1. Introduction.....	3
2. Scenery.....	3
3. Charts.....	3
4. Aerodrome Information.....	4
5. Airport Layout.....	4
5.1 Overview.....	4
5.2 Terminal 1.....	5
5.2.1 T1 Stand Coordinates & Max Aircraft Size.....	5
5.3 Terminal 2.....	6
5.3.1 T2 Stand Coordinates & Max Aircraft Size.....	6
5.4 Terminal 3.....	6
5.4.1 T3 Stand Coordinates & Max Aircraft Size.....	6
6. Frequencies.....	7
6.1 Aerodrome Frequencies.....	7
6.2 Centre Frequencies.....	8
7. Aerodrome Procedures.....	9
7.1 Departure Clearance.....	9
7.2 Pushback Procedures.....	10
7.3 Preferred Runway.....	11
7.4 Departure Procedures.....	11
Event Specific Routing for HAJJ OPS 2026:.....	11
Afterwords.....	12

1. Introduction

The Indonesia vACC team extends a warm welcome to all VATSIM pilots and we look forward to providing professional air traffic control services throughout your time in Jakarta Soekarno-Hatta International Airport (WIII).

Please read this document carefully to ensure a smooth departure. If you have any questions regarding this pilot briefing, please ask our staff members at Indonesia vACC's [Discord](#) Server.

2. Scenery

Having scenery for WIII is highly recommended as default scenery may not include the latest airport layout.

We highly recommend having the Binersim Soekarno-Hatta scenery or Neo_Corp WIII - New Soekarno Hatta scenery when flying out of Jakarta!

Simulator	Freeware	Payware
Prepar3D / FSX	AVsim Library	Binersim
X-Plane	X-Plane Forums	Binersim
MSFS20/24	Flightsim.to	- Binersim In-Game Marketplace - Neo_Corp

3. Charts

It is expected for pilots to have the latest charts on board when flying. Please refer to the latest Navigraph charts if you own a Navigraph Subscription, or else you may access charts from the Indonesia AIP accessible with the link below.

vats.im/IDvACC_Charts (Courtesy of Indonesia AIP)

4. Aerodrome Information

Name: Soekarno-Hatta International Airport

ICAO Code: WIII

IATA Code: CGK

Coordinates: [6°07'32"S / 106°39'21"E](#)

Time zone: WIB (UTC+0700)


Elevation MSL: 28 ft / 8.5 m

Transition Altitude / Level: 11000ft / FL130

Soekarno-Hatta International Airport (WIII) is the primary international gateway to Indonesia. Located 20 km northwest from Central Jakarta, Soekarno-Hatta International Airport serves the Jakarta metropolitan area. Since it opened back in 1985, Soekarno-Hatta International Airport has completed several major infrastructure projects. The airport features 3 parallel runways, Runway 25L/07R, Runway 25R/07L and Runway 24/06, accompanied with 3 terminals and dozens of parking and other services available for aircrafts.

5. Airport Layout


5.1 Overview

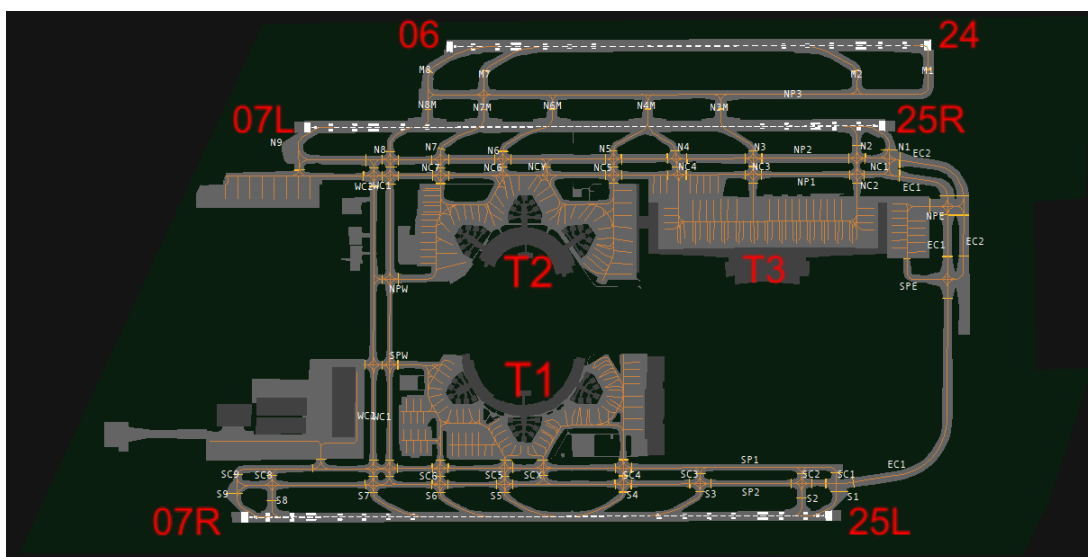

RWY	CRS	APP TYPE	DIMENSION (M)
06	068°	RNP (RNAV)	3000 x 60
24	248°	ILS (ICGK 109.30)	
07L	068°	ILS (ICHL 111.50)	3600 x 60
25R	248°	ILS (ICGR 110.90)	
07R	068°	ILS (ICHR 110.50)	3660 x 60
25L	248°	ILS (ICGL 111.10)	


5.2 Terminal 1

Distinguished by the A,B,C & K gates. A, B and C aprons are used for domestic flights, while K aprons are used for cargo flights.

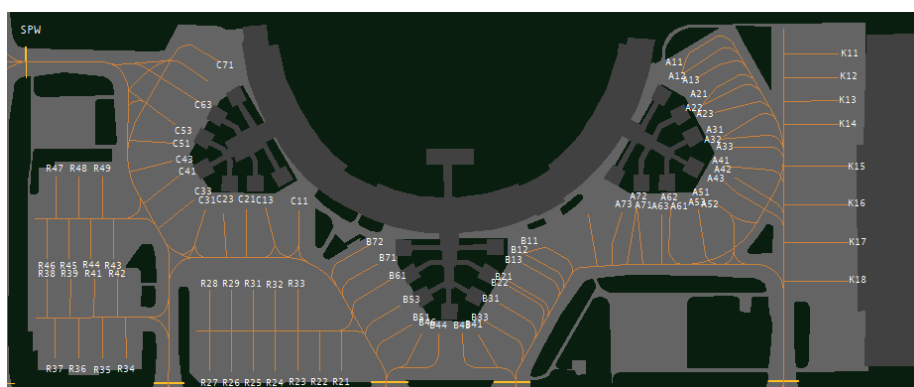

5.3 Terminal 2

Distinguished by the D, E and F gates. D and E aprons are used for domestic flights, while F aprons are used for international flights.

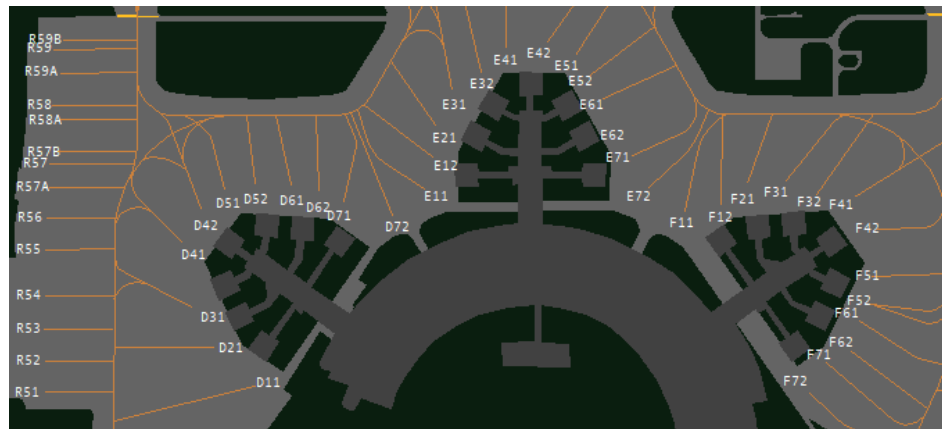


5.3.1 T2 Stand Coordinates & Max Aircraft Size

<https://vats.im/T2-WIII>

5.4 Terminal 3

Distinguished by the G gates. Gates G1 - G33 are used for international flights, while G36 - G69 aprons are used for domestic flights.

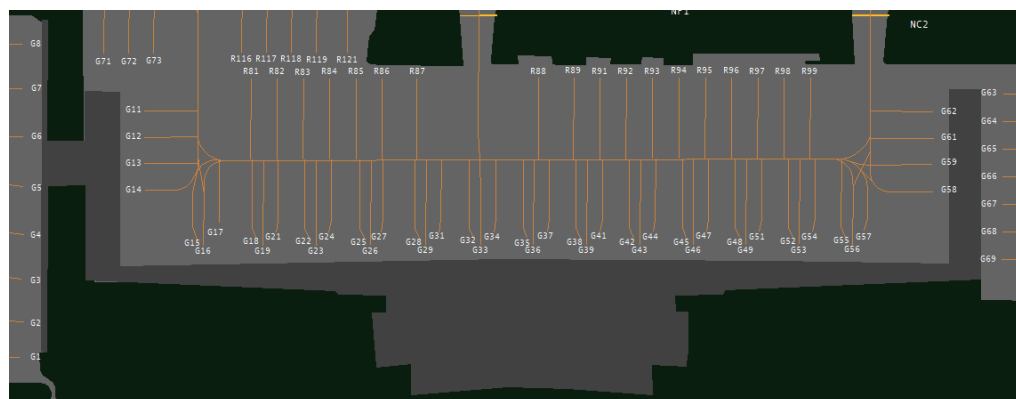

5.4.1 T3 Stand Coordinates & Max Aircraft Size

<https://vats.im/T3-WIII>

6. Frequencies

6.1 Aerodrome Frequencies

There are several Delivery, Ground and Tower stations available at Soekarno-Hatta. During normal operations, the bandbox frequency will be used, marked with the black colored frequencies. While during busy events, usually we will open several stations to reduce congestion marked with the orange colored frequencies. Areas of responsibility of each station are as follows.

WIII_GND : 121.600

WIII_DEL : 121.950

WIII_TWR : 118.200

WIII_APP : 127.950

WIII_ATIS : 126.850

NORTH:

WIII_2_GND : 121.600

WIII_3_GND : 123.150

WIII_2_DEL : 121.950


WIII_N_TWR : 118.200

SOUTH:

WIII_1_GND : 121.750

WIII_1_DEL : 125.150


WIII_S_TWR : 120.250

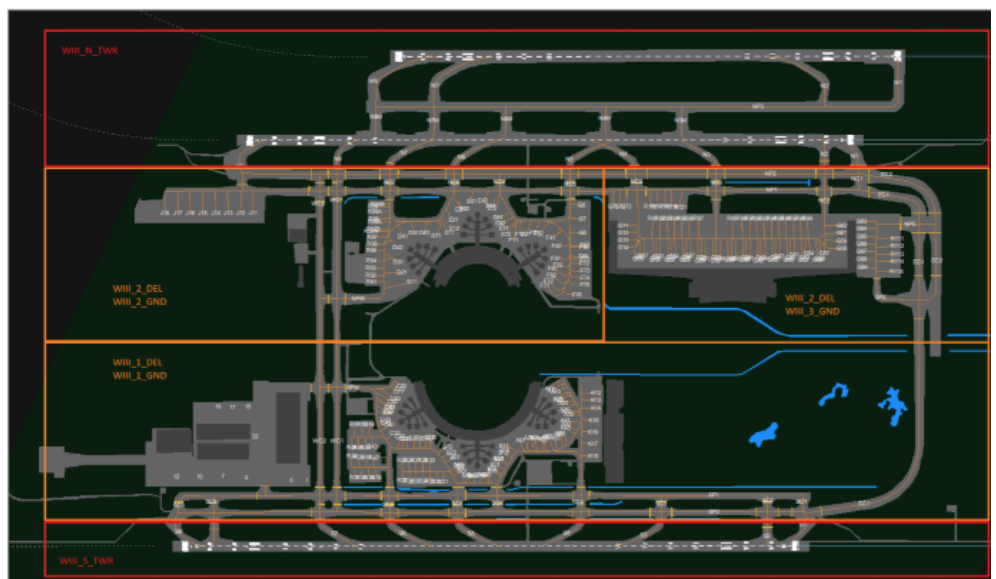

6.2 Centre Frequencies

On the VATSIM network, Jakarta FIR will log in as WIIF_CTR with callsign “Jakarta Radar”. On busy events, we may opt to open the combined split sector to reduce frequency congestion. Jakarta FIR’s frequency and split sector as follows.

N o	Jakarta (UTA)	Sector Name	Ident	Frequencies
	*Jakarta Radar	WIIF_CTR	WIIF	132.150
1	Medan**	WIIF_MN_CTR	UMDN	133.200
2	Banda Aceh	WIIF_BC_CTR	UBAC	128.300
3	Indian Ocean	WIIF_IS_CTR	UIOS	132.850
4	Jakarta**	WIIF_JT_CTR	UJKT	135.900
5	Palambang	WIIF_PB_CTR	UPLB	132.700
6	Pangkal Pinang***	WIIF_PP_CTR	UPKP	132.900
7	Pekanbaru	WIIF_PU_CTR	UPKU	132.300
8	Semarang**	WIIF_SG_CTR	USMG	120,900
9	Yogyakarta	WIIF_JG_CTR	UJOG	125,200
10	Bandung	WIIF_BD_CTR	UBND	132,100
11	Pontianak	WIIF_PK_CTR	UPNK	133,500
12	Natuna***	WIIF_NA_CTR	UNTA	134.025
13	Tanjung Pinang***	WIIF_TG_CTR	UTPG	133.325
14	Tanjung Pandan	WIIF_TN_CTR	UTPN	125.700

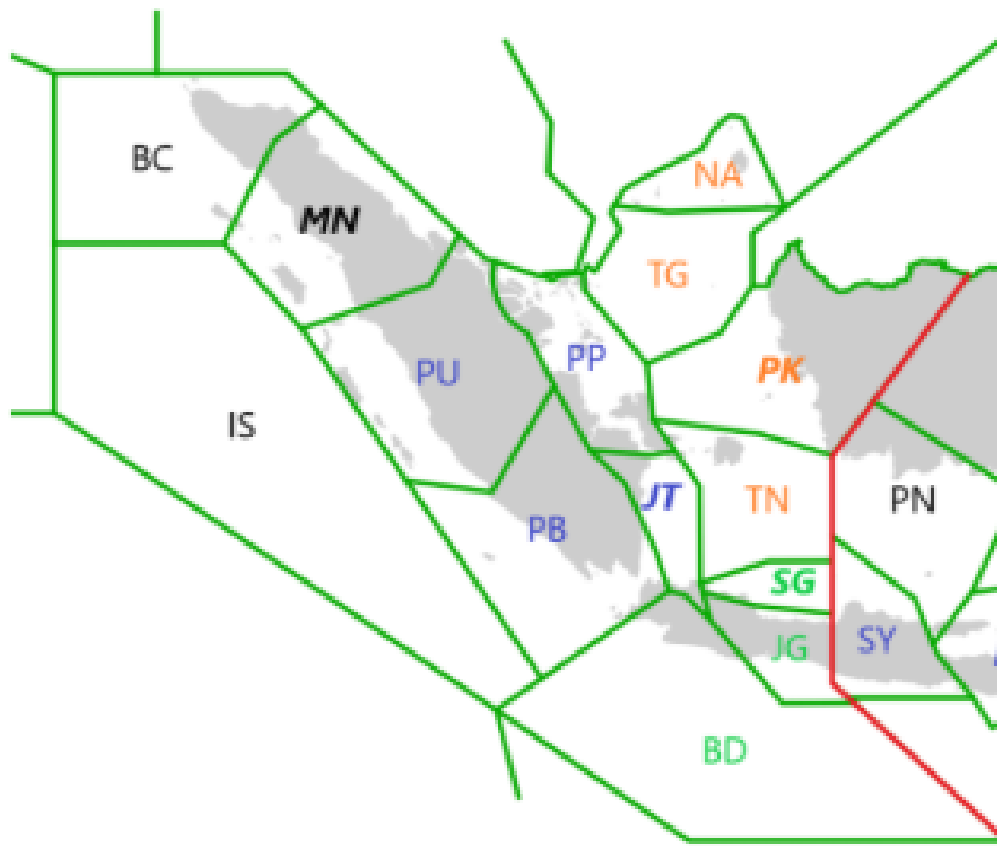

7. Aerodrome Procedures

7.1 Departure Clearance

Departure clearance will be given primarily by Delivery. If Delivery is not online, it will be given by the controller positioned above Delivery.

Departure clearance may be requested within **20 minutes of your CTOT**, pilots are encouraged not to go past their CTOT time to ensure smooth traffic flow towards the destination aerodrome.

Indonesia vACC does not support PDC (Pre-Departure Clearances). All departure clearances will be given via voice / text accordingly.


The departure clearance will be given in the following format:

[CALLSIGN] CLEARED TO [DESTINATION] [RUNWAY], [SID], [INITIAL CLIMB], EXPECT [REQUESTED ALTITUDE] SQUAWK [SQUAWK NUMBER].

All departing traffic with cruise altitude higher than FL240 will be given an initial altitude clearance of FL240.


Unless coordinated with APP or CTR, Cruise altitude follows:

- a. Below FL200 : Quadrantal Rule

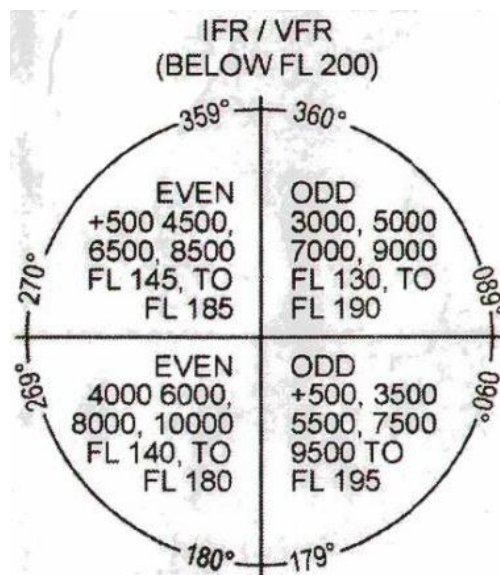

- b. FL200 - FL410 : Semicircular Rule (1000ft separation)
- c. Above FL410 : Semicircular Rule (2000ft separation)

ICAO-IFR

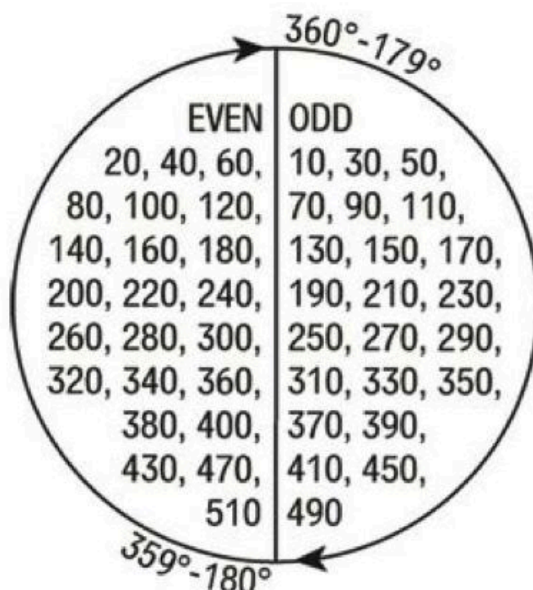

d. **FL120 & FL200 is unusable within Indonesian airspace.**

IFR aircraft that are unable to follow SID must be coordinated with APP or CTR. If APP or CTR is not available, "Fly runway heading" instruction is permissible.

Once pilots have received and read back their clearance correctly, they will be instructed by delivery to contact the appropriate Ground controller for push & start.

When pilots are ready for pushback, they may contact the assigned Ground controller while ensuring they have the **correct squawk code** and **Mode C** on. *(Please ensure that the tow truck is connected and ready for push before requesting for pushback clearance)*

7.2 Pushback Procedures

Pushback approval will be given using the following format:

- Approved heading using "Cardinal direction" (North, South, East, West).
- Expected next taxiway to be used (for clarity of instruction A)

Example:

"Push & Start approved, facing WEST, expect taxiway NC3"

7.3 Preferred Runway

The main preferred runway for departures are **07L/25R**, while runway **07R/25L** may be used when traffic load is high on runway **07L/25R**.

(During some events, the aerodrome may be limited to a single runway (**07L/25R**) for event departures.)

Runway 06/24 is not used for any departures (arrival only).

7.4 Departure Procedures

Pilots are expected to follow the SIDs according to the current charts and navigation data. A Navigraph subscription is highly recommended, however our AIP charts are accessible via the links below.

Runway 07L:

<https://vats.im/07L-SID-WIII>

Runway 07R:

<https://vats.im/07R-SID-WIII>

Runway 25L:

<https://vats.im/25L-SID-WIII>

Runway 25R:

<https://vats.im/25R-SID-WIII>

After airborne, the Tower controller will hand pilots off to the appropriate approach controller. **Pilots are advised to not switch frequencies before being handed off by the Tower controller to ensure proper coordination between controllers.**

Once pilots have been handed off to the approach controller, initial contact must include their current altitude, and assigned SID.

Example:

“Jakarta Radar, [CALLSIGN]. Passing [Current Altitude] [Assigned SID]”

Indonesia vACC does not support / simulate CPDLC

Event Specific Routing for HAJJ OPS 2026:

RIMTI M766 KAT P570 TVM UL425 ASPUX L425 GOBRO AMBIT L425 BOSUT

-Pilots may expect RW07L RIMTI1B SID or RW25R RIMTI1F SID

Afterwords

Dear Pilots,

Thank you for taking your time to read & study our Pilot Briefing. We hope you will have an enjoyable time in our airspace.

Should you want to leave a feedback you may use the following link:

<https://hq.vat-sea.com/atc/feedback>

Our social media is as follows:

<https://www.instagram.com/indonesiavacc>



-END OF DOCUMENT-