

GSM dongle for Solar Inverter



LSG-3



LS4G-6C-D

Dear Customer,

Thank you for your recent purchase of a Visiontek Solar Inverter. We truly appreciate your trust in our products and your commitment to a sustainable future.

Welcome to the Visiontek Family and thank you for making the switch to smarter, cleaner energy!

A Product from An ISO 9001:2015 & ISO 14001:2015 Certified

Notice:

Please read this manual carefully before using products and keep it in the place where O&M providers can easily find.

Due to product upgrade and other factors, the content of this manual might change from time to time. Please take actual product as standard. Unless otherwise agreed herein, this manual will only be used as guidance. Any statement, information or suggestion in this manual will not take any form of responsibility. Without written permission, any content of this document (partly or entirely) cannot be extracted, copied or transmitted in any form by any company or individual.



Warning:

Please power of the inverter to remove logger


Download APP

Download **Visiontek Solar** APP.

1. SIM card Placing – LSG-3:


Step 1:

Remove antenna and bottom cover in order, and then pull out circuit board.
(Please keep waterproof grommet of antenna and bottom cover well)

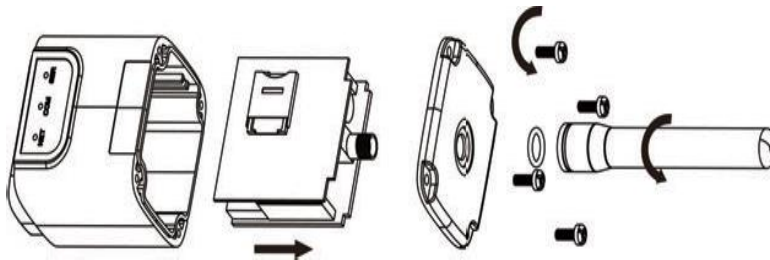


Step 2:

Move upper sheet-metal of SIM card slot about 1mm according to arrow direction, and then open it counter-clockwise.

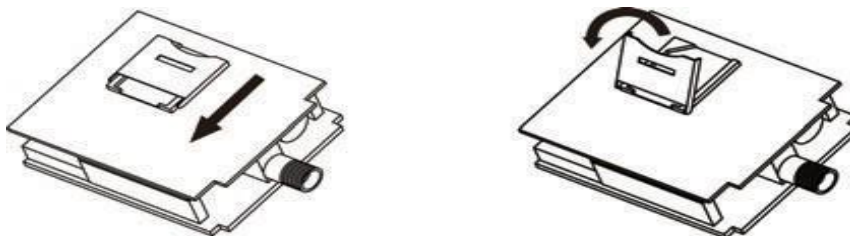


Step 3:

Put SIM card into the slot according to notch orientation, close sheet-metal of SIM card slot Clockwise then move about 1mm according to arrow direction to lock.

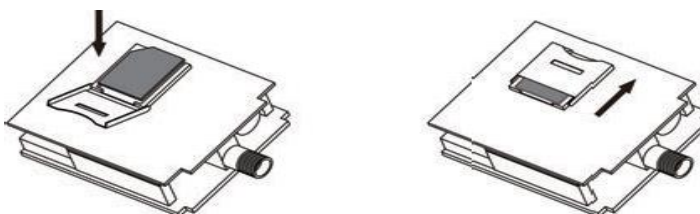


Step 4:

Put circuit board into the enclosure, and then push it down along the inner guide. (Please keep SIM card face the indicator light.)

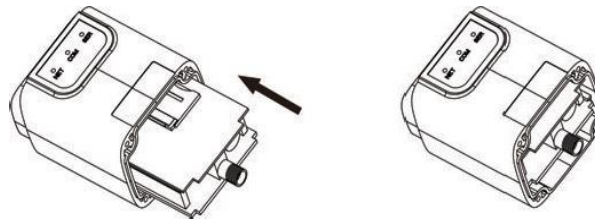


Step 5:

Install waterproof grommet of bottom cover properly, and then install bottom cover. Tighten screws clockwise.

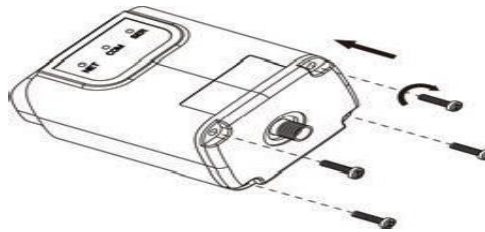


Step 6:

Install waterproof grommet of antenna on the antenna base, then tighten antenna clockwise.

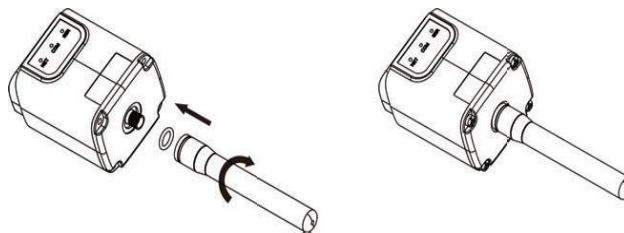


SIM Card Installation – LS4G -6C-D


Step-1: Remove locking screws of Datalogger by rotating in Anti-clockwise direction with electric screw driver and separate the detachable module as shown in the diagram.

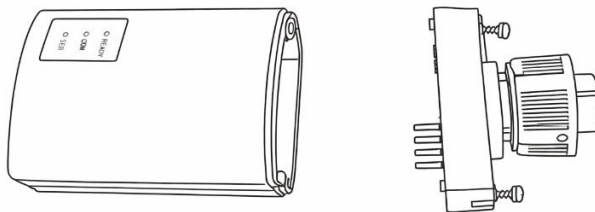


Step-2: Place the SIM card in provide SIM slot as shown in below diagram.

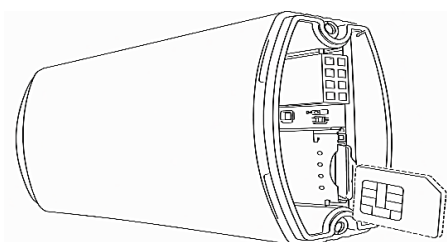

Step-3: After placing the SIM card close the Datalogger by fixing its detachable module and screws back in their position.

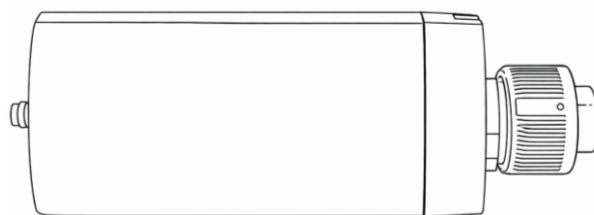


Step-4: Fix the provided 4G antenna to Datalogger and tighten it by rotating clockwise.

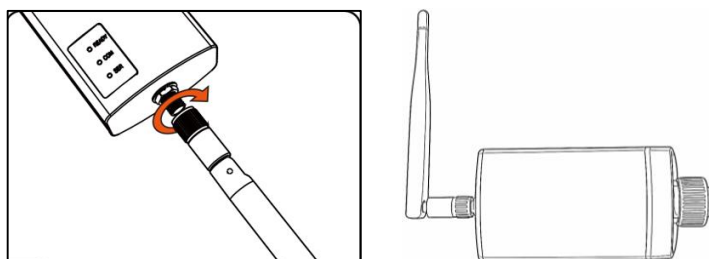

2. Stick Logger Installation

Assemble logger to the inverter communication interface as shown in the diagram.

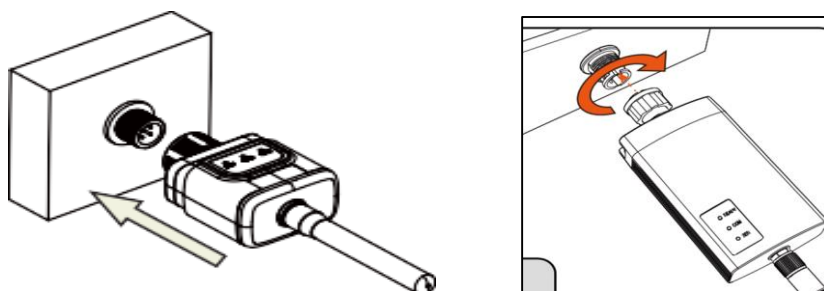

Warning:

Please do not hold the logger body to rotate while install or remove the logger.

3. Logger Status

3.1 Check Indicator light – LSG-3

Lights	Implication	Status description (All lights are single green lights)
	Communication status with base station	1.Light ON 64ms/Light off 800ms (Fast flash): GPRS module not registered to the network. 2.Light ON 64ms/Light off 2000ms (Slow flash): GPRS module registered to the network. 3.Light ON 64ms/Light off 600ms (Fast flash): GPRS data transmission. 4. Light OFF: GPRS module not running.
	Communication status with inverter	1.Light keeps ON: Successful connection to the inverter.

		2.Light ON 400ms/Light off 1600ms (Slow flash): Initialization. 3.Light ON 400ms/Light off 400ms (Fast flash): Data transmission with inverter. 4.Light OFF: Communication with inverter failed.
 SER	Communication status with server	1. Light keeps ON: Successful connection to the server. 2. Light ON 400ms/Light off 1600ms (Slow flash): Initialization. 3. Light ON 400ms/Light off 400ms (Fast flash): Connection with server failed.

The normal operation status of the stick logger with good base station signal:

1. Initialization: COM and SER lights flashes slowly after power-on;
2. Connecting to the base station: NET light flashes fast around 35s;
3. Connection to the base station succeeded: NET light keeps slow flash around 45s;
4. Communication with the inverter succeeded: COM light flashes fast 3 times then keeps on around 50s;
5. Normal operation: COM and SER lights keep on, NET light flashes slowly around 2mins;
6. GPRS uploading data: NET light flashes fast, SER light keeps on.

4. Abnormal State Processing

If the data on platform is abnormal when the stick logger is running, please check the table below and according to the status of indicator lights to complete a simple troubleshooting. If it still cannot be resolved or indicator lights status does not show in the table below, please contact Customer Support. (Note: Please use the following table query after power-on for 2min at least)

NET	COM	READY	Fault Description	Fault case	Solution
 NET	 COM	 SER			
Any state	OFF	Any state	Communication with inverter abnormal	1. Connection between stick logger and inverter loosen. 2. Inverter does not match with stick logger's communication rate	1. Check the connection between stick logger and inverter. Remove the stick logger and install again 2. Contact customer care support.
Flash	ON/Flash	Flash	Communication with base station abnormal	1. SIM charge overdue 2. Antenna abnormal 3. GPRS signal is weak.	1. Check if the balance is insufficient. 2. Check if the antenna is damaged or loosen 3. If the base station signal strength is good, it is recommended to

					change sucker antenna.
OFF	OFF	OFF	Power supply abnormal	1. Connection between stick logger and inverter loosen or abnormal. 2. Inverter power insufficient. 3. Stick logger abnormal.	1. Check the joint, insert or extract it again 2. Check inverter power to see if it meets the requirements 3. Contact Customer Service.

3.2 Check Indicator light – LS4G-6C-D

Indicator	Implication	Status Description
•READY	Logger running status	. Light stays on/off: Running abnormally. . On s/Off s (Slow flash): Running normally.
•COM	Communication with inverter	. Light stays on: Logger connected to the inverter. . On s/Off s (Slow flash): Communicating with inverter. . Light off: Connection to the inverter failed.
•SER	Communication with server	. On s/Off s (Slow flash): G connection to the base station succeeded. . Light stays on: G connection to the server succeeded.


USER MANUAL for VISIONTEK SOLAR APP

Please make sure Bluetooth and Wi-Fi are ON and the router can connect to the network normally.


1. Registration

Go to VisiontekSolar app and register. Click "Register" and create your account here.

After verification enter account details like username, password and click on “Next”.

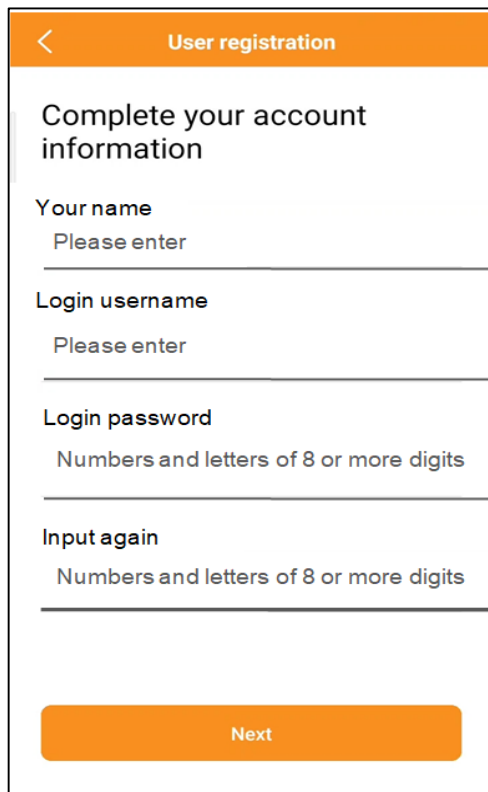


The 'User registration' form is displayed on an orange header bar. It contains five input fields: 'Your name', 'Login username', 'Login password', and 'Input again'. Each field has a placeholder text 'Please enter' or a hint. The 'Login password' and 'Input again' fields have a hint 'Numbers and letters of 8 or more digits'. A large orange 'Next' button is at the bottom.

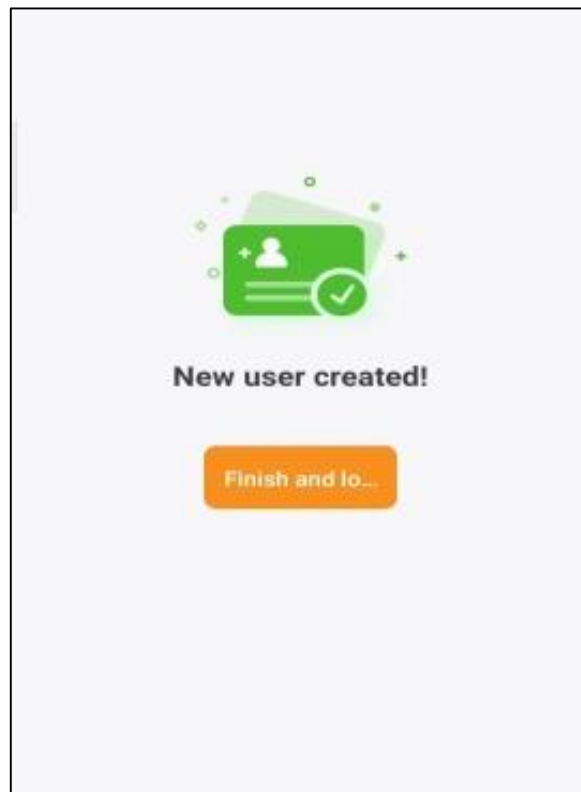


Now click on “finish and login” login with your registered mail id & password.

2. Create a Plant

Click "Create a power plant" to create your plant. Please fill in plant basic info and other info here. Click on “Save”.

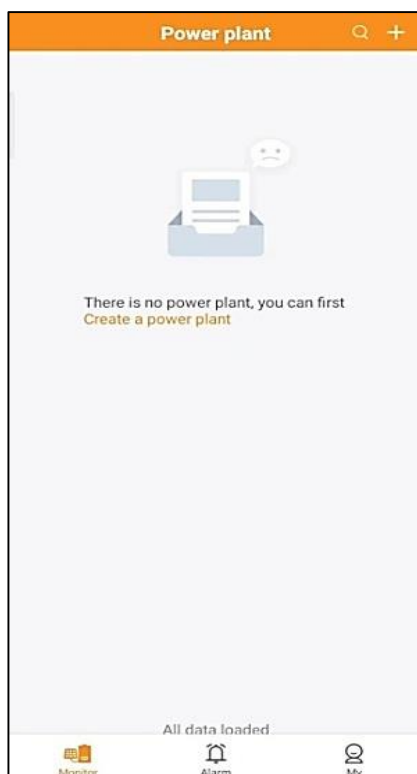


The 'Add power plant' form is shown on an orange header bar. It has two tabs: 'Complete power plant' (active) and 'Add devices/authorized'. The form includes fields for 'Power plant cover', '*Name of power plant', '*Location', '*Region', '*Address', and '*Installed capacity(kWp)'. Each field has a placeholder text. Below the 'System type' field, there are three radio button options: 'PV + power grid', 'PV + power grid + power consumption', and 'PV + power grid + power consumption + energy storage'. A large orange 'Save' button is at the bottom.

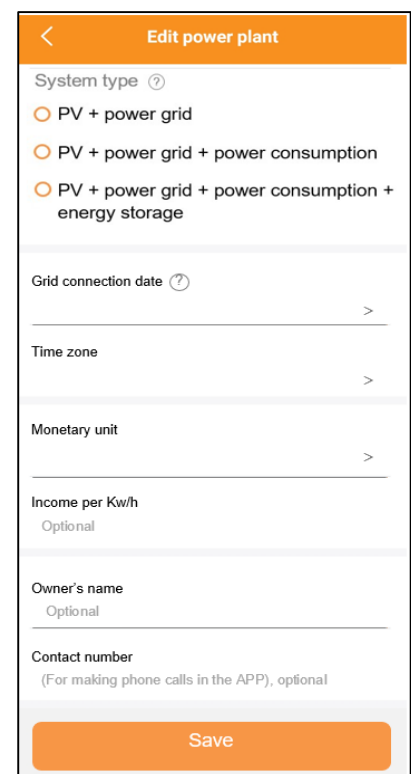

The 'Edit power plant' form is shown on an orange header bar. It includes fields for 'System type' (with a dropdown menu), 'Grid connection date', 'Time zone', 'Monetary unit', 'Income per Kw/h', 'Owner's name', and 'Contact number'. Each field has a placeholder text. A large orange 'Save' button is at the bottom.


3. Add a logger

Click on “Add datalogger” and scan the QR code present on the dongle or Enter the serial number manually by clicking on “Enter SN” then click on OK. Click on “I see”, then user can observe the data logger status information.

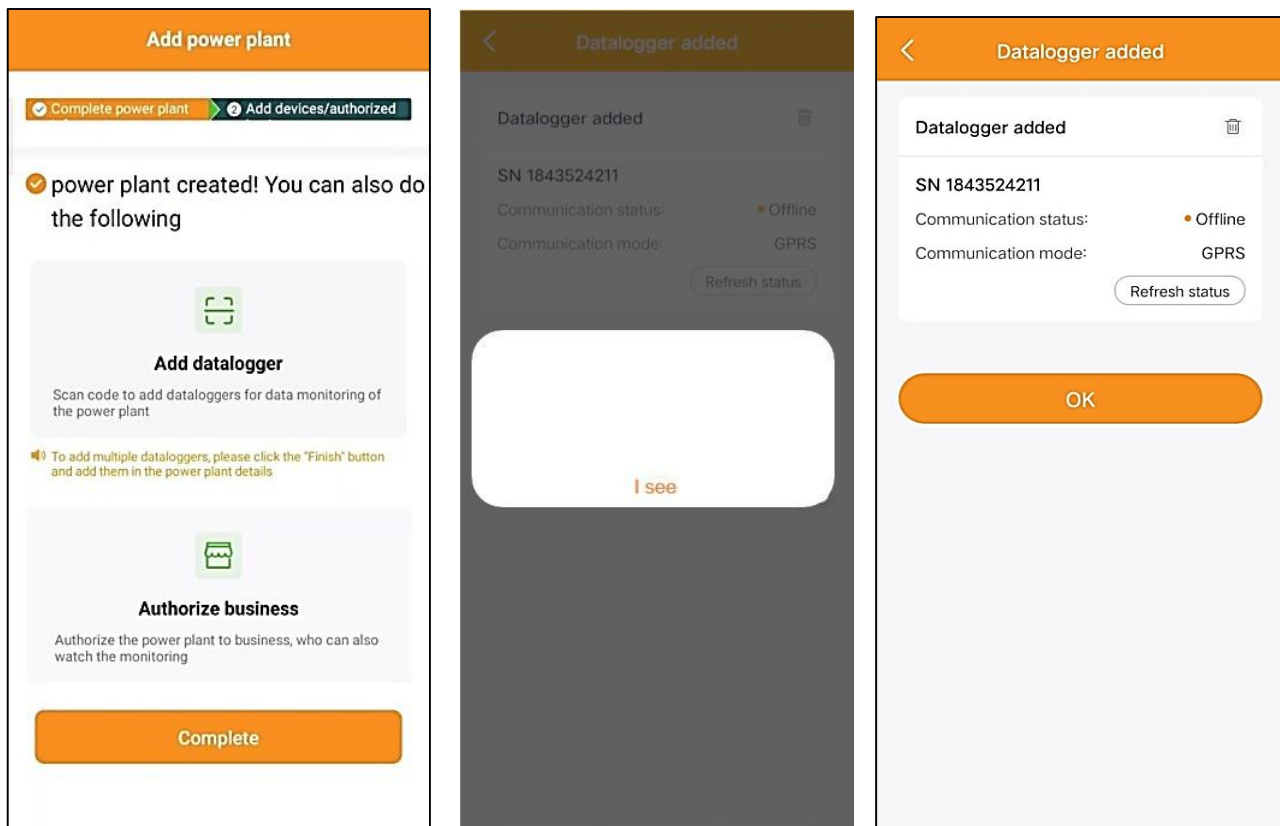

Click on “OK” .

After few minutes click on “device” confirm the online status of dongle by observing green network indicator. Now user can monitor inverter performance.

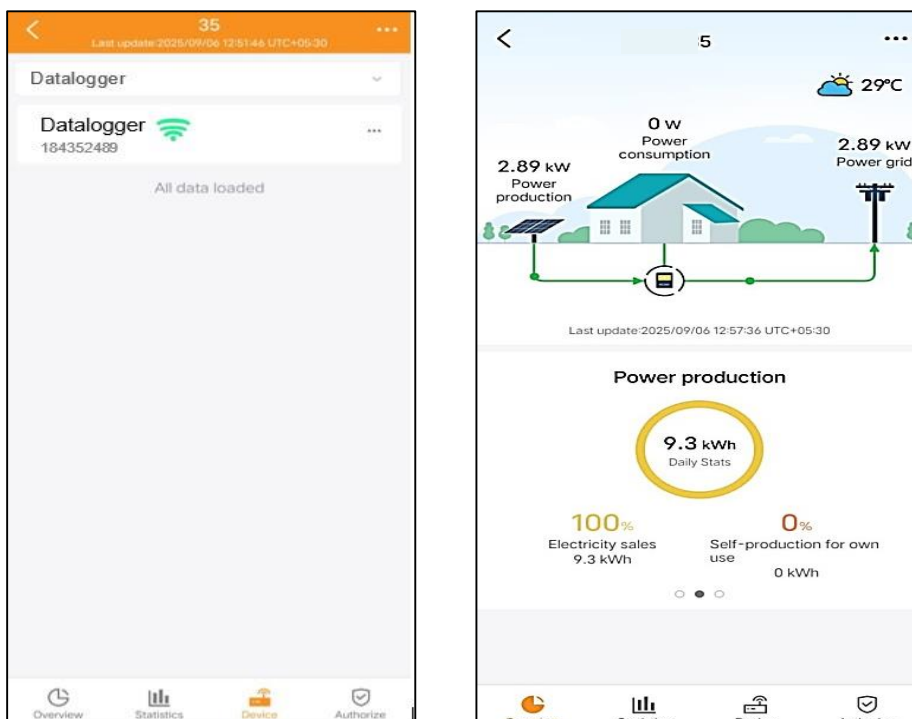

Step 3: Click on “Device” option, click on dongle serial number, and click on connection information. Click on inverter serial number to monitor inverter parameters like DC voltage, current, etc..., AC voltage, current, etc....

lab inv 2k2 and 3k0

Last update:2025/11/19 16:24:20 UTC+05:30

Datalogger

All

Datalogger

1506270922

All data loaded

Overview

Statistics

Device

Authorize

Datalogger1506270922



Network connected

Last update:2025/11/19 16:24:20 UTC+05:30

Device parameters

Alarm

Datalogger1506270922

Device parameters

Alarm

Connection information

Connection information defines device attributes as two categories:Parent deviceandchild device

The platform classifies device attributes according to the way the device uploads data. If a device itself can transmit data to the platform, it is defined as the parent device; If the data of a device is collected by another device before transmitted to the platform, it is defined as a child device.

child device

Inverter

SN: 1G03K02510000432

Alarm

Data updated on/at 2025-11-19 16:24

Inverter1G03K02510000432

Device parameters

Alarm

Connection information

Electricity Generation

DC

	Voltage	Current	Power
PV1	356.60V	0.00A	0W
PV2	0.00V	0.00A	0W
PV3	0.00V	0.00A	0W

AC

	Voltage	Current	Frequency
R	0.30V	0.00A	0.00Hz
S	0.00V	0.00A	0.00Hz
T	0.00V	0.00A	0.00Hz

AC Power R/U/A

1W

AC Power S/V/B

0W

AC Power T/W/C

0W

Total AC Output Power (Active)

1W

Cumulative Production (Active)

29.5kWh

Daily Production (Active)

0kWh

R Phase Grid Voltage

0.30V

R Phase Grid Current

0.00A

If you have any technical queries about our products, please contact us and provide the following information:

1. Product model and serial number of stick logger.
2. Product model and serial number of connected inverter.

Thank you for your support and cooperation.

Note: All images are for reference purpose only. Original product may vary.



Visiontek Solar app



User manual

Contact Address:

LINKWELL TELESYSTEMS PVT.LTD

B-45&46; Electronic Complex, Kushaiguda,
Hyderabad – 500062.
Telangana, INDIA.

Ph: 040-66388235

For Customer Care Contact:

Ph: 9966057222

Mail: care@visiontek.co.in

Regd Office:

LINKWELL TELESYSTEMS PVT LTD

1-11-252/1B, Behind Shopper's Stop
Begumpet, Hyderabad-500016.
Telangana, India.

Ph: 040-66388000

CIN No: U26205TG1993PTC015875

www.visiontek.co.in

55101521 - 0343